


Shoes Cabinet



The assembly instructions

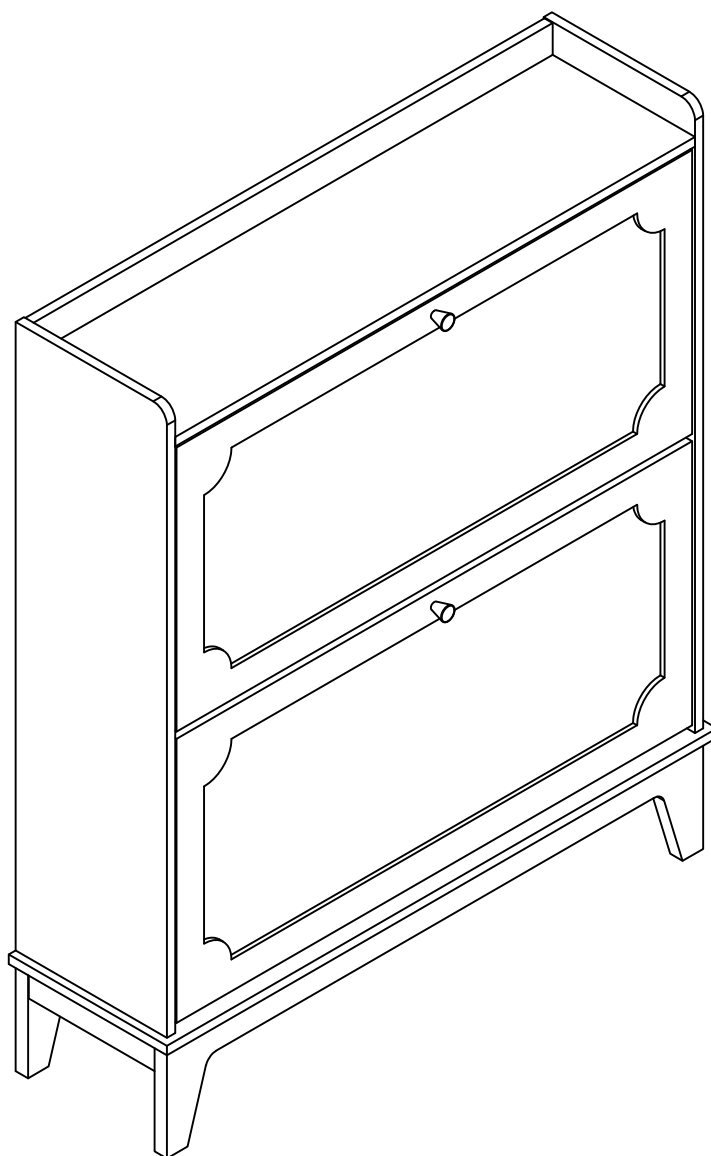


Thank you for purchasing our products, please read the instructions carefully before you assemble the product, please do not hesitate to contact us if there is assembly problem, there will be someone to guide assembly.














General Assembly Guidelines

- ① Check Parts First: Ensure all parts and hardware are present before beginning assembly.
- ② Follow Instructions Carefully: Follow each step in sequence for proper assembly.
- ③ Two-Person Recommendation: Two people are recommended for easier assembly.
- ④ Hardware Types: The three main types of hardware used are: wood dowels, screws, and bolts.
- ⑤ Required Tool: A Phillips head screwdriver is required for assembly.











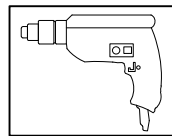
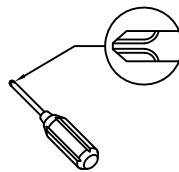


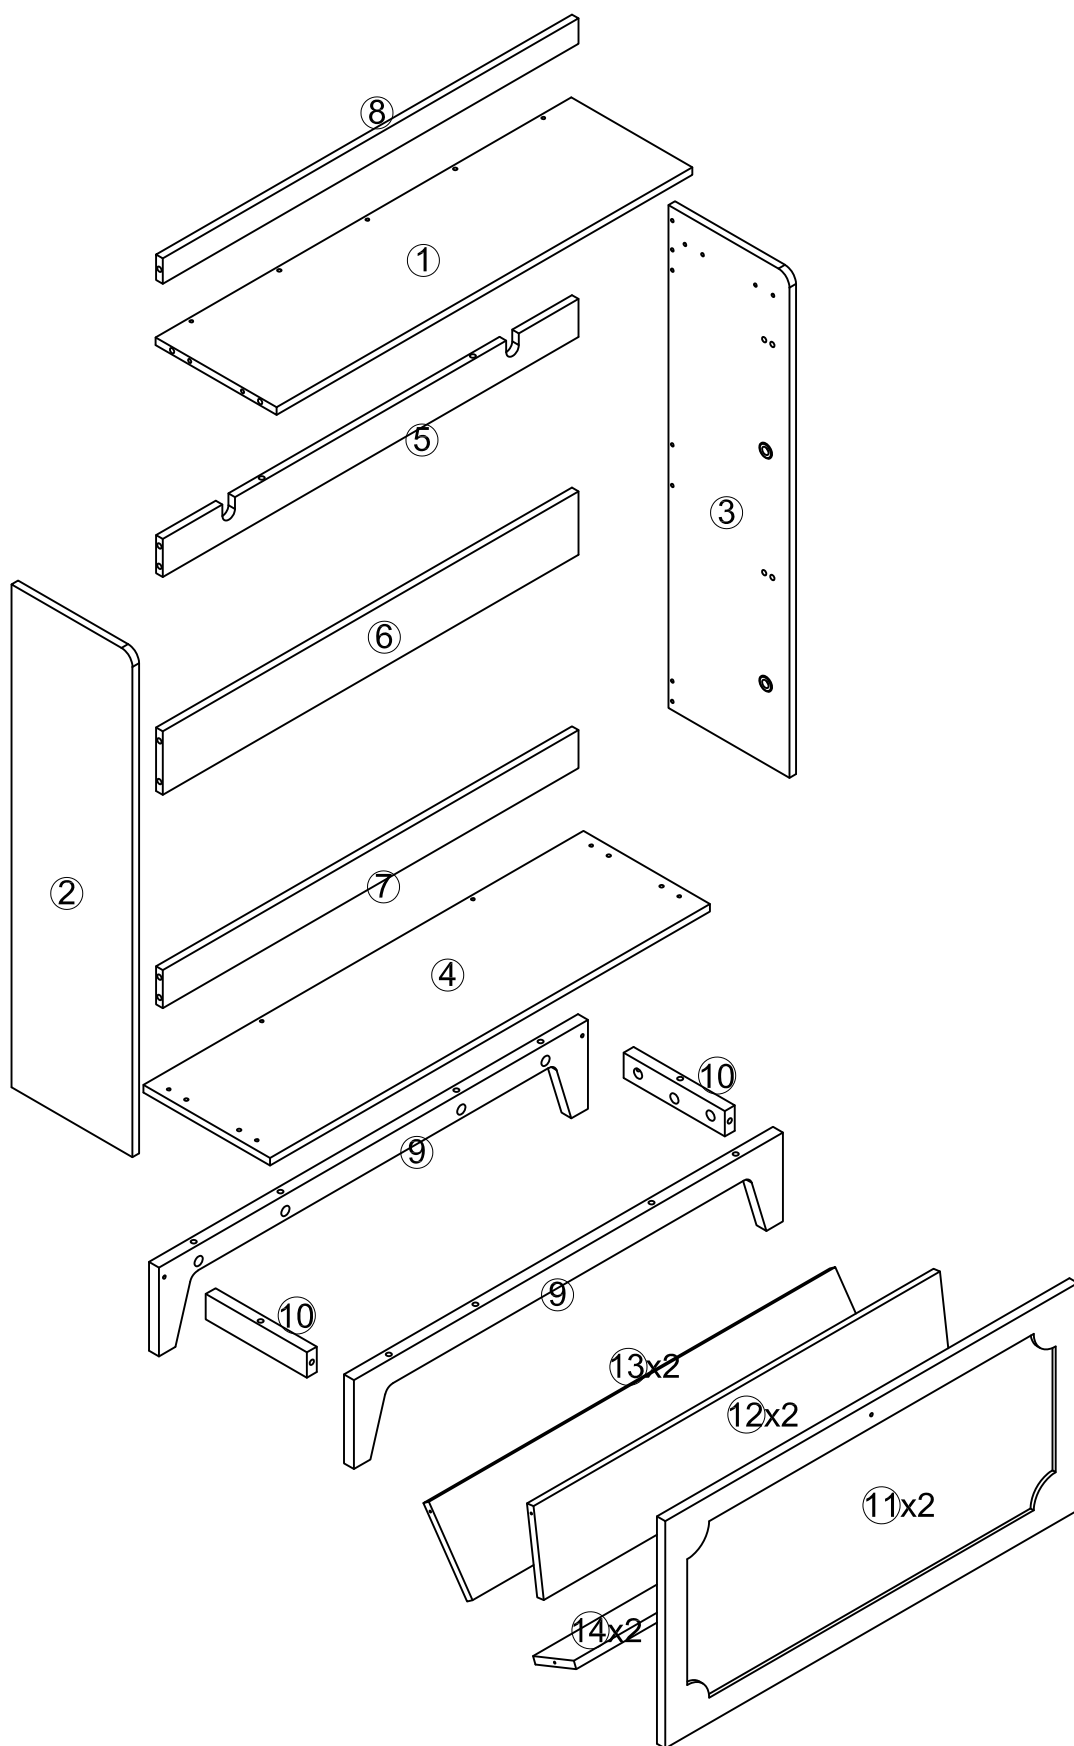


Components

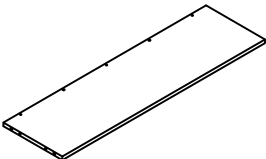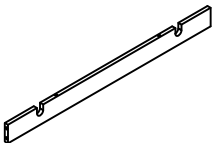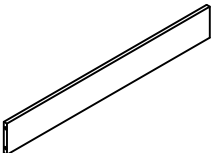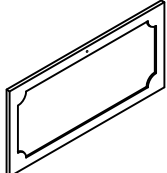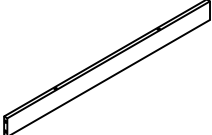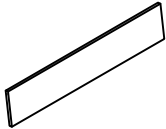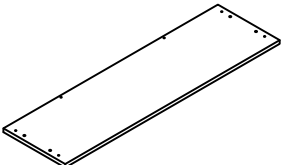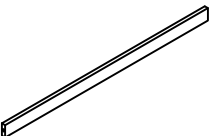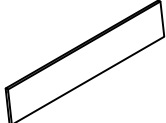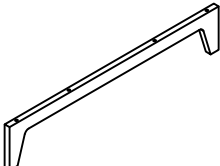①x1 	⑤x1 	⑩x2 
②x1 	⑥x1 	⑪x2 
③x1 	⑦x1 	⑫x2 
④x1 	⑧x1 	⑬x2 
	⑨x2 	⑭x2 


HARDWARE PACK CONTENT

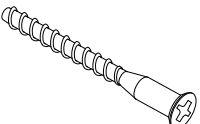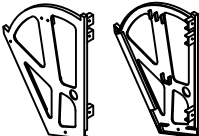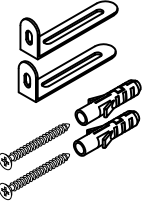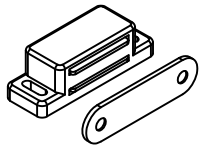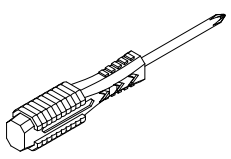 Ⓐ 36x+1	 Ⓑ 36x+1	Ø6x30MM  Ⓒ 10x+1	Ø4.5x38MM  Ⓓ 7x	Ø3.5*12  Ⓔ 8x+1
 Ⓕ 2x	M4*20  Ⓖ 2x	 Ⓖ 2x	 Ⓖ 4x	 Ⓙ 4x
Ø3.0*14  Ⓚ 12x+1	Ø3.5*20  Ⓛ 12x+1	 Ⓜ 1x	 Ⓝ 2x	Ø3.0*12  Ⓞ 8x+1
 Ⓟ 1x				

Step 1

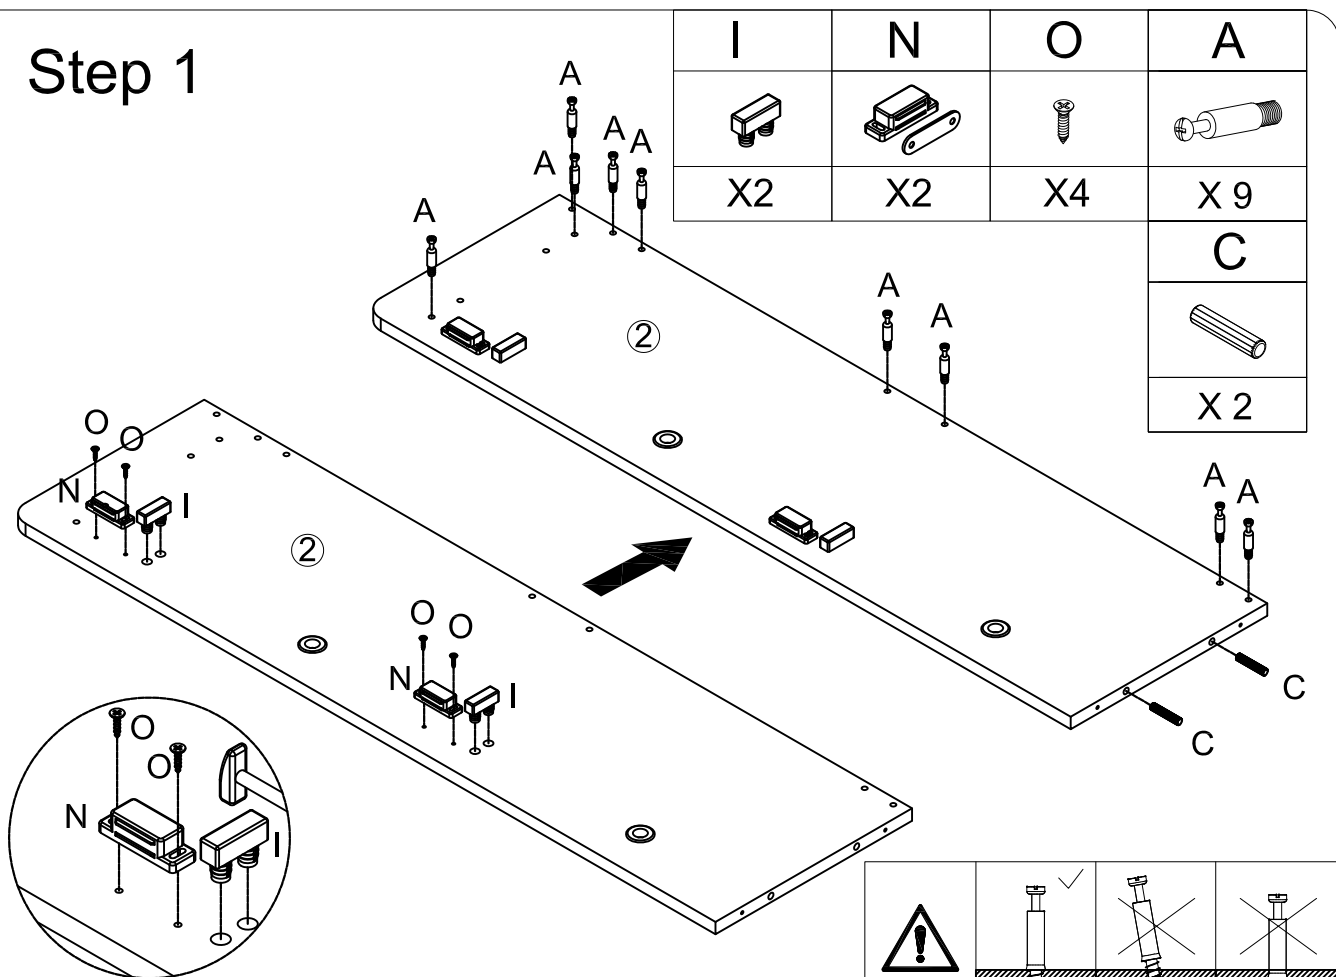

Step 2

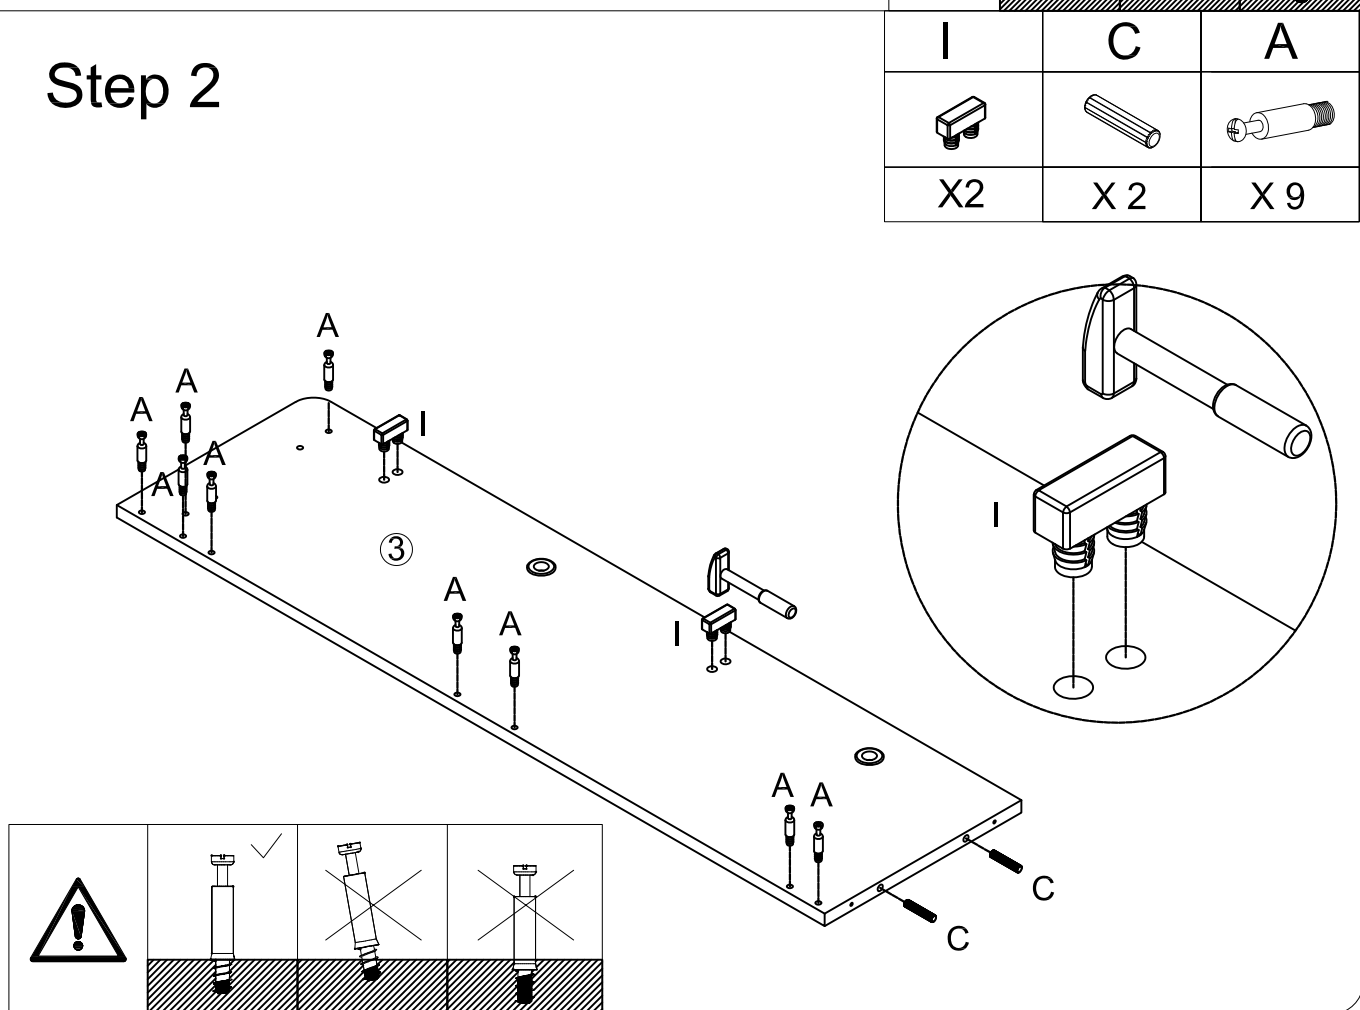


Step 3

C




X 6

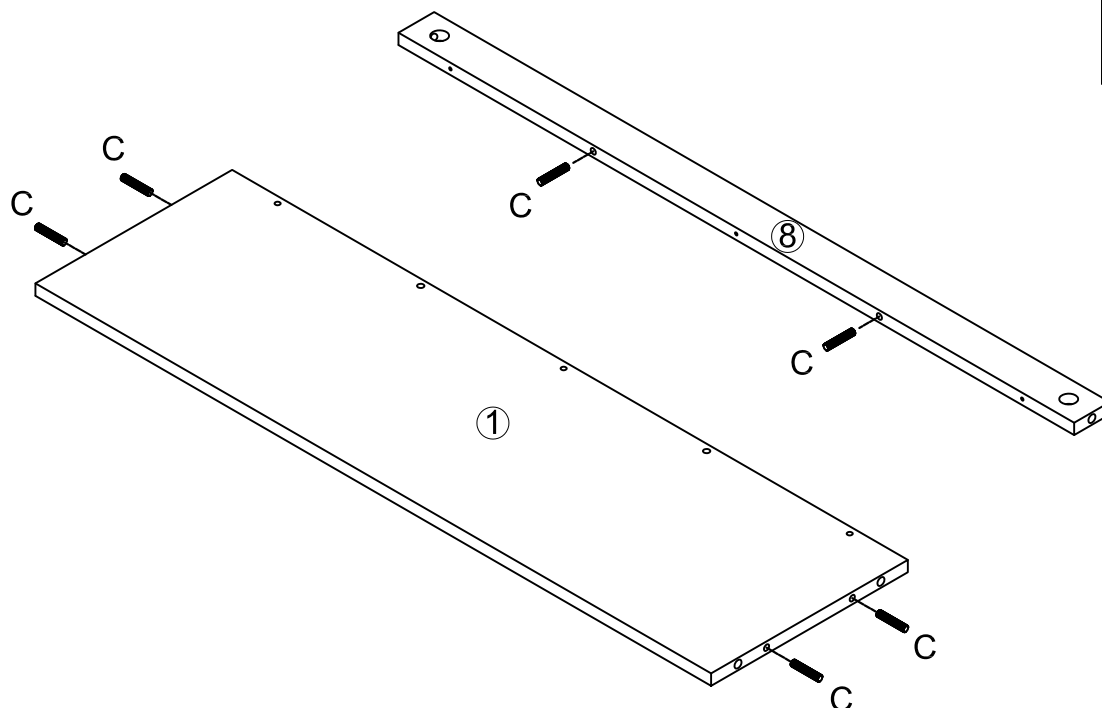


Step 4

D




X 3

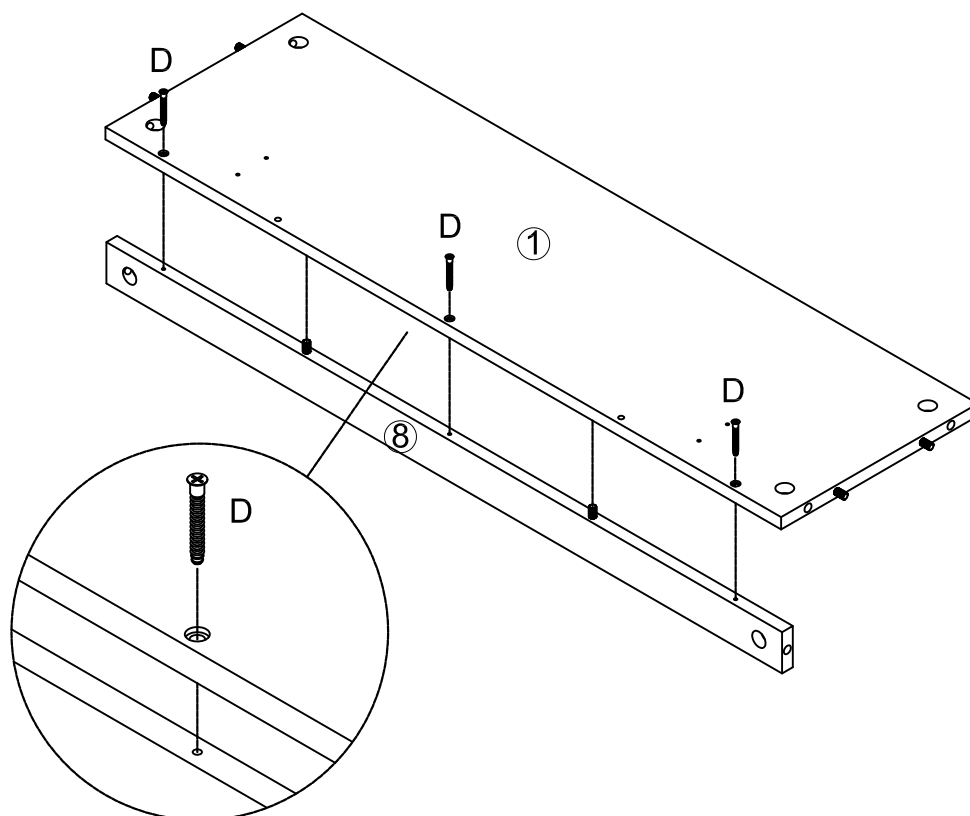


Step 5

				E	M	A
	X4	X1	X2			


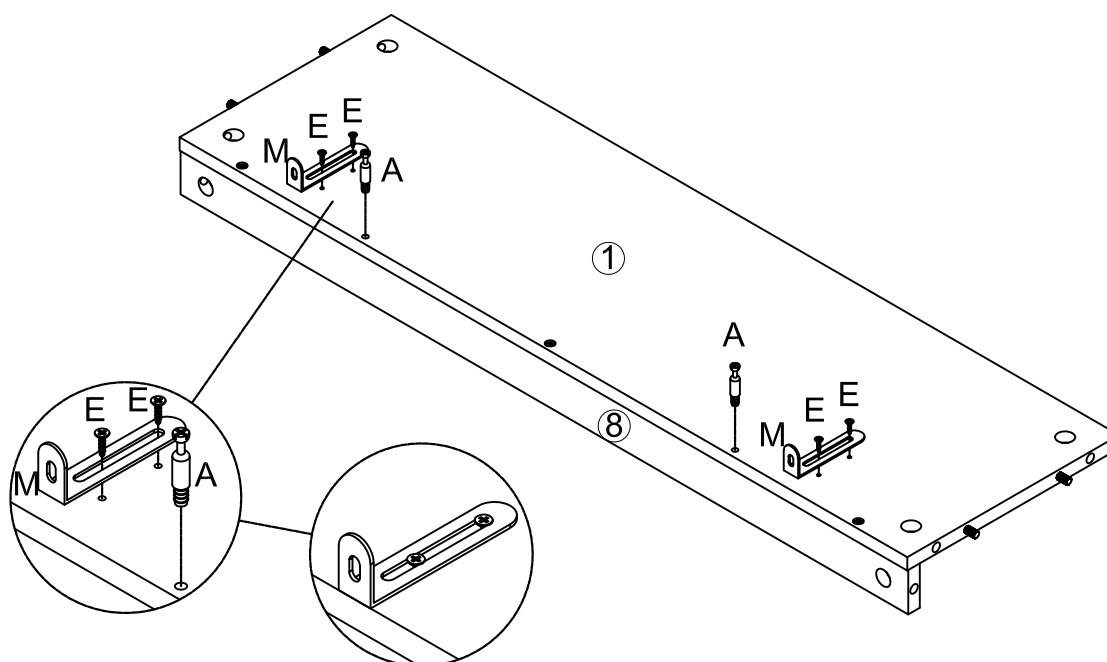


Step 6




				B
	X2			

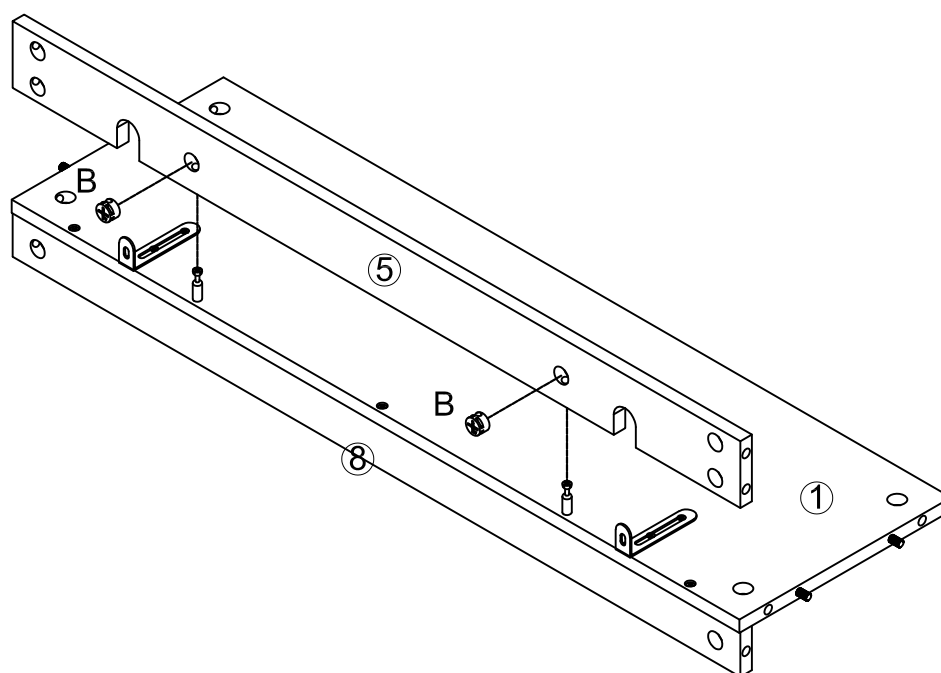



Step 7

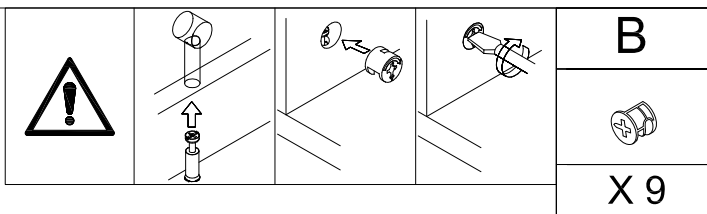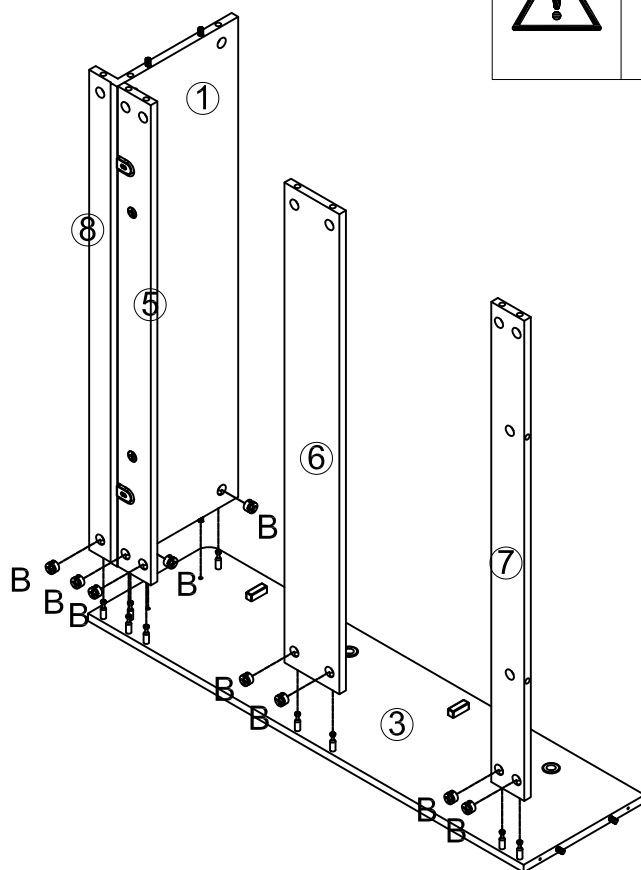



Step 8

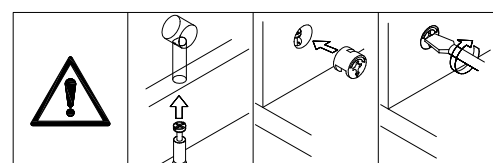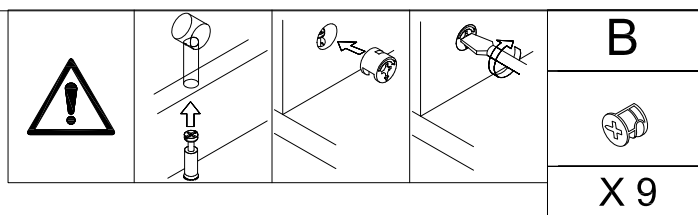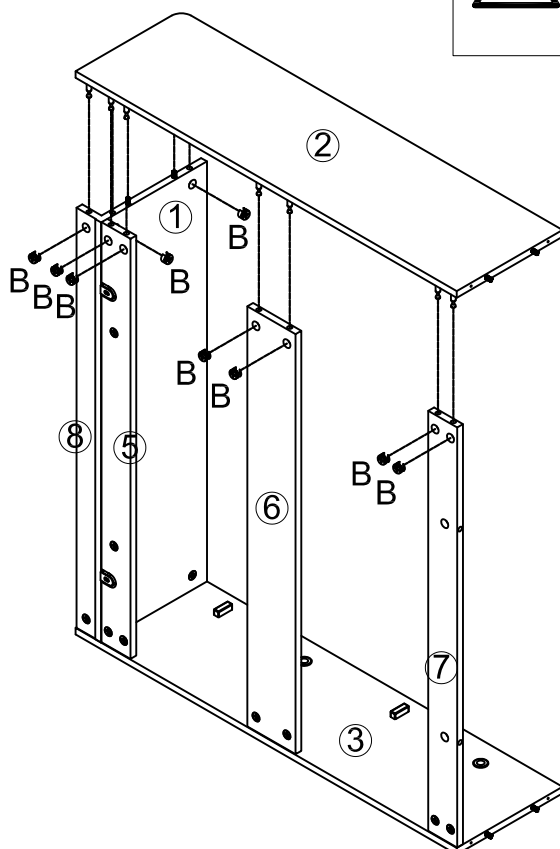



Step 9

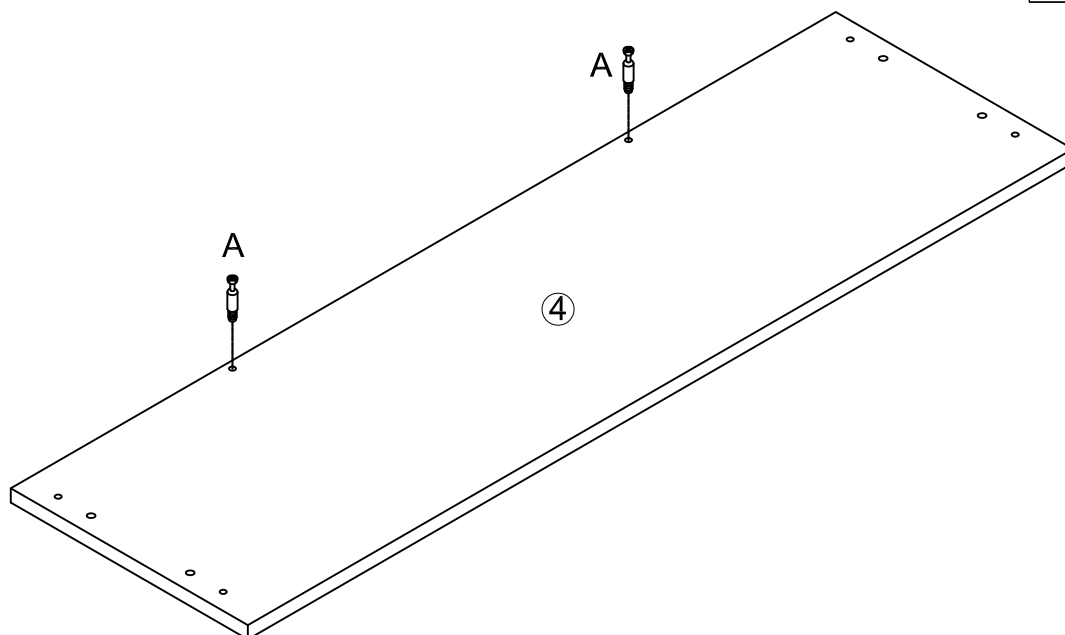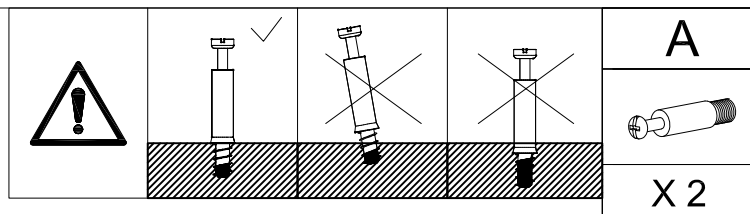



Step 10

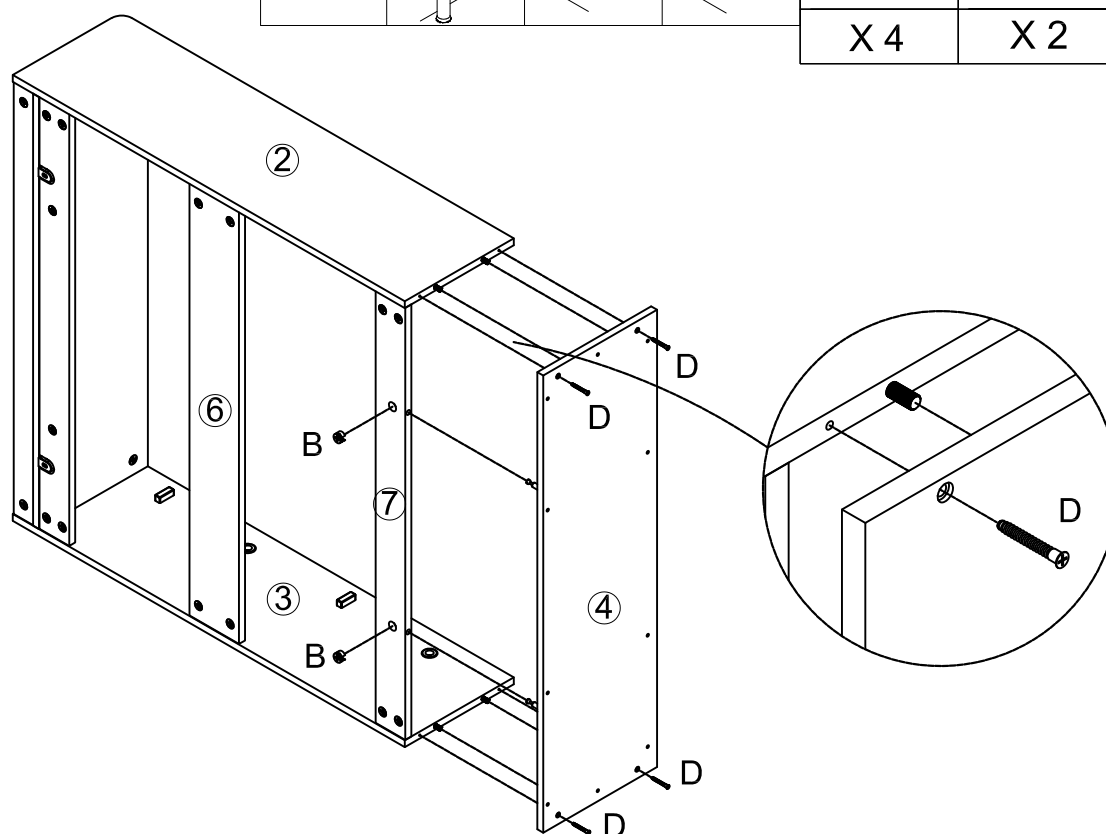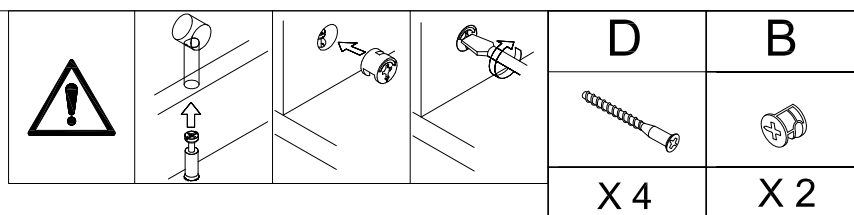



Step 11

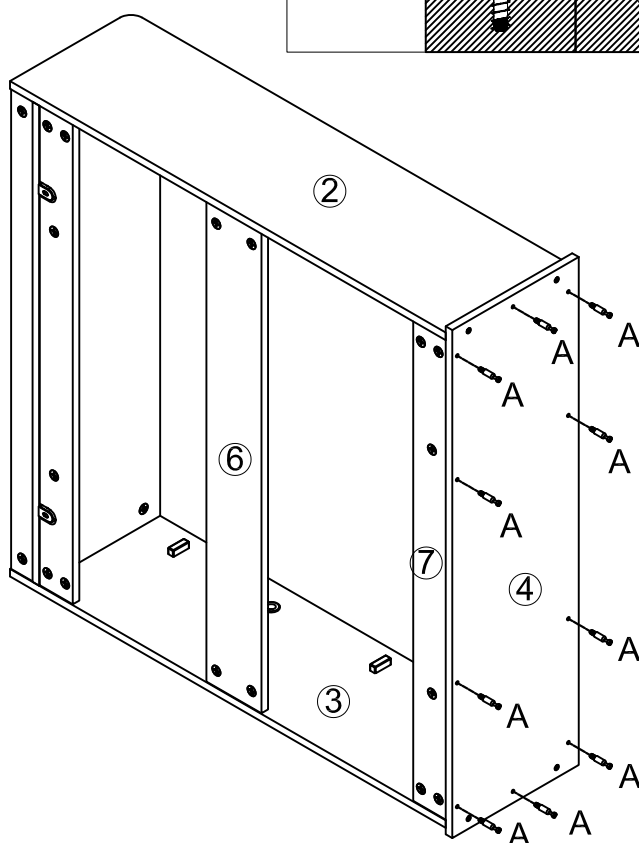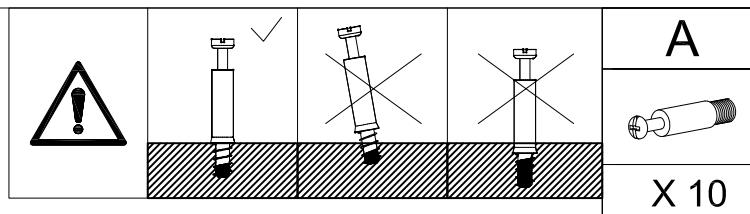



Step 12

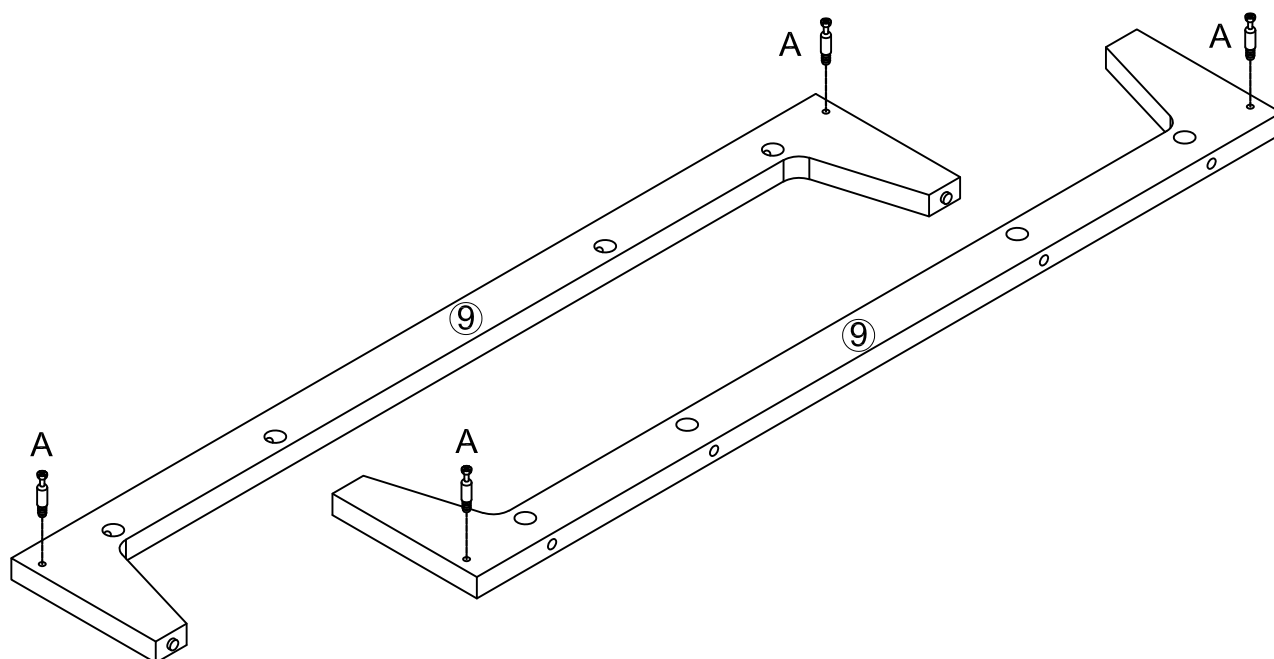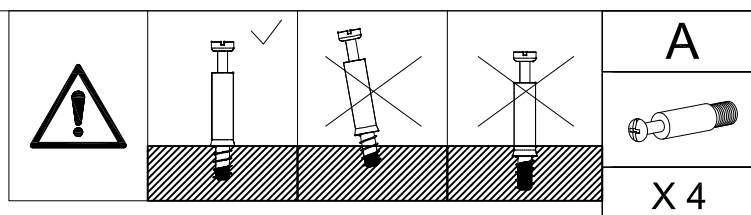


Step 13

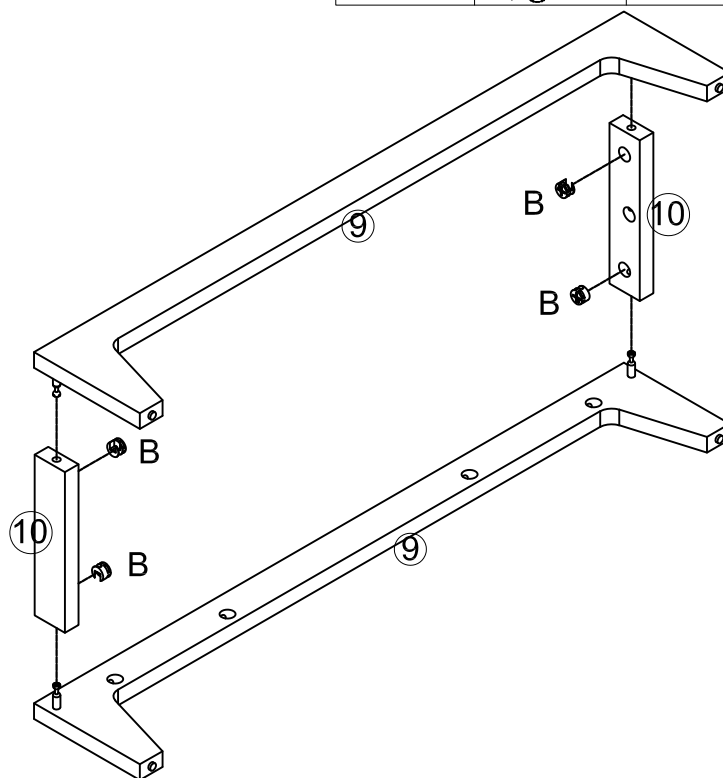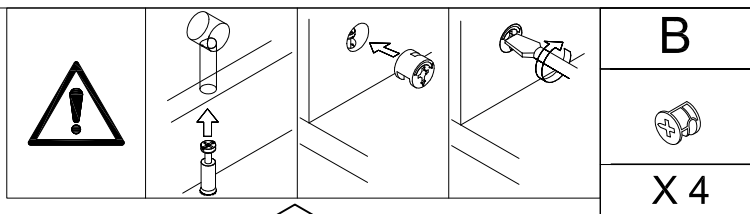



Step 14

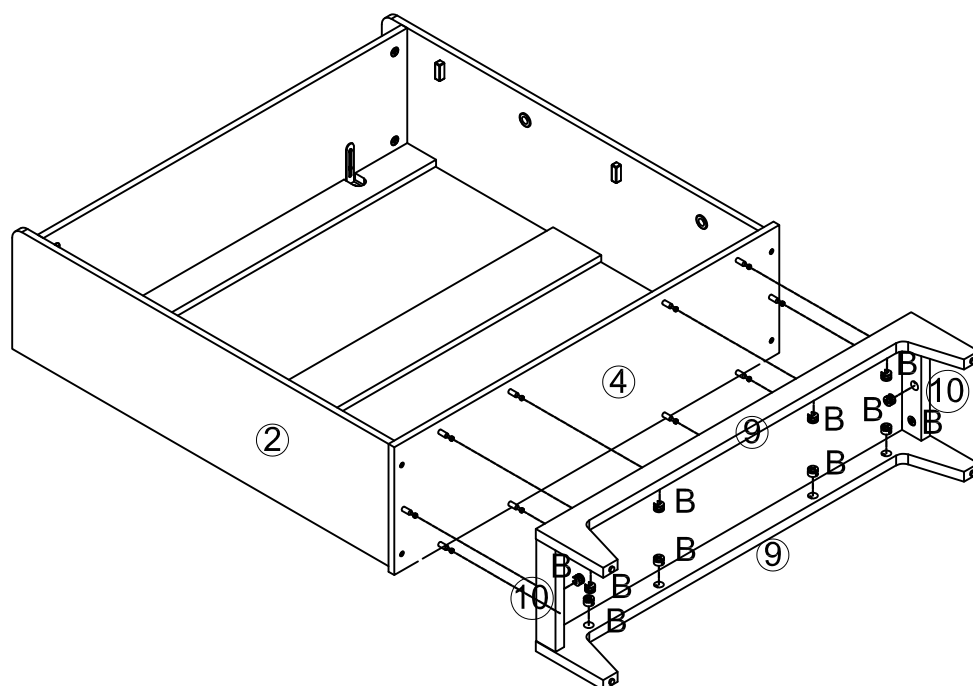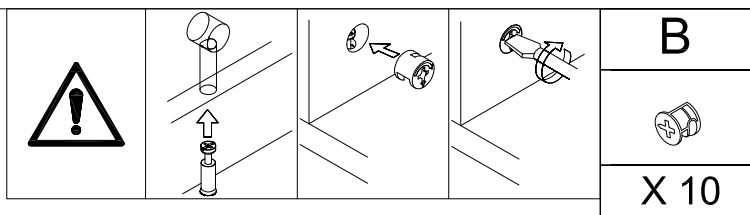

Step 15

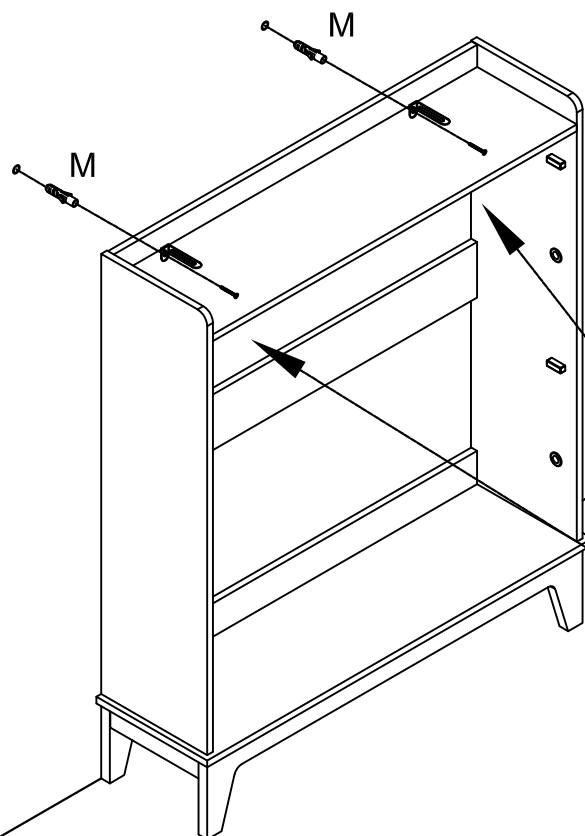

M
X 1

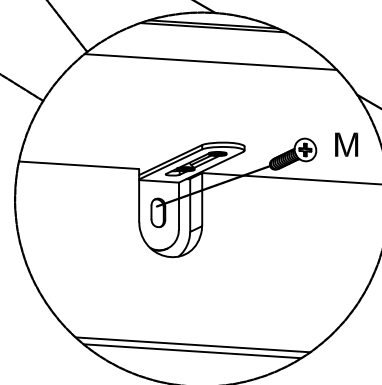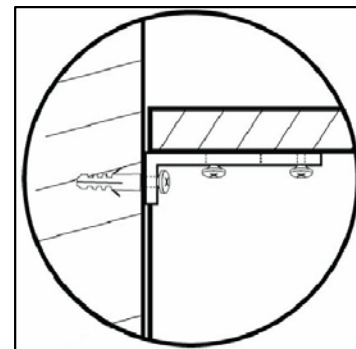

Tools required (not included): phillips screwdriver, stud finder, tape measure, pencil, power drill and 3/16" drill bit.

Now, follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud depending upon your wall construction, and different anchor hardware maybe required. Please contact your local hardware store for assistance.


Young children can be seriously injured by tipping furniture, so you must install the tipping restraint hardware with the unit to prevent the unit from tipping, in case of causing any accidents or damage.

The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision.

The tipping restraints are not earthquake restraints. if you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

Step 16


H	K	N	O
			
X2	X12	X2	X4

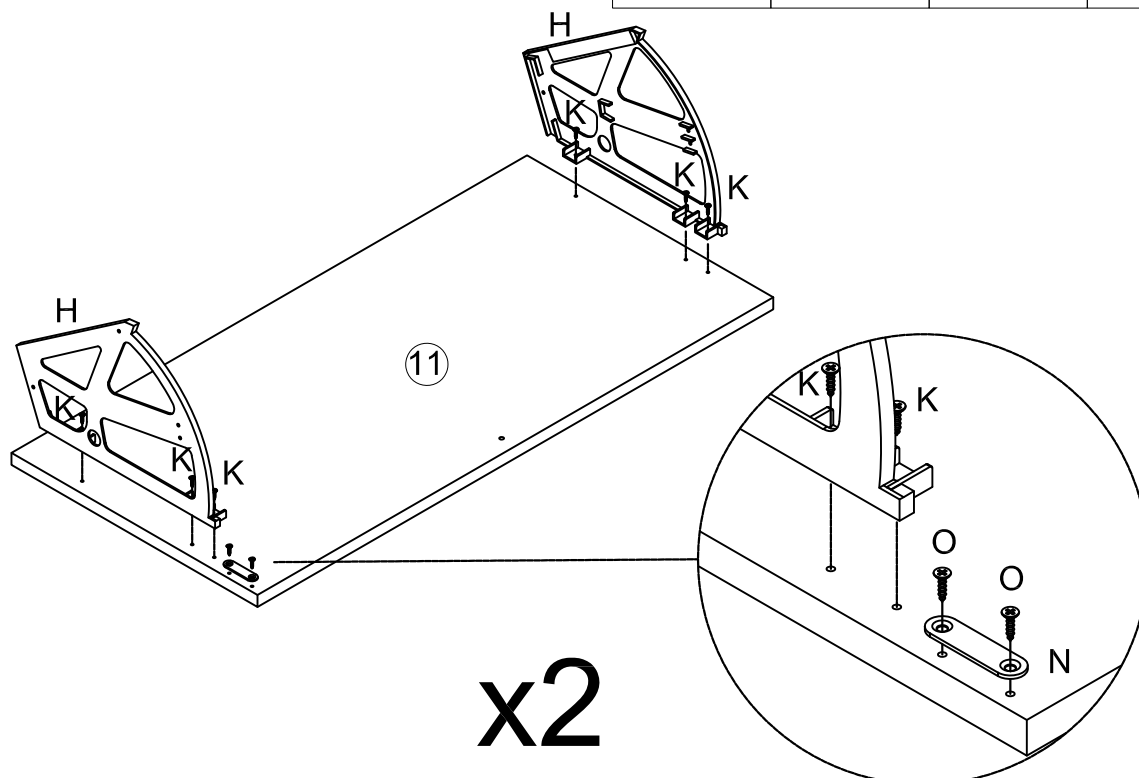

Step 17


L

X8

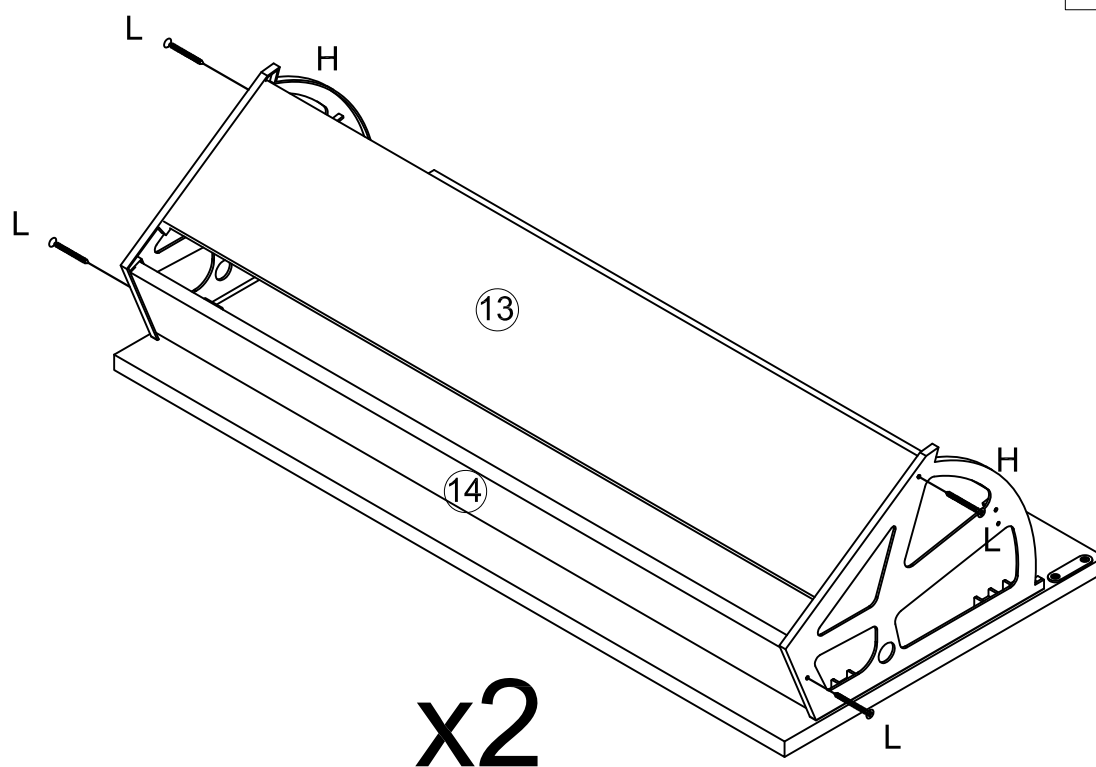


Step 18

F	G
	
X 2	X 2

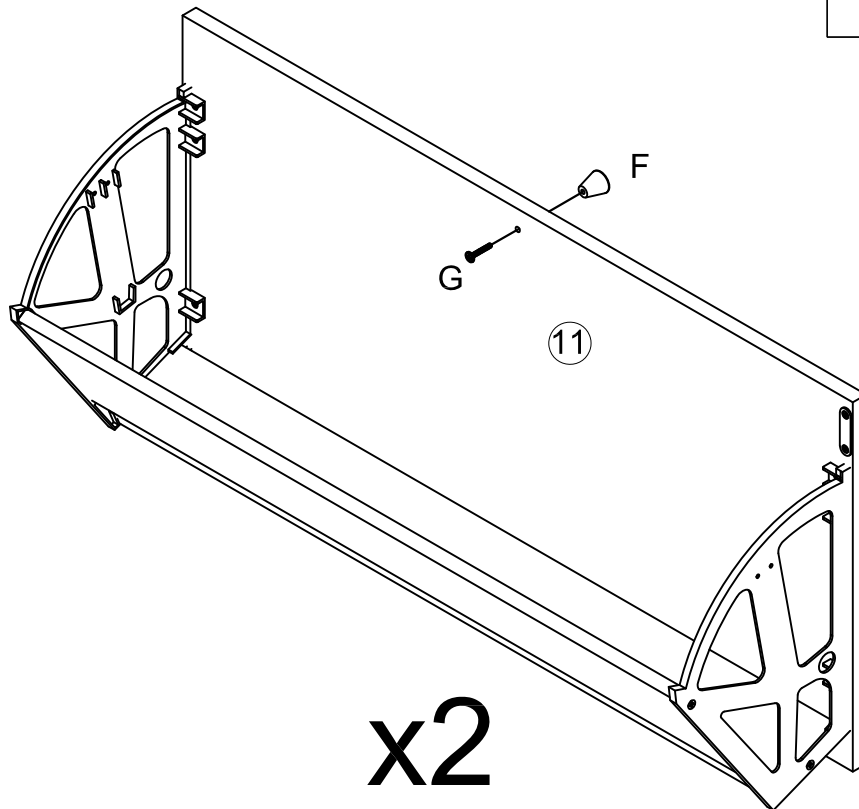

Step 19

J	E
	
X4	X4

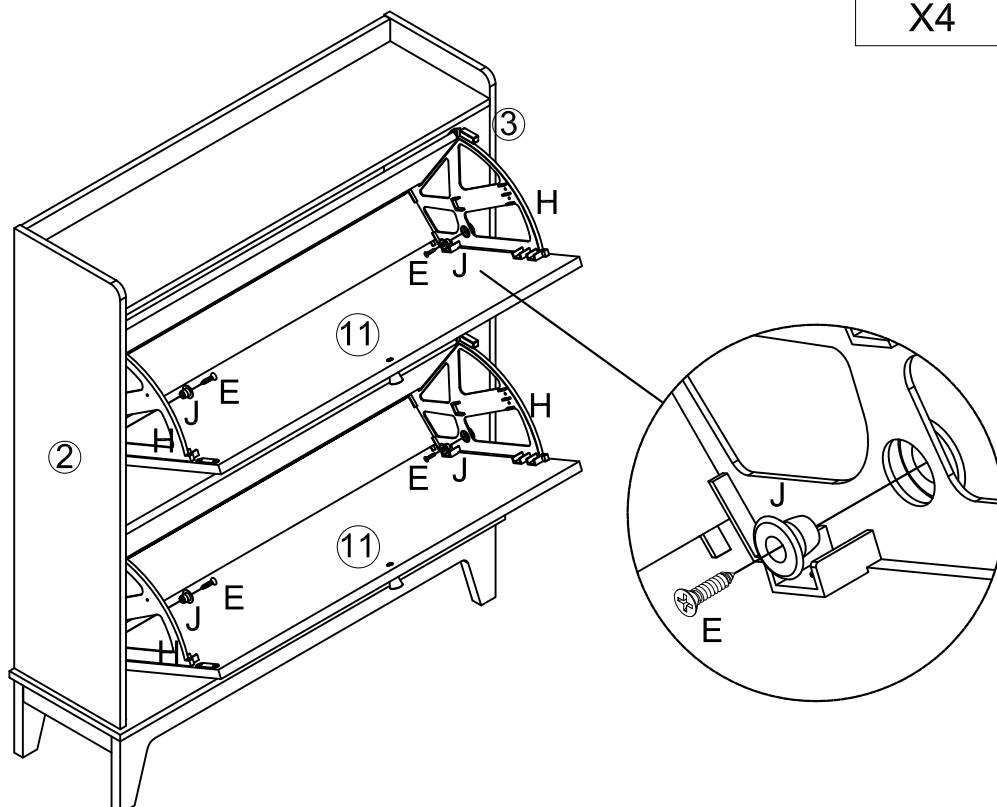


Step 20

L



X4

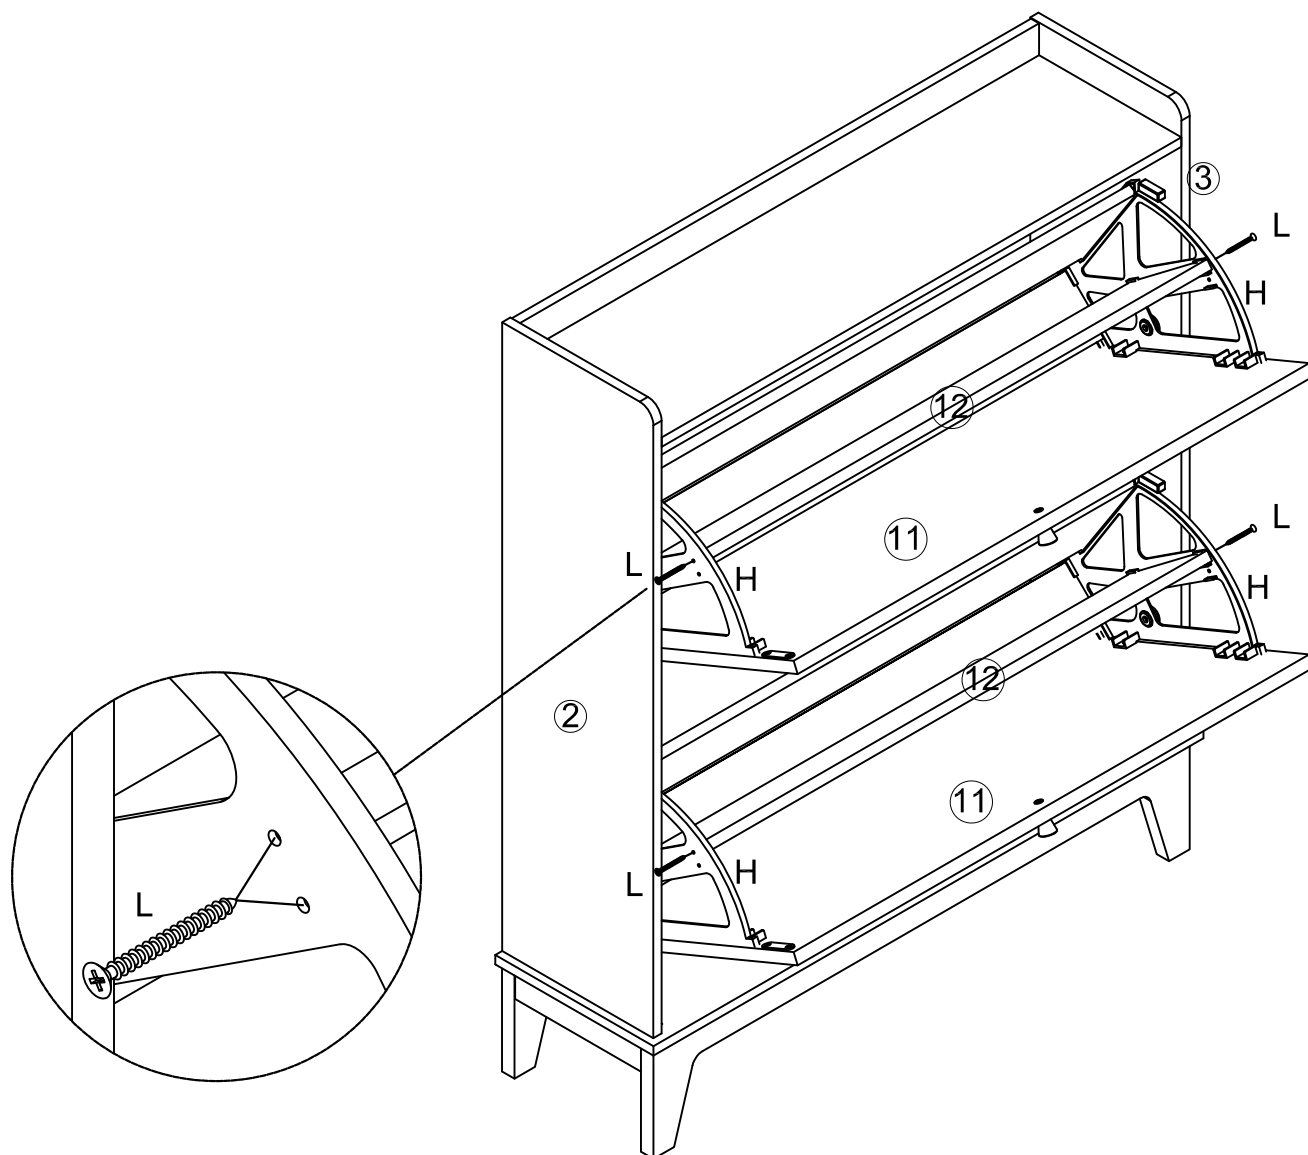

Screw L : 2 optional positions,
install as needed.