## **INSTALLATION INSTRUCTION**

# **STONE VANITY TOP**

All Sizes

#### SUGGESTED TOOLS AND MATERIALS









Philips Screwdriver

Sealant

Tape Measure

Safety Glasses

### PARTS / HARDWARE (INCLUDED ONLY WITH AVANITY STONE TOPS)










#### **SINK INSTALLATION**

1




2



Apply a continuous bead of quality sealant to the top surface (rim) of the sink.


Turn the stone top upside down and place it on a clean, scratch resistant surface. Center the sink over the cutout.

3

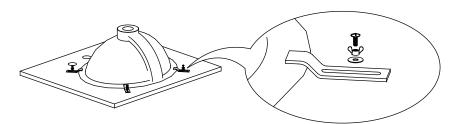


Secure the sink to the top using the mounting kit / hardware provided with the stone top, HAND TIGHTEN ONLY.

4

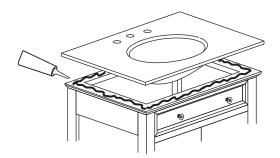


Apply bead of quality sealant evenly along the top of the vanity.

5

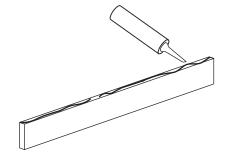

Apply silicone sealant evenly along the bottom of backsplash and wall.

6

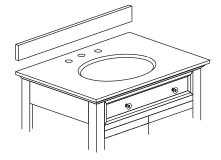

Finally, place the bottom side of back splash with sealant onto the countertop and check alignment of backsplash. Adjust the leg levelers as needed