

ASSEMBLY INSTRUCTIONS




Legend



In the first time you have to put the top of the desk in the floor upside down



The next step is place the part named **A** between the holes of the part **C**, once placed must be screwed (this step must be done with the right side and left)

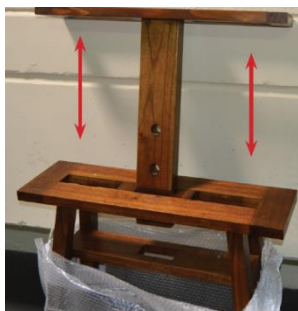

The final step is turn up the part **C** and insert it inside the part **B** (is necessary make it with help of one more person)



Finally the client must adjust it to the height wished with the crossbars