


Metal Garden Shed

OWNER'S MANUAL

Size 8 Ft X 6 Ft

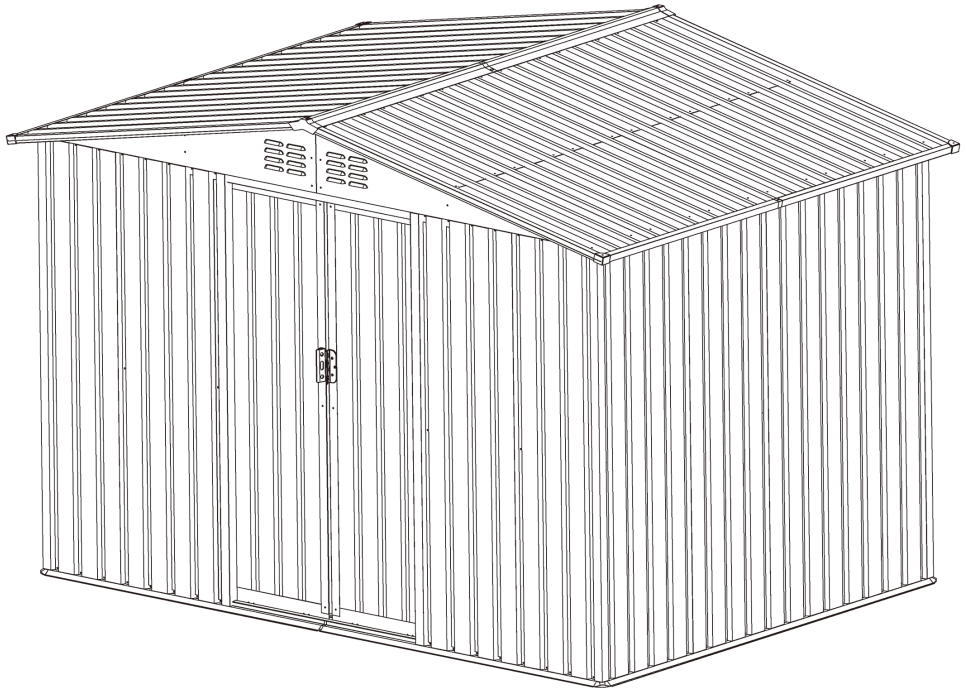

Tall walk in Shed

Quick & Easy Assembly

Ridge Reinforced walls


Wide Double Doors


Available in Various Sizes


Take care of sharp edges;


Please wear gloves;


It will take 2 people 3-4 hours to install.

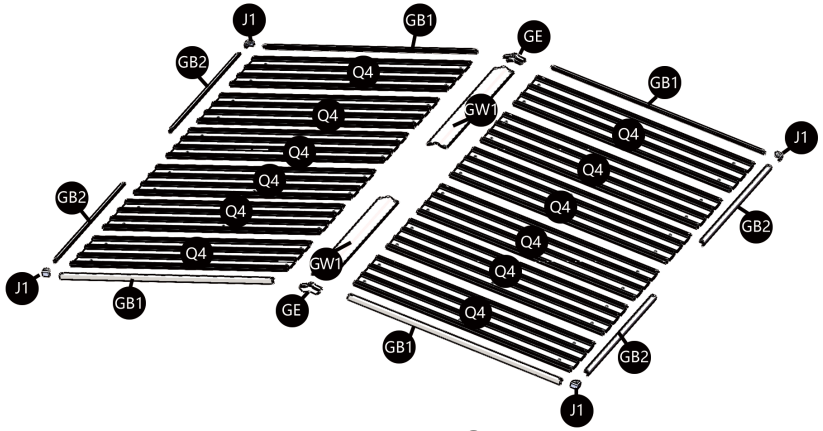
J1
GB1
GE
GB2
Q4
GW1
J1
GB2
GB1
GE
GW1
GB1
GB2
J1

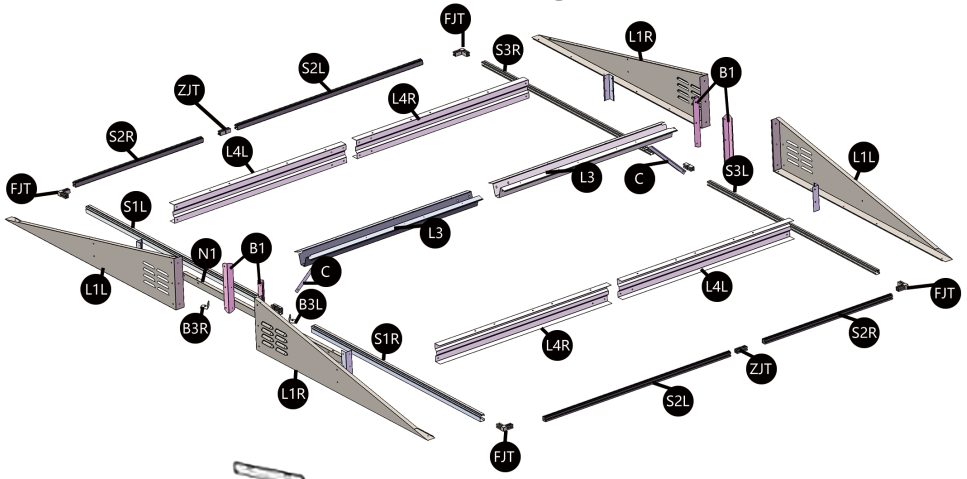
FJT
S3R
L1R
B1
S2L
ZJT
L4R
S2R
L4L
L3
C
S3L
L1L
FJT
S1L
L3
N1
B1
C
L1L
L4L
FJT
B3L
B3R
S1R
L4R
S2R
ZJT
L1R
S2L
FJT

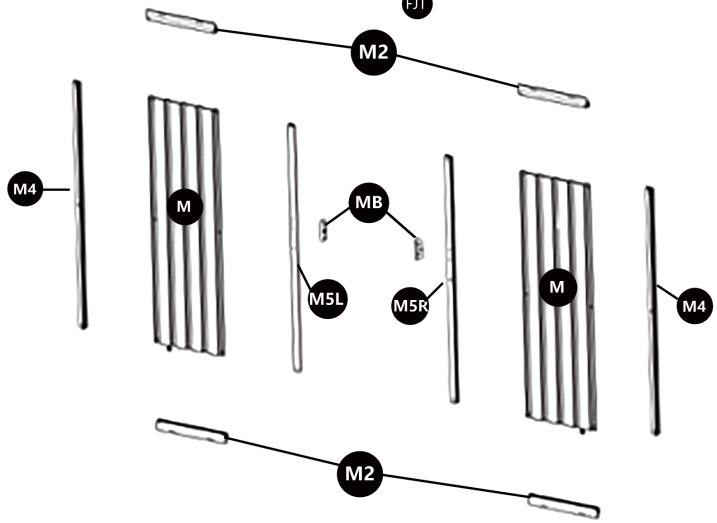
M2
M4
M
MB
M5L
M5R
M
M4
M2

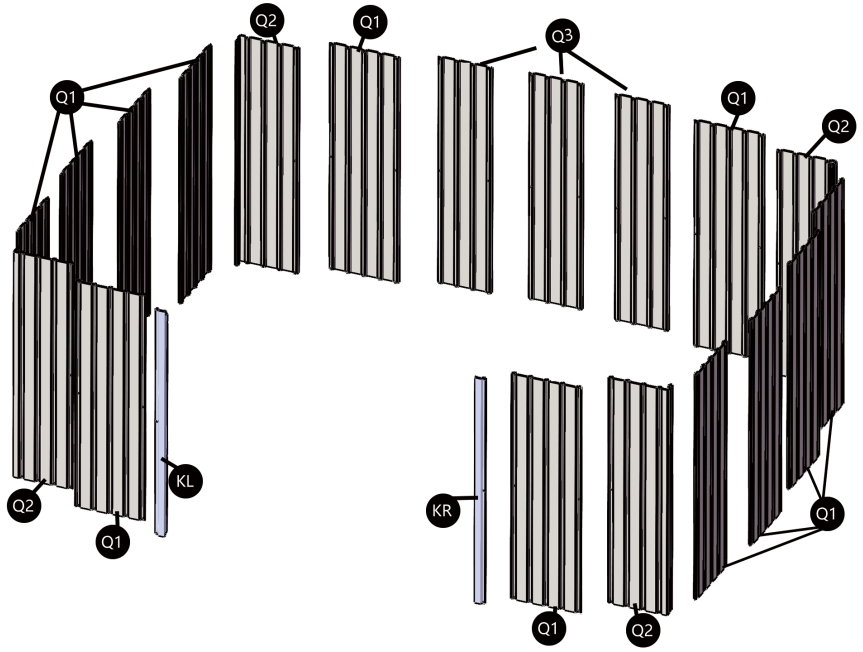
Q2
Q1
Q3
Q1
Q1
Q2
Q1
KL
Q2
Q1
KR
Q1
Q1
Q2

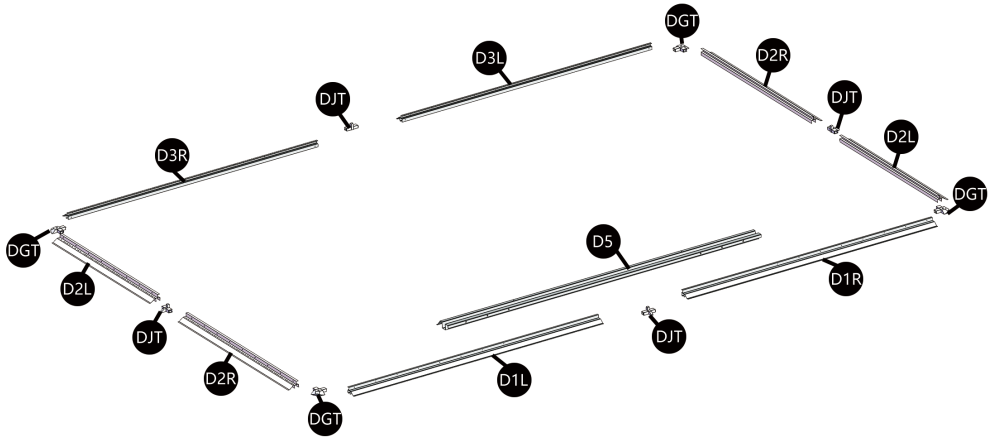
DGT
D3L
D2R
DJT
DJT
D2L
D3R
DGT
DGT
D5
D2L
D1R
DJT
DJT
D2R
D1L
DGT

PARTS LIST

NO1	PART	QTY
D1L		1
D1R		1
D2L		2
D2R		2
D3L		1
D3R		1
D5		1
S1R		1
S1L		1
S2L		2
S2R		2
S3L		1
S3R		1
N1		1
KL		1
KR		1

NO1	PART	QTY
L1L		2
L1R		2
B1		4
B2L		2
B2R		2
C		2
L3		2
L4L		2
L4R		2
GB1		4
GB2		4
GW1		2
M2		4
F1		306
M4		2
M5L		1

NO1	PART	QTY
M5R		1
Q1		12
Q2		4
Q3		3
Q4		12
M		2
J1		4
MB		2
DJT		4
FJT		4
ZJT		4
DGT		4
GE		2
GD		4
G2		4

PARTS LIST

NO1	PART	QTY
B3L		1
B3R		1
LSM		30
F14		100

Install LSM at screw exposure,Prevent collisions.

This part is used with all screws, Such as F1 and F3, located in the external tool room Easy to seal and waterproof.

NO1	PART	QTY
F3		23
F4		12

NO1	PART	QTY
F8		4
F11		20

Warning & Attention:

-Take care of sharp edges; Please wear gloves;

-You are advised to read the whole procedure before installing it;

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-All panels are clearly marked and care should be taken to use the correct one. It is important that these instructions are followed step by step.

Each screw has a surplus quantity, which can be used in reserve.

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

Tools:

Gloves


Ladder

Electric drill

Phillips screwdriver

Safety Helmet Hat

goggles

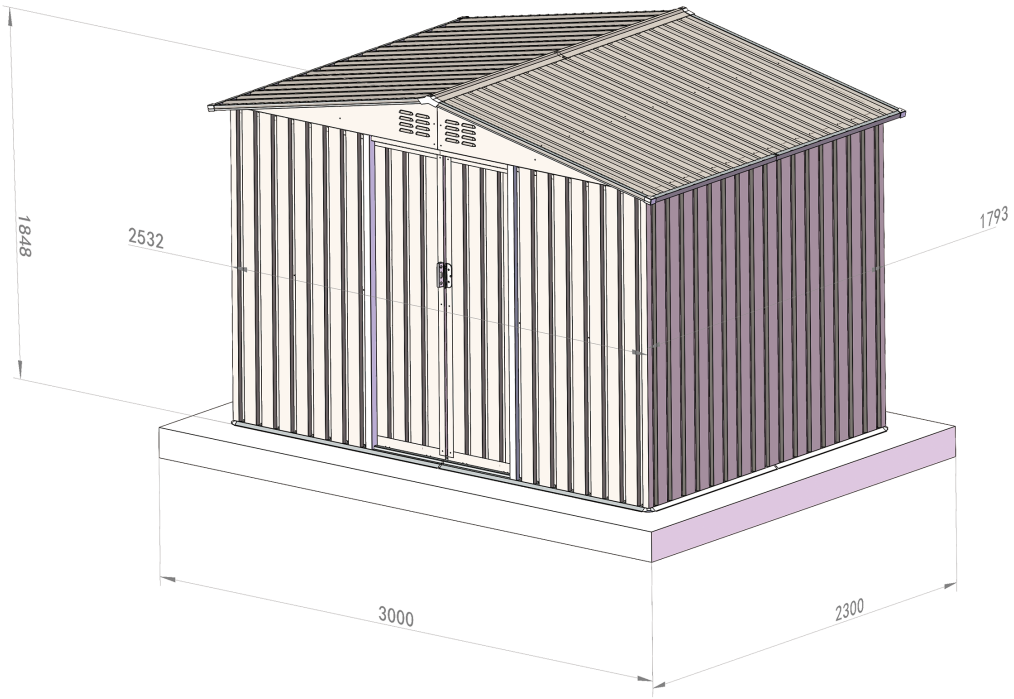

The installation space should be flat，and at least 3000x2300mm.The foundation is fixed on the ground in this space.

Note: Take care of sharp edges.
All panels are clearly marked and care should be taken to use the correct one. It is important that these instructions are followed step by step.


NO.	PART	Qty.
D1R		1
D1L		1
D2R		2

NO.	PART	Qty.
D2L		2
D3L		1
D3R		1


NO.	PART	Qty.
DGT		4
DJT		4
F14		16

NO.	PART	Qty.
F1		16
F8		4

tips: All F1 and F14 should be used together.
The following steps are not explained.

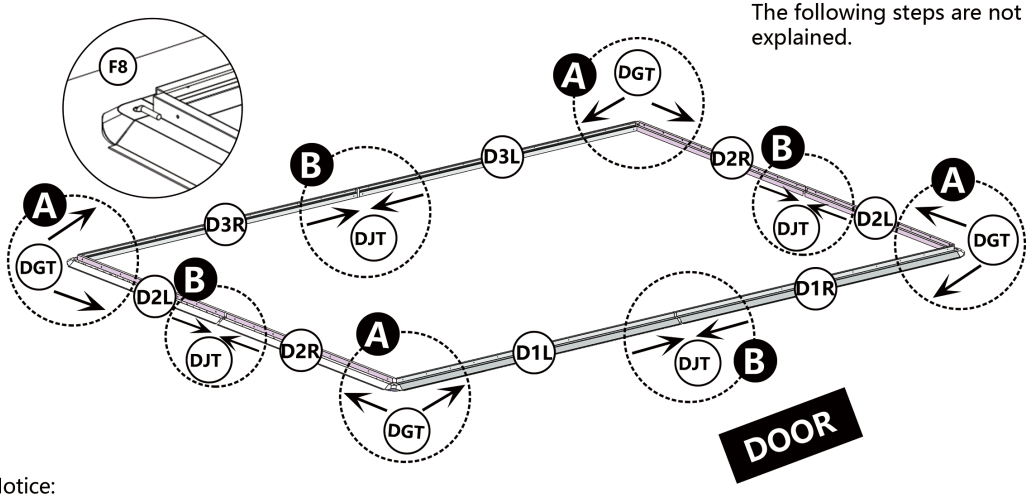


Notice:
DJT installation: At the junction of two arrows, please install in the direction indicated by the arrows (→←).
DGT installation: Two ground pallets are connected to the DGT as shown in the figure.
Each DGT needs to be fixed with two F1s.
F8 installation: After the overall installation is complete, in the case of mud floor,.
F8 is installed into the DGT hole, as shown in Figure 1.
Use expansion screws to install other floors.

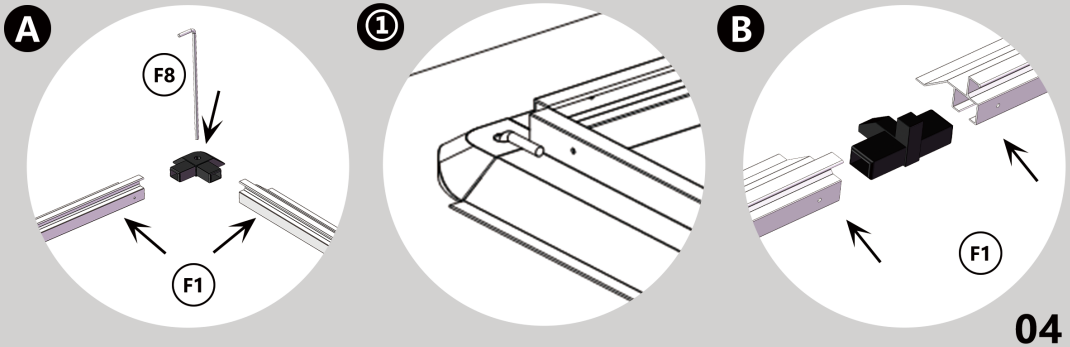


Note: Please wear gloves

NO.	PART	Qty.
D5		1

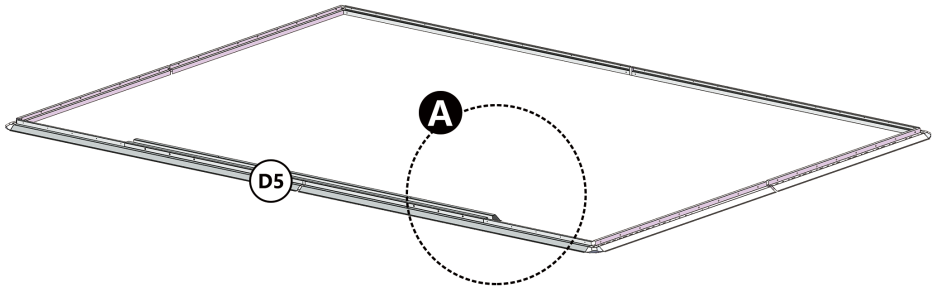


Notice:

You do not need to install screws in this step. Align the holes, which are the same as in the previous step.

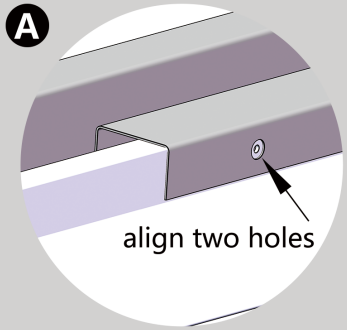


NO.	PART	Qty.
Q2		4
F1		12

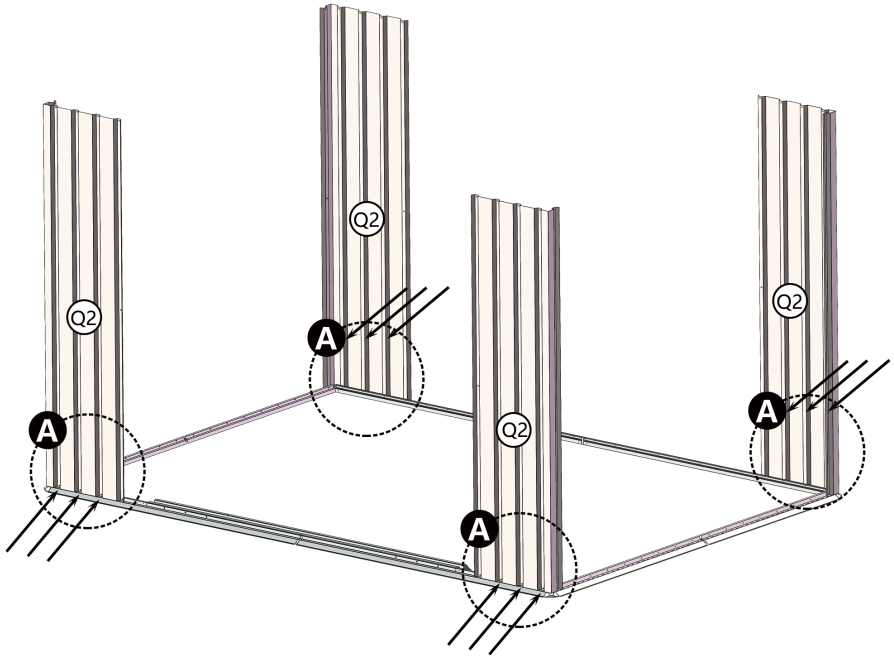

Notice:


In this step, only the three holes in the middle of Q2 need to be installed and reserved on both sides.

The reserved holes are shared with the following steps.

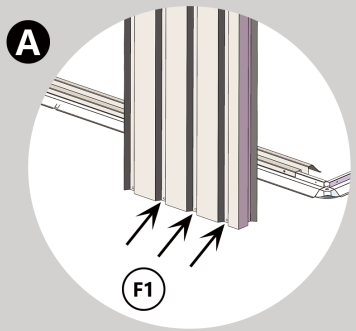

NO.	PART	Qty.
S1R		1
S1L		1
S3L		1
S3R		1


NO.	PART	Qty.
G2		4
F1		4
ZJT		2

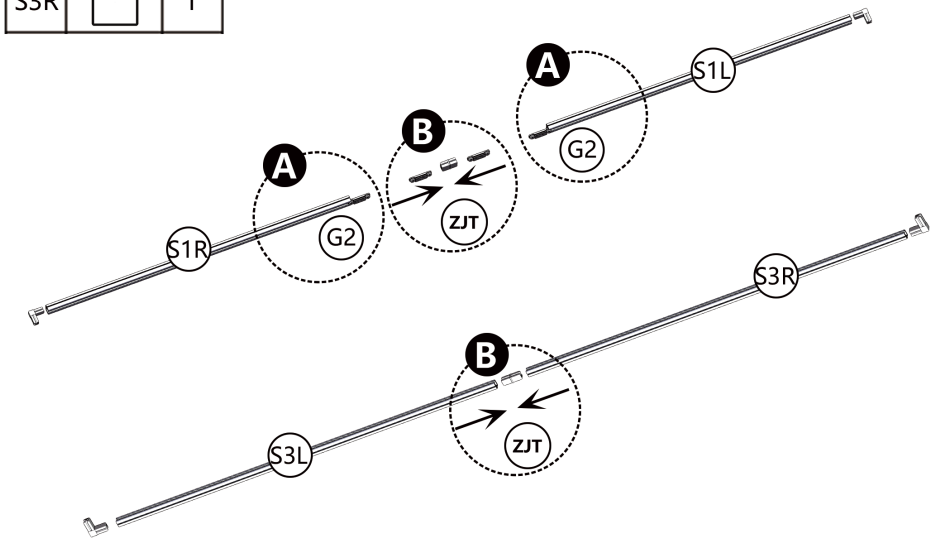

Notice:

G2 has been placed in S1R and S1L before shipment. If it slides out, follow step A to insert it.


S1L and S1R, S3L and S3R, are connected by ZJT and fixed by F1, respectively.

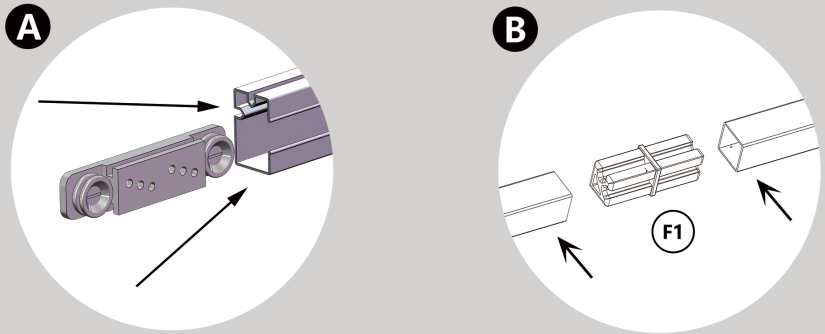


NO.	PART	Qty.
S2L		2
S2R		2


NO.	PART	Qty.
FJT		4
N1		1

NO.	PART	Qty.
ZJT		2
F1		12

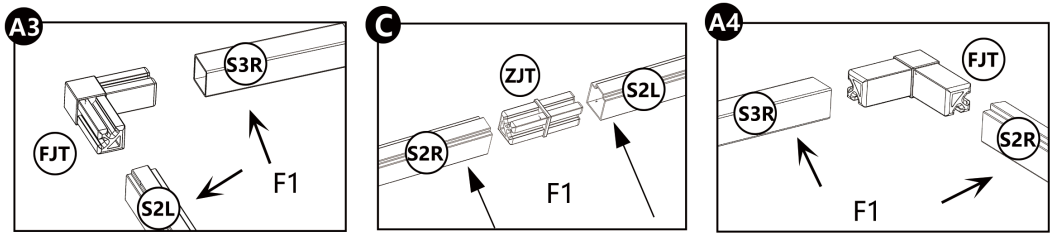


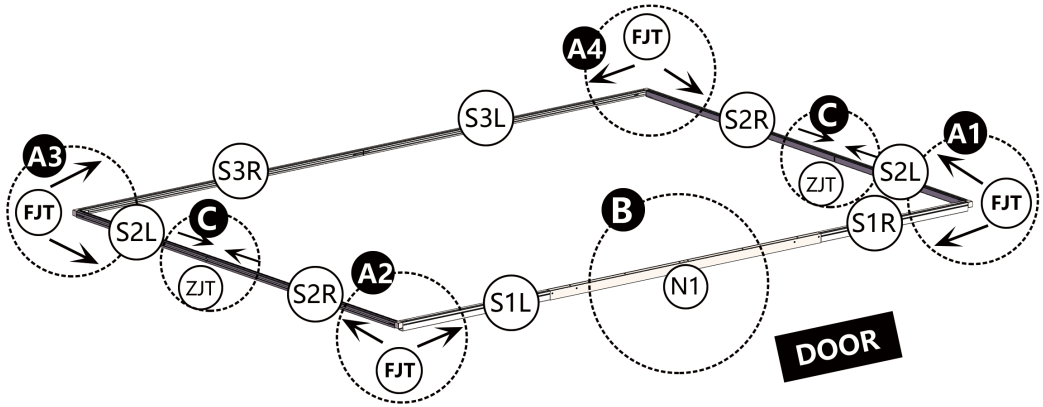

Notice:
ZJT installation: At the junction of two arrows, please install in the direction indicated by the arrows (→←).
FJT installation: Connect the two-layer frame to the DGT as shown.
Each DGT needs to be fixed with two F1s. S1 has no fixed hole positions.
N1 mounting: Install the N1 on the connected S1R and S1L, securing it from the bottom up with 2 F1s.

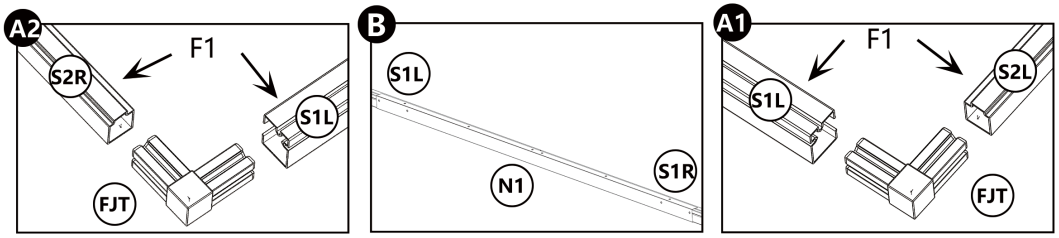

NO.	PART	Qty.
F1		12

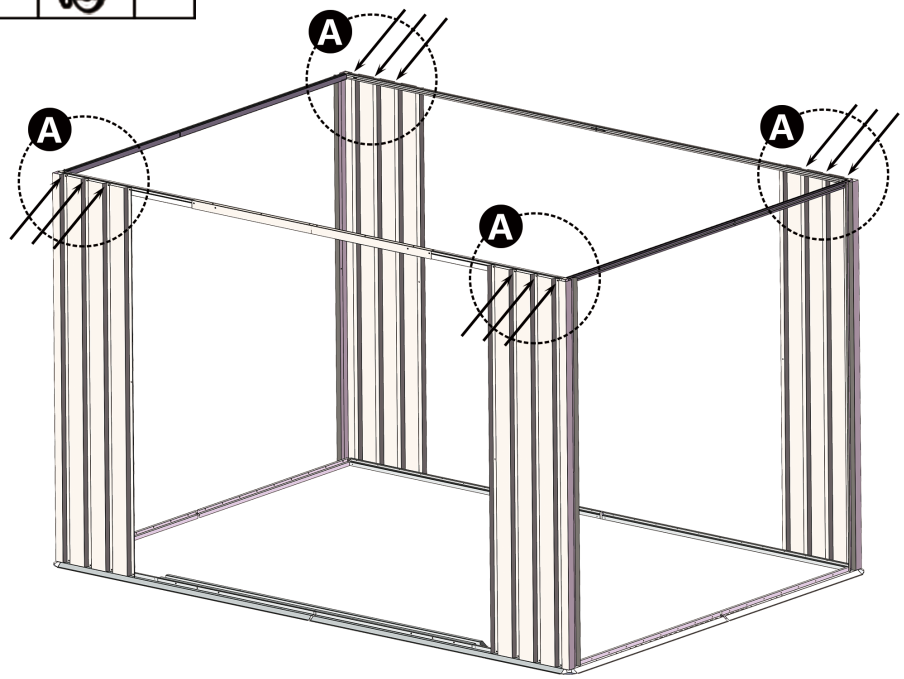


Notice:

In this step, only the middle three holes need to be installed, and both sides need to be reserved.

The reserved hole is shared with other steps.

The walls are tiled on the outside and framed on the inside.


NO.	PART	Qty.
Q1		12
Q3		3
F11		18
F1		116

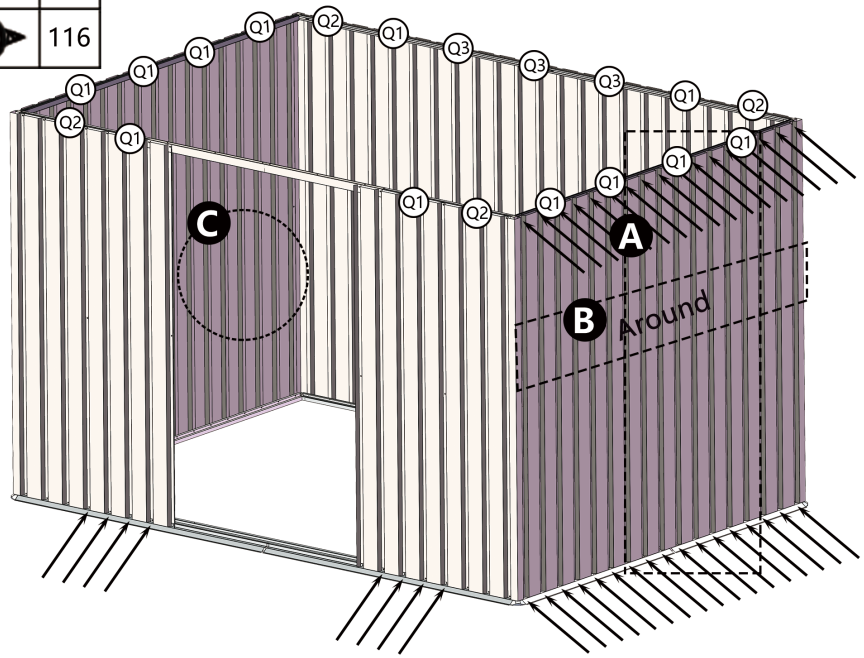



Notice:


As shown in the picture, assemble the wall tiles in turn, Q1\Q3,The top, middle and bottom of the wall tiles need to be screwed.

The upper and lower ends are fixed with F1, and the middle is fixed with F11.

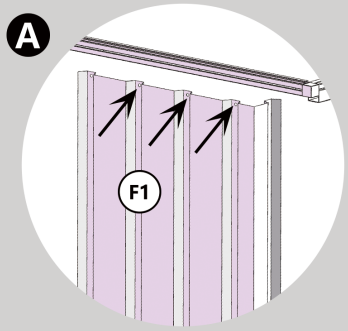


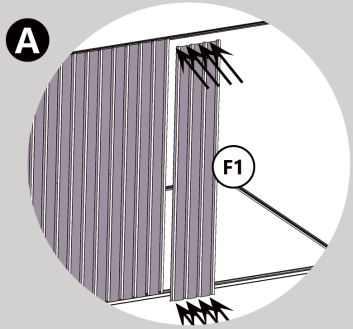

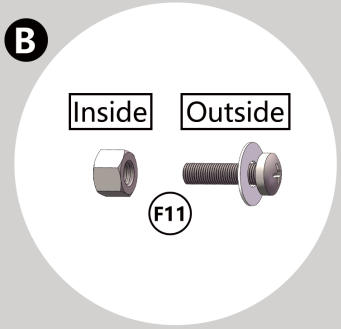

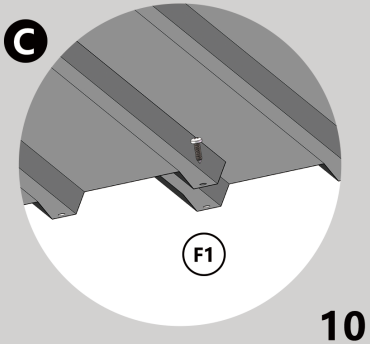

NO.	PART	Qty.
KL		1
KR		1
F1		4
F11		2

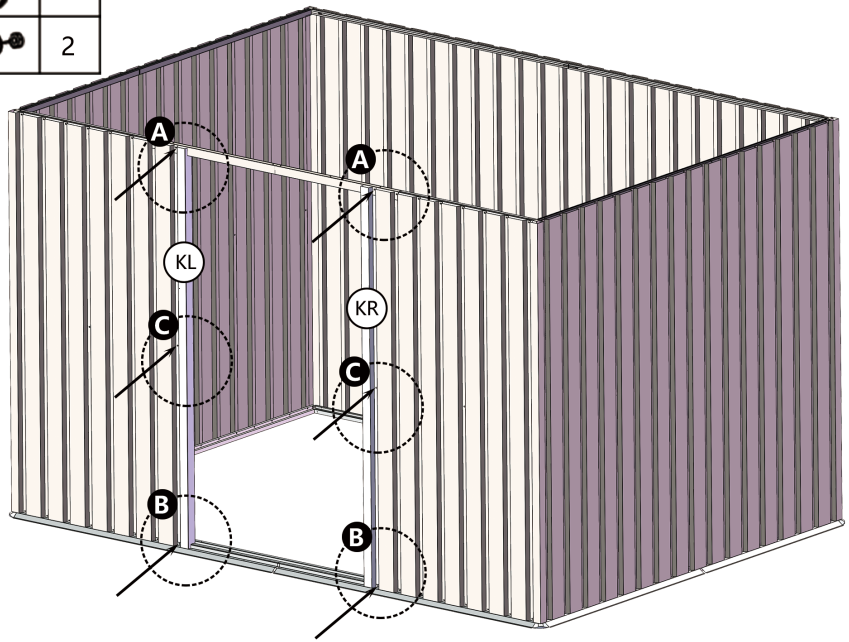

Notice:


As shown in the picture, the steps of door frame and wall tile installation are the same.

The upper, middle and lower parts of KR and KL need screws.

The upper and lower ends are fixed with F1, and the middle is fixed with F11.

NO.	PART	Qty.
B1		4
B2L		2
B2R		2
L1L		2
L1R		2

NO.	PART	Qty.
F3		2
F1		10

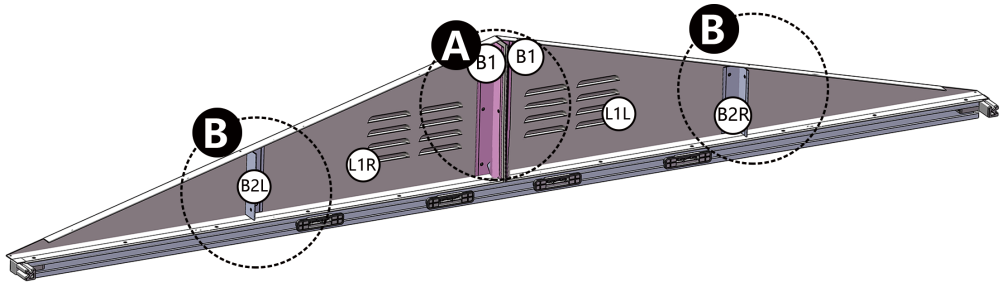


Notice:


B1 has holes on both sides, and the large holes are 2 B1s, L1R, and L1L joined together.

The small holes are 2 B1s connected to L1R and L1L respectively.


B2R and B2L have holes on both sides, and the large holes are B2R and B2L connected to L4L and L4R.

The small holes are B2R and B2L, which are connected to L1R and L1L respectively.

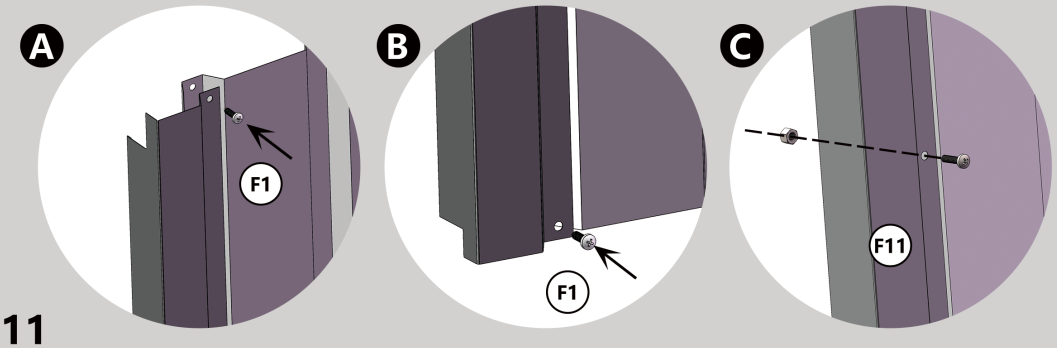

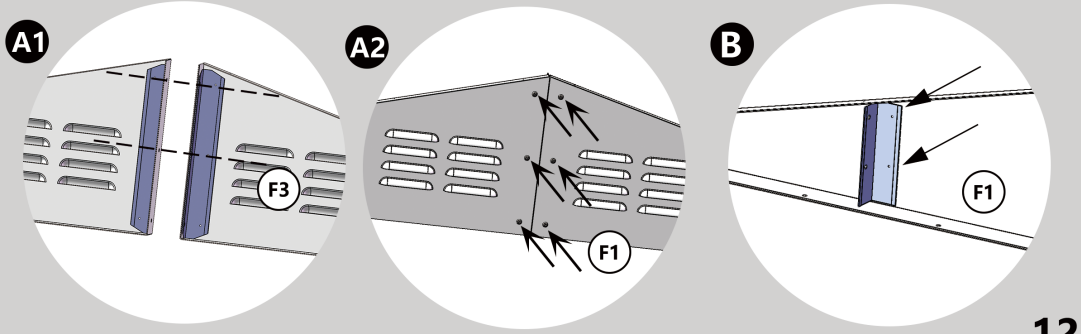


NO.	PART	Qty.
C		2
F3		1
B3R		1
B3L		1

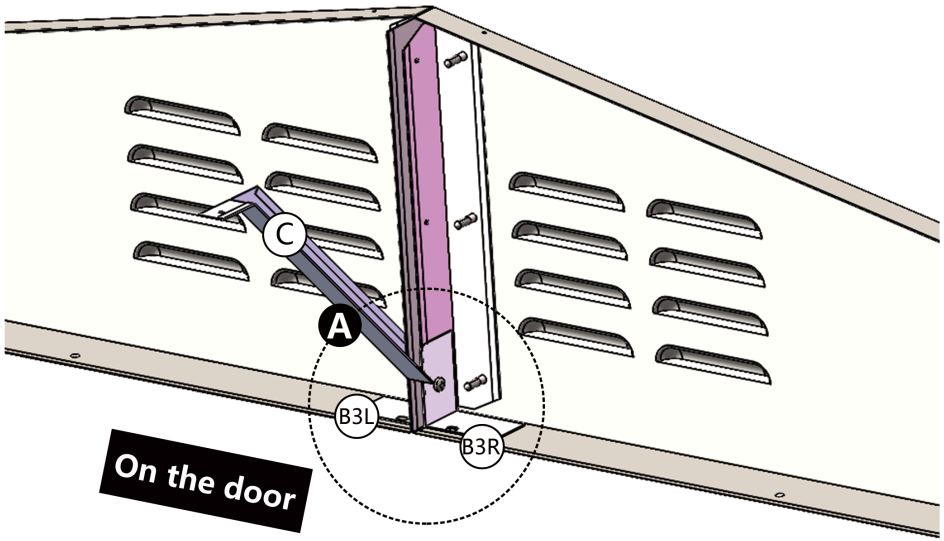


Notice:

Connect C with 2 B1, L1L, L1R, B3L and B3R and fix them with F3;

After completing step A, bend the other end of C about 45° and connect it to the bottom of L3.

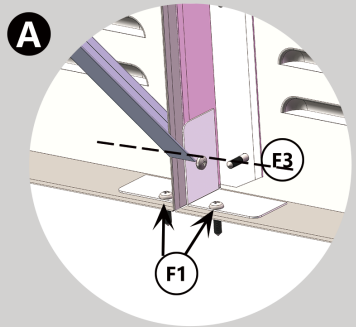


NO.	PART	Qty.
F1		24

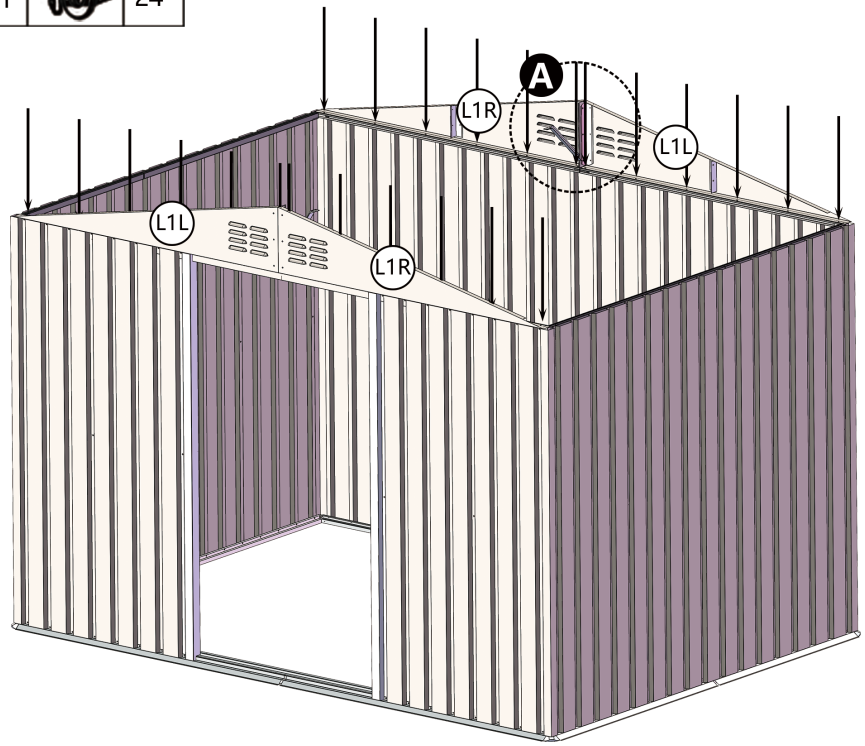


Notice:

The assembled roof support parts are successively installed on the wall tiles with F1.

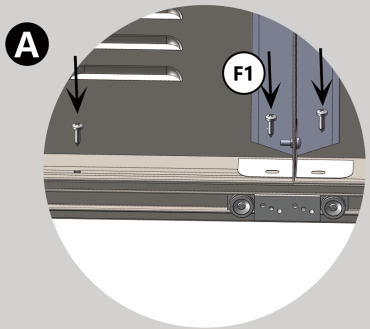


NO.	PART	Qty.
L3		2
L4L		2
L4R		2

NO.	PART	Qty.
F3		16
F1		2

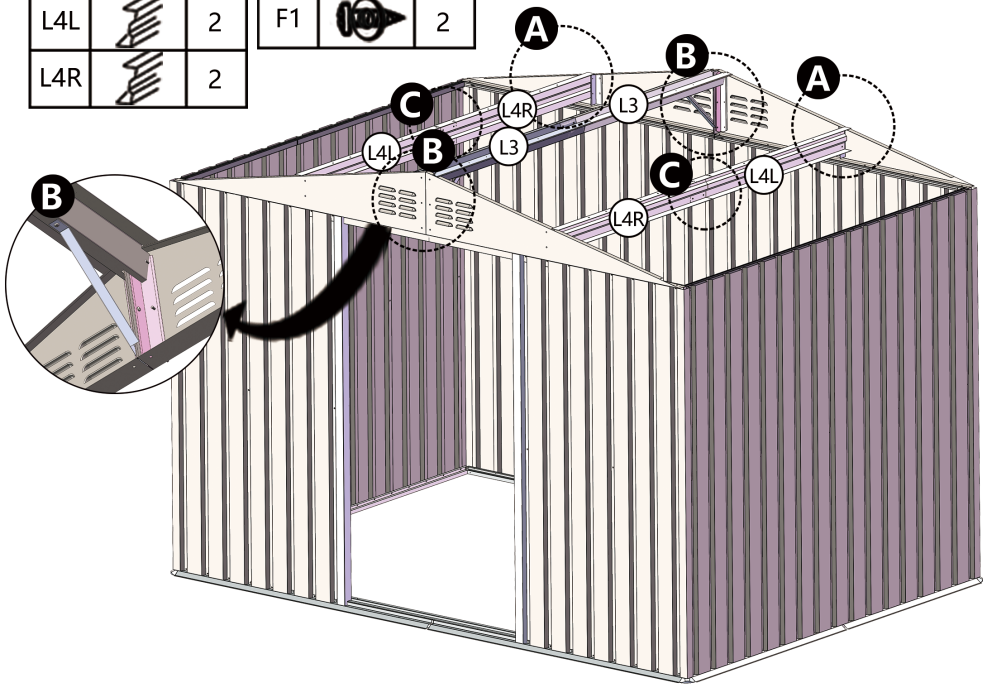



Notice:
Step A: Insert the connected L4R and L4L into the B2L and B2R holes respectively.
Step B: Connect two L3s and place them on L1R and L1L.
Temporarily fixed with F1, later need to remove the hole and share with Q4.
The other end of part C is fixed to the bottom hole of L3 with F1.
Step C: Connect L4R and L4L and install both sides outwards, as shown in the figure.


NO.	PART	Qty.
Q4		12
F1		72

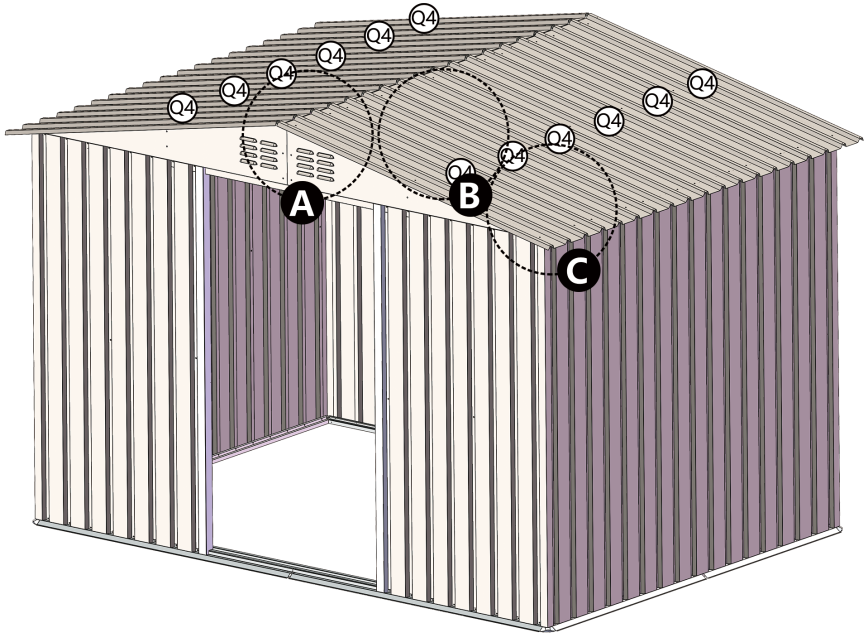



Notice:
Install Q4 in sequence, overlap between every 2 pieces, and each Q4 needs 2 rows of F1 fixed.

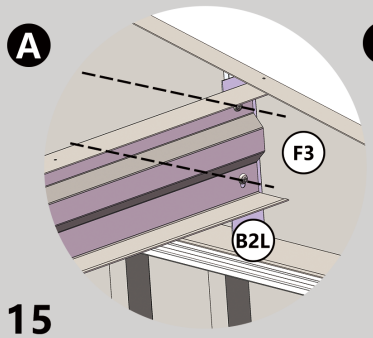


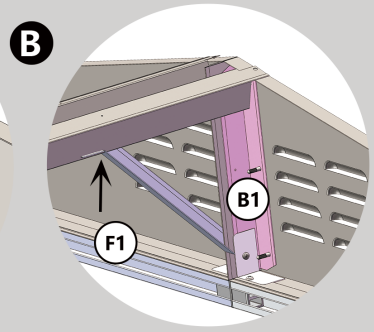

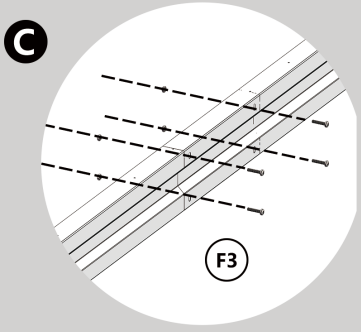

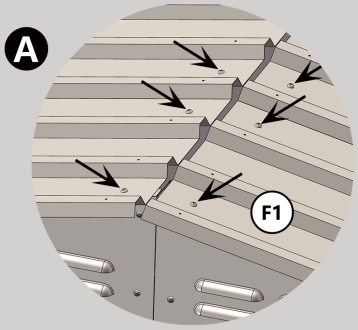


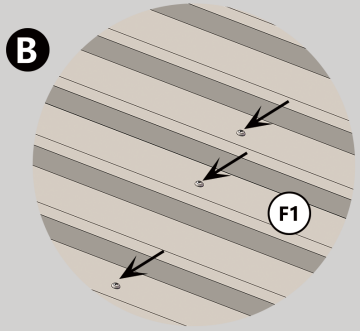

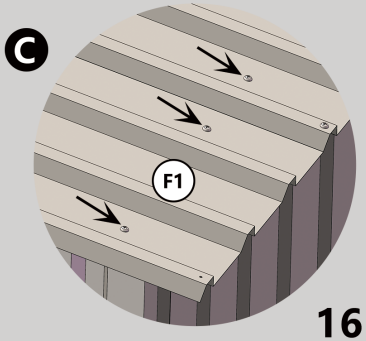

NO.	PART	Qty.
GB1		4
GB2		4

NO.	PART	Qty.
F1		6
J1		4

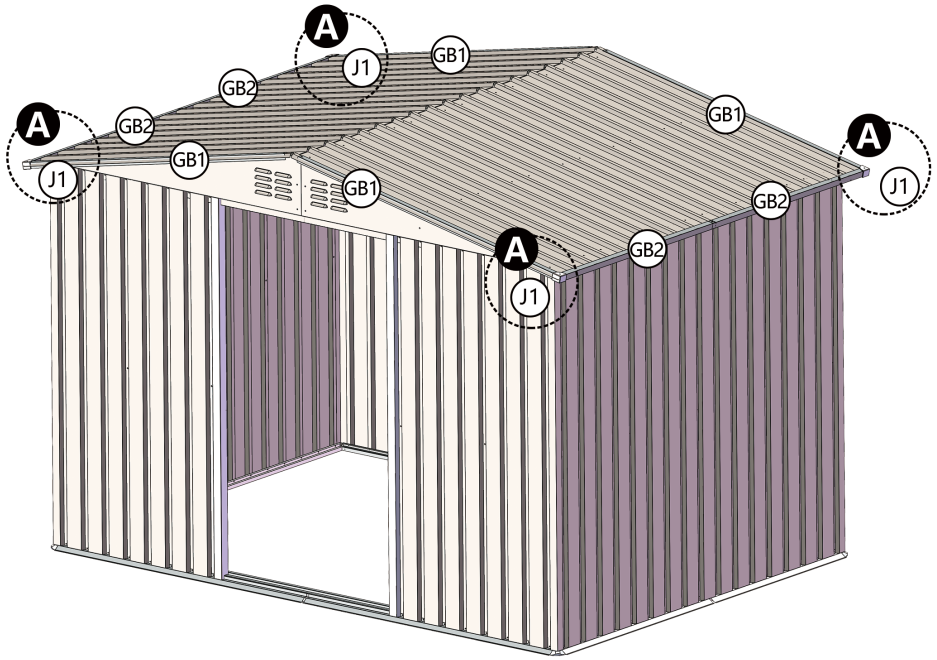


Notice:

As shown in the picture, fix GB1 and GB2 with F1 on the edge,

The four corners GB1, GB2, J1 share the hole position.


NO.	PART	Qty.
GW1		2
GE		2
F1		2

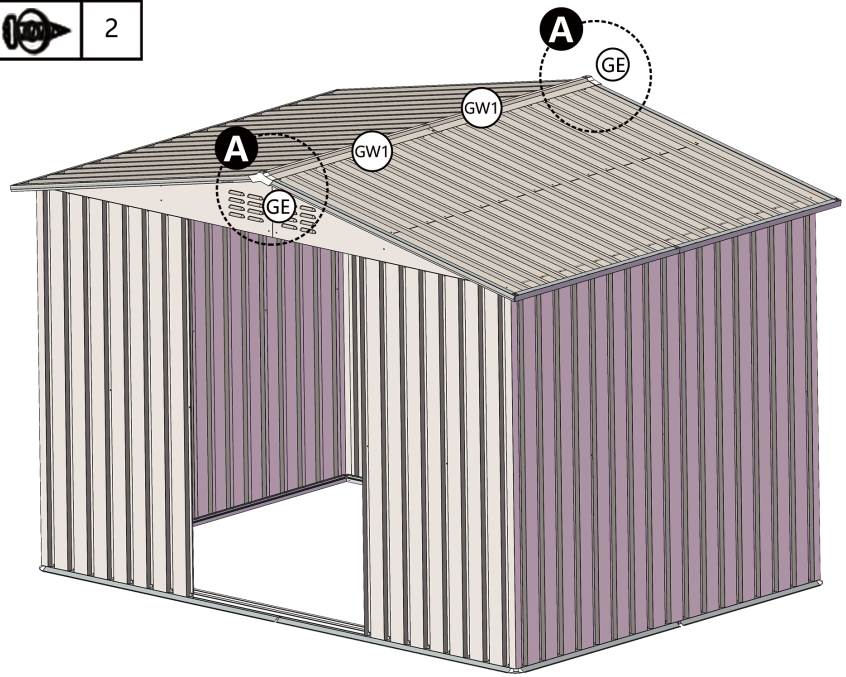



Notice:

Put the GW1 on the roof, install it with the GE, and fasten it at both ends with F1.


① Description :GW1, Q4, GB1 share side holes.



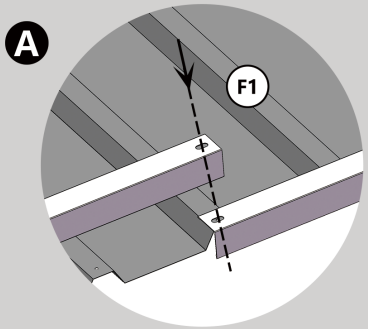


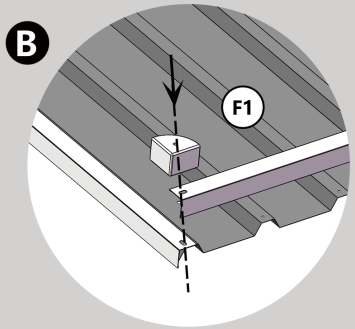


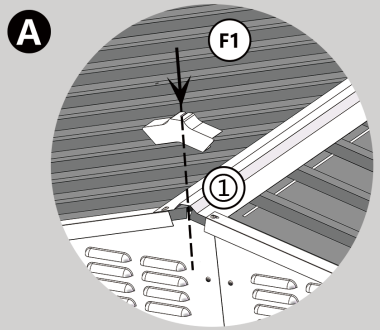



NO.	PART	Qty.
M2		4
M4		4
GD		4

NO.	PART	Qty.
M5L		1
M5R		1
MB		2

NO.	PART	Qty.
M		2
F4		12
F1		6

NO.	PART	Qty.
F3		4

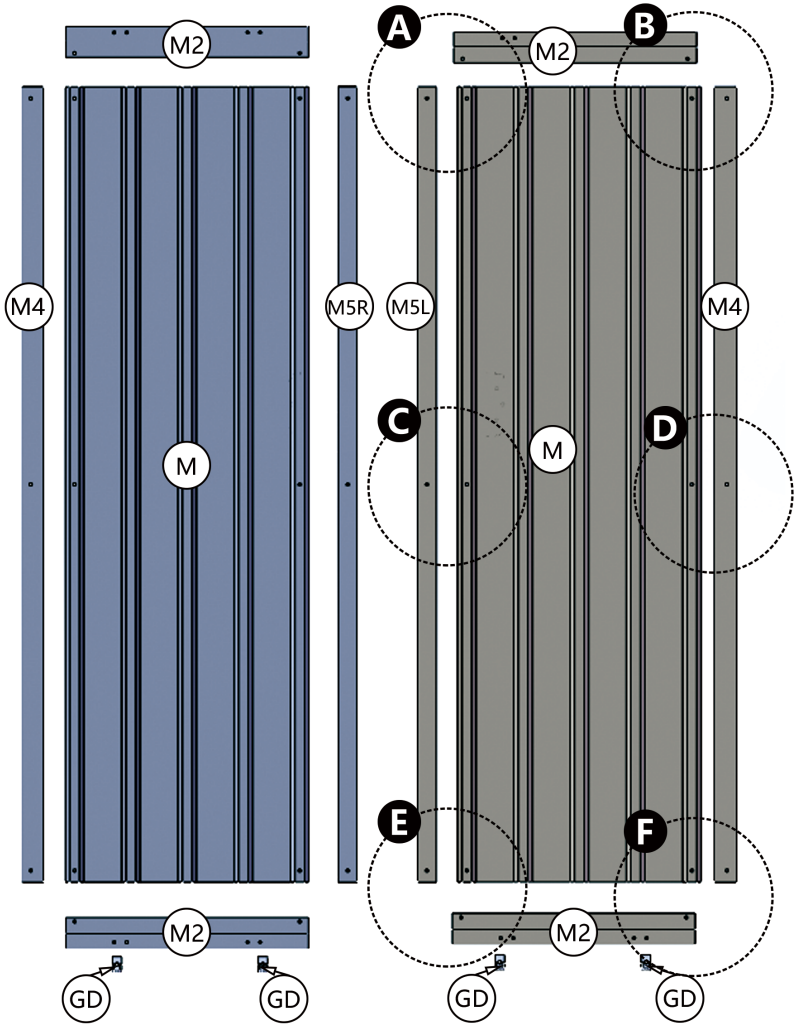

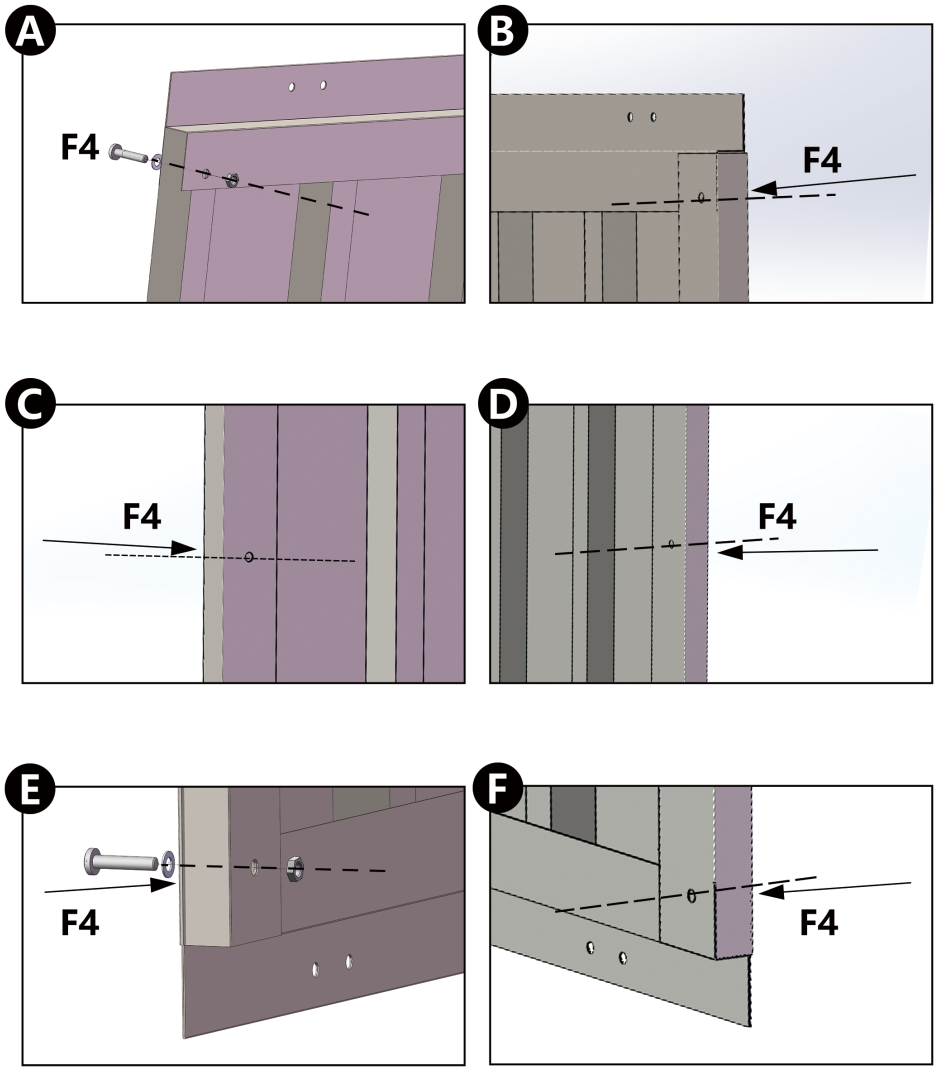


Notice:

The F4 in the picture is fixed from the outside

NO.	PART	Qty.
F1		3
F3		2
F4		6

NO.	PART	Qty.
F1		3
F3		2
F4		6

NO.	PART	Qty.
F1		8

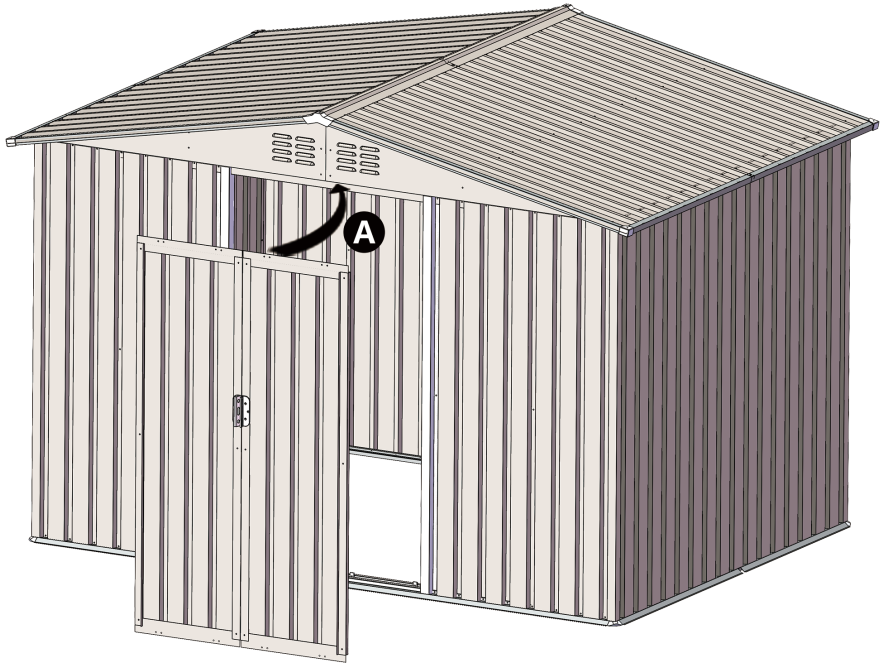

Notice:

Use F1 to secure the installed door to the pulley.

The adjustment of the door can be achieved by the three holes of the pulley being at different heights.

