




Product Installation Instructions

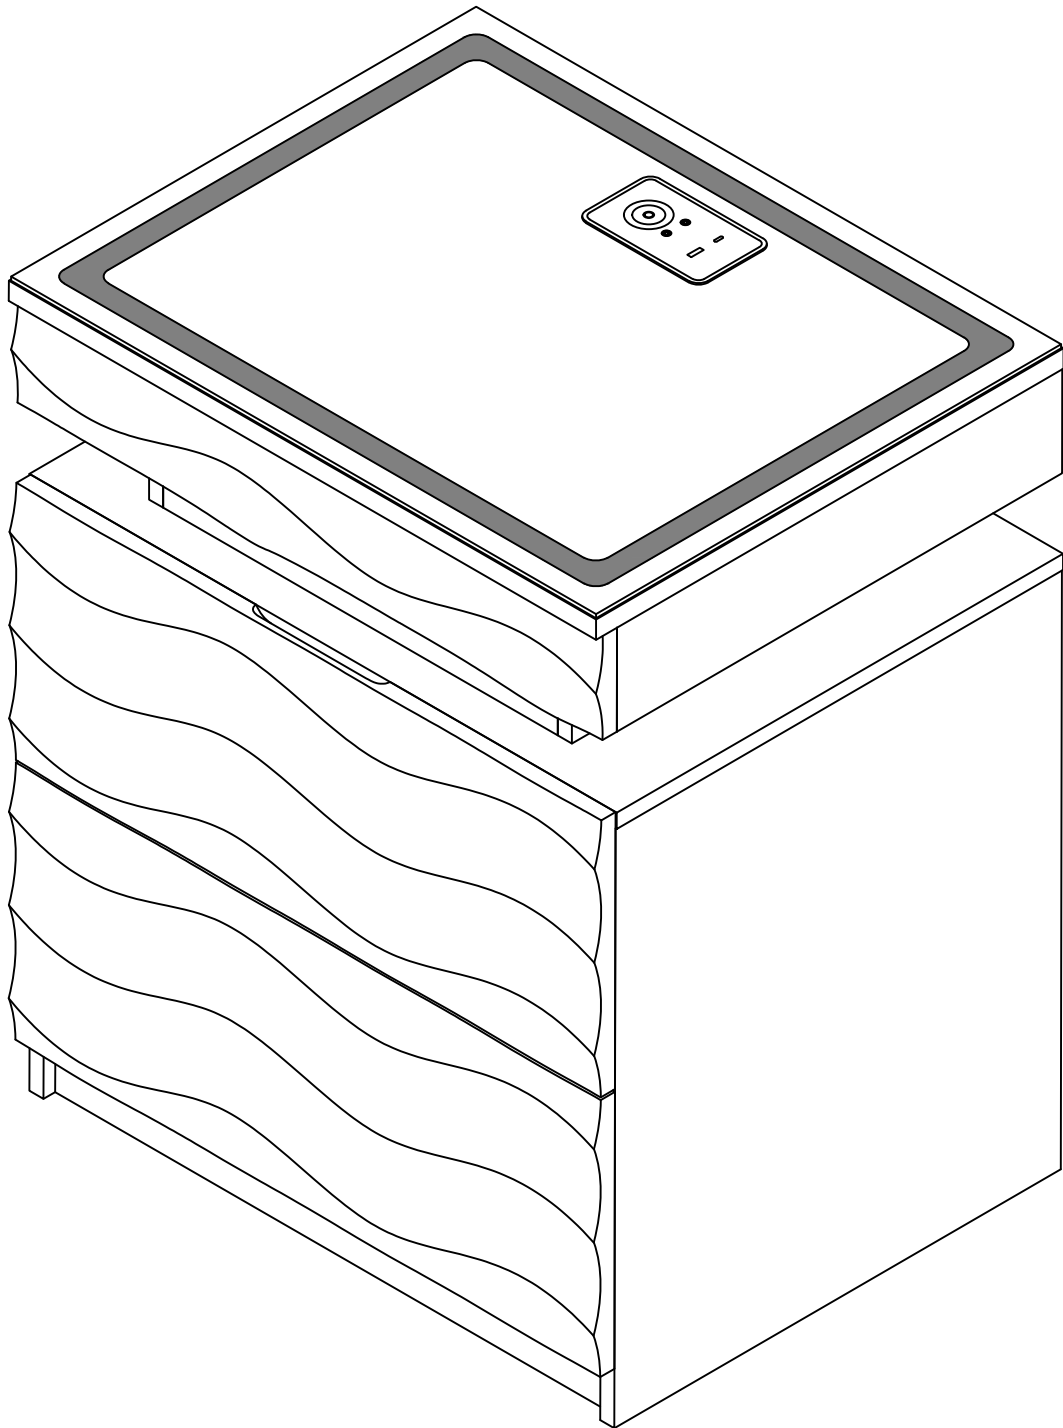


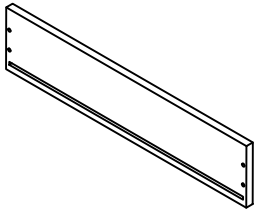


1x2

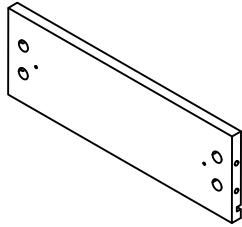


2x4

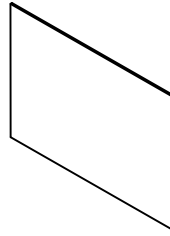


3x2

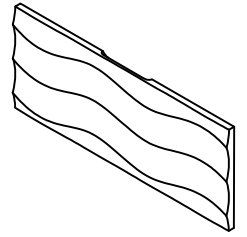


4x1

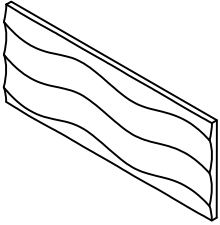


5x1

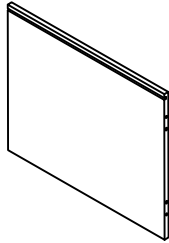


6x1

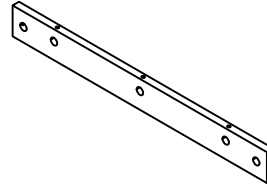


7x2

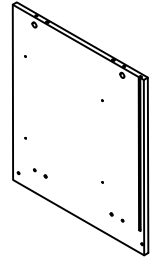


8x1

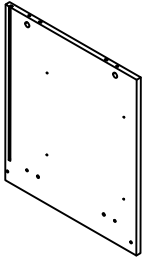


9x1

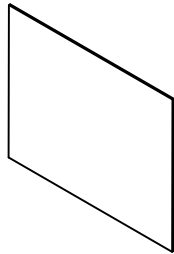


10x1

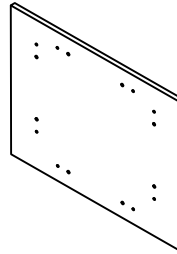


11x1

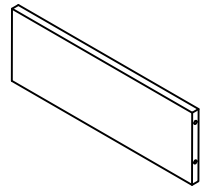


12x1

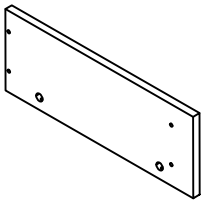


13x1

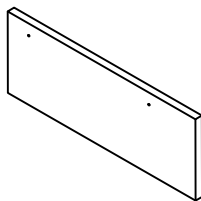


14x1

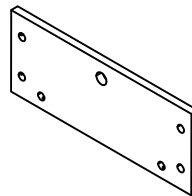


15x1

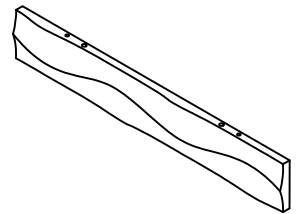


16x1

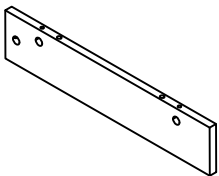


17x1

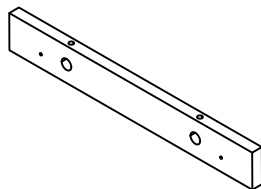


18x2

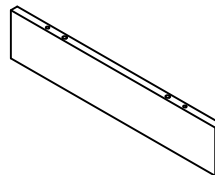







19x1

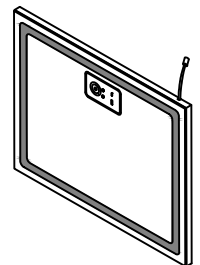


20x1

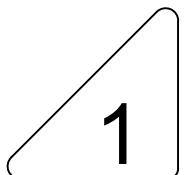


Accessories list

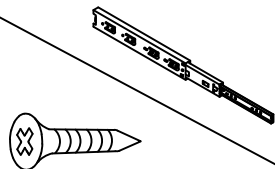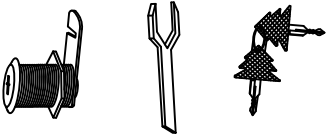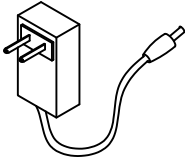A		Two In One Screw (6x28mm)	62pcs +4pcs
B		Two In One Nut (10x12mm)	62pcs +4pcs
C		Wood Chipping (6x30mm)	22pcs +2pcs
D		Screw & Guide (12 inch) (3.5x12mm)	6pcs 30pcs +6pcs
E		Back plate buckle & Screw (3x16mm)	4pcs +1pcs
F		Locks & tools & key	1pcs
G		Non-slip pads	8pcs +1pcs
		AC/DC Adapter(12V 3.0A)	1pcs






1pcs

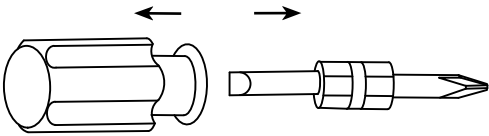


Double-head screwdriver, use as required

Product Installation Instructions

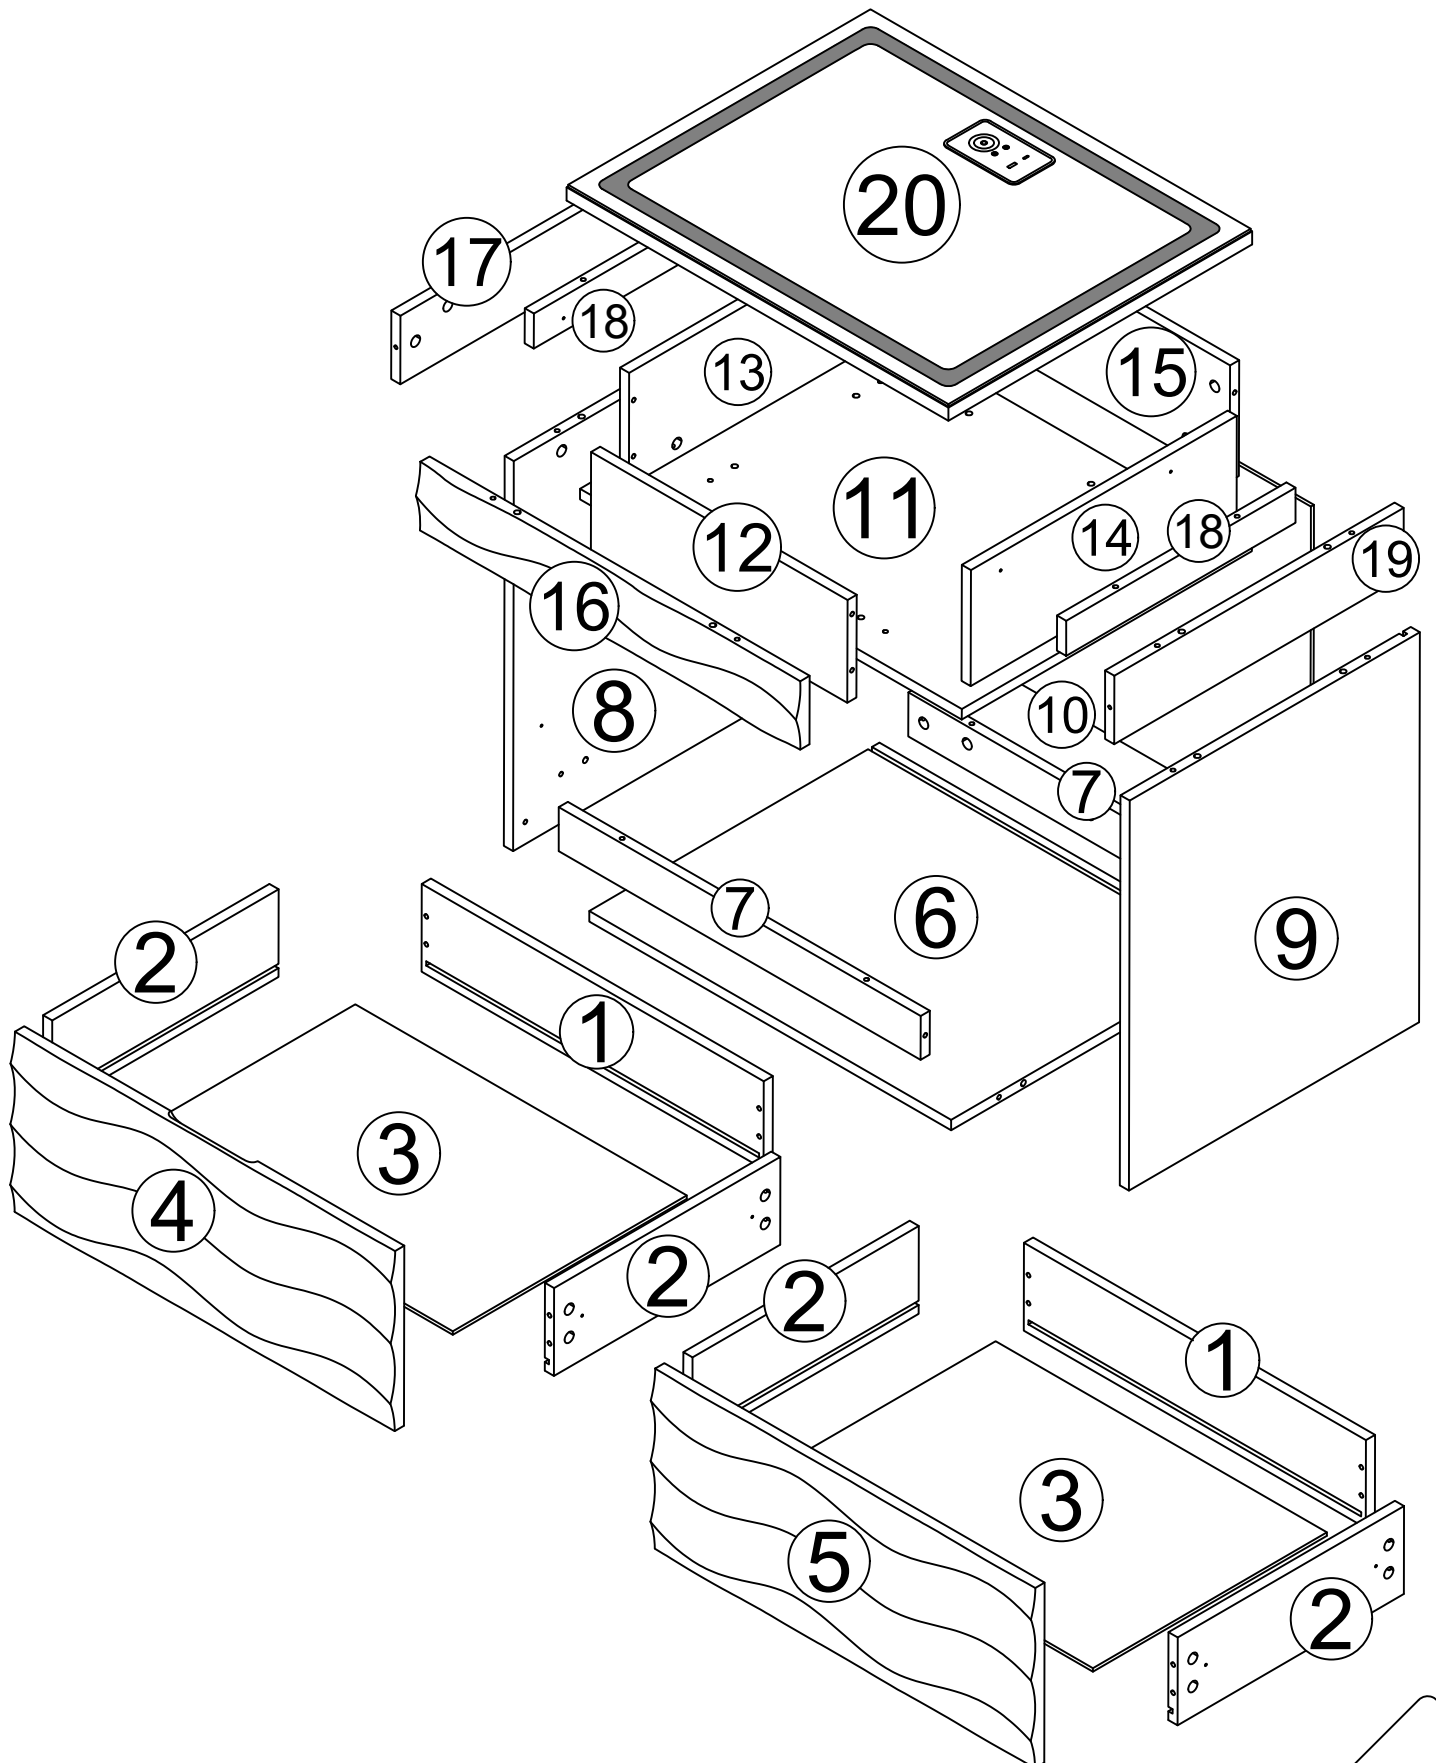


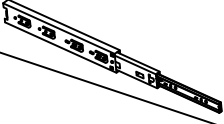A		16pcs	D	 	4pcs 8pcs
B		16pcs			

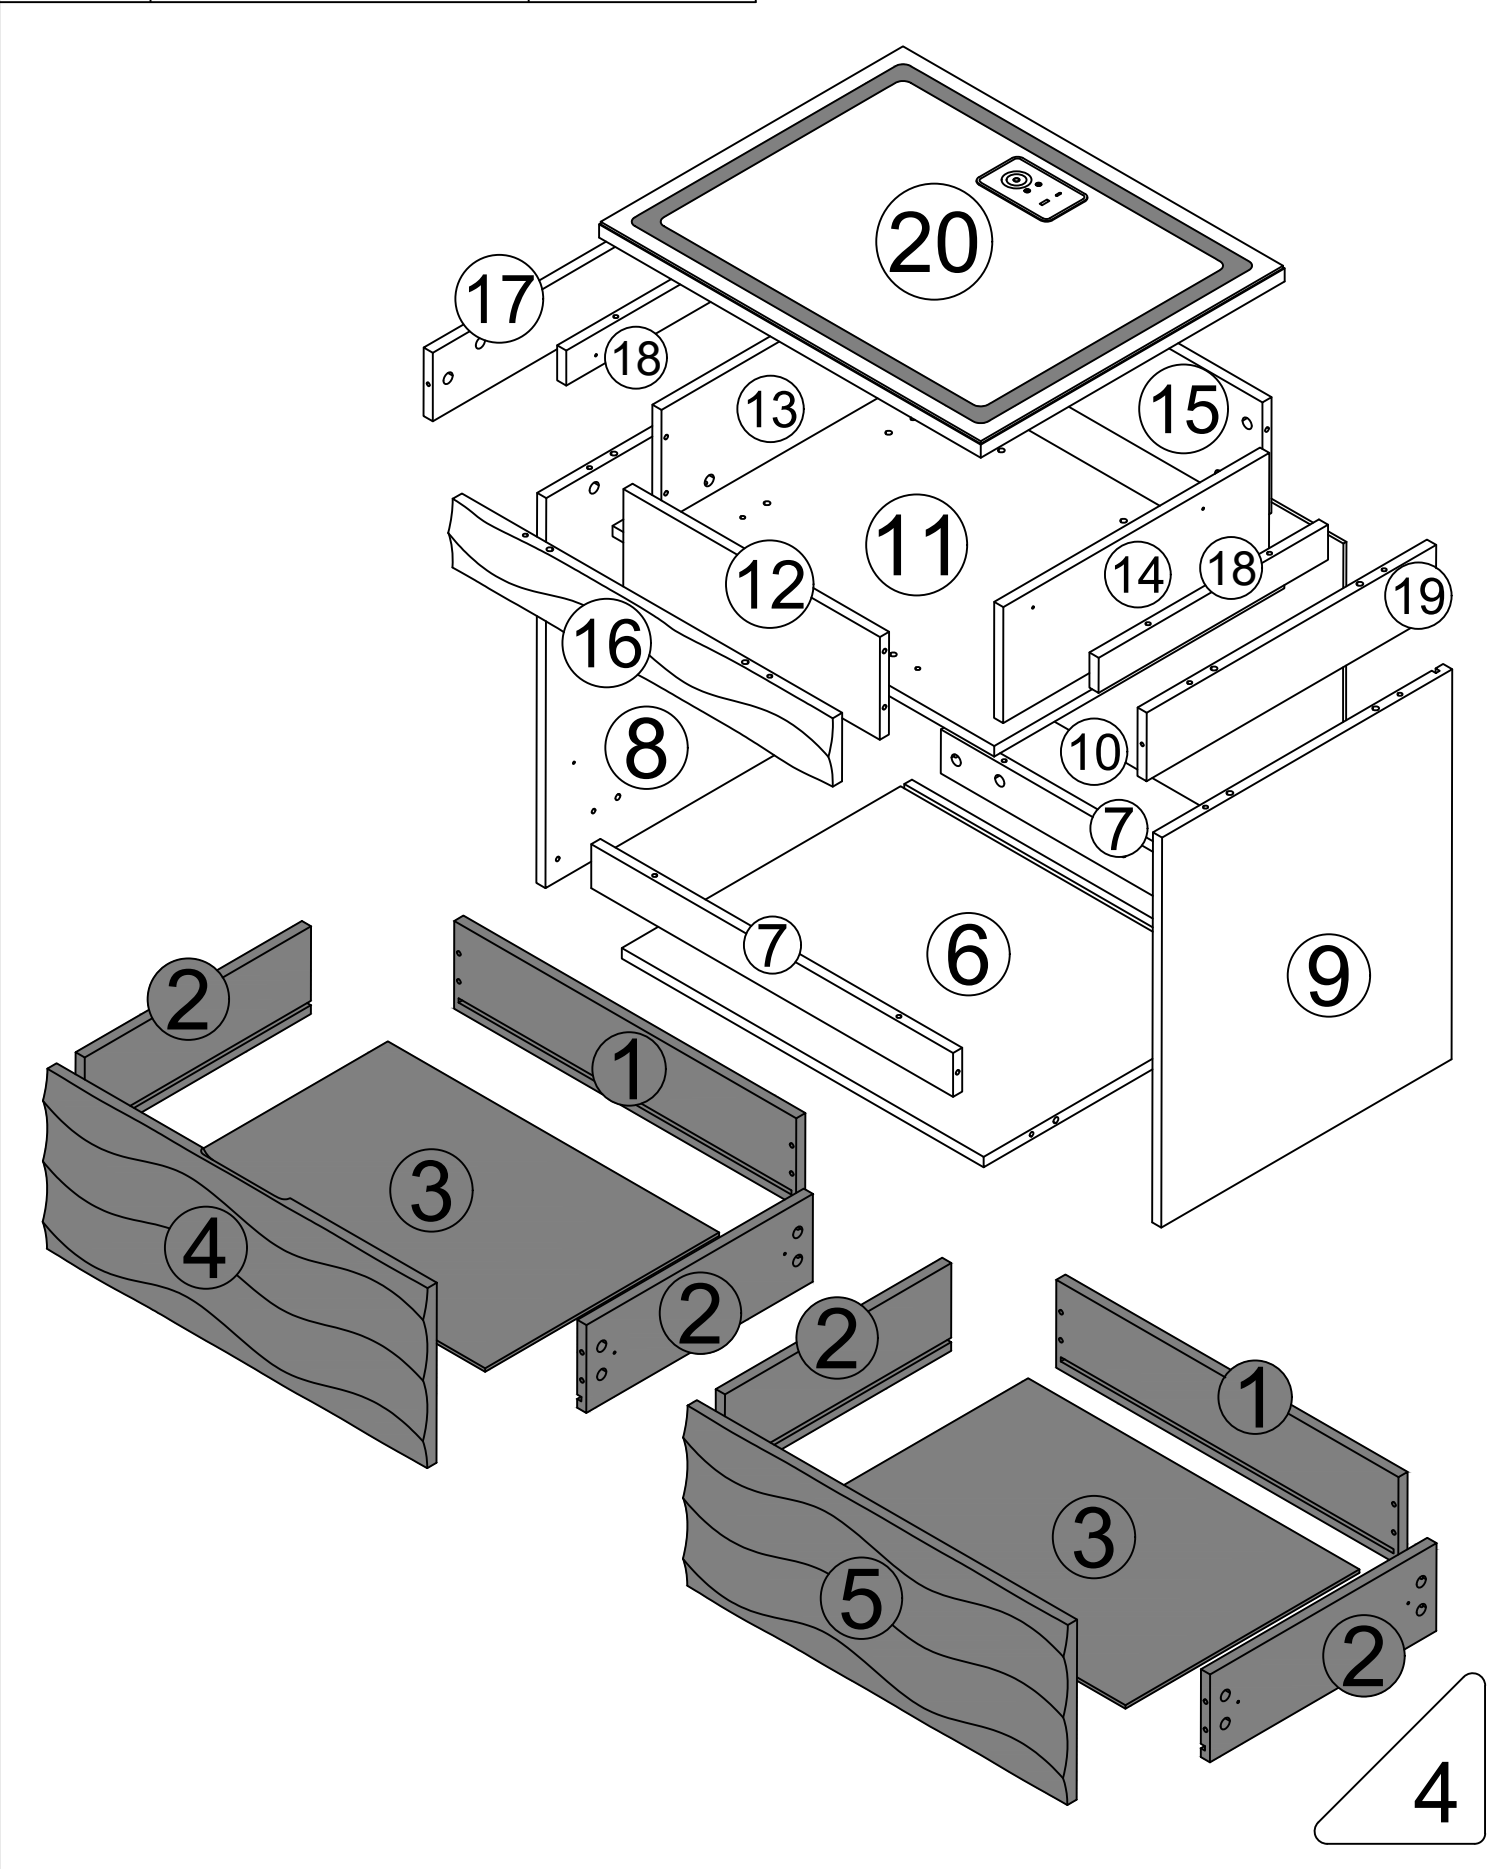


Use parts ① and ②



Step1

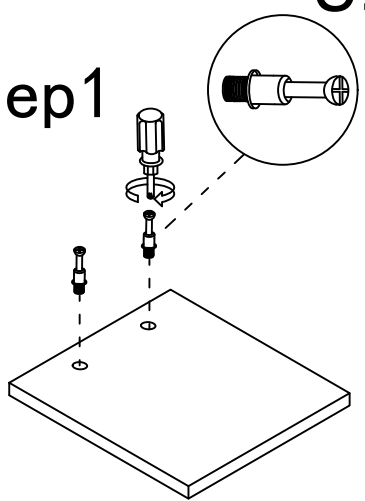


Step2

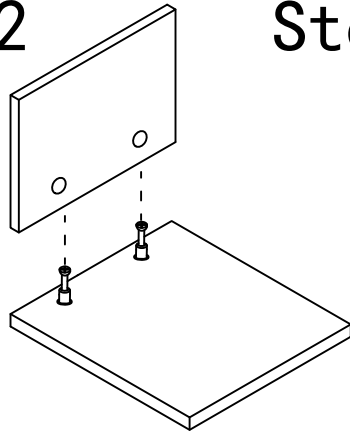

Step3


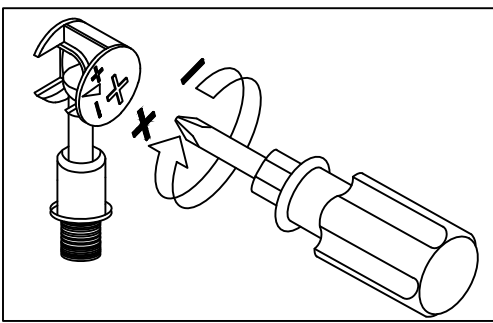
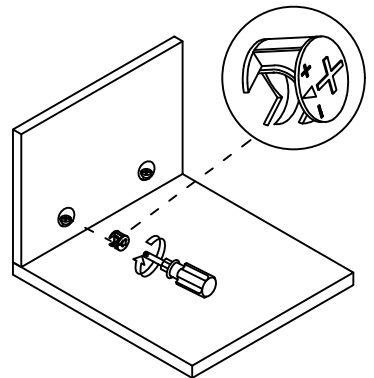


Use a screwdriver to lock in the direction of the "+" sign

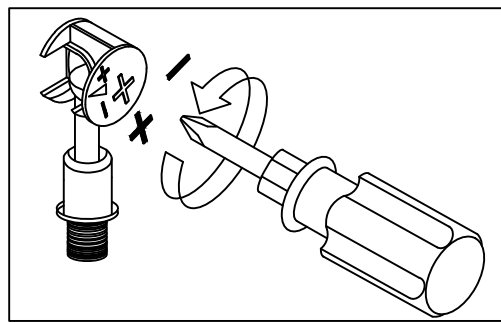


Disassemble along the direction of the "-" sign


Step 1

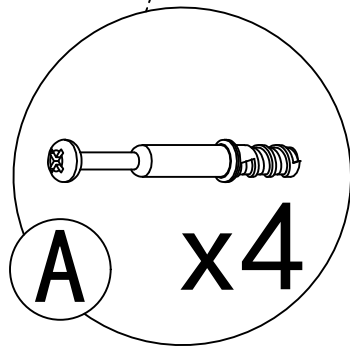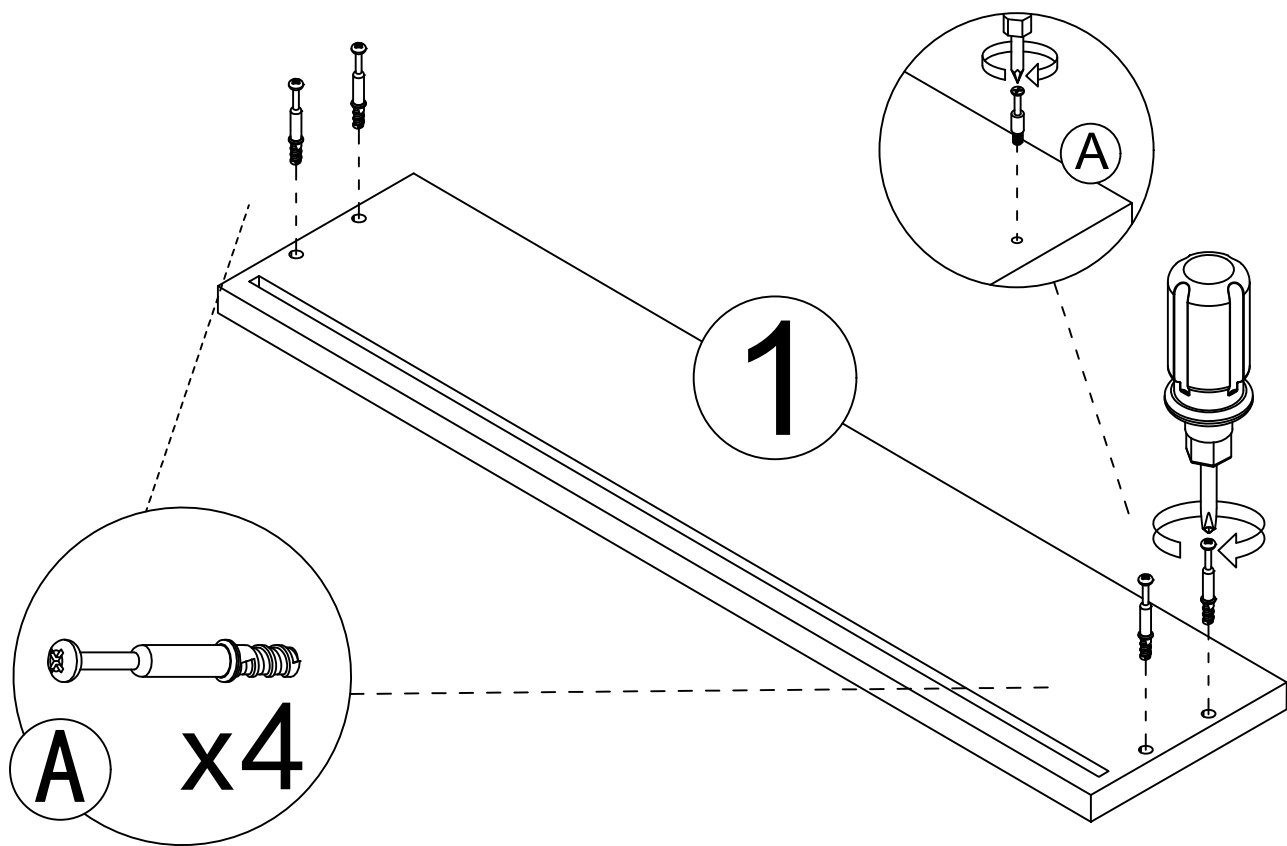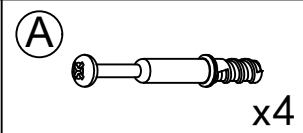



Step 2

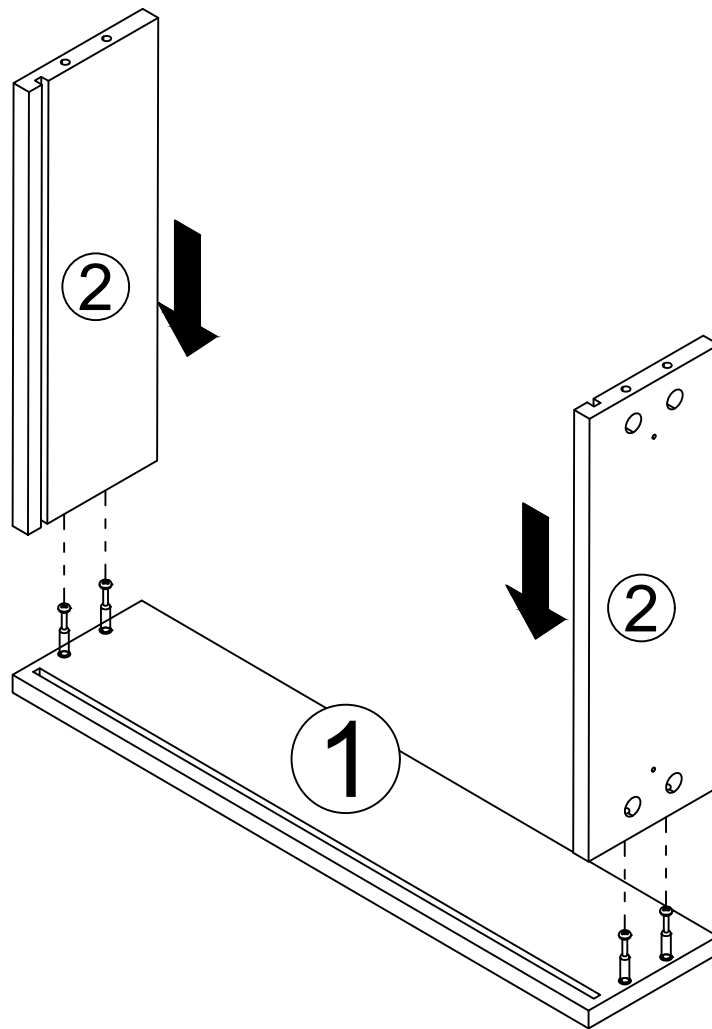


Step 3

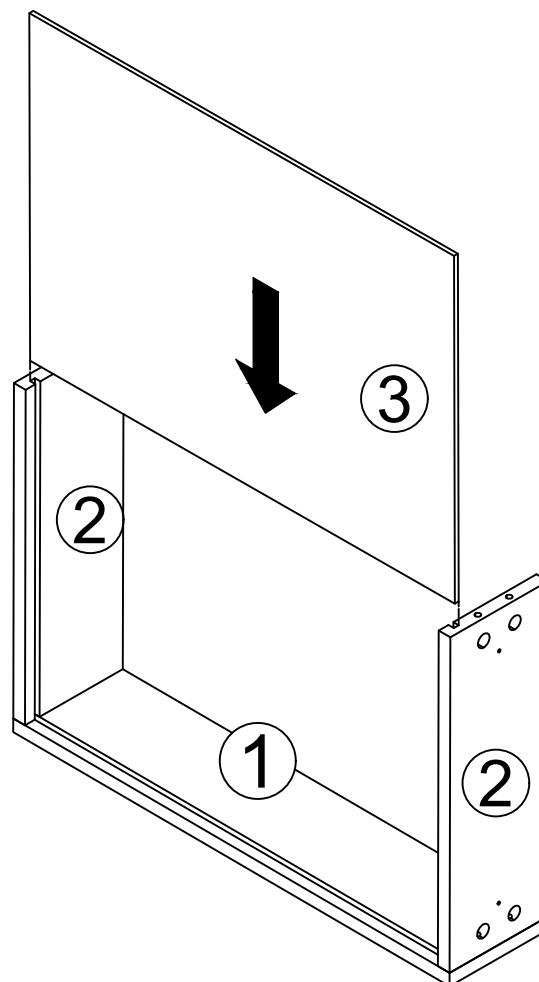


Step 4

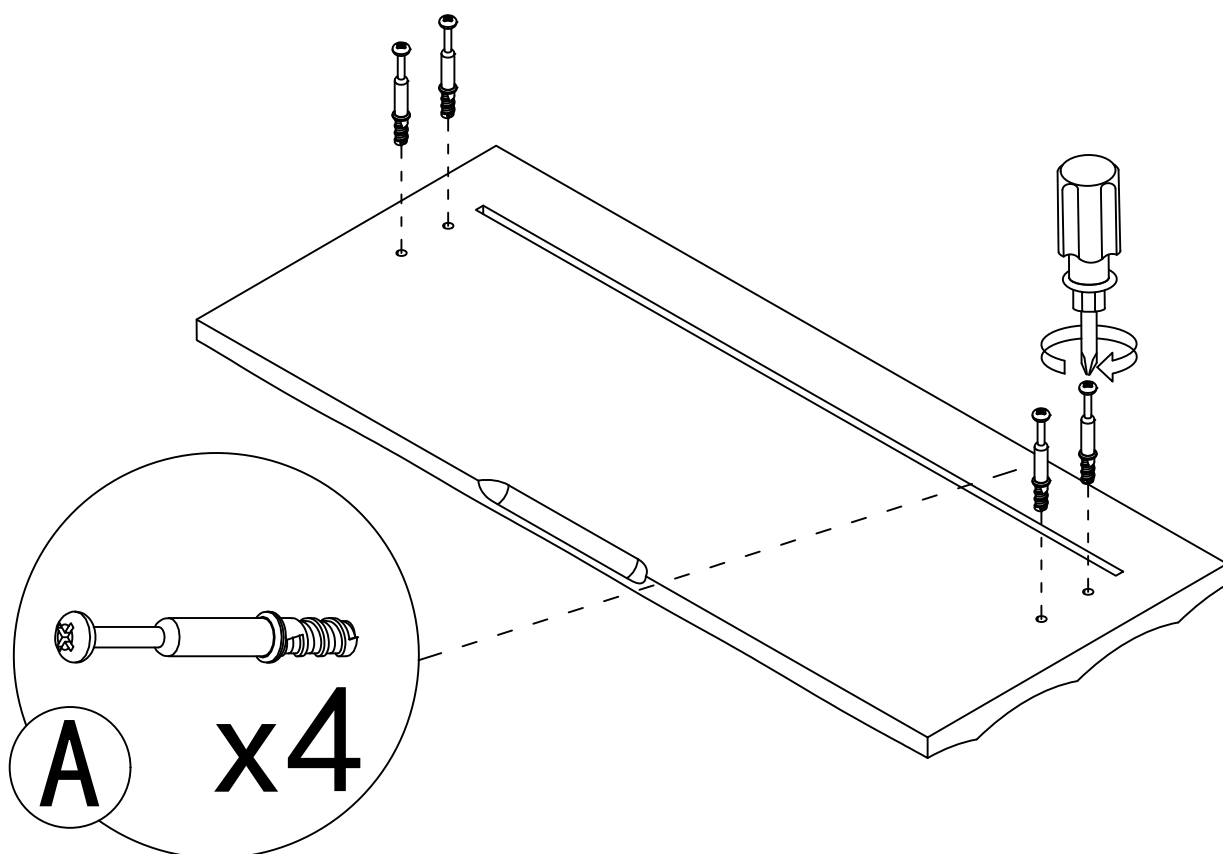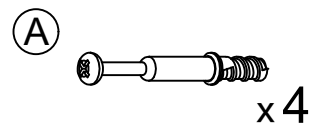

Step 5


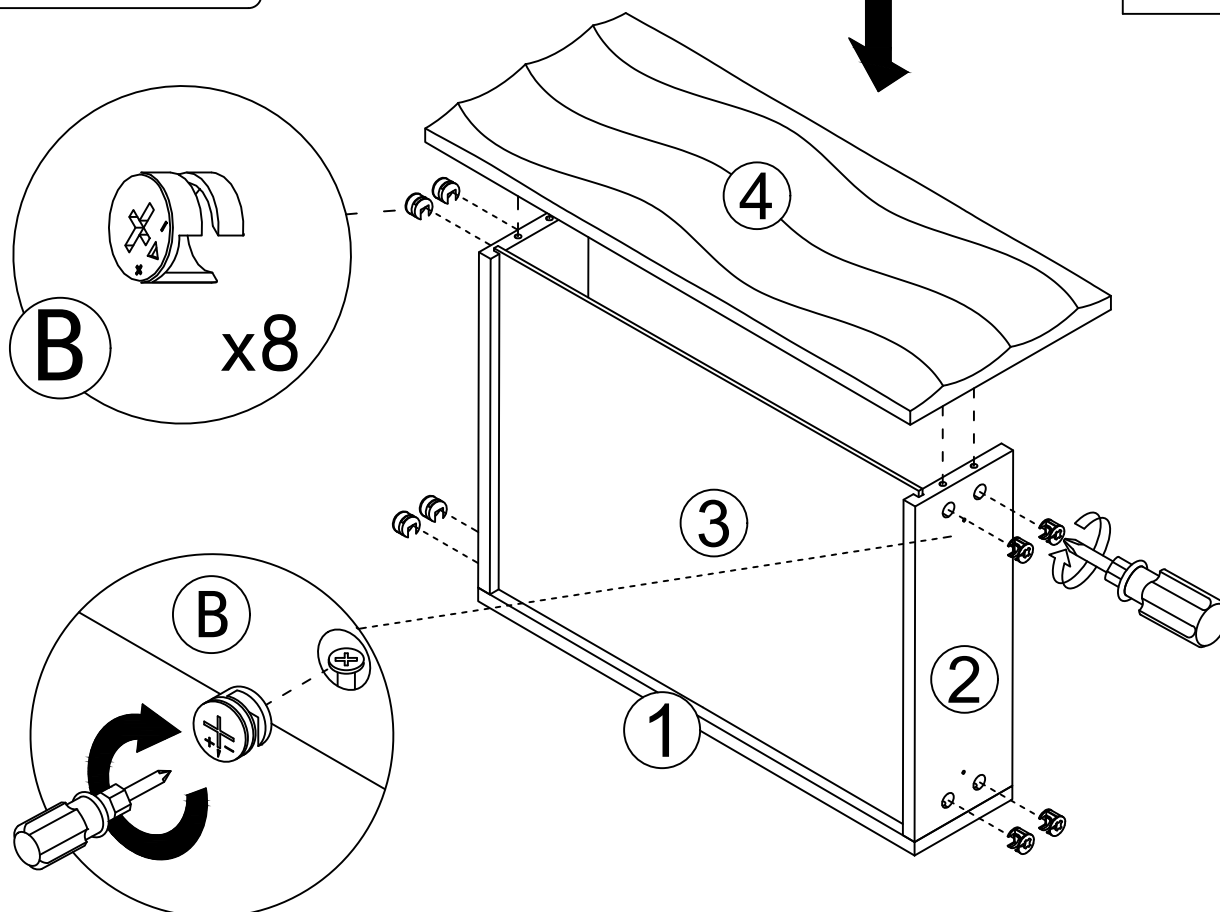


Drawer rail breakdown diagram

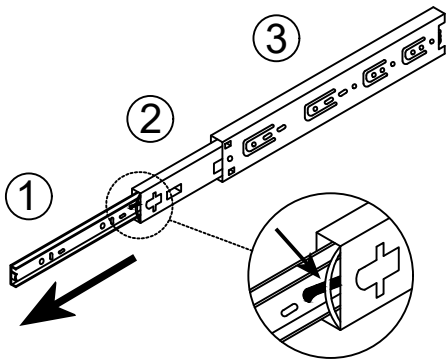


Step 1 : Pull the rails apart

Step 2 : Push the nylon buckle outward ①

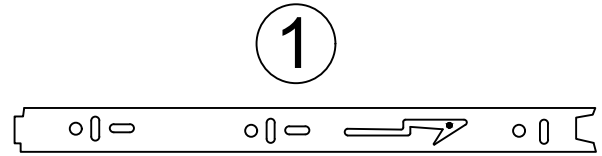

②

③



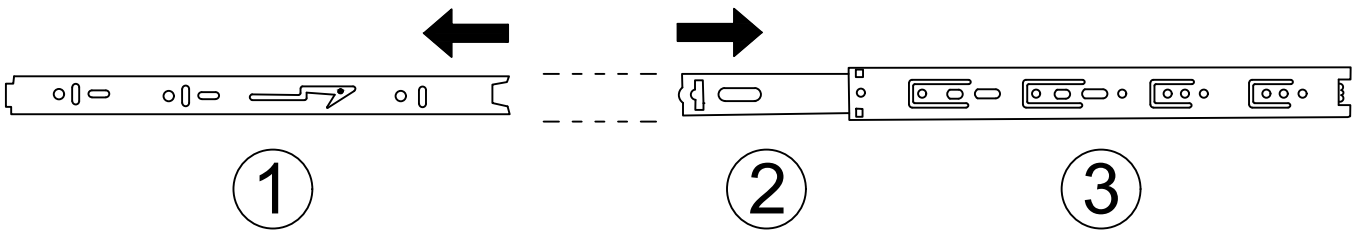


①

②


③

Step 6

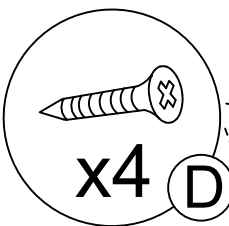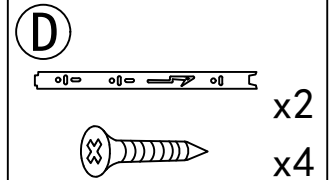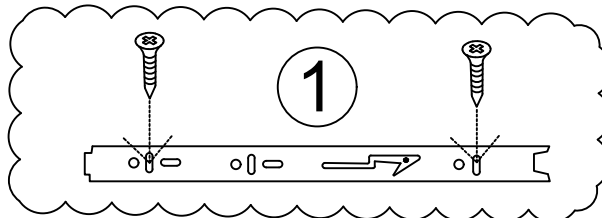



x4

D

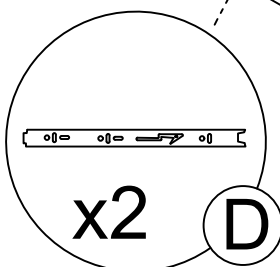


x2

D

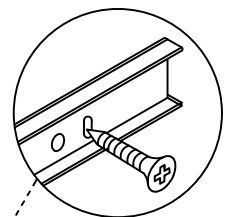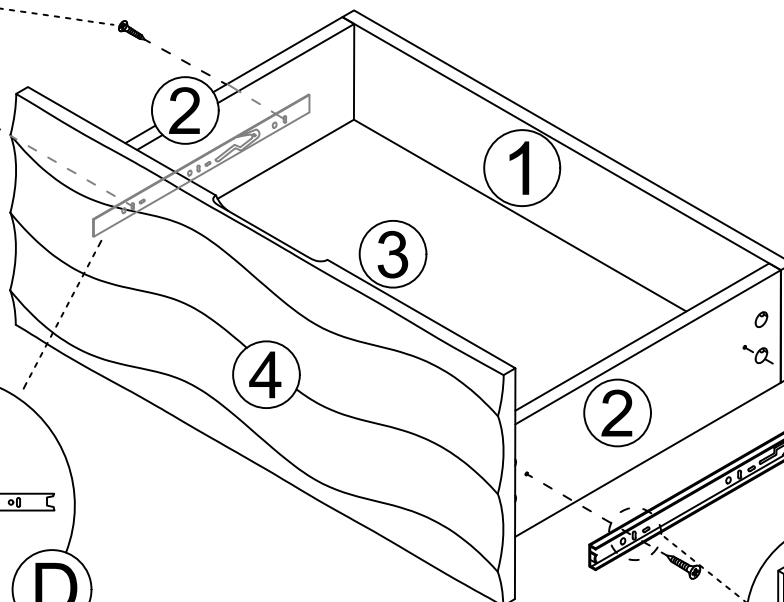

x4



D

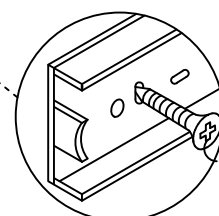



x4


D

Step 7

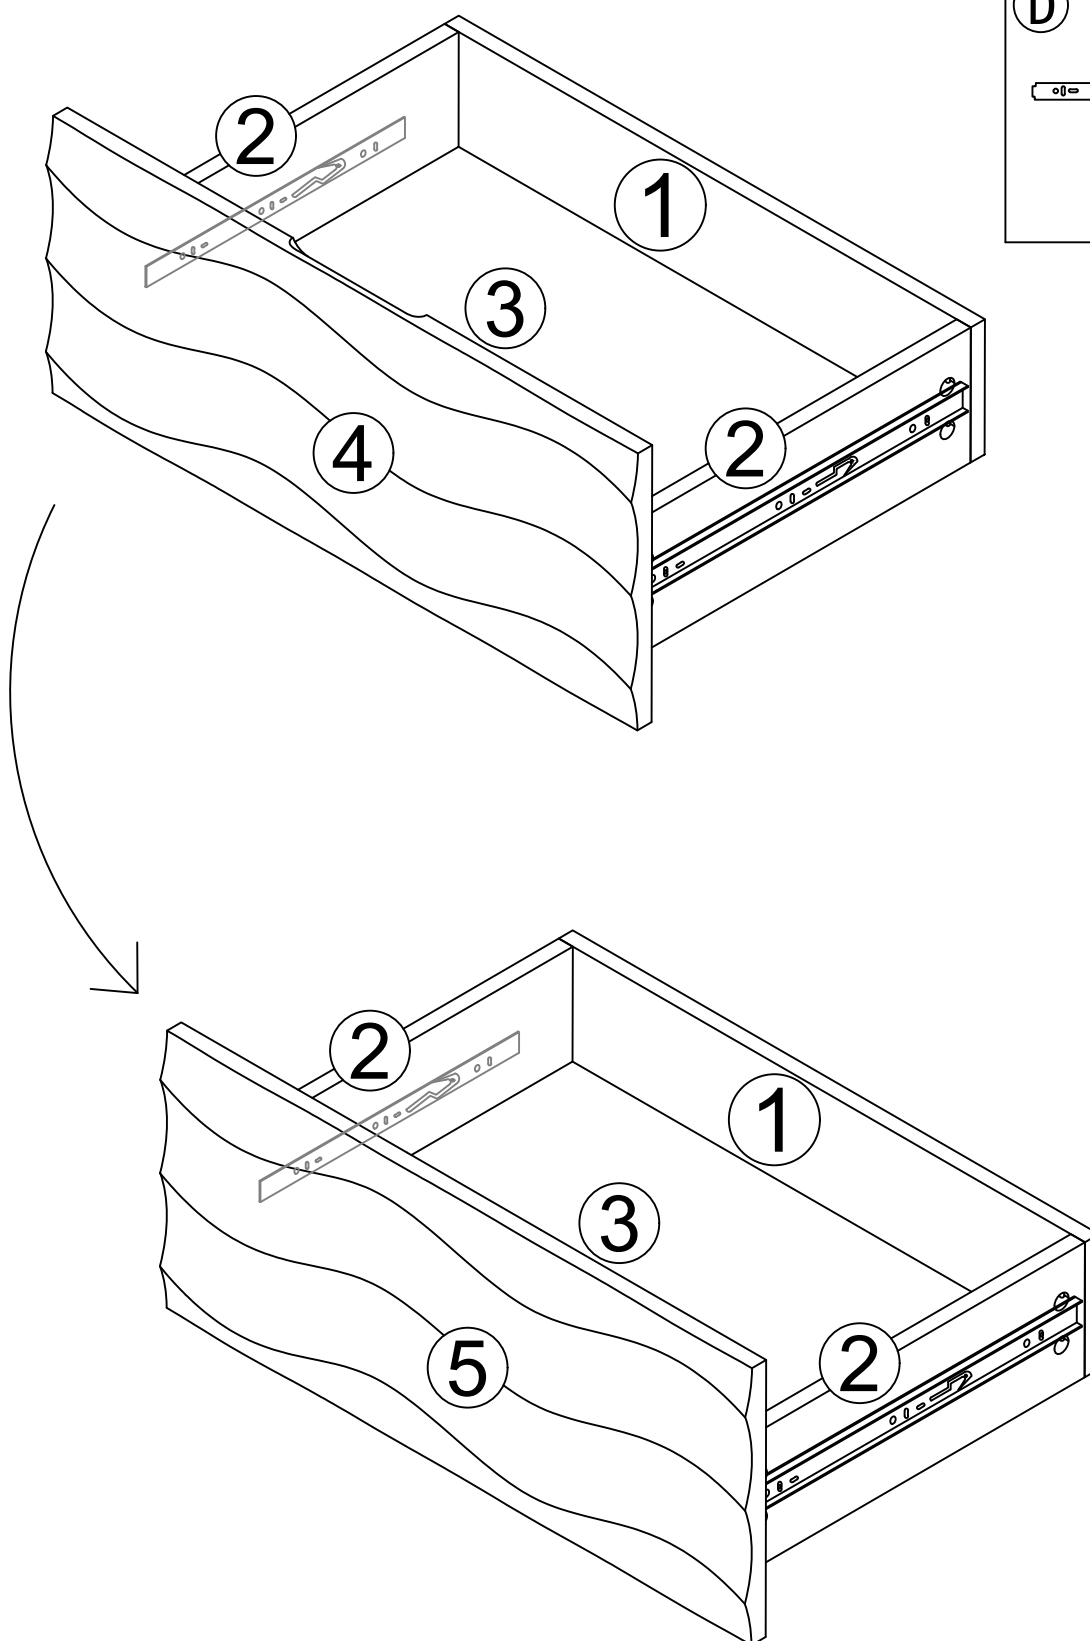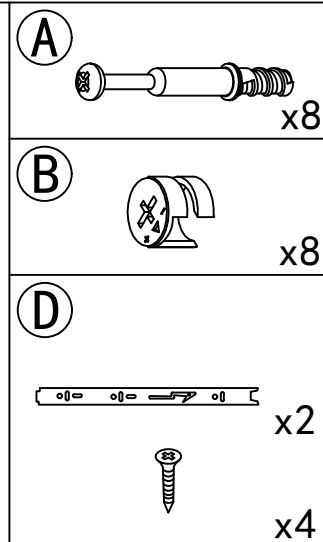

The installation method
for the other drawer is the same

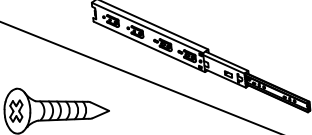
A		34pcs	C		16pcs
B		34pcs	D		6pcs 18pcs
G		8pcs			

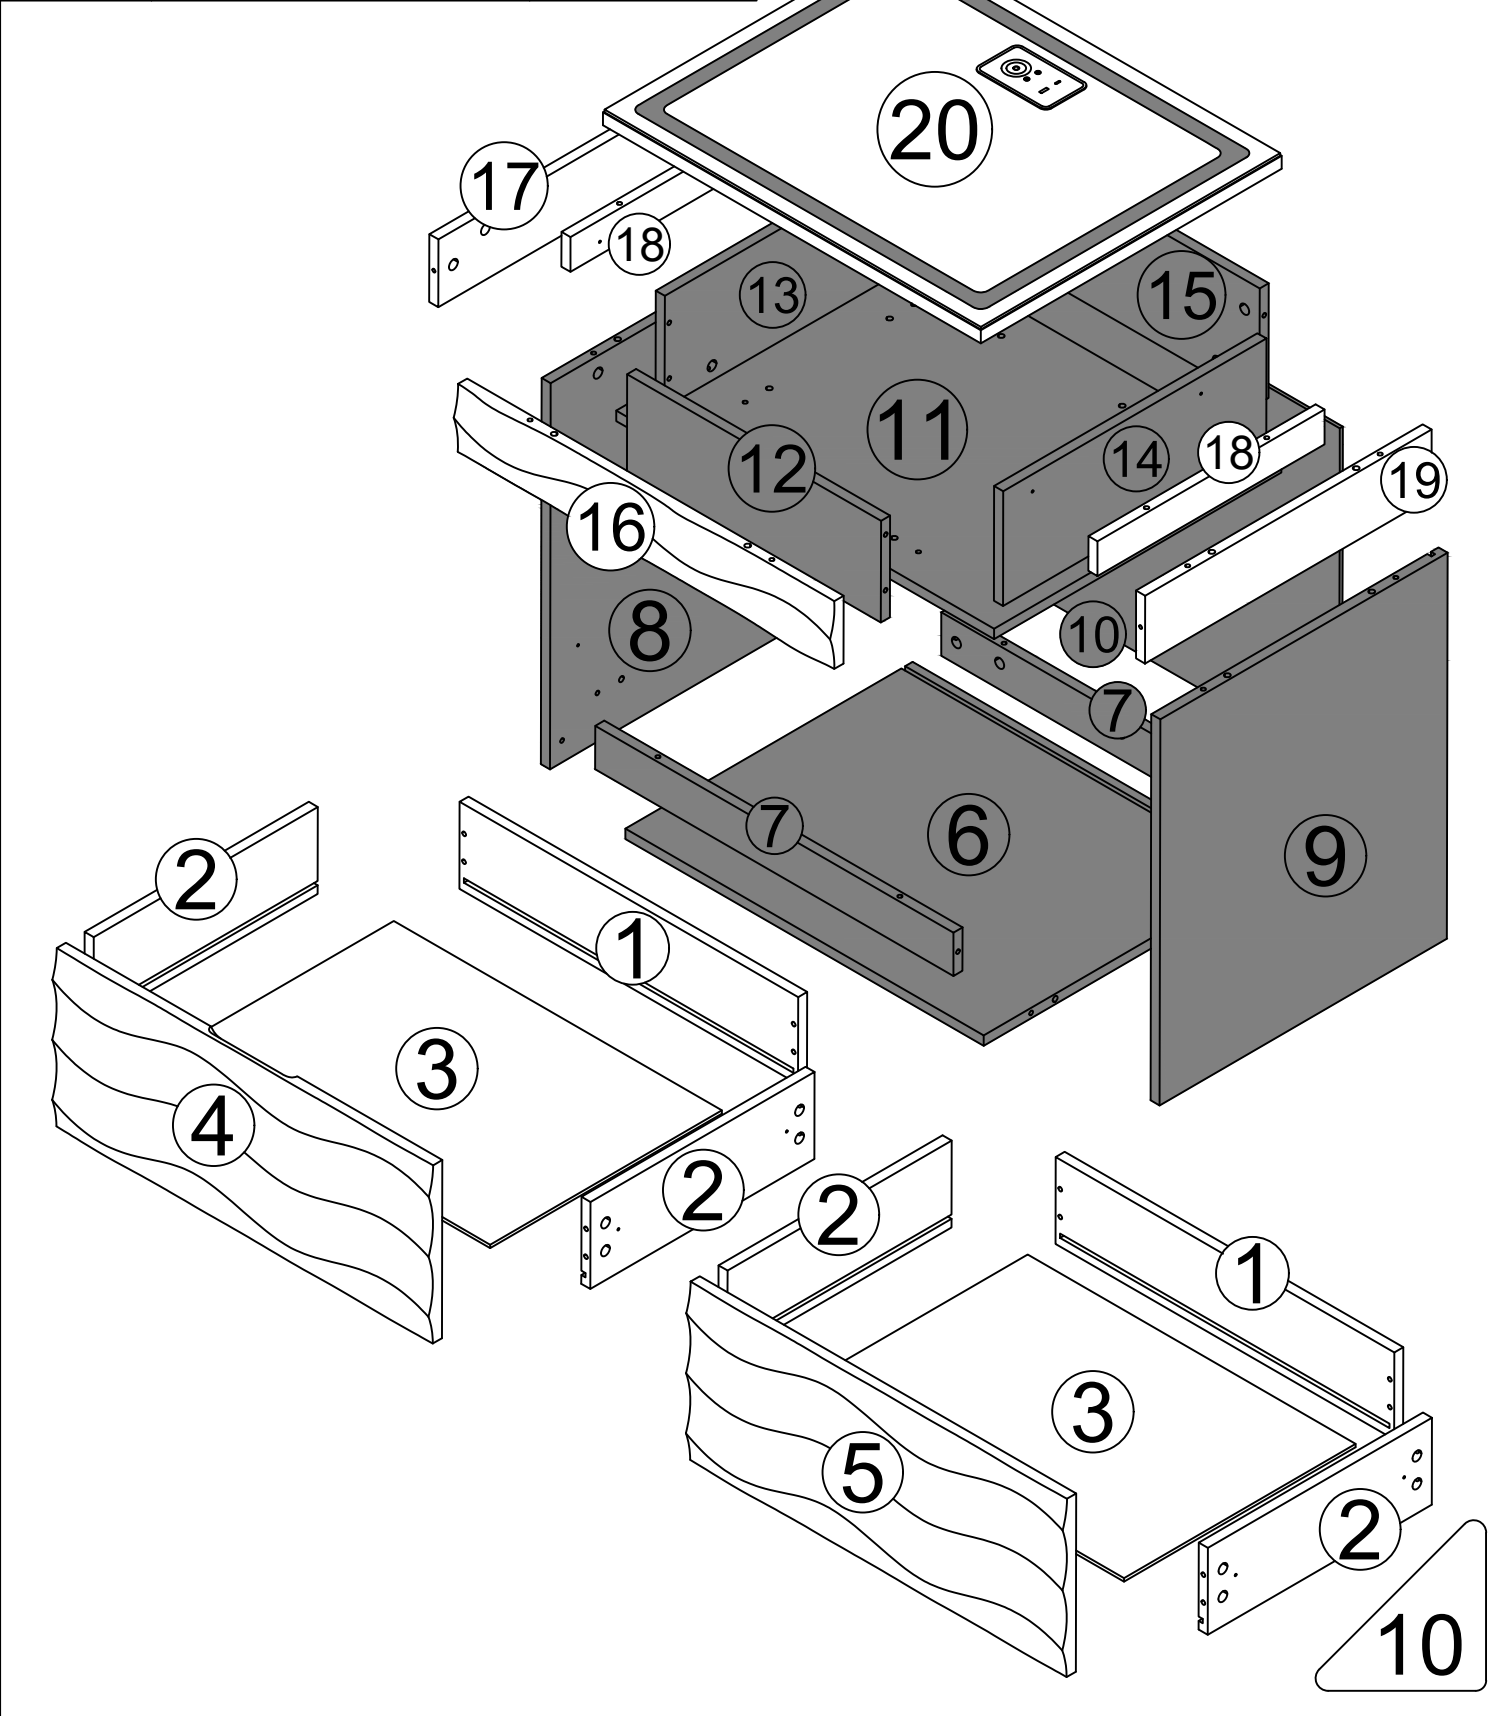

Step 8

(A)

x6

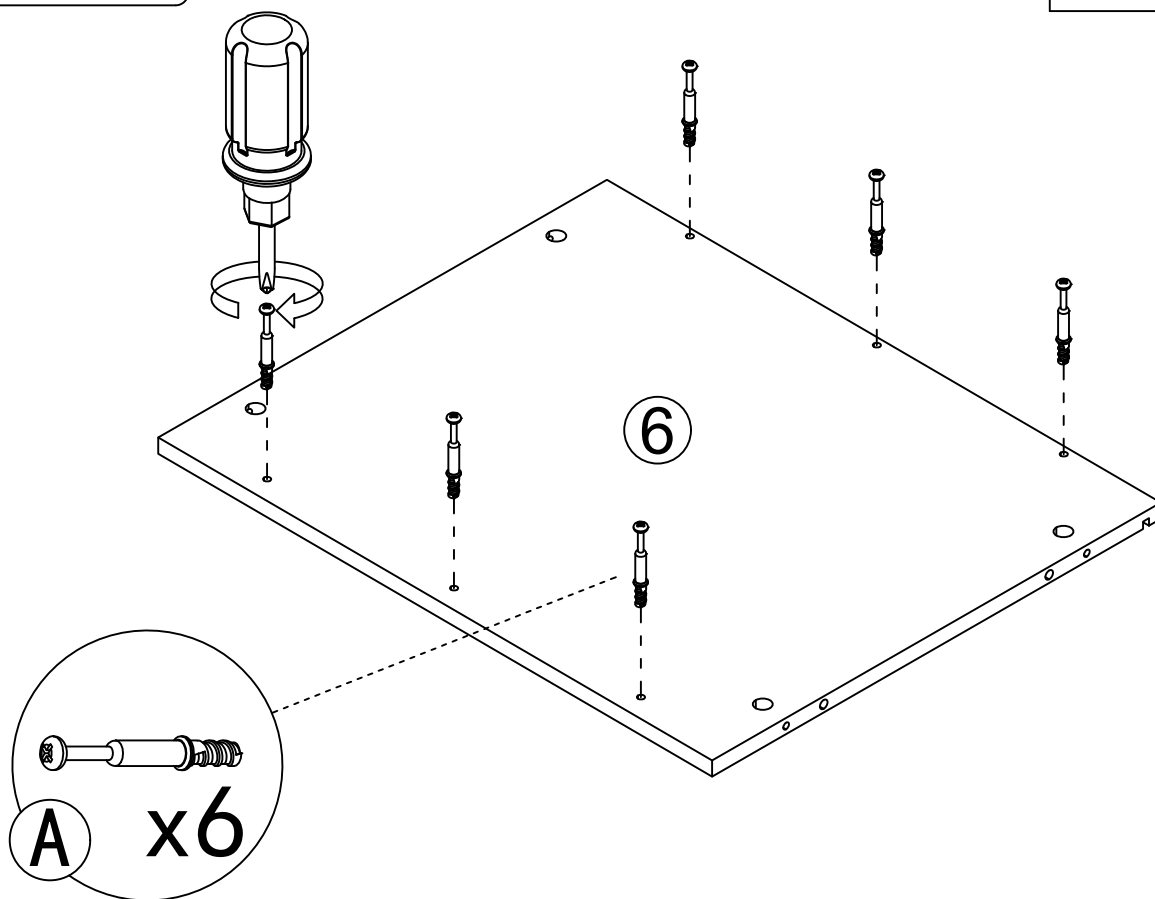


Step 9

(B)




x6

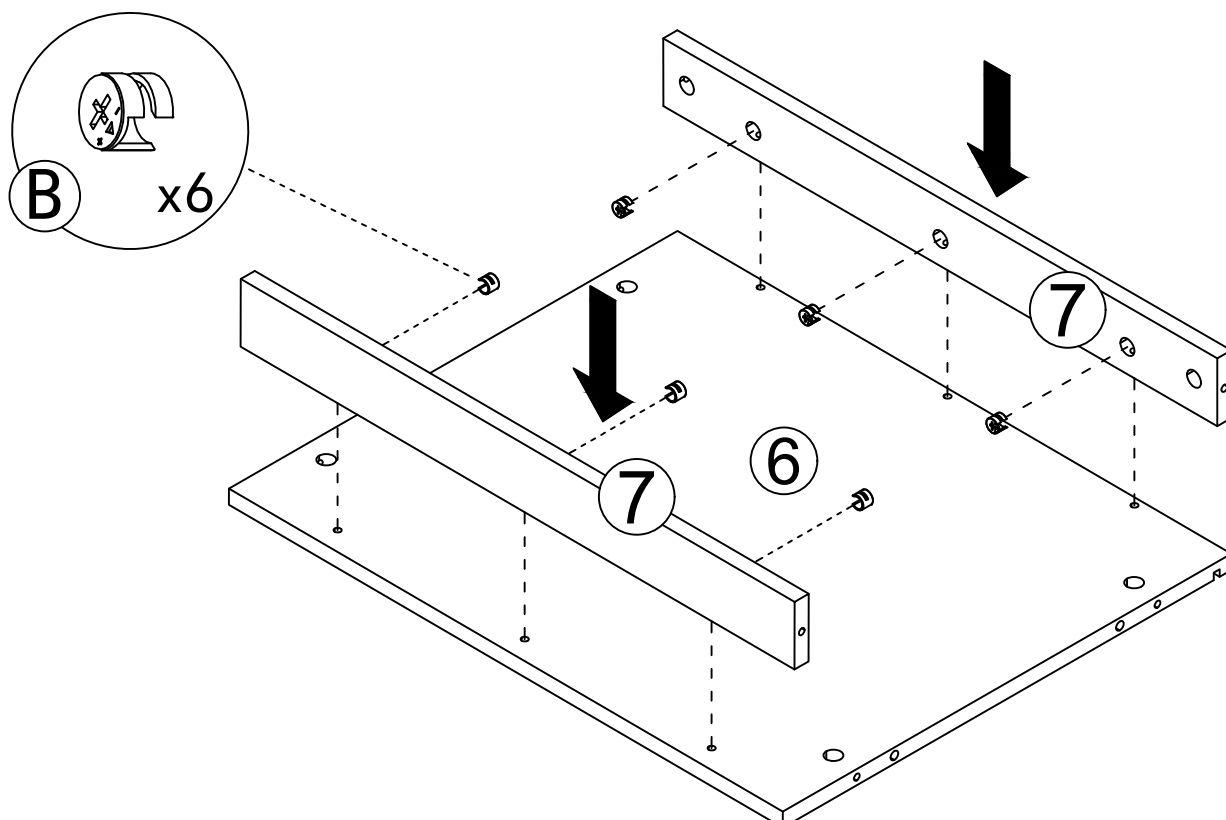


Step 10




Flip it over

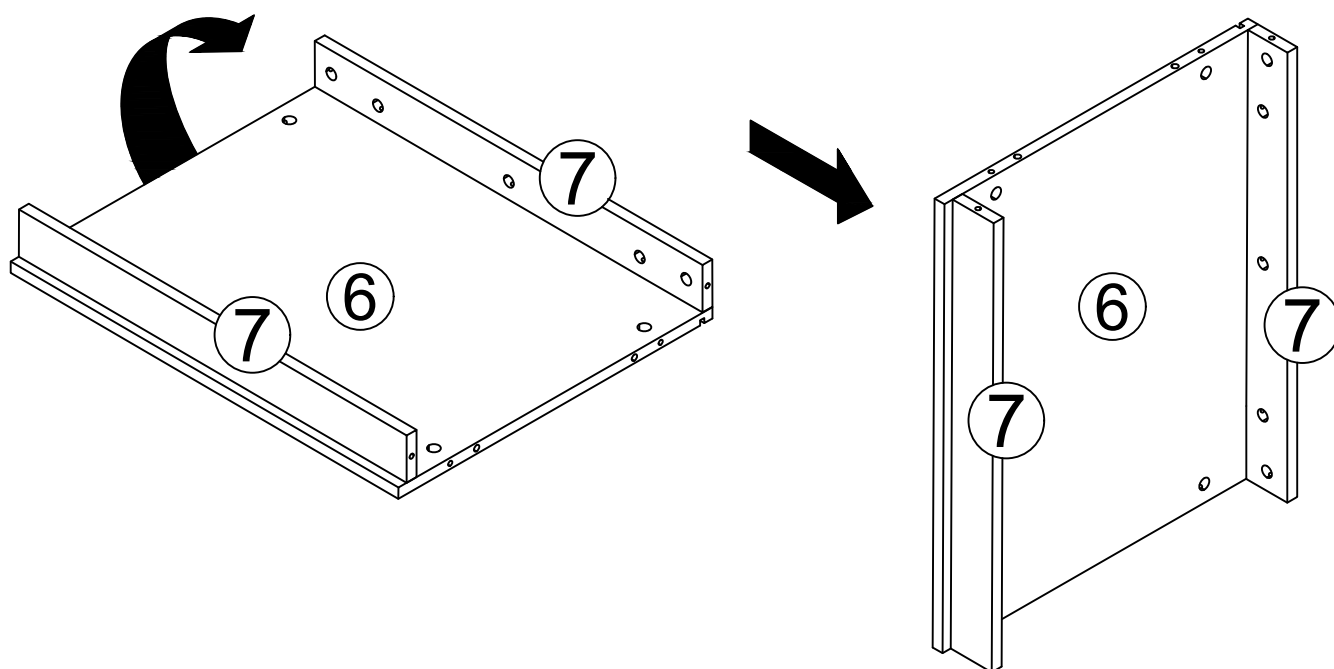


Step 11

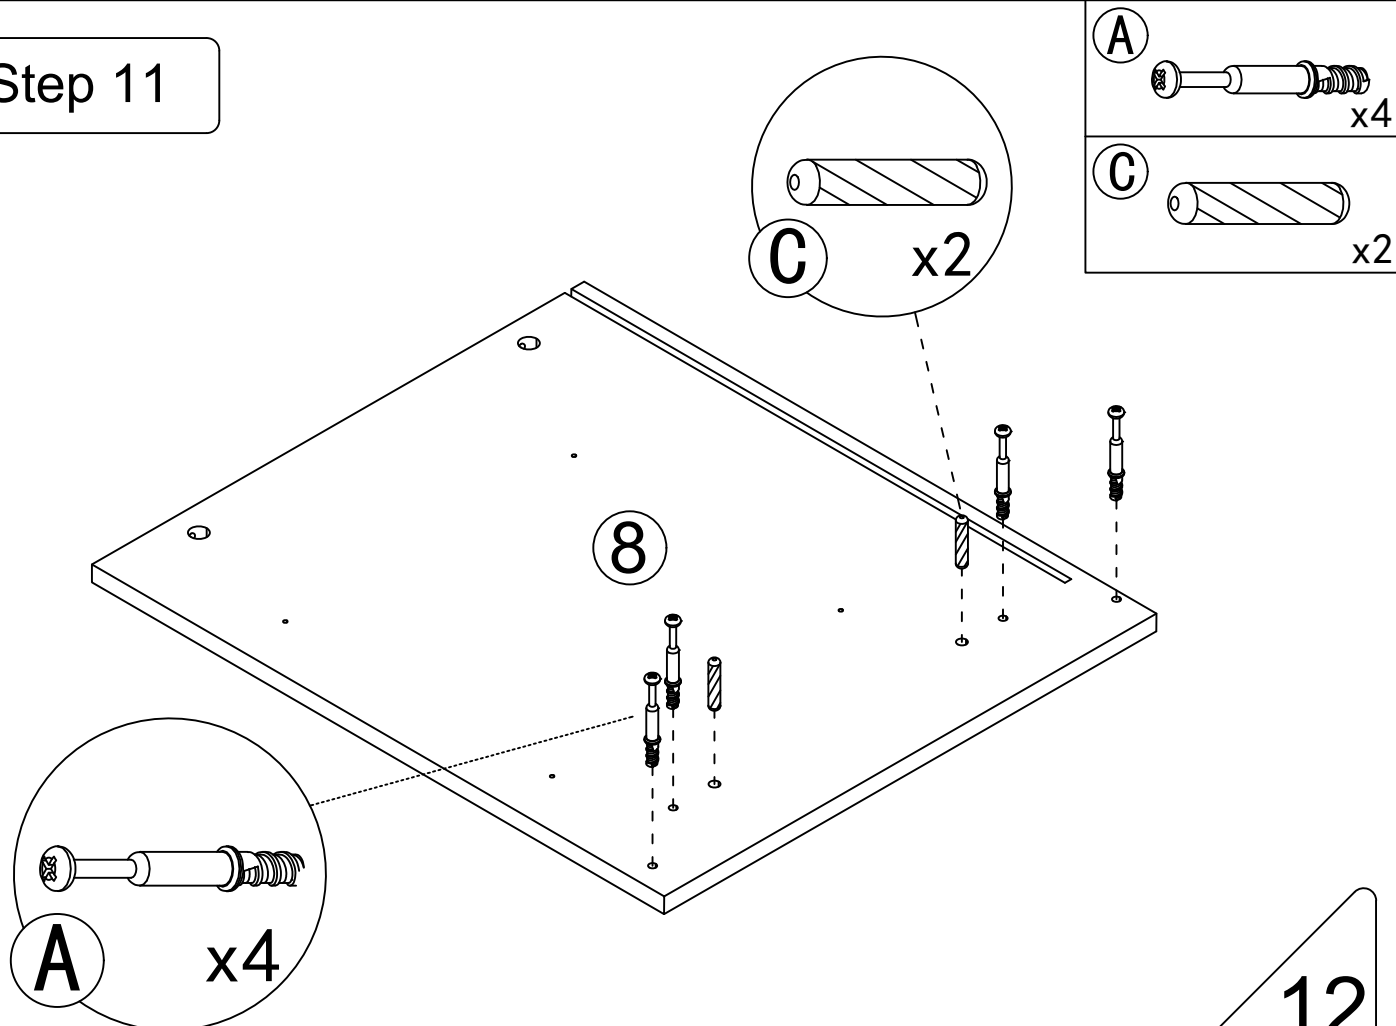

Step 12


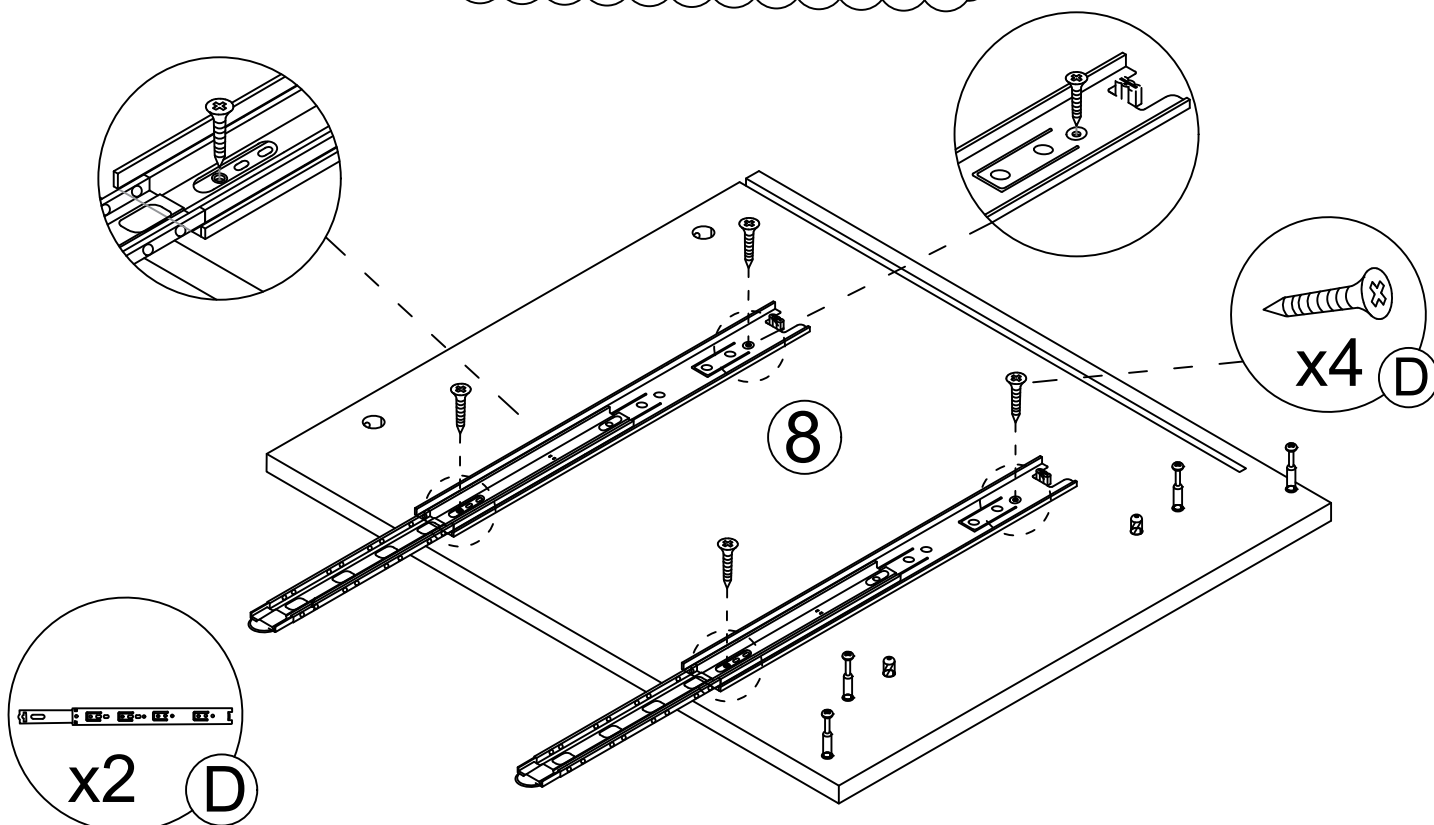
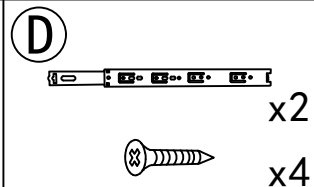
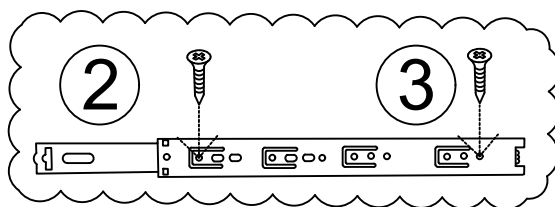


Step 13



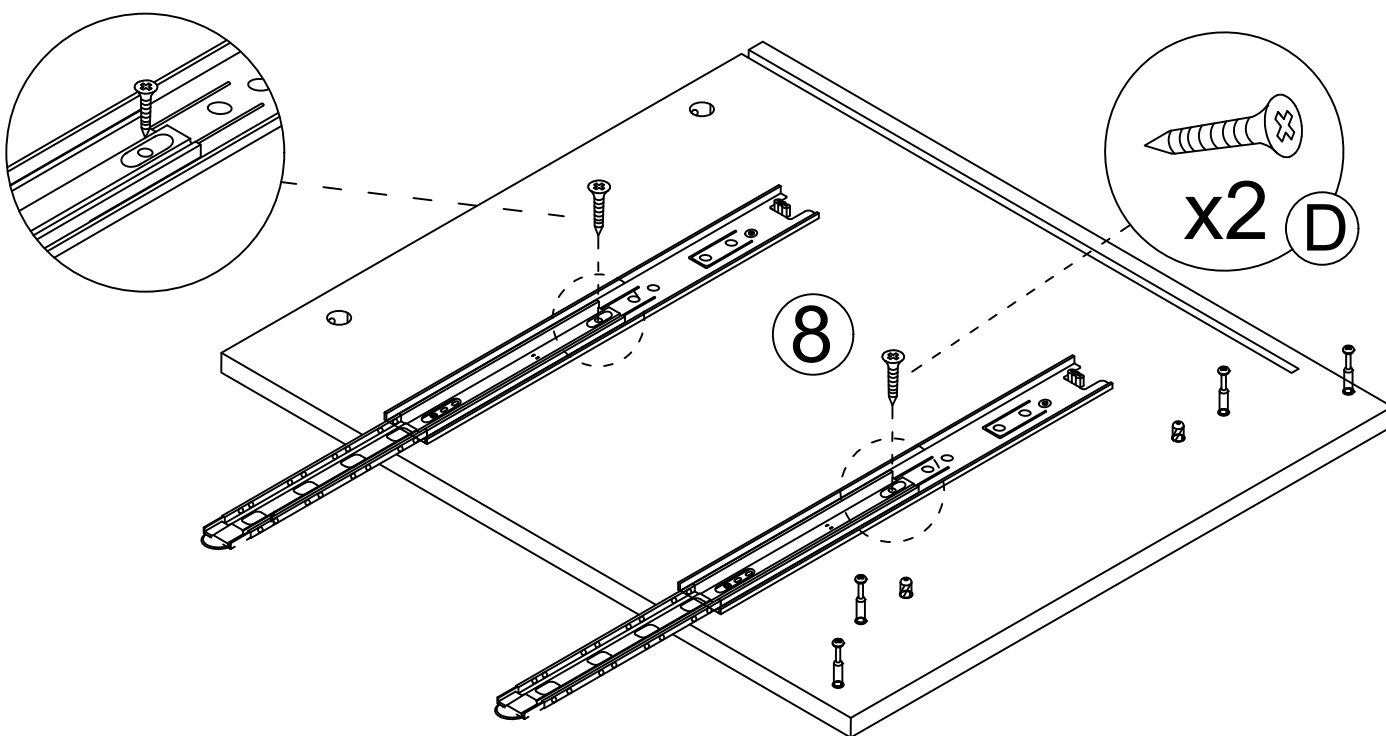


This hole is for strengthening fixed hole customers can choose to install according to their needs.




Step 14

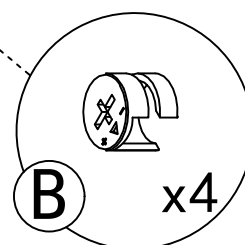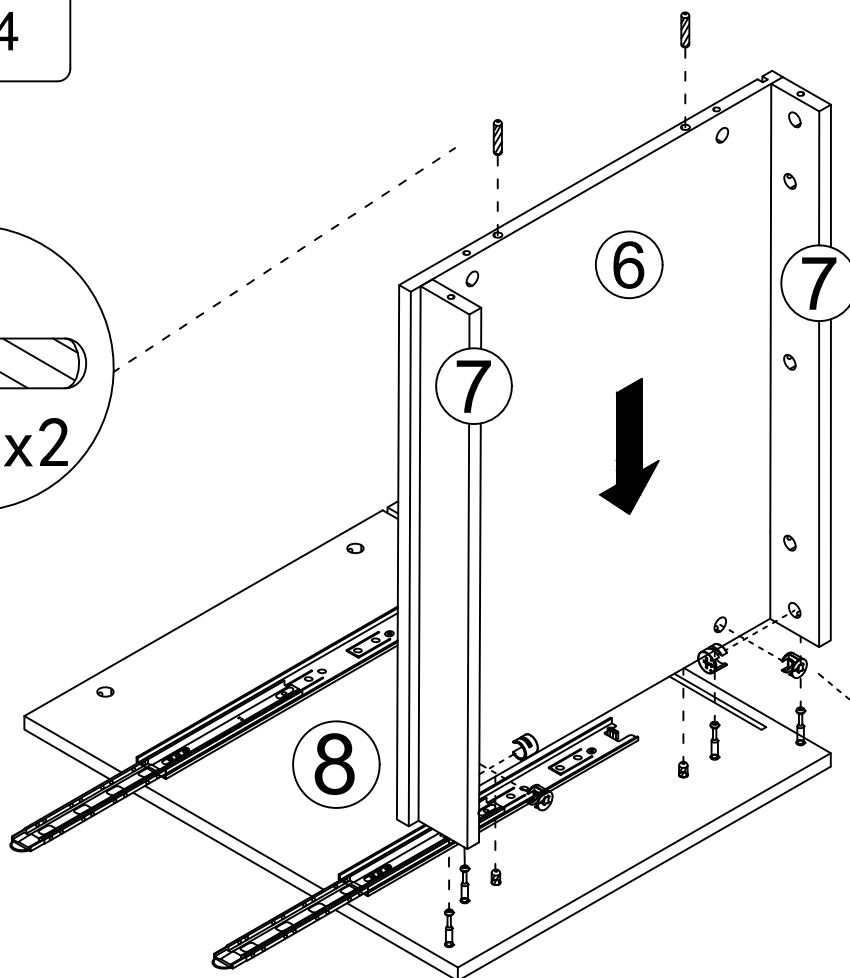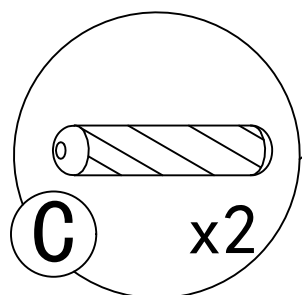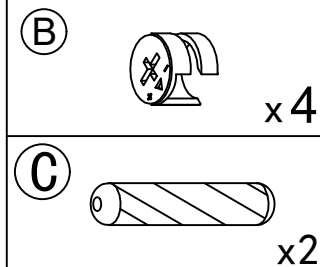



Step 15

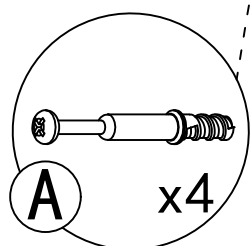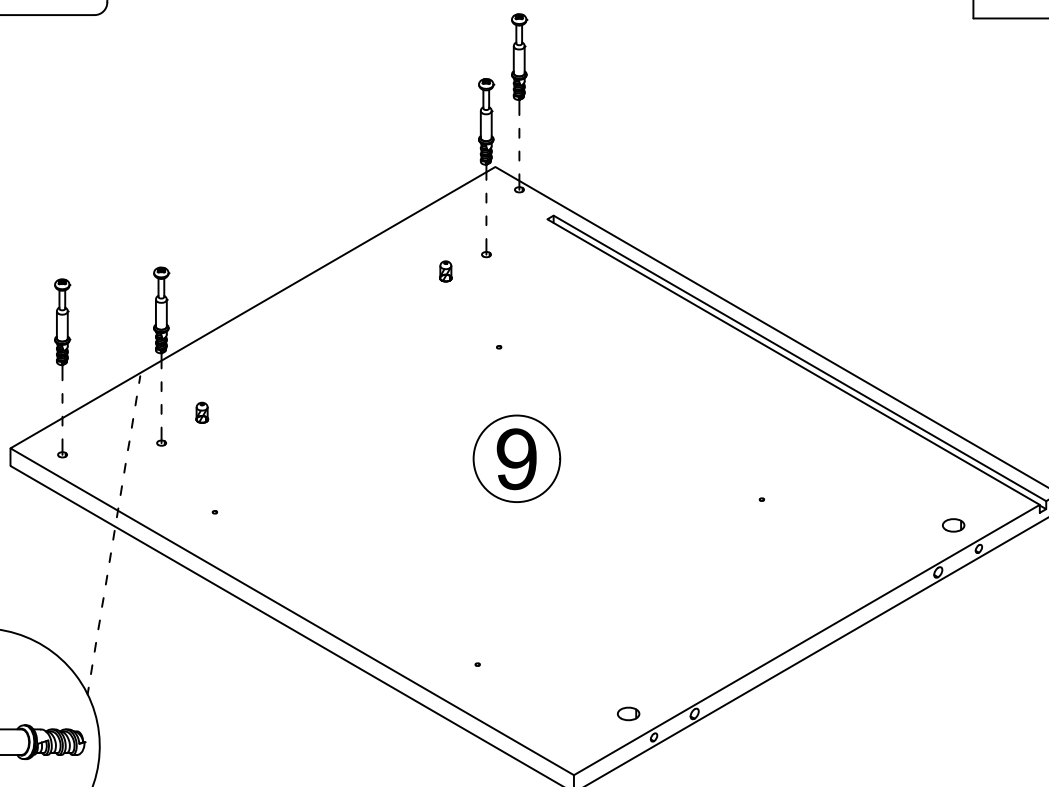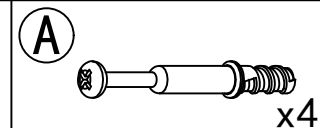

Step 16

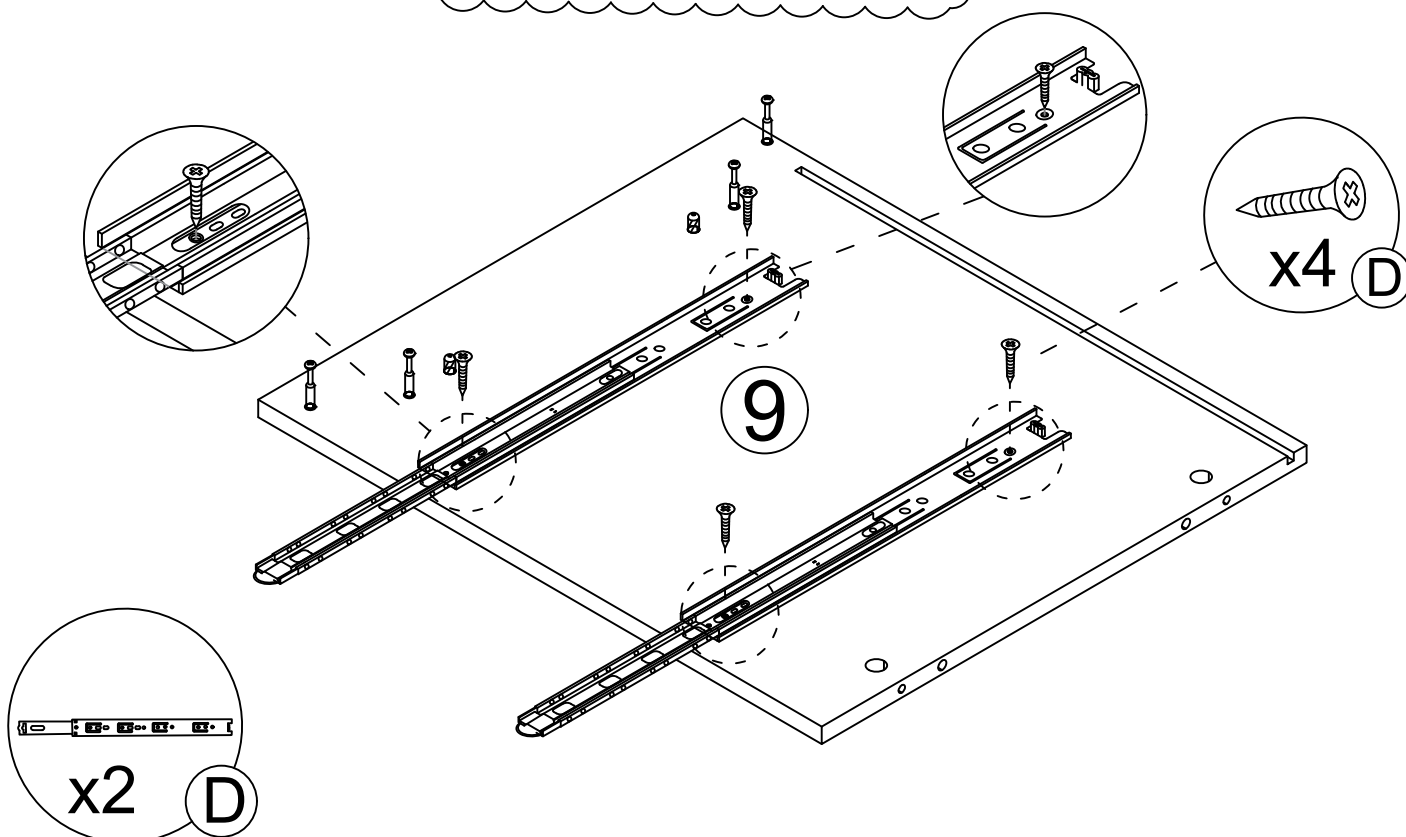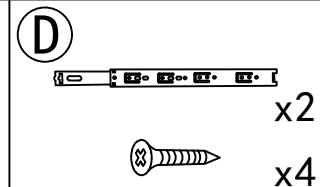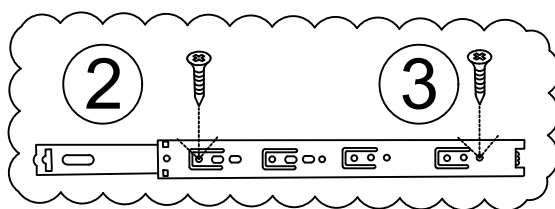

Step 17

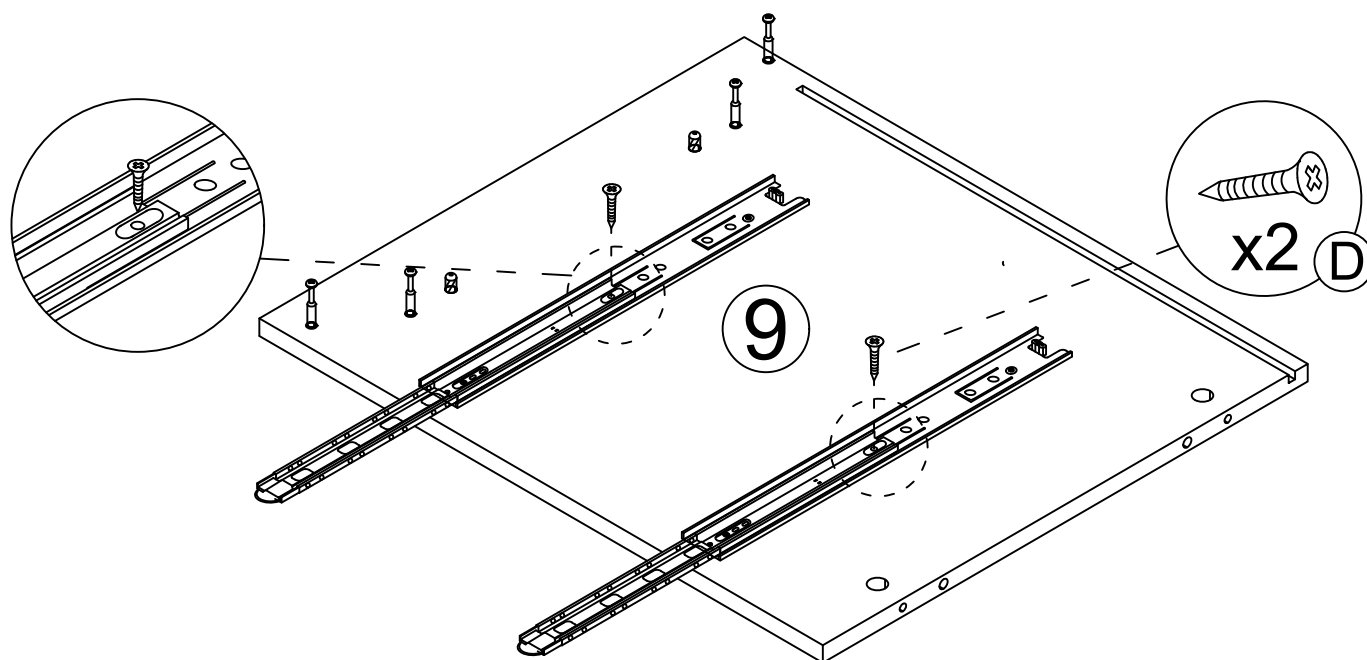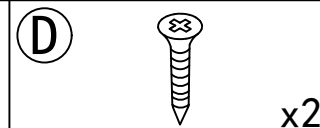



This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 18


(B)





x4

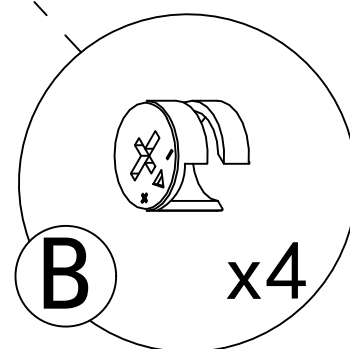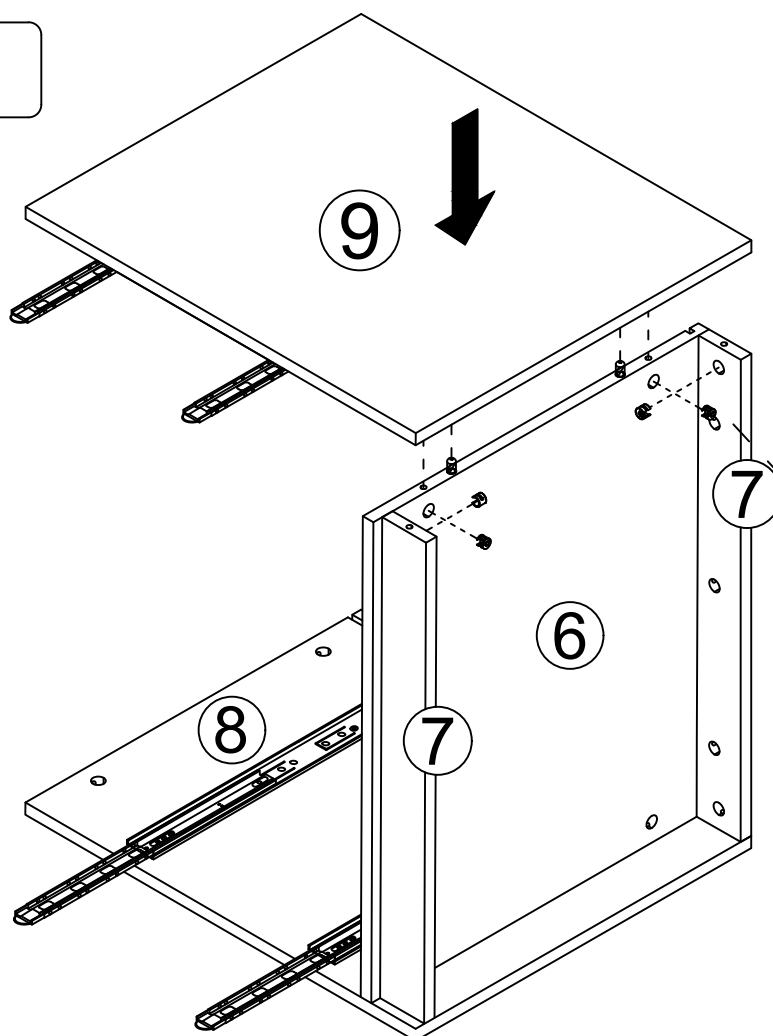



Step 19

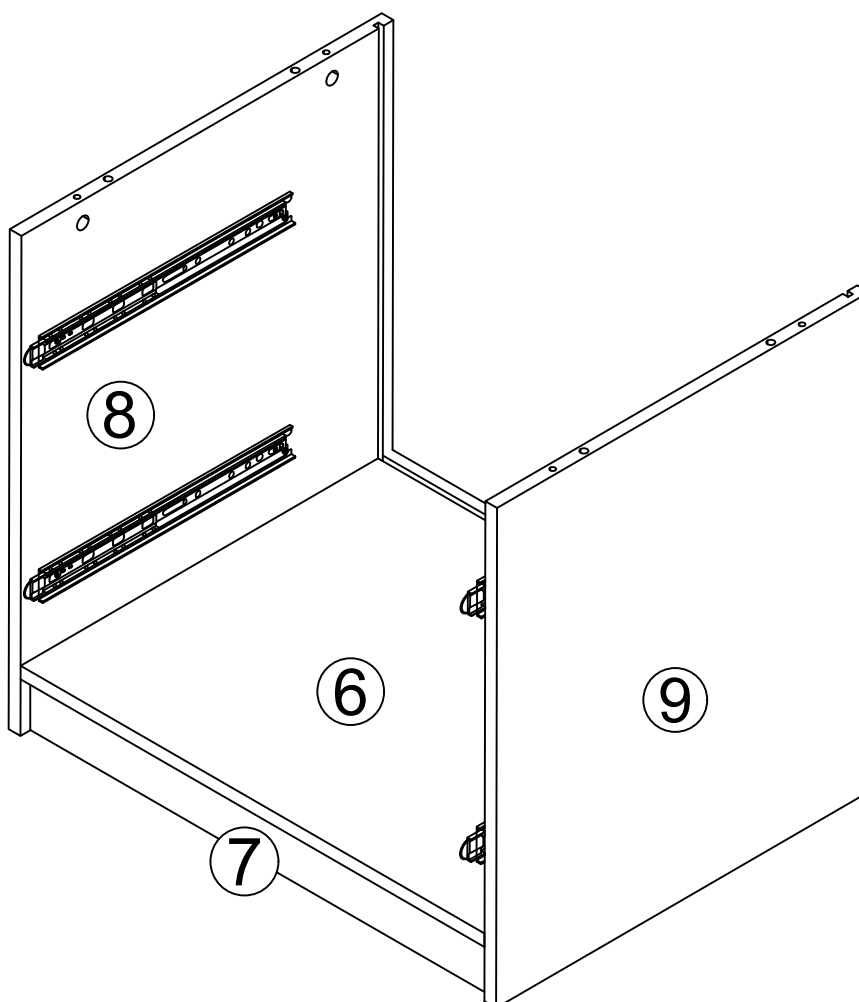

Step 20

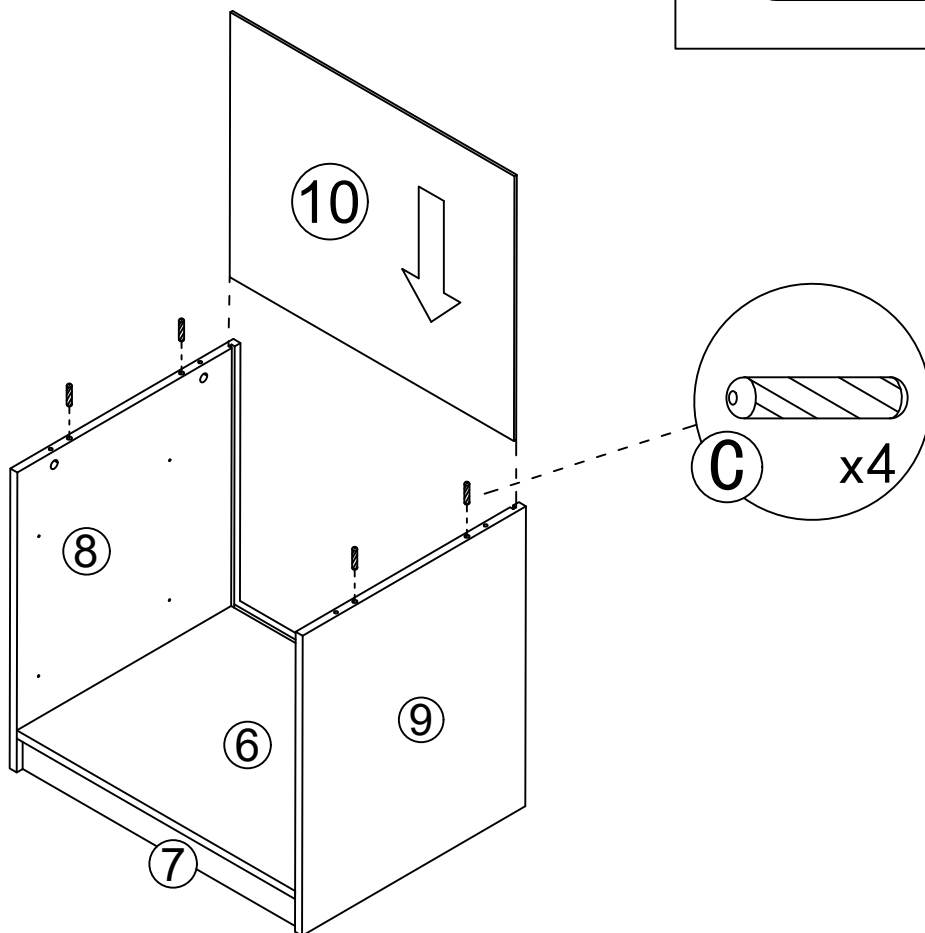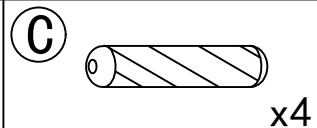


Step 21

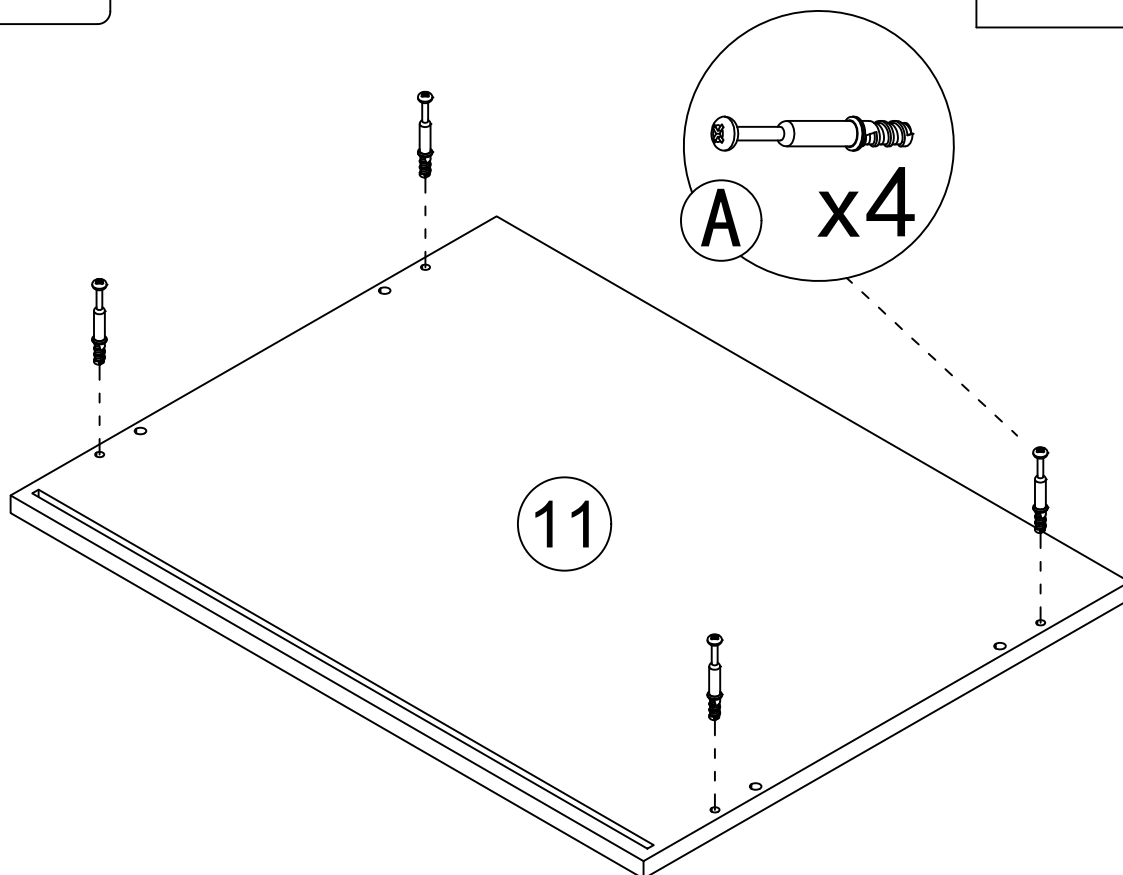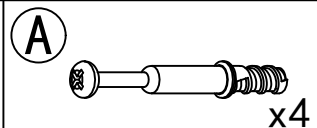

Step 22

Flip it over


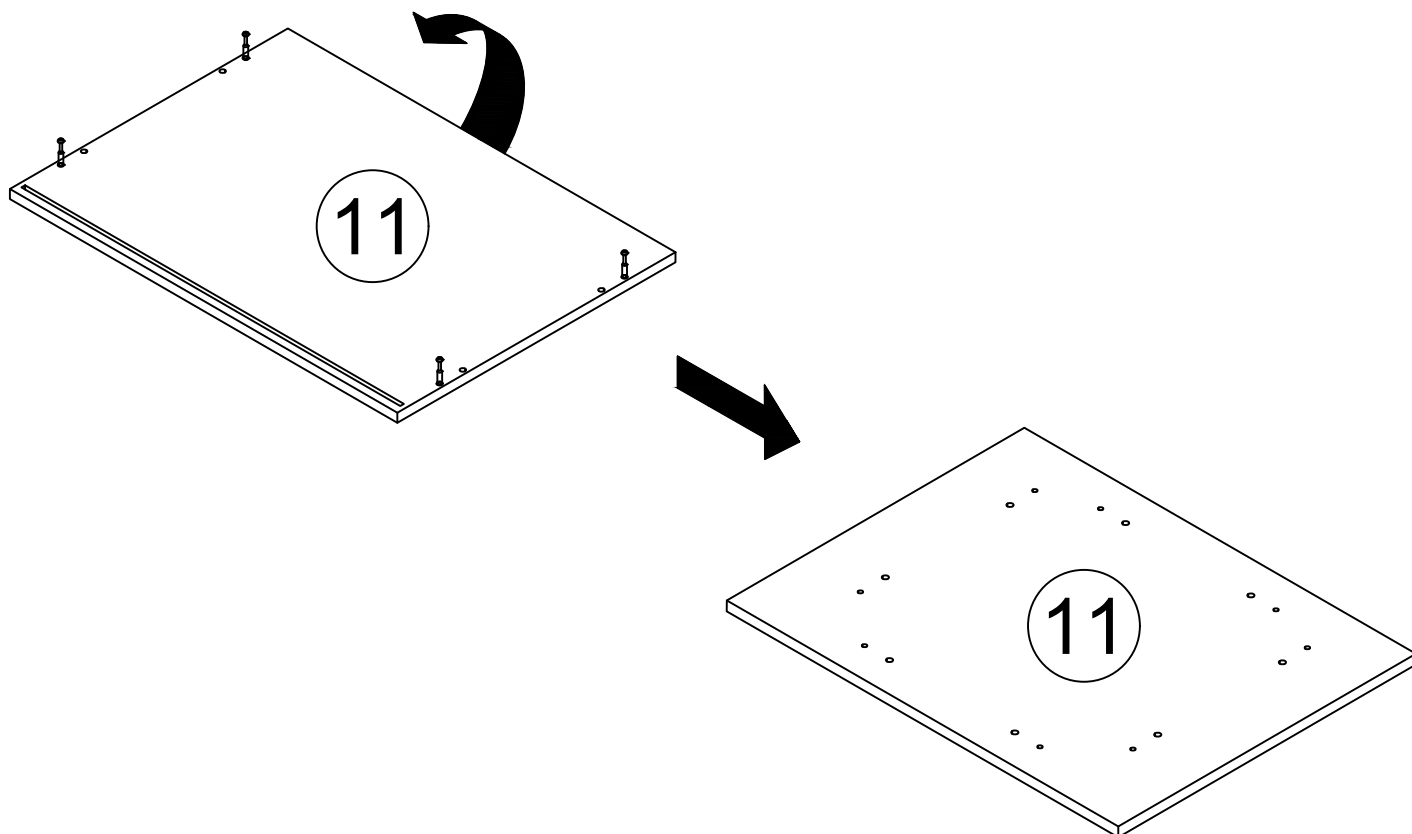


Step 23


(B)



x4

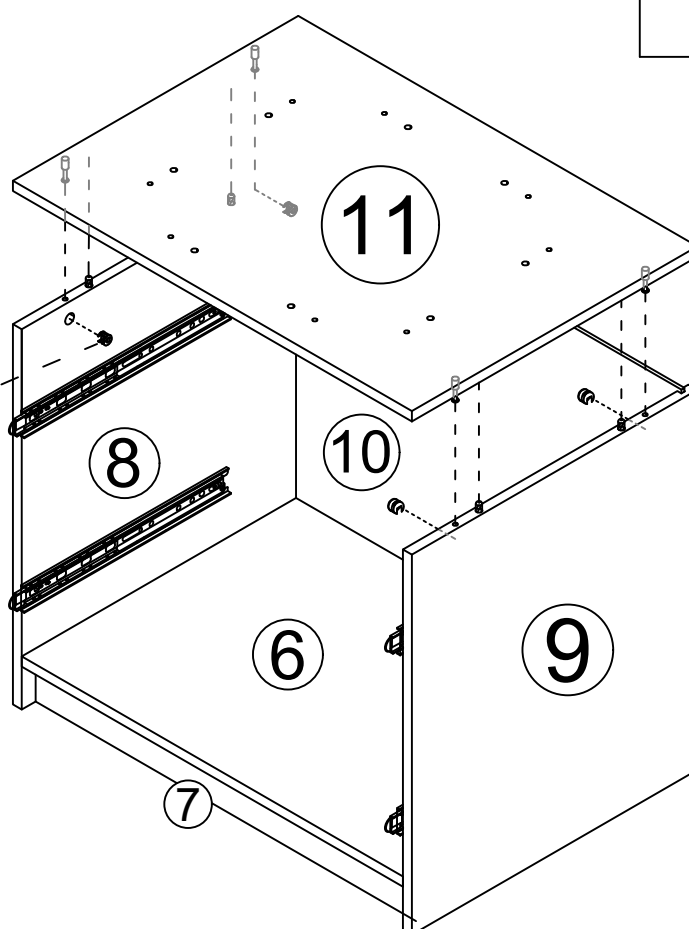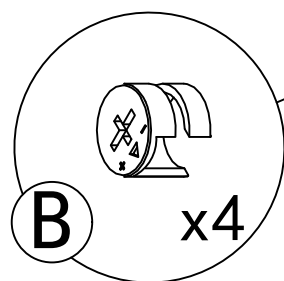


Step 24

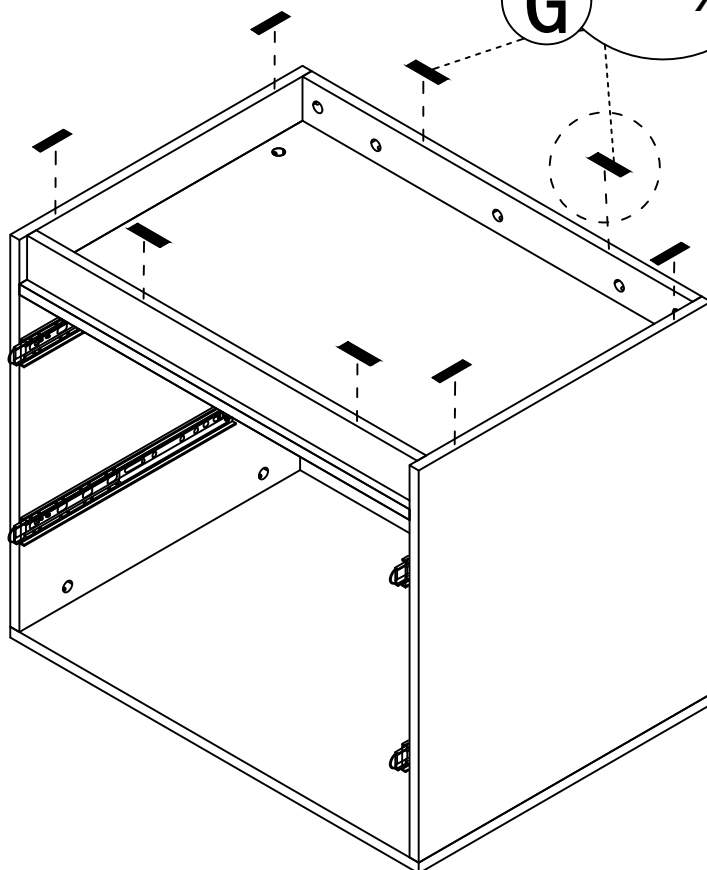


Ⓒ





x8

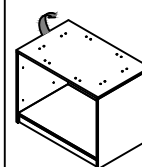


Flip 180°

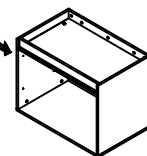

Step 25

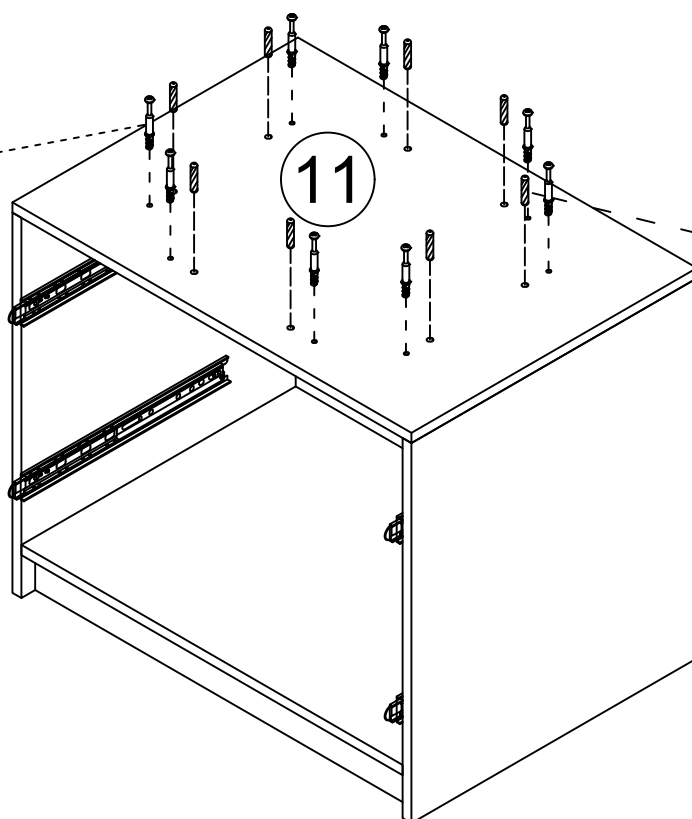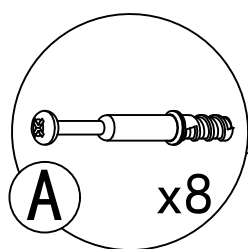


Ⓐ




x8


Ⓒ





x8

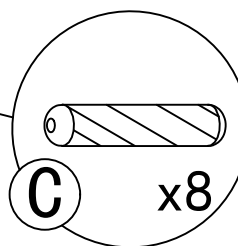


Step 26

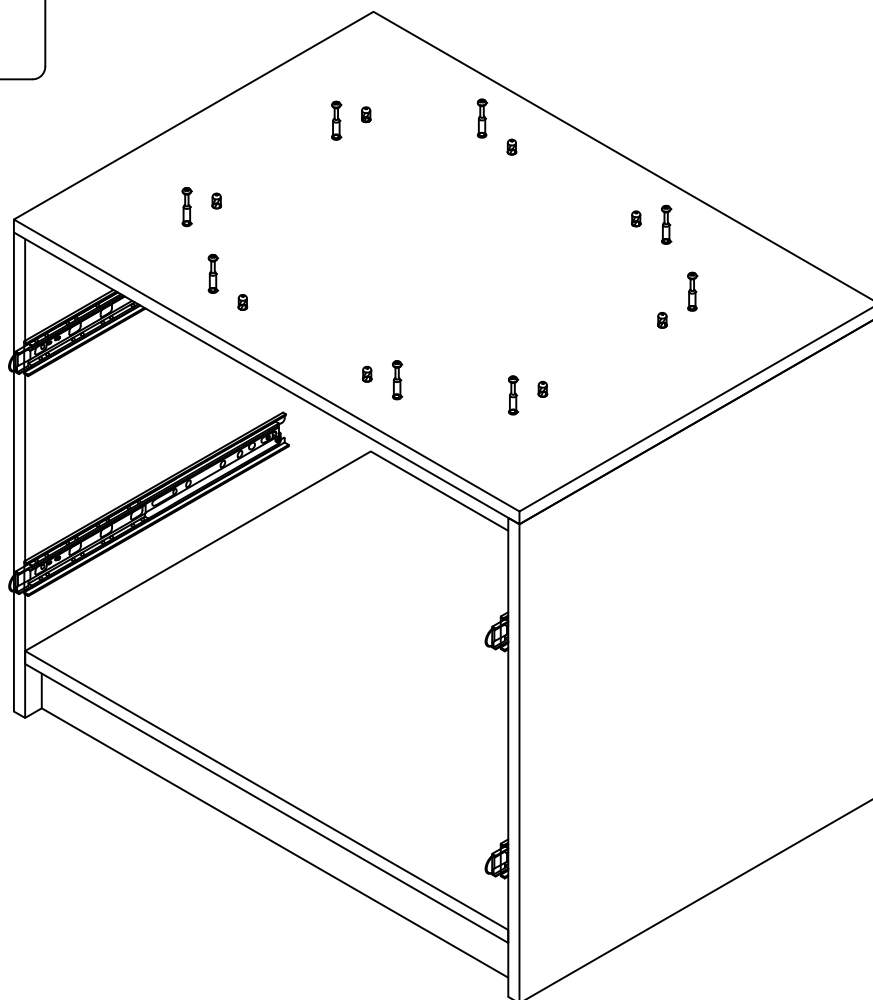



Step 27

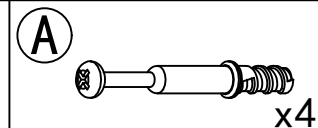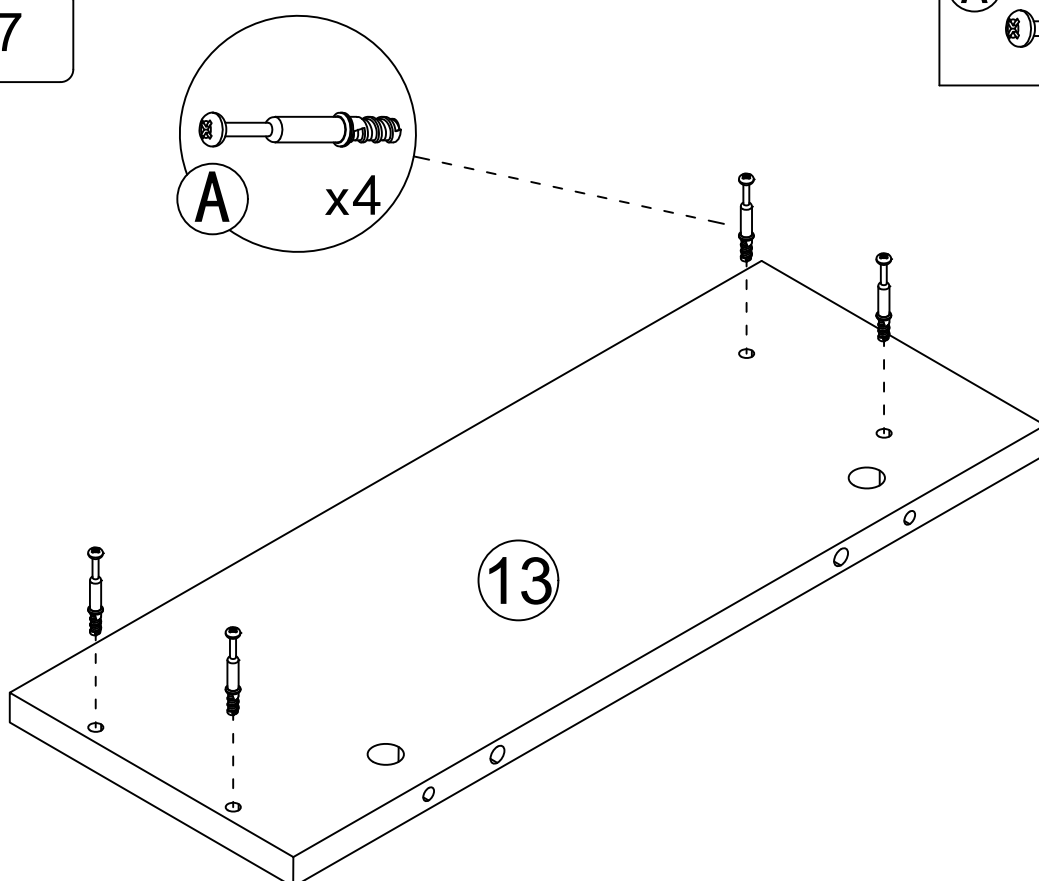



Step 28

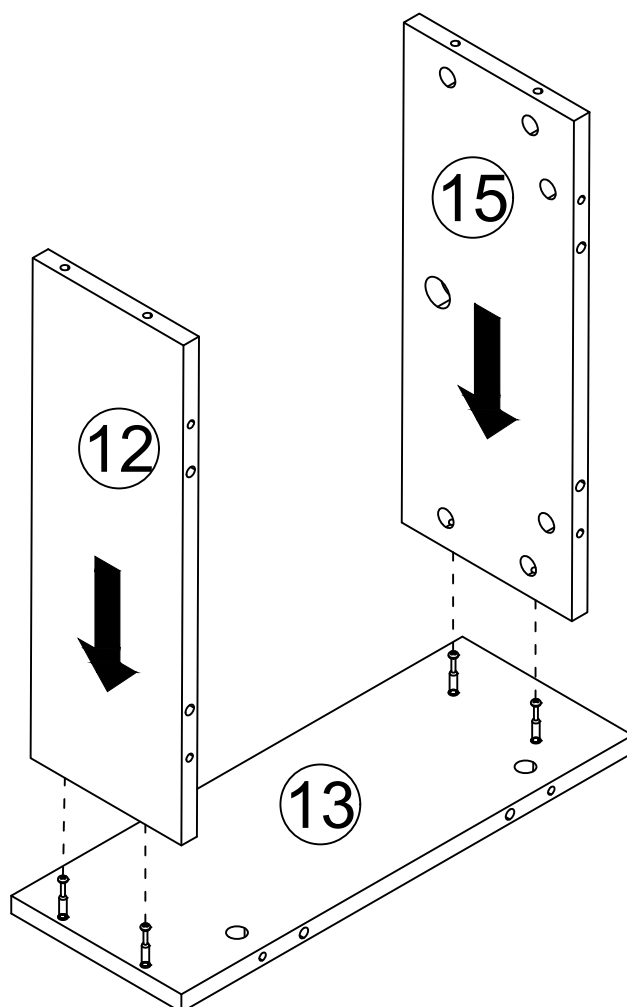

Step 29

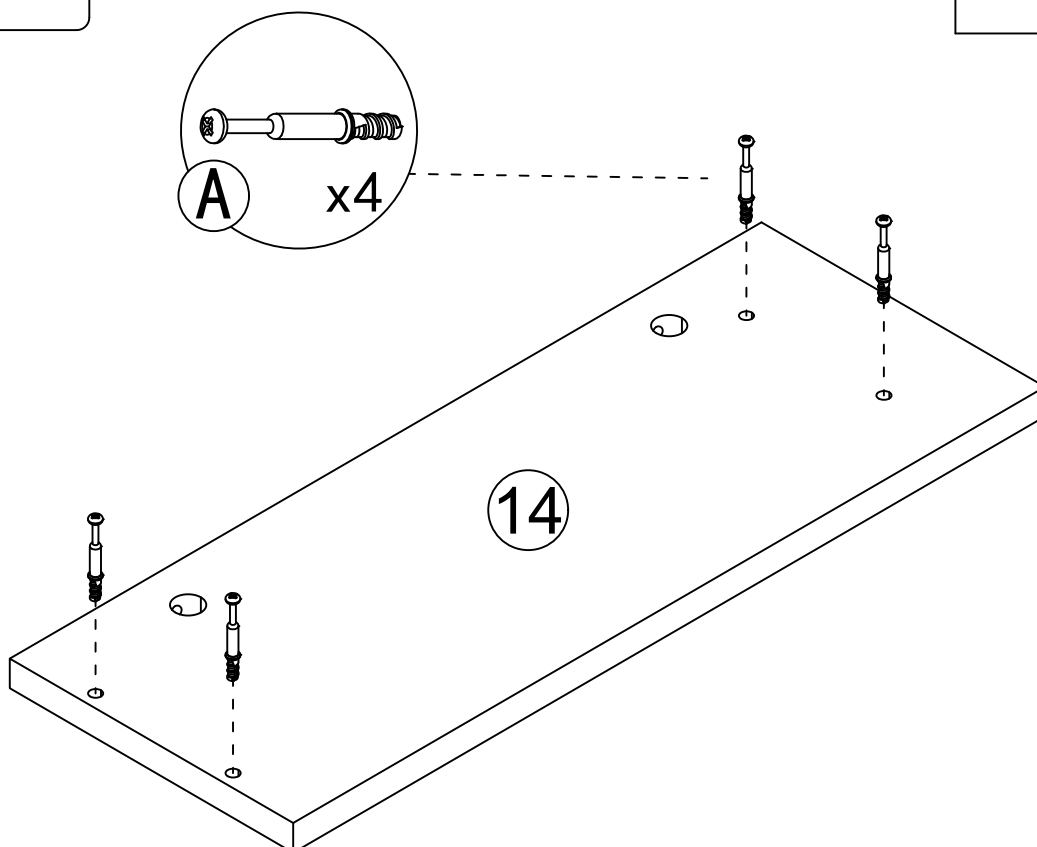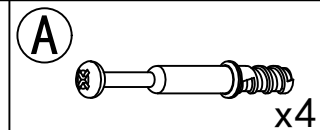

Step 30

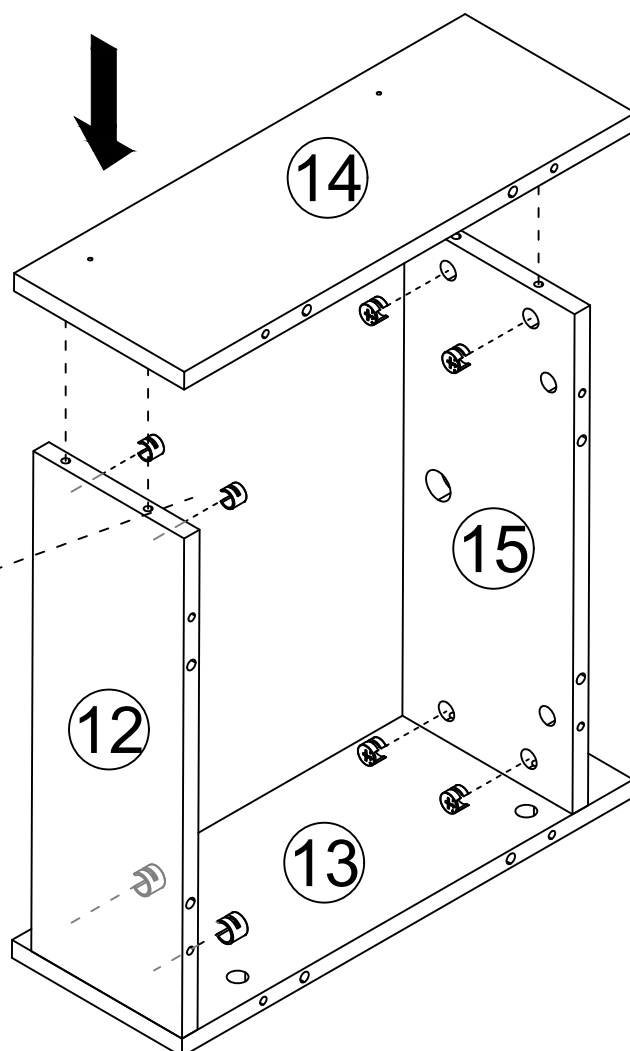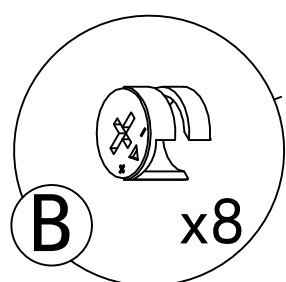


B




x8


Step 31

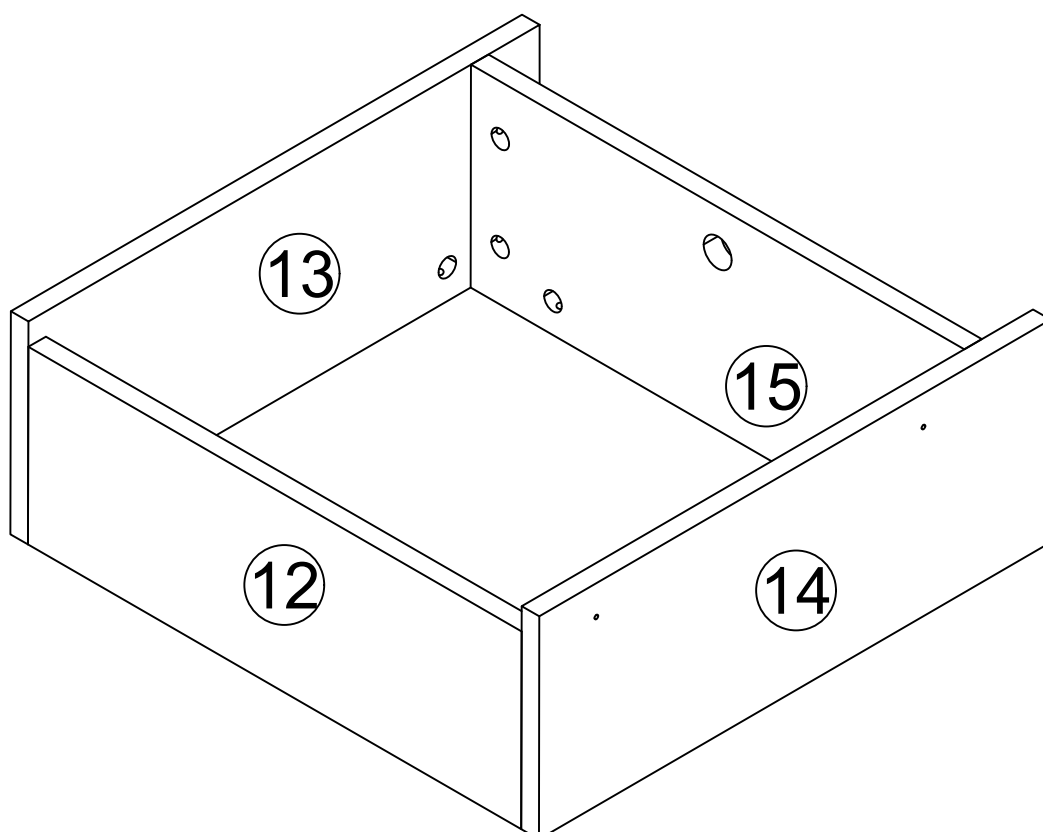


The decomposition of the lock

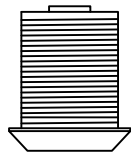

①

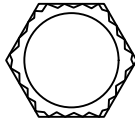

②




③



④


Step 1

1. Facing the direction of the keyhole position with the teeth, clamp the wooden board tightly
2. Insert part 1 into the hole of the K plate first, and then lock the hex nut

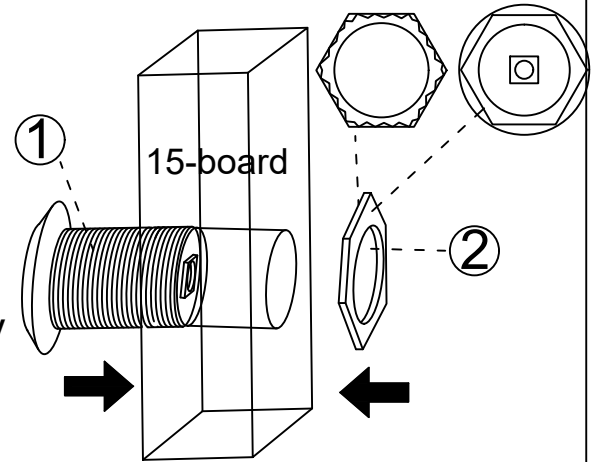


Step 2

1. Clip part 3 into the tail of part 1
2. The hole position of the key and the direction of the iron plate are the same

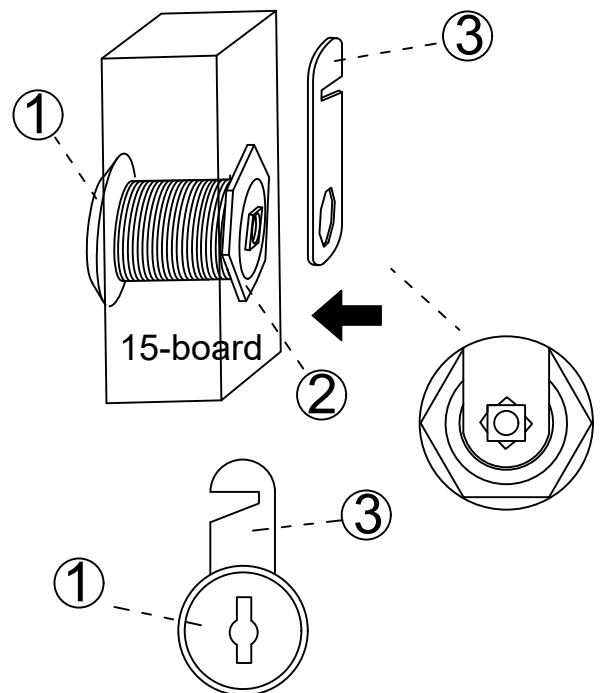


Step 3

1. Twist screw 4 into the hole position at the tail of 1


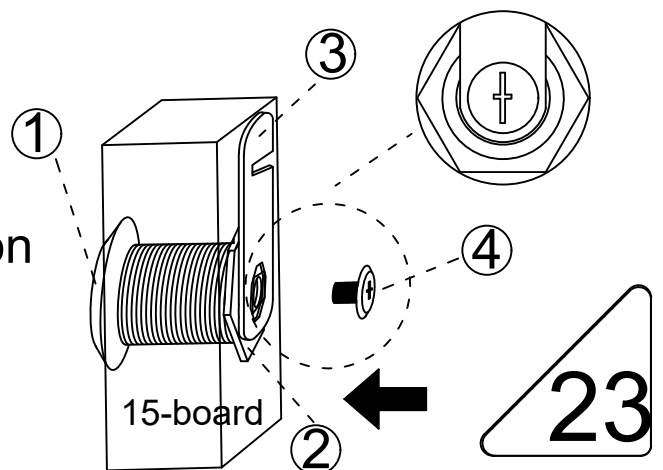


Unlock steps

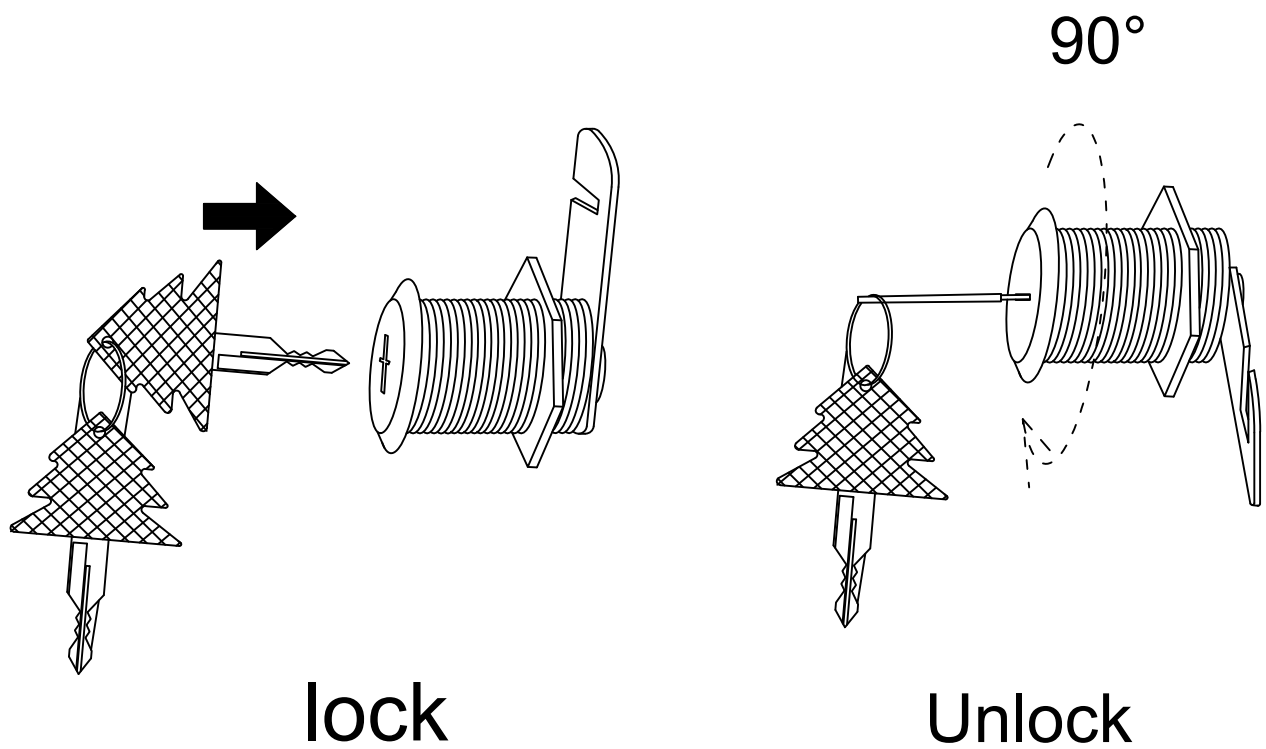


Step 32

Pay attention to the direction of the hole position

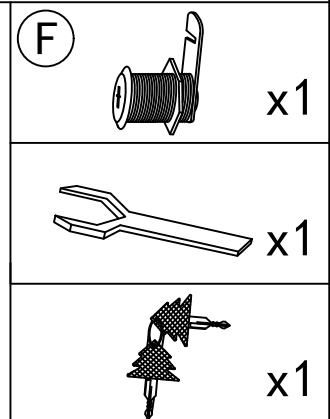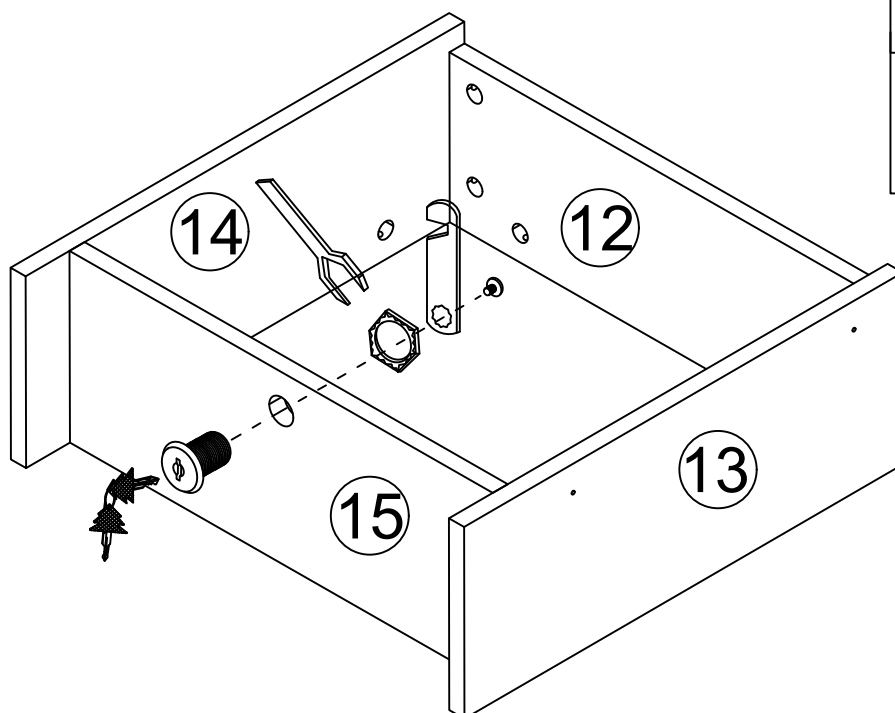



Lock the hex nut with a wrench

Drawer rail breakdown diagram

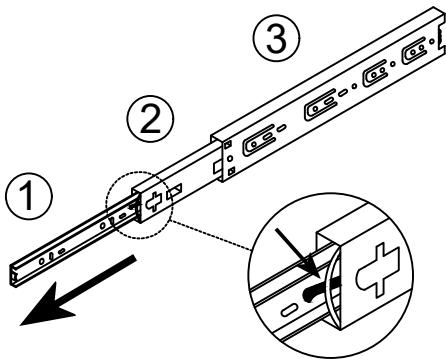


Step 1 : Pull the rails apart

Step 2 : Push the nylon buckle outward ①

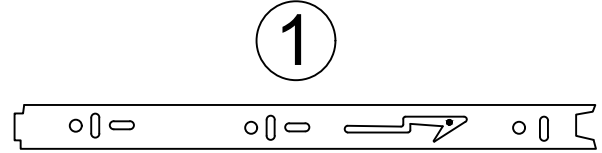

②

③




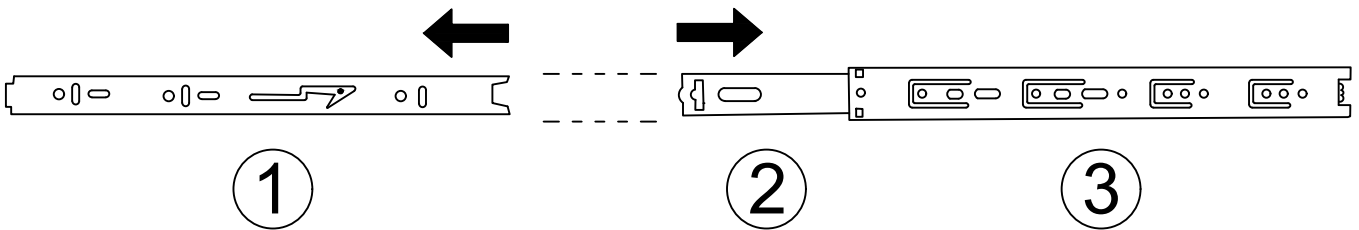


①


②

③

Step 33

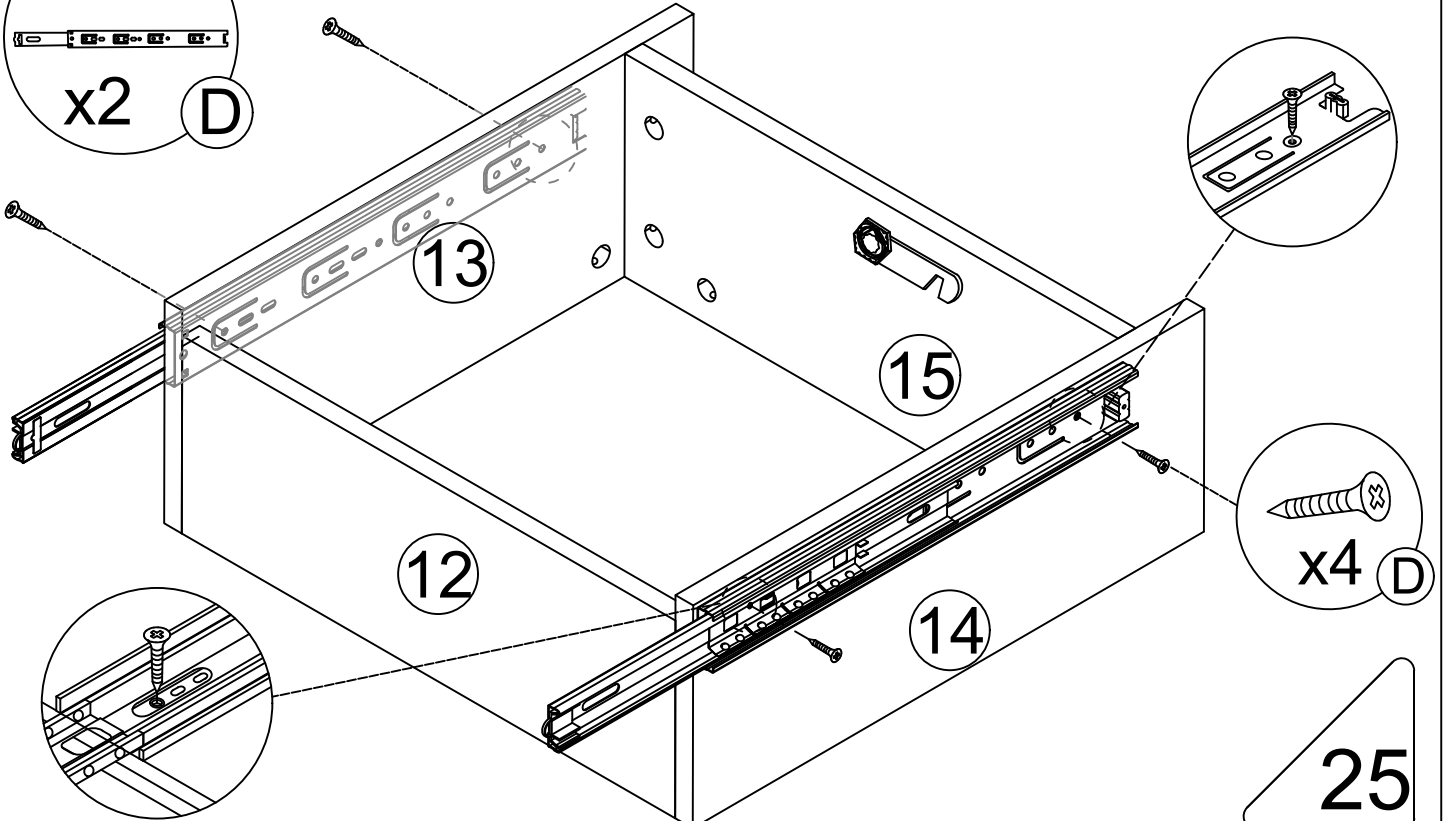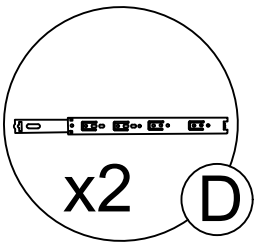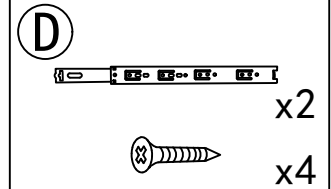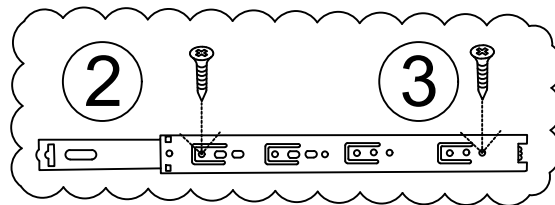


Step 34

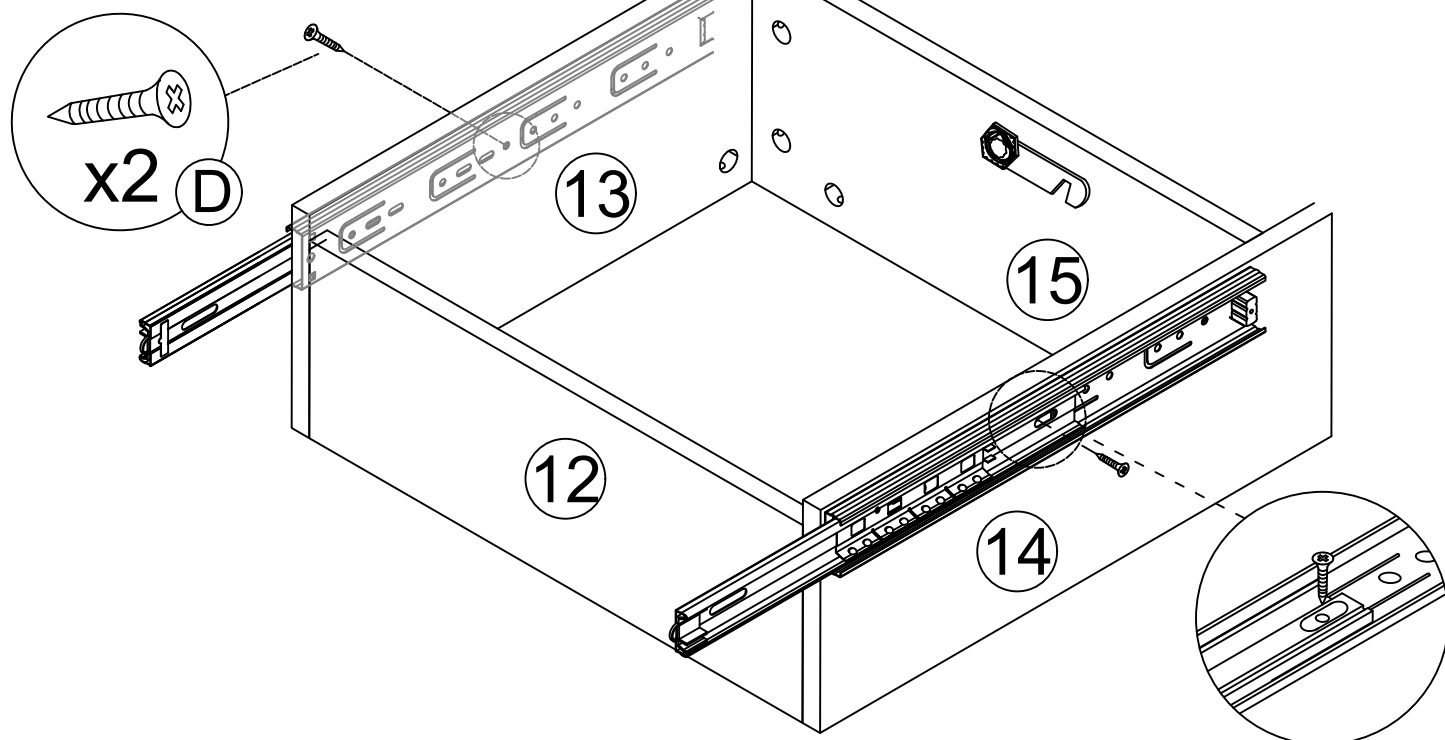






This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 35

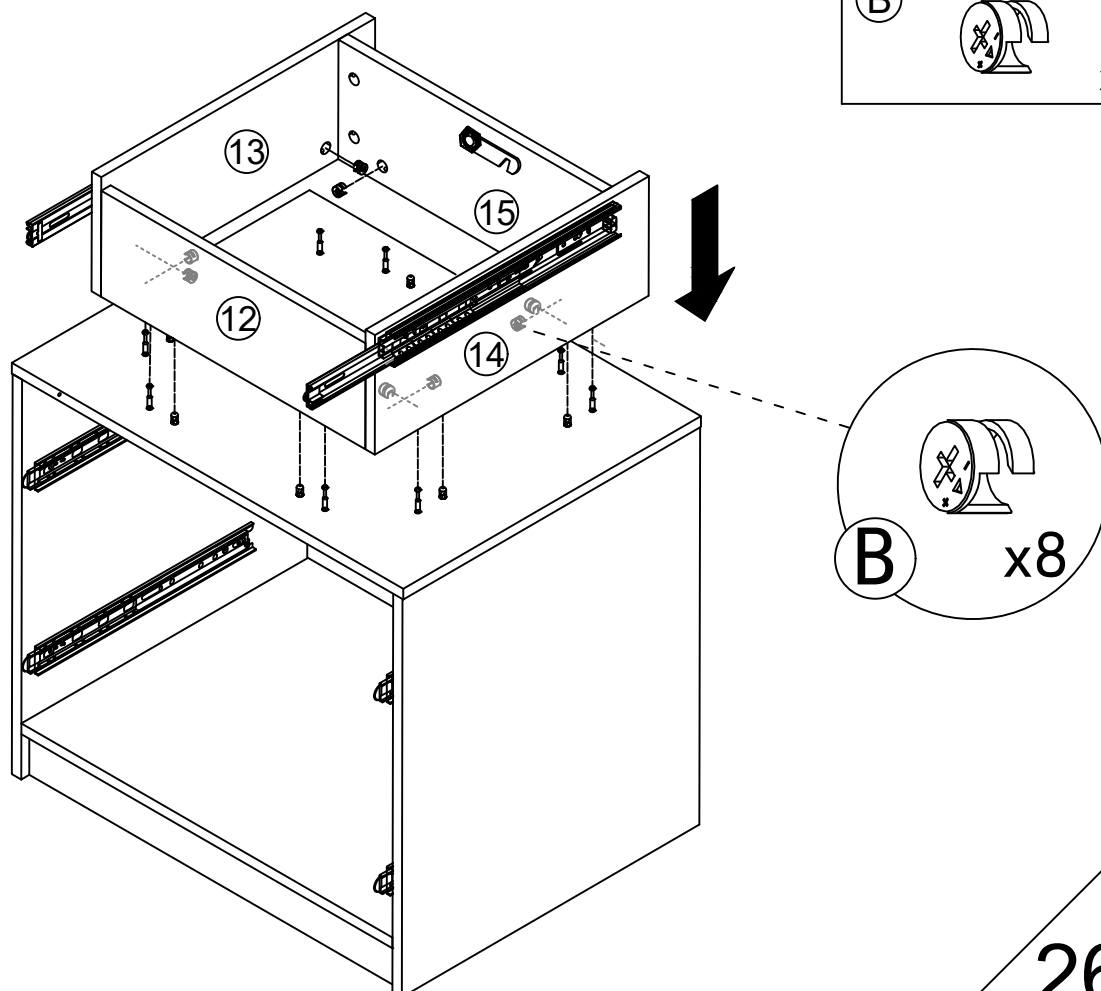



Step 36

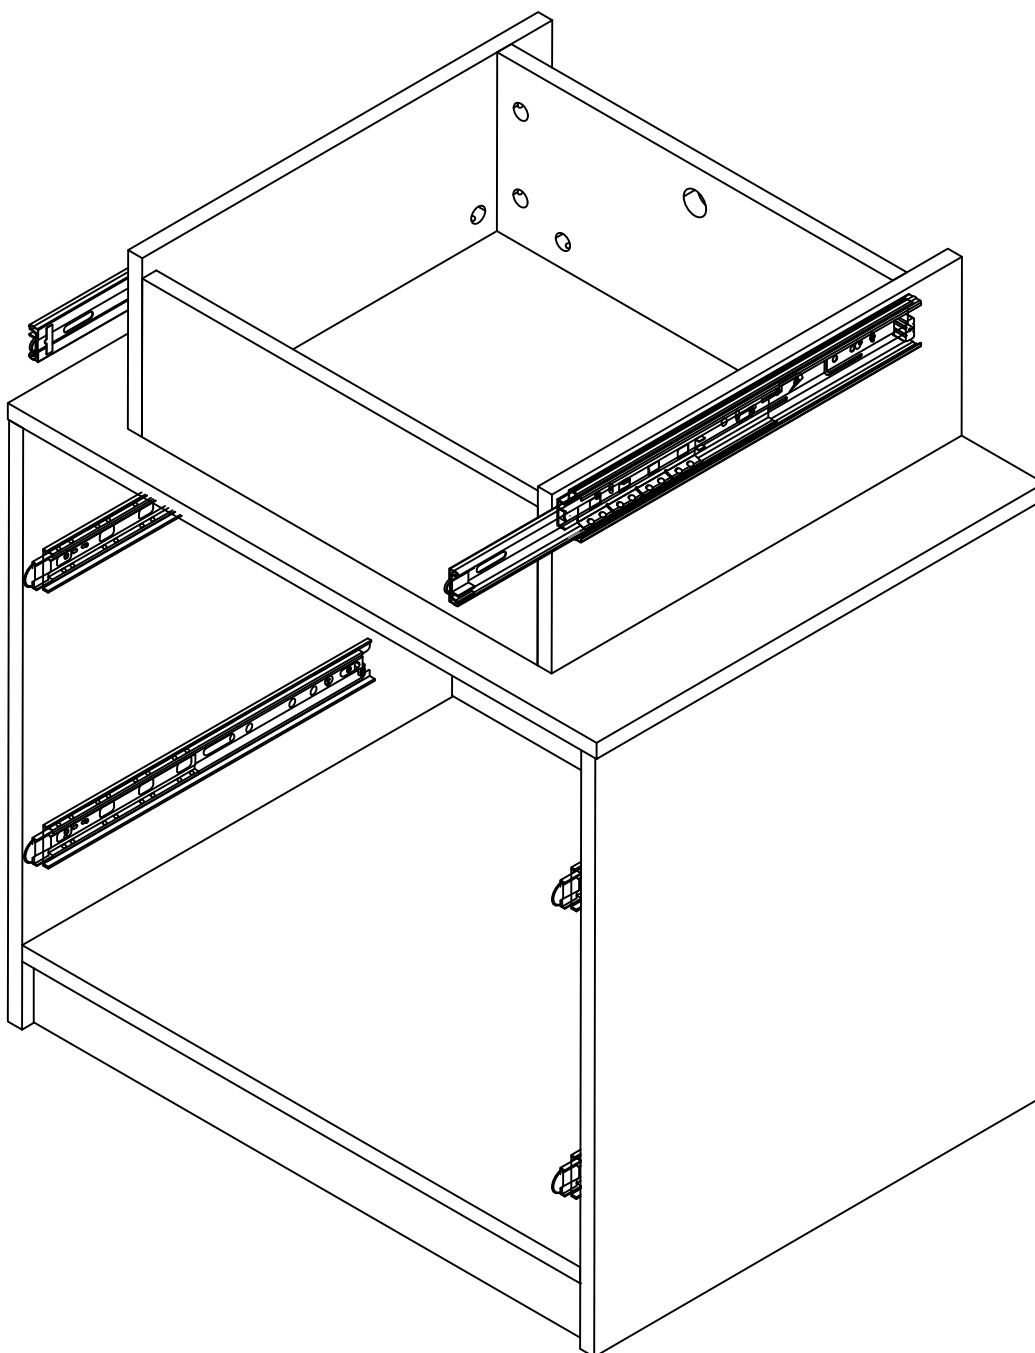

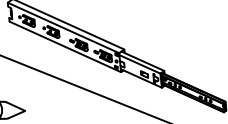
A		12pcs	C		6pcs
B		12pcs	D	 	2pcs 4pcs
E	 	4pcs			

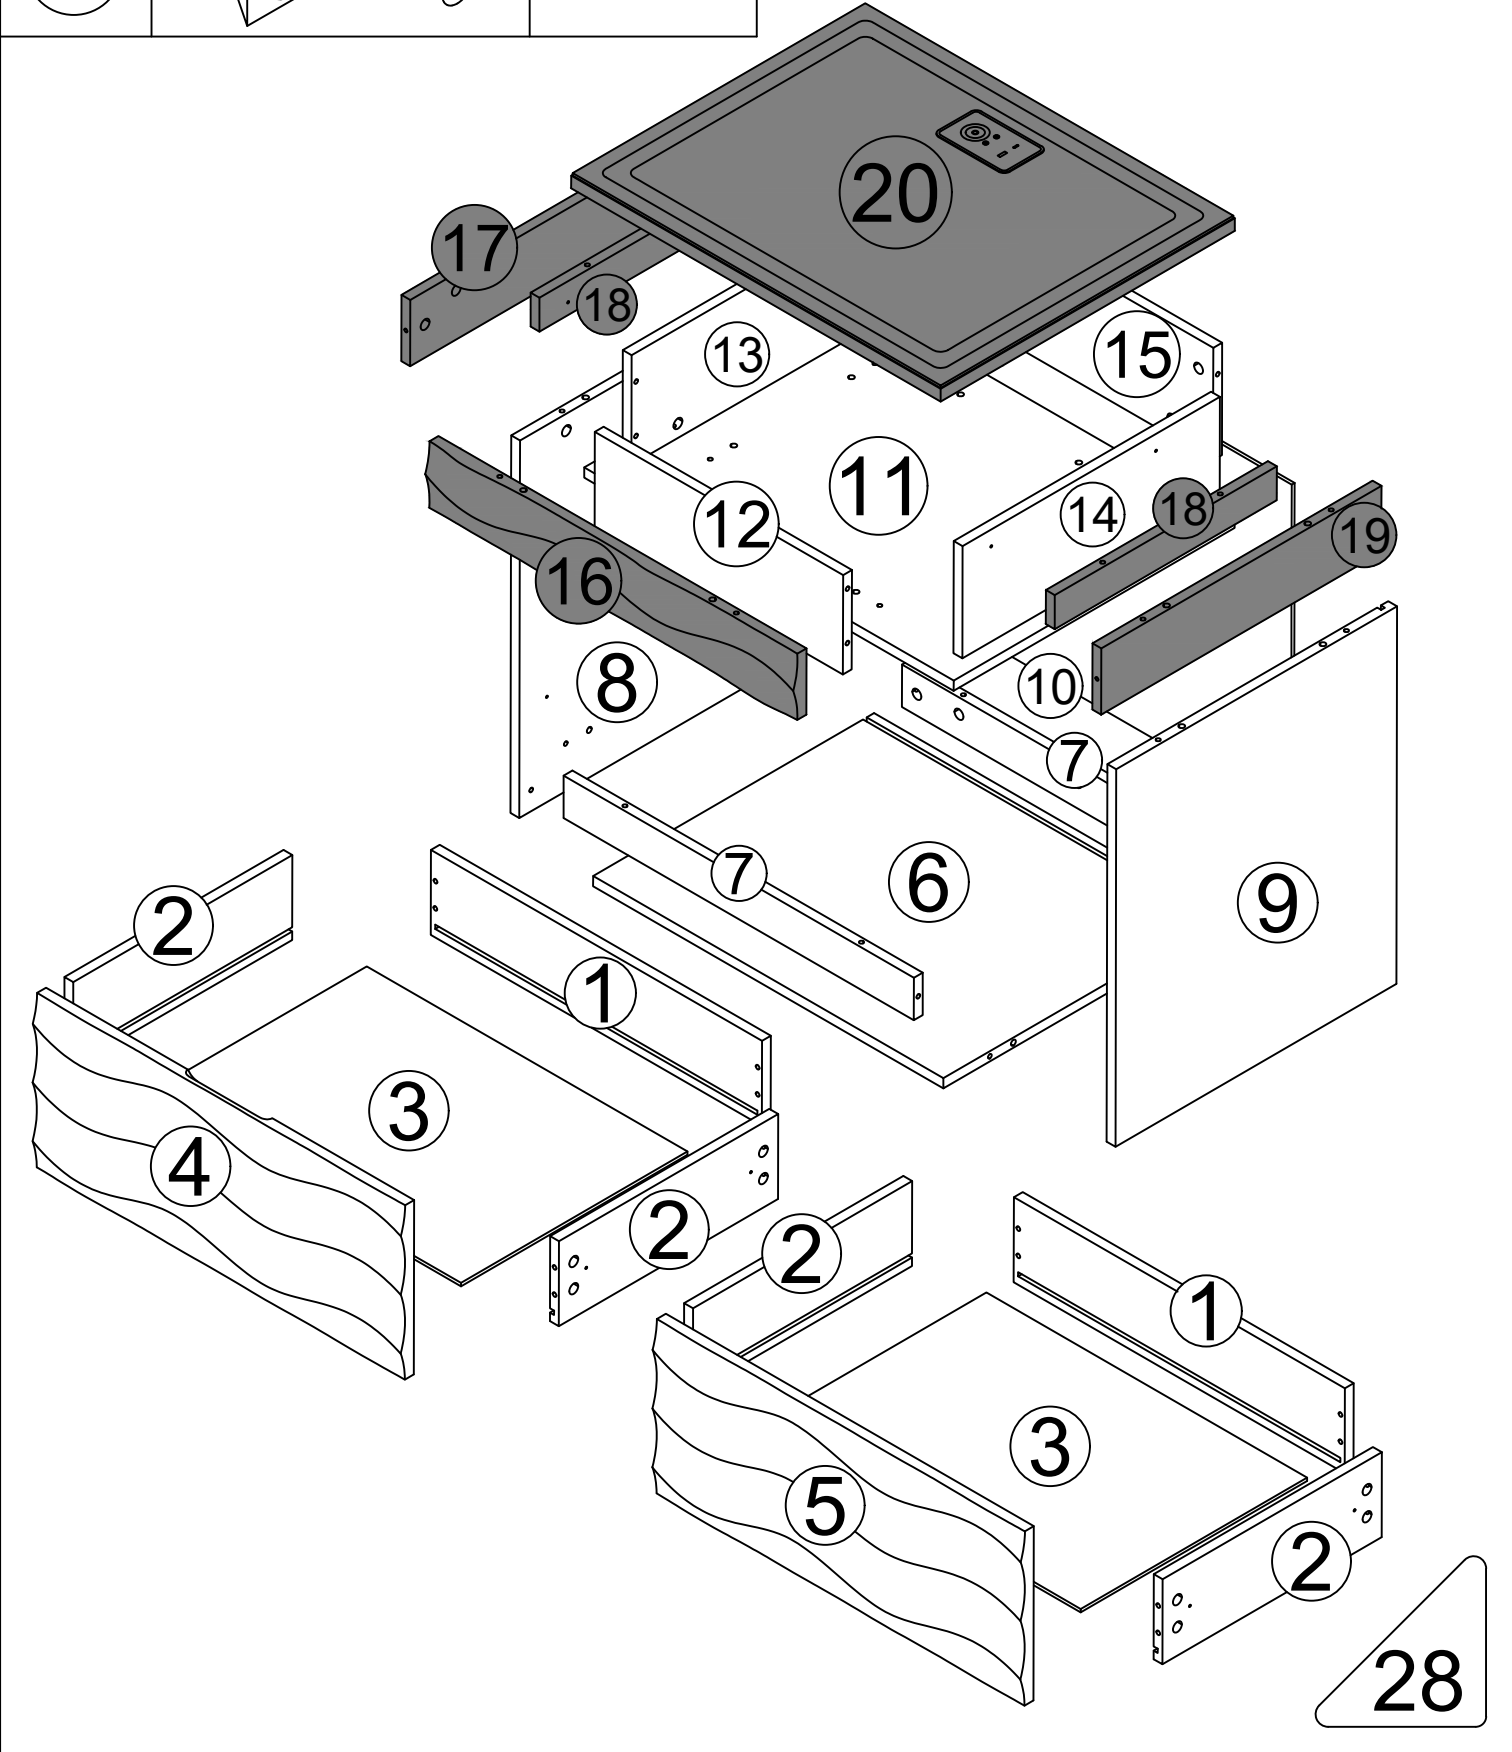


Step 37

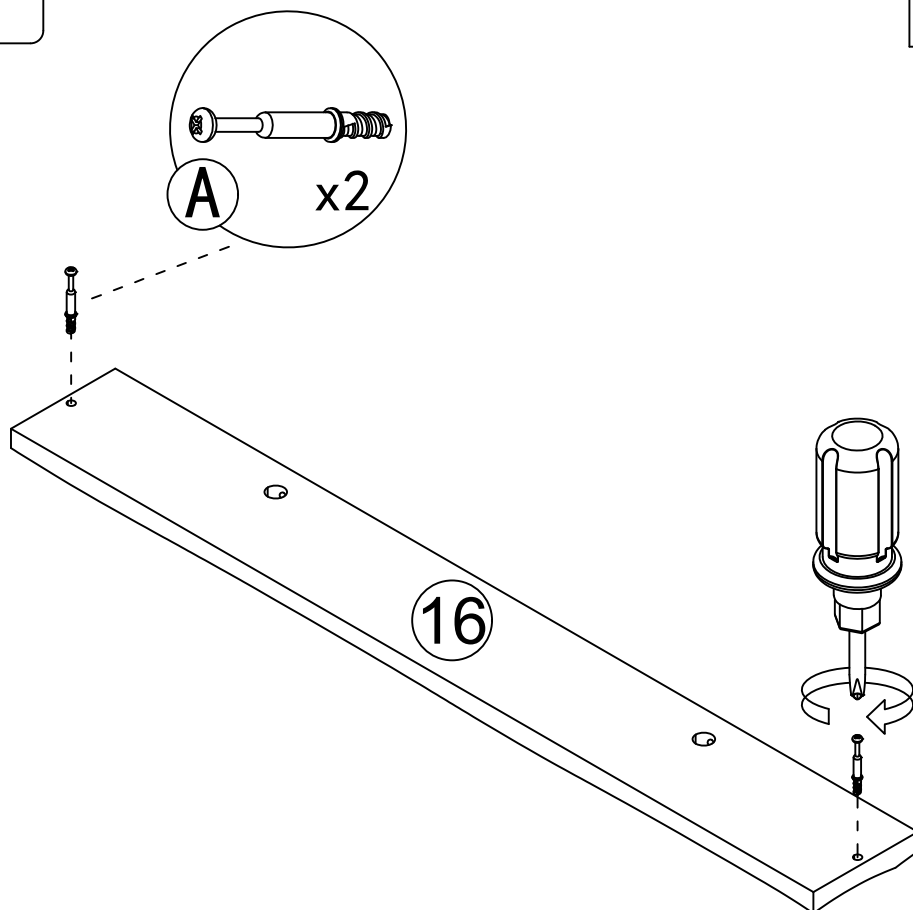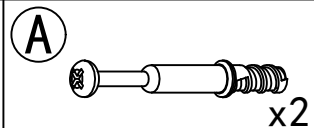


Step 38

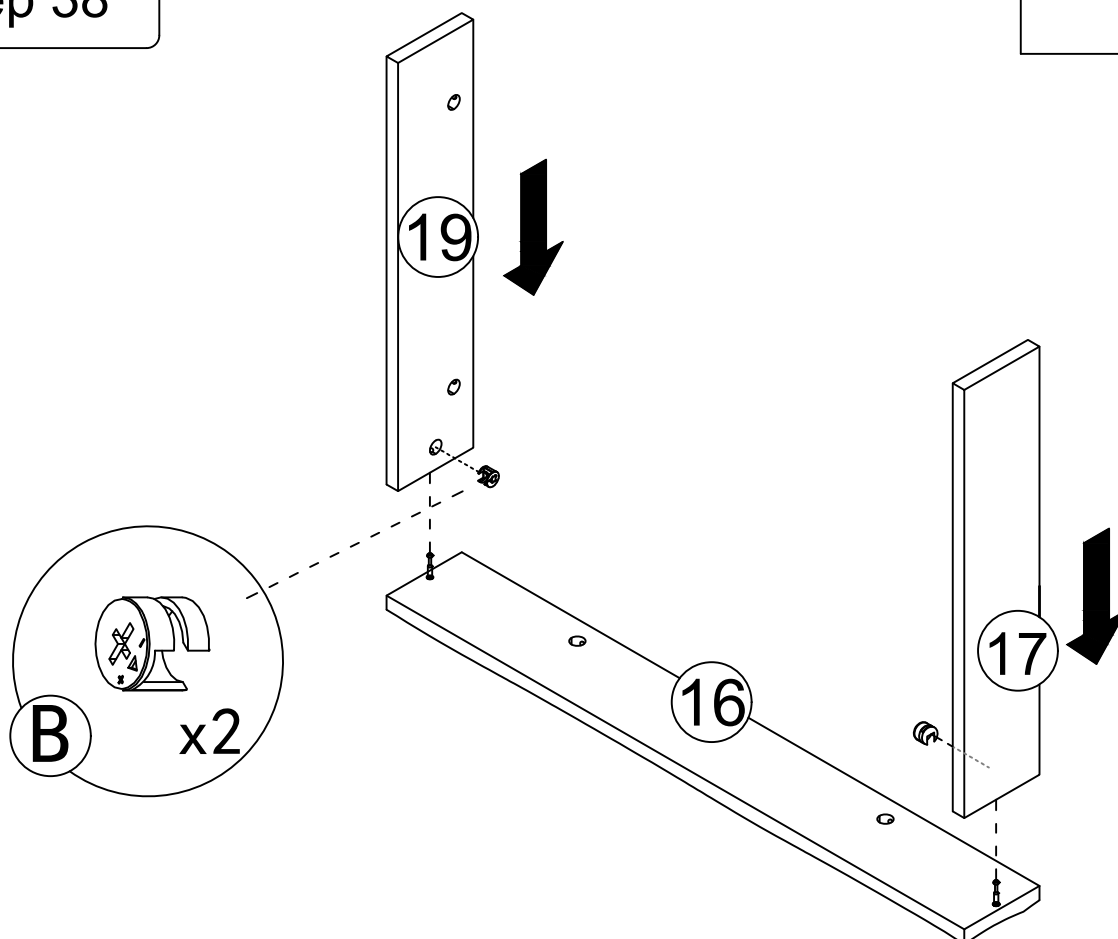

Step 39

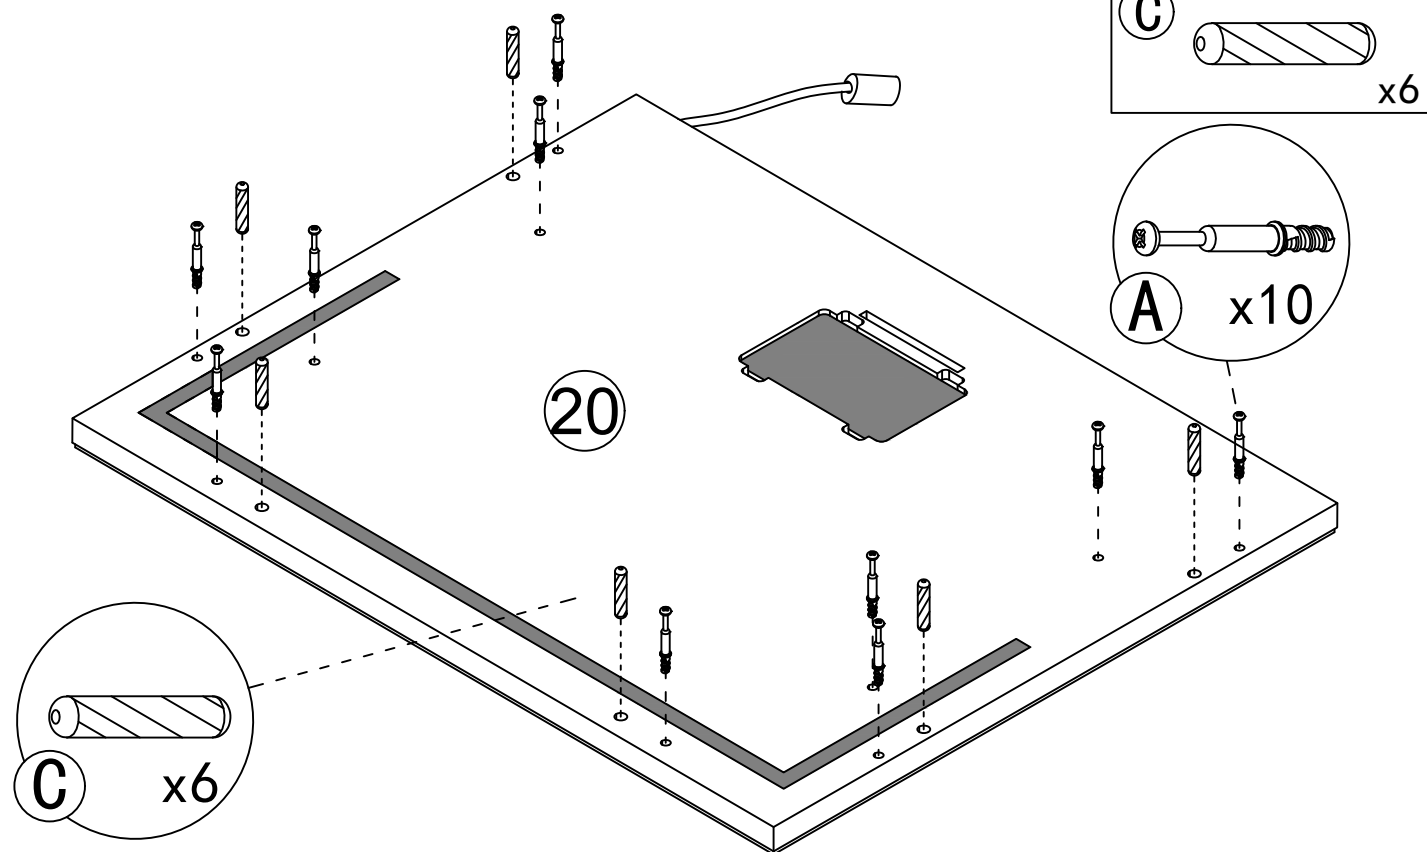

Step 40


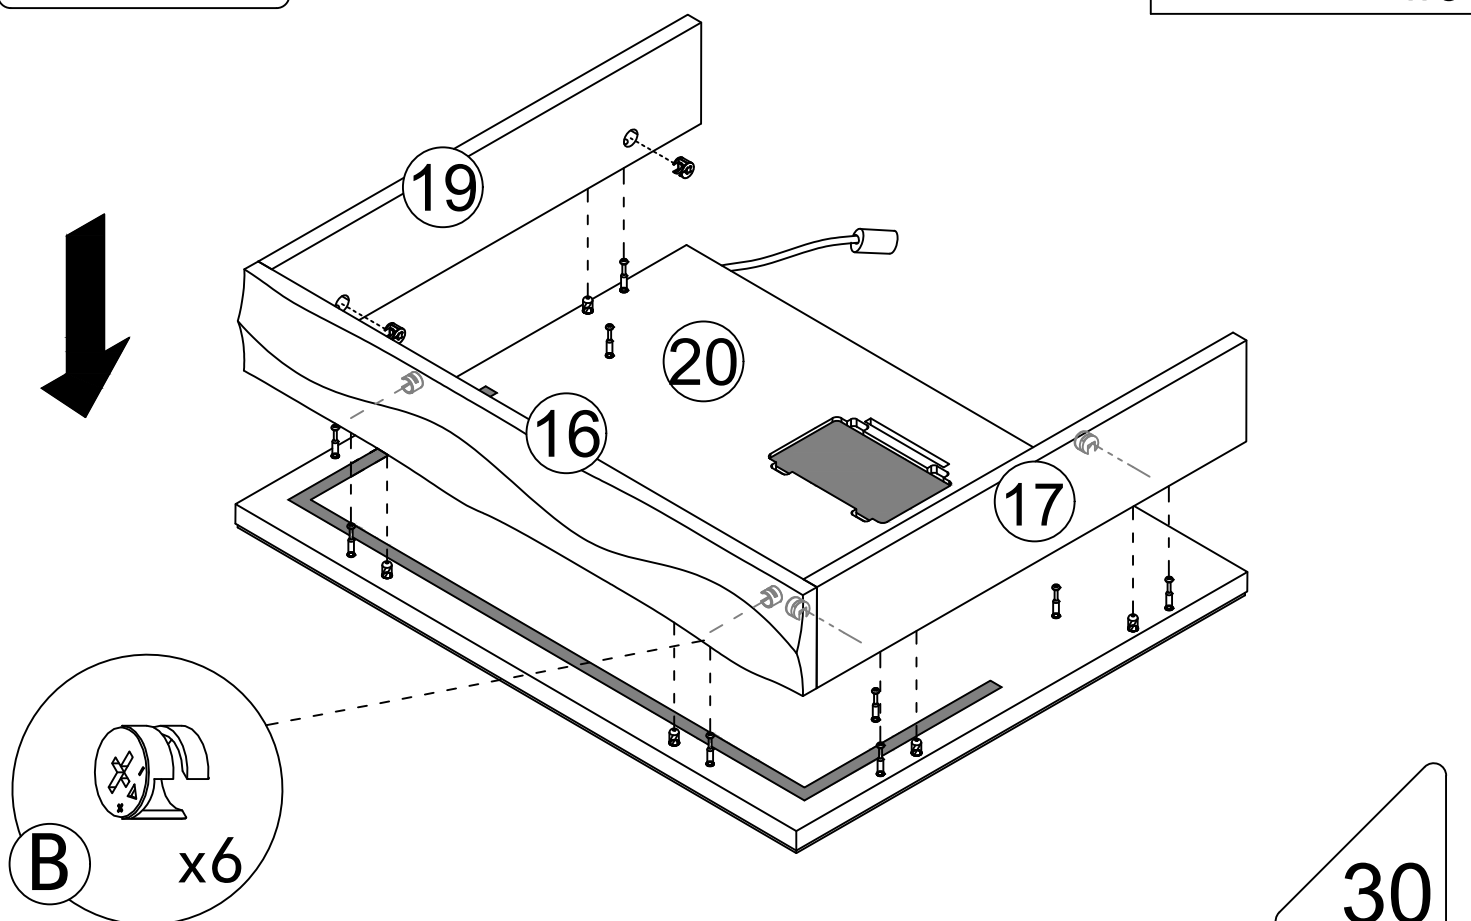


Step 41

(B)




x4

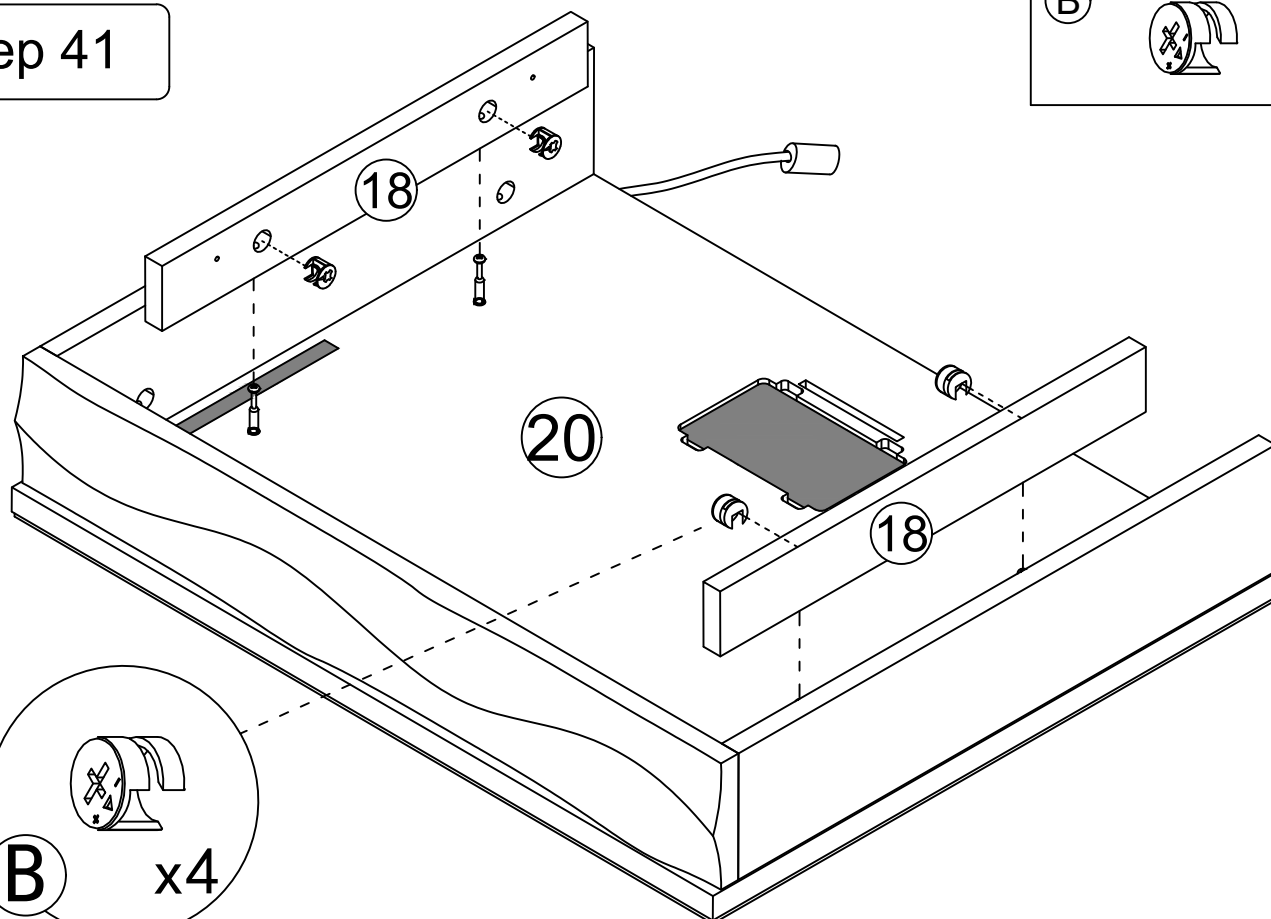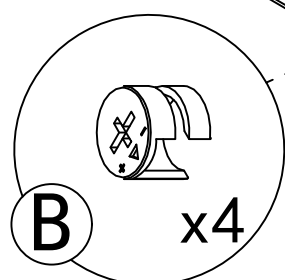

Step 42




(D)



x2




x4

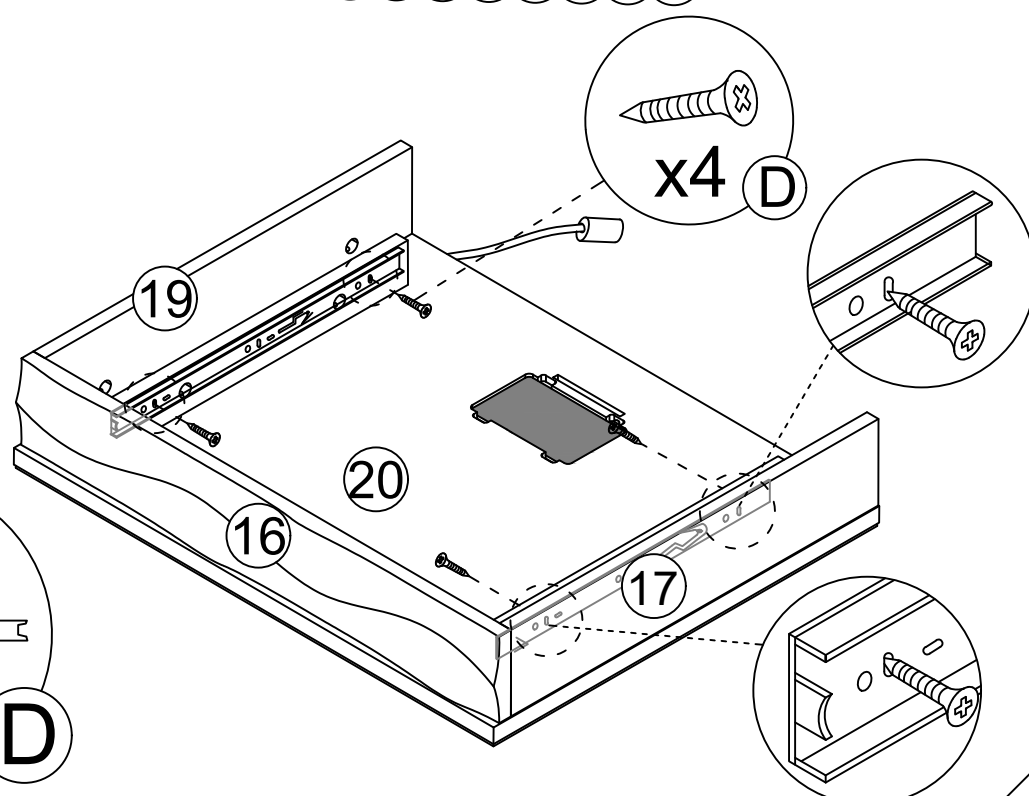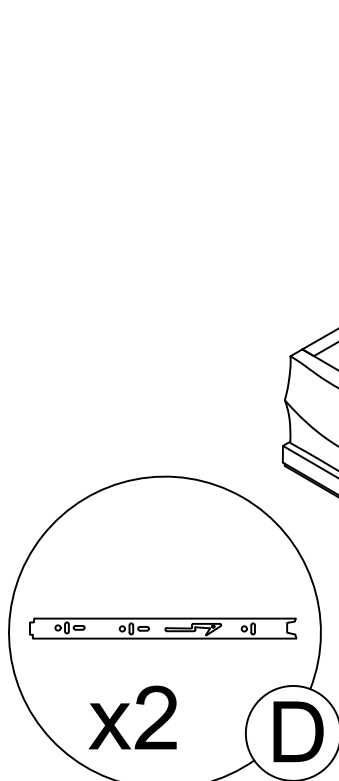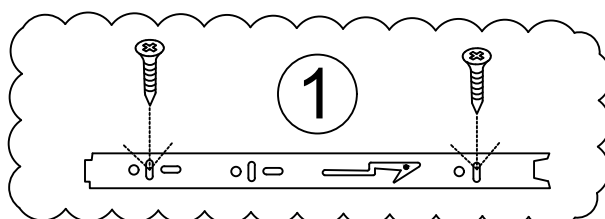


31

Step 43

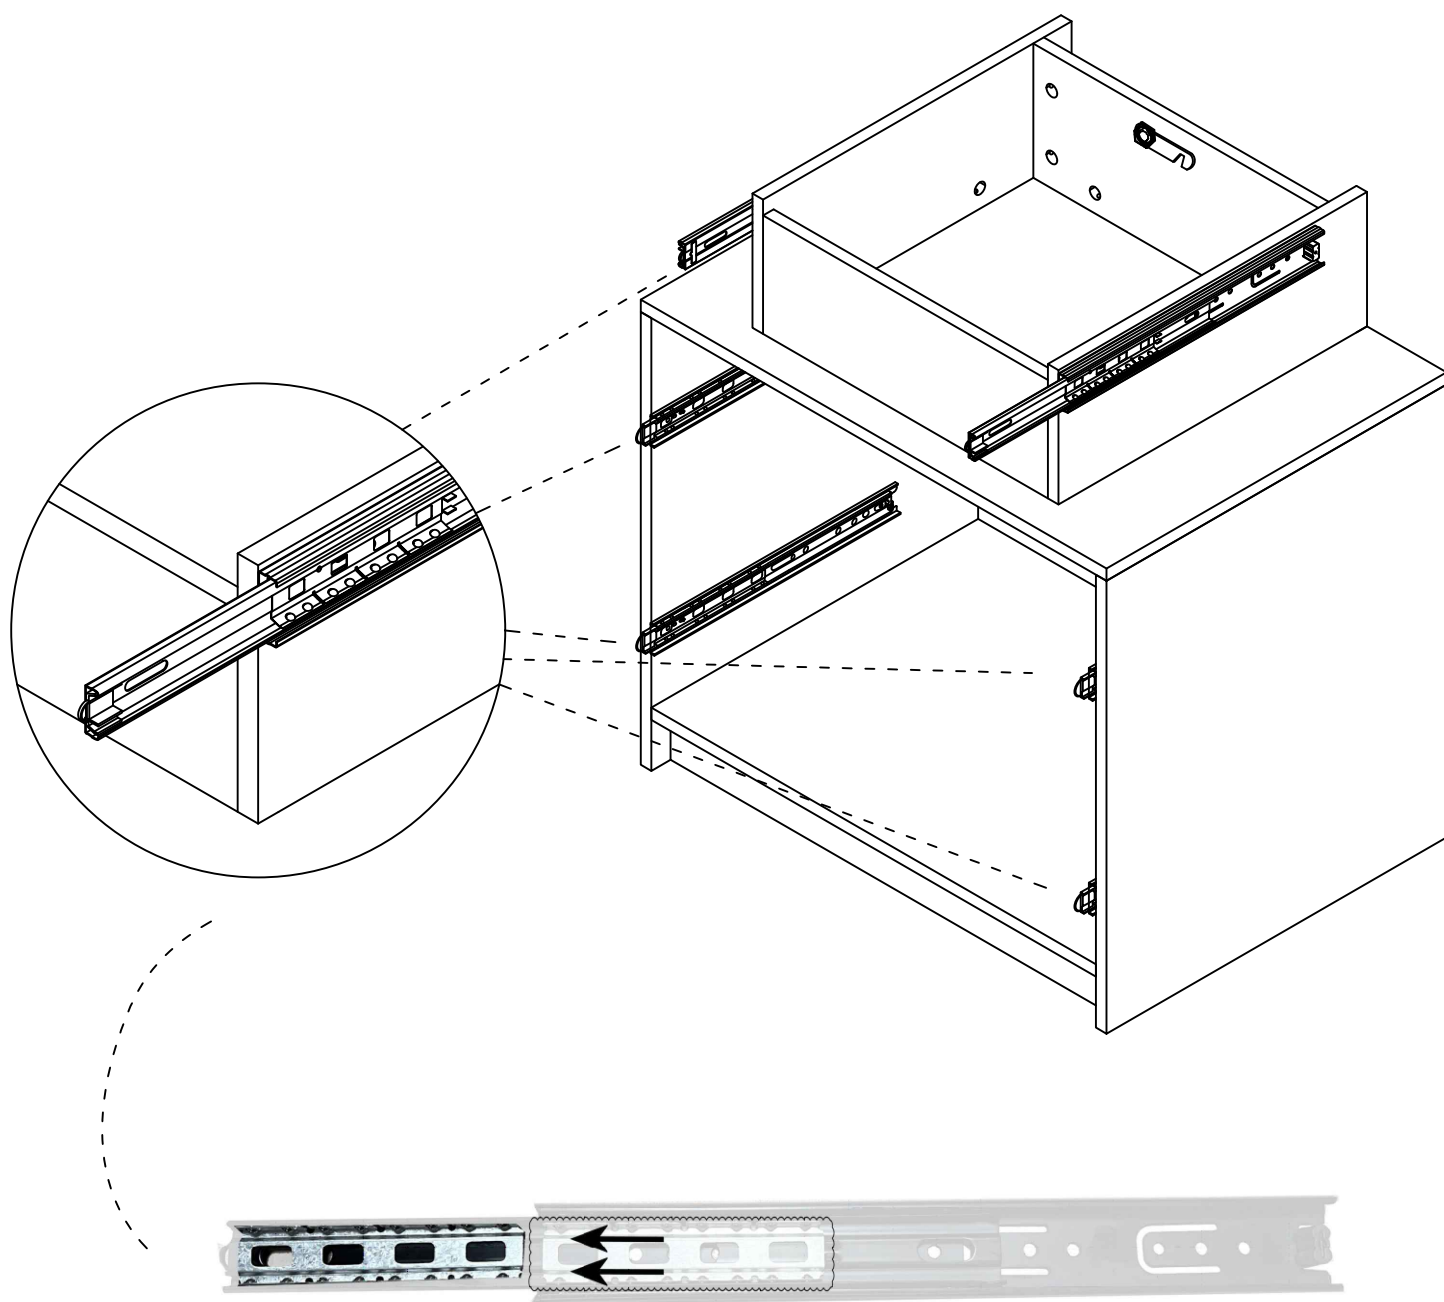

As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.


Step 44

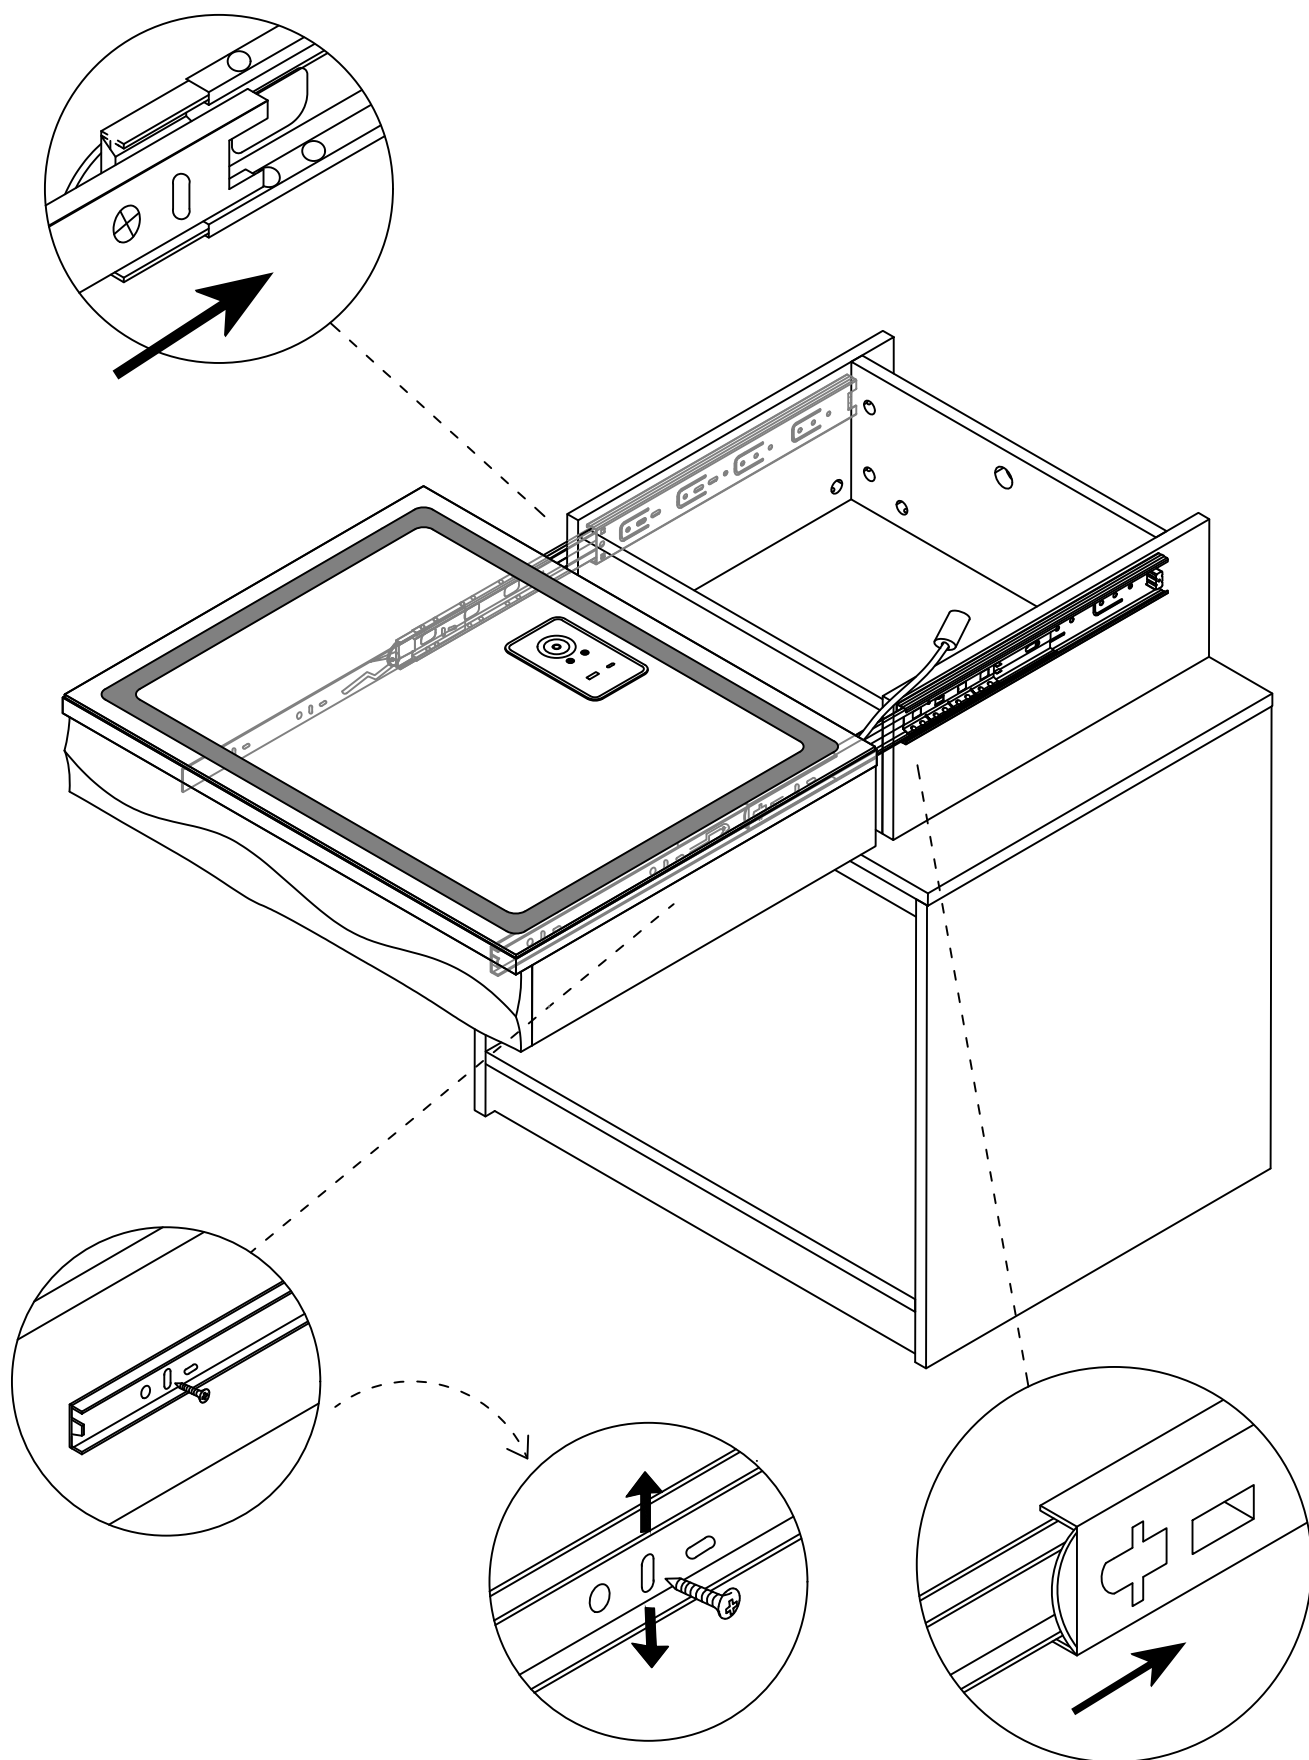

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap.


Step 45

As shown, When installing the drawer, pull the guide rail out first, Slide beads are also pulled out.

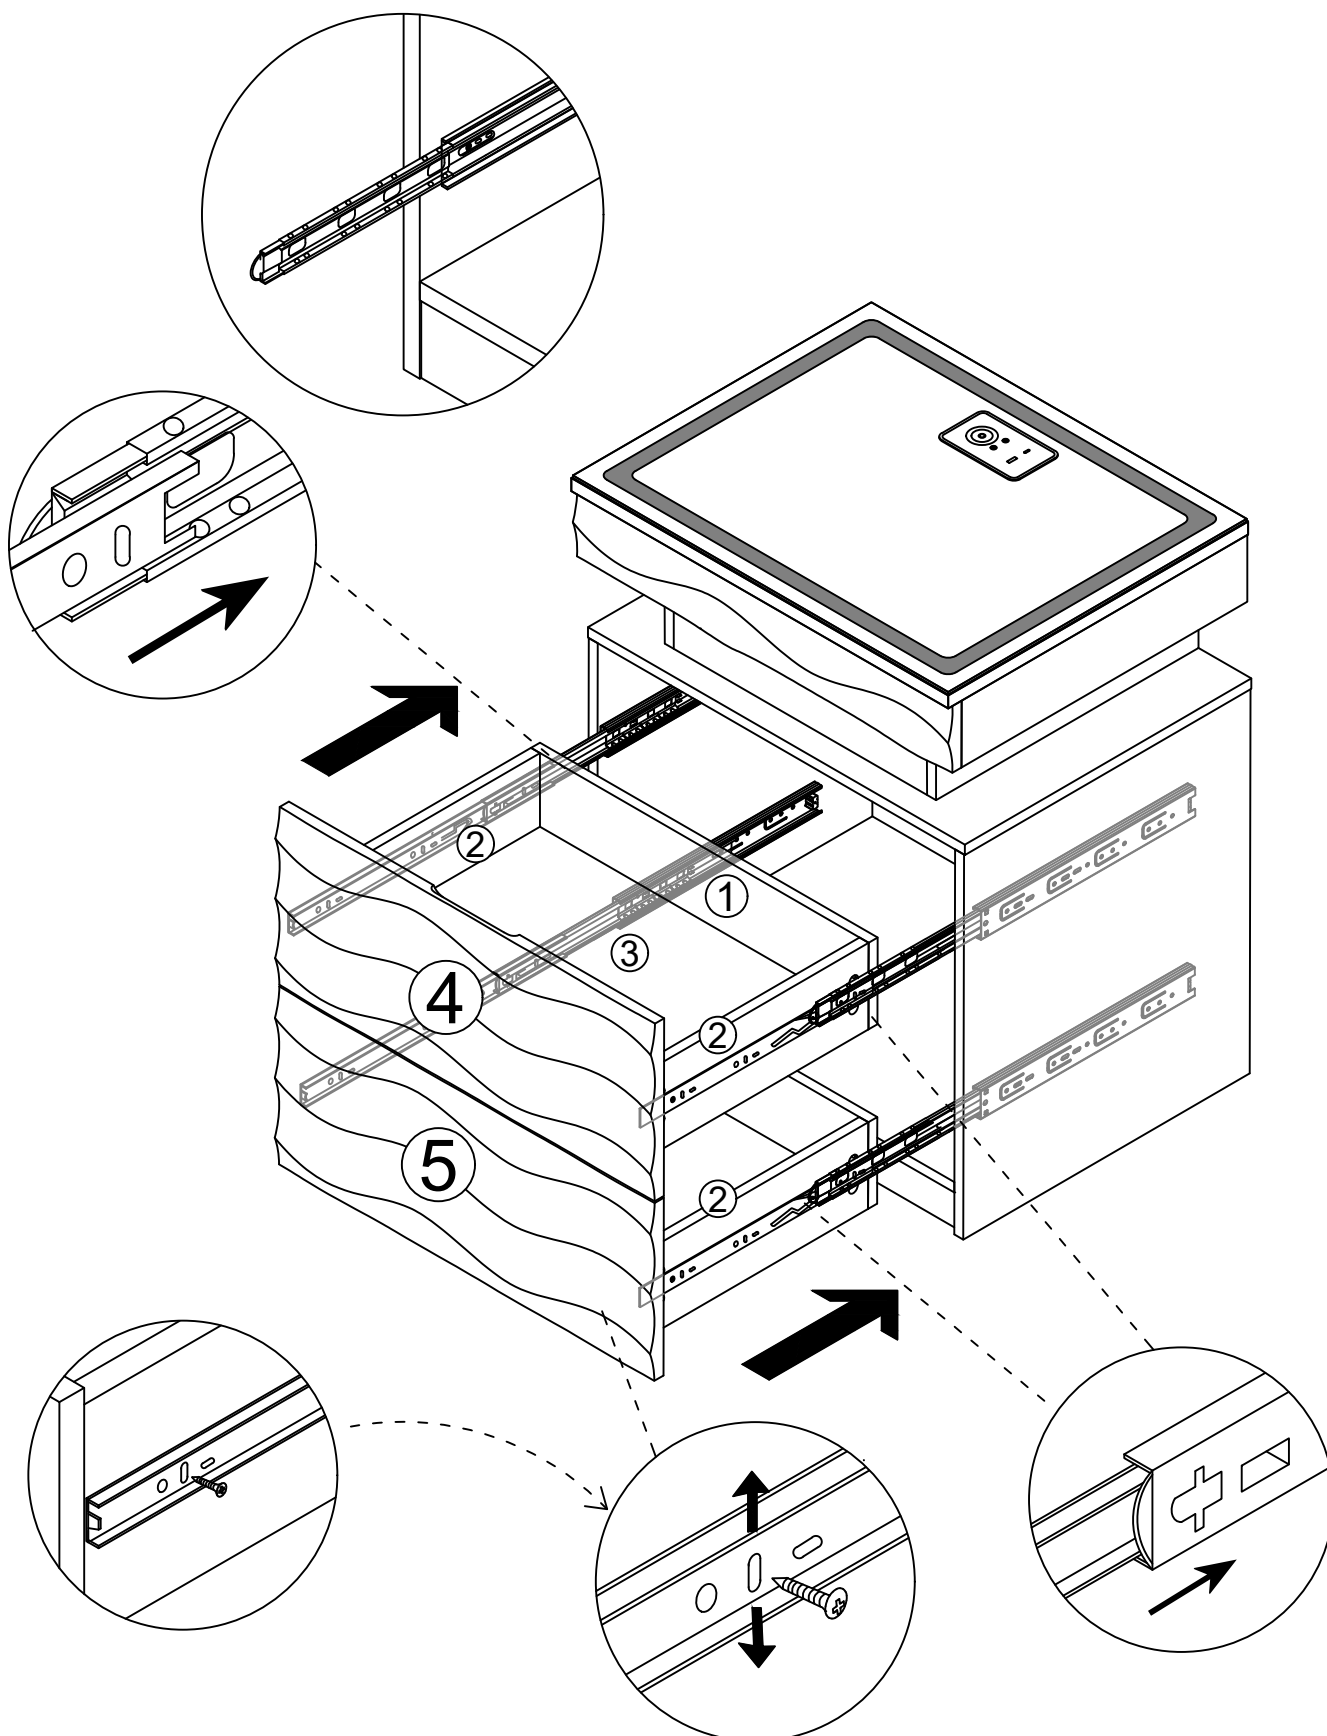

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap.

Step 46

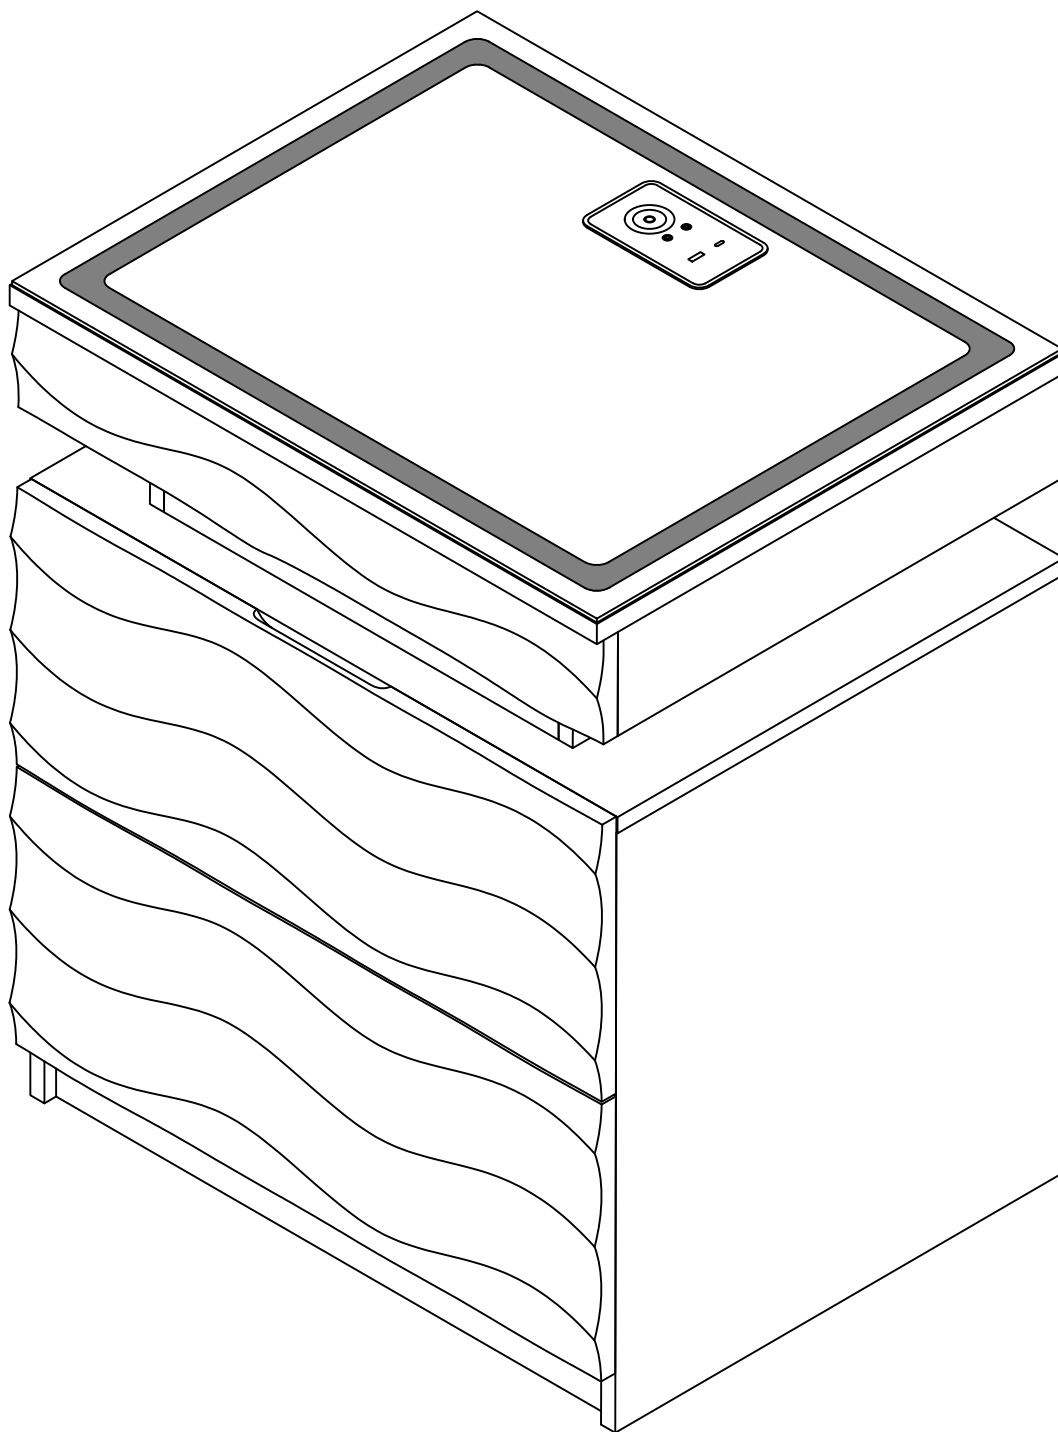


Step 47


Ⓔ



x4

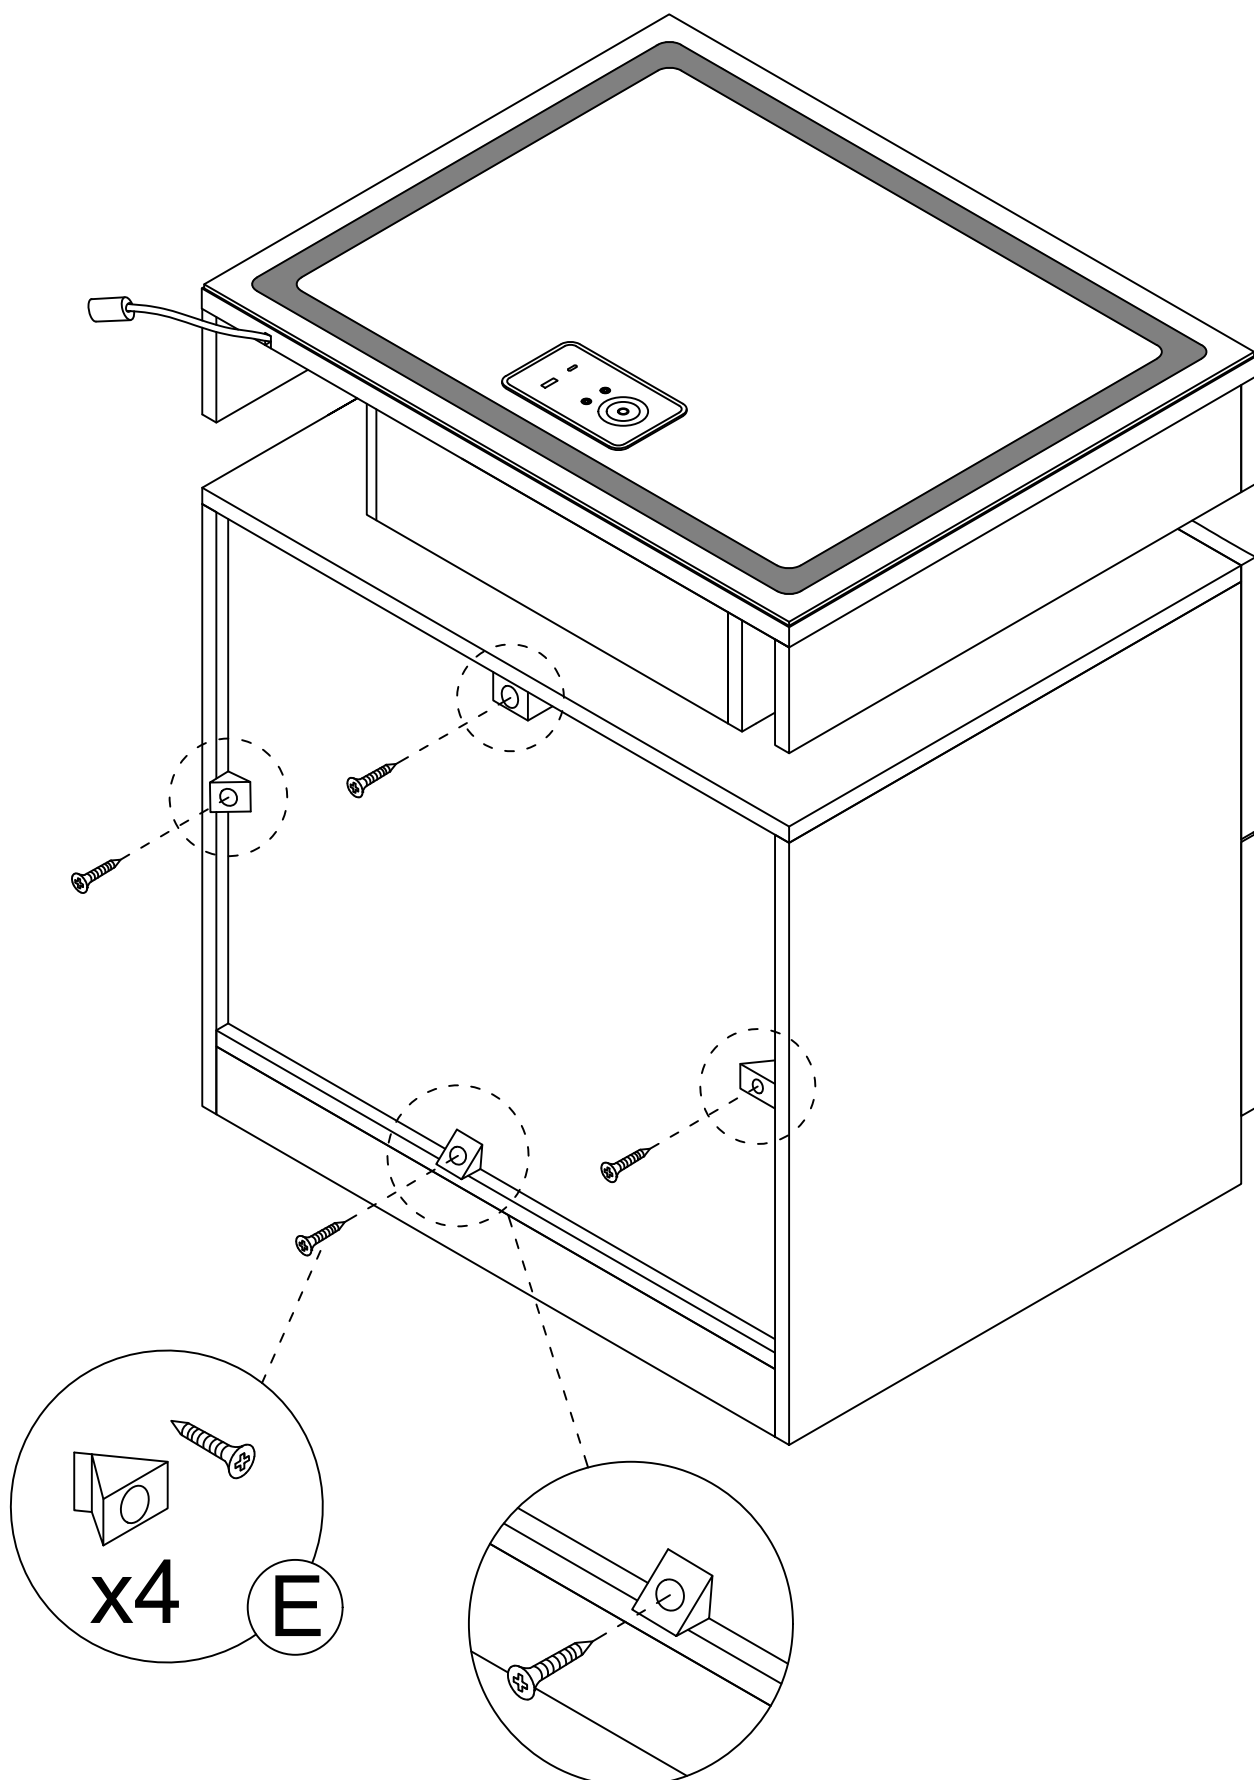

Step 48

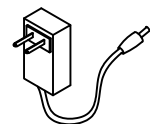

x1

