


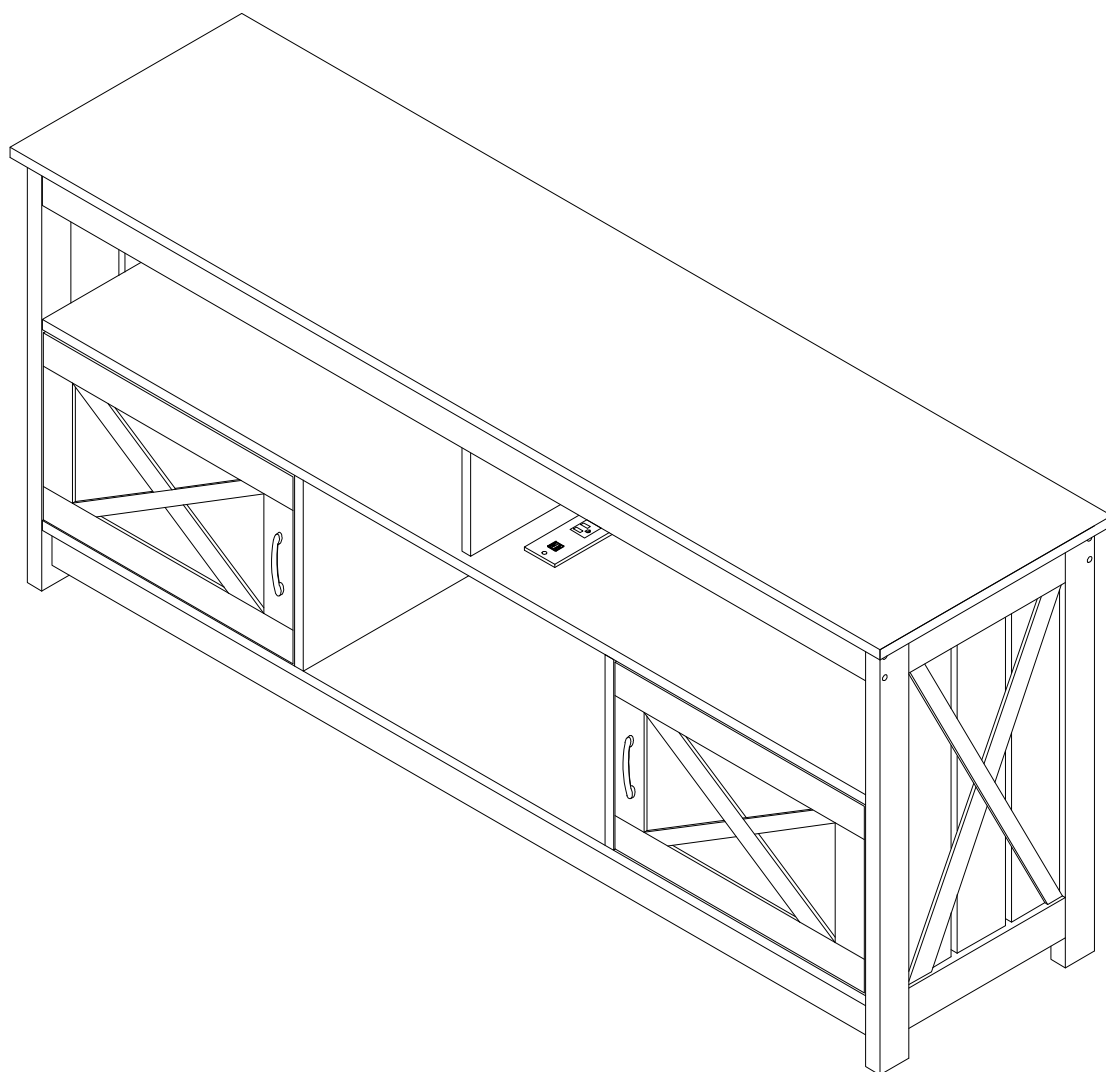

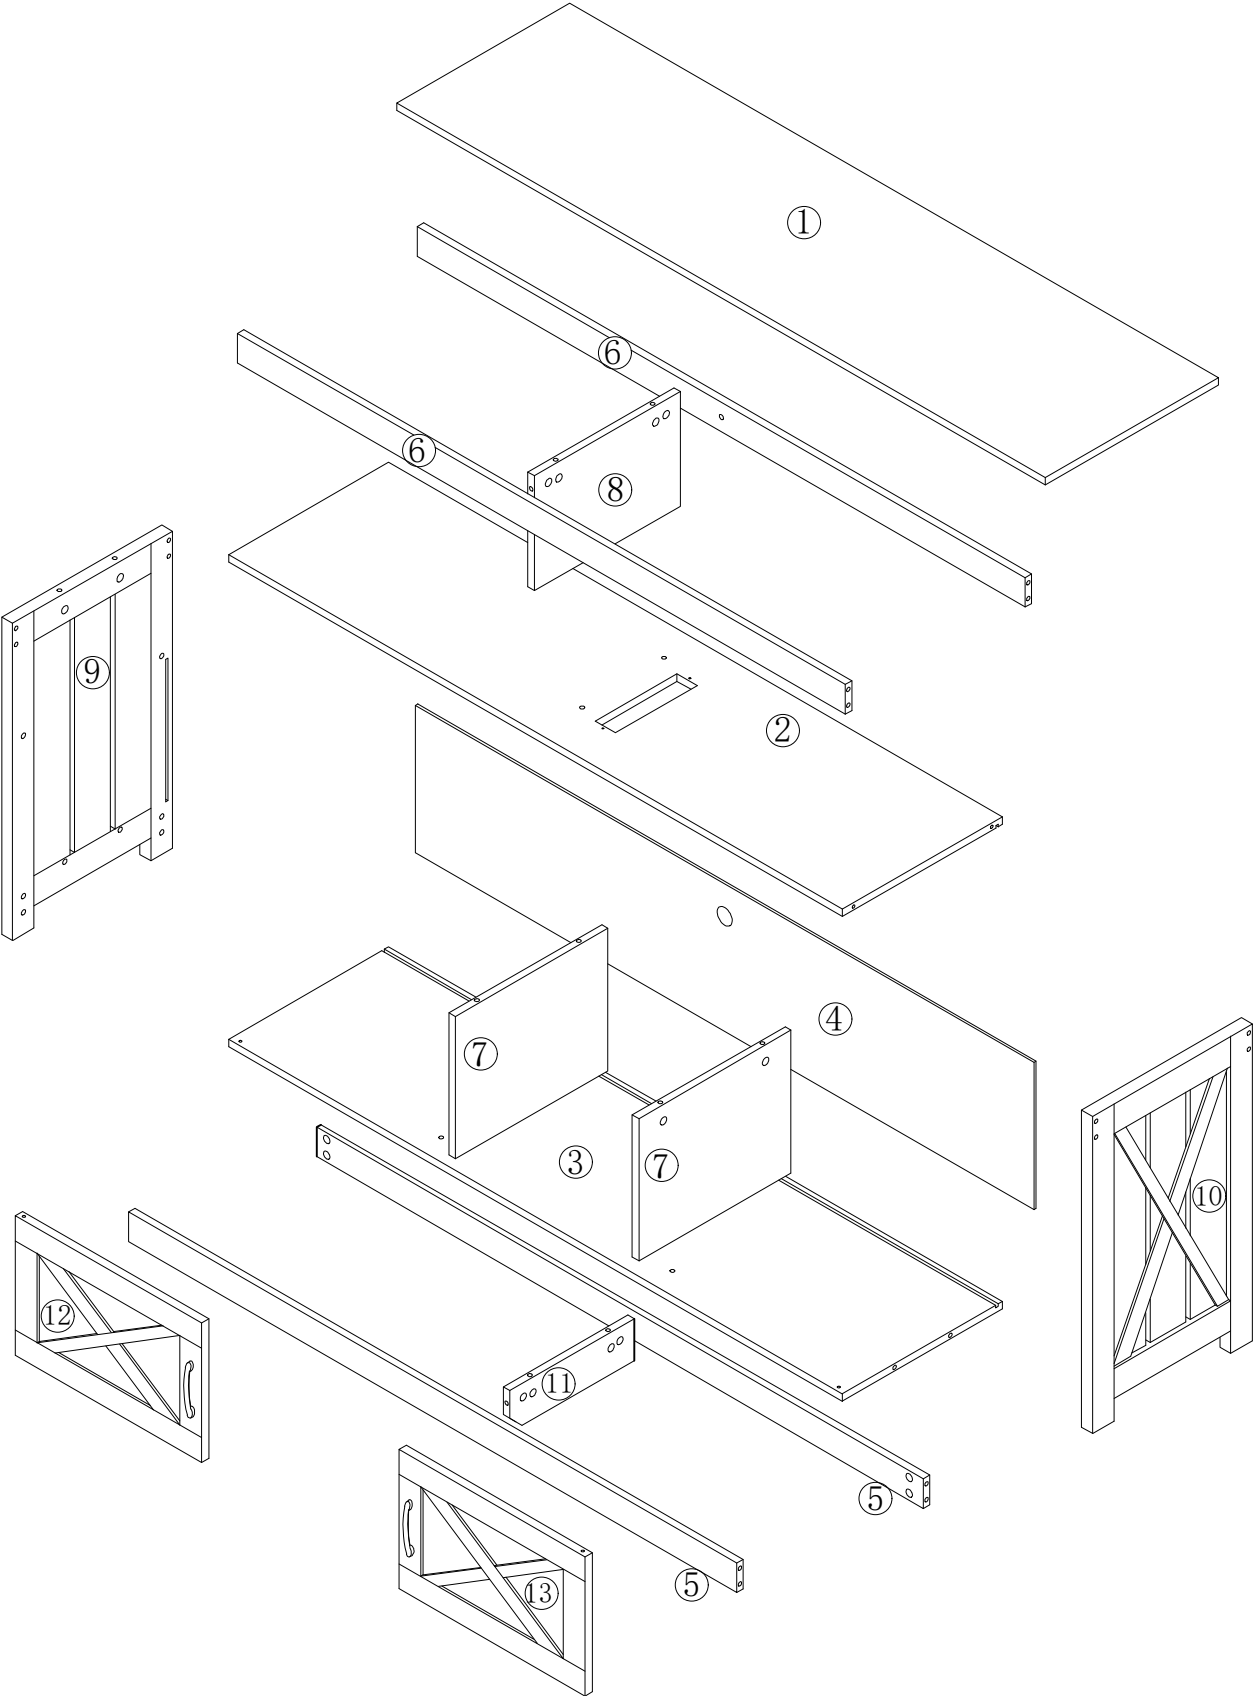
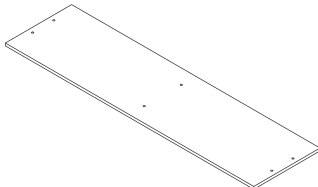
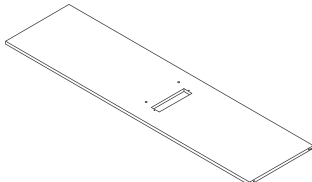
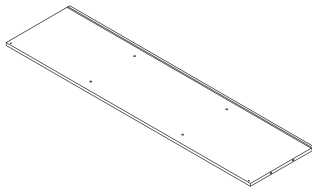
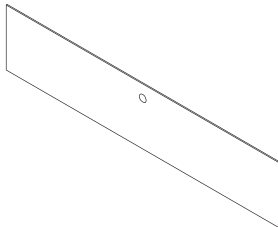
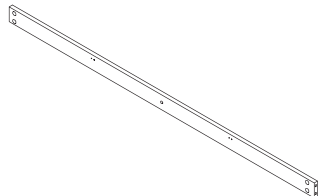
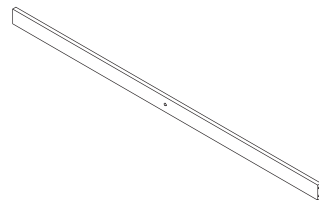




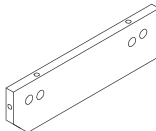


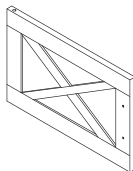

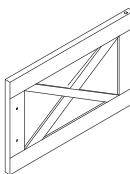


IMPORTANT,RETAIN FOR FUTURE REFERENCE:READ CAREFULLY

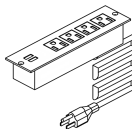


1	2	3	4			
						
1PCS	1PCS	1PCS	1PCS			
5	6	7	8			
						
2PCS	2PCS	2PCS	1PCS			
9	10	11	12	13		
						
1PCS	1PCS	1PCS	1PCS	1PCS		
A	B	C	D	E	F	G
						
32PCS	32PCS	M3. 5*14 32PCS	M7*38 6PCS	M7*48 8PCS	1PCS	4PCS
H	I	J	K	L	M	
						
H1 		J1 2PCS J2 				
2PCS	4PCS	M4*20 4PCS	6PCS	8PCS	8PCS	

STEP1

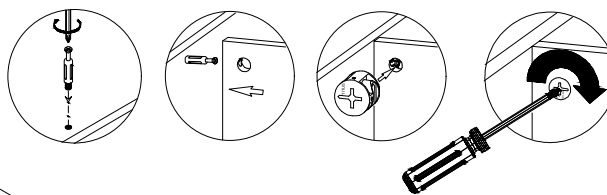


A		4PCS
B		4PCS
2		1PCS
7		2PCS

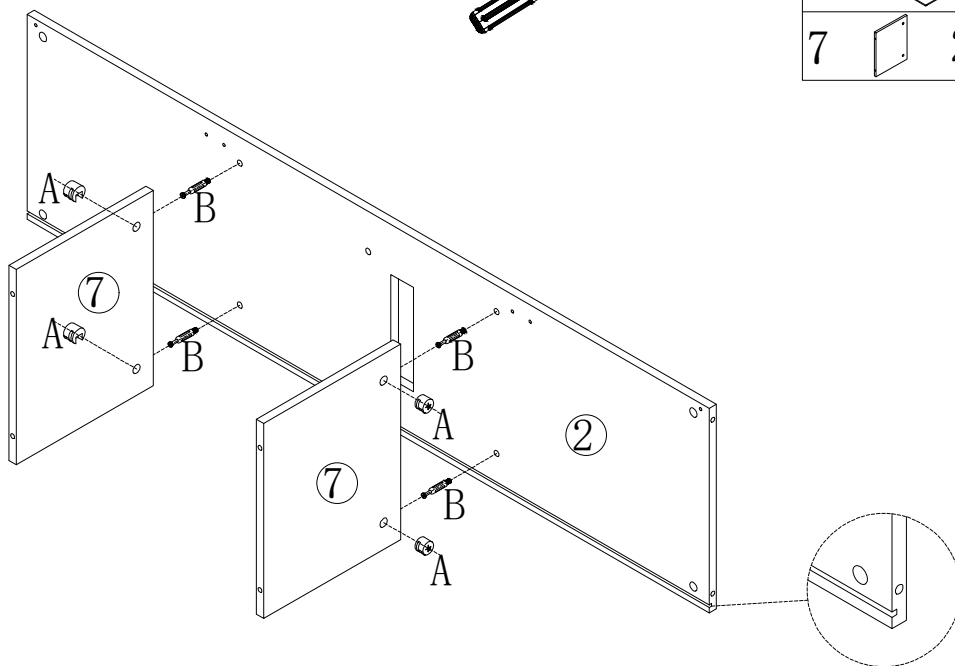


STEP2

D		4PCS
3		1PCS


NOTE: The side with the long slots is for mounting the (4) thin backing plate, please follow the enlarged picture for correct mounting.

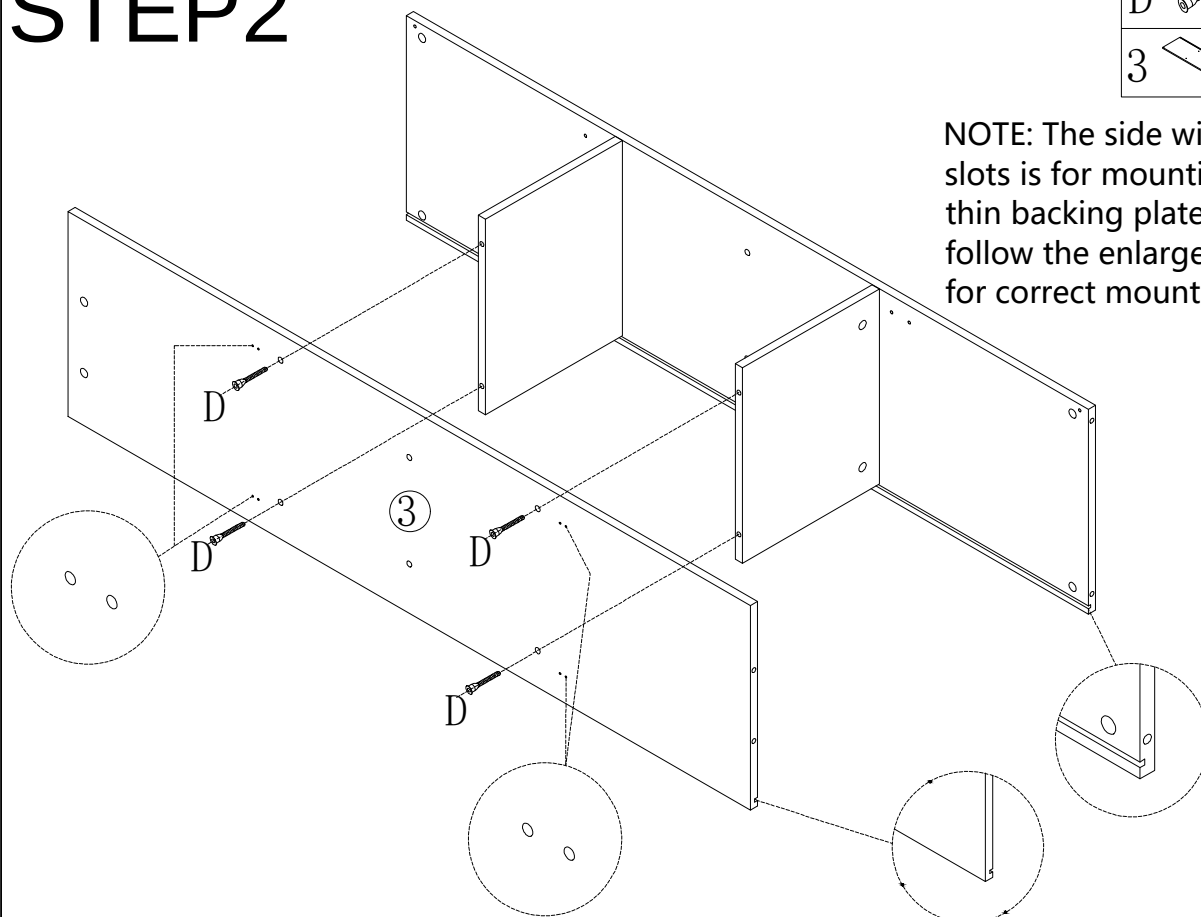




STEP3


A		2PCS
B		2PCS
11		1PCS

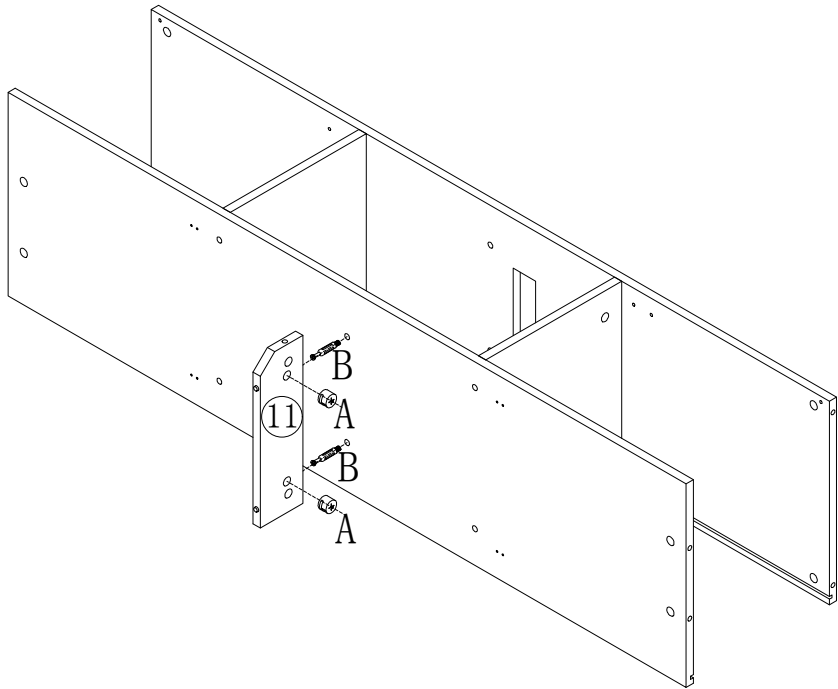

STEP4


A		2PCS
B		2PCS
5		2PCS

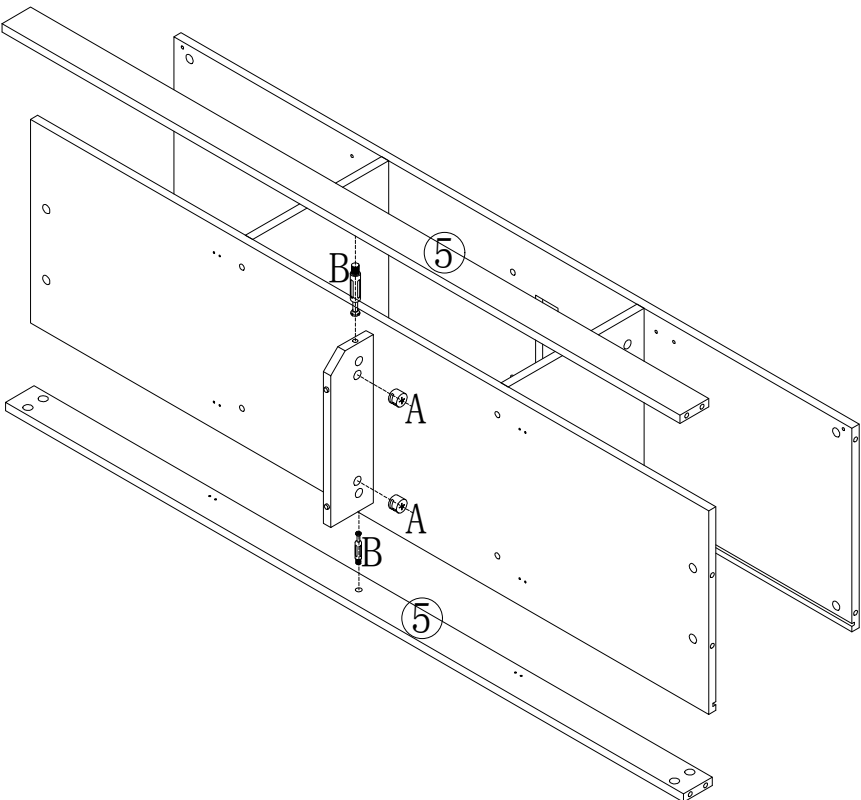




STEP5

B		8PCS
9		1PCS

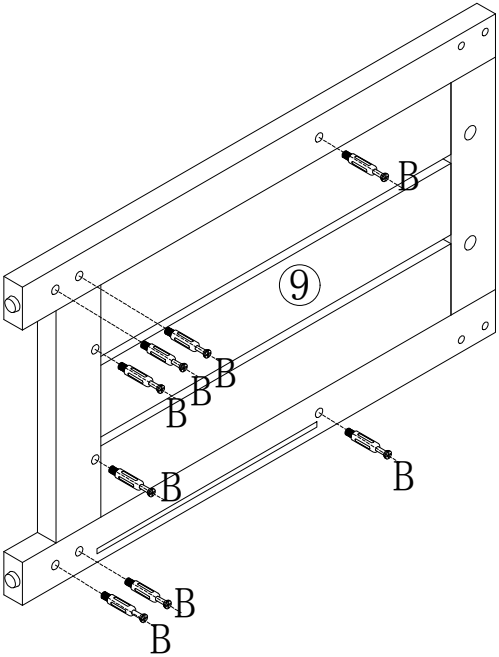

STEP6


A		8PCS
---	---	------

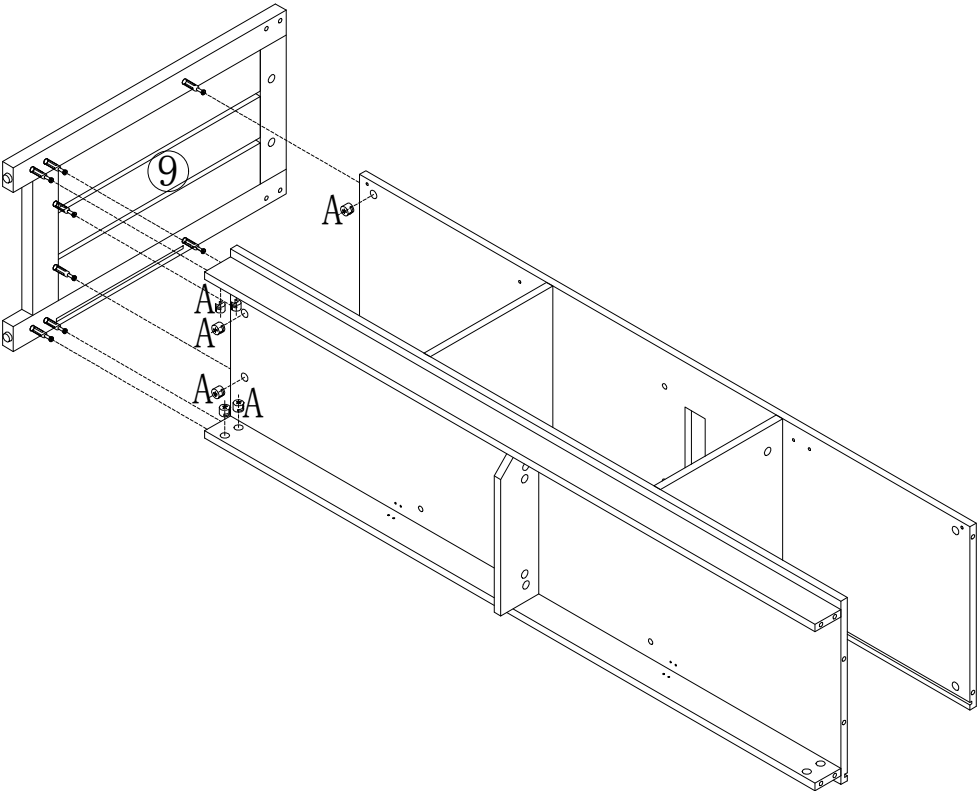




STEP7


4  1PCS

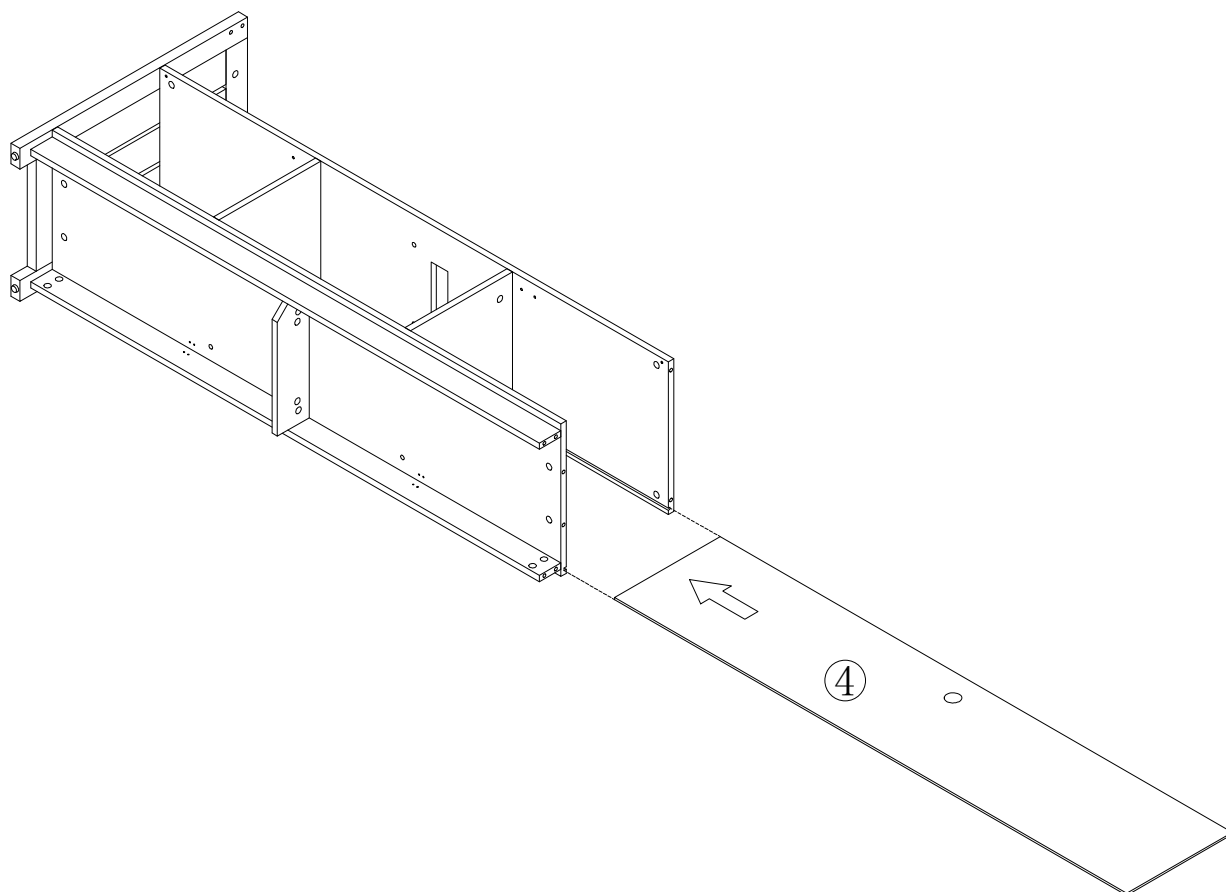




STEP8

B		8PCS
10		1PCS

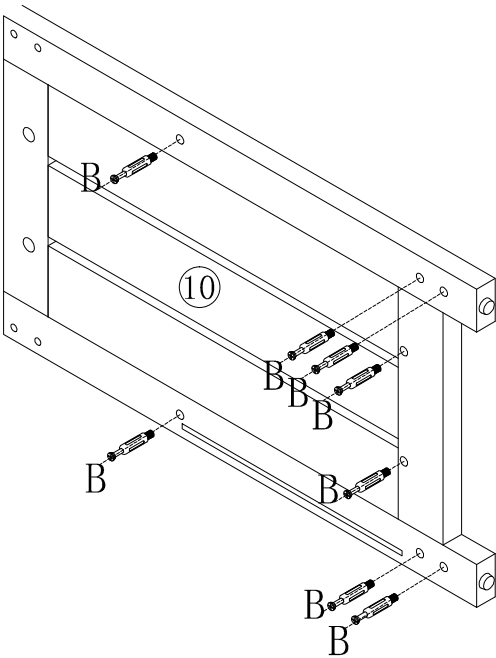


STEP9

A		8PCS
---	---	------

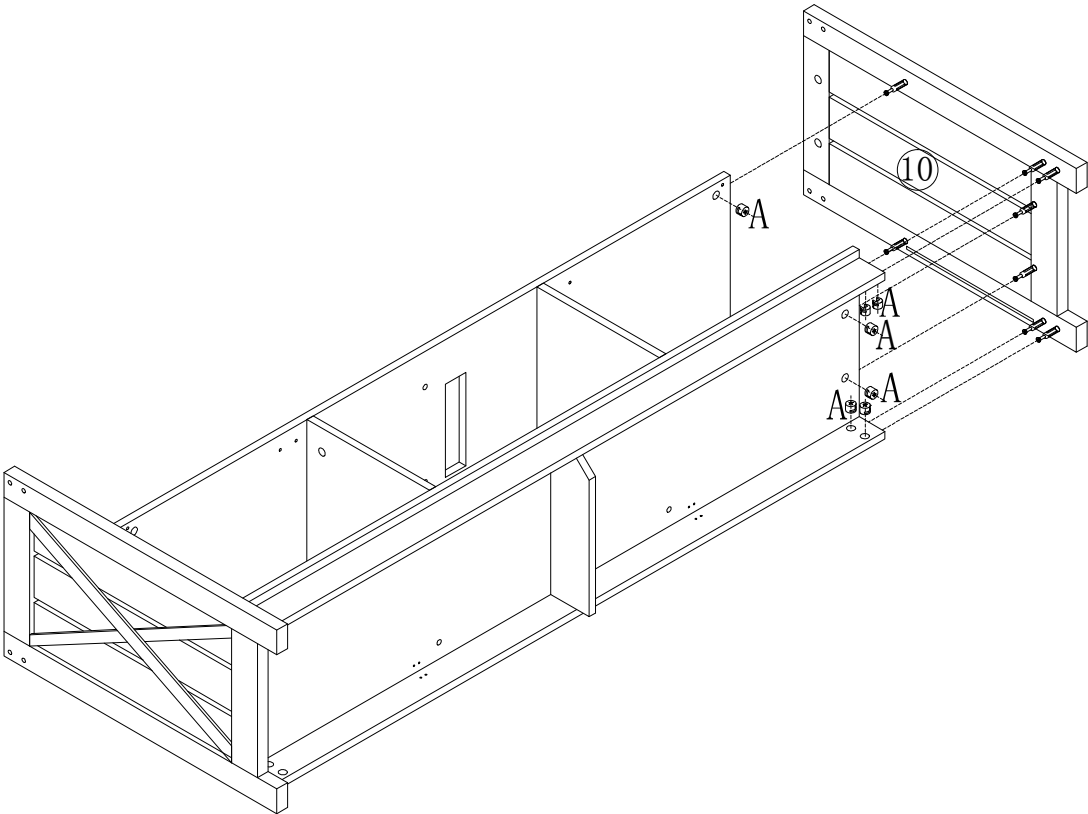


STEP10

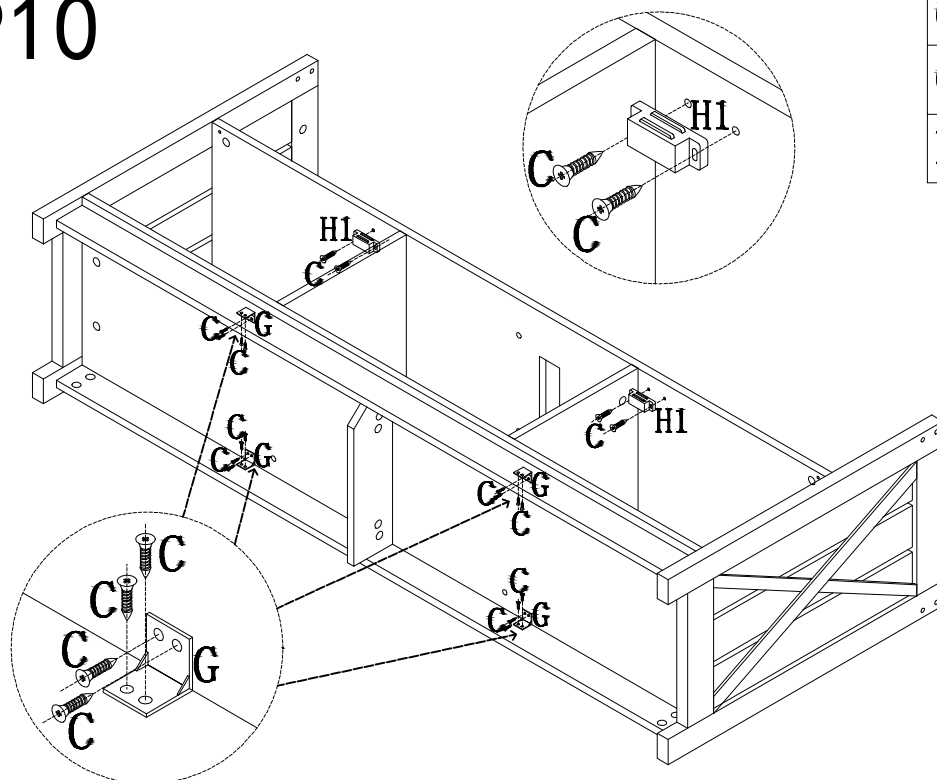


C		20PCS
G		4PCS
H1		2PCS

STEP11


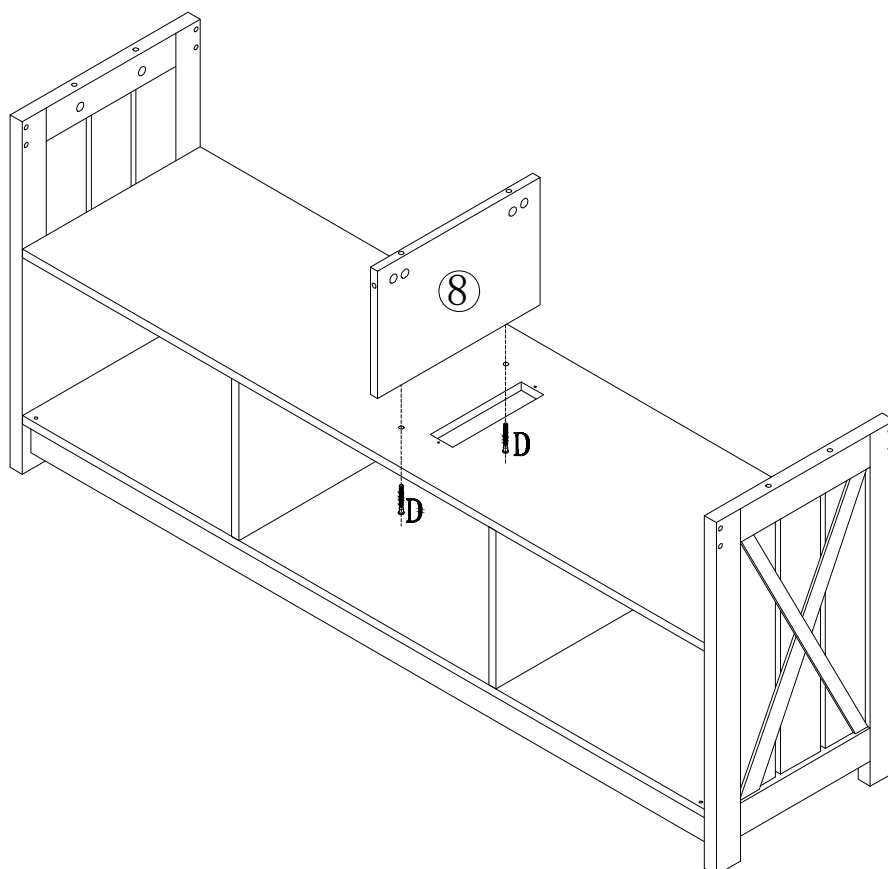


D		2PCS
8		1PCS




STEP12


C		2PCS
F		1PCS

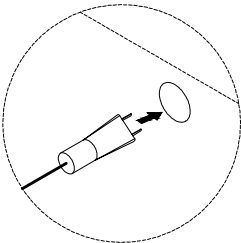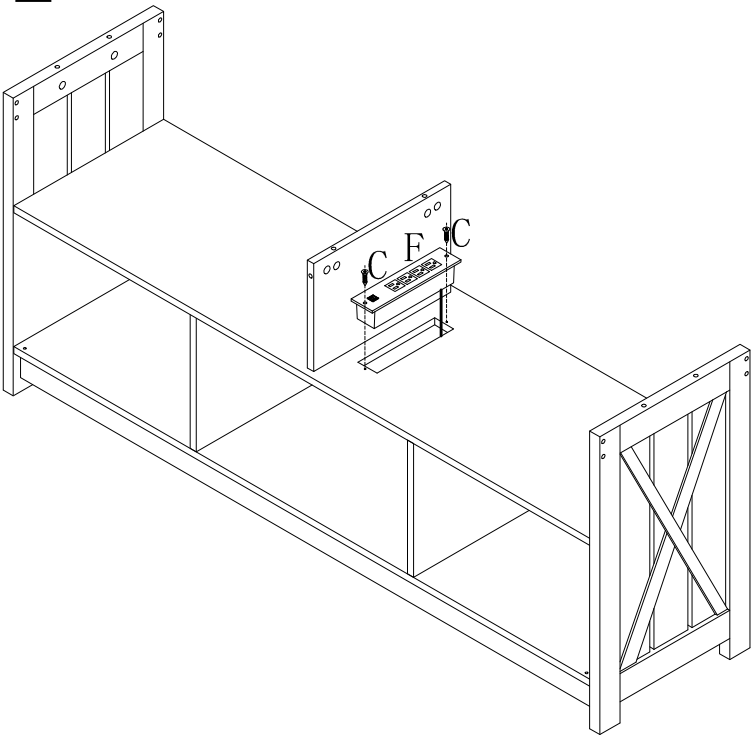

STEP13


A		2PCS
B		2PCS
6		2PCS

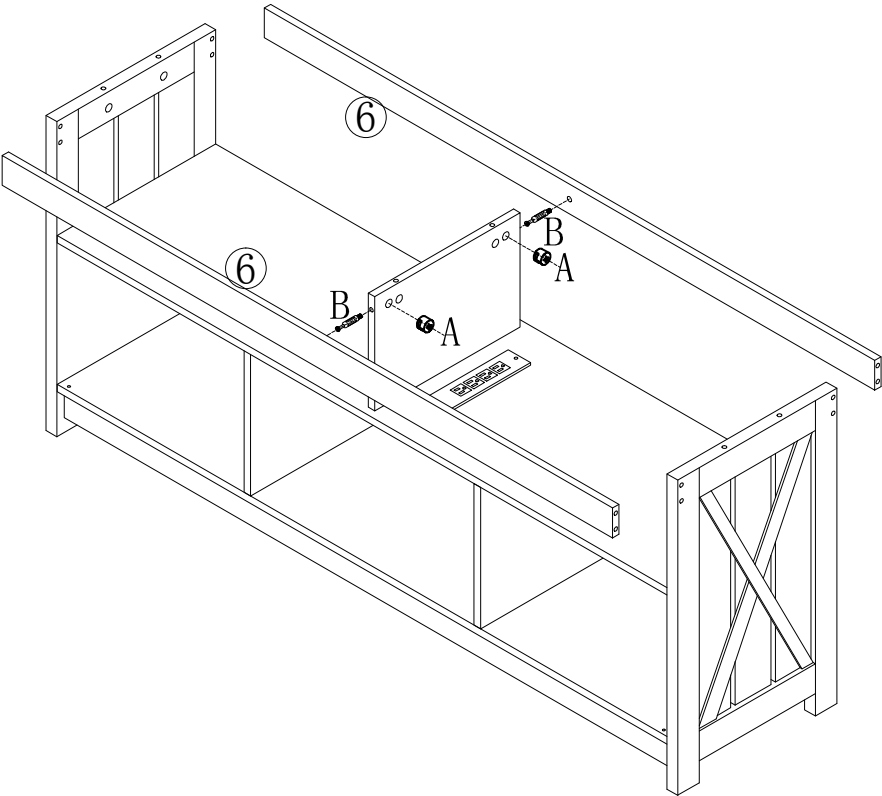



STEP14

E  8PCS

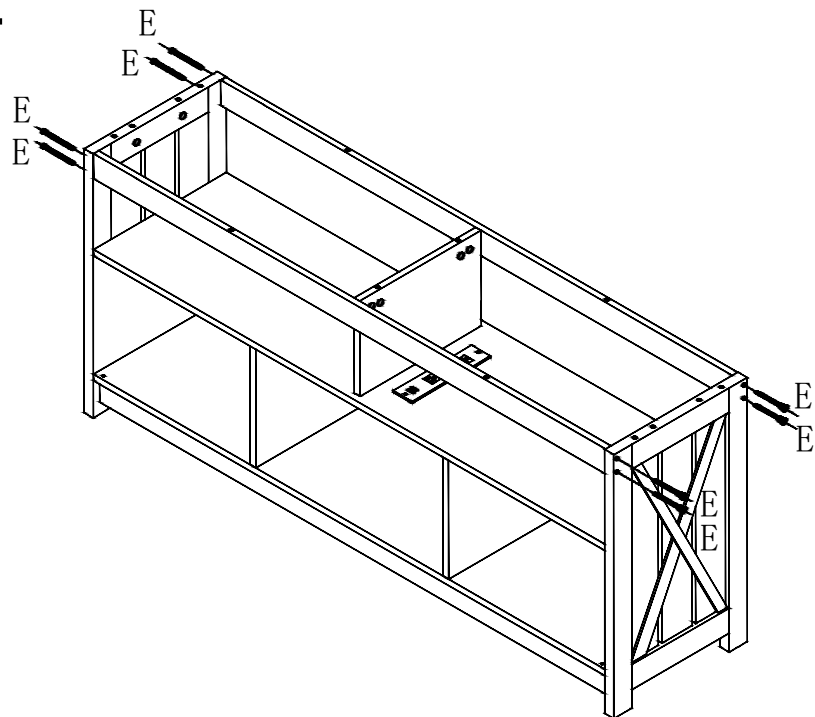


STEP15

A  6PCS

B  6PCS


M  8PCS

1  1PCS

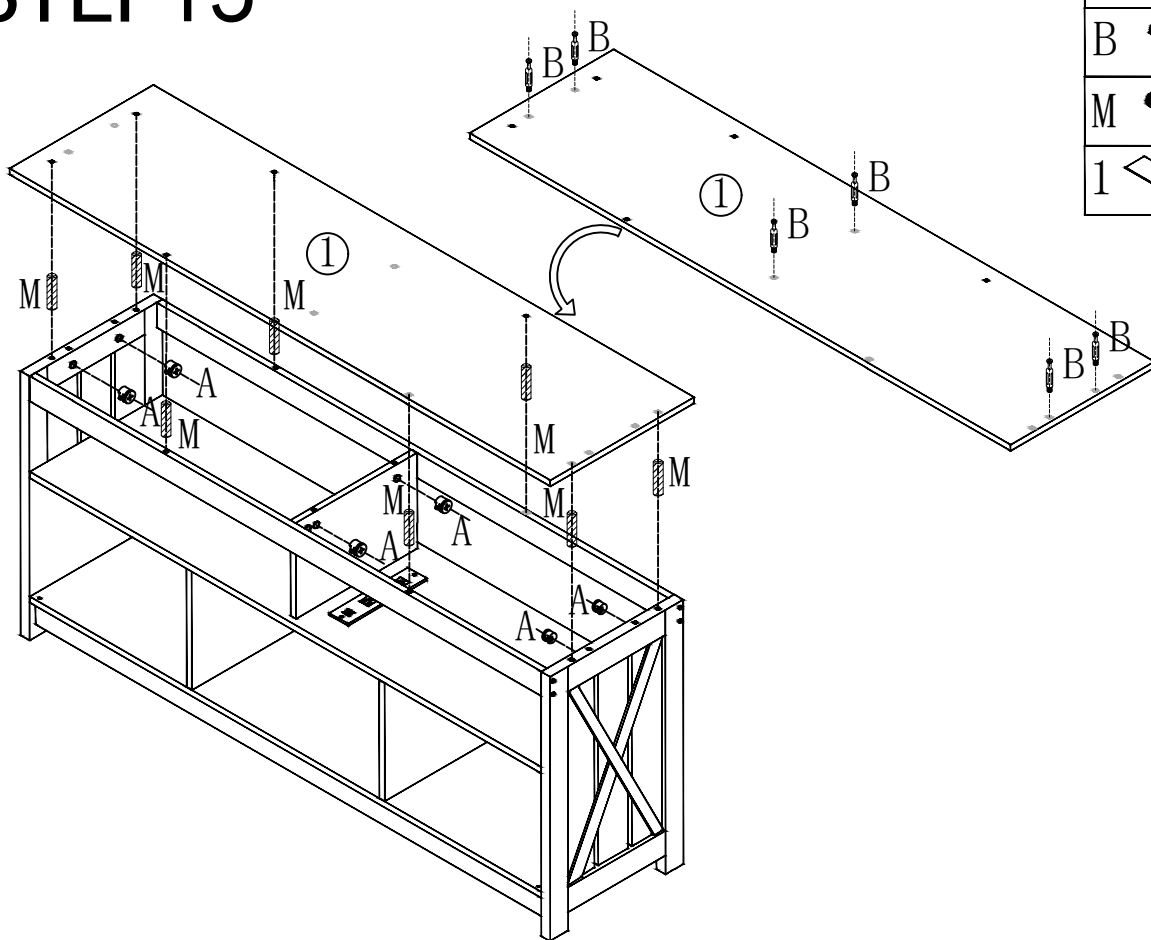


STEP16


C		4PCS
H2		2PCS
I		4PCS
J1		2PCS
J2		4PCS
12		1PCS
13		1PCS

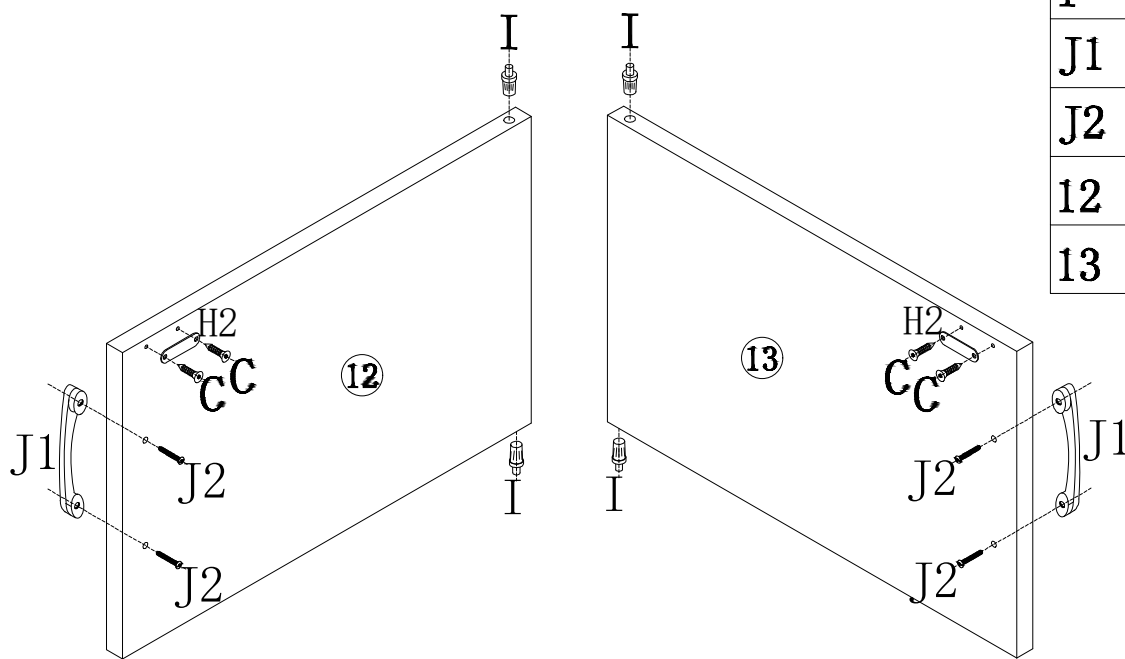


STEP17

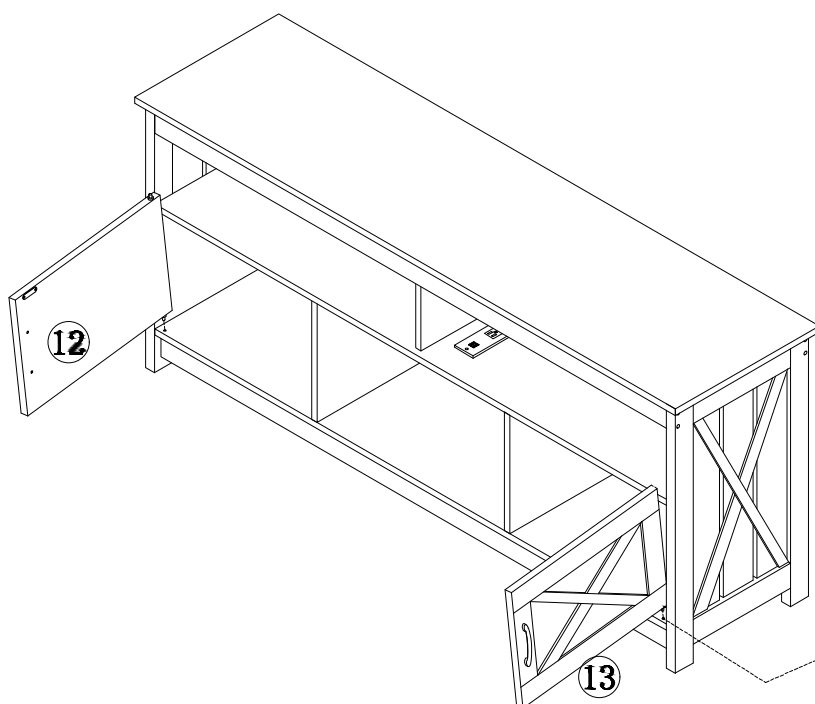

Note: As shown in the picture below, please press down the shrapnel shaft by hand, align the shrapnel shaft with the pre-drilled hole and release it.


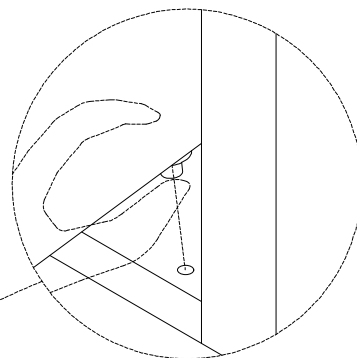




STEP18

C  6PCS

K  6PCS

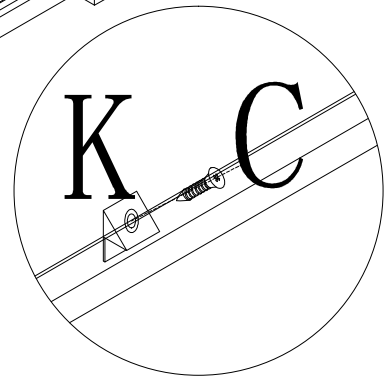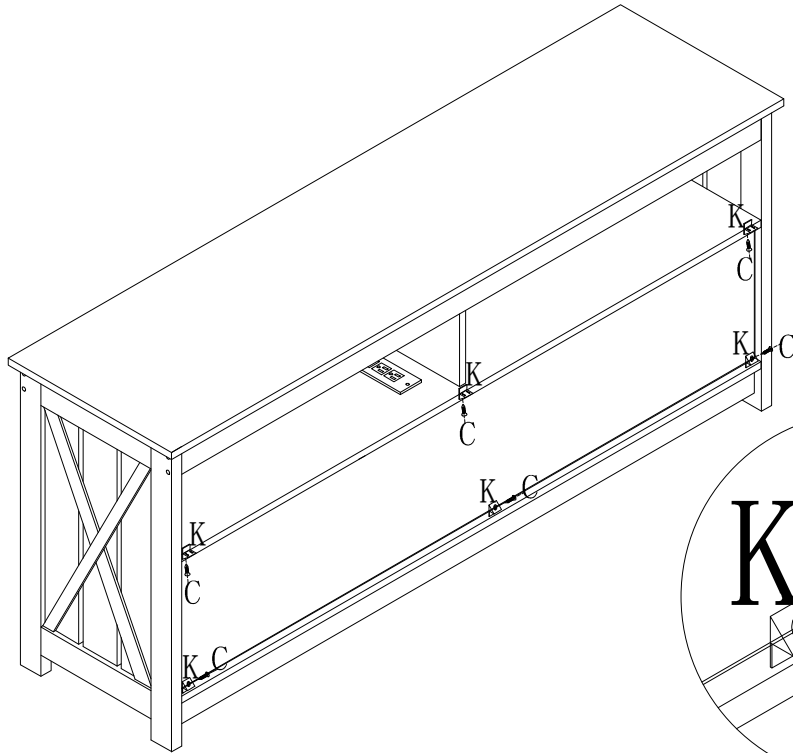

STEP19

L  8PCS

