




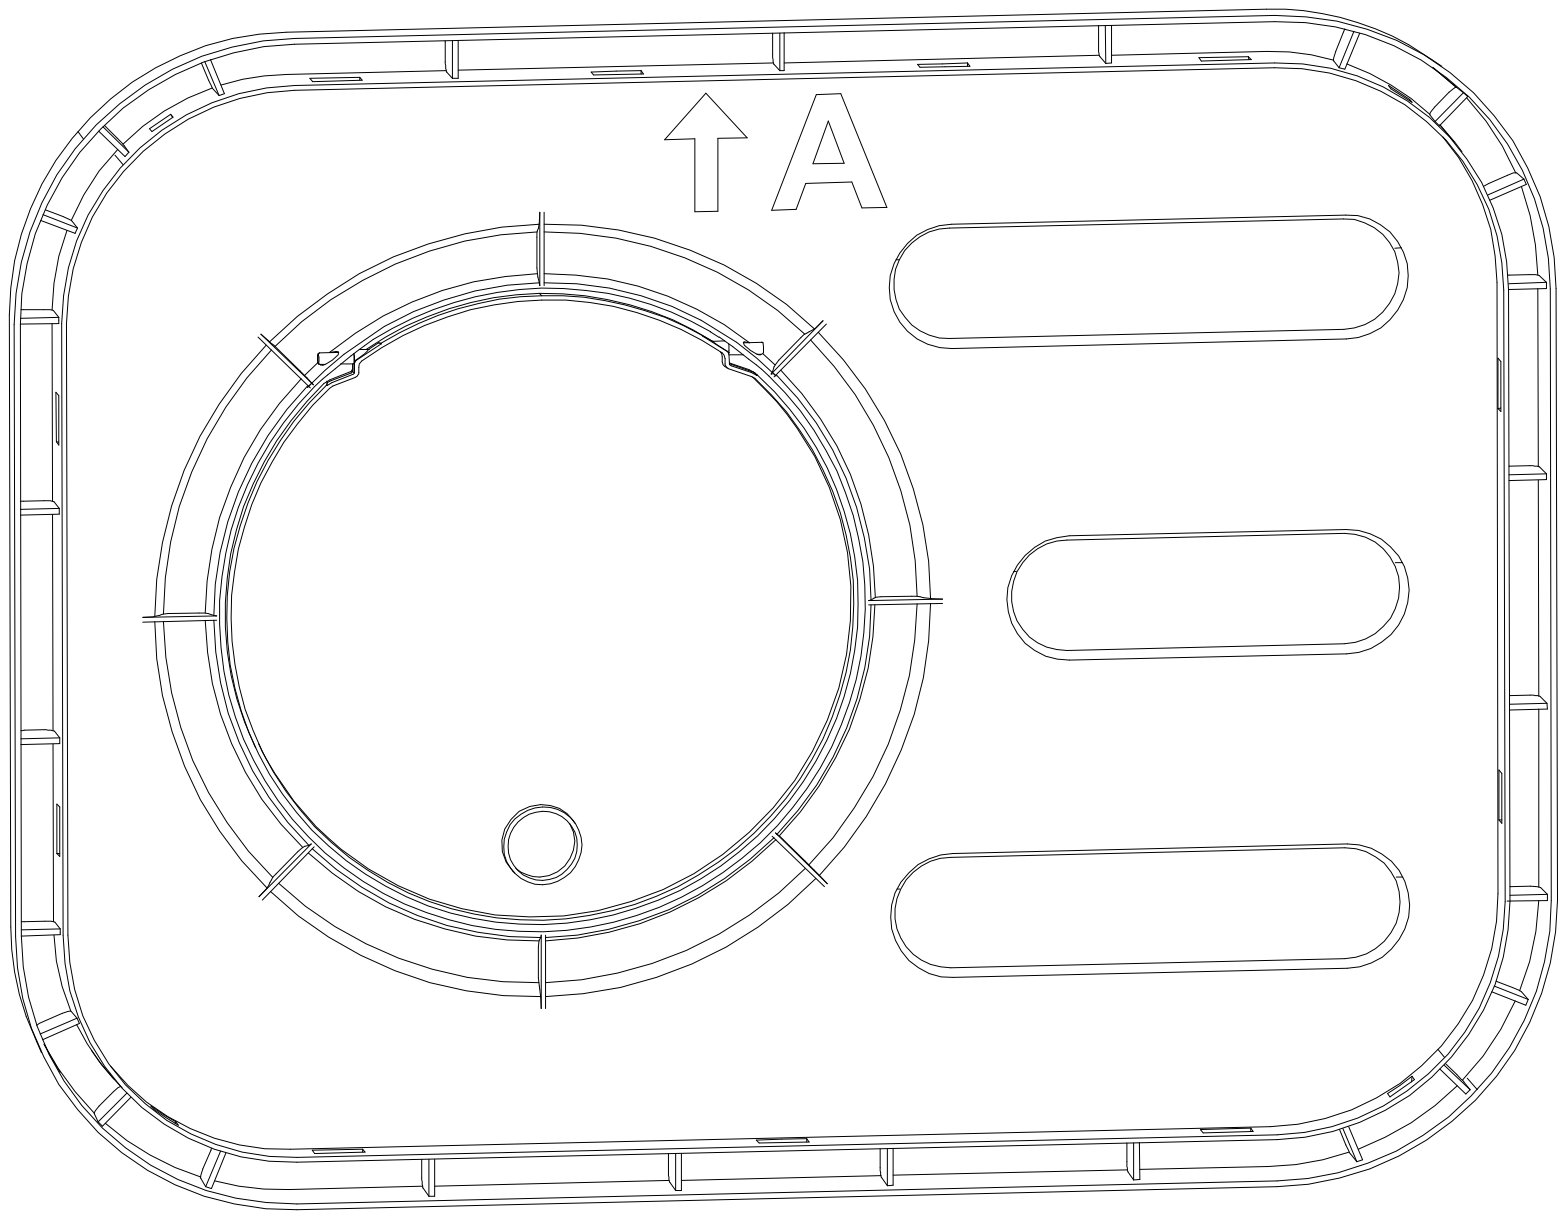


A(X1)

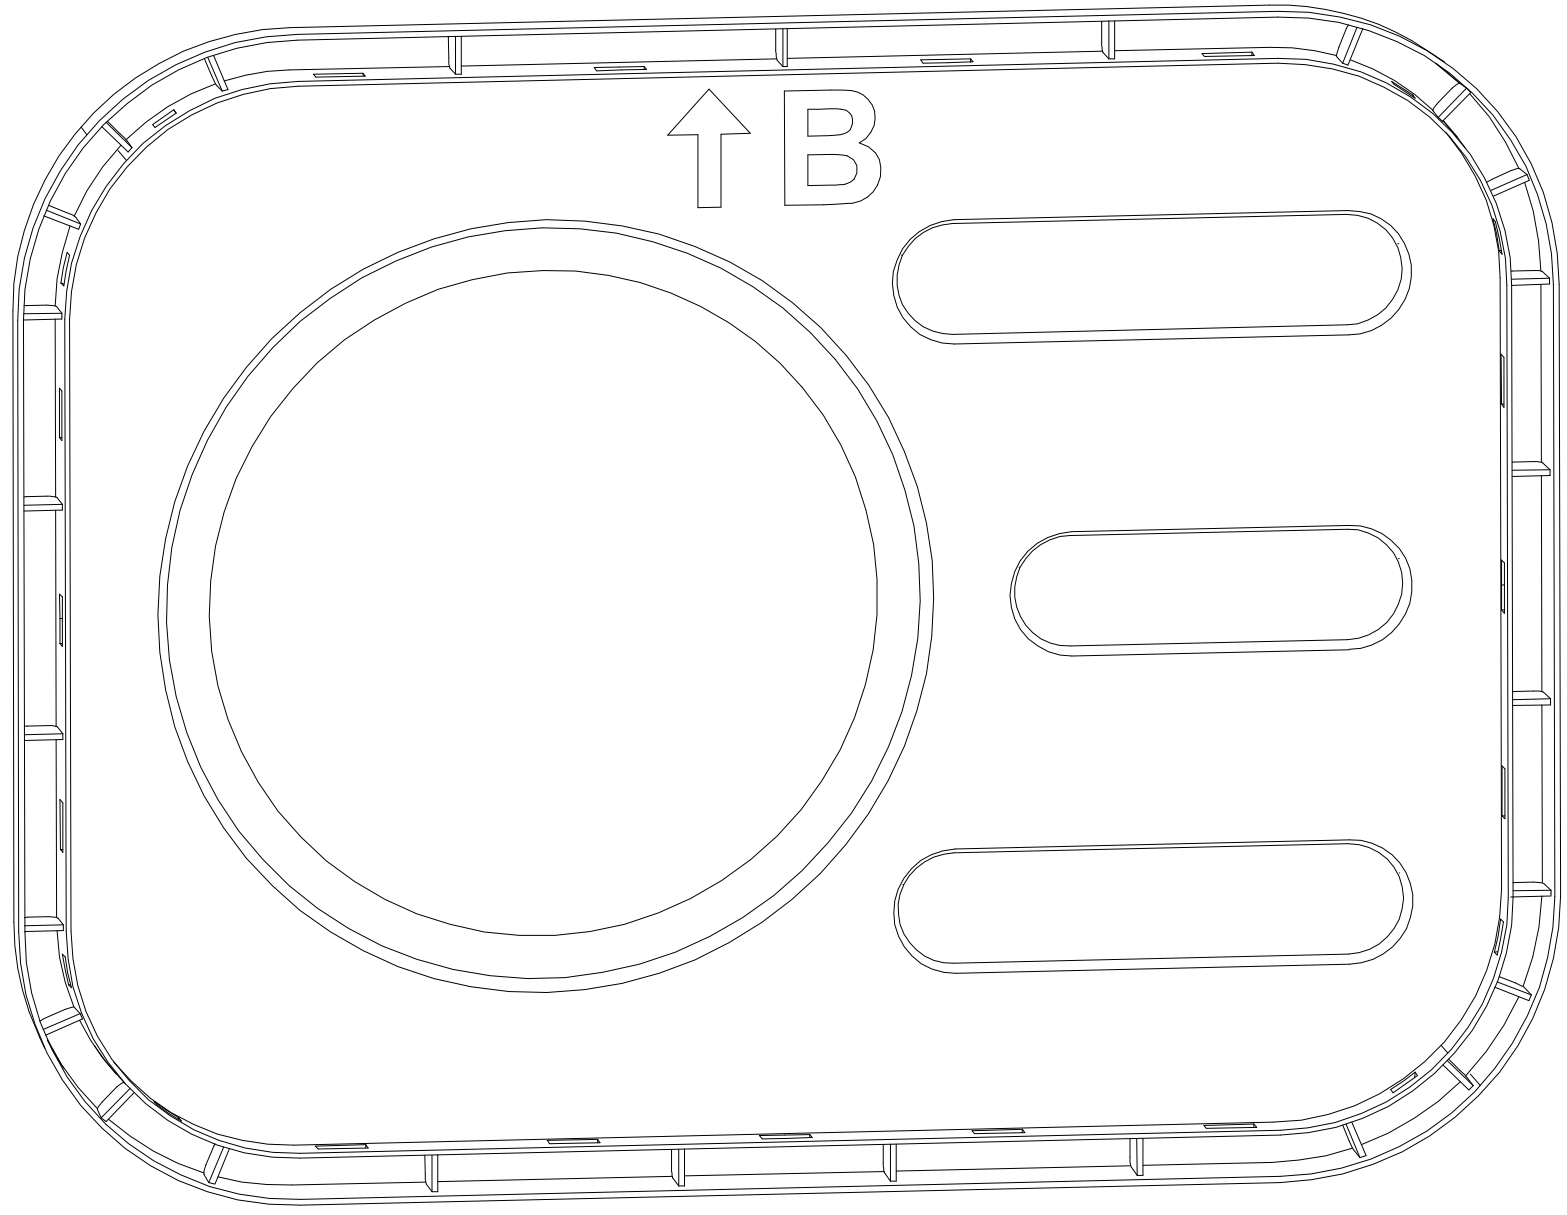


B(X1)

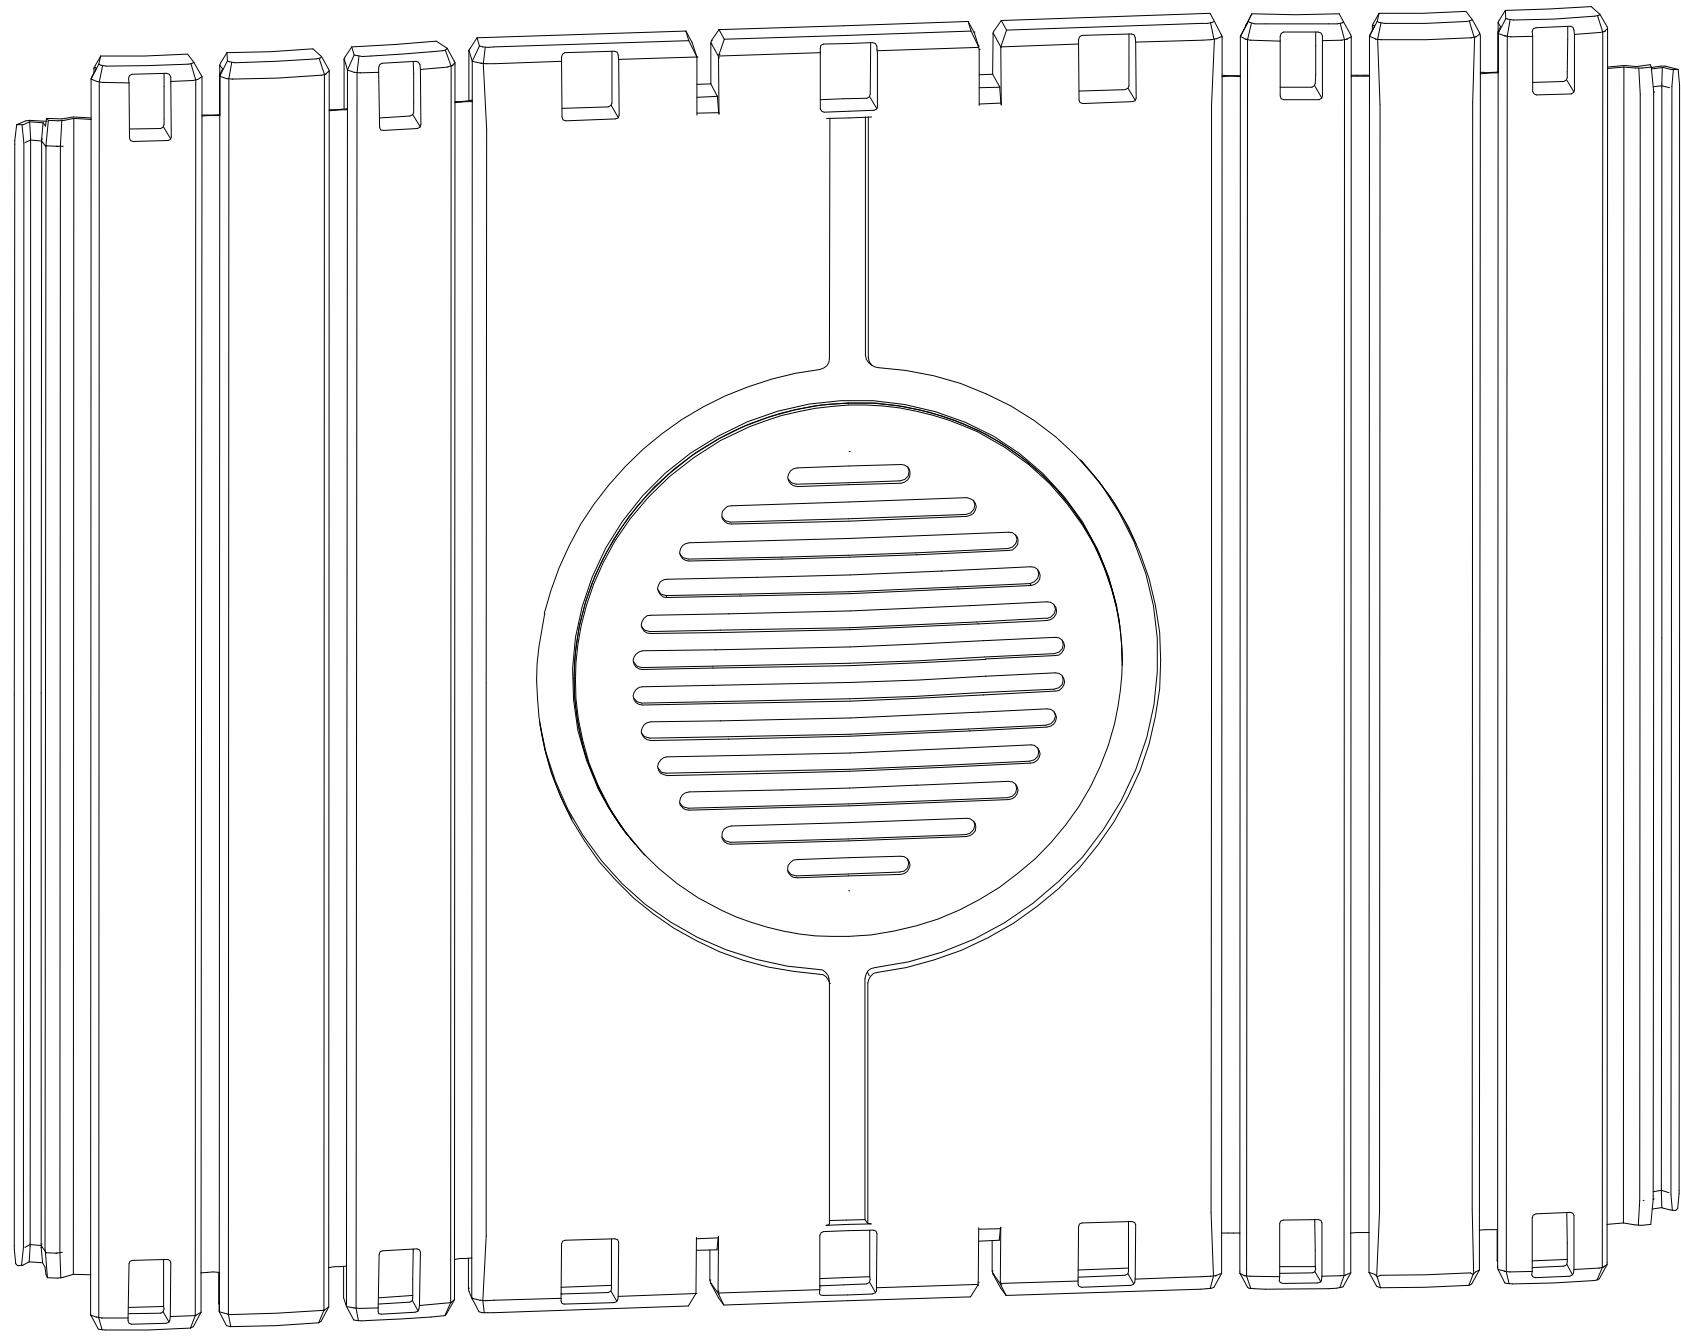


C(X2)

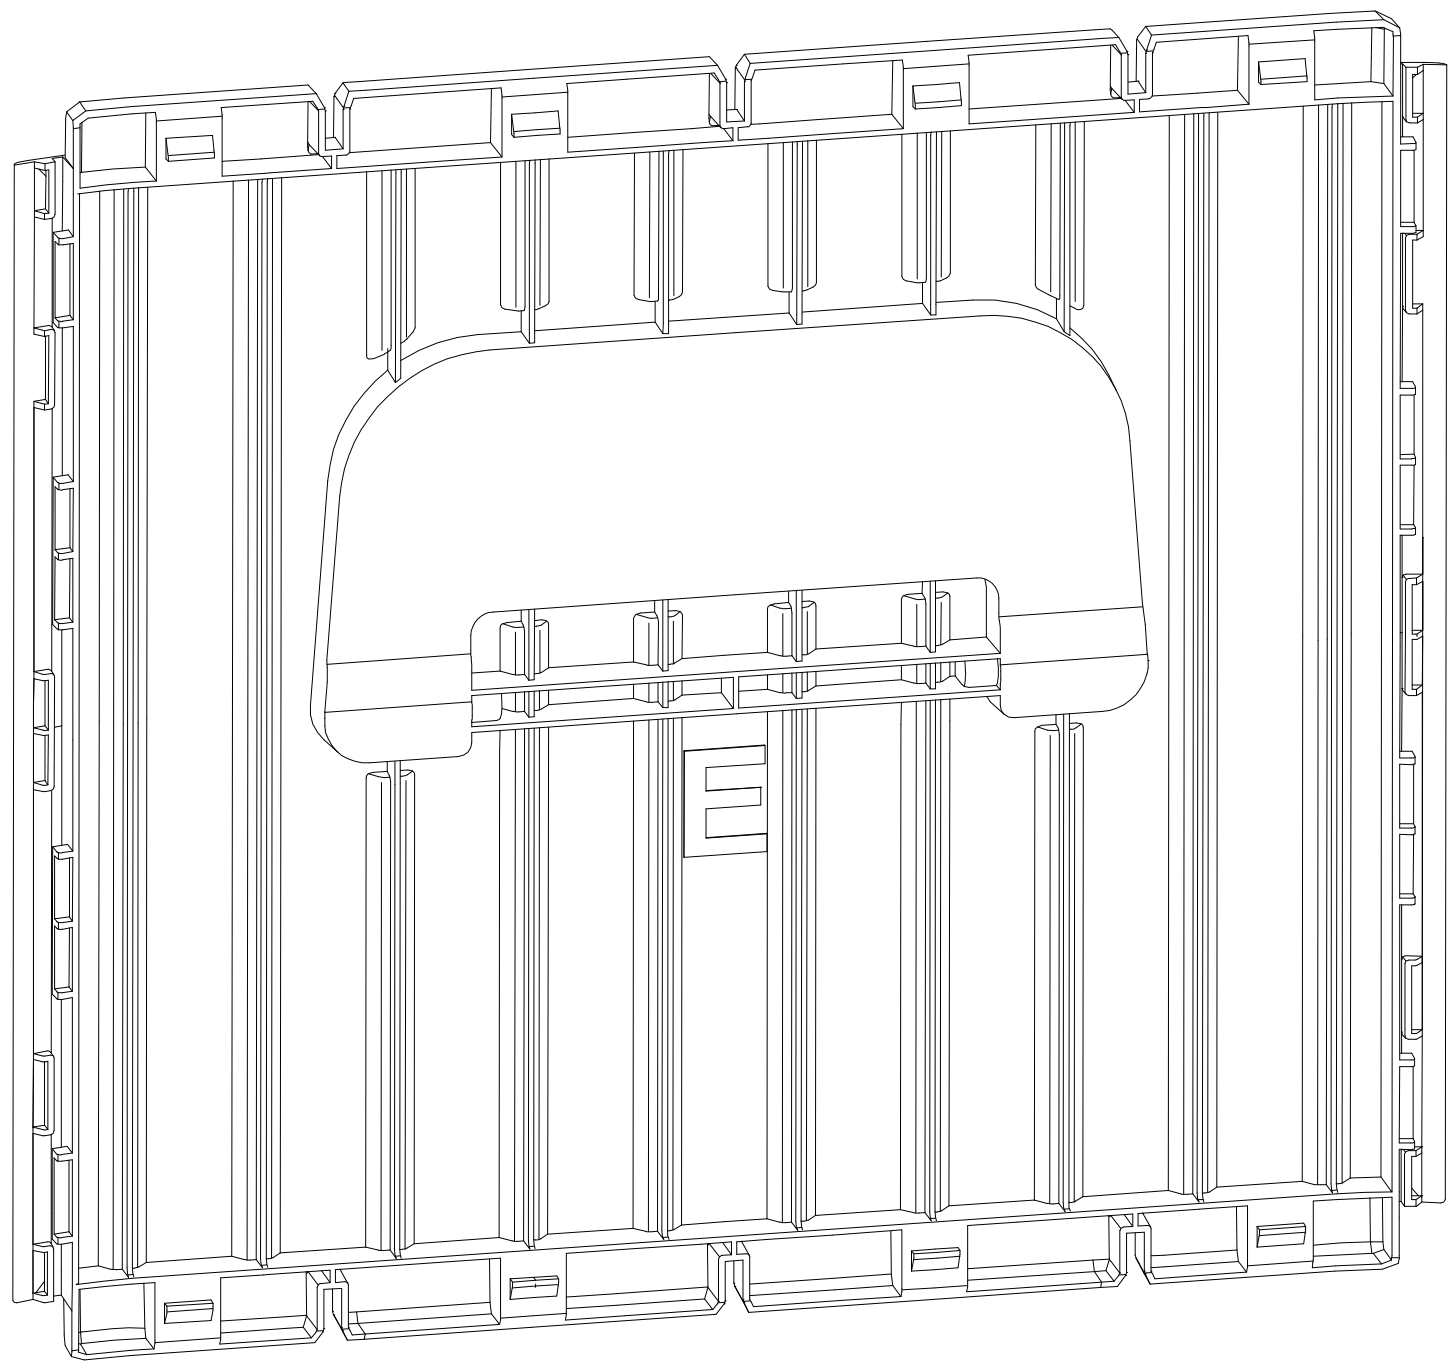


E(X1)

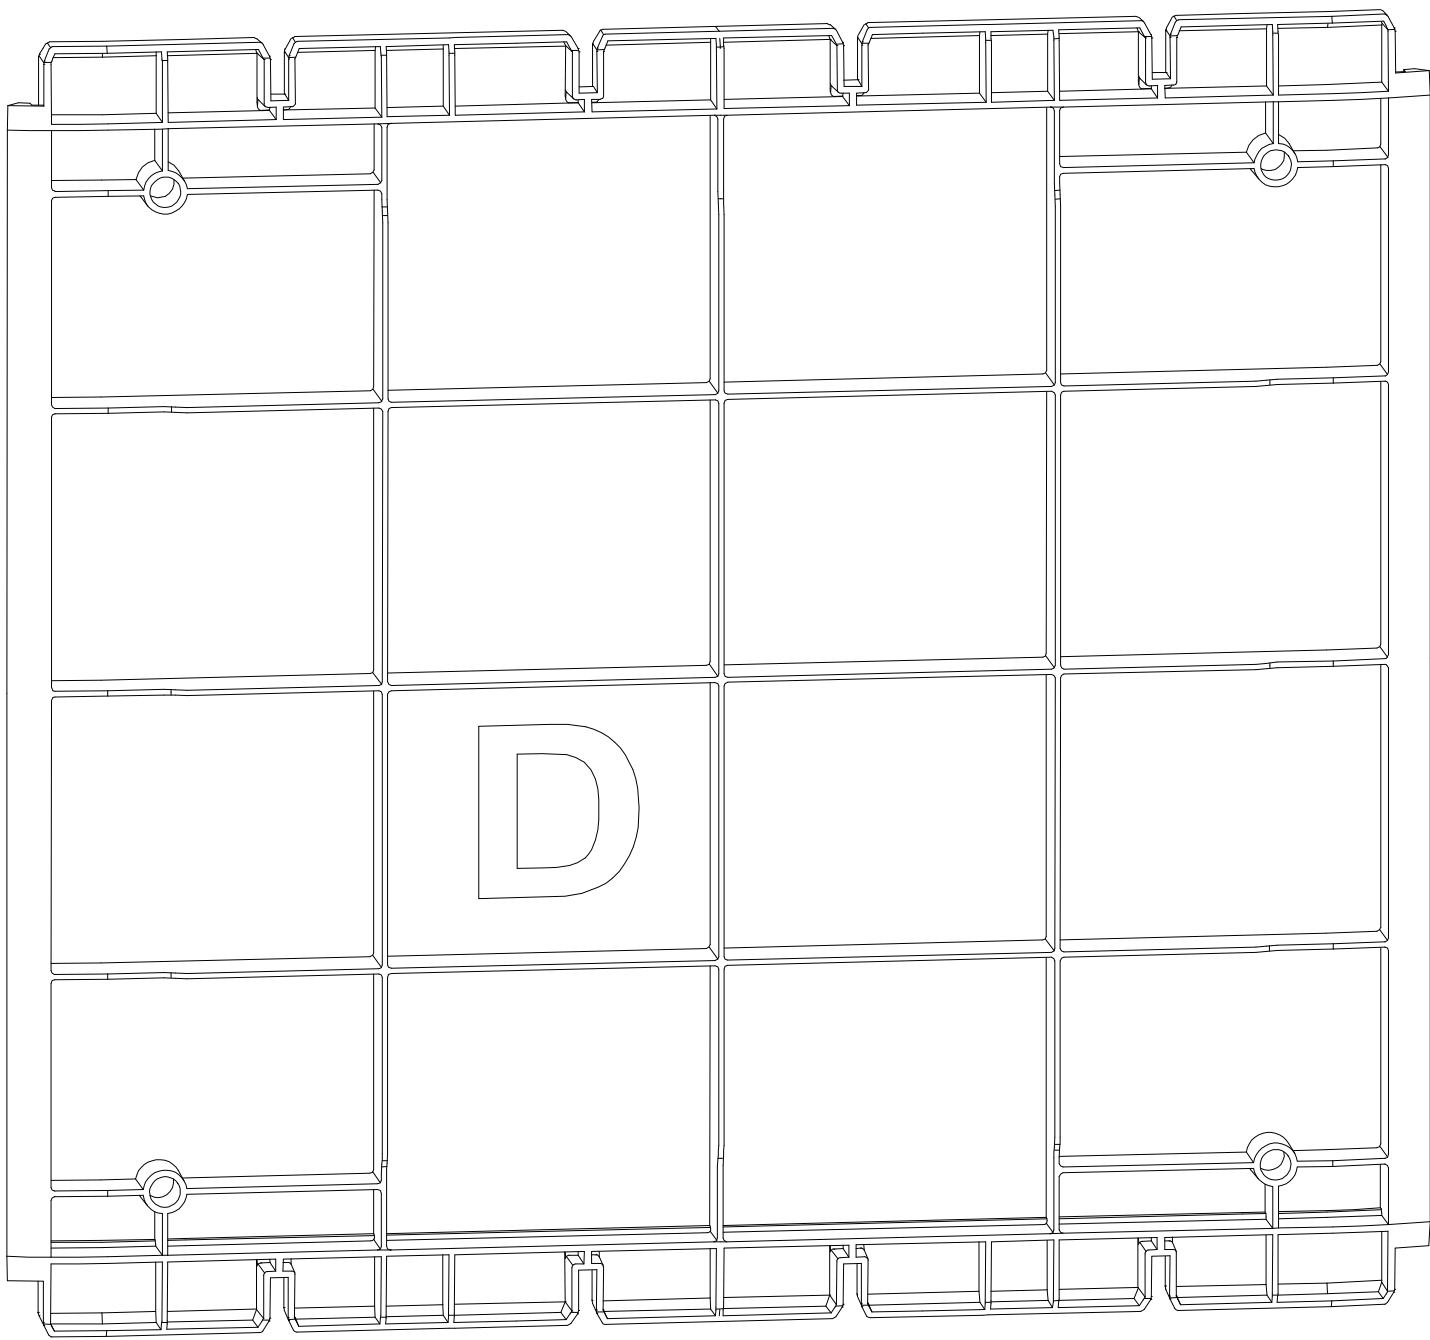


D(X1)

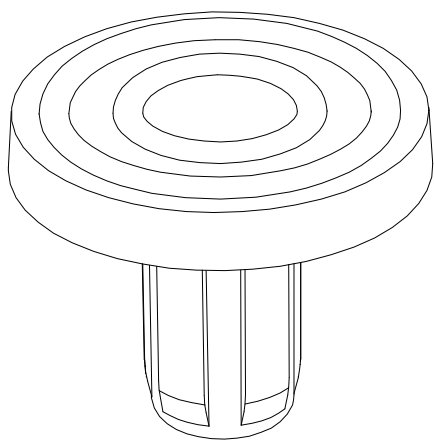

(X4)

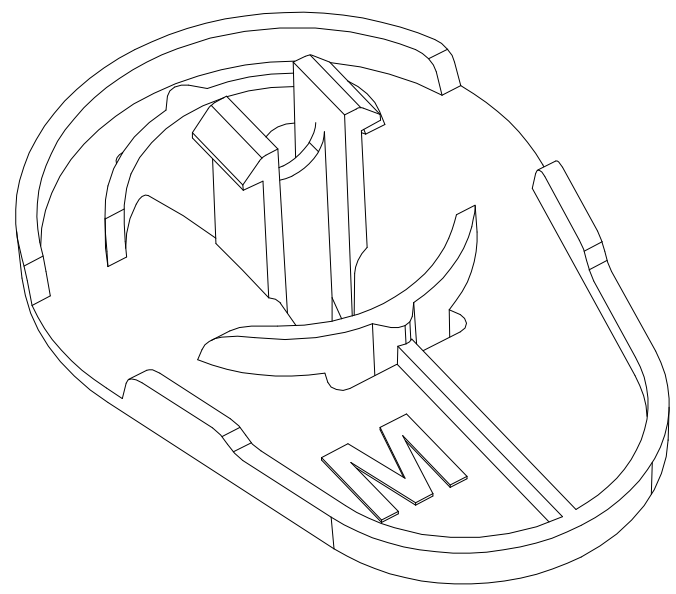


M(X1)

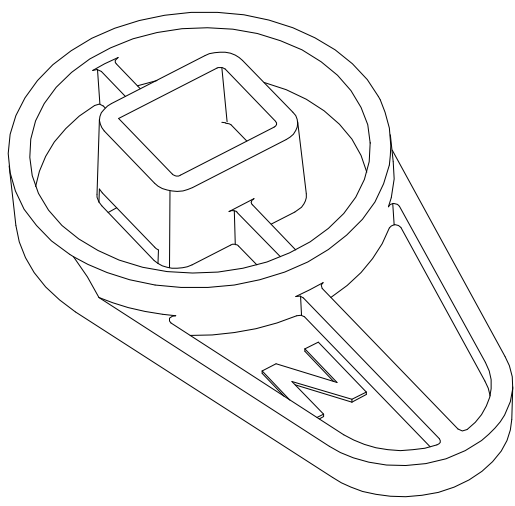


N(X1)

1

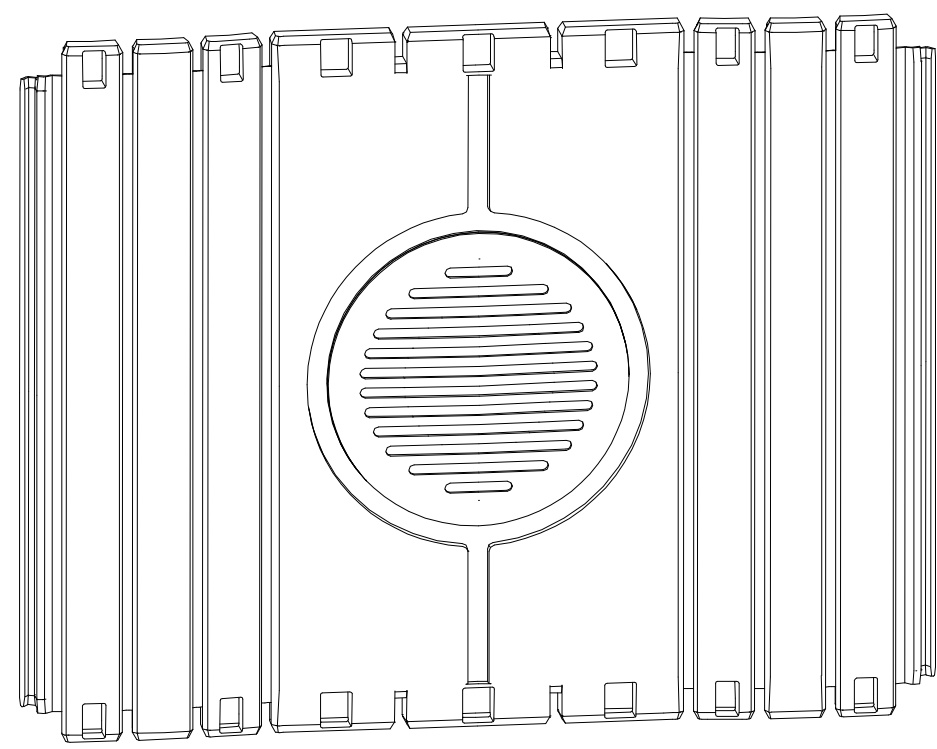


C(X2)

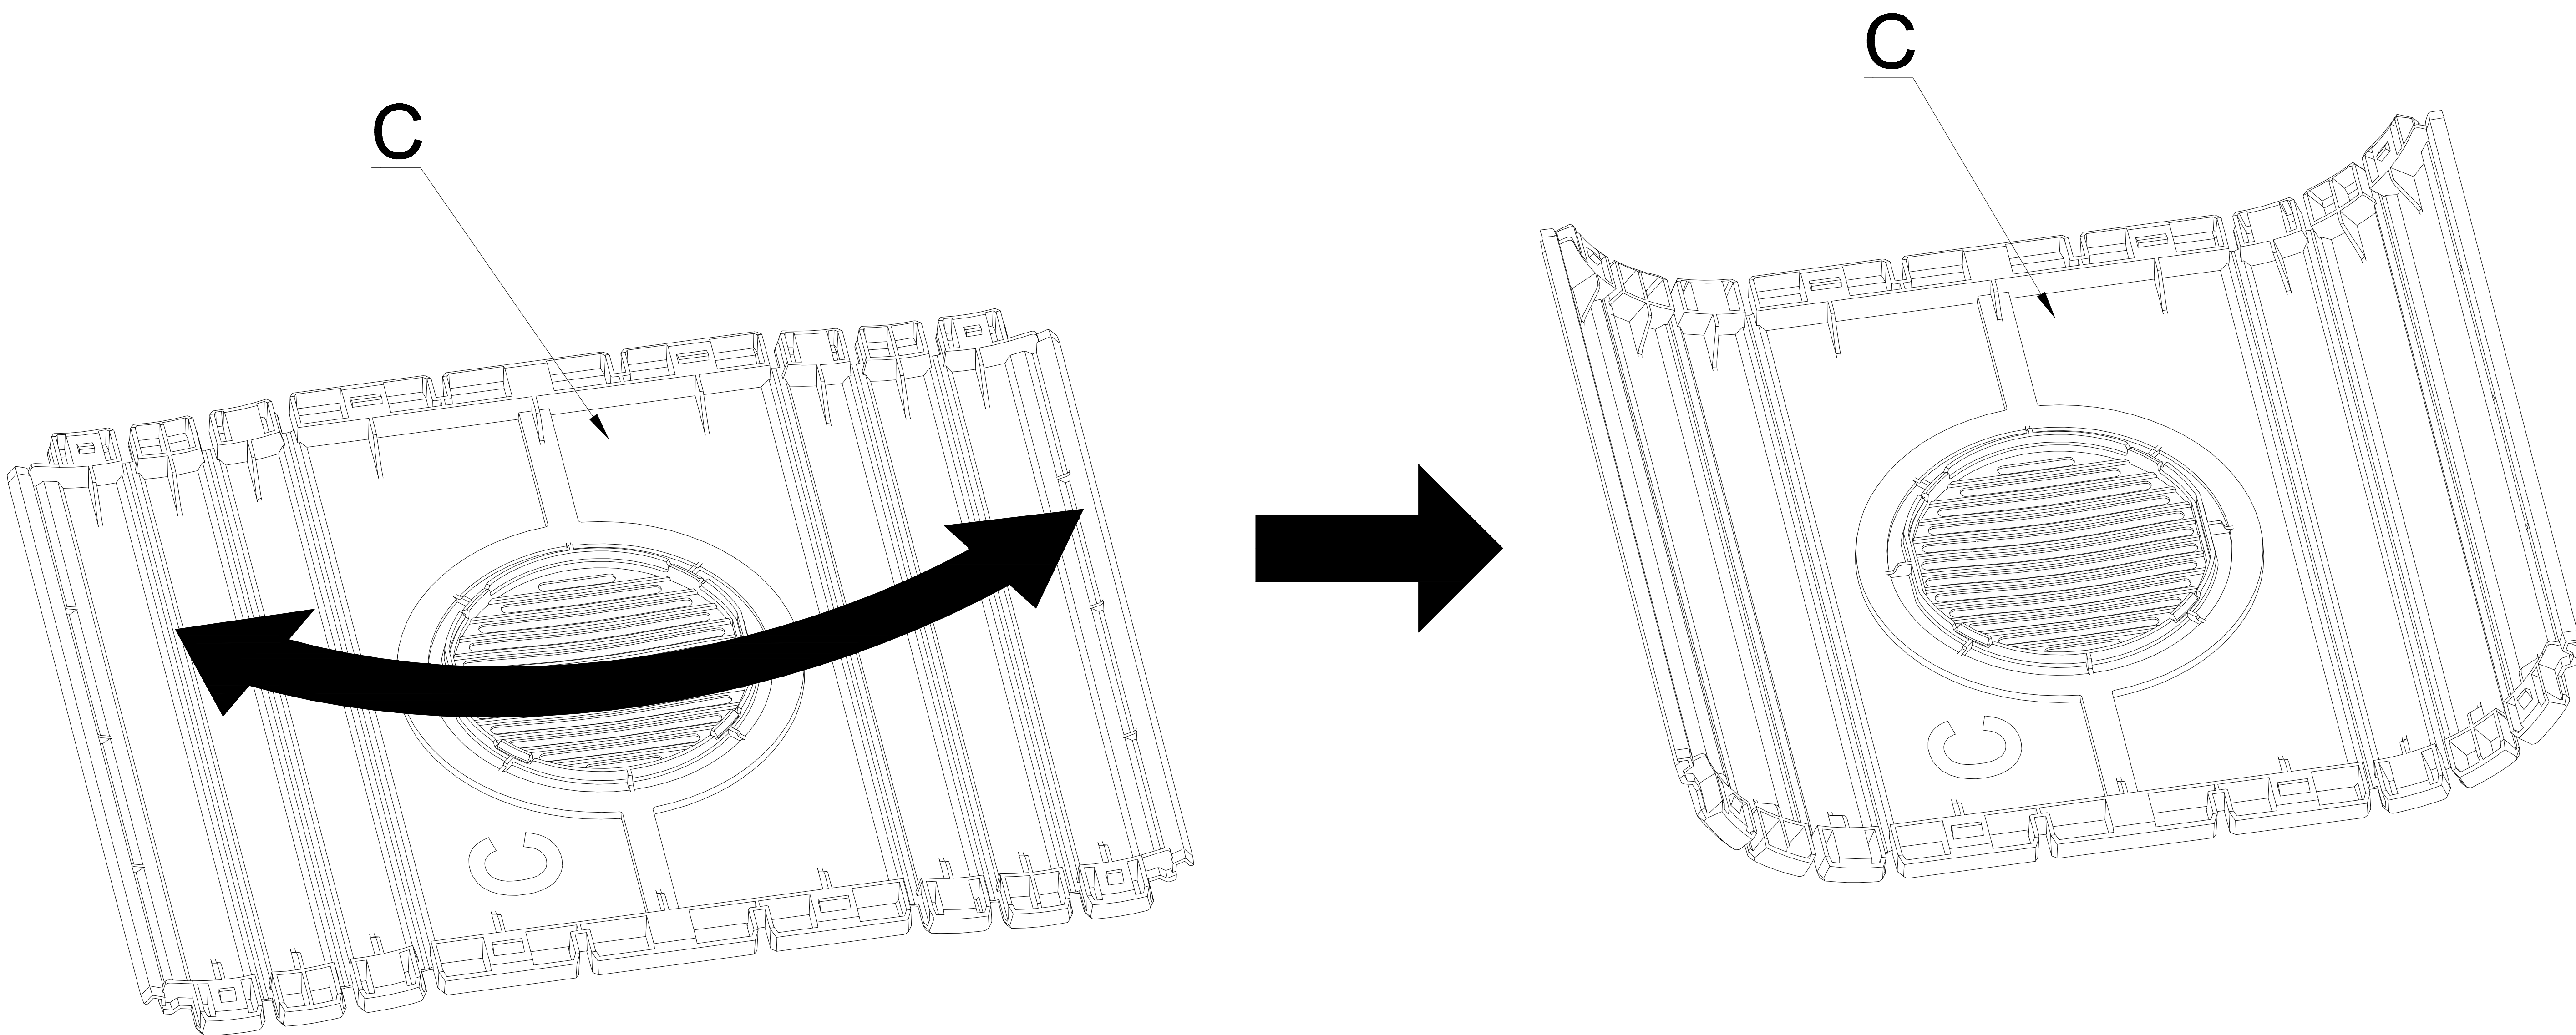


(X2)


2

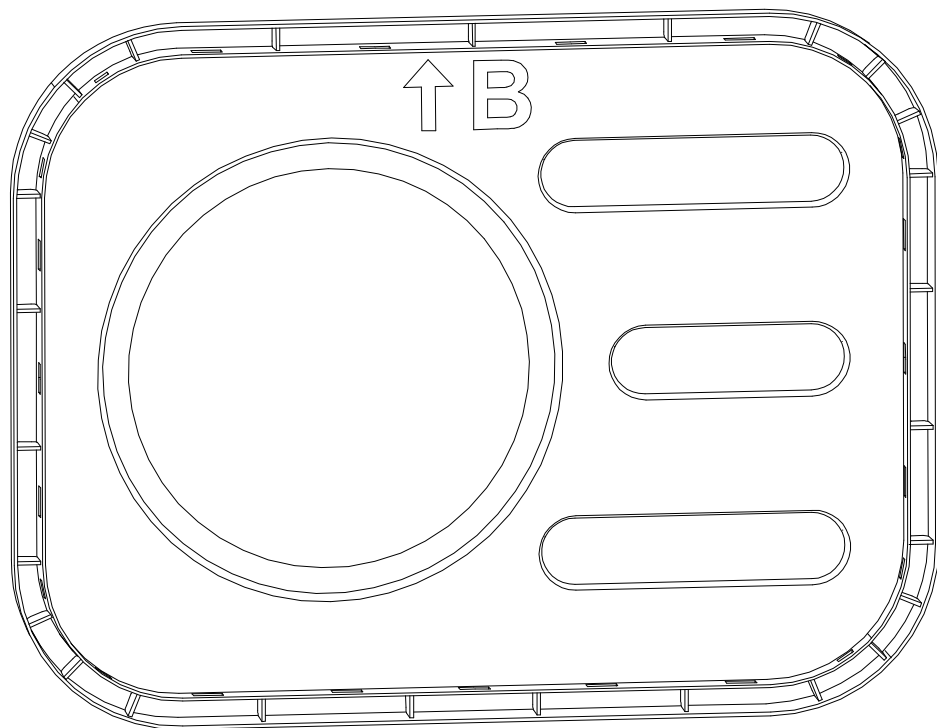



B(X1)

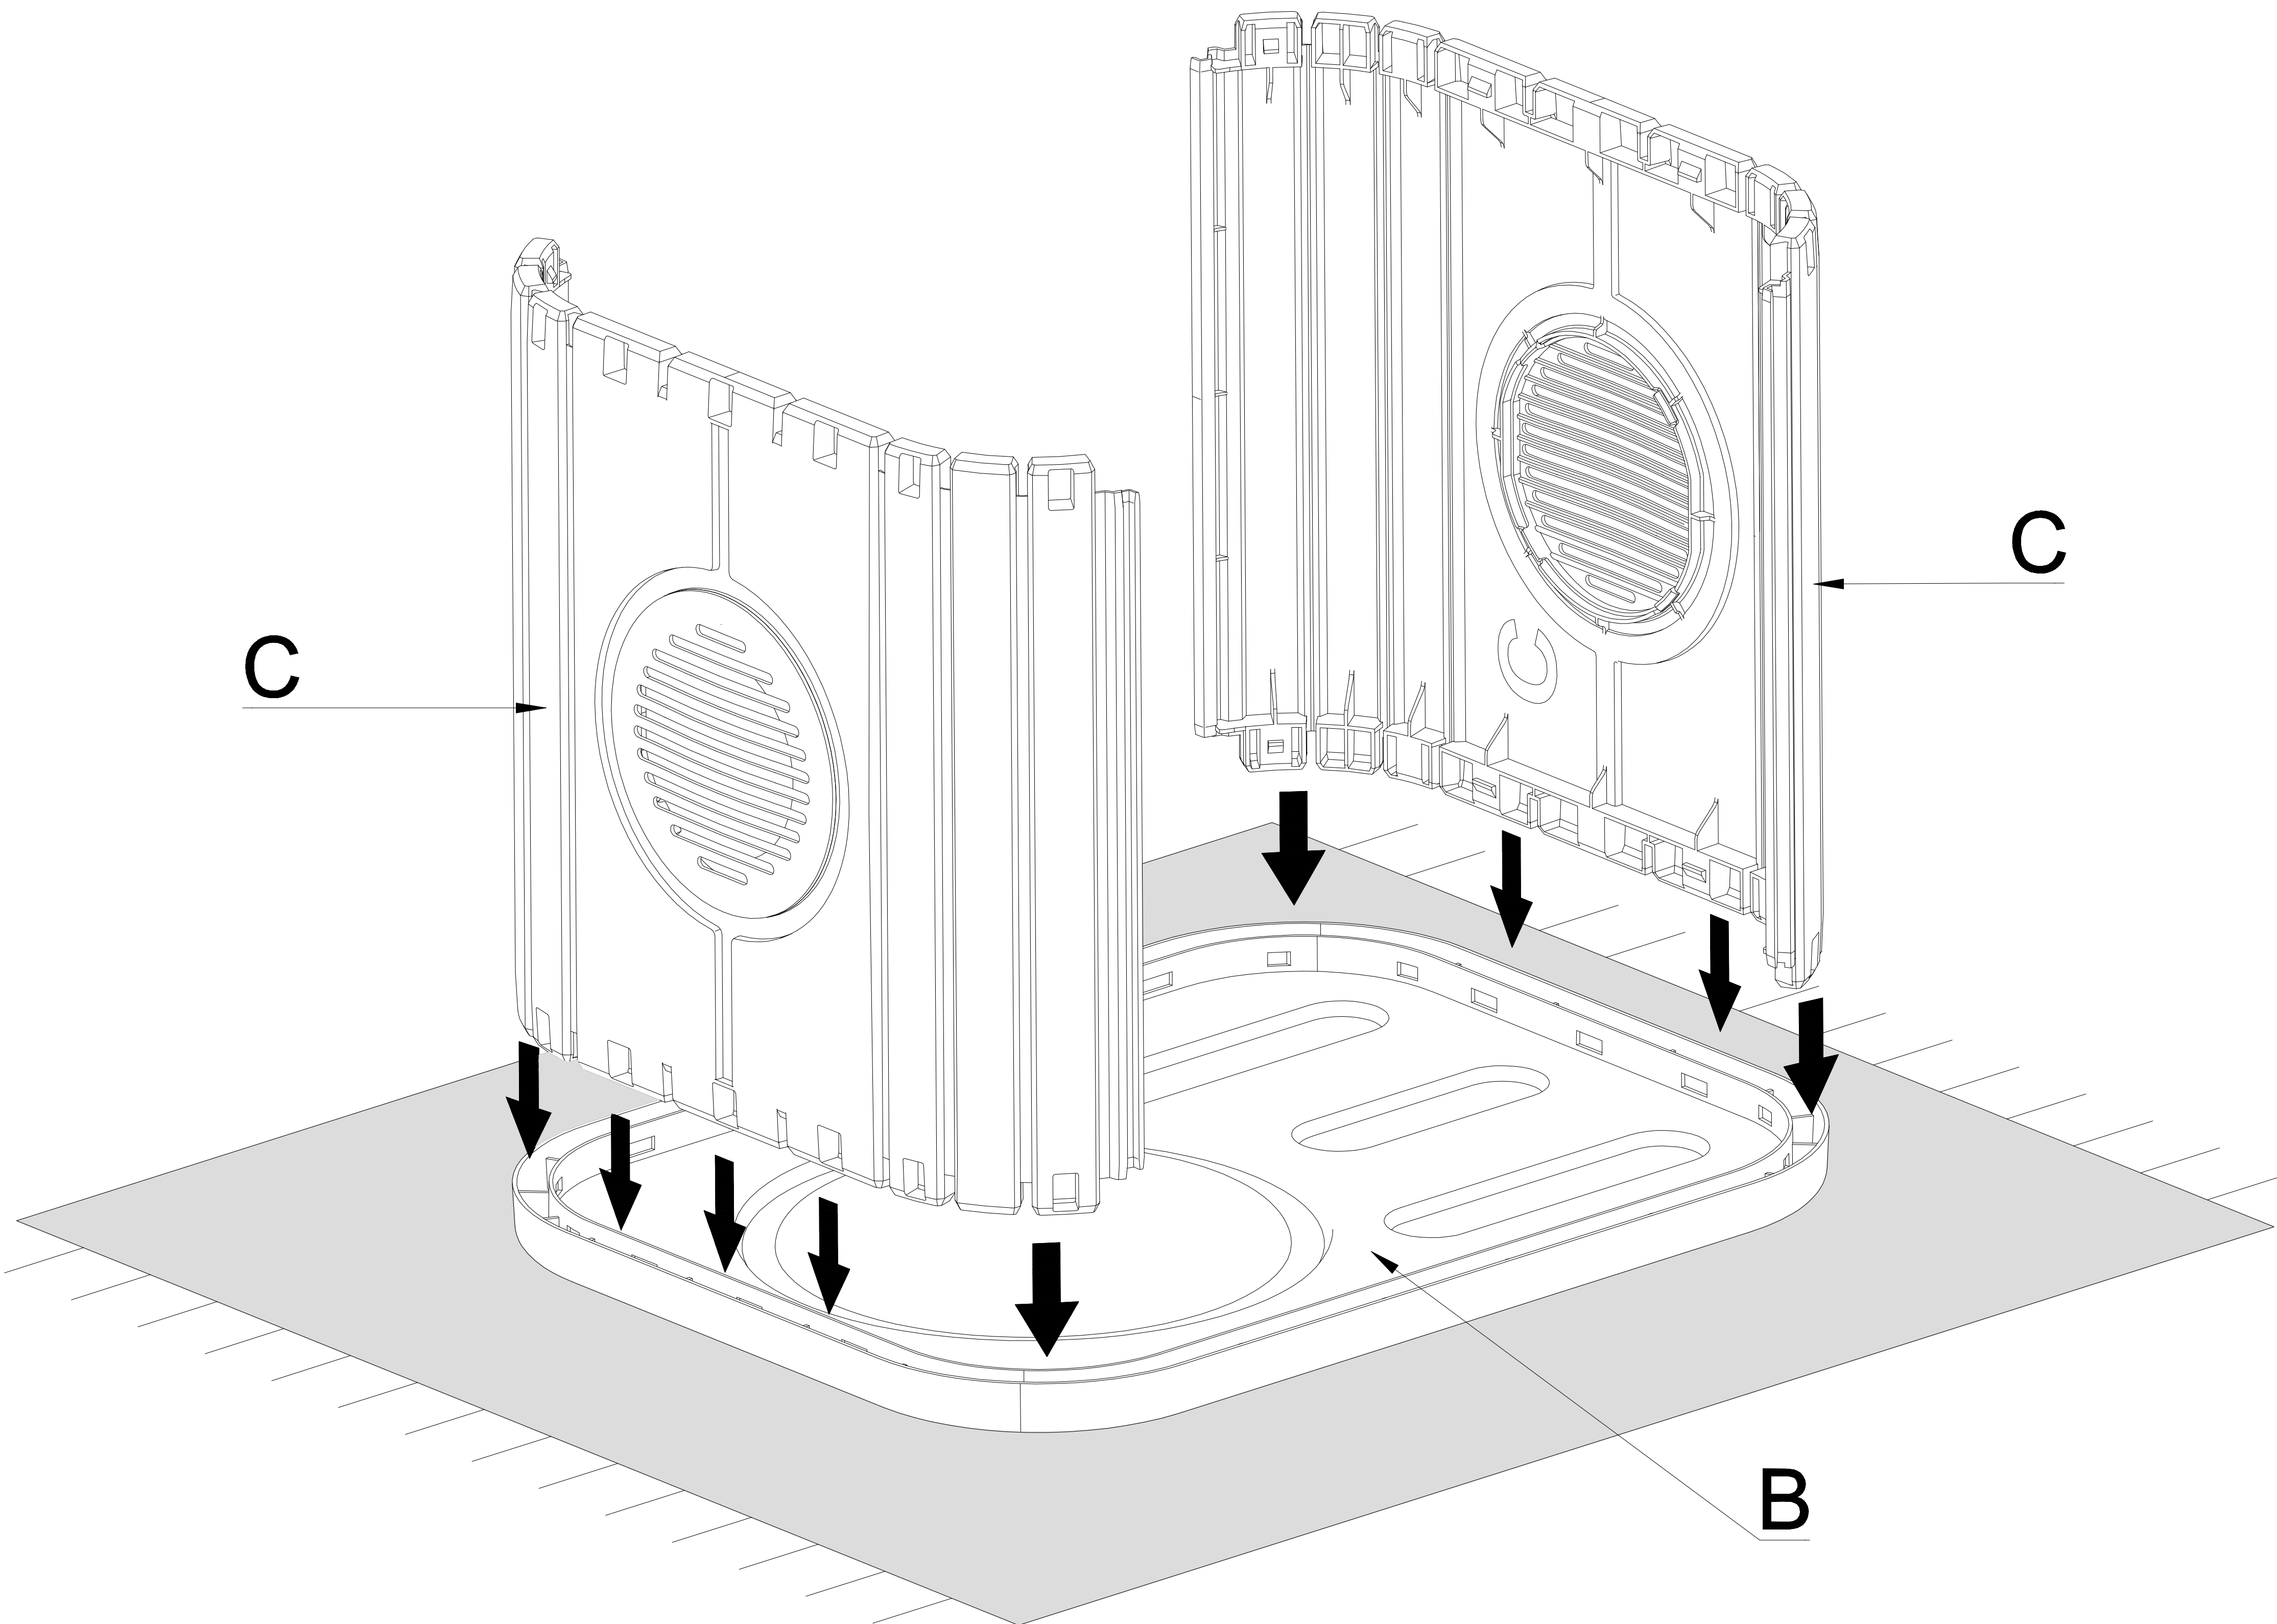


3

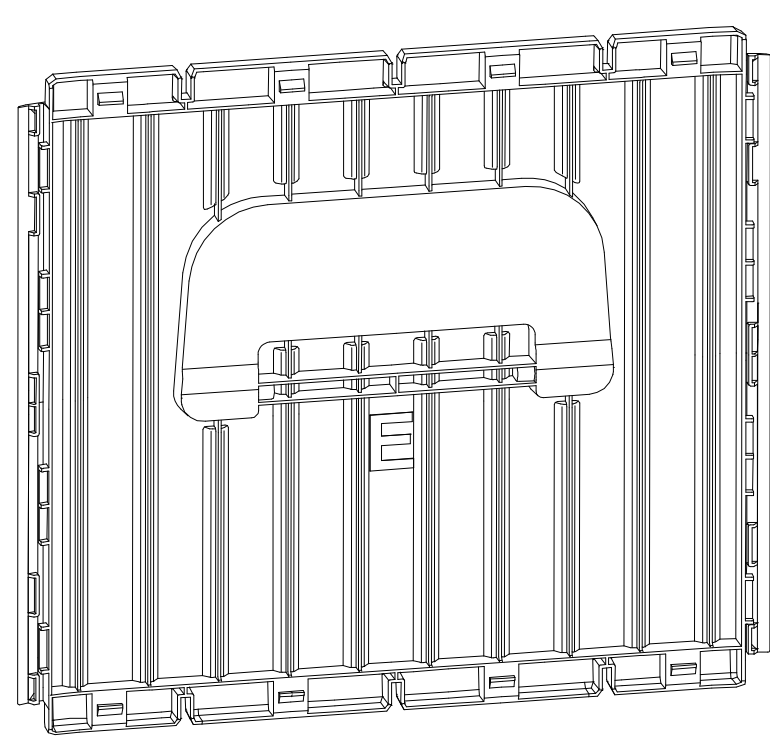


E(X1)

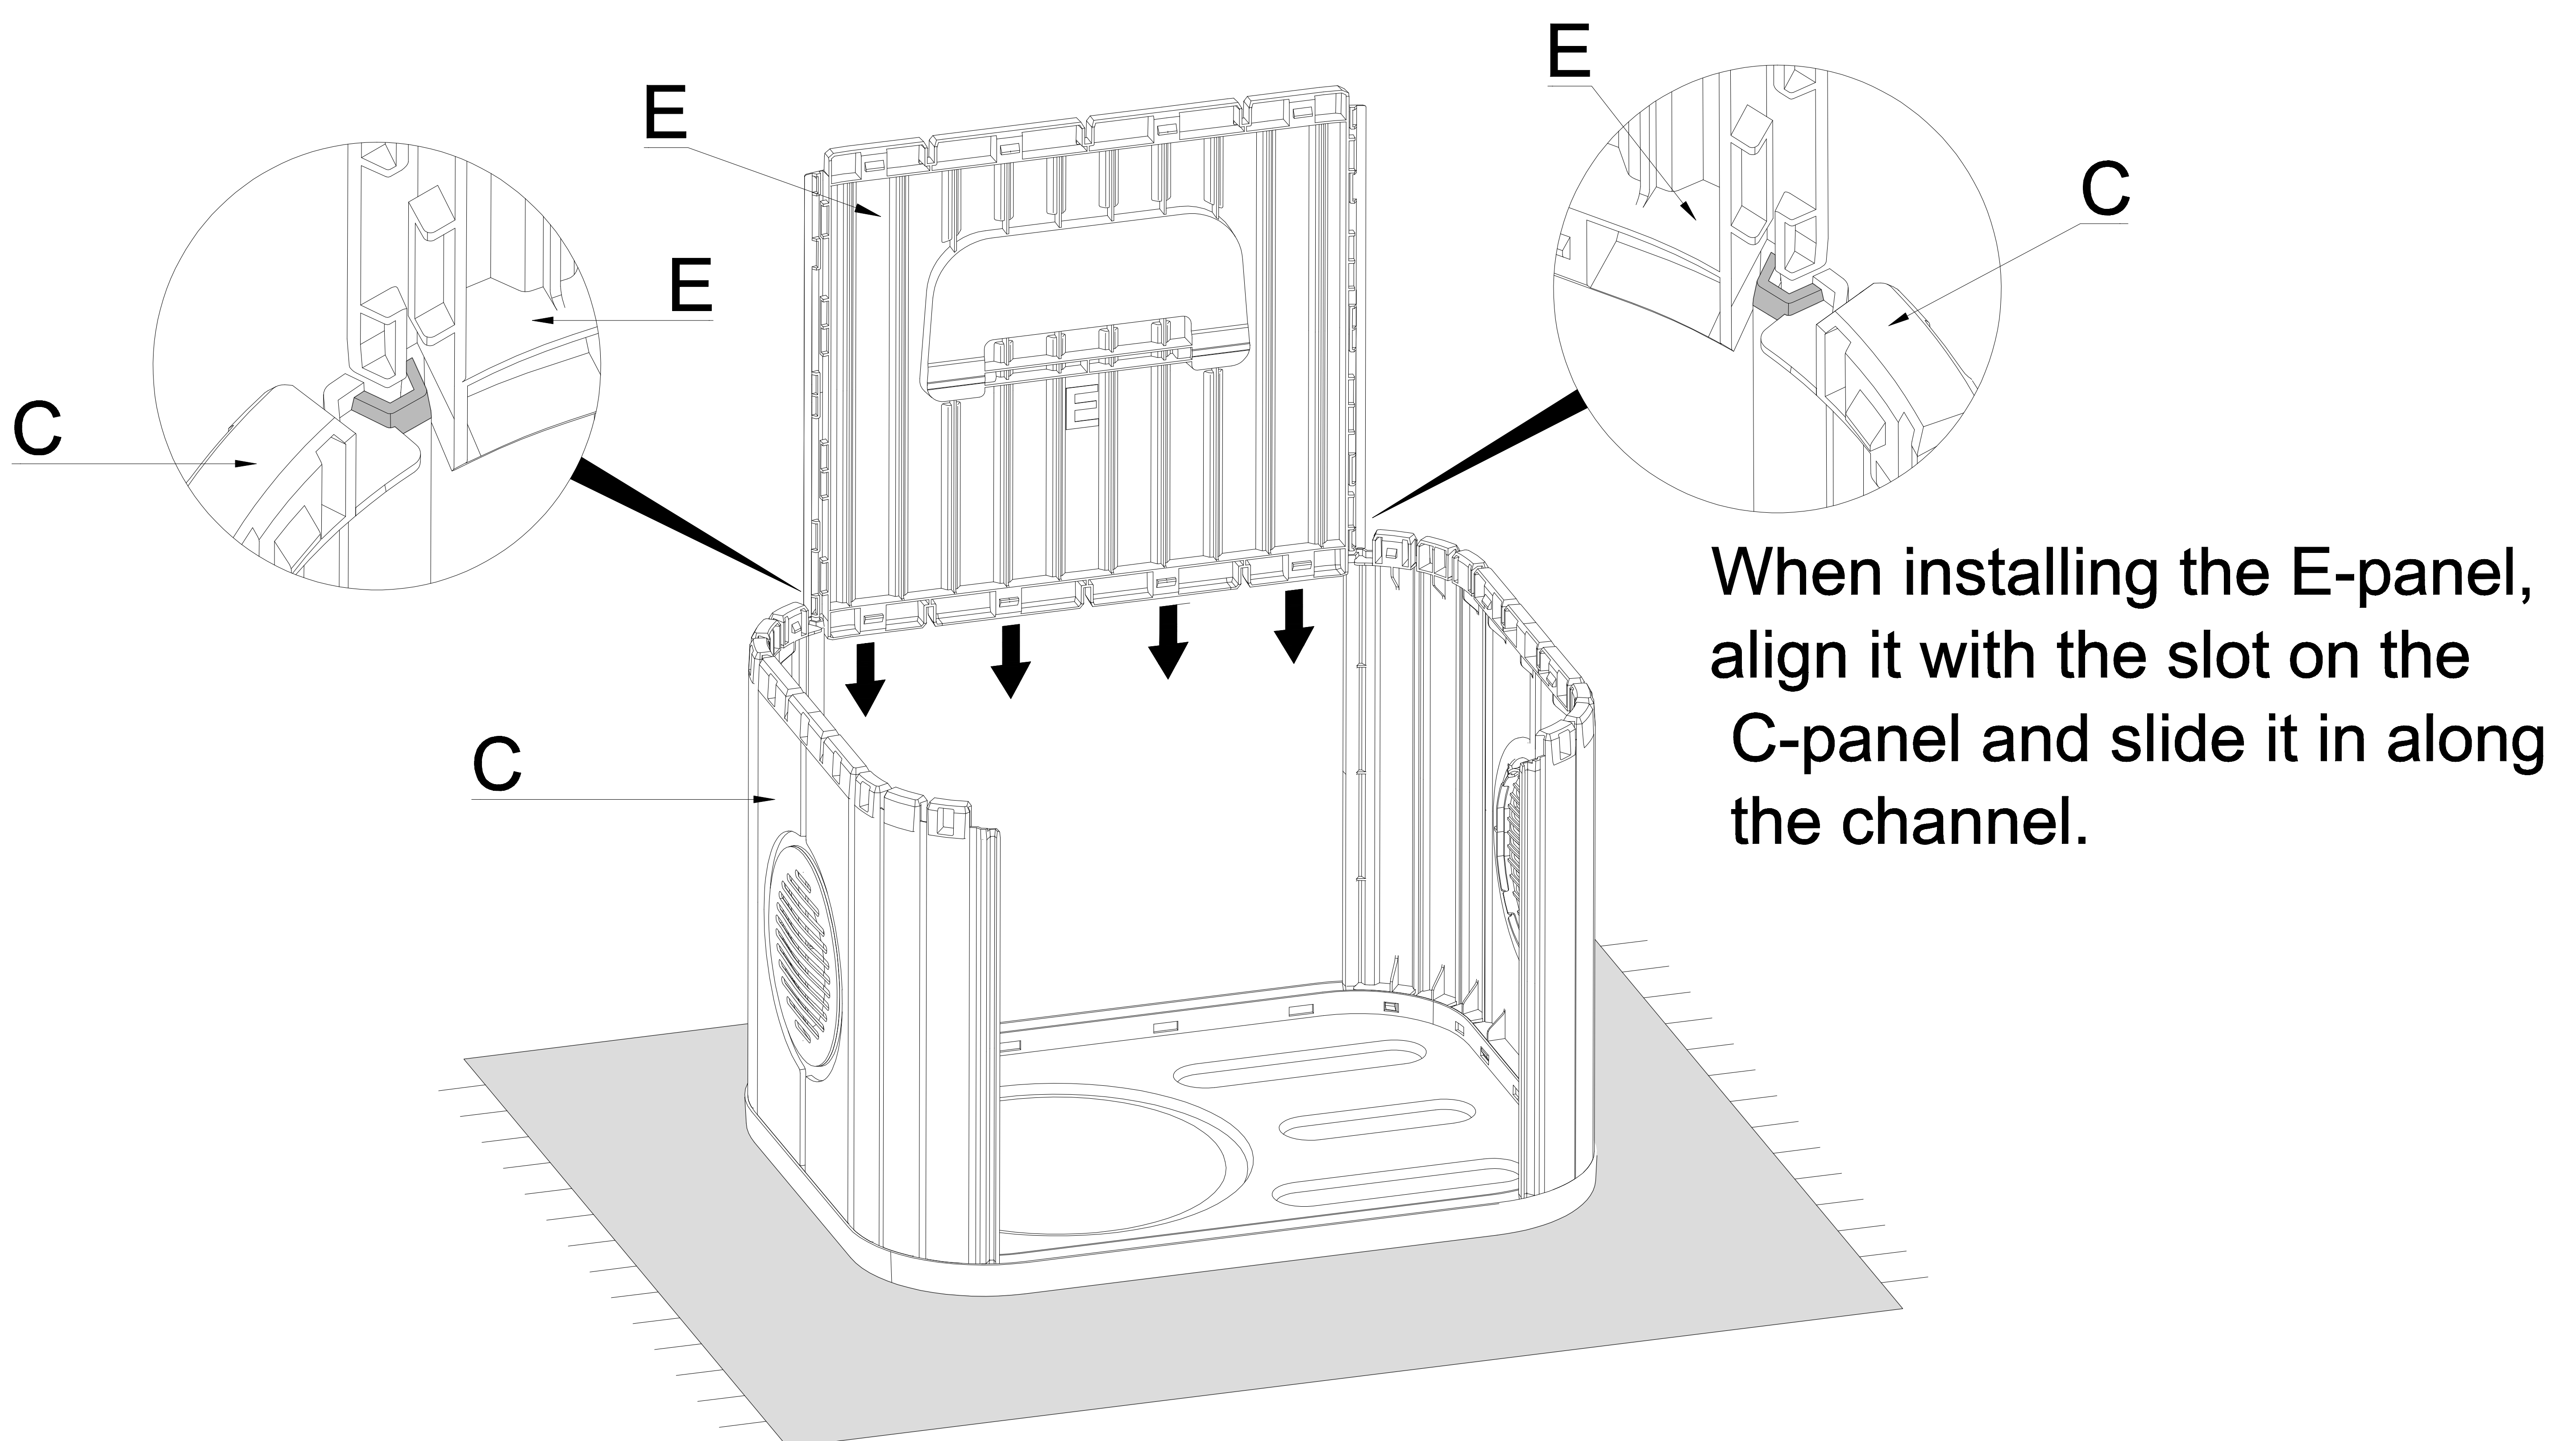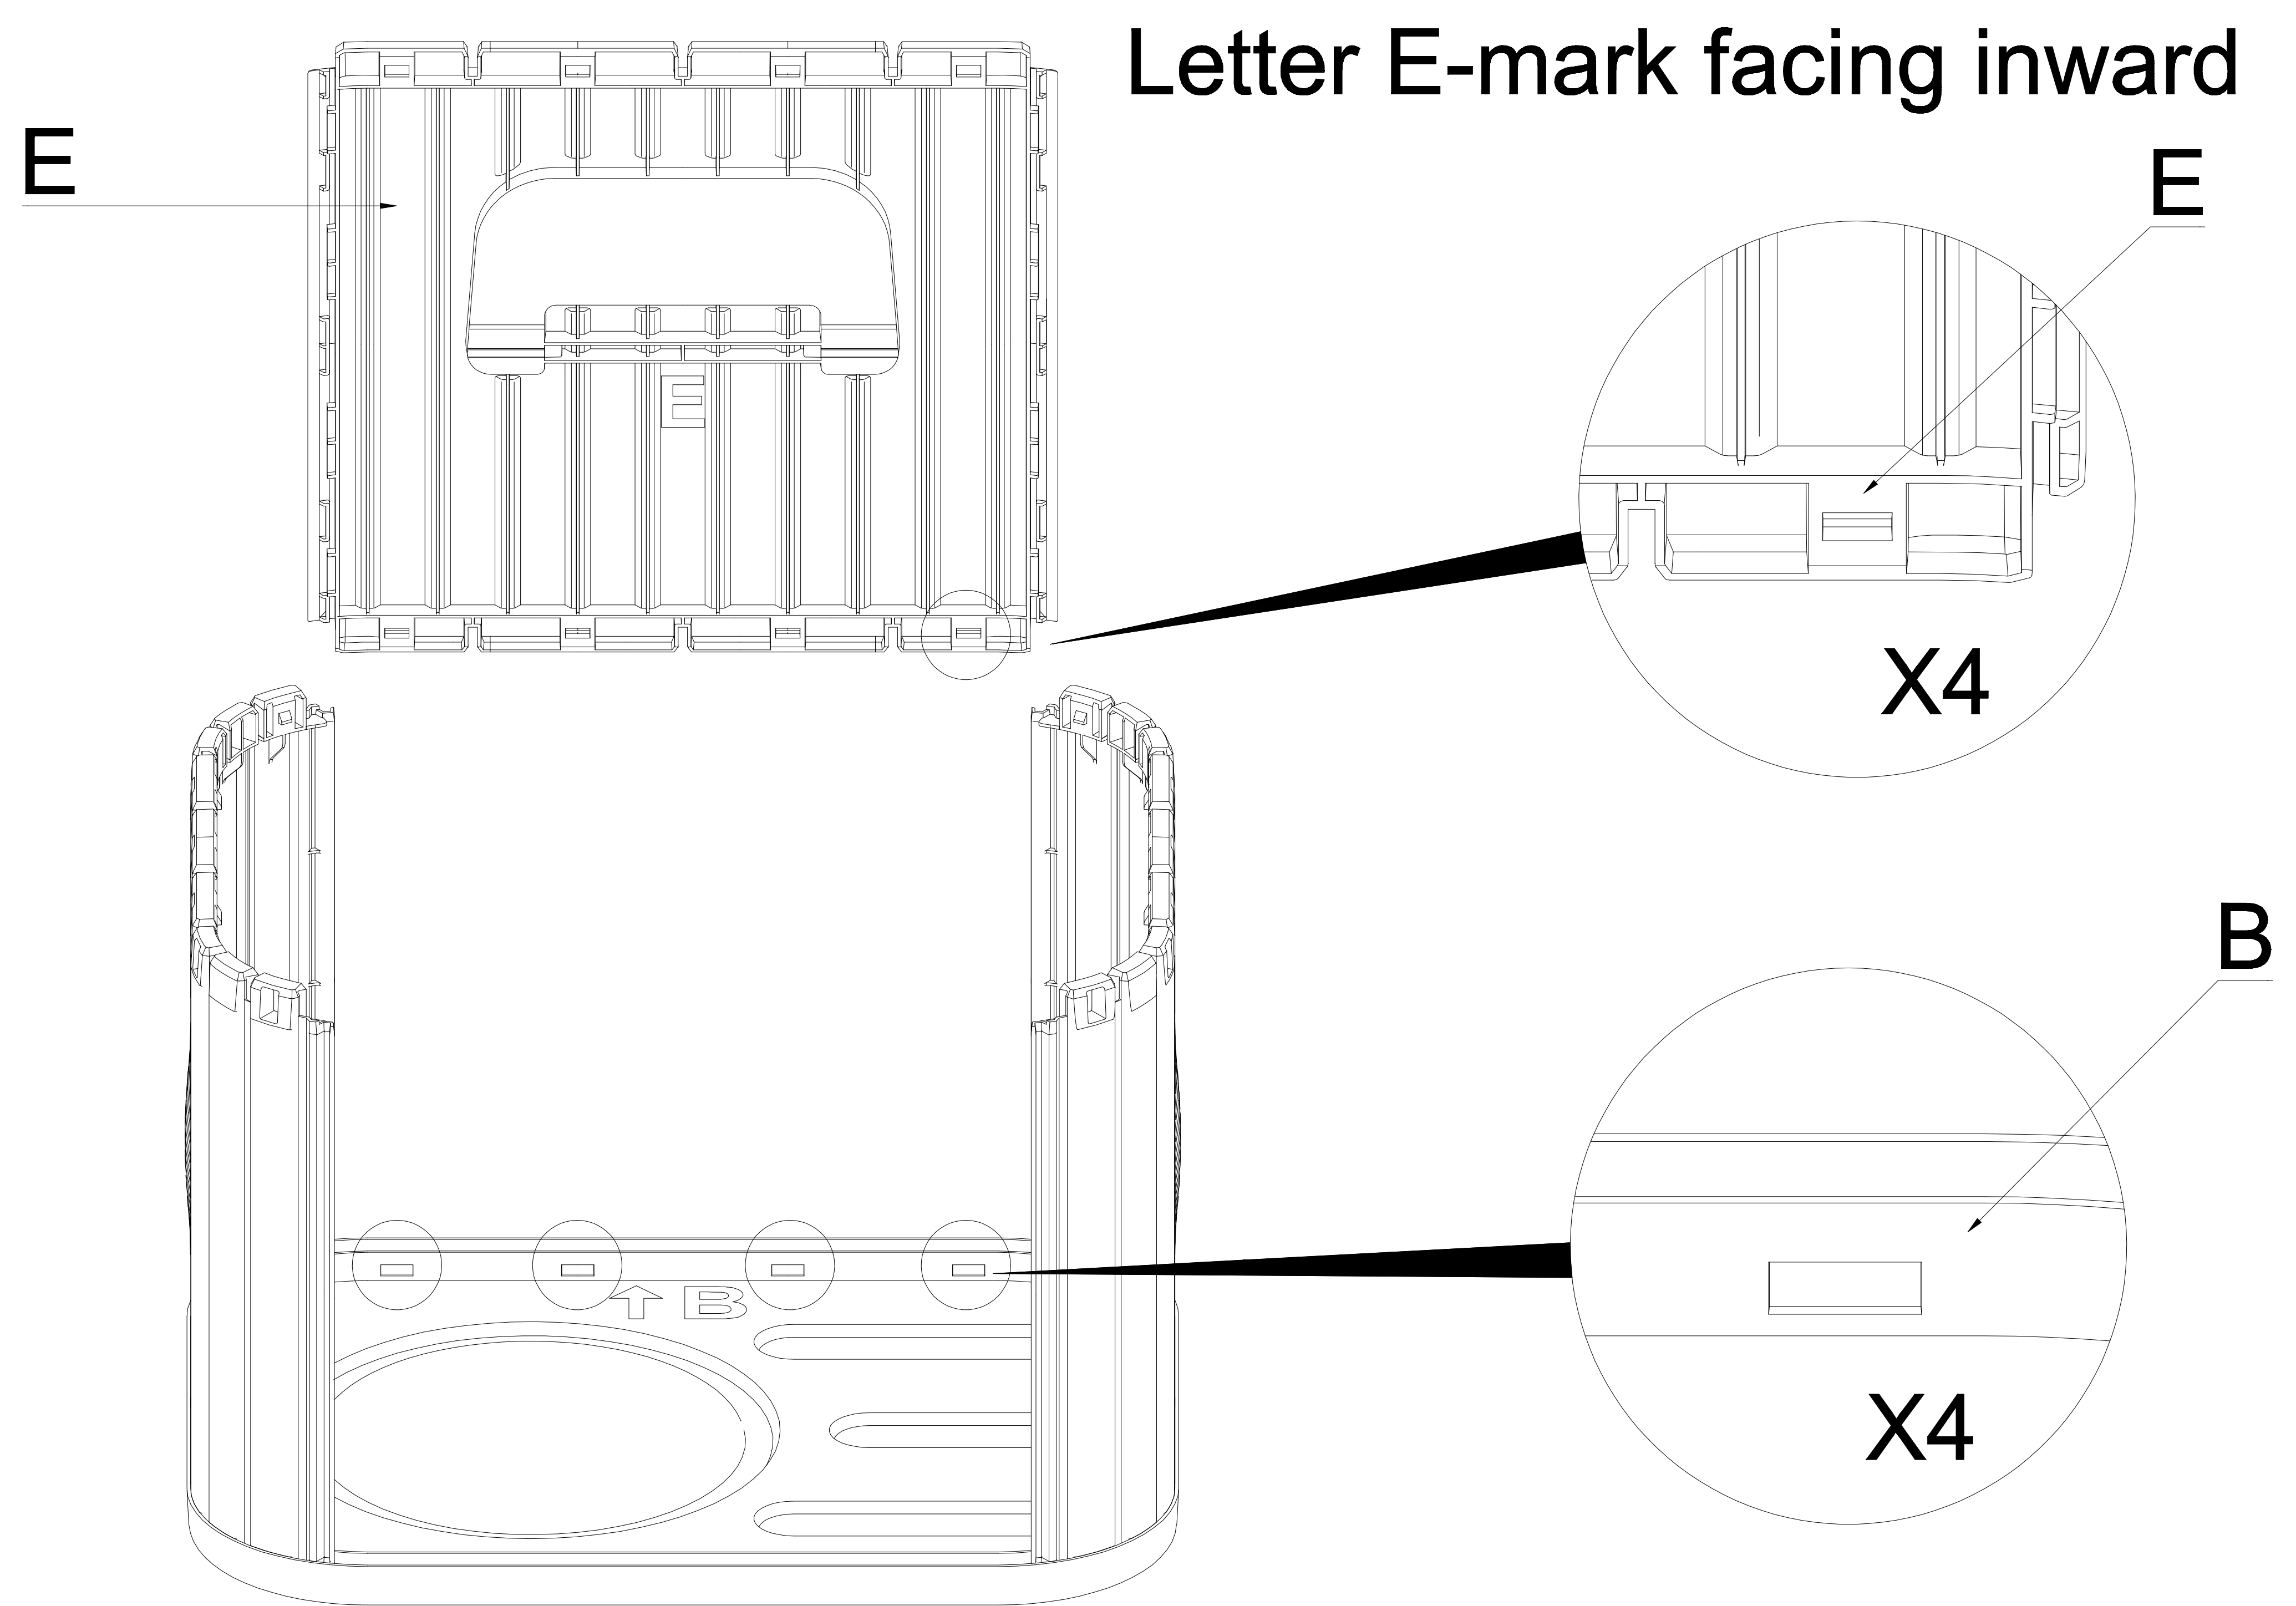

4

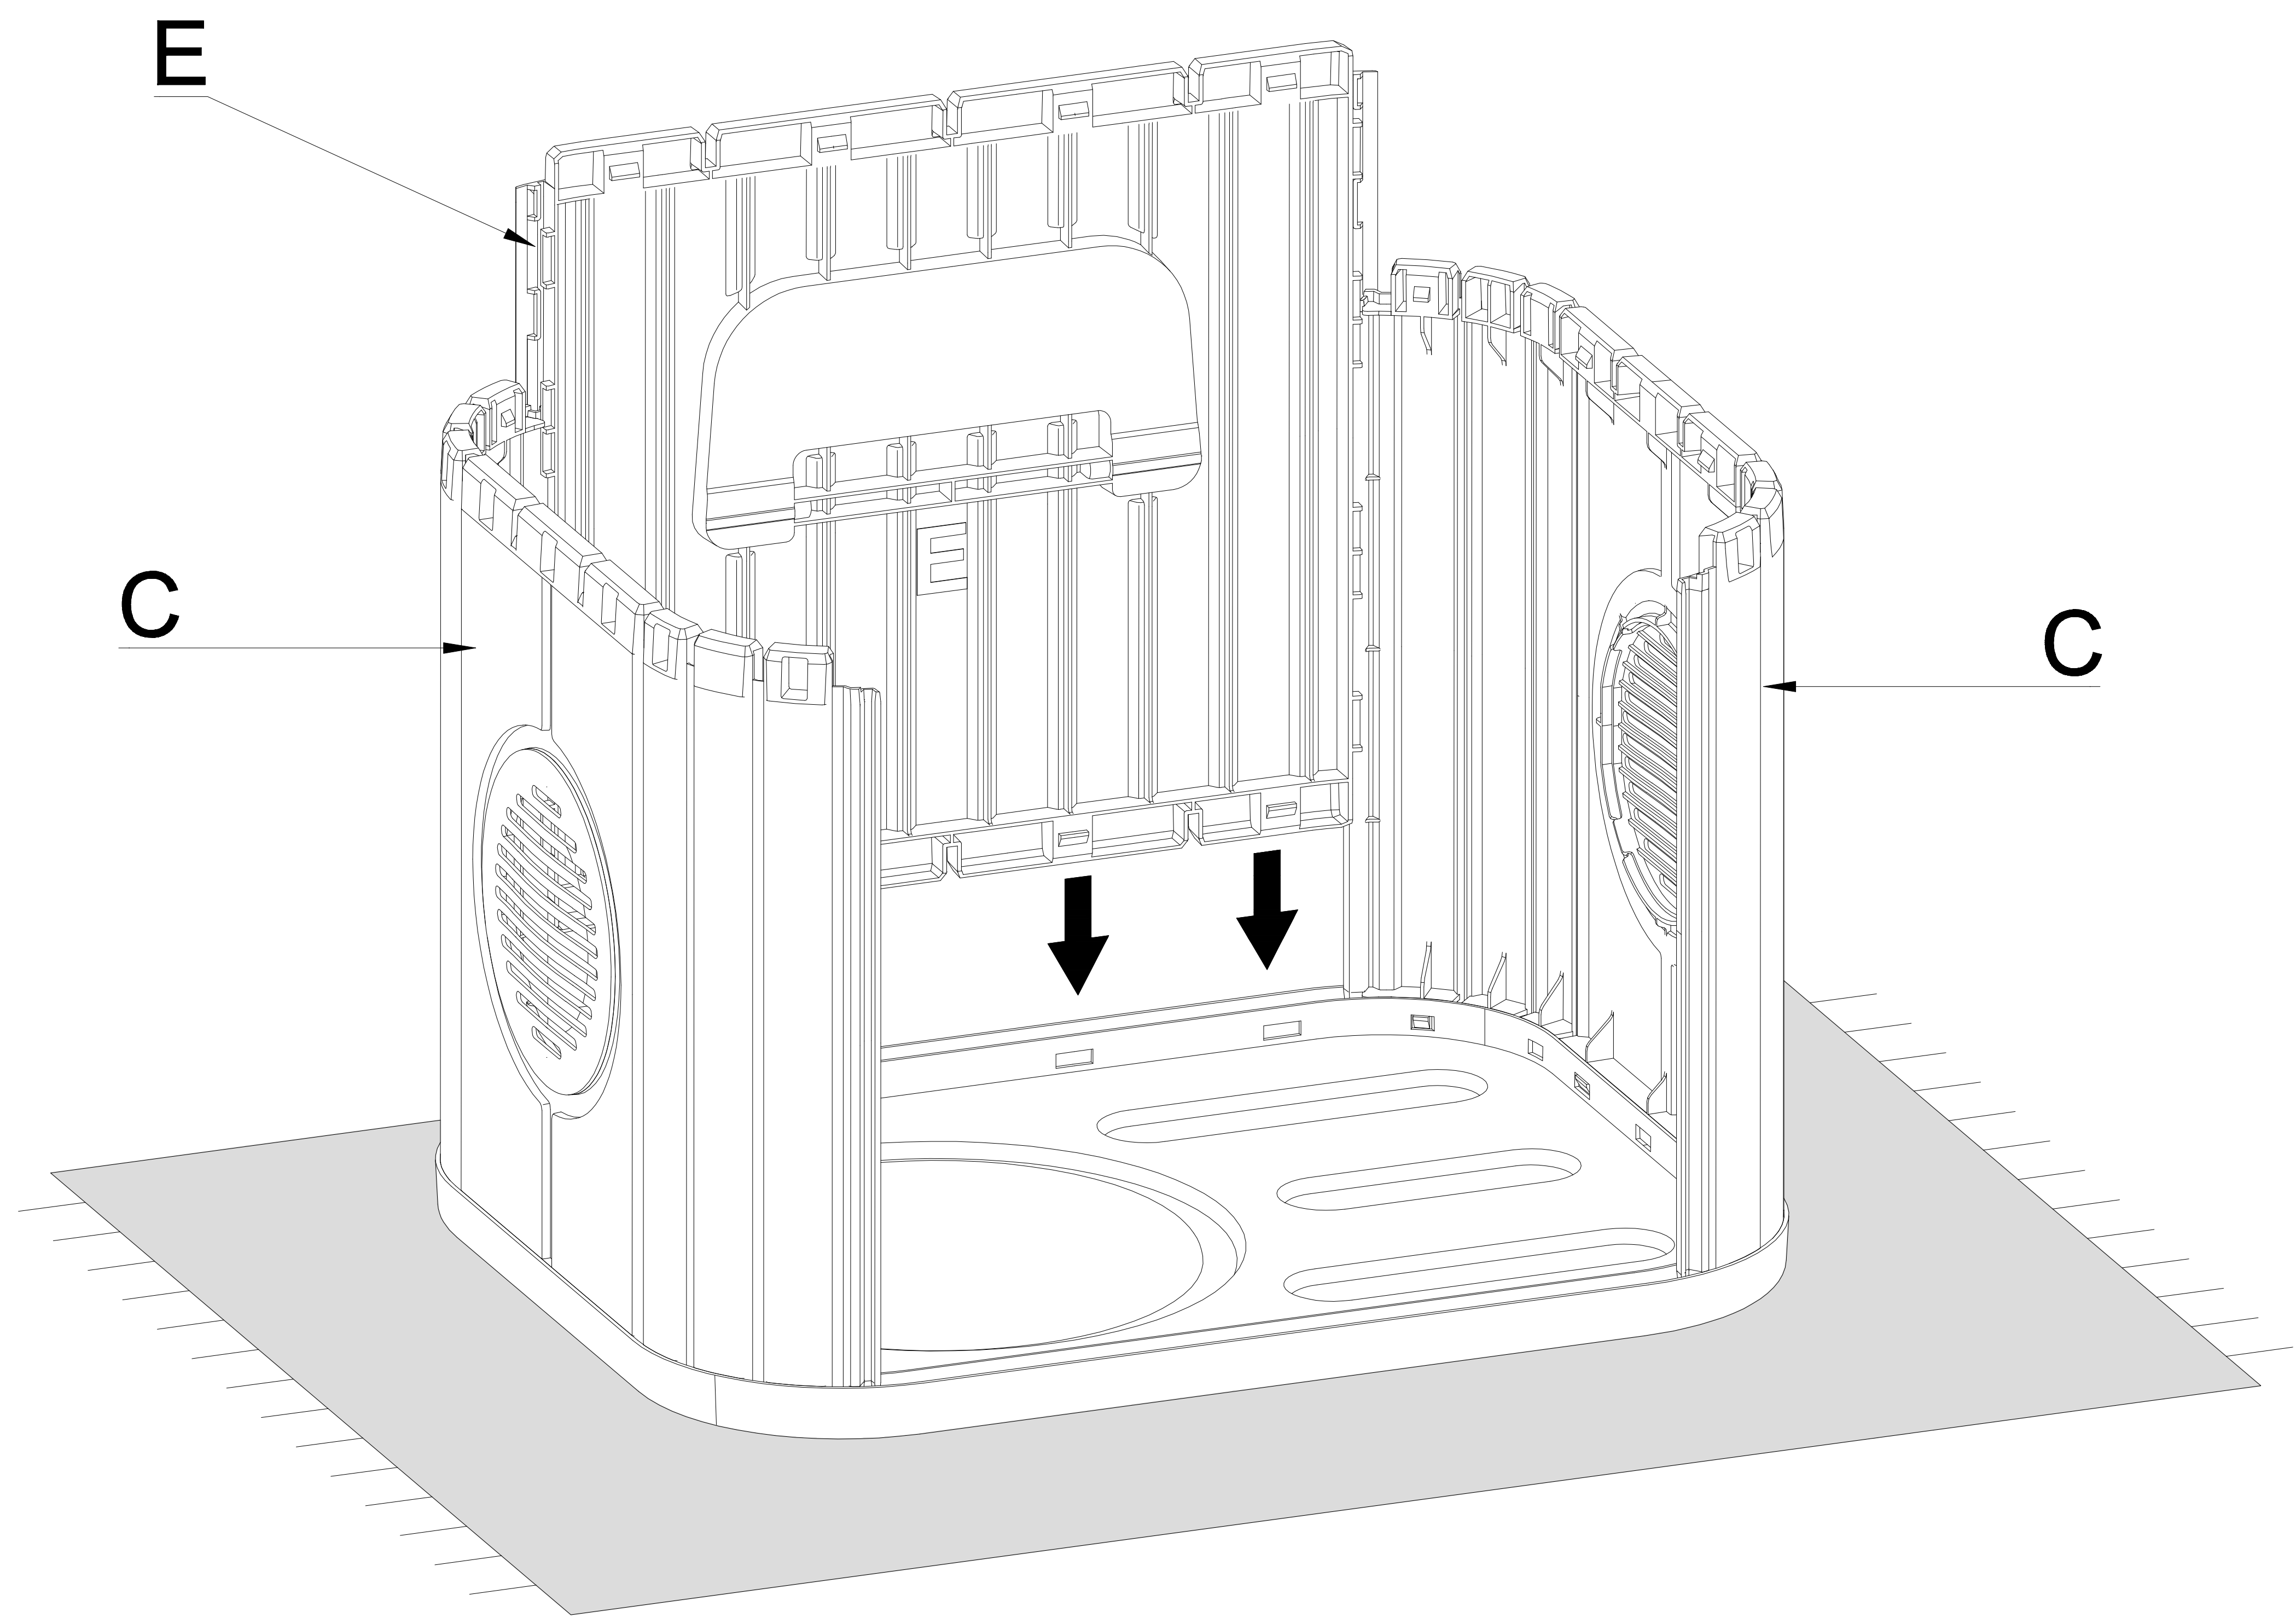


5

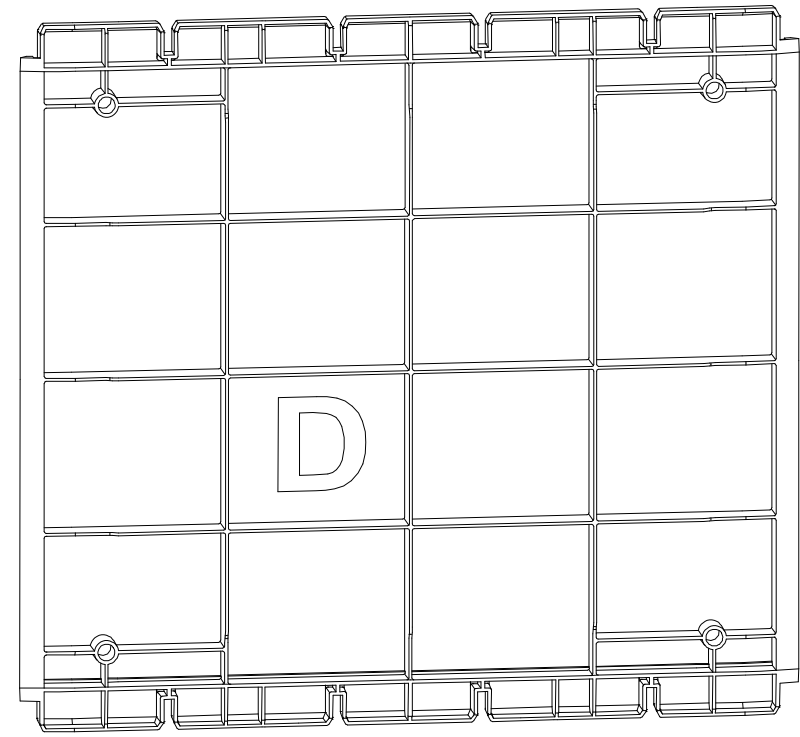


D(X1)

Letter D-mark facing outward

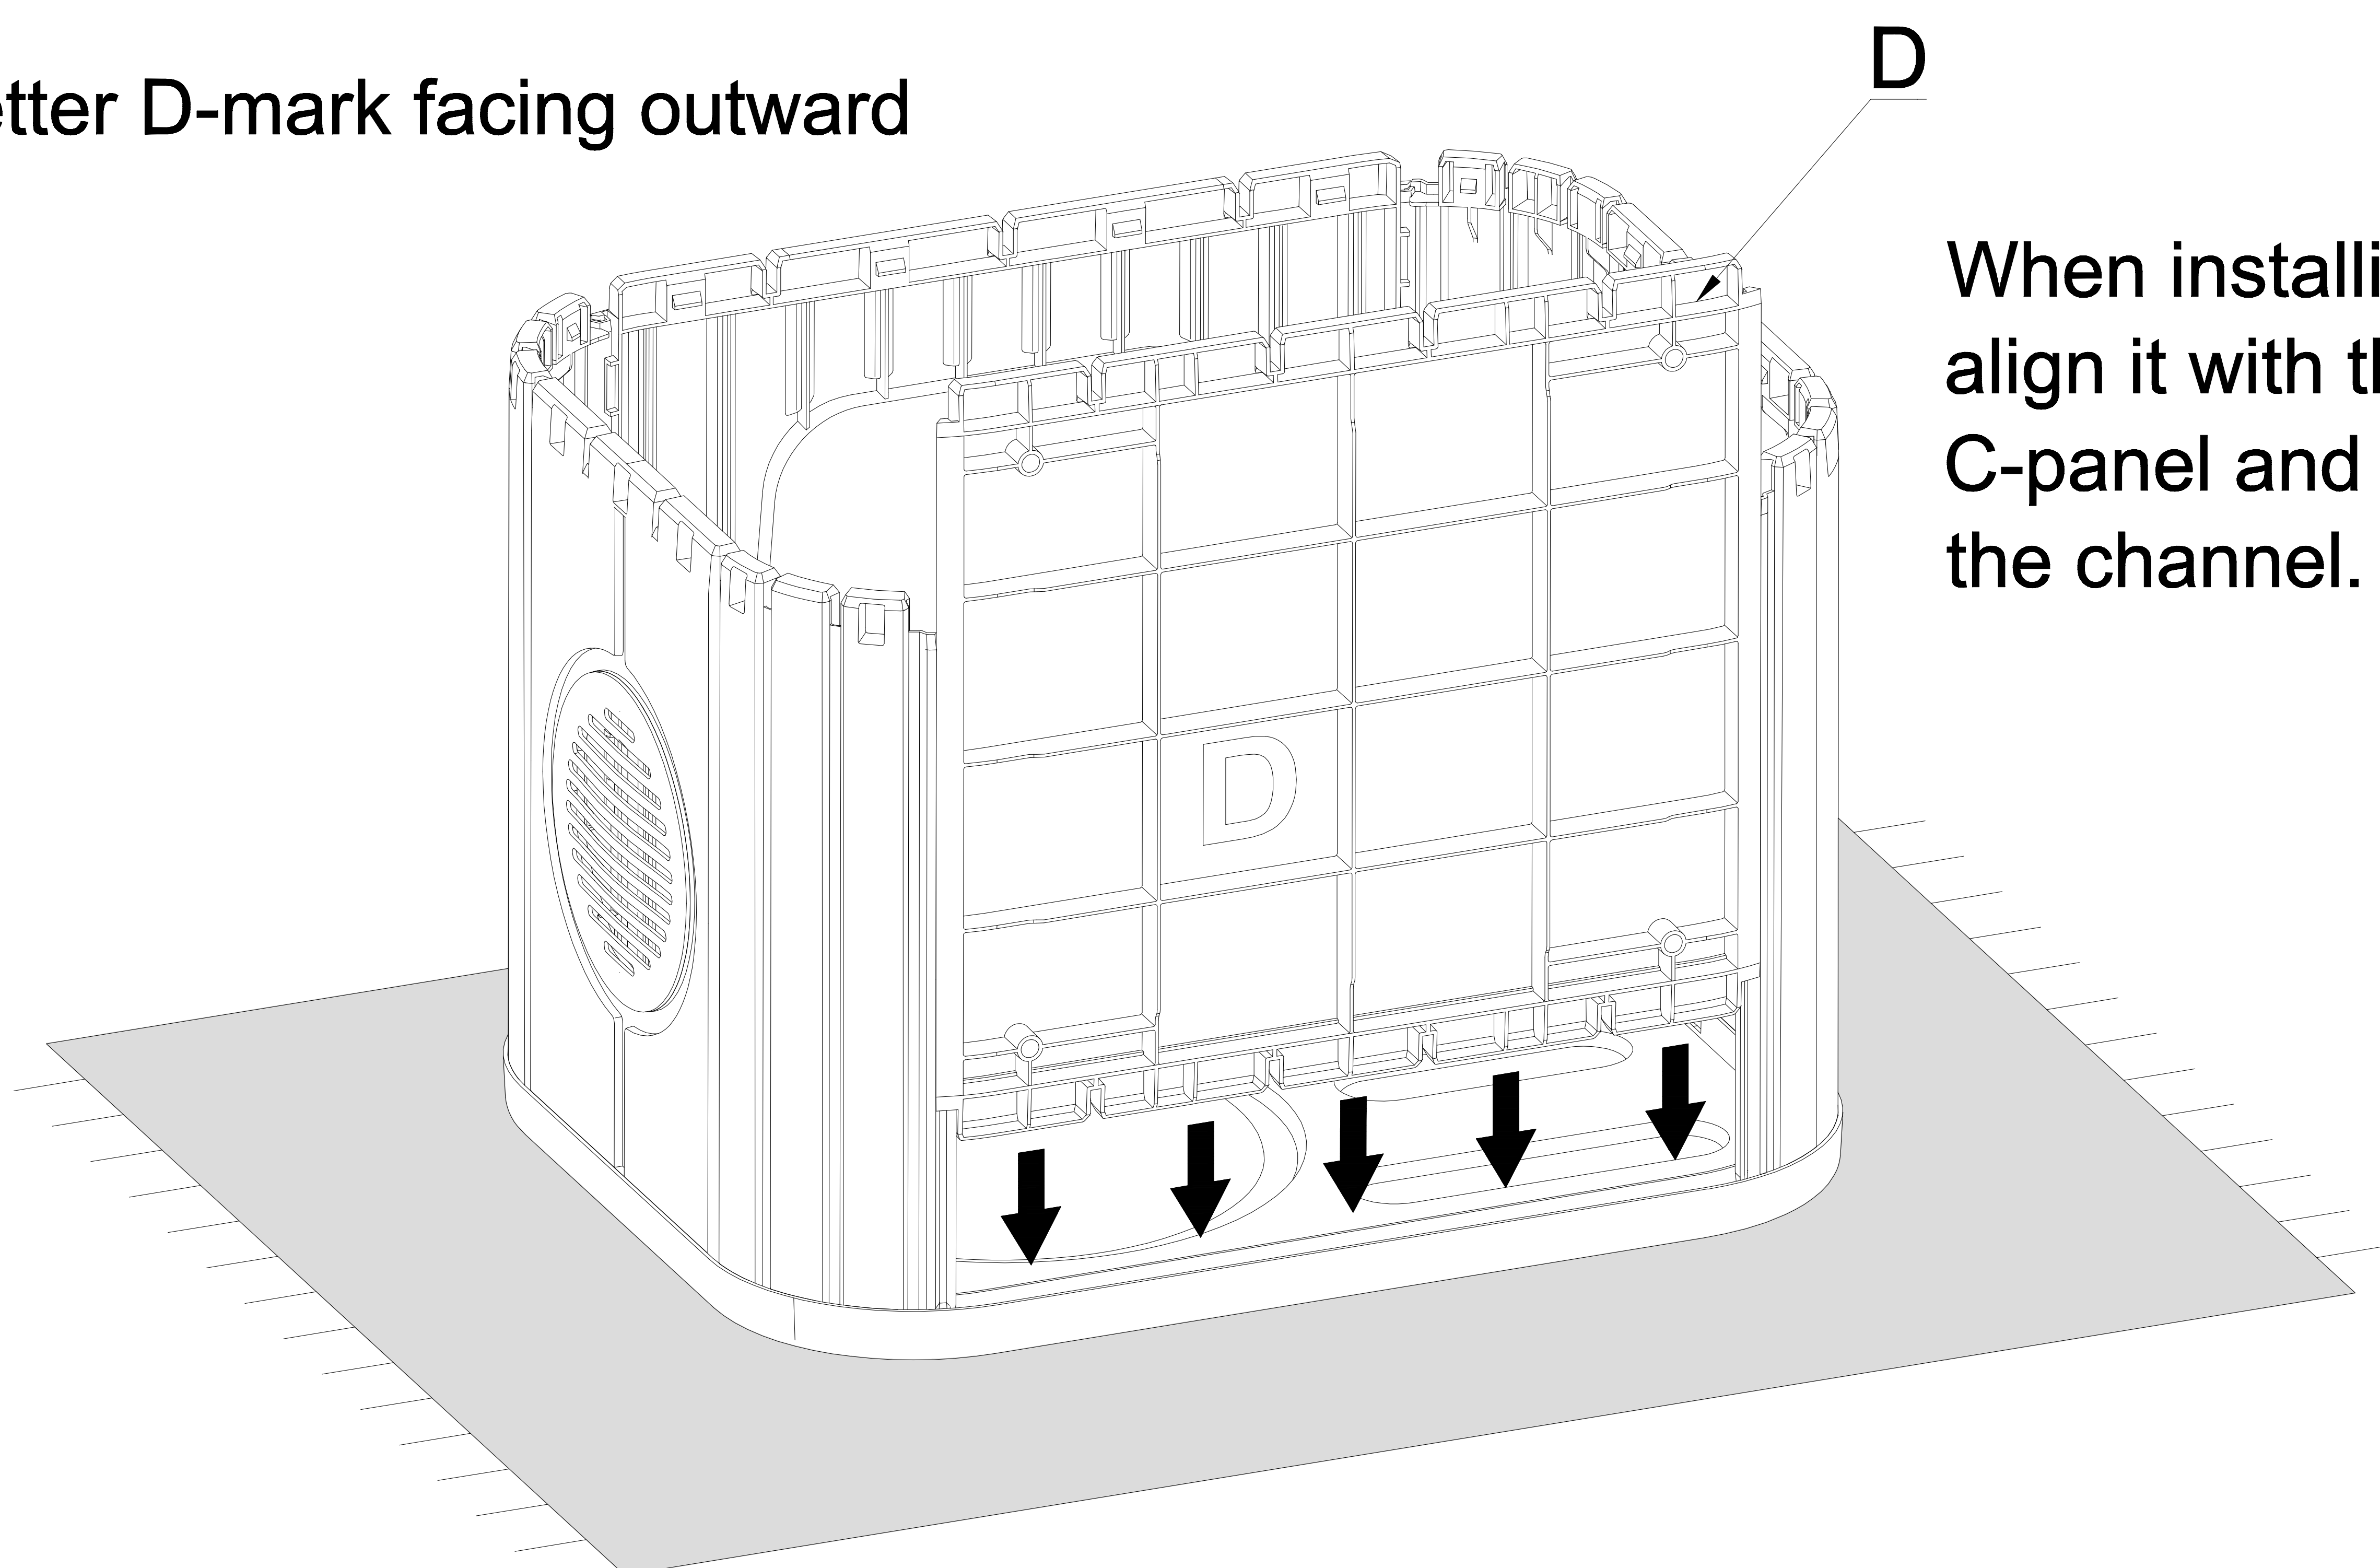


When installing the D-panel, align it with the slot on the C-panel and slide it in along the channel.


6

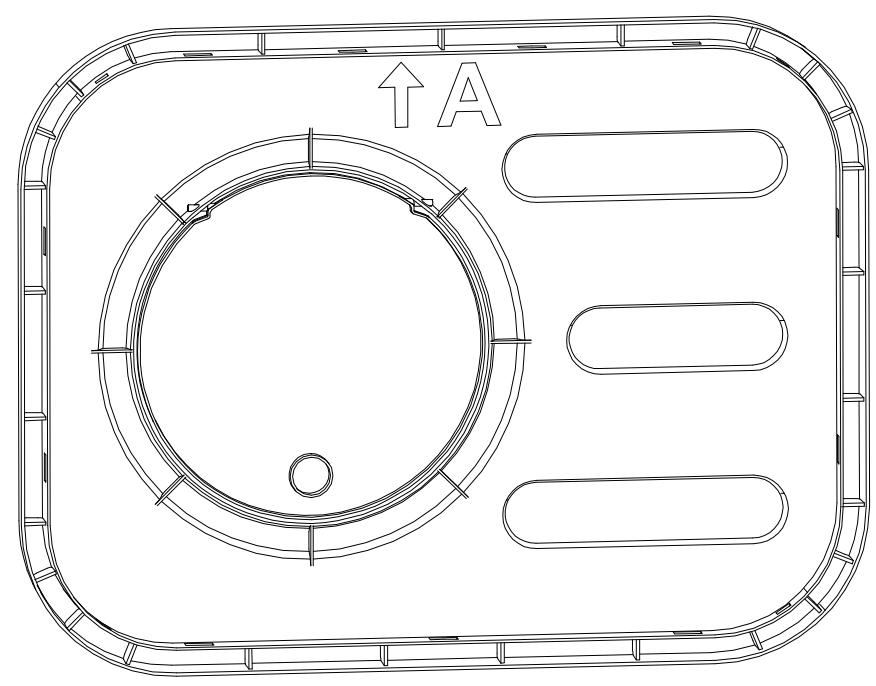


A(X1)

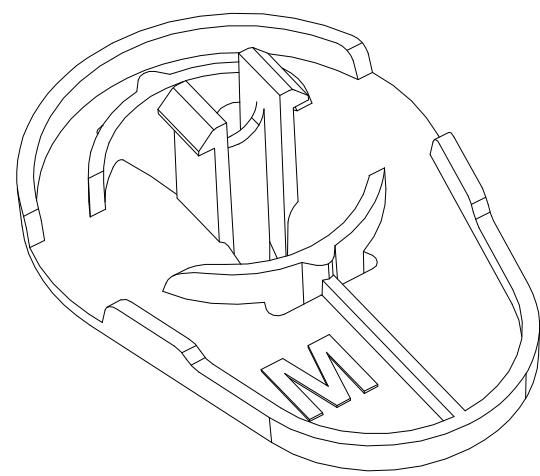


M(X1)

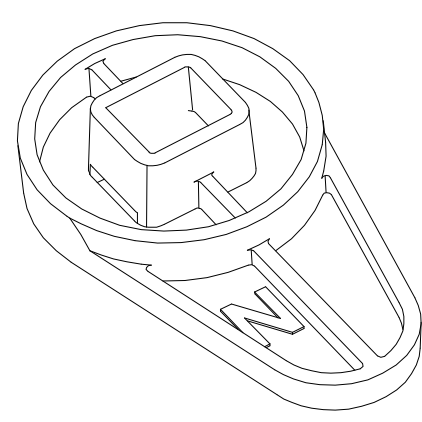


N(X1)

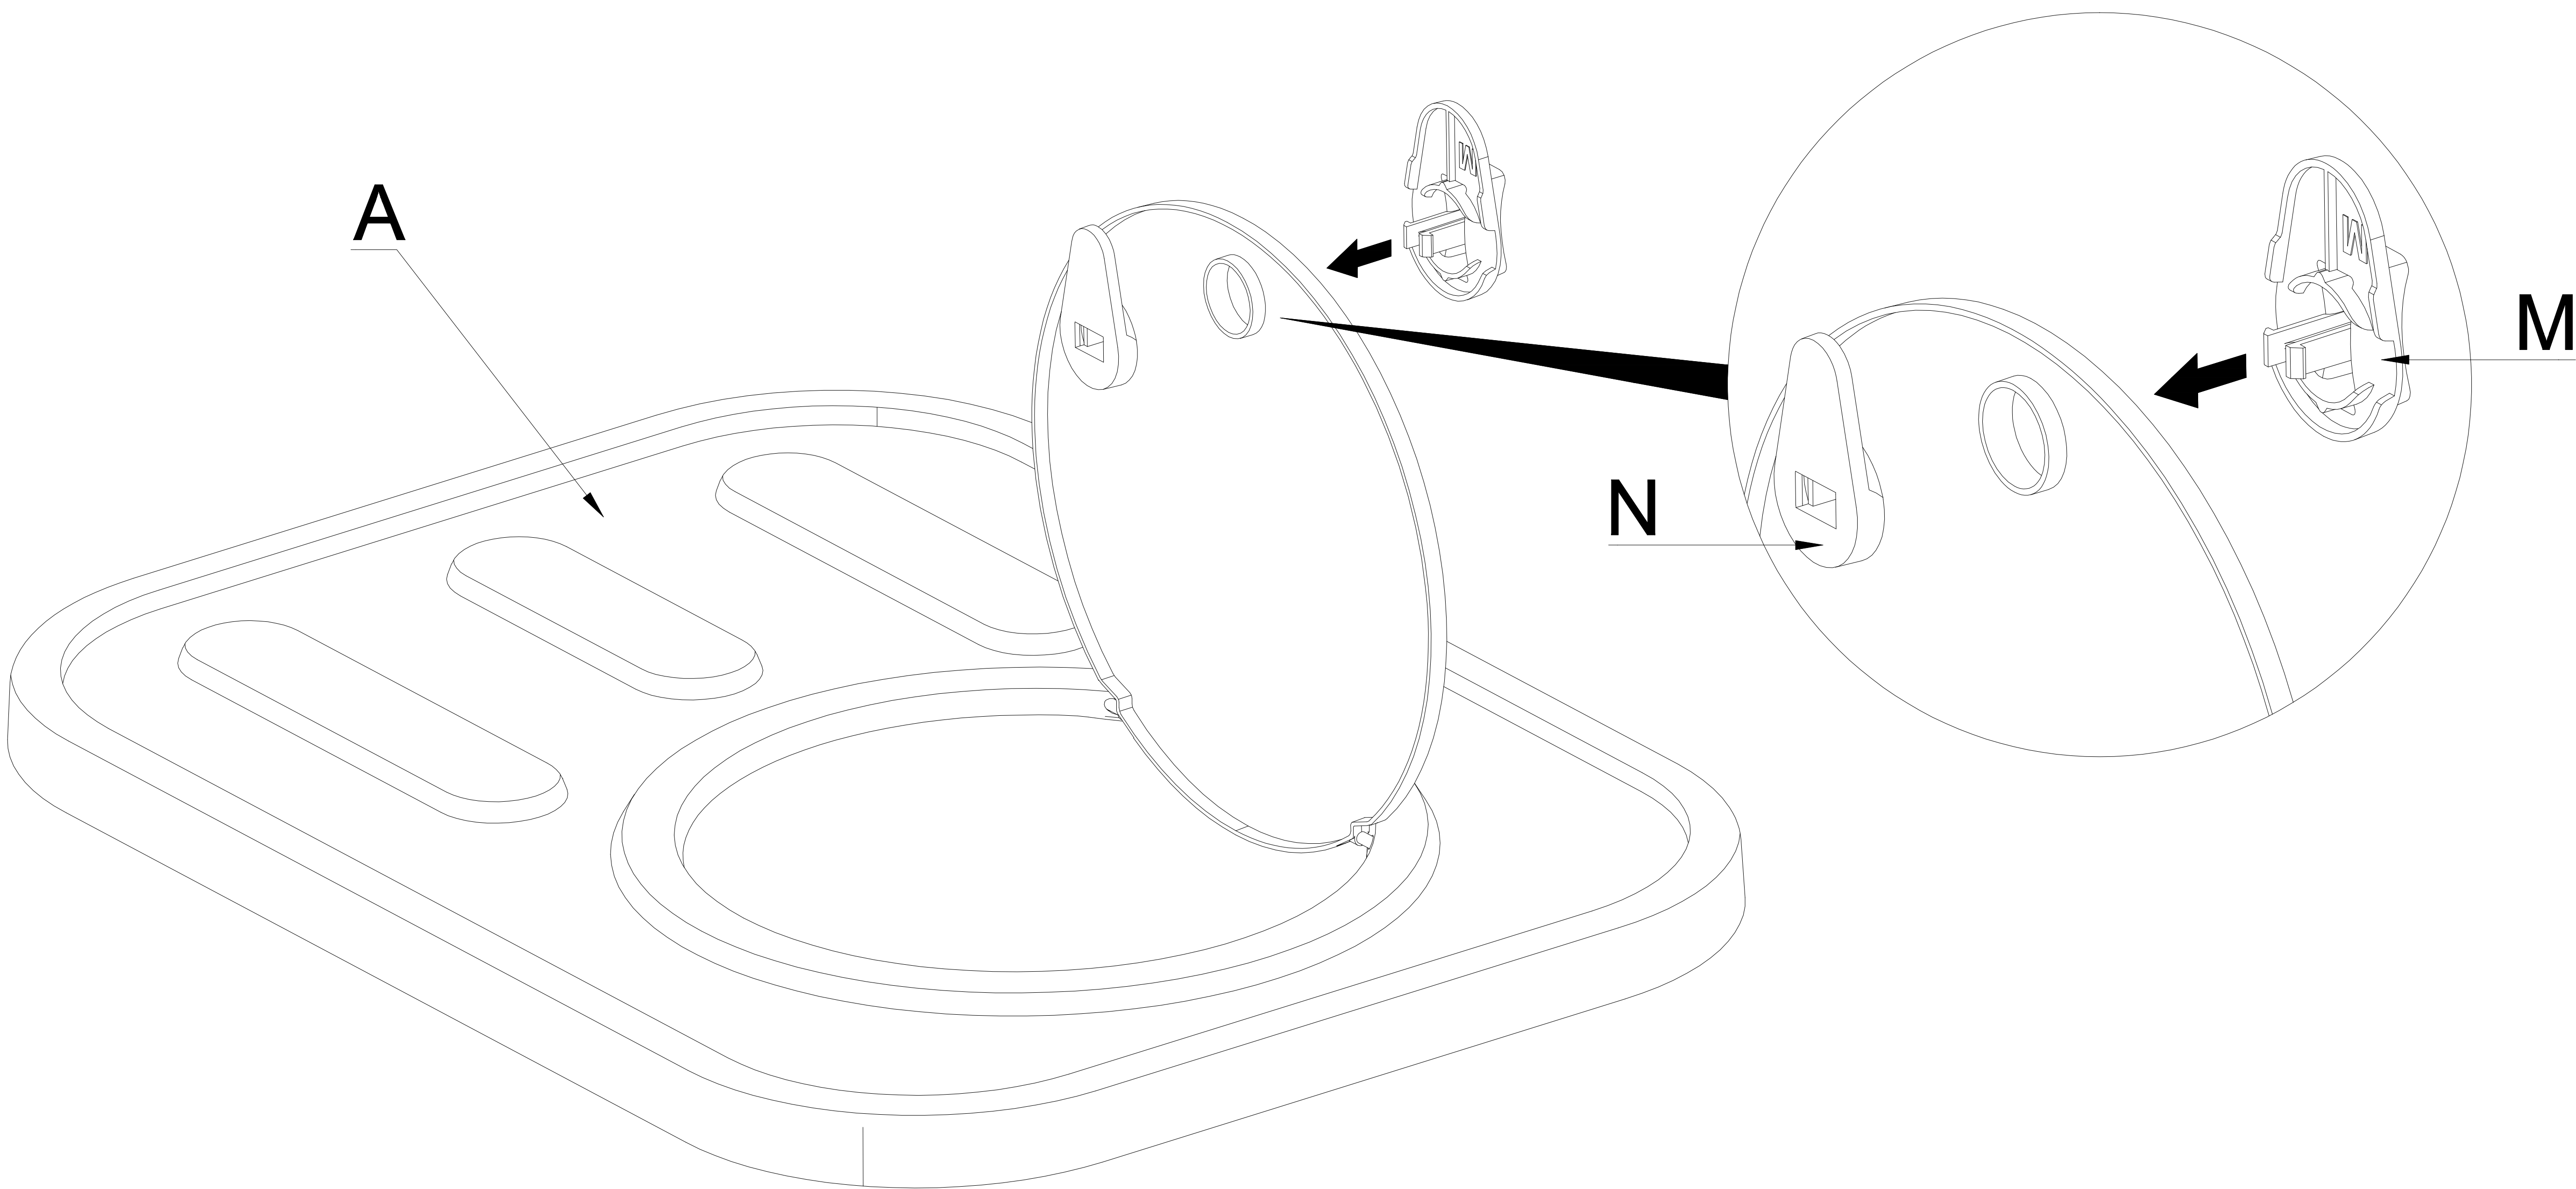


7

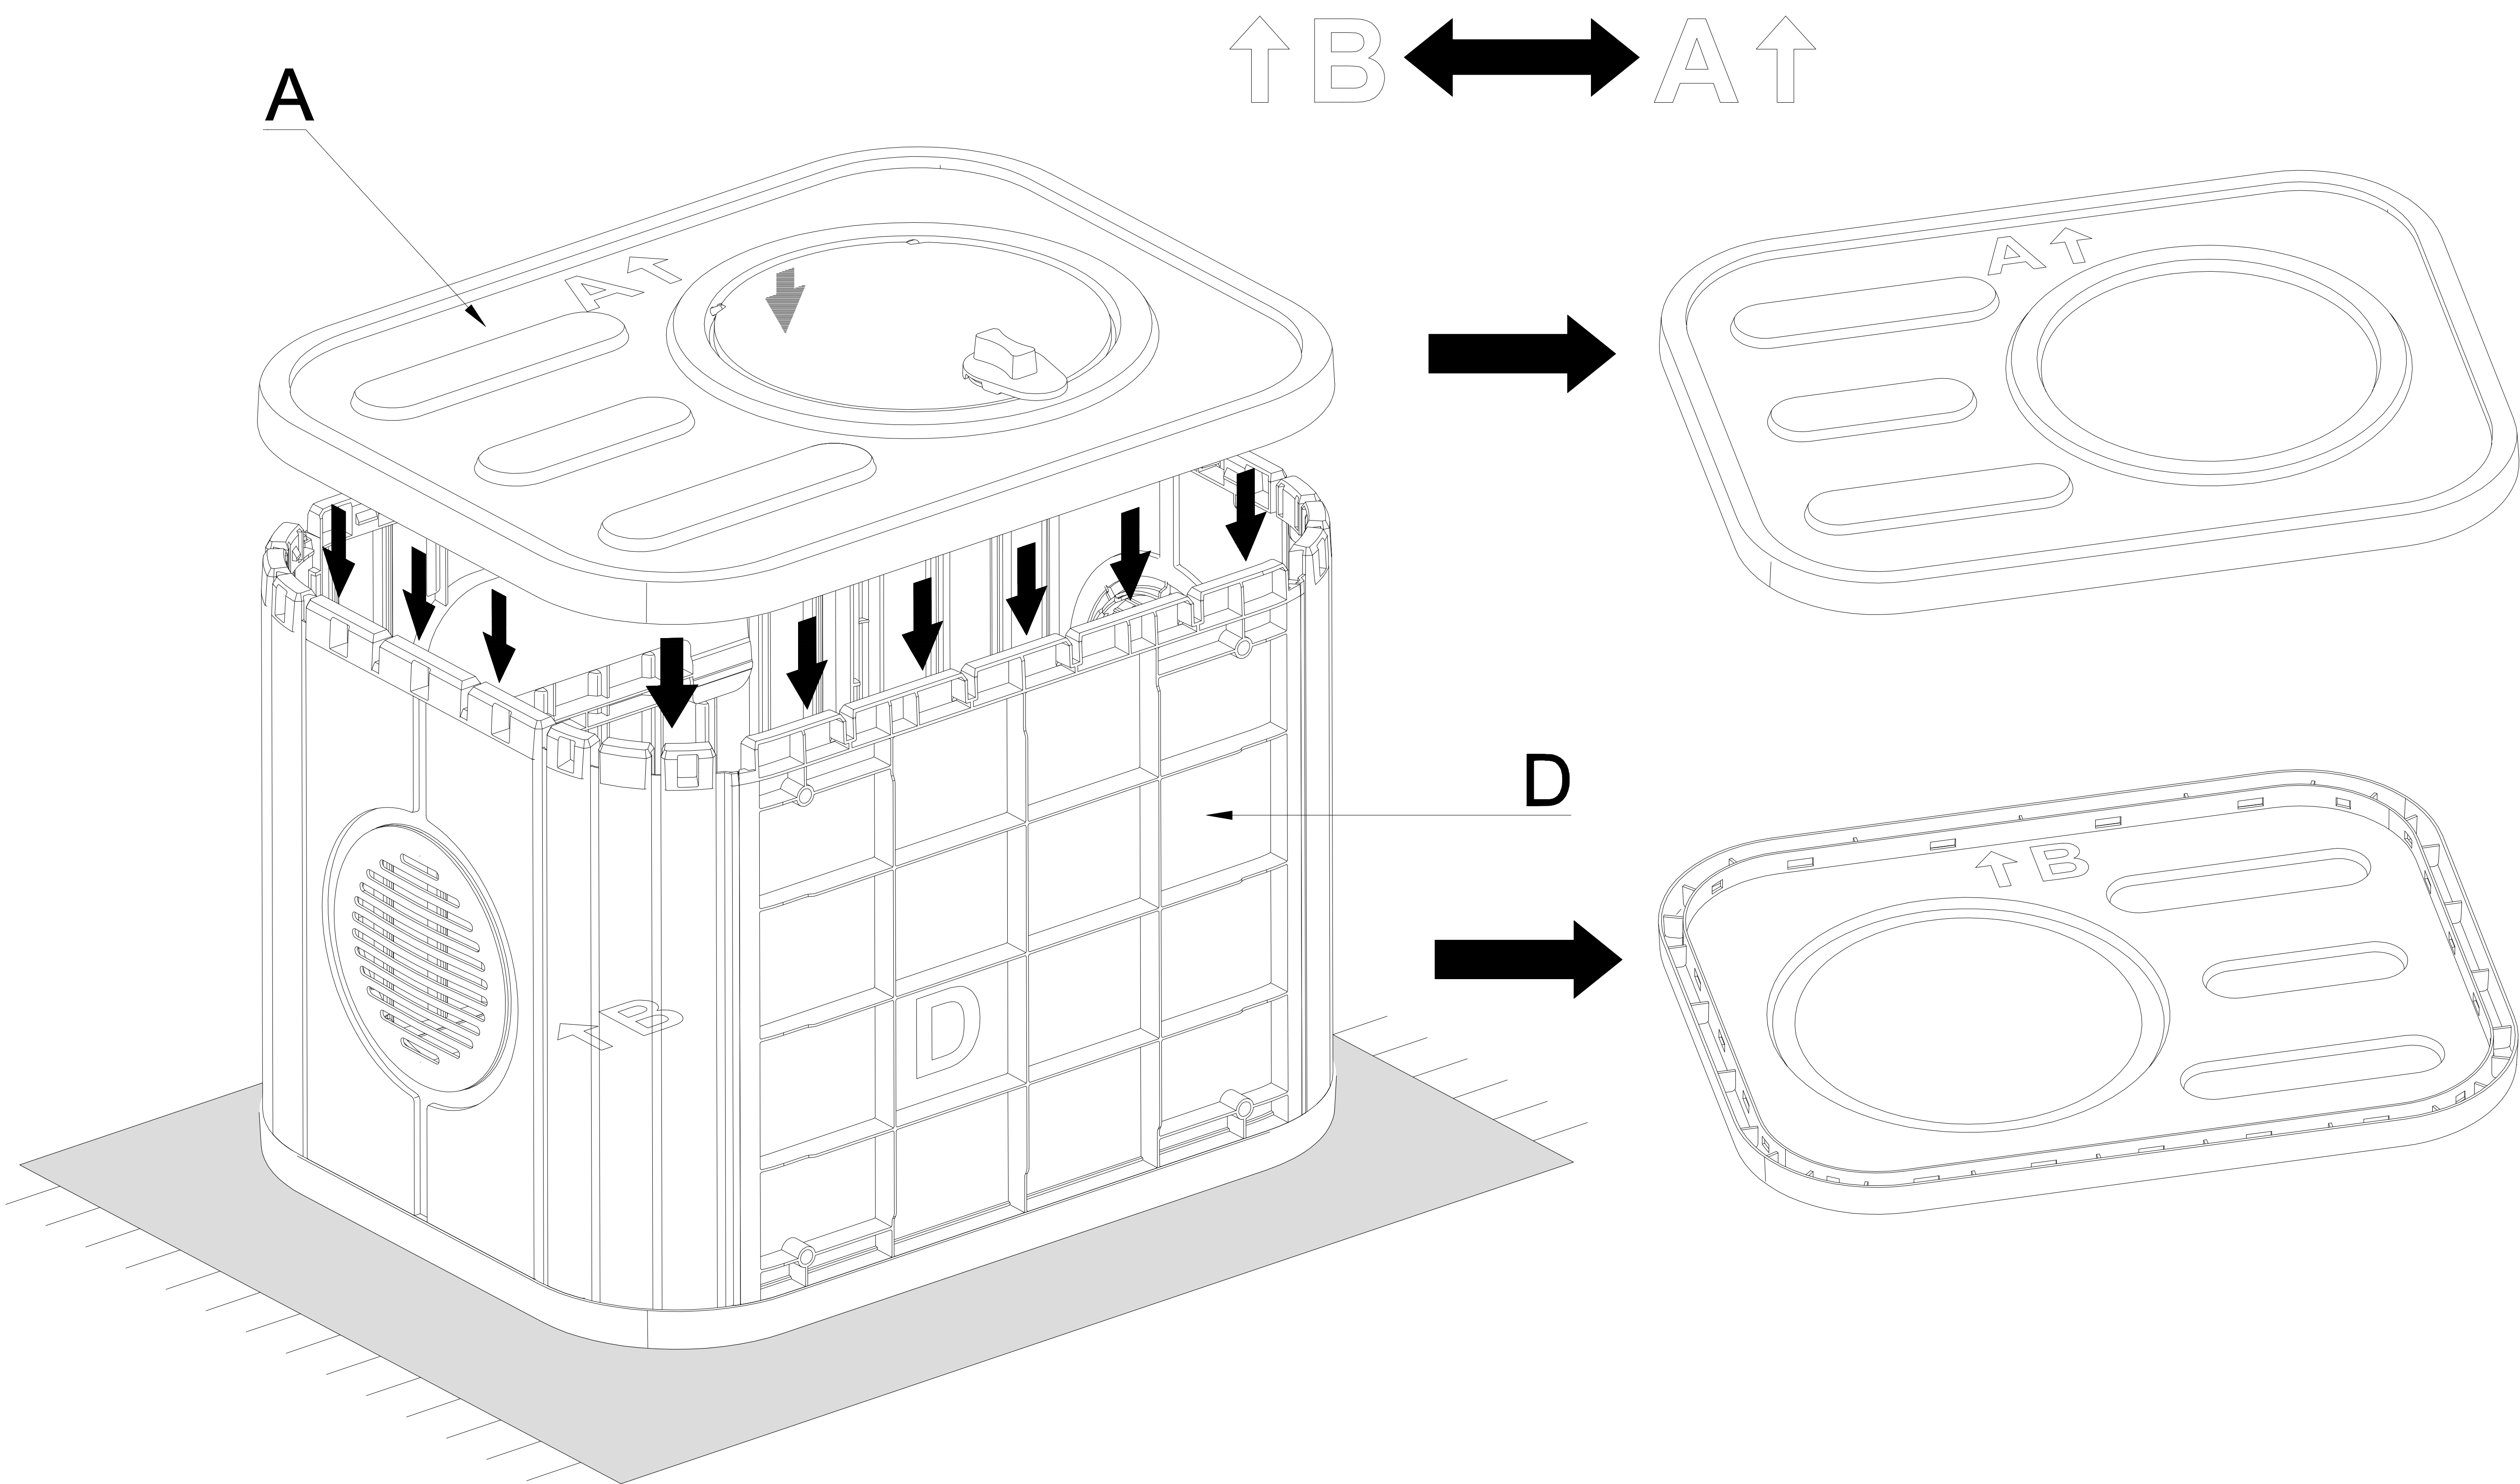

8

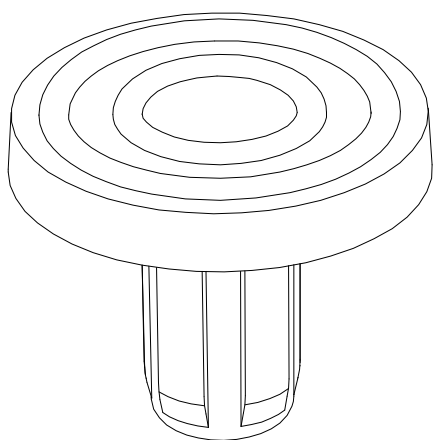

(X4)

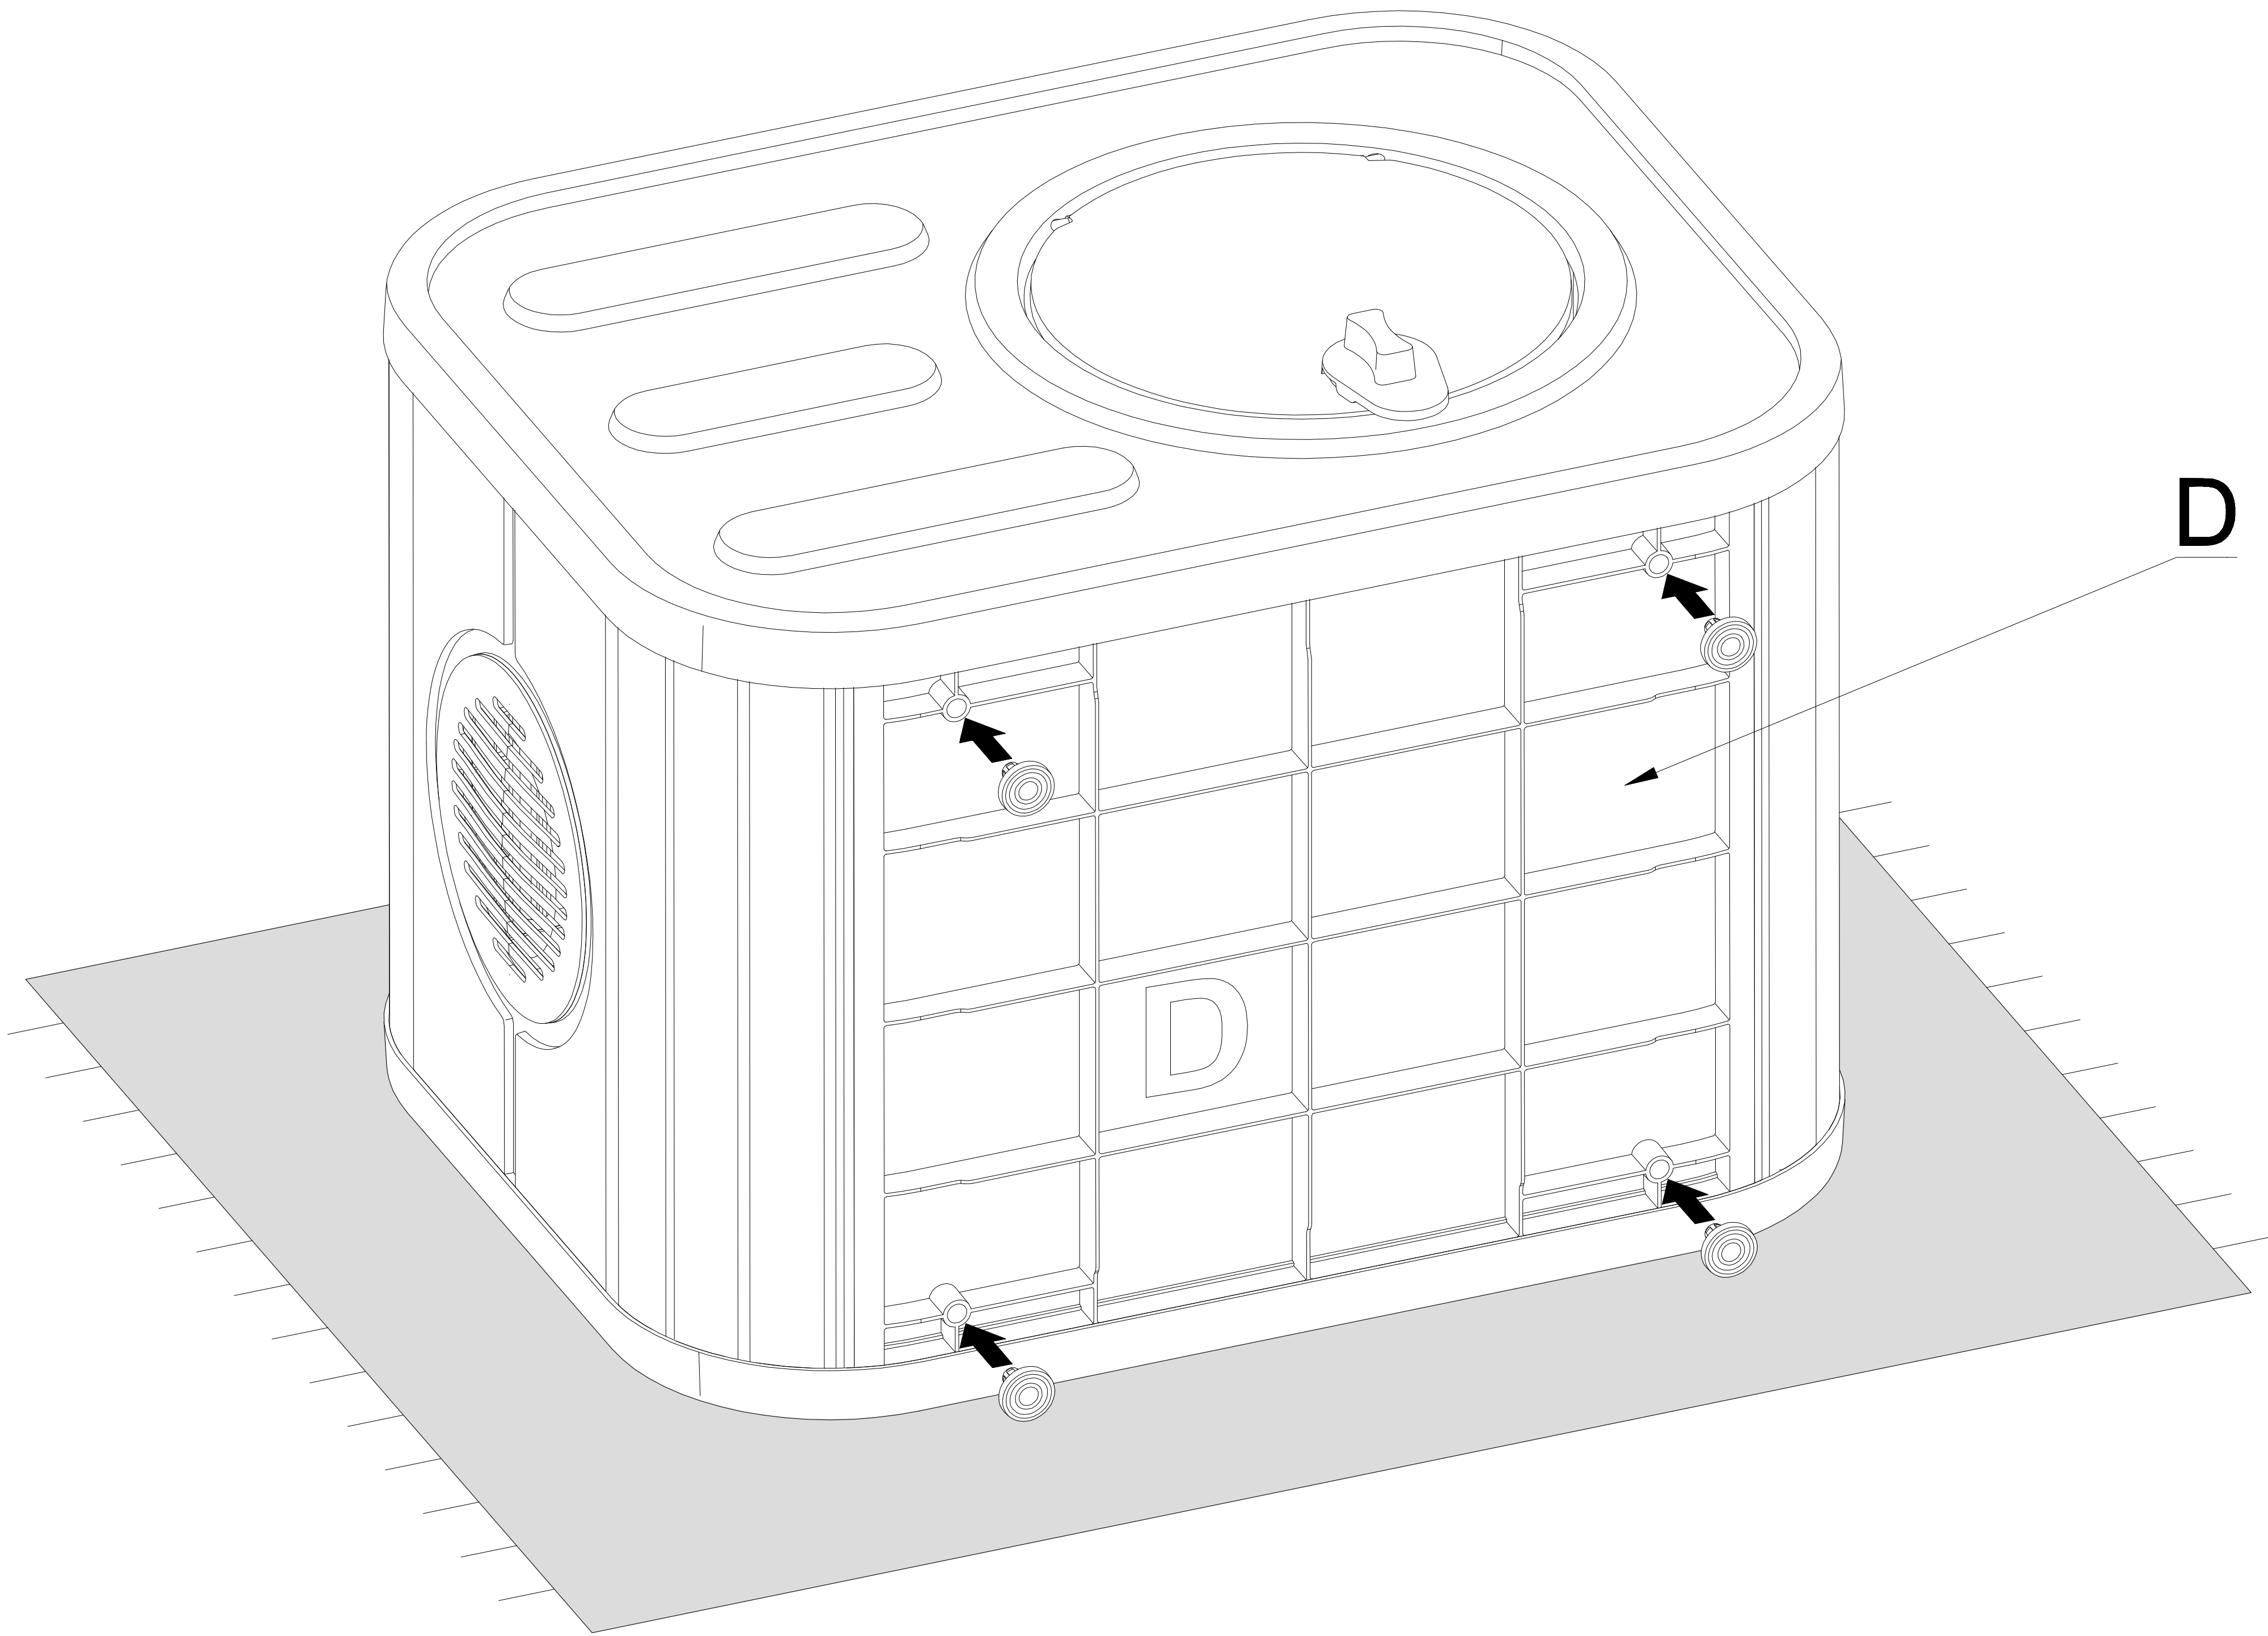

9

