


Adirondack Chair











ASSEMBLY MANUAL

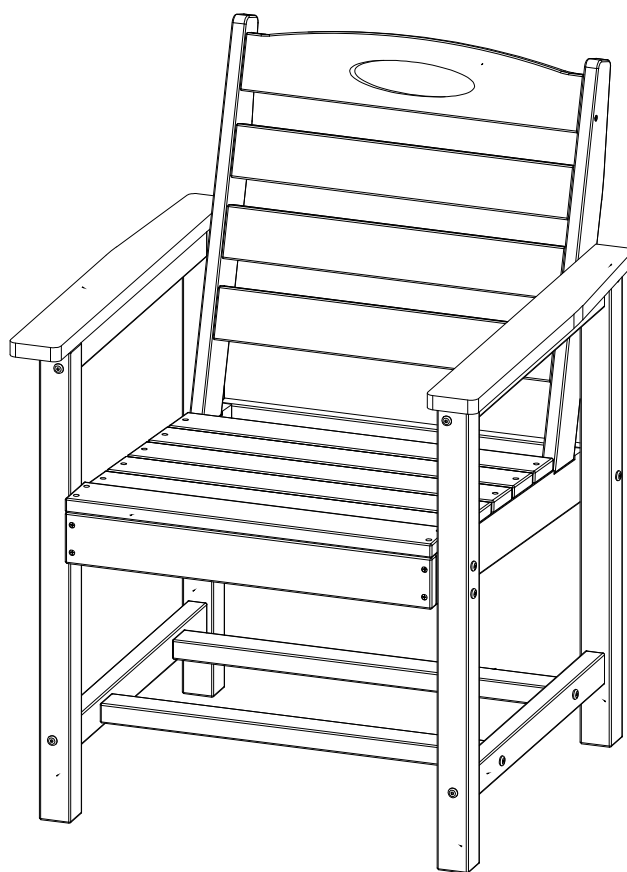



BEFORE STARTING ASSEMBLY






- ① Please check all parts and components to ensure that there are no damages or missing items BEFORE starting the construction of the product.
- ② For ease of construction, you may need a Power Drill (Cordless, Variable Speed).
- ③ It would be much easier to assemble the product with two or more people.
- ④ Some parts have metal edges. Please be careful when handling components.
- ⑤ Cleaning tips: For a quick clean, simply wipe with soap and water; for a deep clean, use a clean cloth to apply a solution of 1/3 bleach and 2/3 water to the lumber, let it sit for a few minutes (this won't affect the color), then loosen dirt and debris in surface grooves with a soft-bristle brush and rinse with a hose.

IMPORTANT: Please contact Customer Service if you have any problems or discover any missing parts.

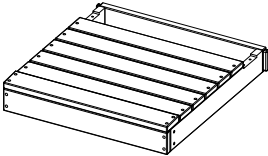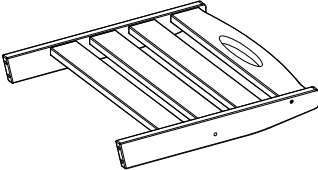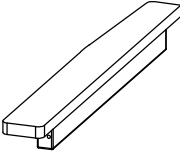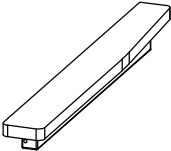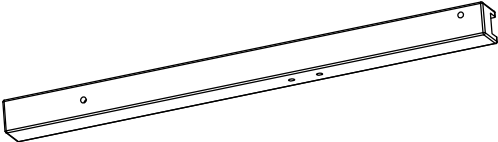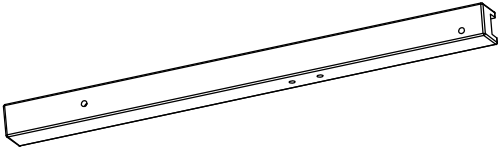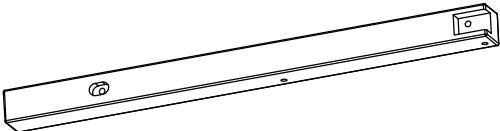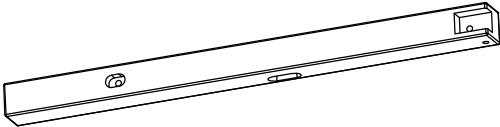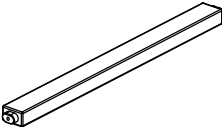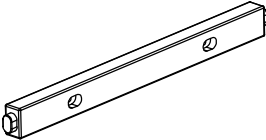A		1
B		1
C		1
D		1
E		1
F		1
G		1
H		1
I		2
J		2

1	 ST6*65	6
2	 M6*70	6
3	 M6	6
4		6
5	 ST6*80	4
6	 ST6*60	4
7	 ST6*40	4
8		1
9		1

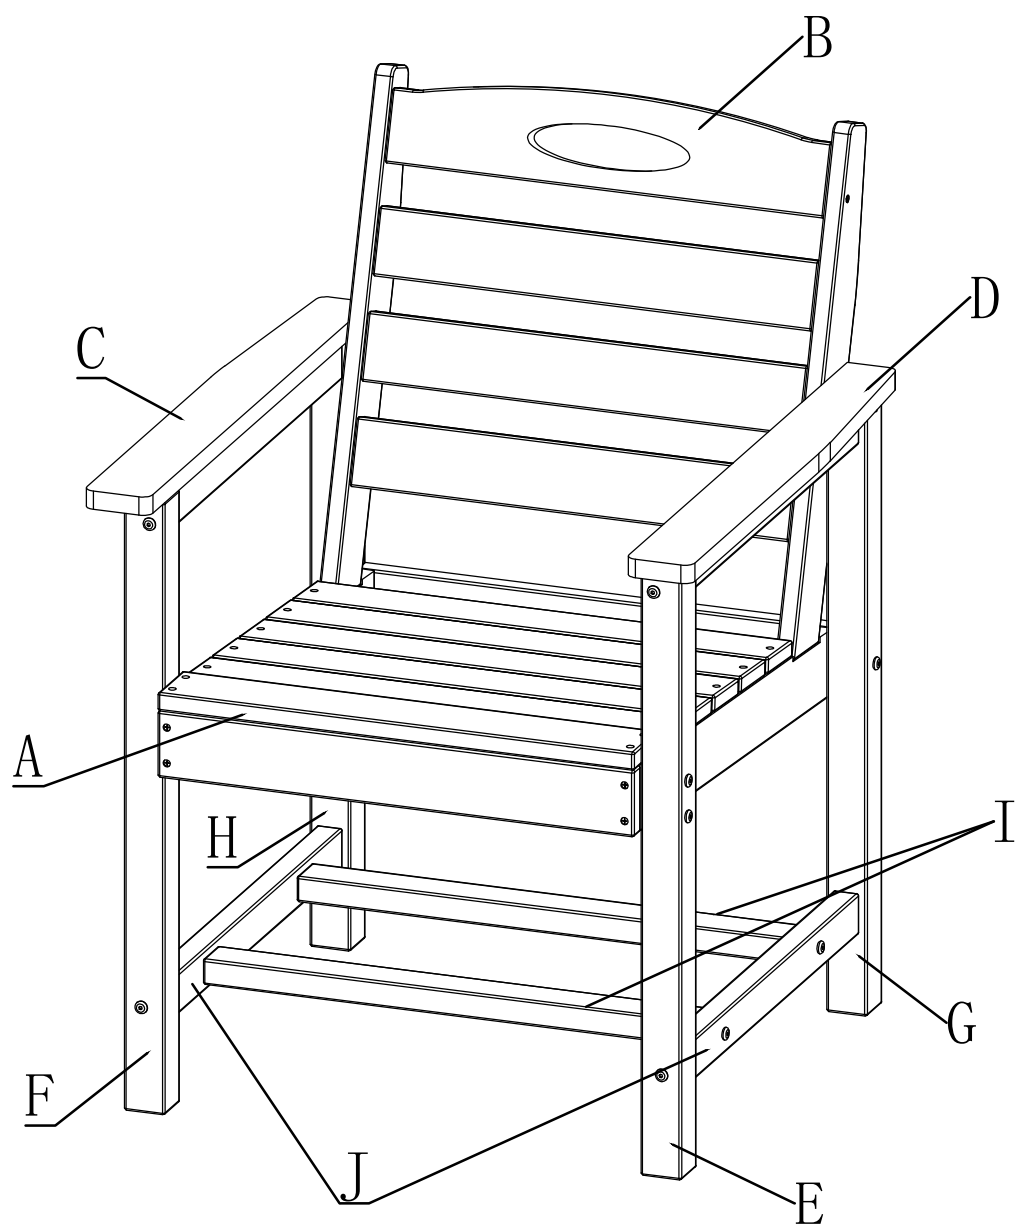


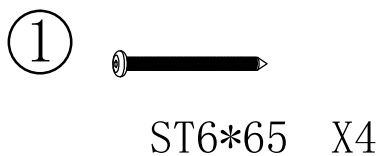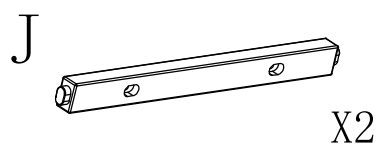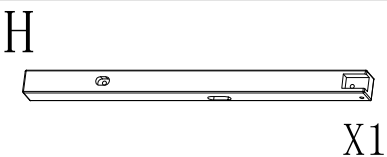
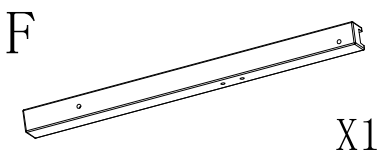
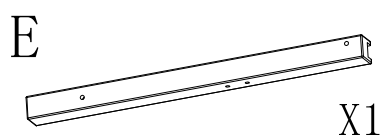


Step1

Attach Braces #J to Leg #F and Leg #H with 2 Screws #1.Repeat the another side.

Pre-drilled holes indicate screw placement only.
Fully thread screws into material for full engagement.

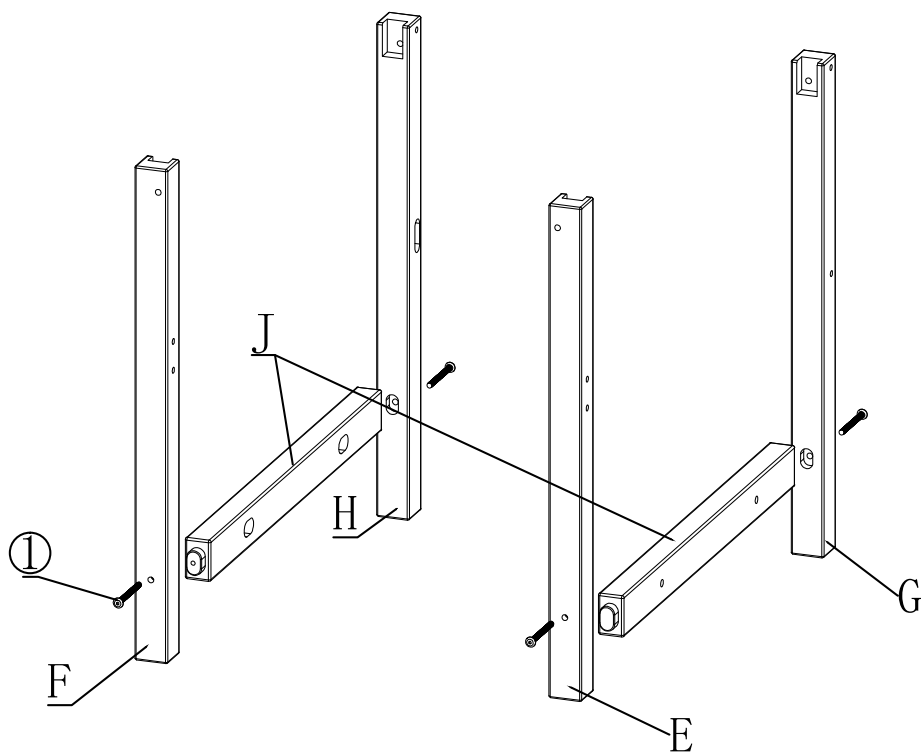


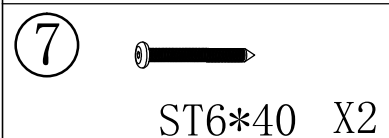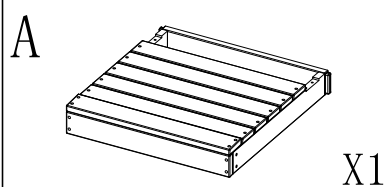


Step2

(1) Attach 2 Braces #I to Brace #J ,with 2 Screws #7.

(2) Attach the Seat Slats #A to the assembled structure. Use 2 Bolts #2,2 Washers #4, and 2 Nuts #3 on one side, and use 1 Screw #1 on the other side.

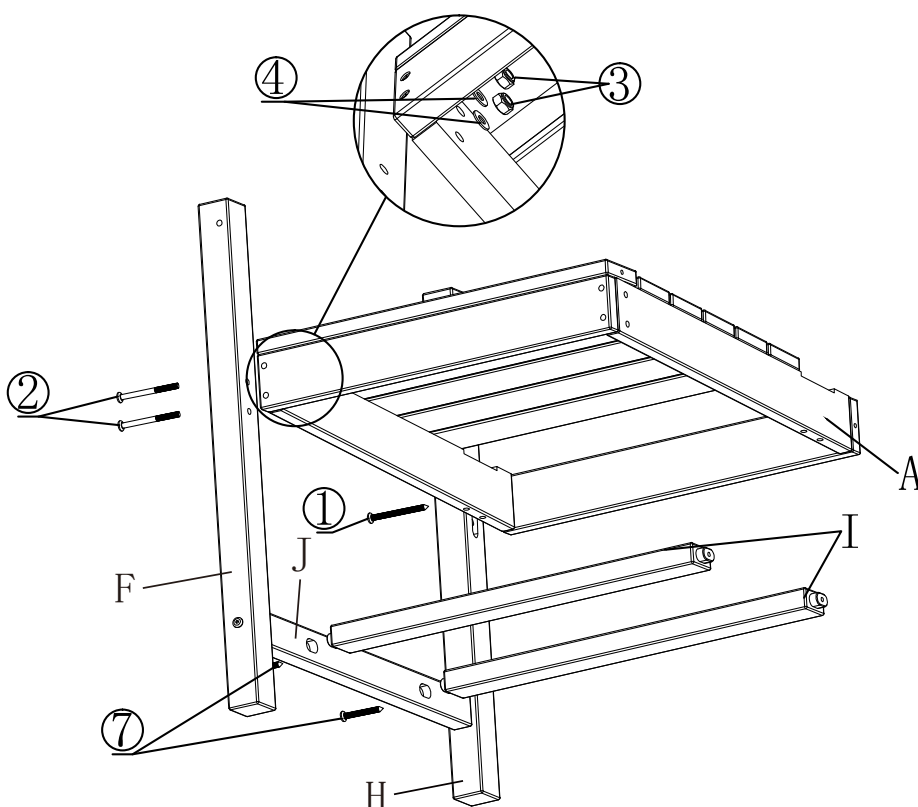

①		ST6*65	X1
②		M6*70	X2
③			X2
④			X2
⑦		ST6*40	X2


Step3

Attach Leg #E, Leg #G, and Brace #J together to the assembled structure as follows:

Leg #E: 2 Bolts #2, 2 Washers #4, and 2 Nuts #3

Brace #J: 2 Screws #7

Leg #G: 1 Screws #1

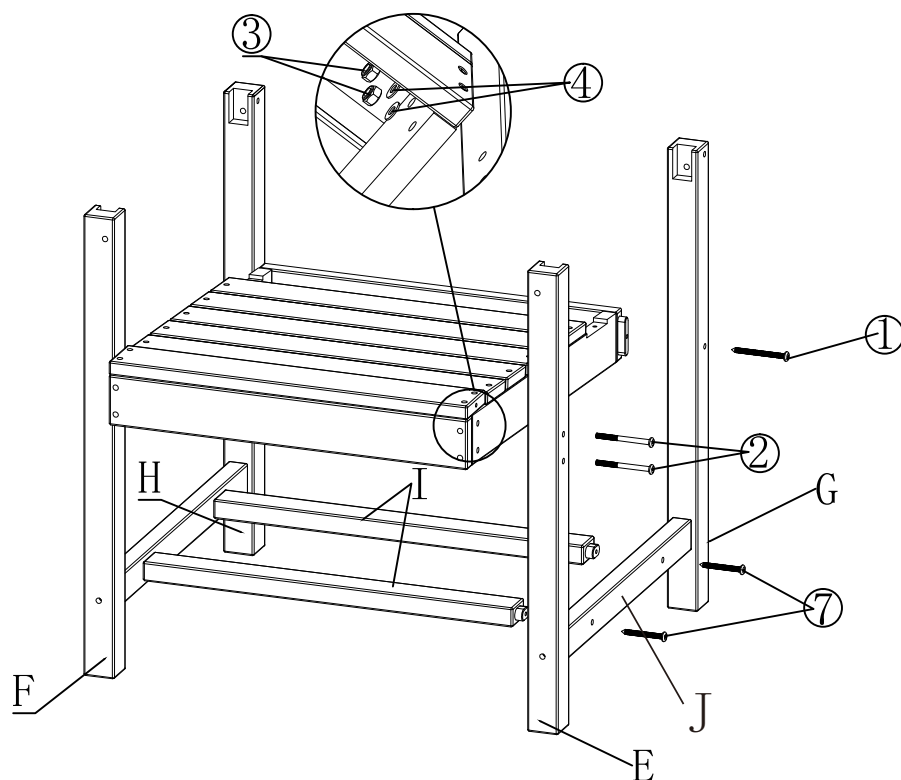

C



X1

D



X1

⑥




ST6*60


X4

Step4

Attach Armrest Part #D and Armrest Part #C to the 4 legs using 1 Screw #6 per leg (4 screws in total).

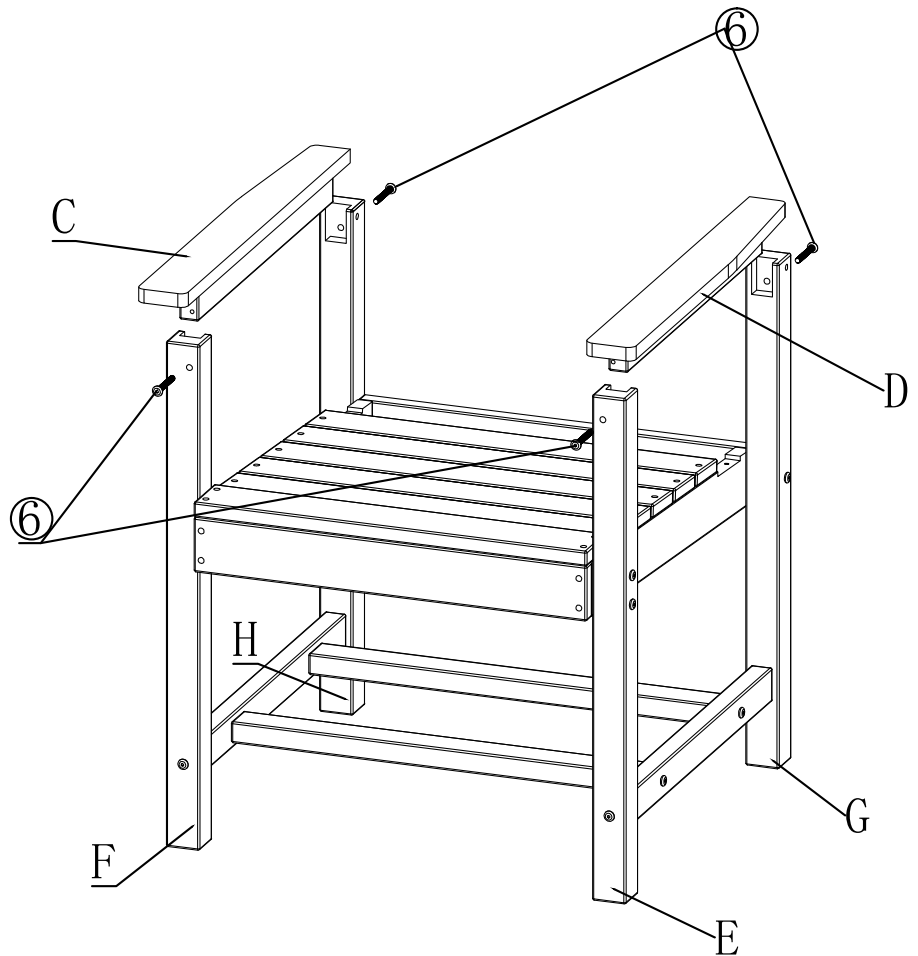


B

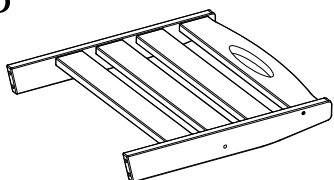

X1

②



M6*70

X2

③



M6

X2

④



X2

⑤




ST6*80

X4

Step5

Attach Backrest Slats #B to the frame. On each side of the backrest: 2 Screws #5, 1 Bolt #2, 1 Washer #4, and 1 Nut #3.

Align the holes and assemble Bolts #2 first.

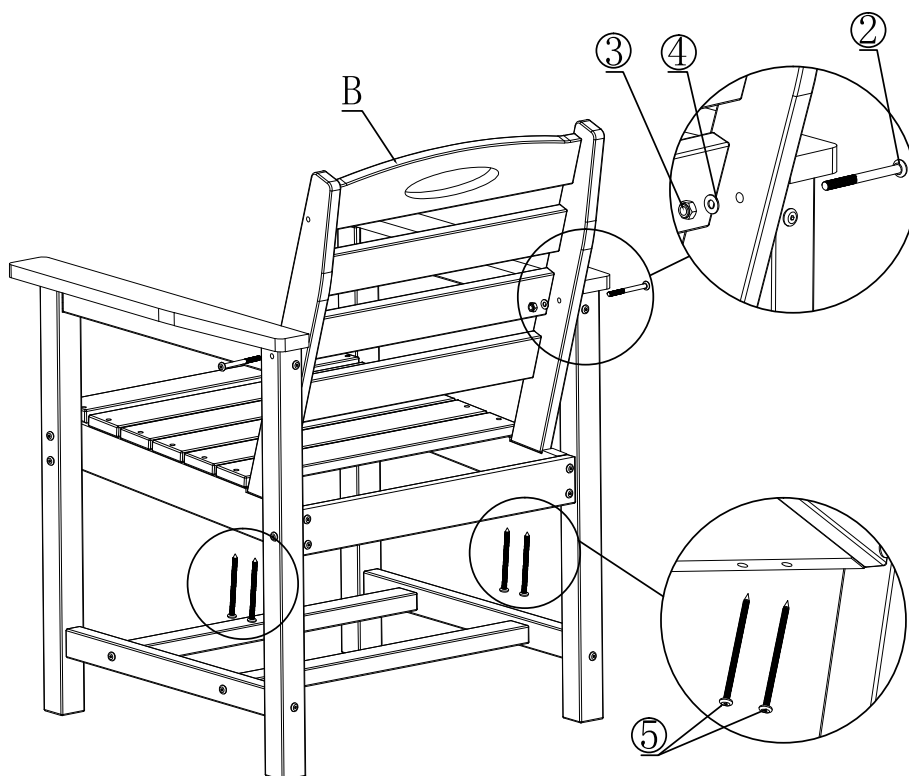

Thanks for your purchase.

At our outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.