

# Installation instruction

## Tools required:

Drill (NOT INCLUDED)  
Screwdriver

## NOTE:

For the best installation of toilet paper basket, we suggest to leave the nails out of the wall for 0.1 in.  
Each piece of our shelves wood has a unique pattern and color.

**\*\*No pre-drilled holes\*\***

## Package Includes:

**Pine Wood Shelves(\*\*no pre-drilled holes\*\*) x 2**

**Wall Decor Sign x 1**

**Wire Storage Basket x 1**

**Metal bracket x 2**

**Installation Manual x 1**


**6 Long Screws**

**4 Short Screws**


**6 Plastic Anchors**

**1 Screwdriver**

## Shelves Installation

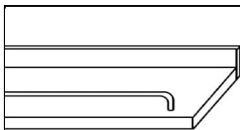

Step 1. install the metal bracket on the pre-drilled wooden board.

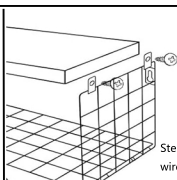


Step 2. Use shortscrews to fasten the wire basket and the board together.




Step 3. Drill 6 holes on the wall with the drill bit.



Step 4. Screw the plastic anchors into the hole.

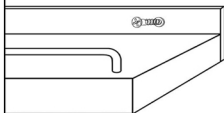

Step 5 .Fix the assembled shelf on the wall with long screws.

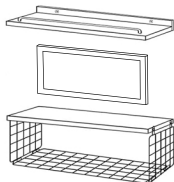

Step 6 . Then, you will get elegant and sturdy floating shelves.