



3. Backrest to Seat Assembly

Insert a 3-inch bolt through the seat assembly center support hole and backrest center support bottom hole. Place a 1/4-inch washer and nut on end of bolt and tighten.

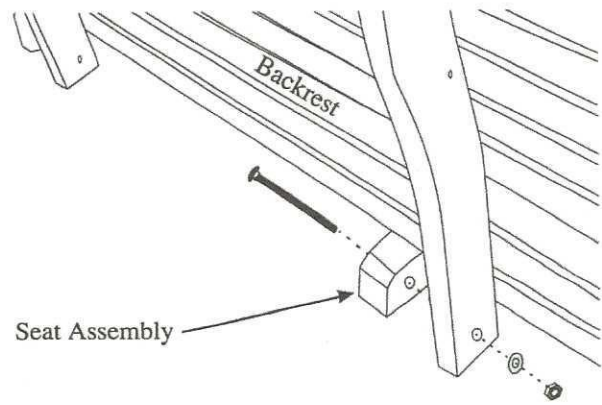


4. Armrest to Backrest Assembly

Insert other eyebolt from 3 foot chain through the back hole in armrest and through the backrest assembly place 5/16 washer and nut on end and tighten.

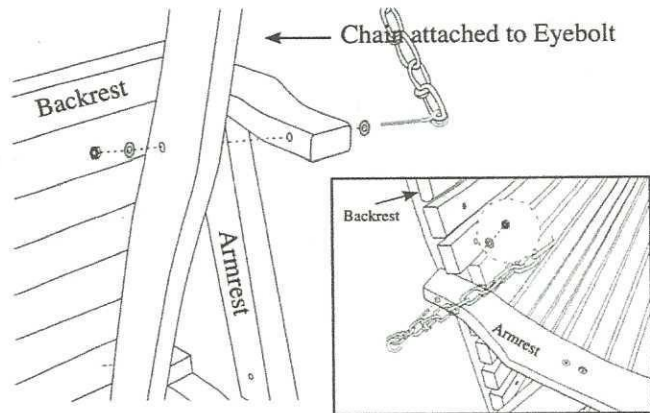

5. Hanging Swing

Determine suitable location for swing to hang keeping in mind necessary clearance during use. Install two eyebolts or hooks (Not included) 52-56 inches apart above desired location. **IMPORTANT: Make sure eyebolts or hooks and structure are strong enough to carry weight of swing and occupants.**

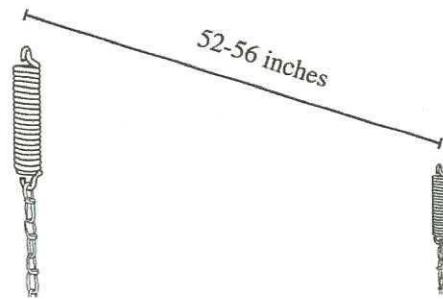

6. Swing Adjustments

Place an S-hook in the middle of the chain between the front and rear of each armrest. Connect one end of the 6-foot chain to an S-hook and the other end to the shock. Adjust height of swing by taking up extra links in chain at shock connections. Excess chain may be removed with bolt cutter after desired height is determined. **NOTE: Moving S-hook forward and backward on chain between front and rear of armrest will level seat.**

