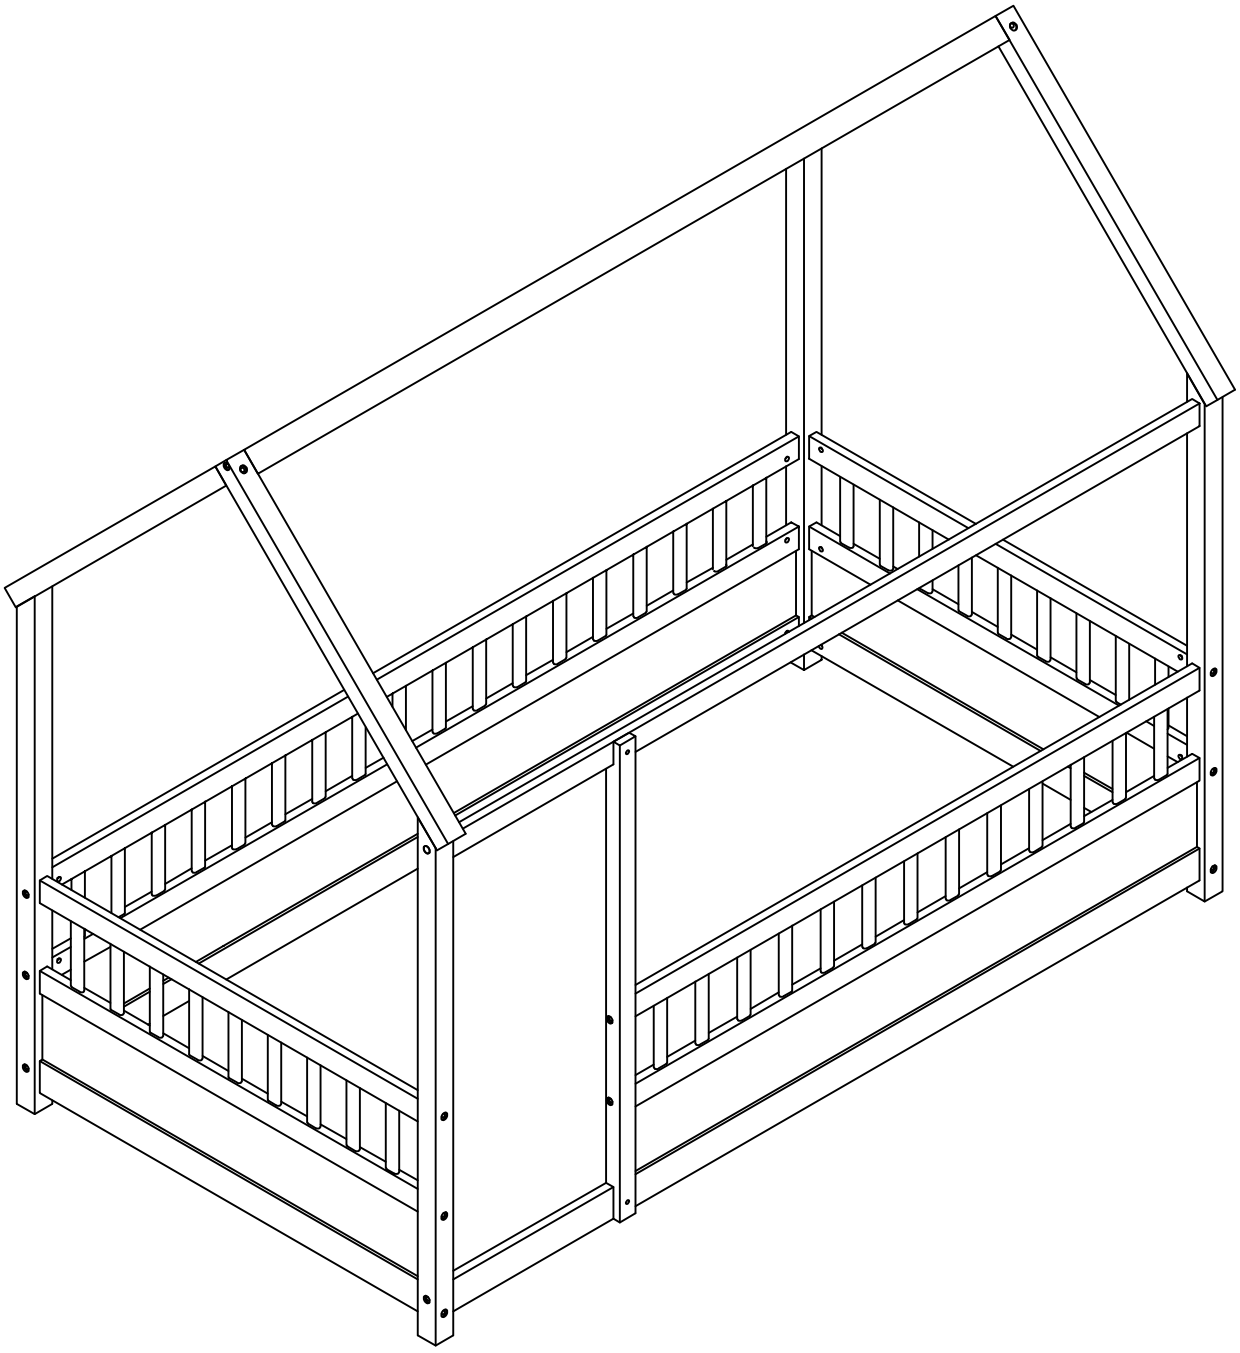
ASSEMBLY INSTRUCTION

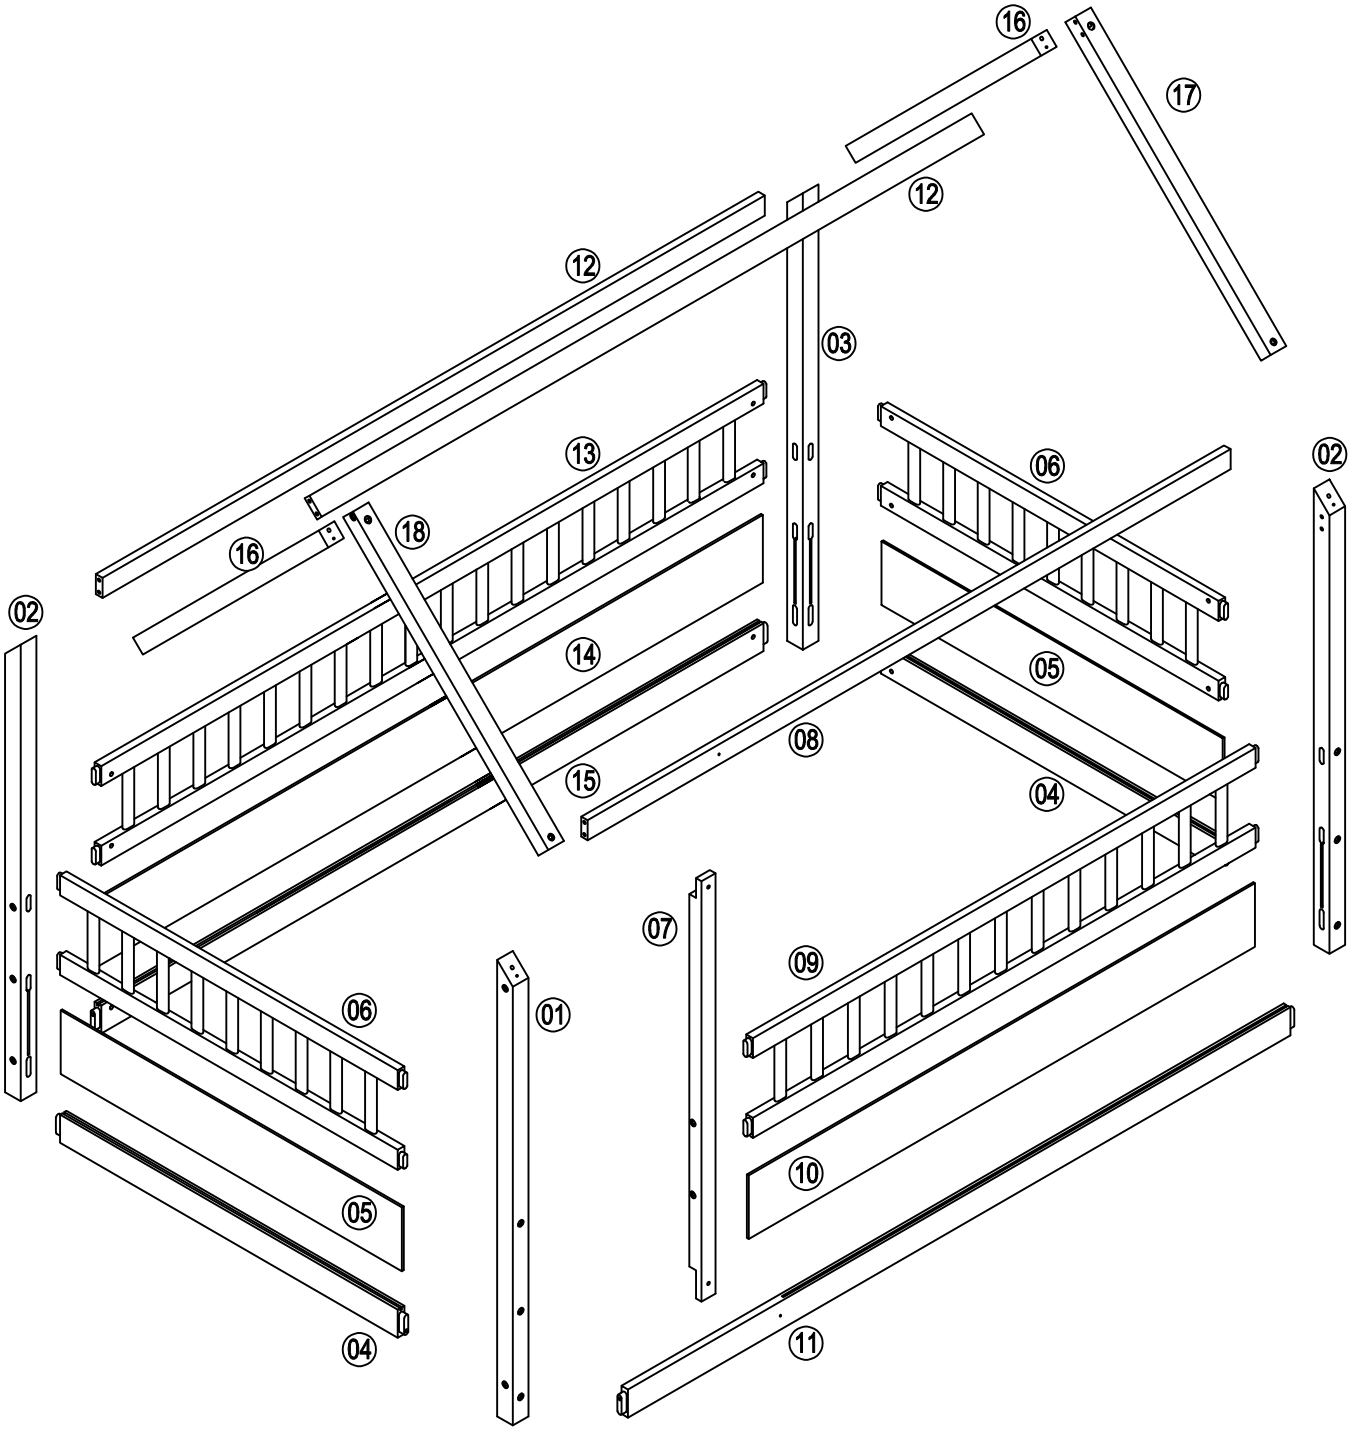
TWIN HOUSE BED



IMPORTANT NOTE
















1. PLACE ALL PARTS ON A CLEAR AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
2. BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
3. DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SETUP

DETAILS



02/08

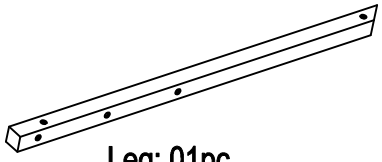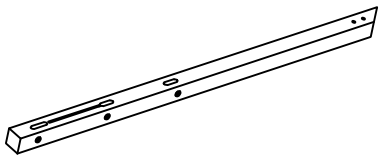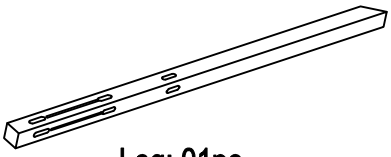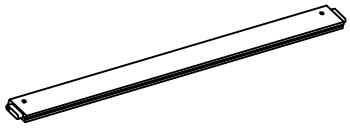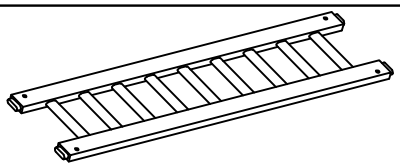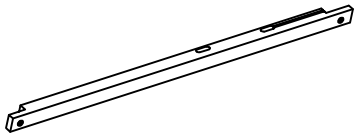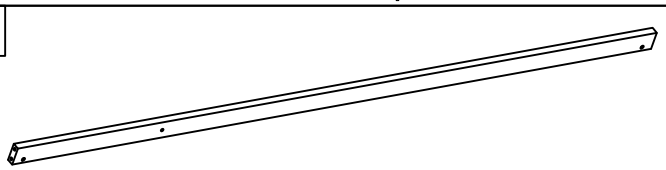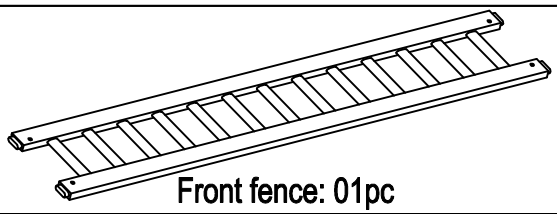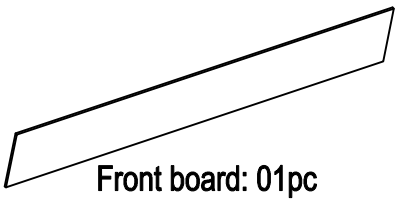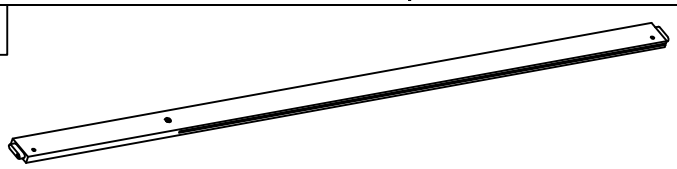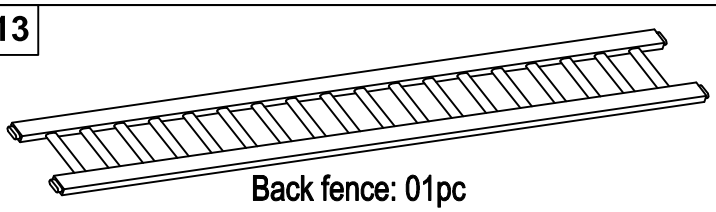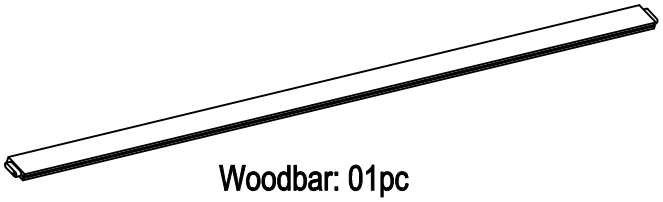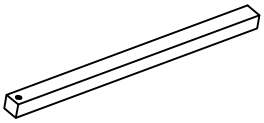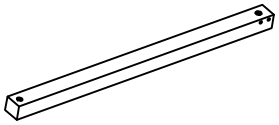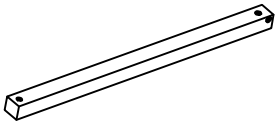PART LIST

01  Leg: 01pc	02  Legs: 02pcs
03  Leg: 01pc	04  Woodbar: 02pcs
05  Side board: 02pcs	06  Side fence: 02pcs
07  Woodbar: 01pc	08  Woodbar: 01pc
09  Front fence: 01pc	10  Front board: 01pc
11  Woodbar: 01pc	12  Woodbar: 02pcs
13  Back fence: 01pc	14  Back board: 01pc
15  Woodbar: 01pc	16  Woodbar: 02pcs
17  Woodbar: 01pc	18  Woodbar: 01pc

03/08

HARDWARE LIST

A



Ø1/4" x 80mm
Hex-Head bolts: 30pcs

B



Ø1/4" x 55mm
Hex-Head bolts: 4pcs

C



Ø1/4" x 25mm
Hex-Head bolts: 2pcs

D




Ø1/4" x 13mm
Horizontal- Hole bolts: 30pcs

E



Ø8 x 30mm
Wood dowel: 12pcs

F



Ø1/4" x 16mm
Hex-head crown: 2pcs

G




Ø1/4" x 60mm
Hex-head Wood Thread Screws: 2pcs

H



M4
Allen key: 1pc


Assembly Tool Required (Not included)



04/08

STEP1:


A	D	H
12pcs	12pcs	01pc

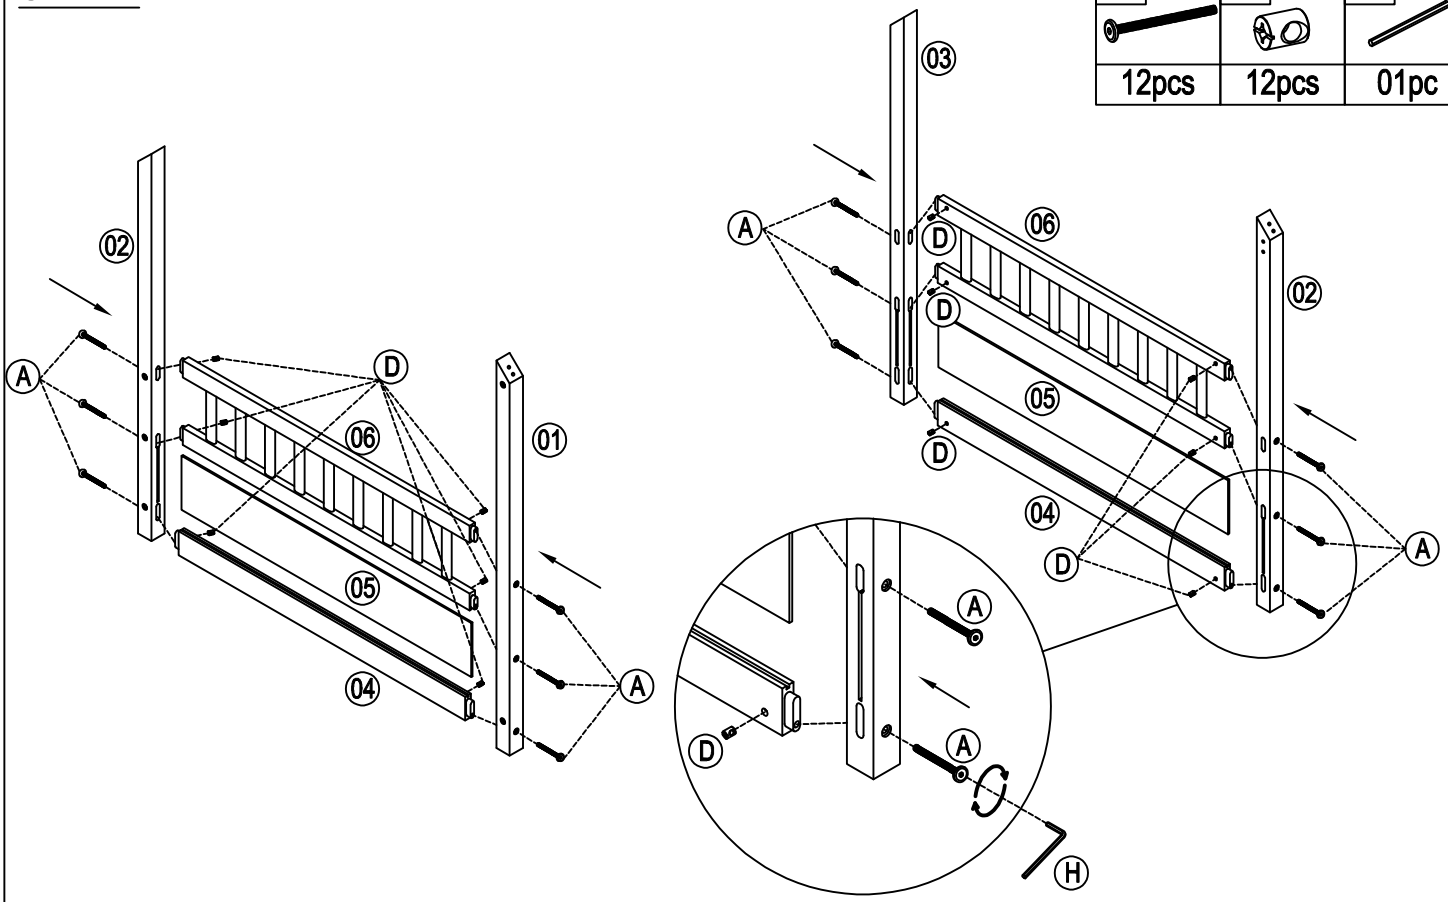

STEP2:


A	D
10pcs	10pcs

E	H
2pcs	01pc

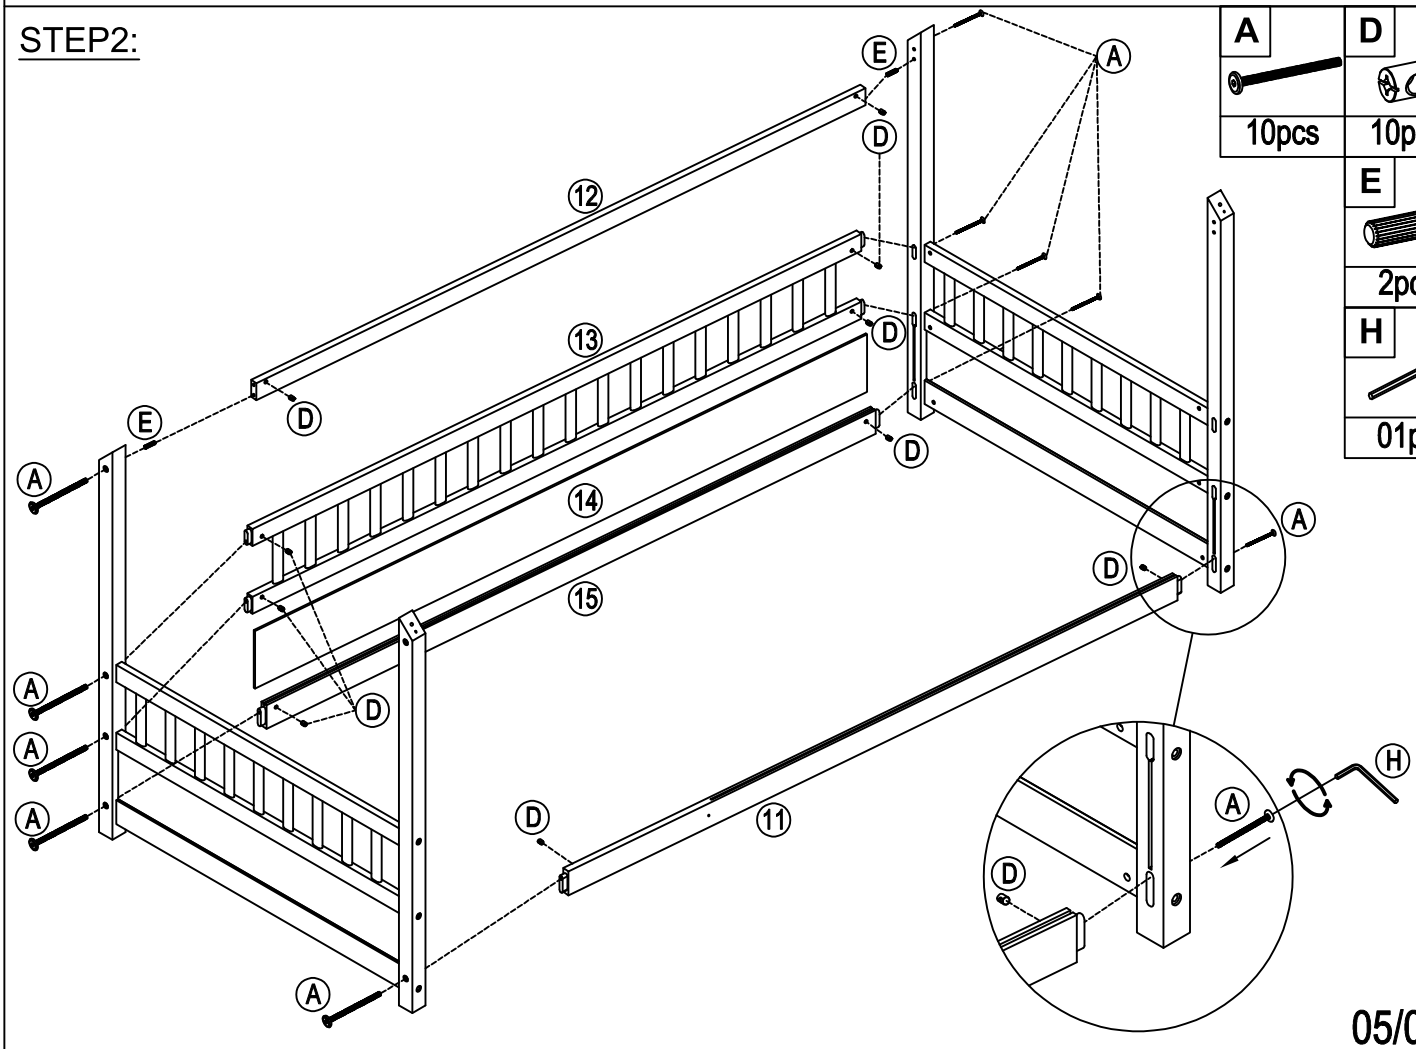


05/08

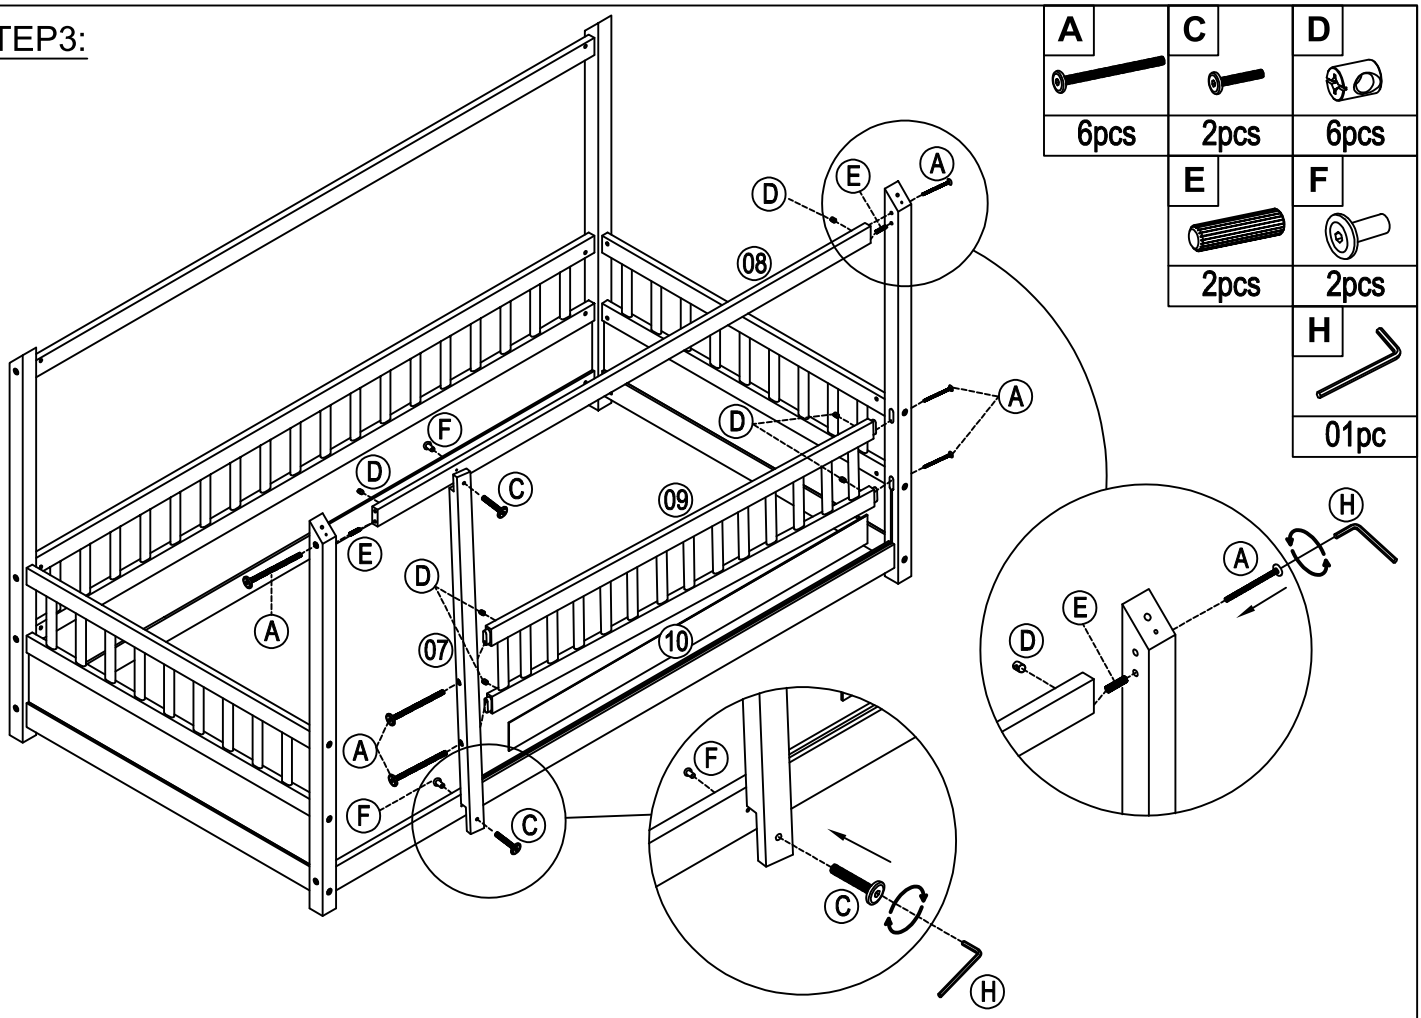
STEP3:


A
6pcs
C
2pcs
D
6pcs
E
2pcs
F
2pcs
H
01pc
08
09
10
07

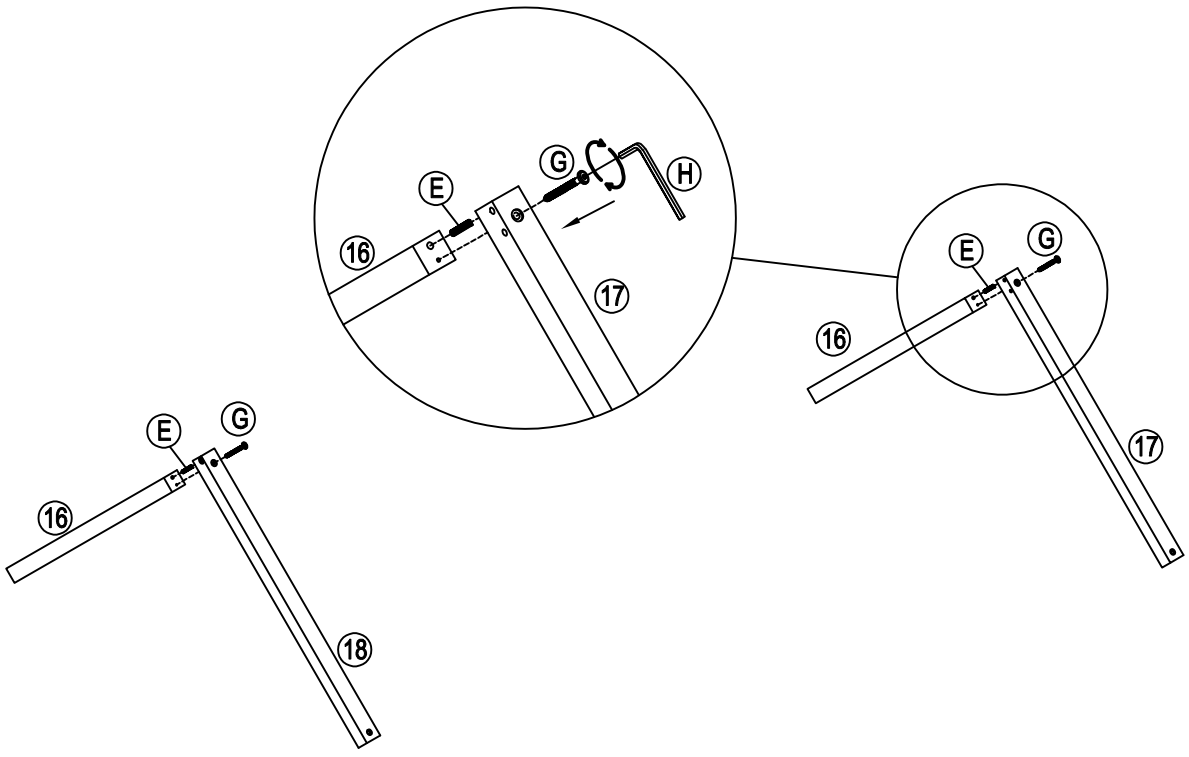STEP4:



G
2pcs
E
2pcs
H
01pc
16
17
18

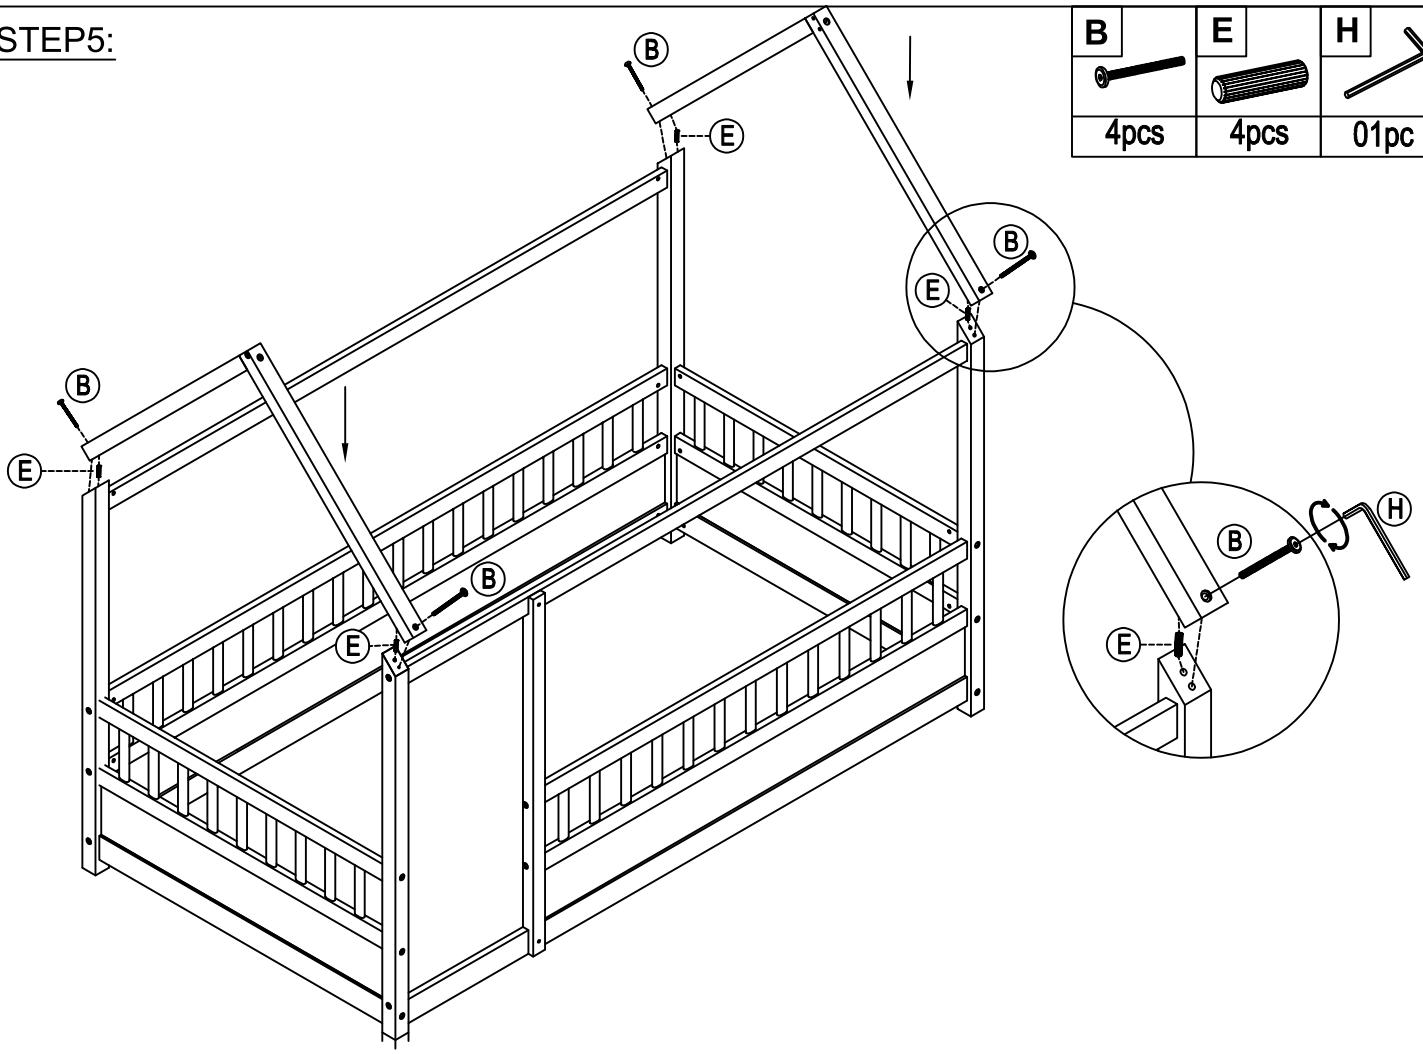STEP5:



B	E	H
4pcs	4pcs	01pc

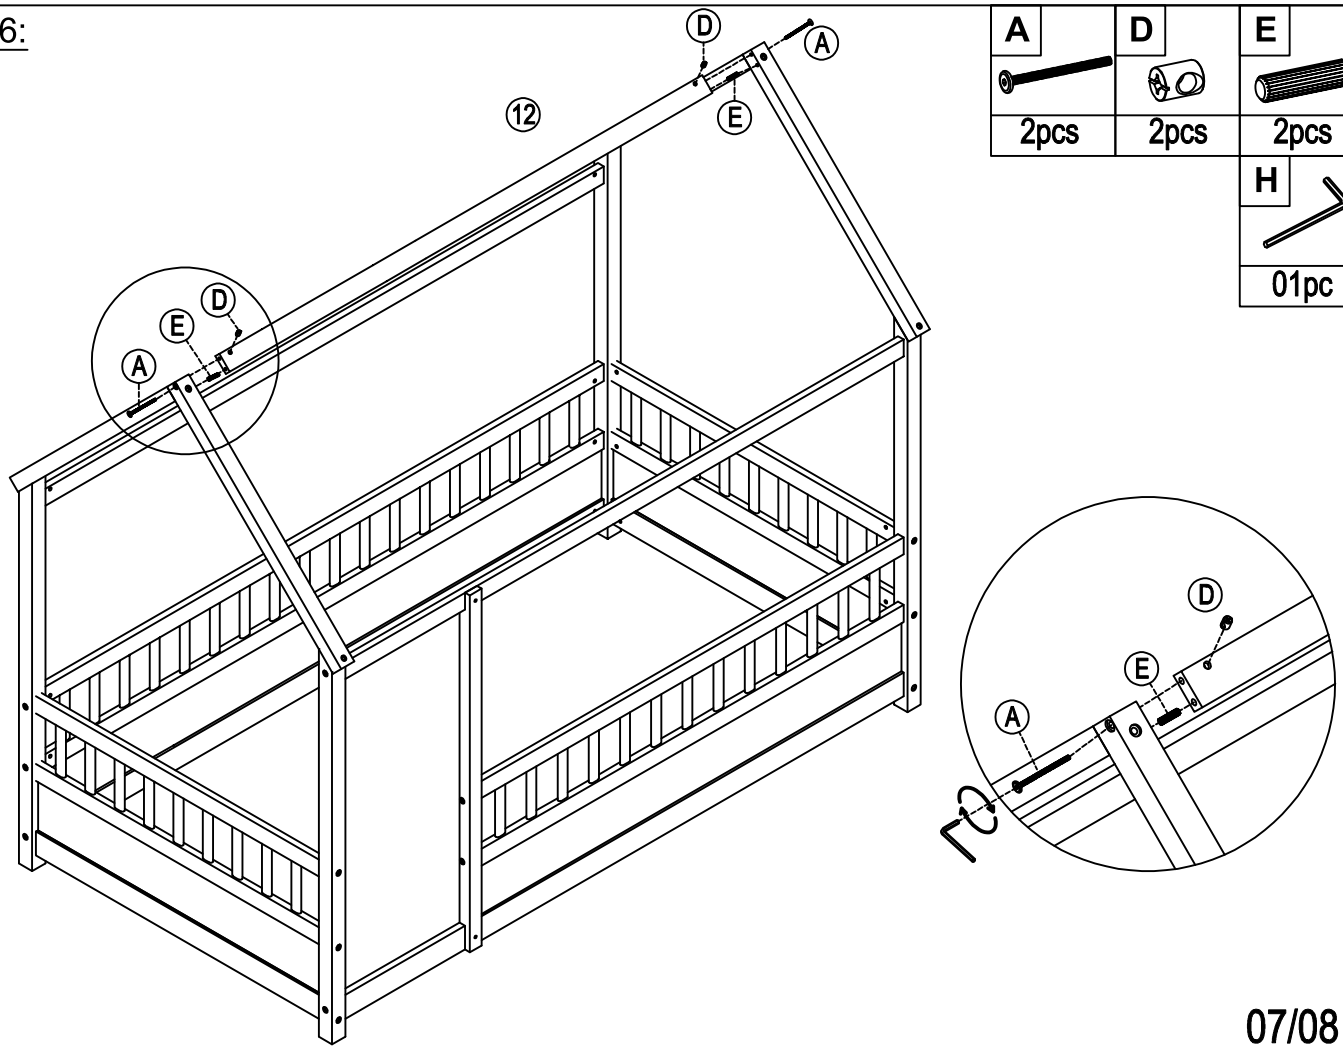STEP6:



A	D	E
2pcs	2pcs	2pcs

H
01pc

07/08

COMPLETE:

