



Assembly Instructions


Parts Included

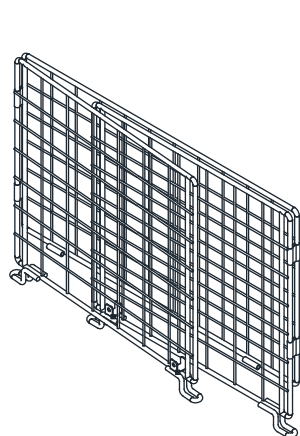


2pcs
A

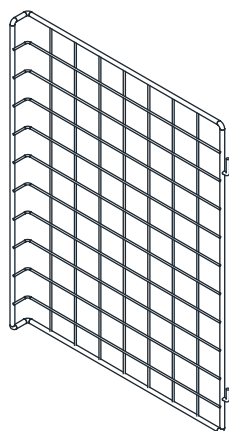


2pcs
B

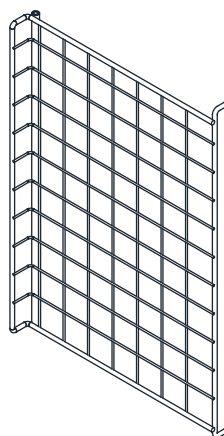

2pcs
C

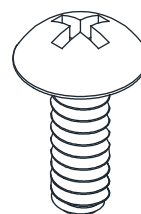


10pcs
1

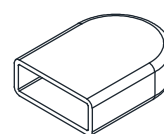


8pcs
2


1. Unfold mesh A, insert mesh B into A through the pins.

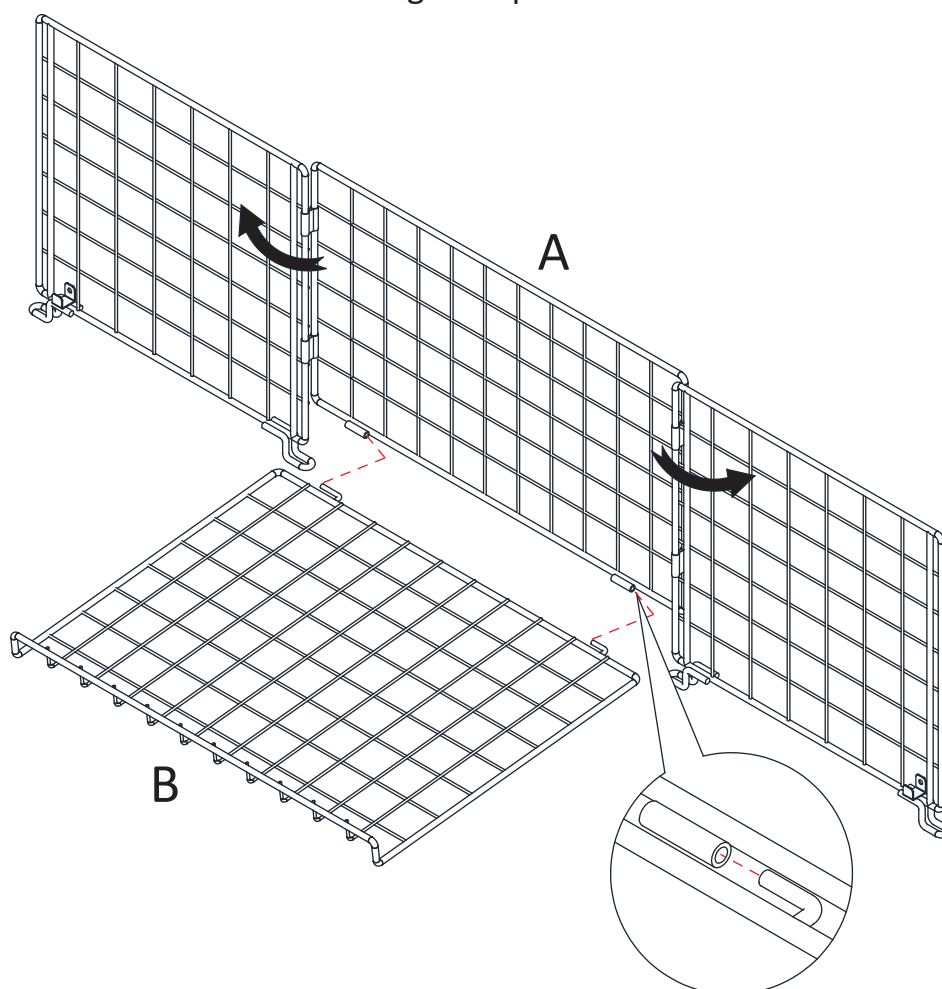



2. Fold up the mesh on both sides of A, snap B onto the iron sheets on both sides of A , and fix with screws ①.

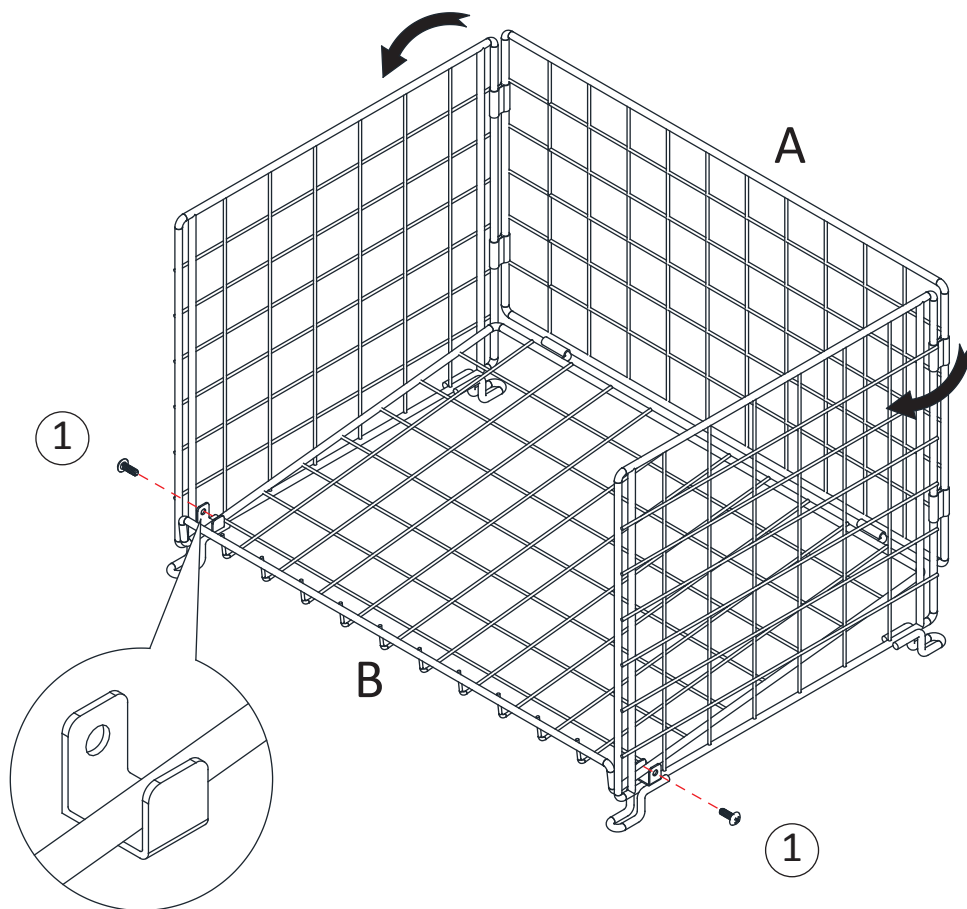


3. Stuck hooks of mesh C on the iron wires on both sides (you can push the mesh on both sides appropriately to facilitate installation) , and fix the iron pipe in front of C with screws ① on the iron wires on both sides.

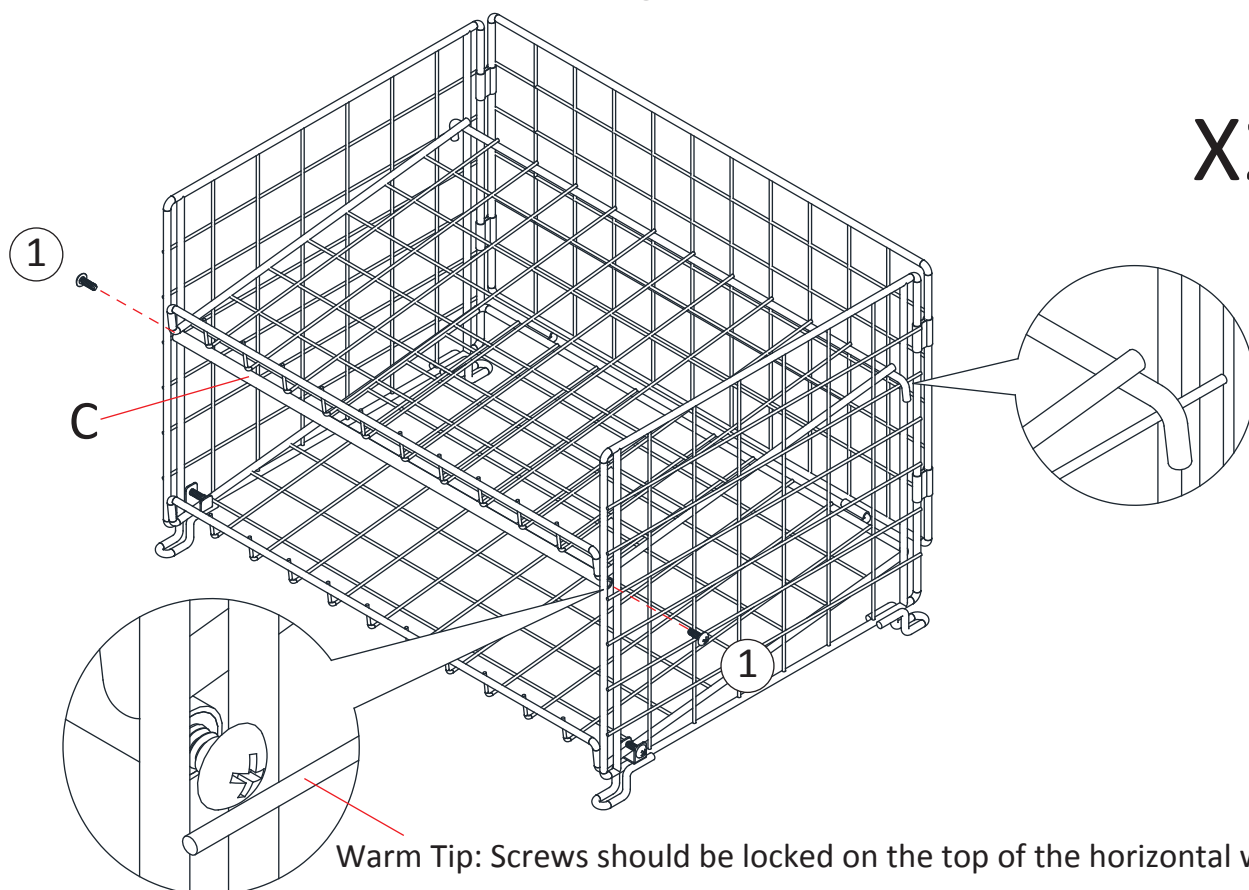


4. C can be installed parallel or inclined, and the height can also be adjusted.

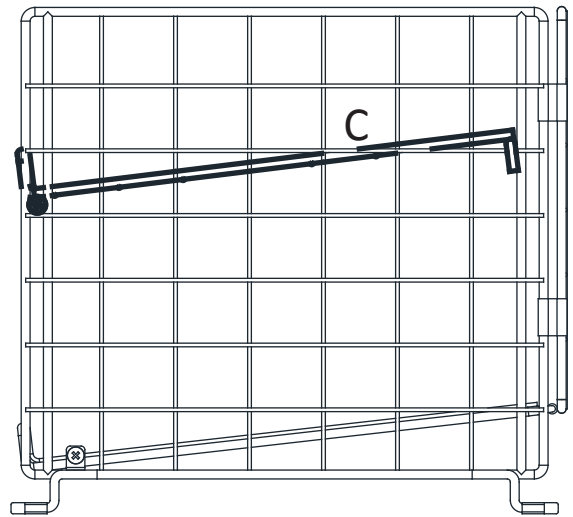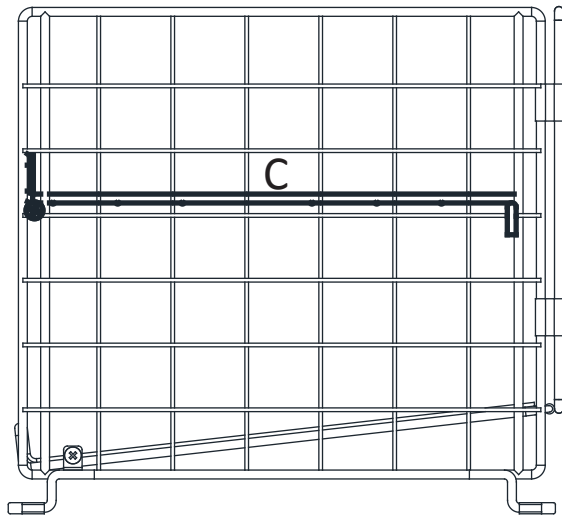

5. Stack two shelves, also can be used separately.

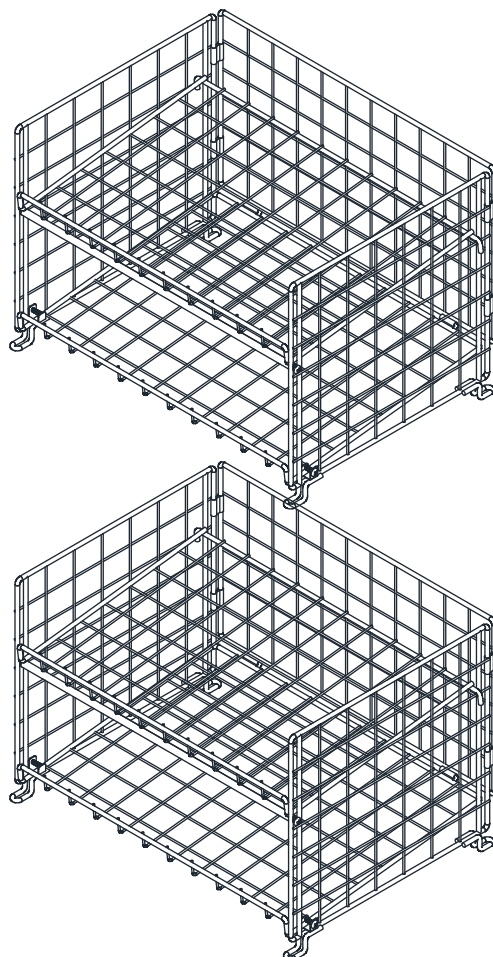

6. Install the foot sleeve ②.

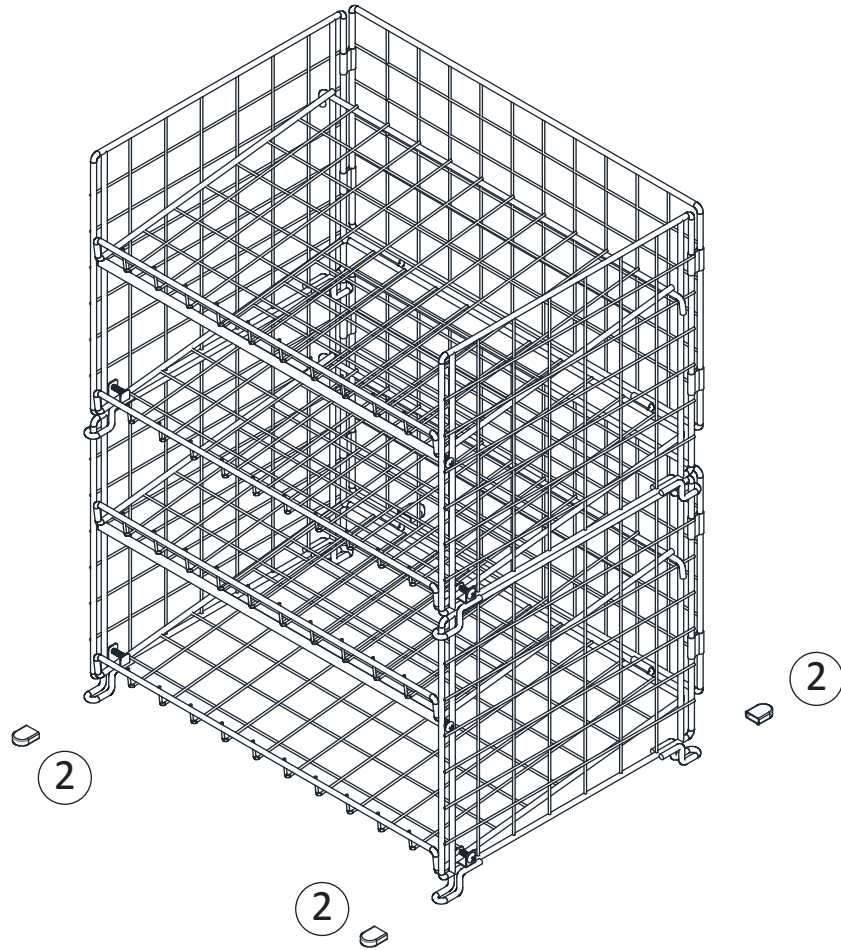

7. Finish

