
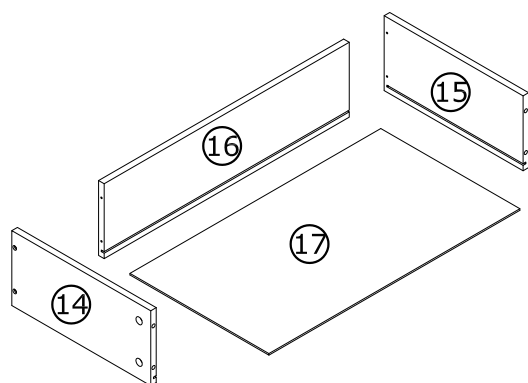
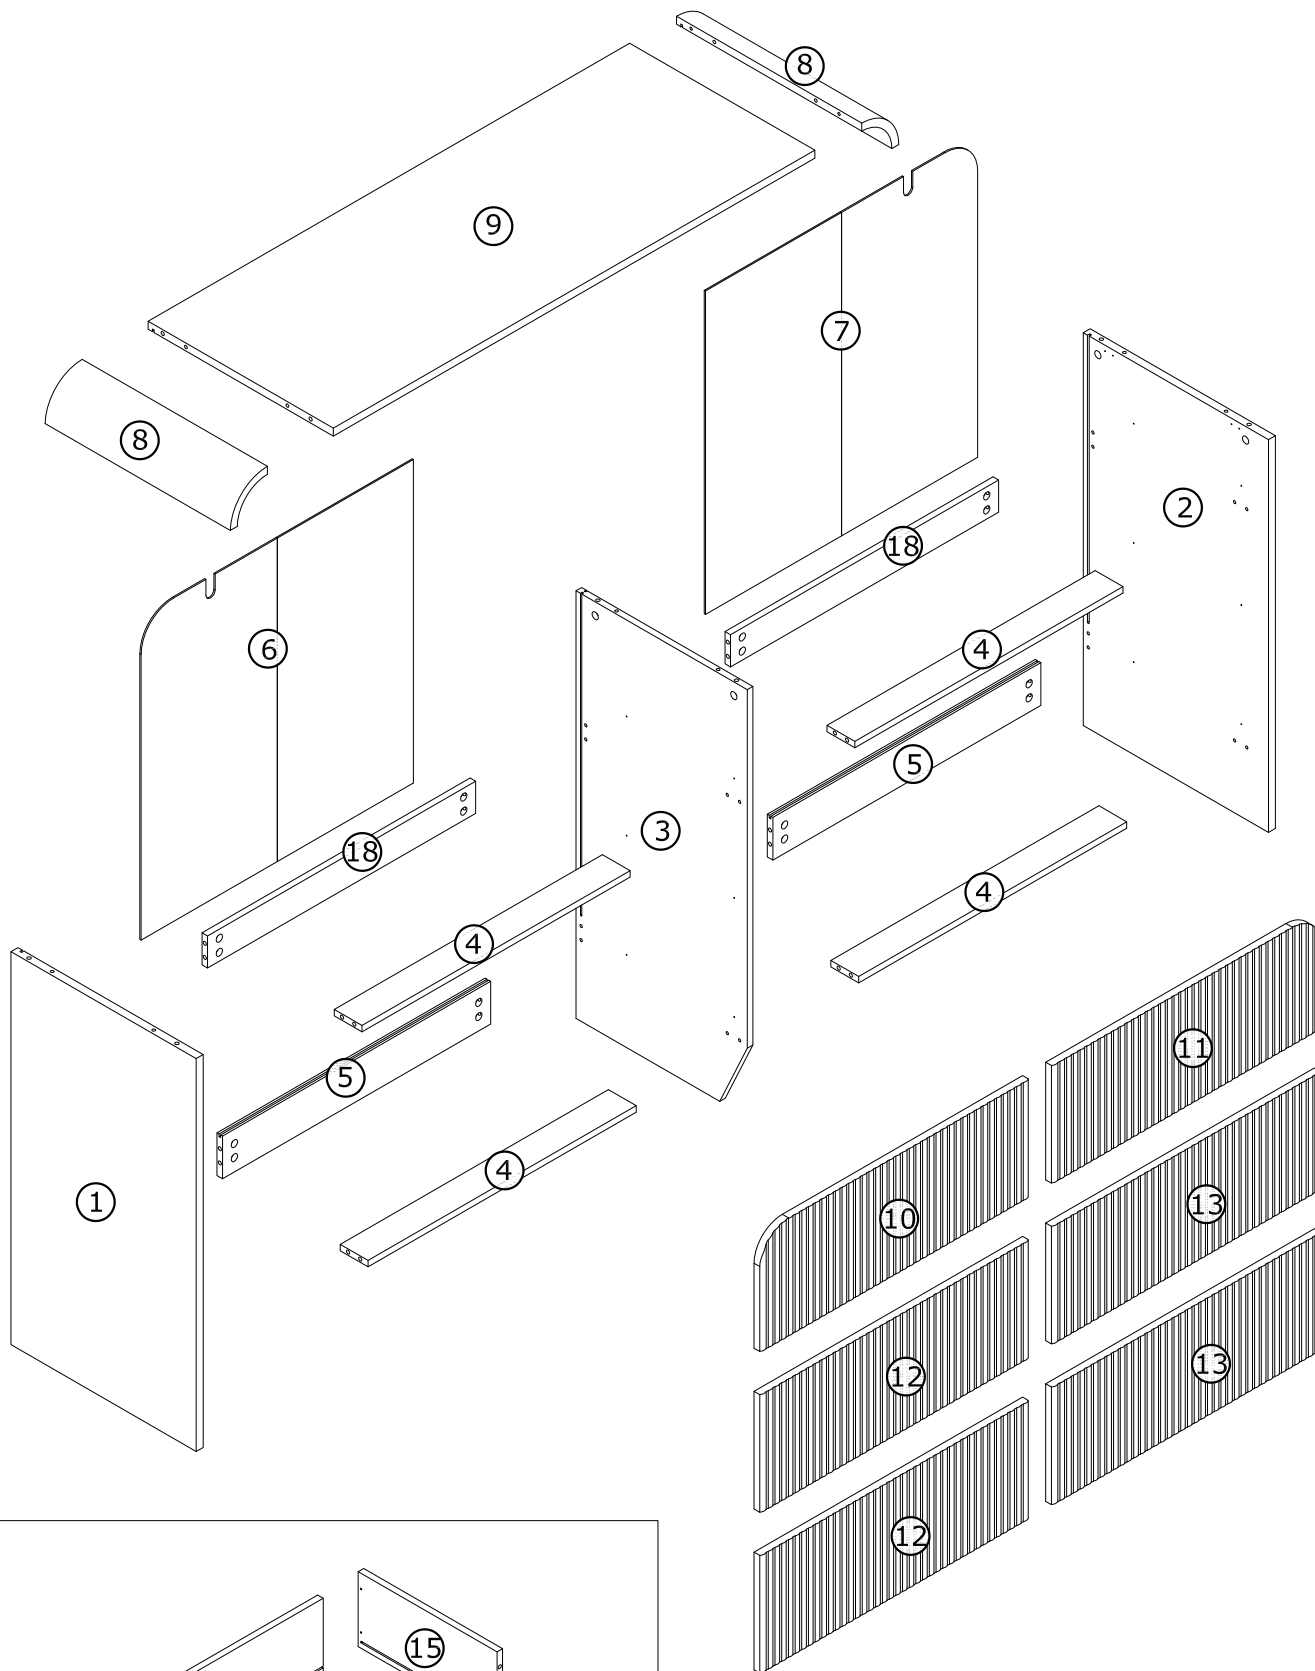
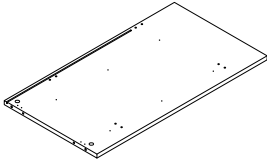
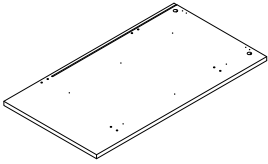
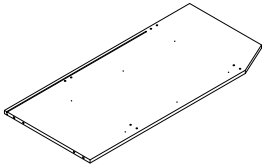
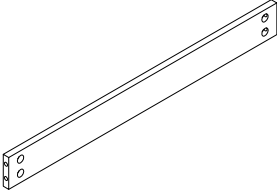
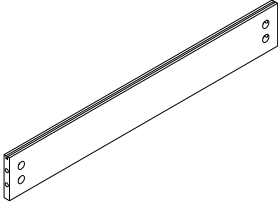
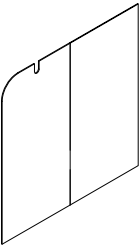
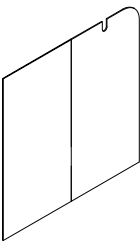
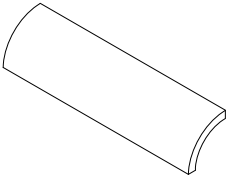
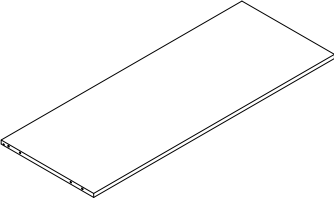
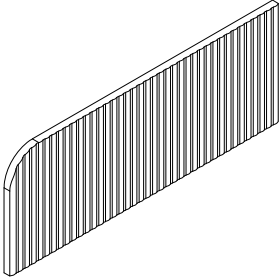
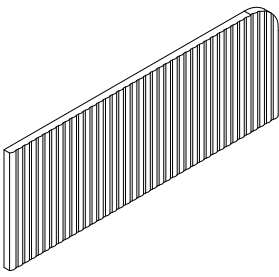
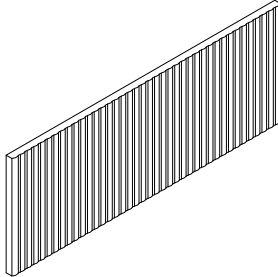
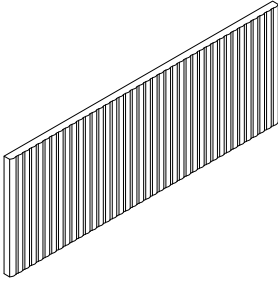
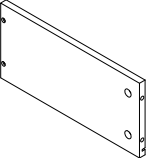
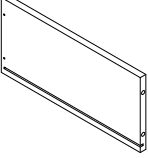
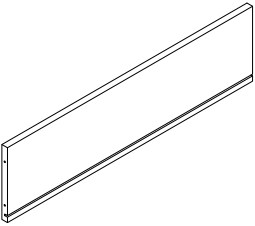



Installation instruction










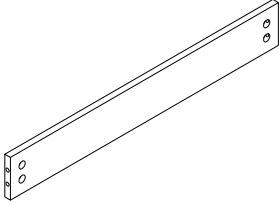


x6

Parts and Operation Elements

			
① 1pc	② 1pc	③ 1pc	④ 4pcs
			
⑤ 2pcs	⑥ 1pc	⑦ 1pc	⑧ 2pcs
			
⑨ 1pc	⑩ 1pc	⑪ 1pc	⑫ 2pcs
			
⑬ 2pcs	⑭ 6pcs	⑮ 6pcs	⑯ 6pcs
			
⑰ 6pcs	⑱ 2pcs		





Hardware

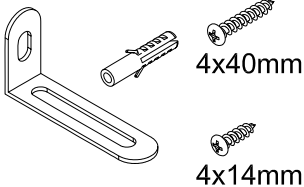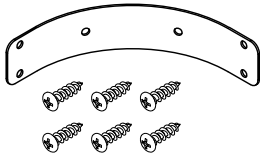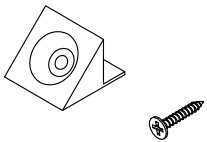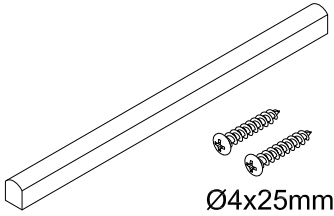 Cam bolt		 Cam lock		 6 x 30mm Wood dowel		 Ø4 x 30mm	
A	66+2pcs	B	66+2pcs	C	10pcs	D	24pcs
 Ø3x12mm		 4x40mm 4x14mm		 Ø4x14mm		 Ø3x16mm Screw	
E	48pcs	F	2pcs	G	4sets	H	8sets
 Ø4x25mm		 300mm		 300mm		 300mm	
I	6sets	CL	6pcs	CR	6pcs	DL	6pcs
 300mm							
DR	6pcs						












SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

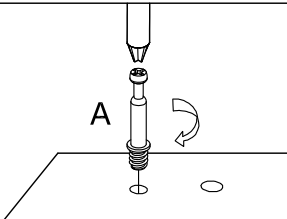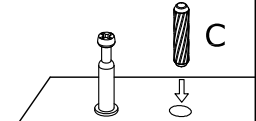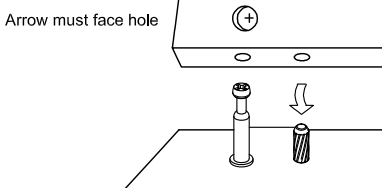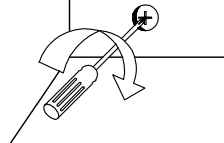 A		 C		 Arrow must face hole			
Gently screw cam bolt into the threaded anchor		Insert the wood dowel halfway into hole				Screw the camlock firmly into locked position.	

1

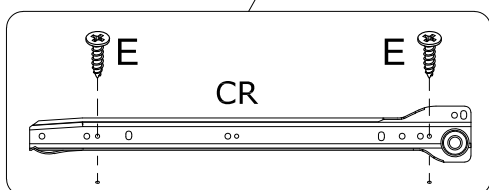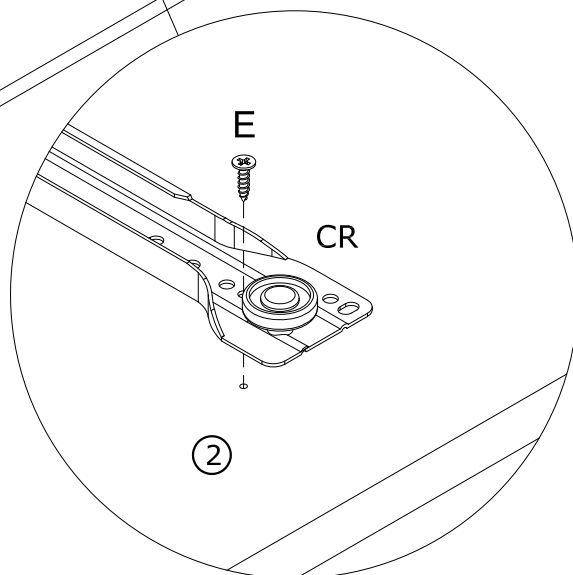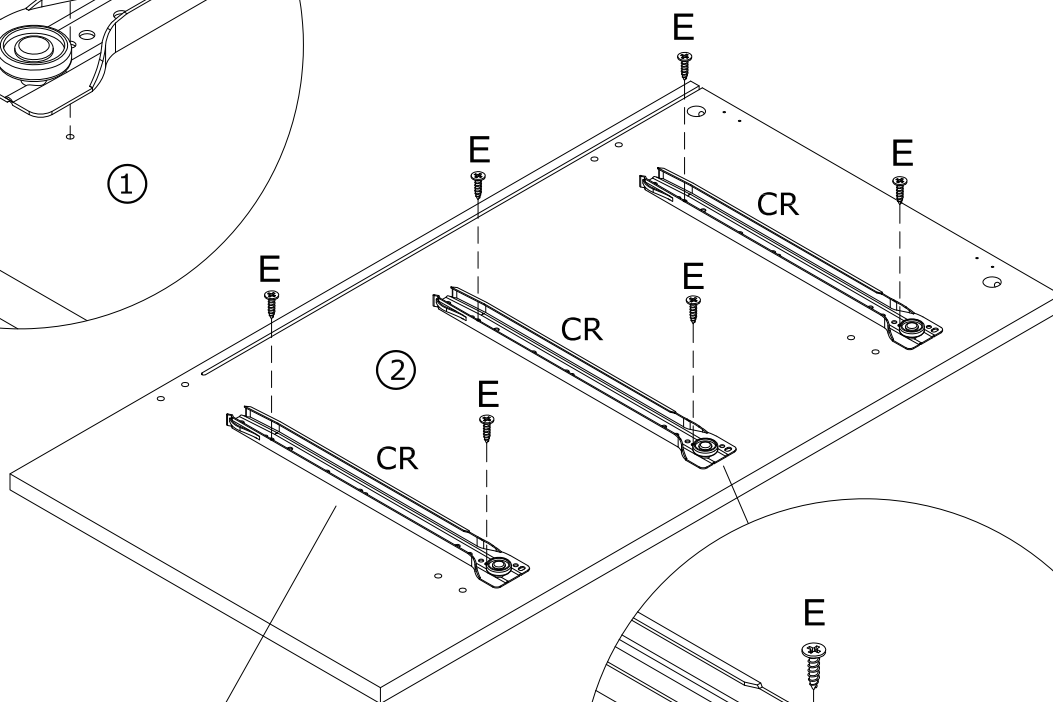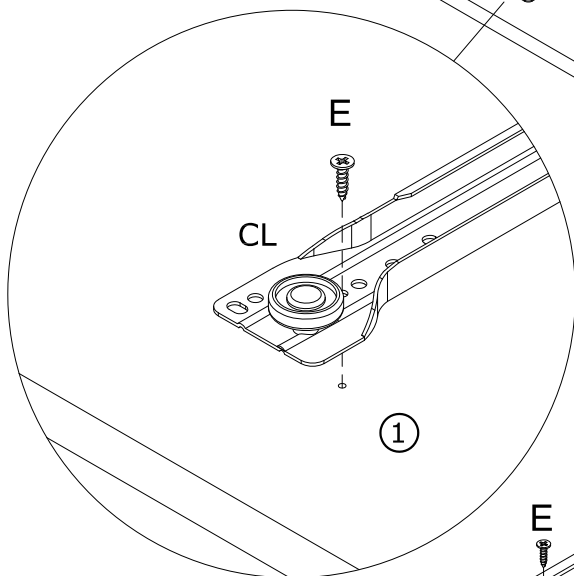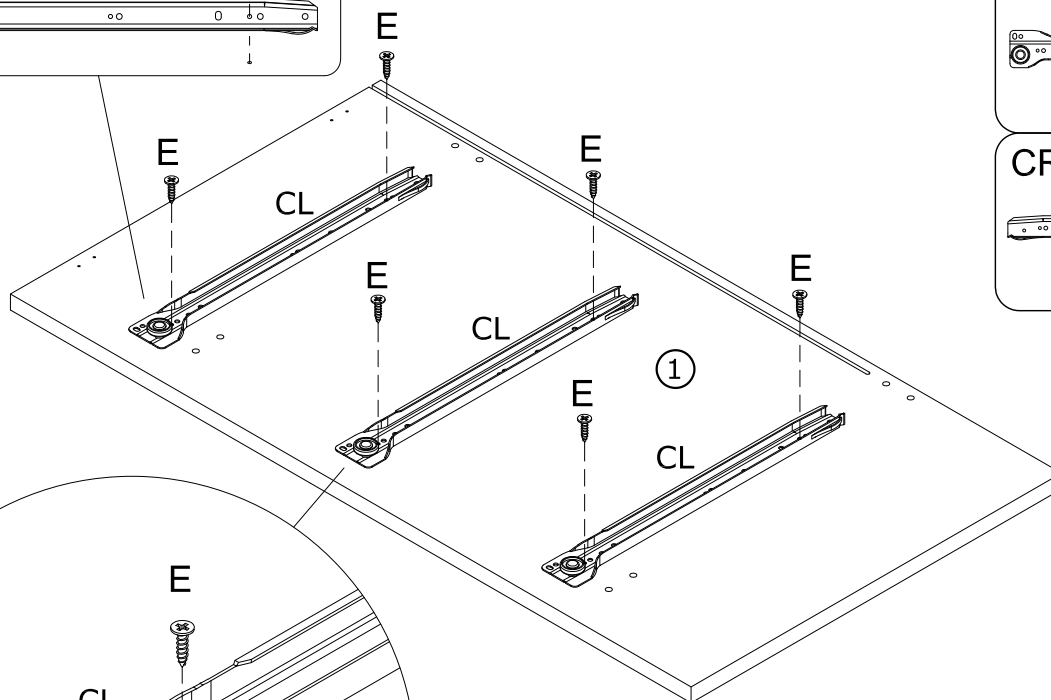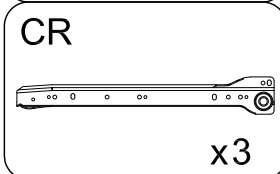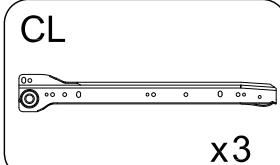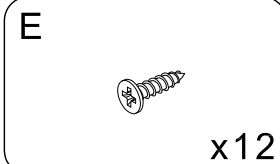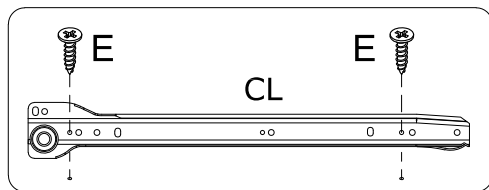

2



Only 1pc No. ③ panel.

E




x12

CL




x3


CR



x3

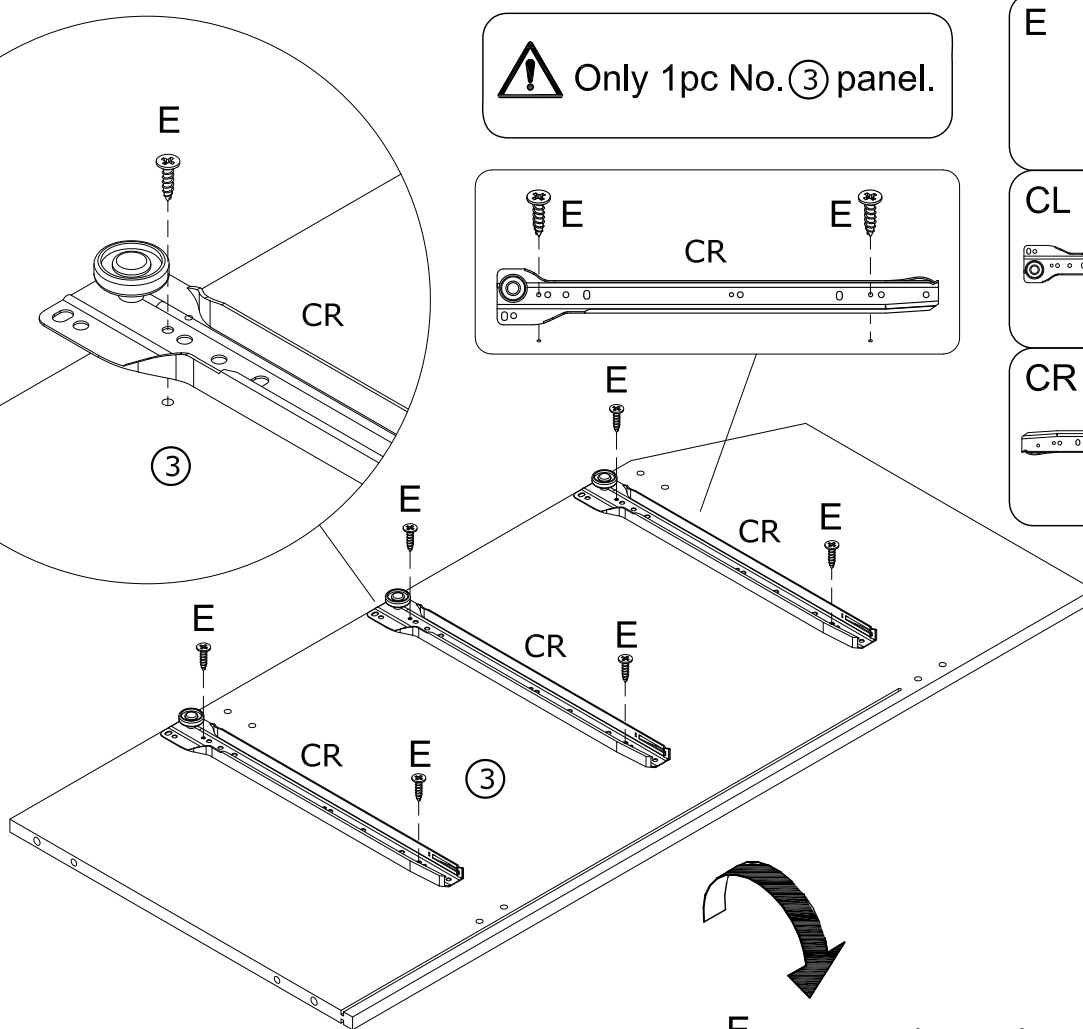


another side




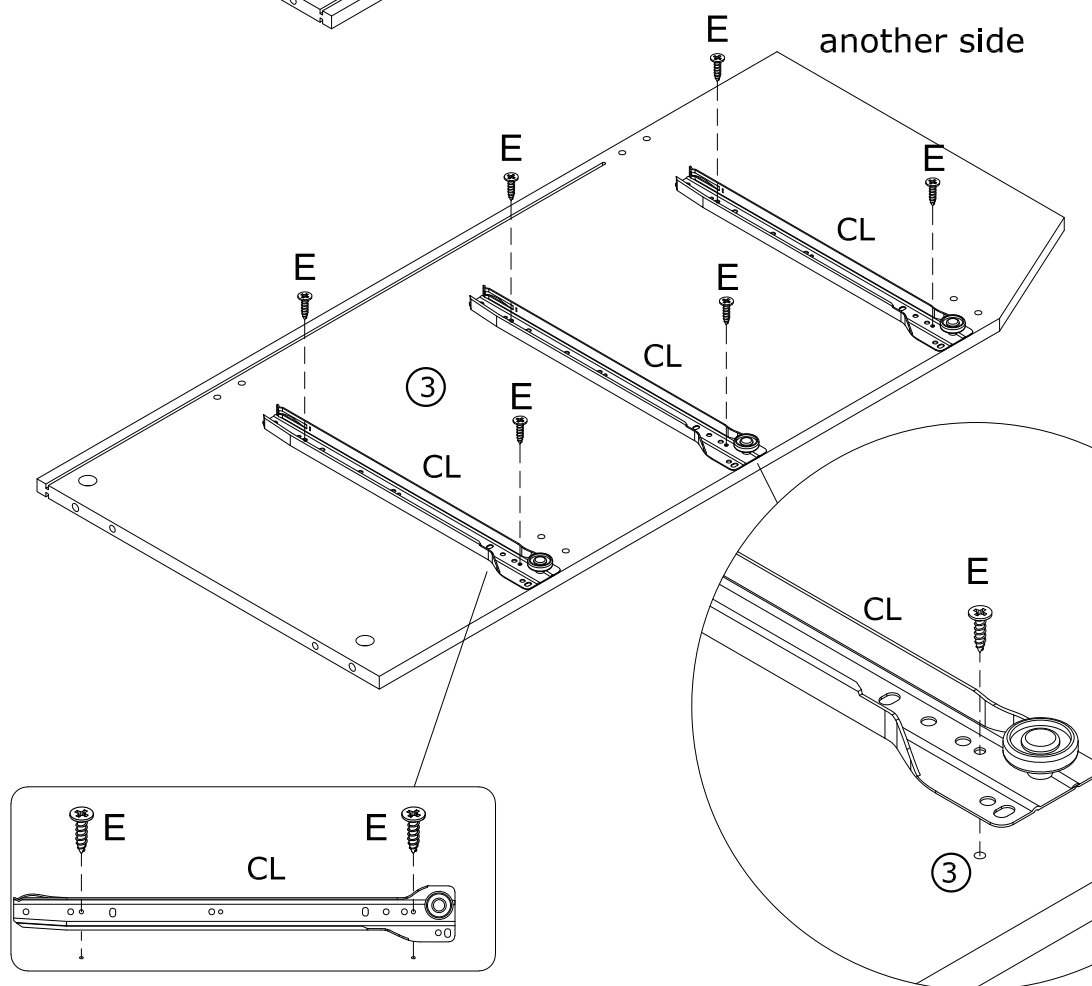


3

A




x16

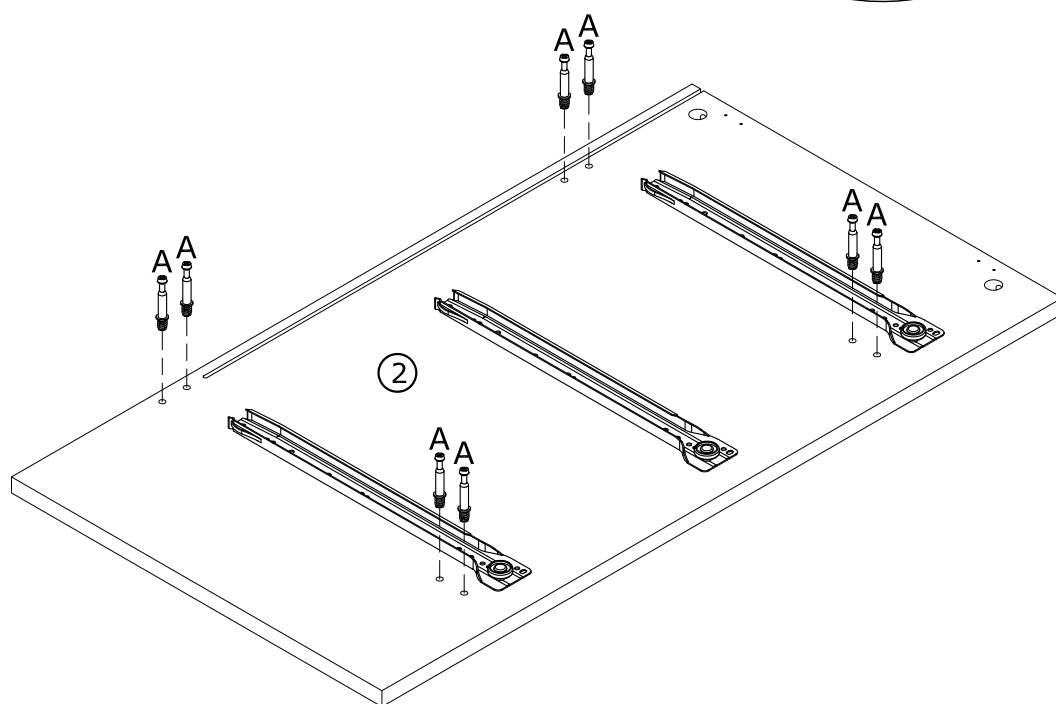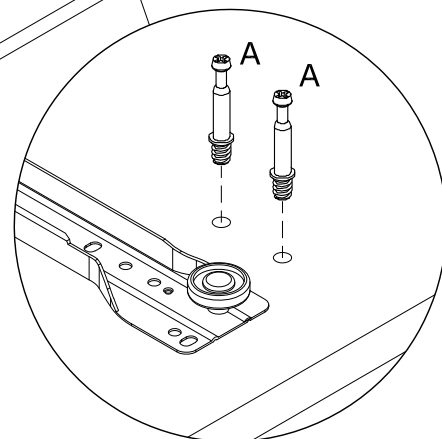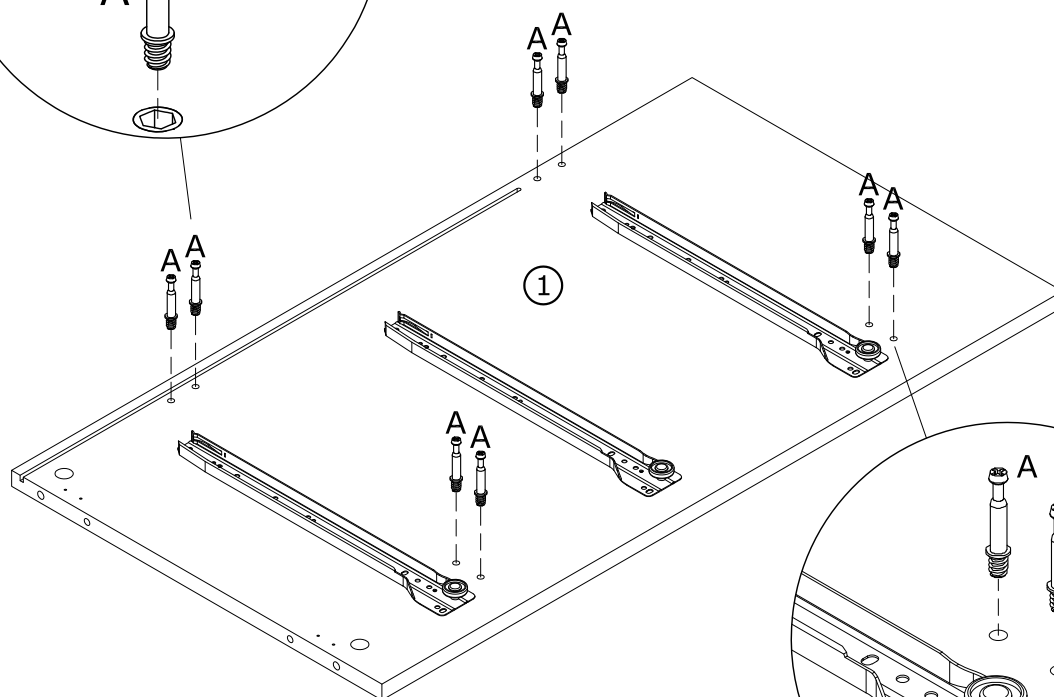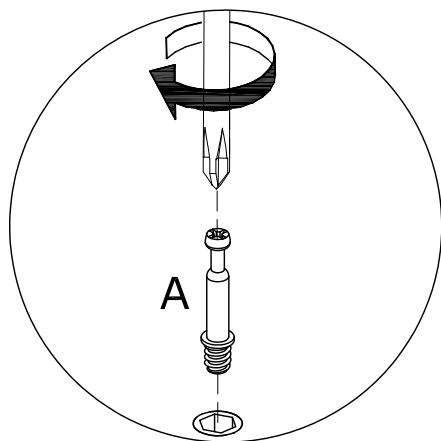


4

A



x16



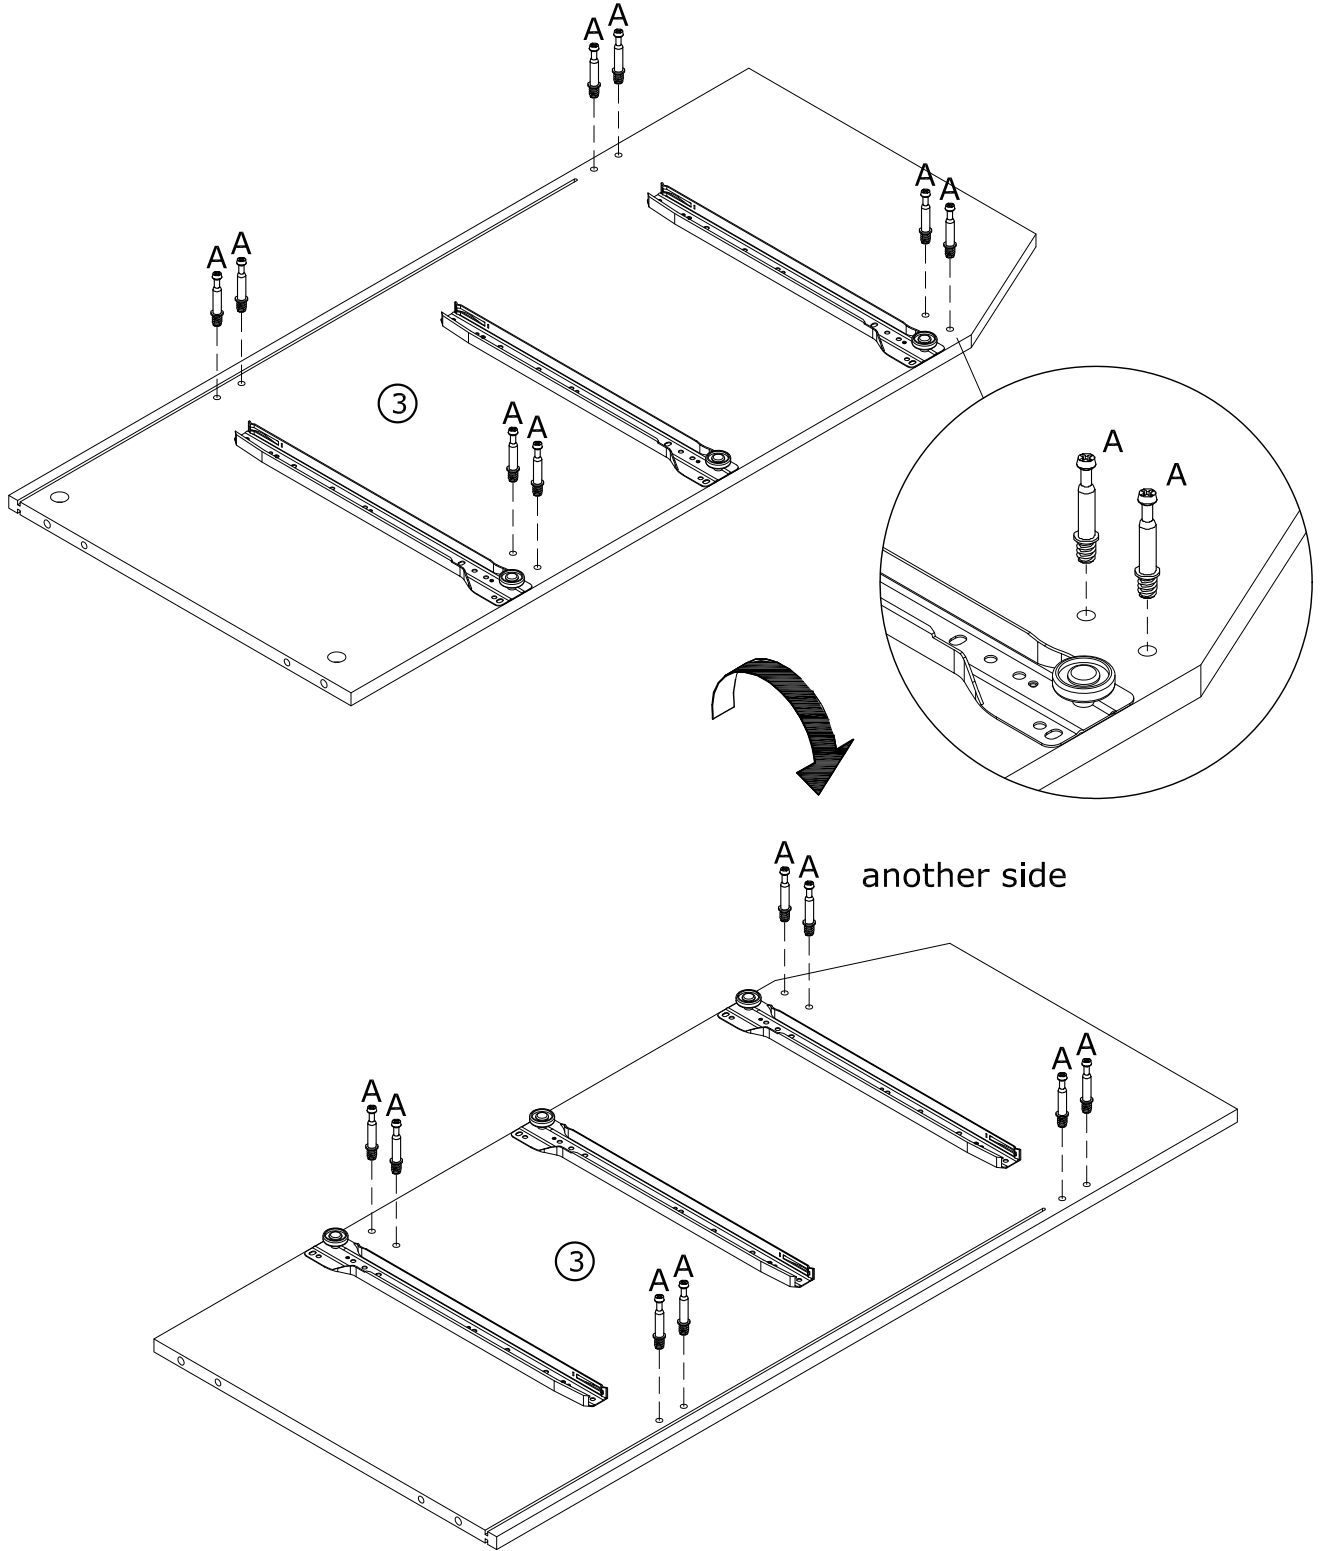


5

B



x8

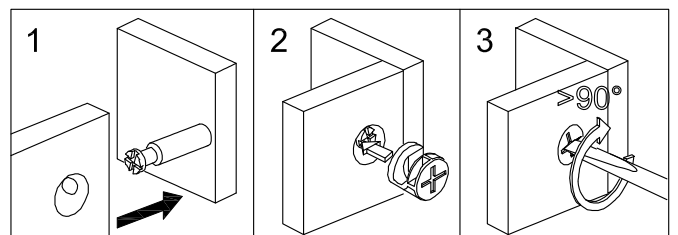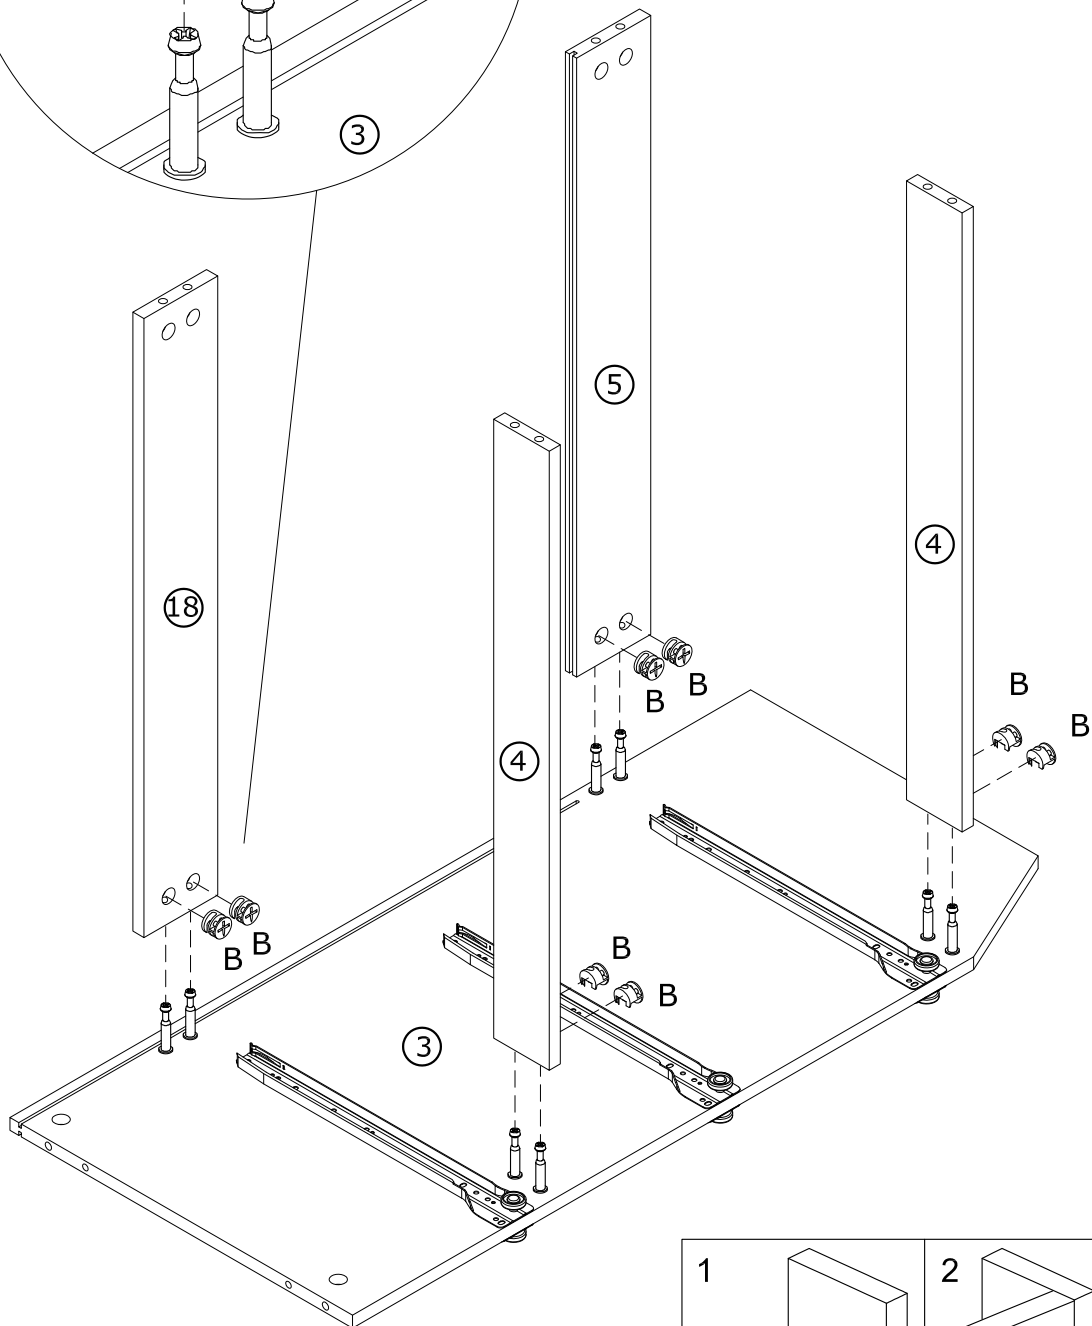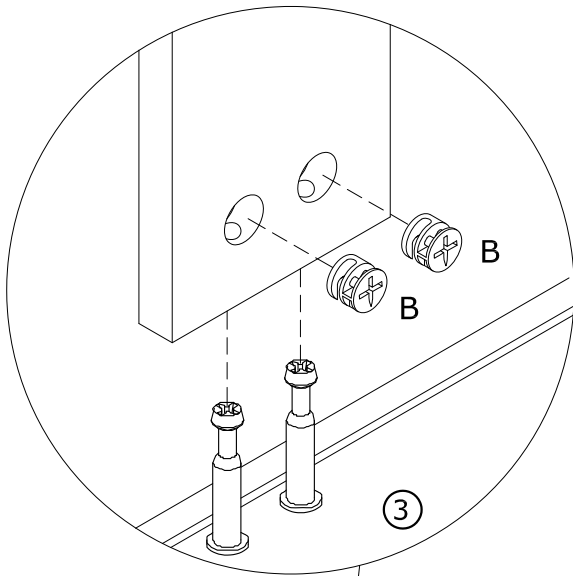


6

B



x8

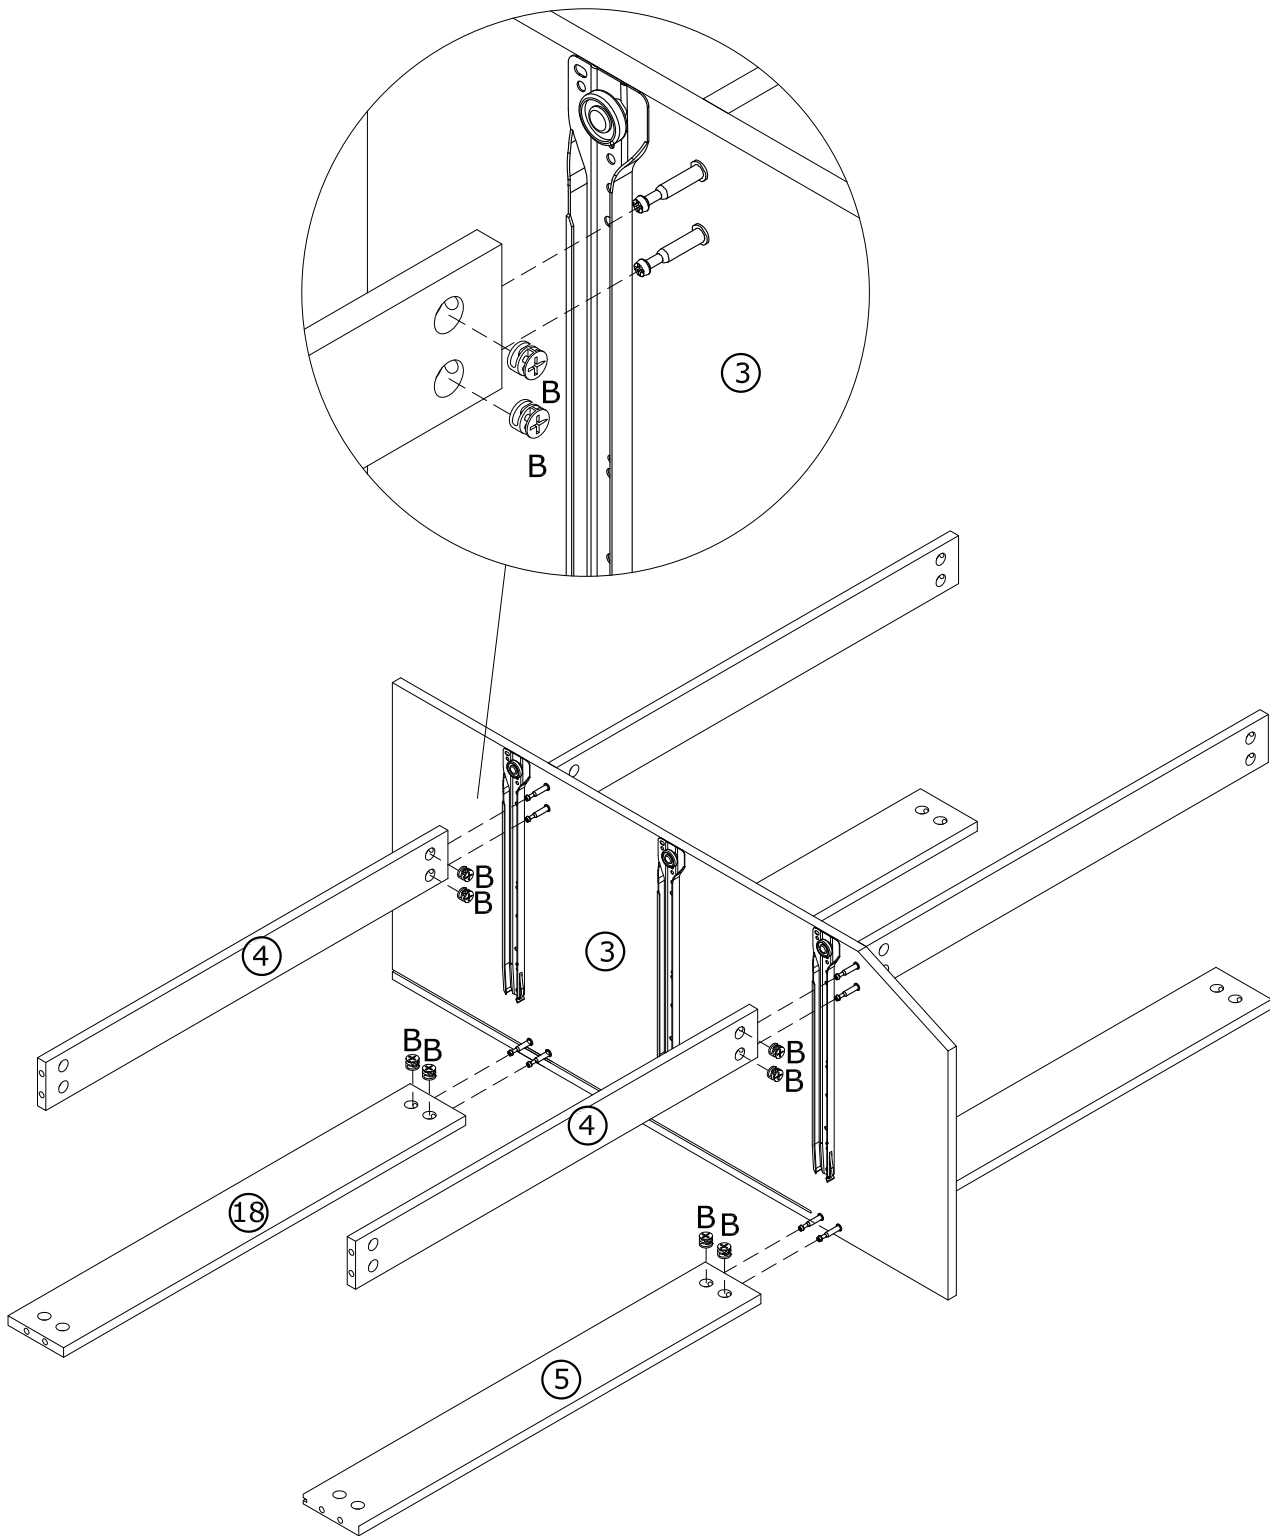


7

B



x8

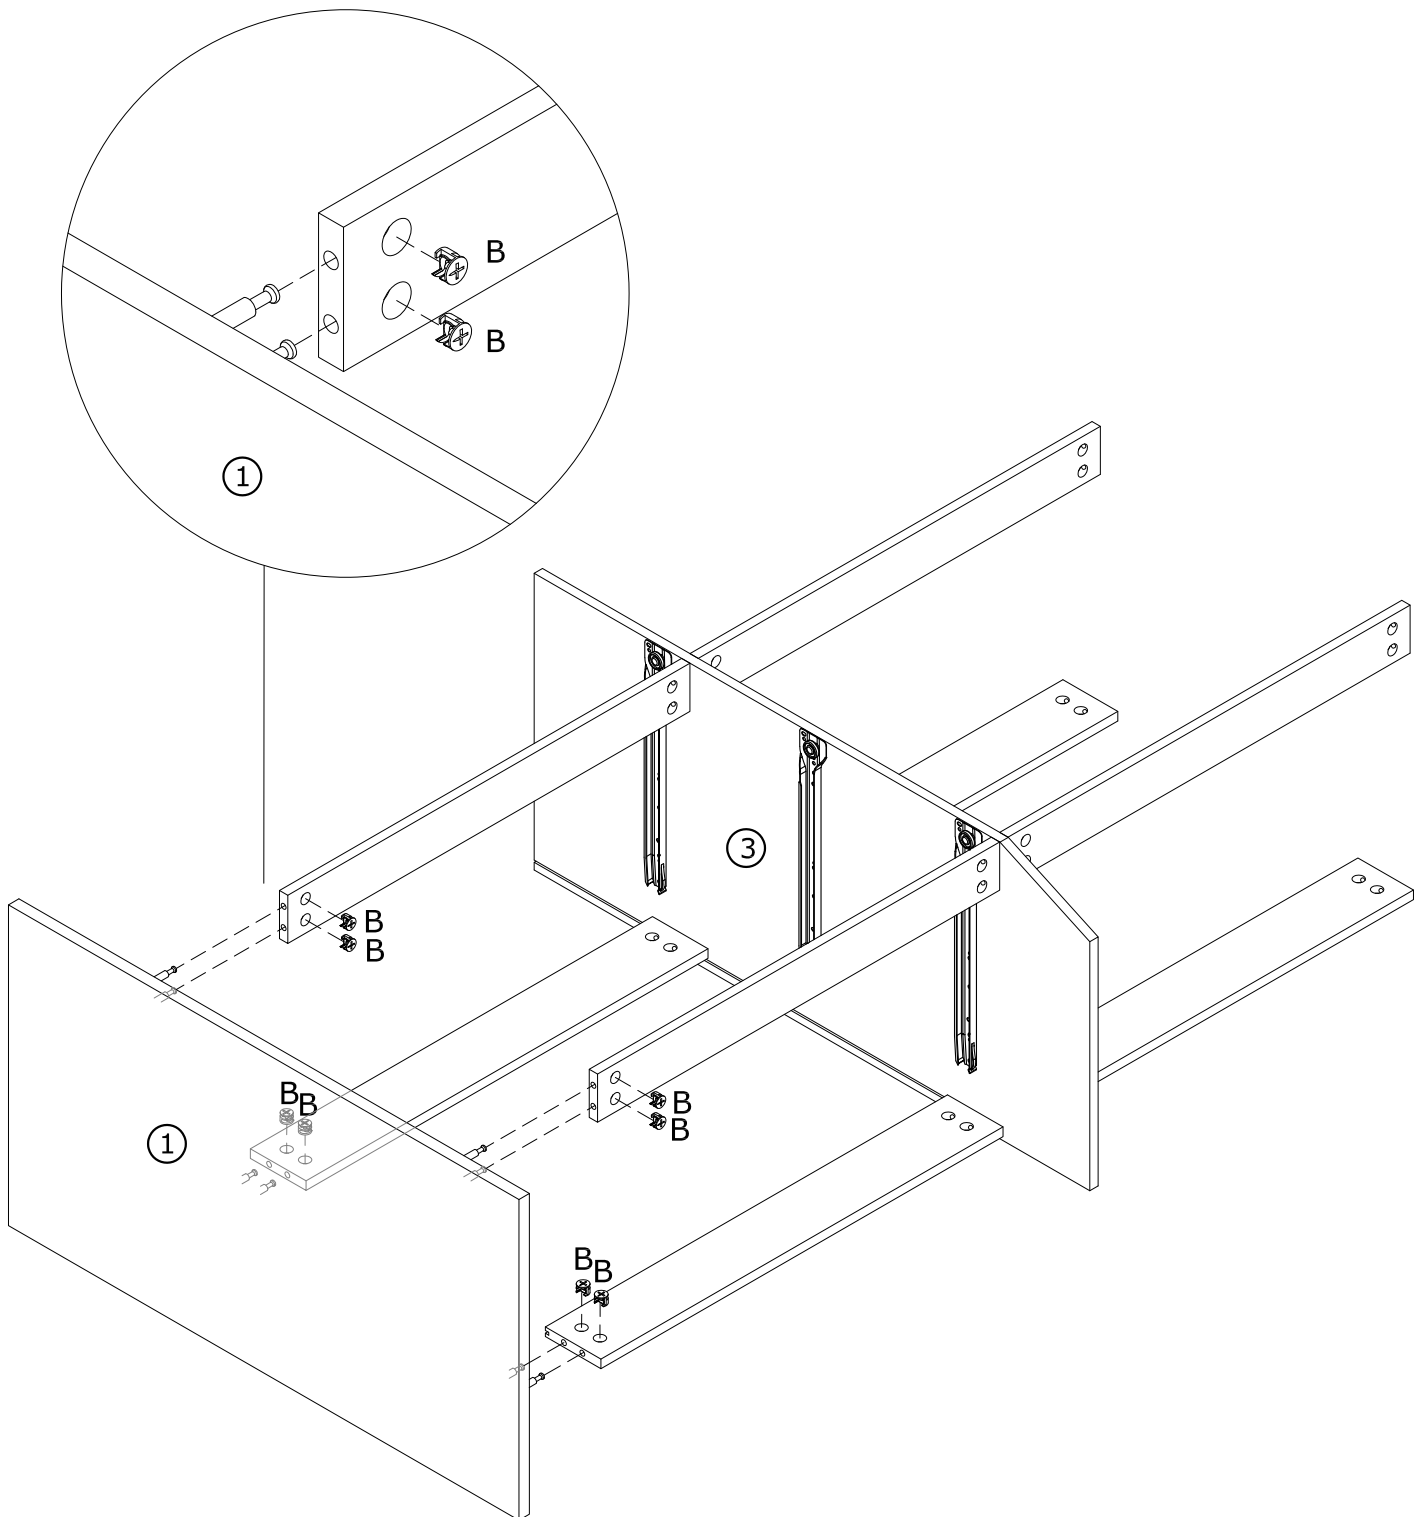


8


B








x8

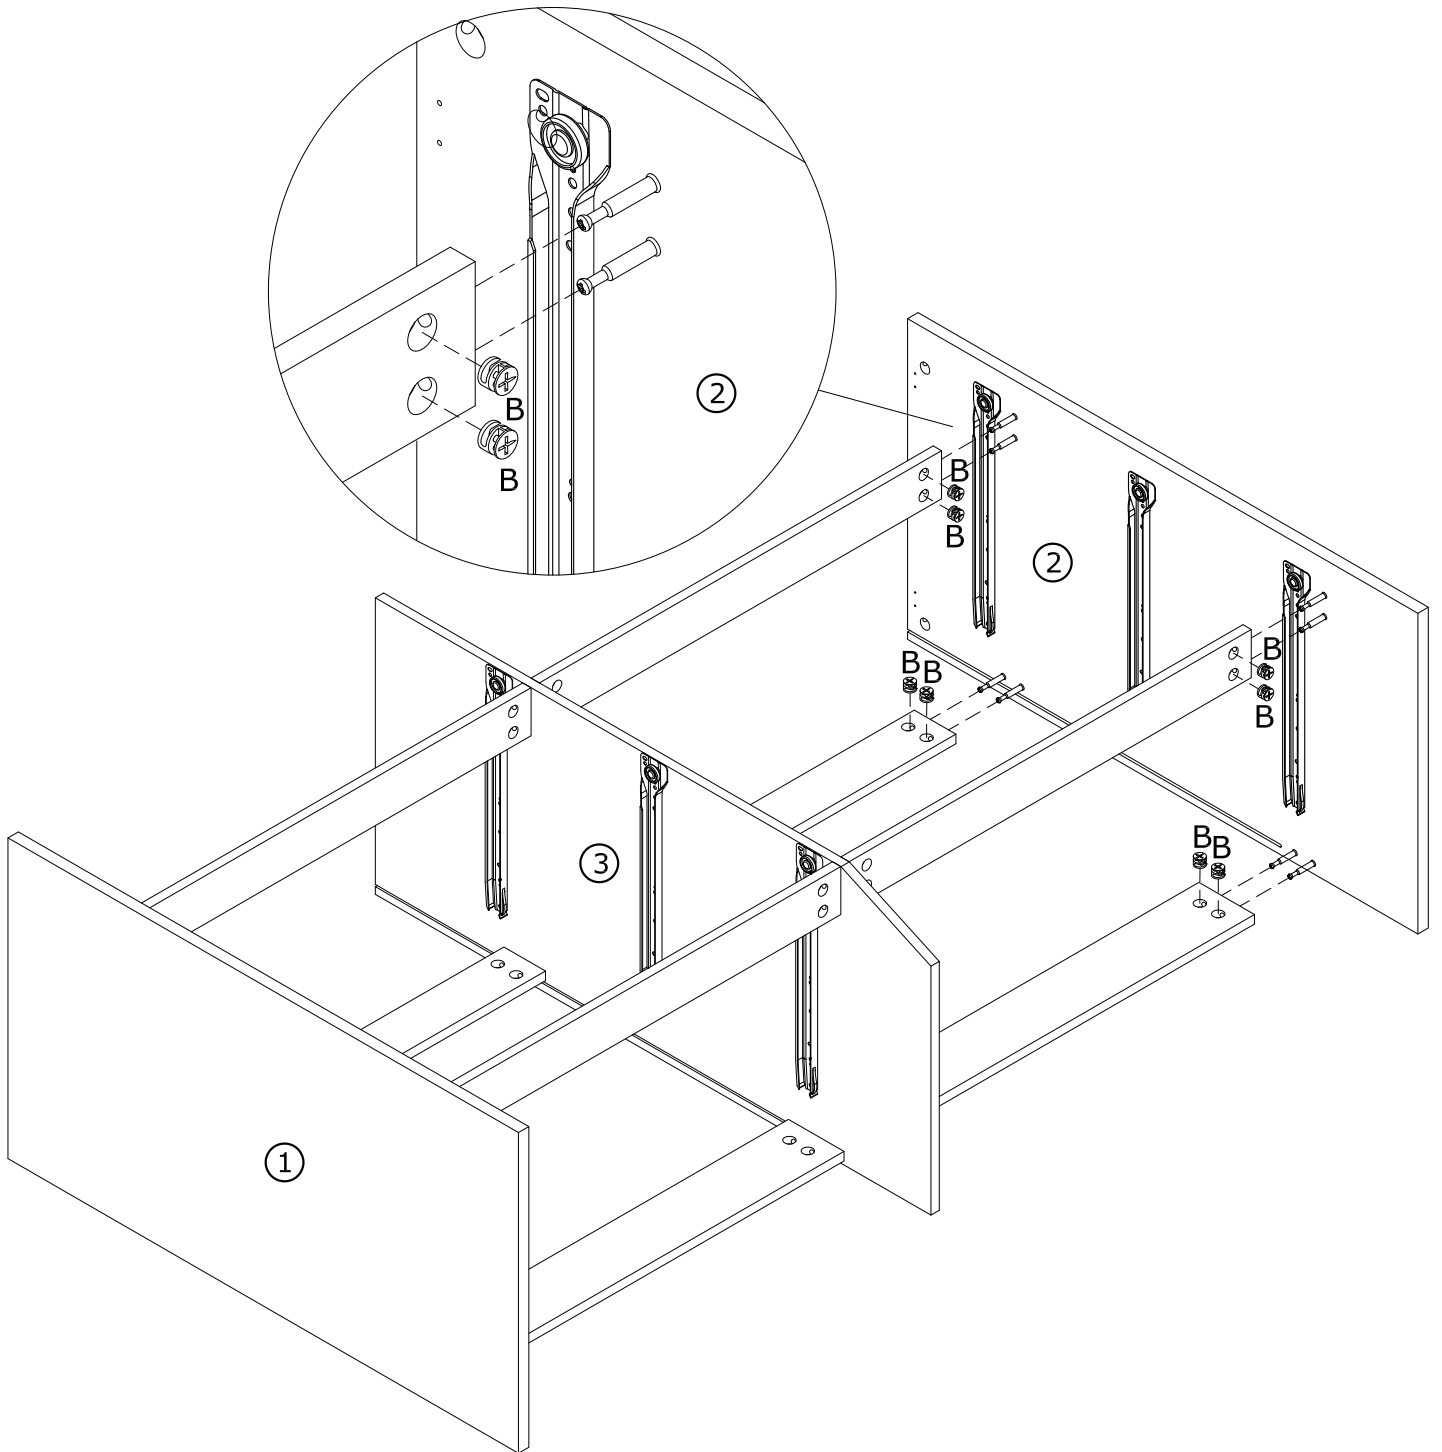


9

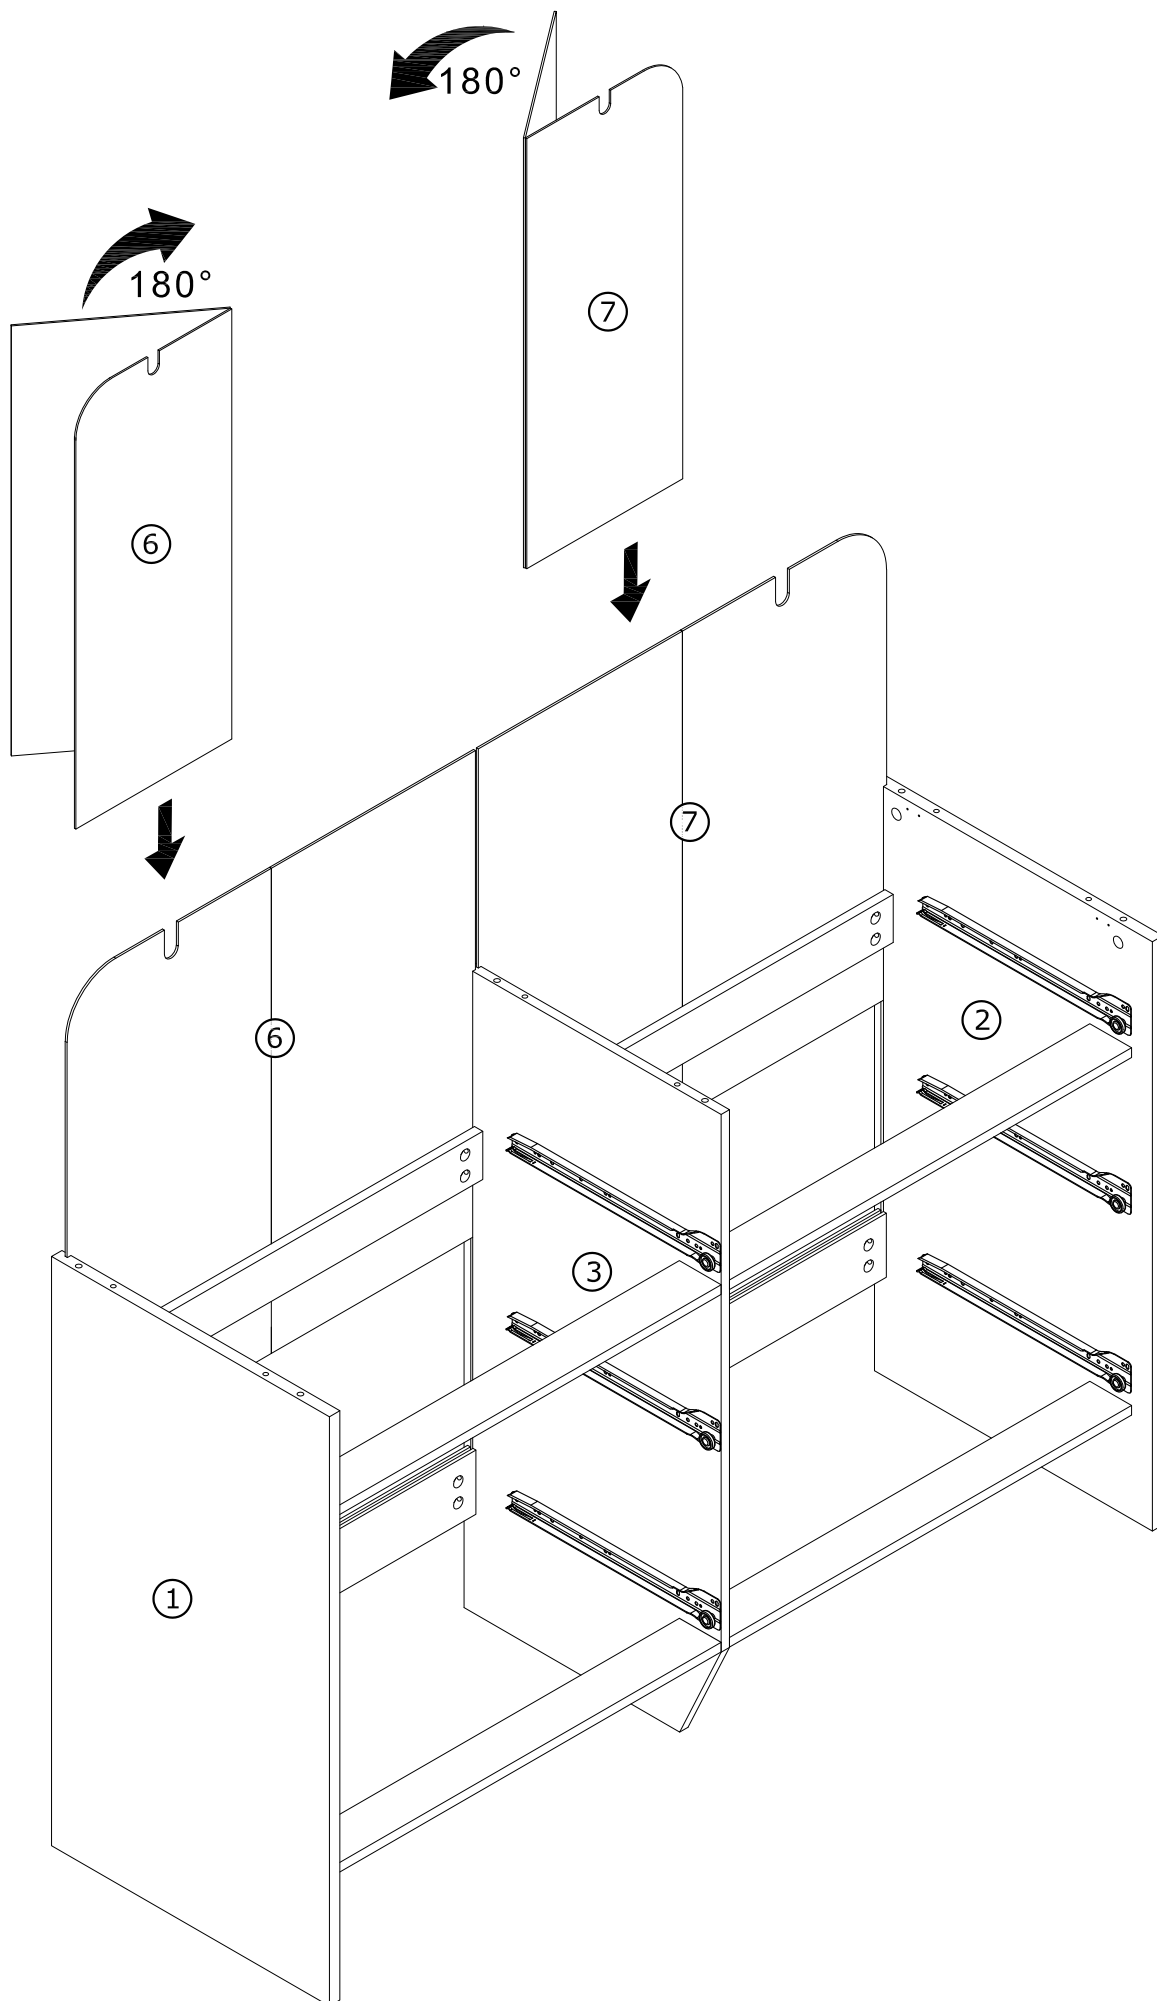






10

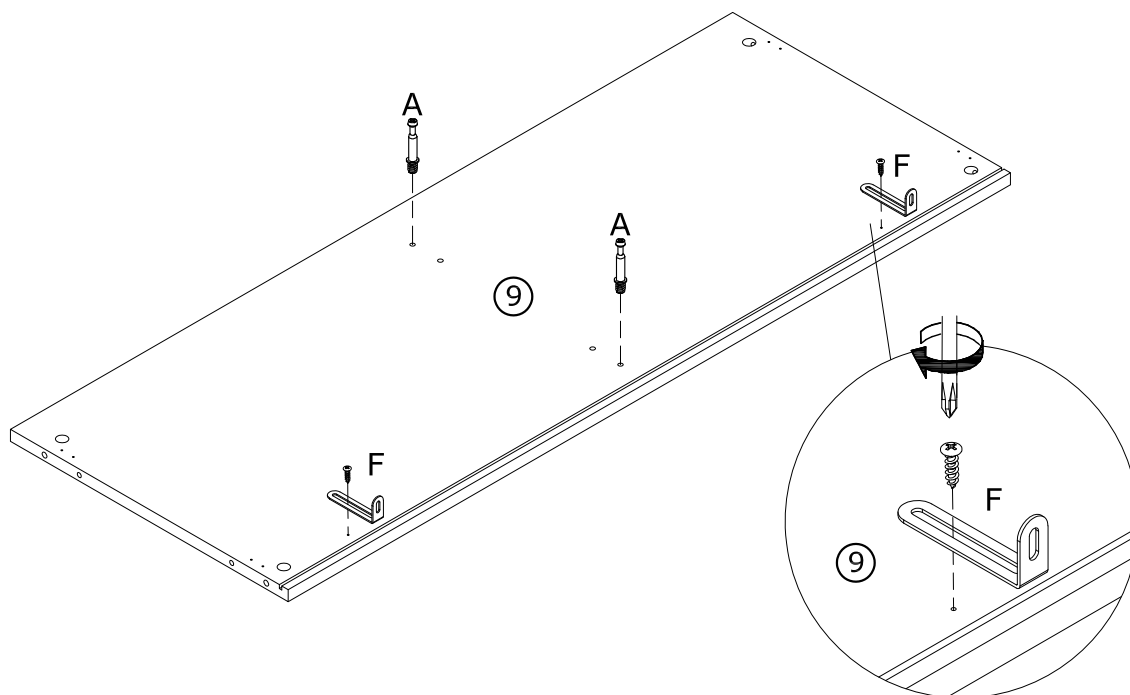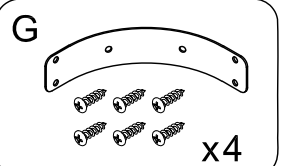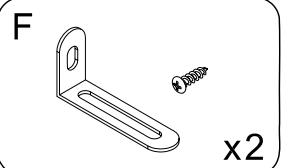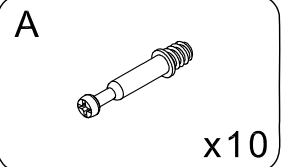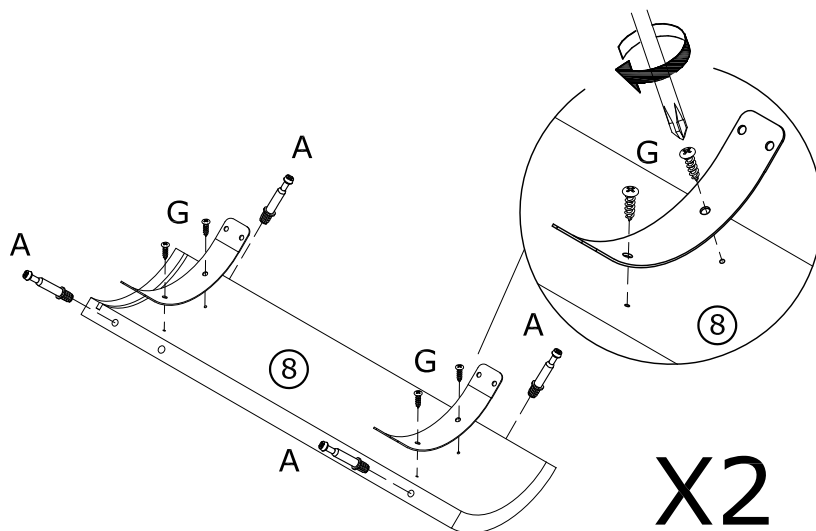




11

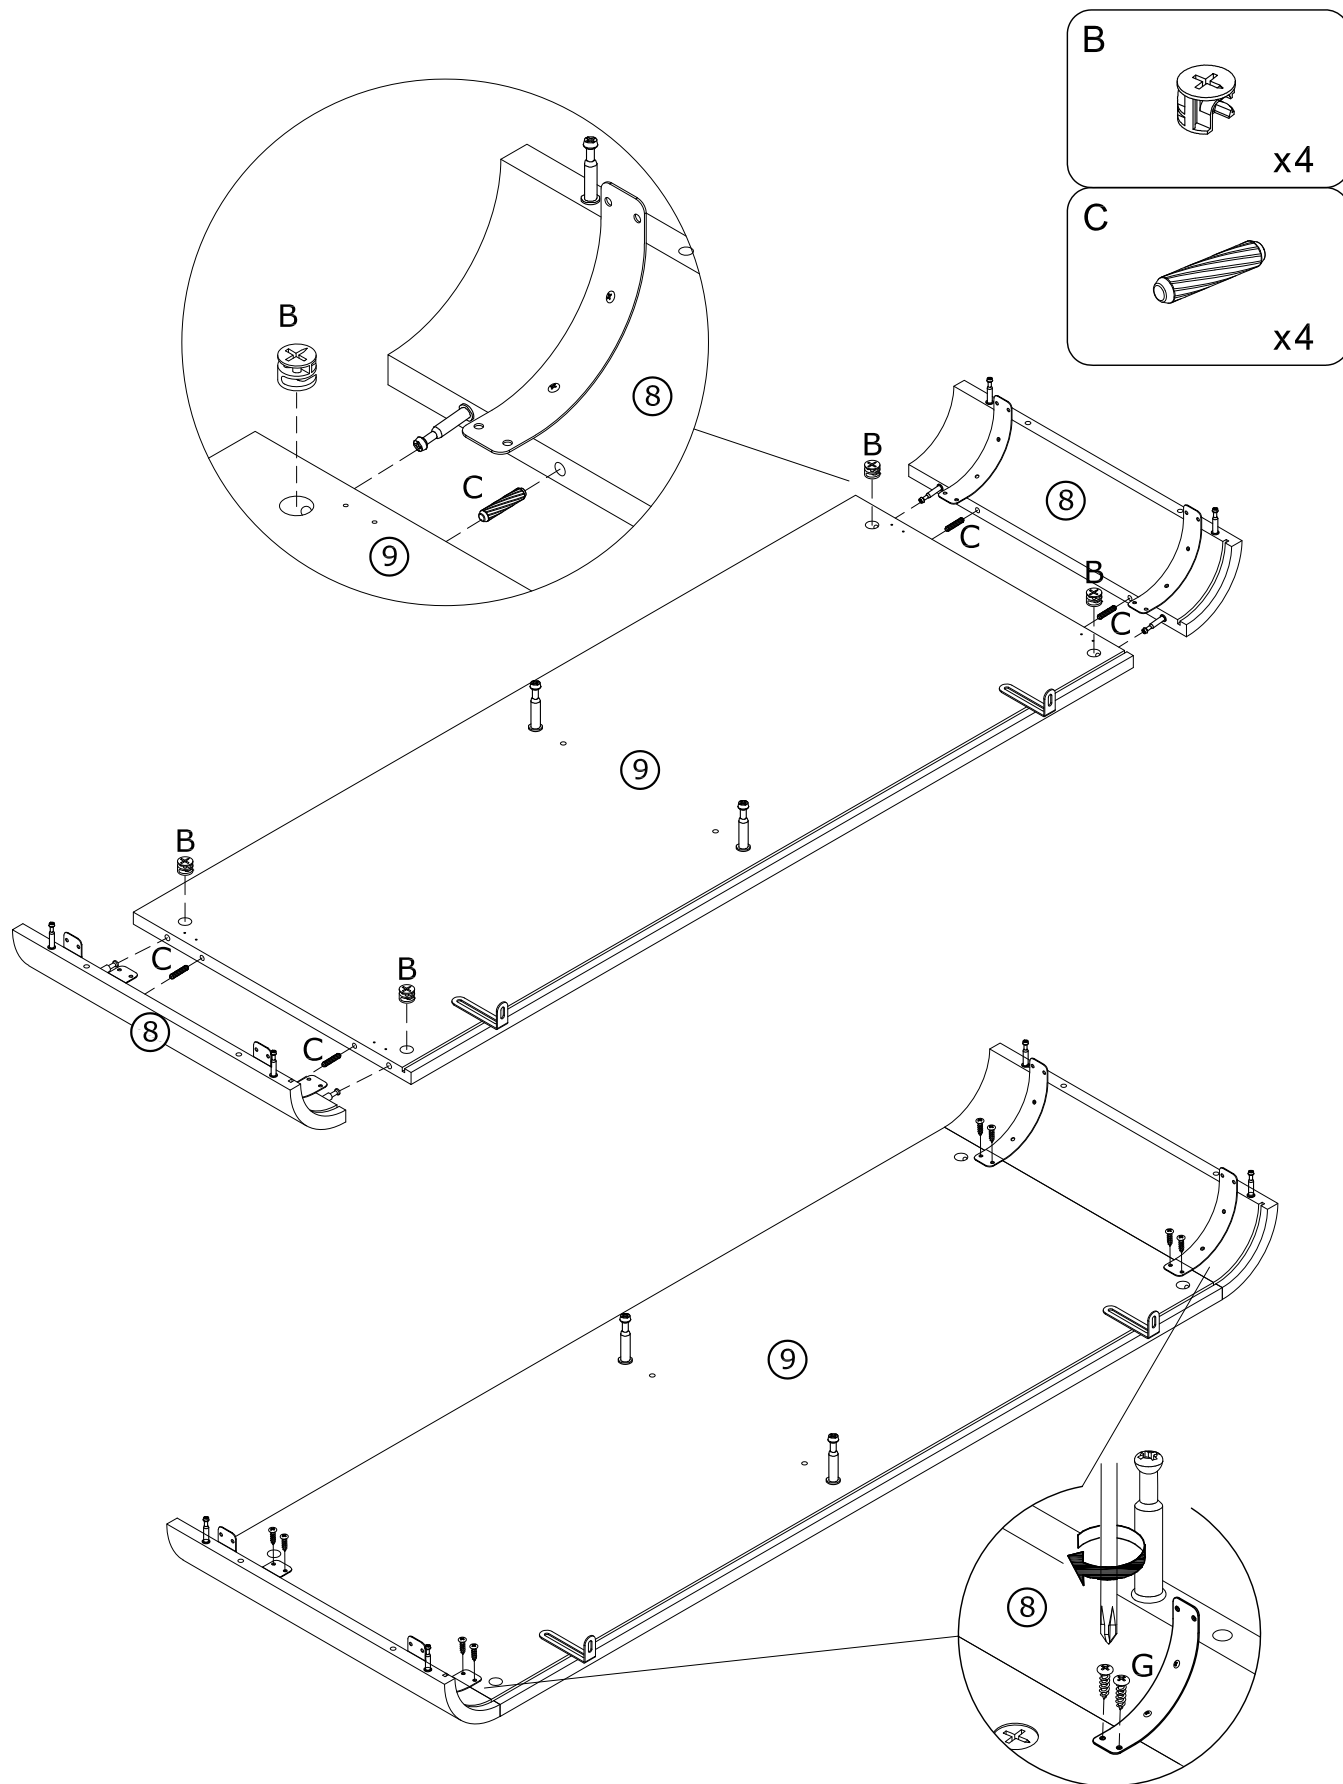





12

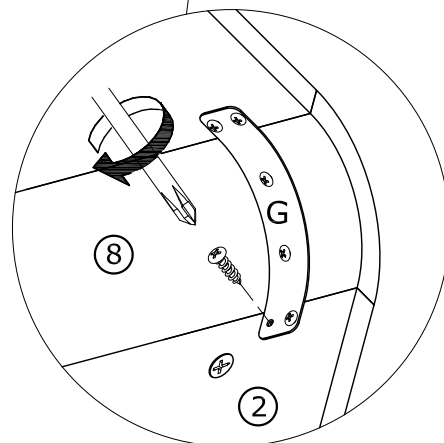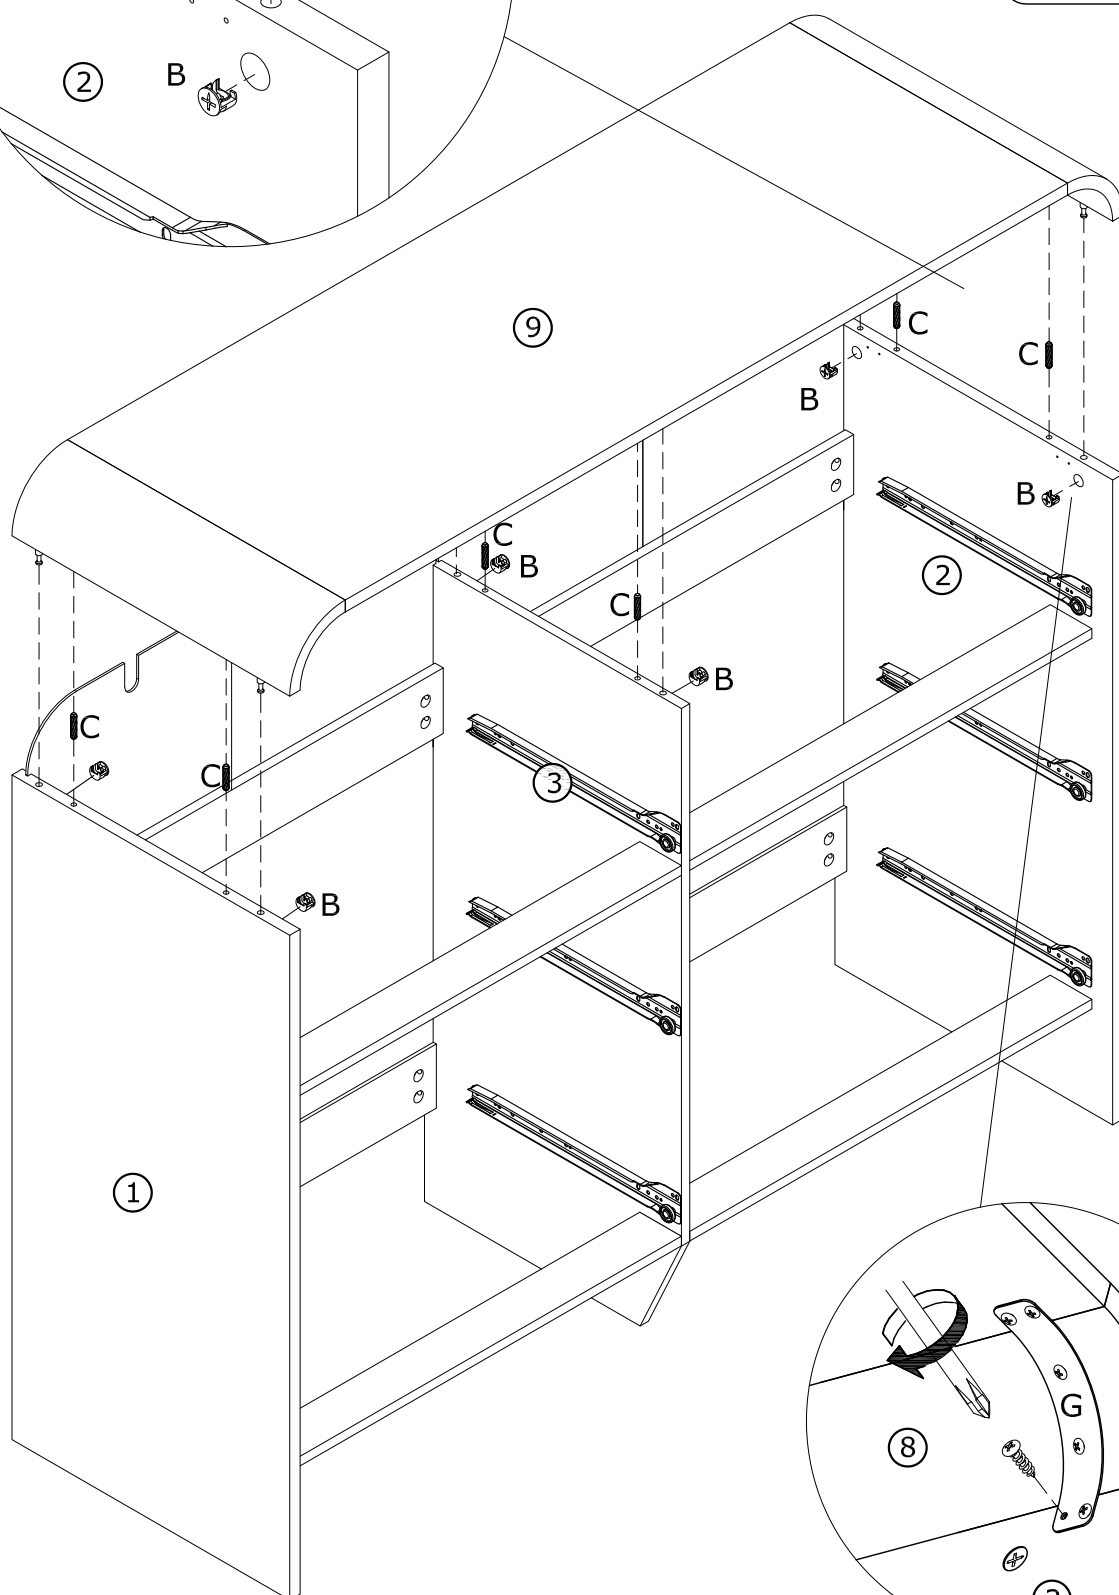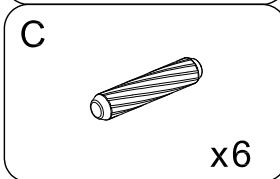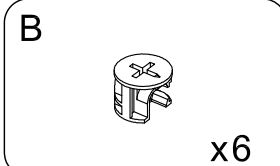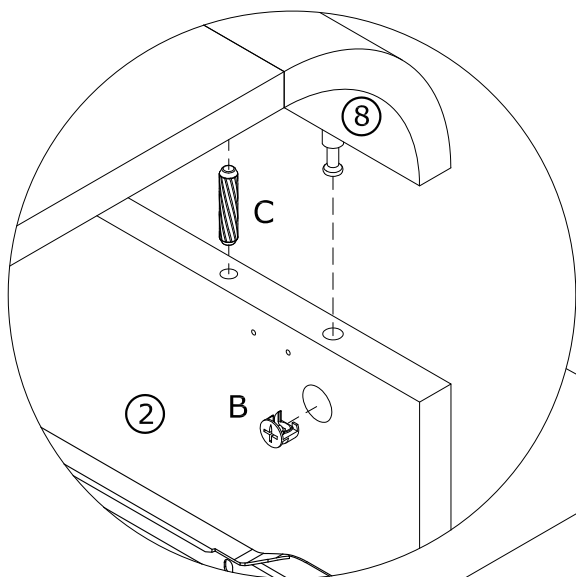






13

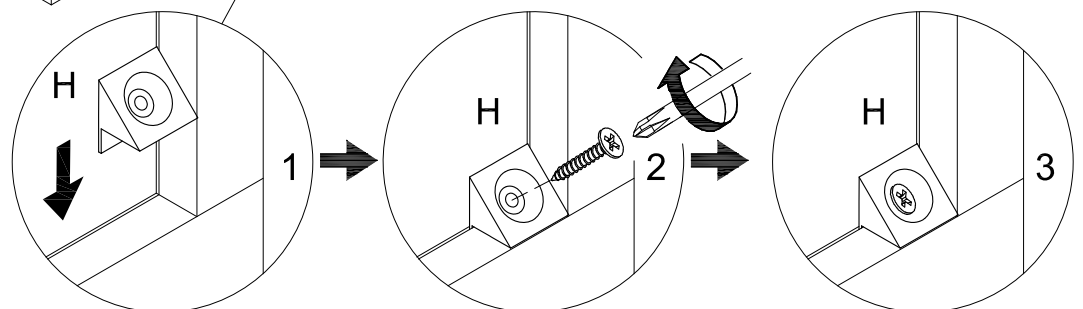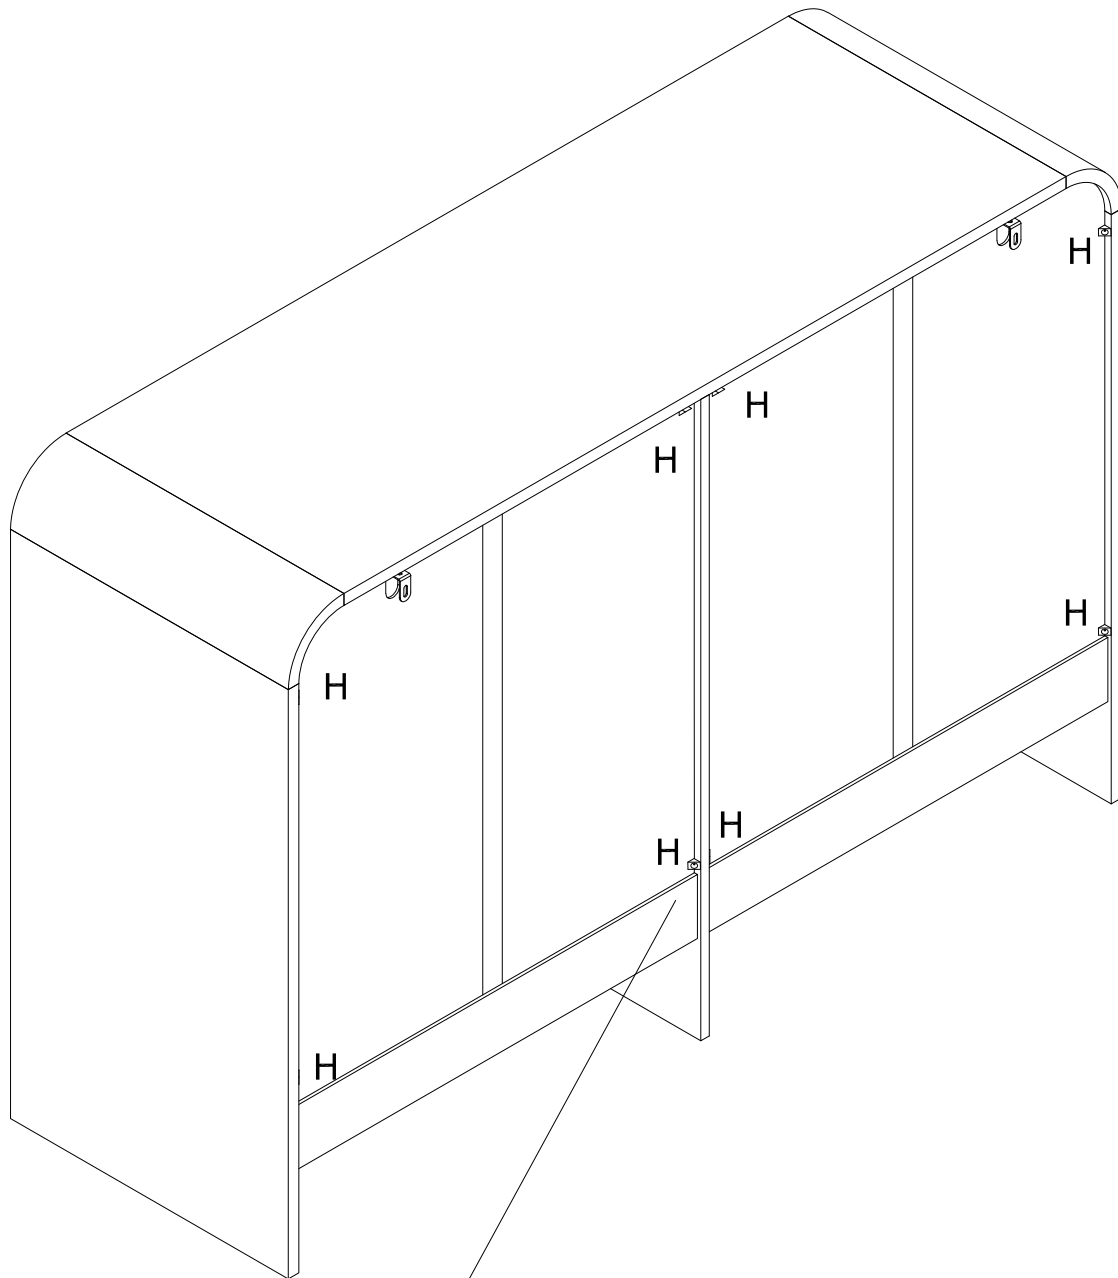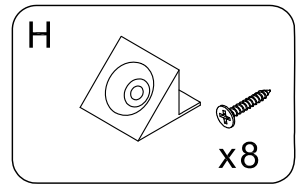



14

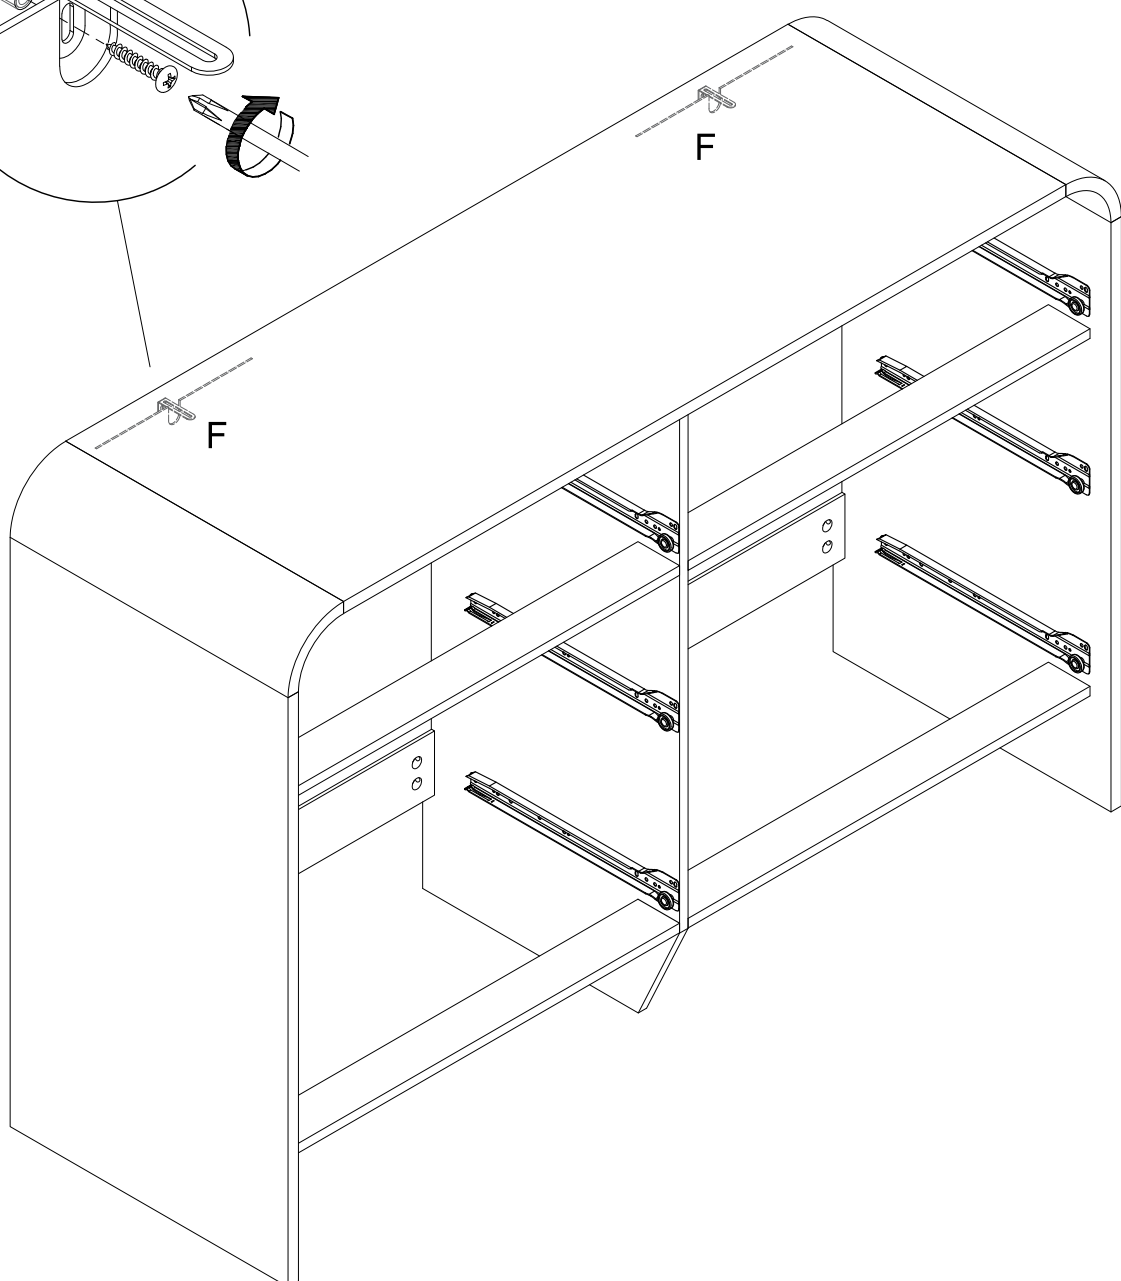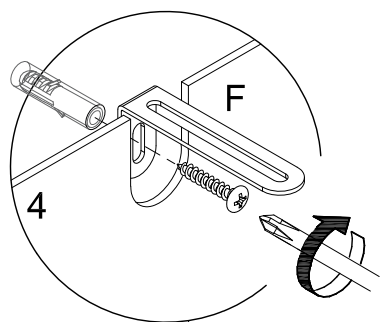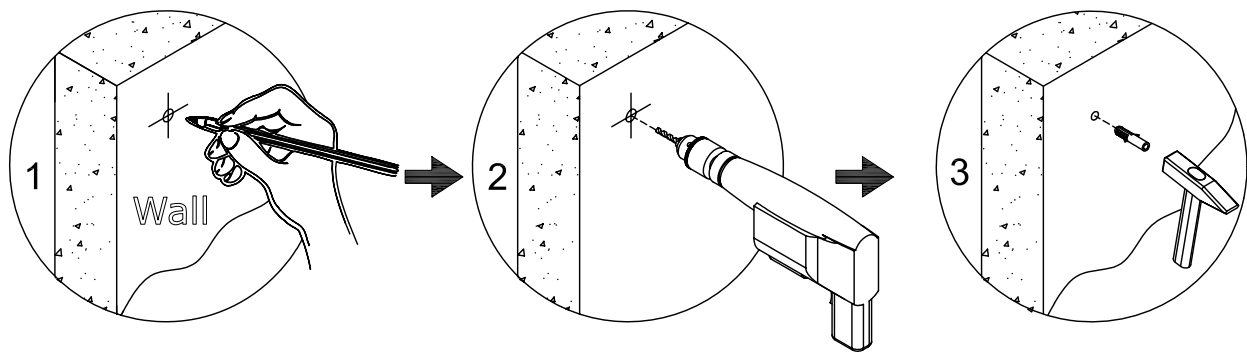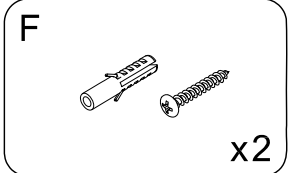

15

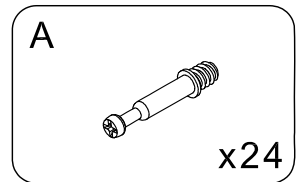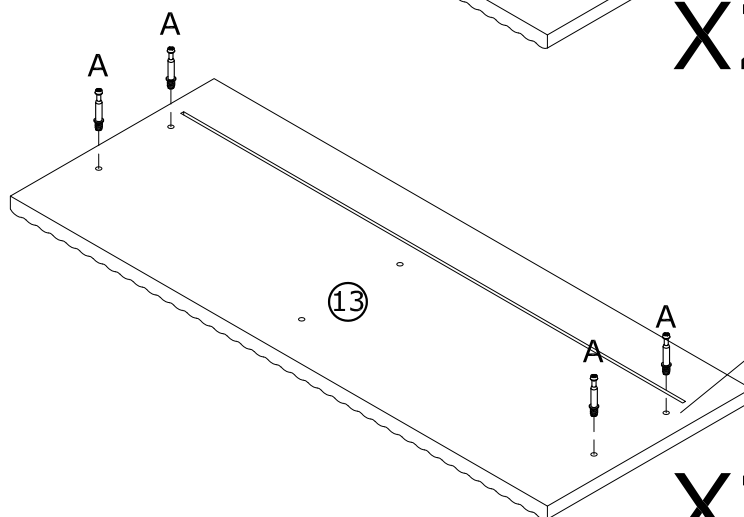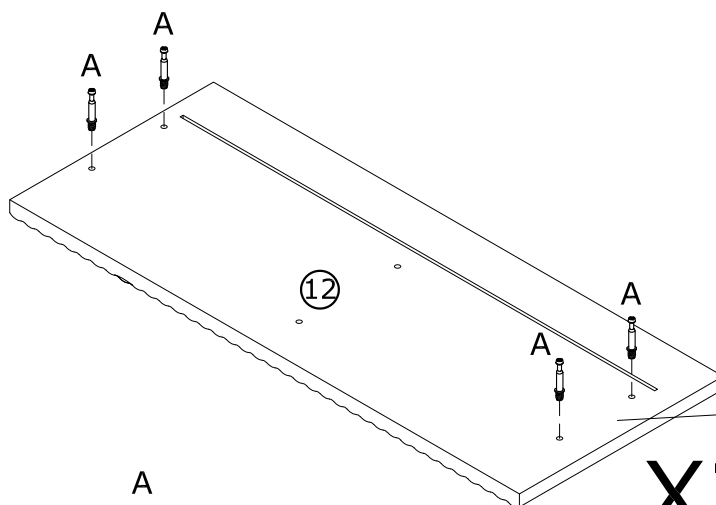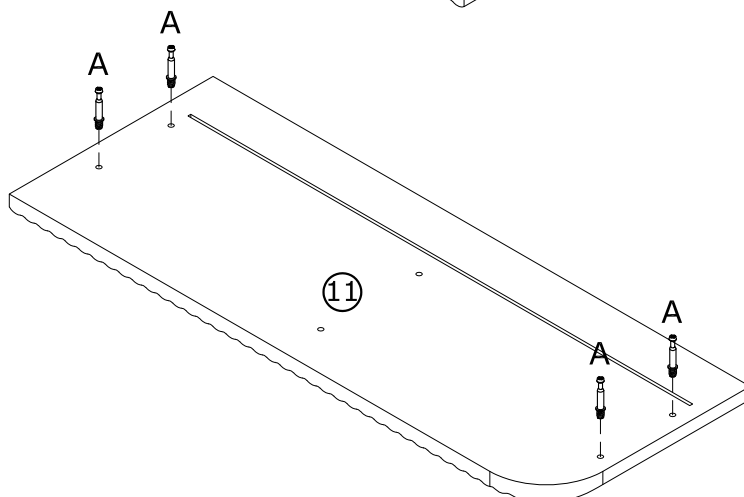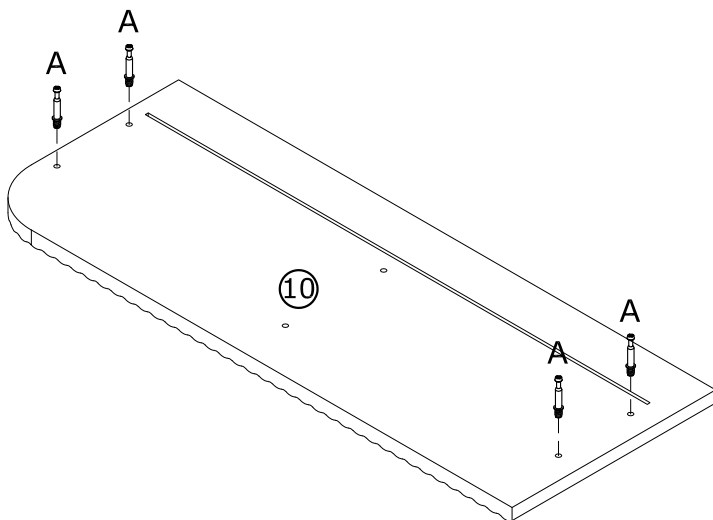

X2

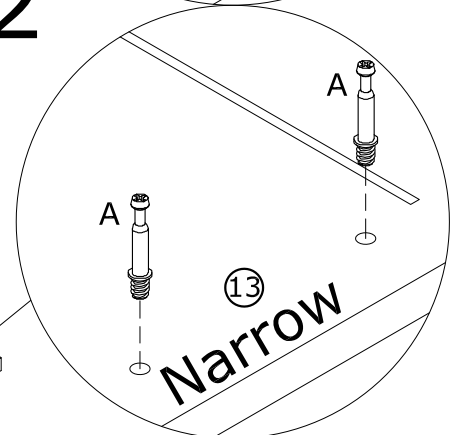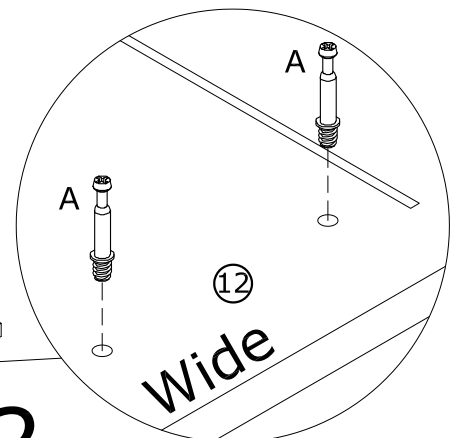


X2

16

D










x24

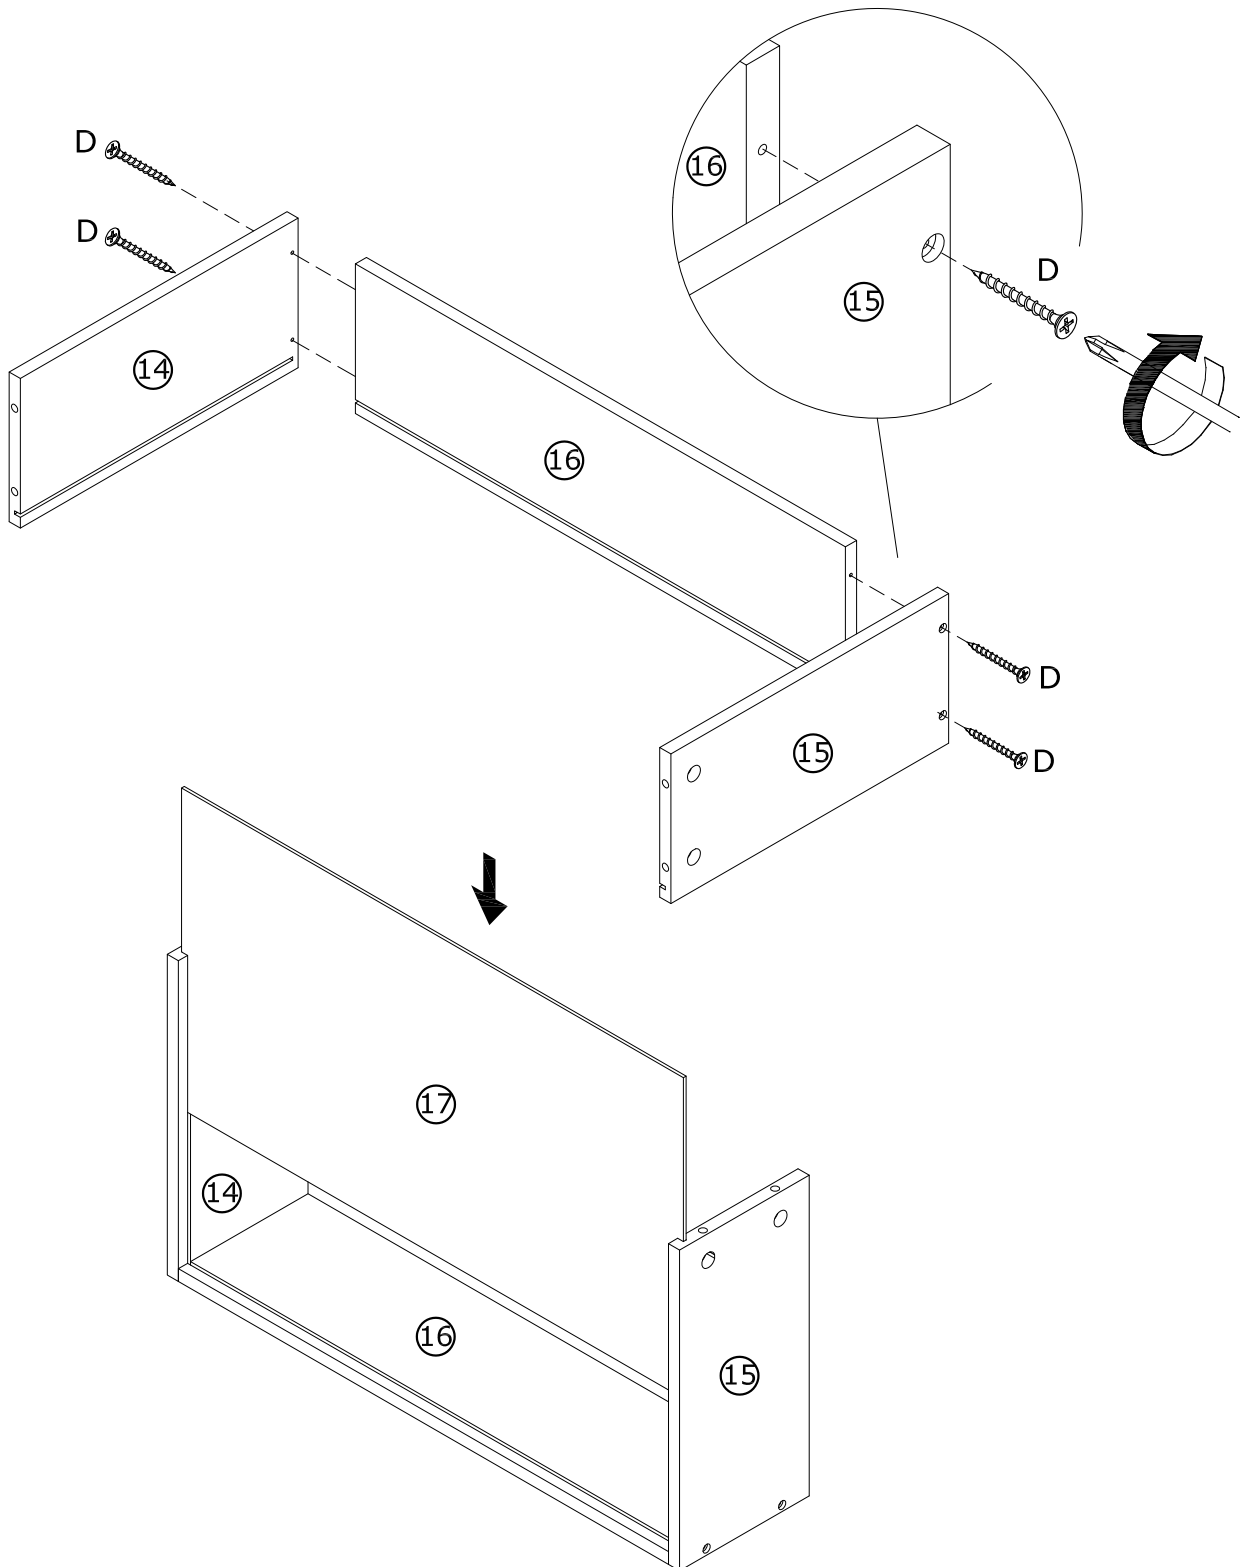

X6


17

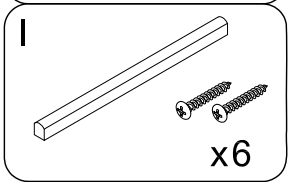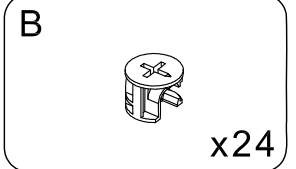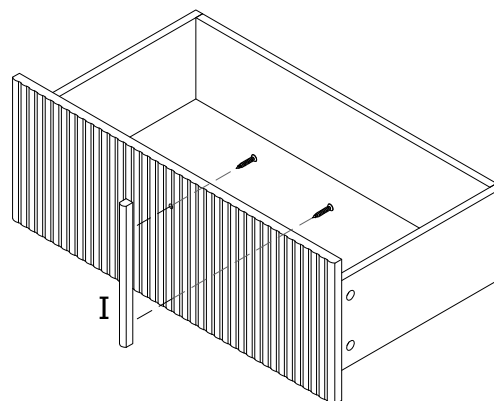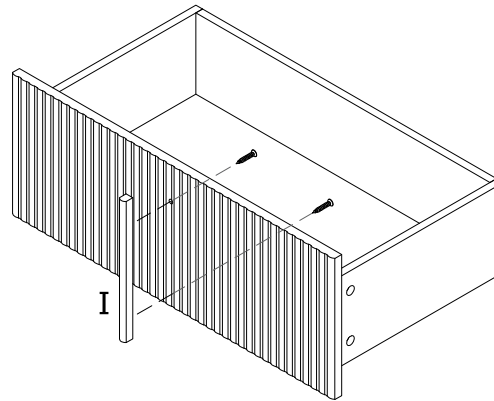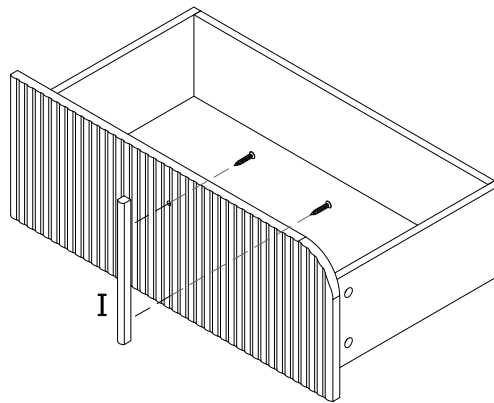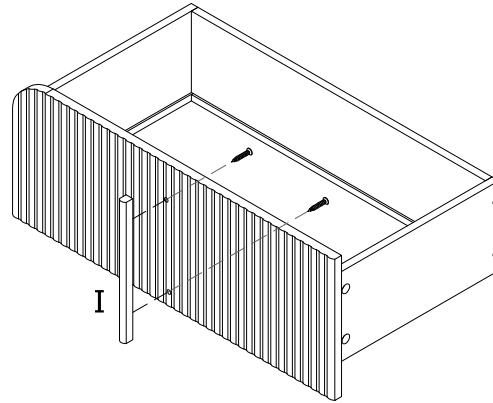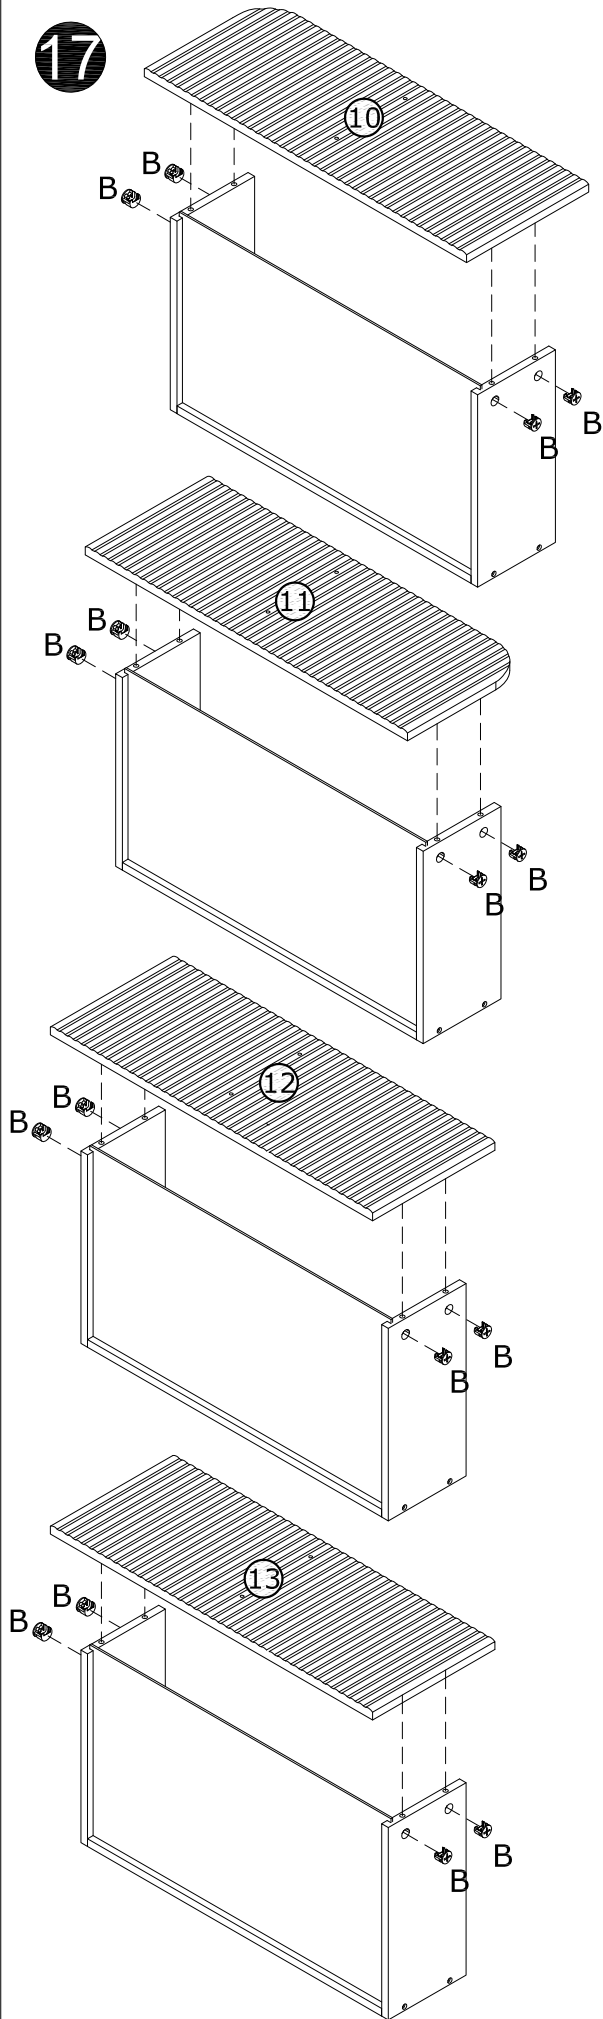

X2

X2

18

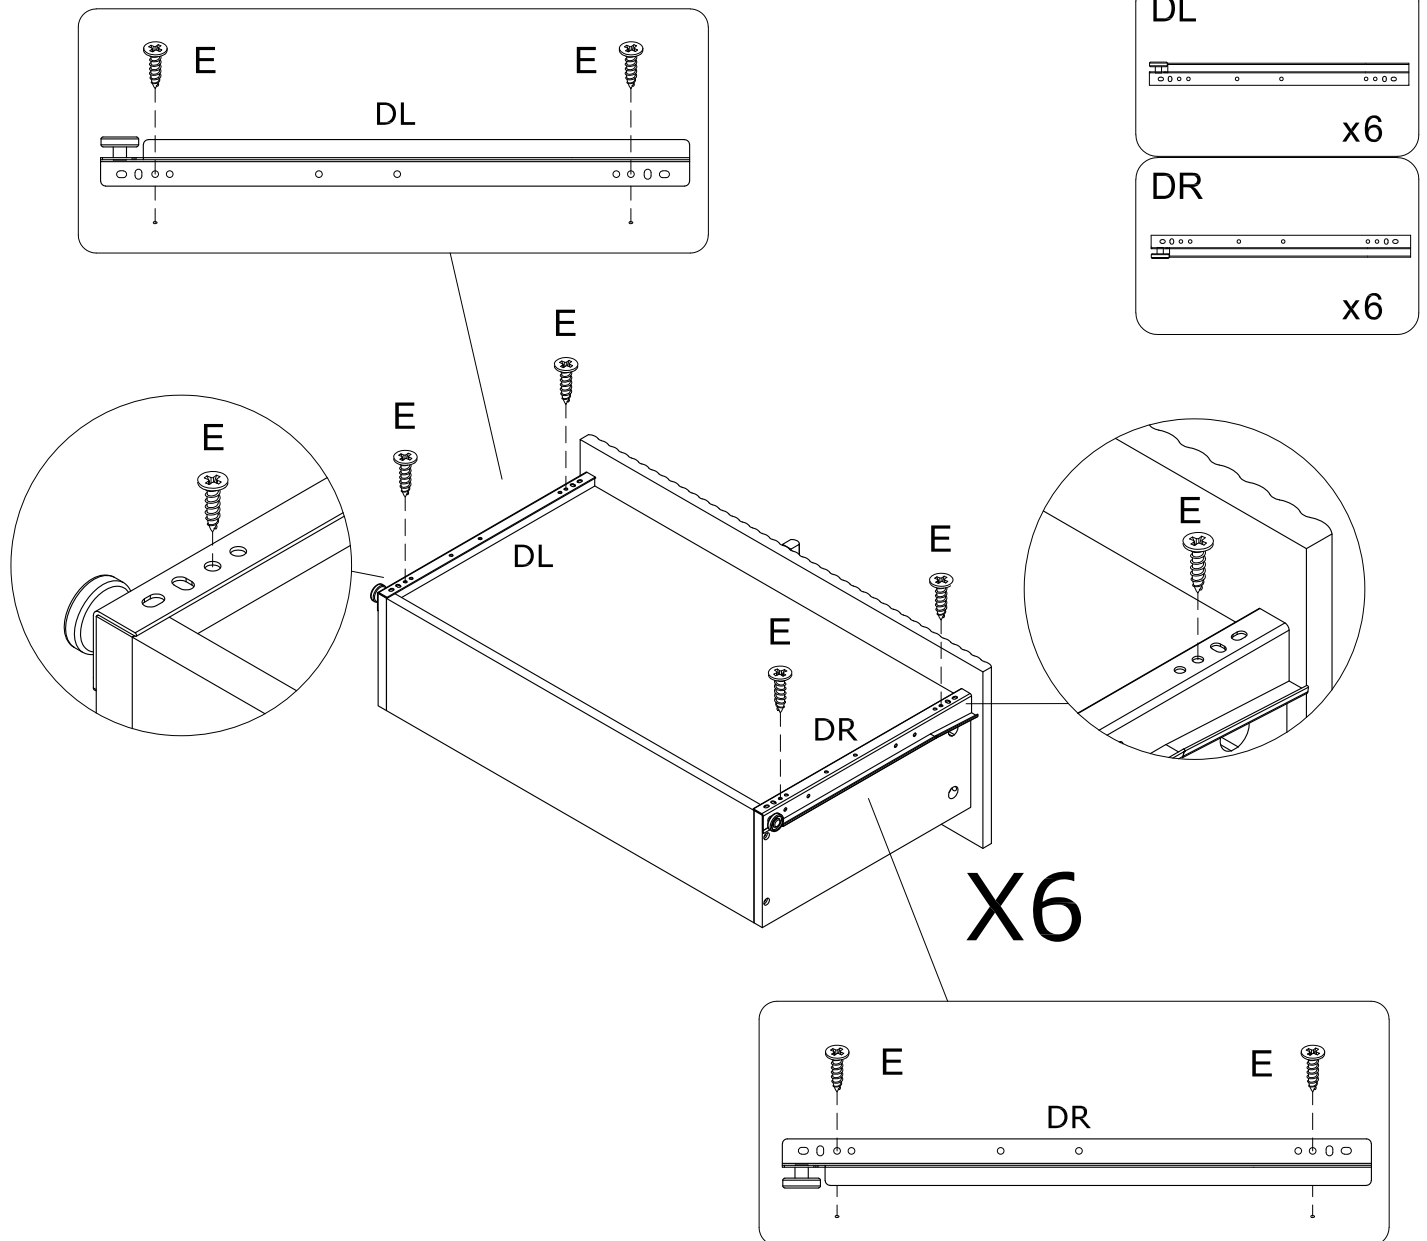

19



Pay attention to the drawer number;do not place items incorrectly

