


Part No.	Qty.	
A	2	 Headboard Leg
B	1	 Slat Leg
C	48	 Screw 8*20mm
D	1	 Allen Wrench
E	4	 Connector
F	1	 Screw 8*45mm
G	12	 Connector
H	12	 Pad
I	4	 Bed Leg
J	4	 Connector


Queen Bed

Part No.	Qty.	
A	2	 Headboard Leg
B	2	 Slat Leg
C	48	 Screw 8*20mm
D	1	 Allen Wrench
E	4	 Connector
F	2	 Screw 8*45mm
G	12	 Connector
H	12	 Pad
I	4	 Bed Leg
J	4	 Connector


King Bed

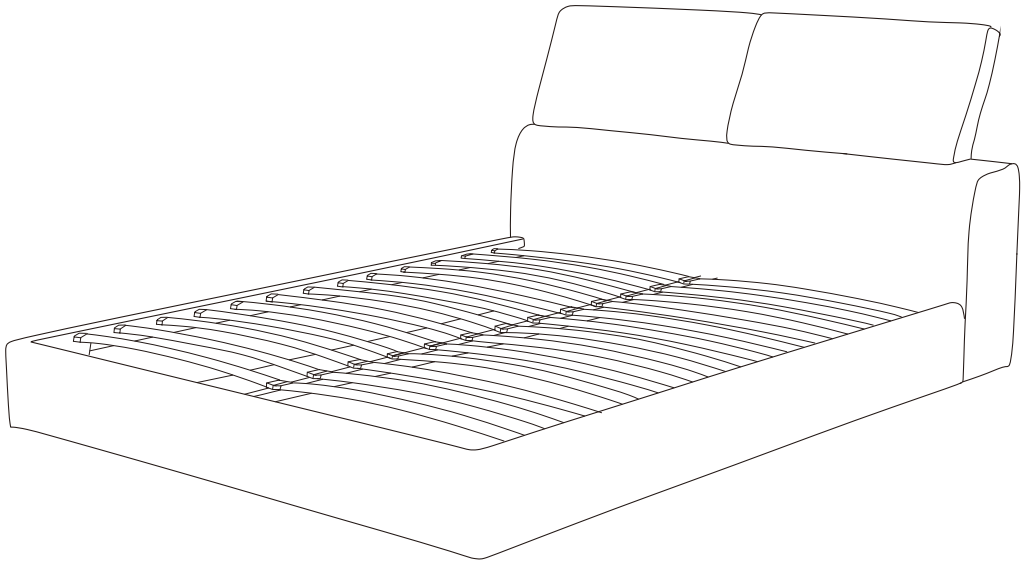

1. Install leg (A) to headboard.
2. Align connectors (G) to pre-drilled holes, insert screws (C) and tighten with allen wrench (D).
3. Place pad (H) on top of the connectors (G).

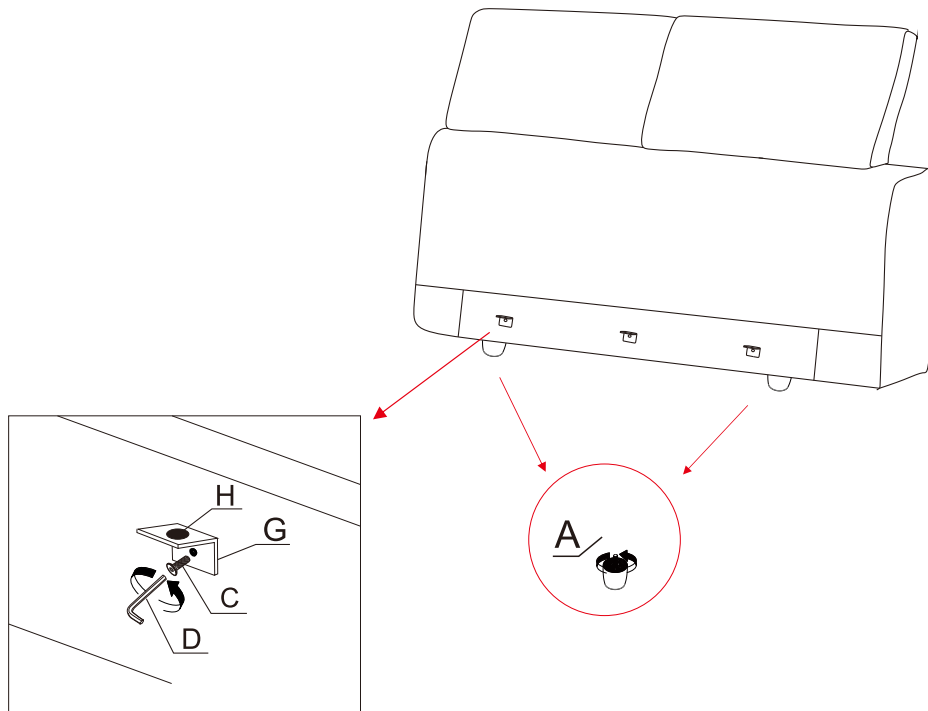

4. Repeat for all connector positions on siderails.
5. Align connectors (J), using allen wrench (D) to tighten screws (C).

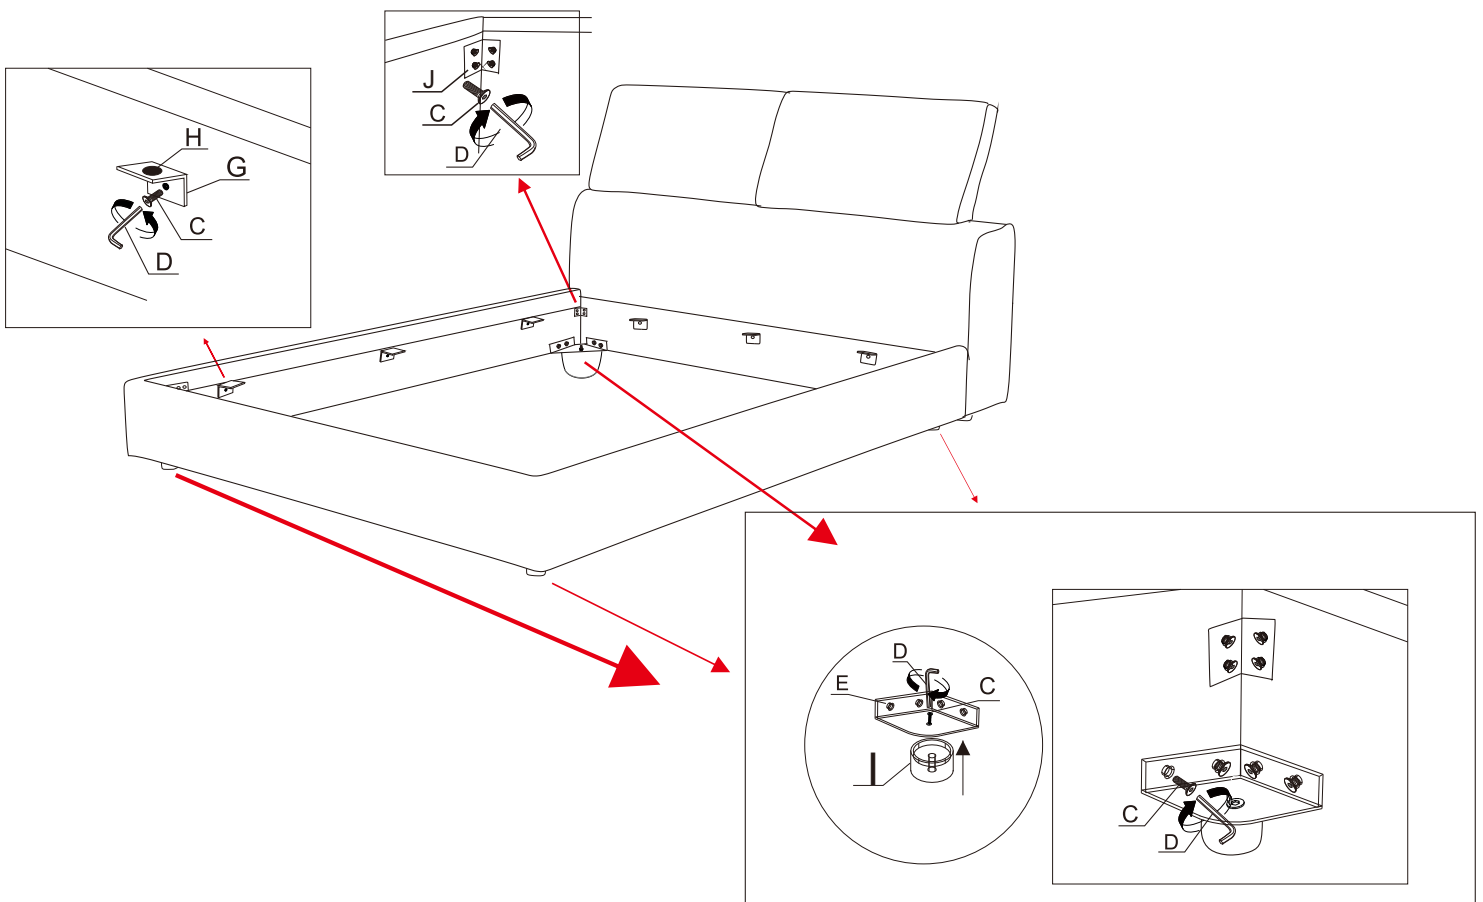

6. Align connectors (E) at four corners, using allen wrench (D) to tighten screws (C) and install bed legs (I).

7. Install slat leg (B) to the slat, using allen wrench (D) to secure screw (F). Put the slat on the bed frame to complete assembly.

*Note: Slat leg Qty differs from bed size.

