
Assembly Instructions

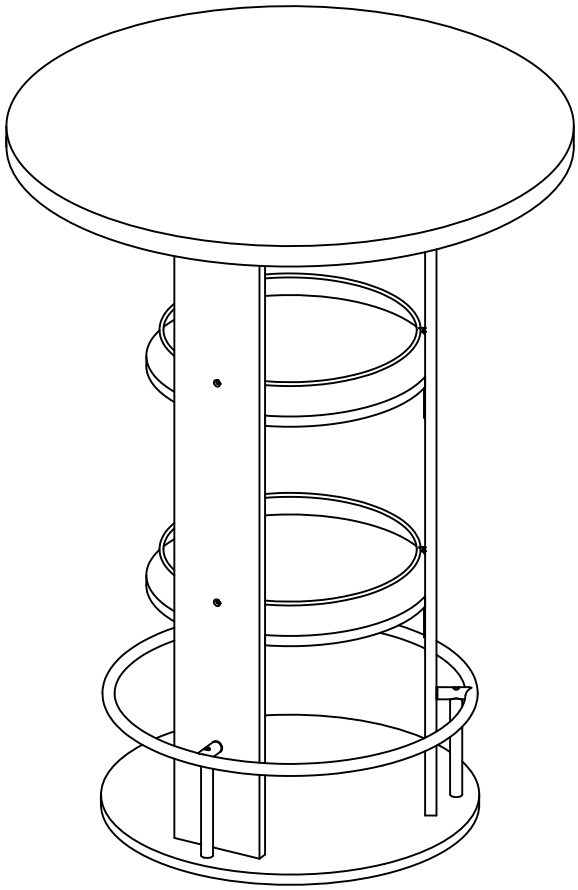


So glad you chose us! Wishing you and
your family happy moments with it.








Attention: Please ensure you have all parts before commencing assembly.
Please read all the instructions before commencing.

PART LIST

The beginning of installation may feel confusing and painful,but it will get better.











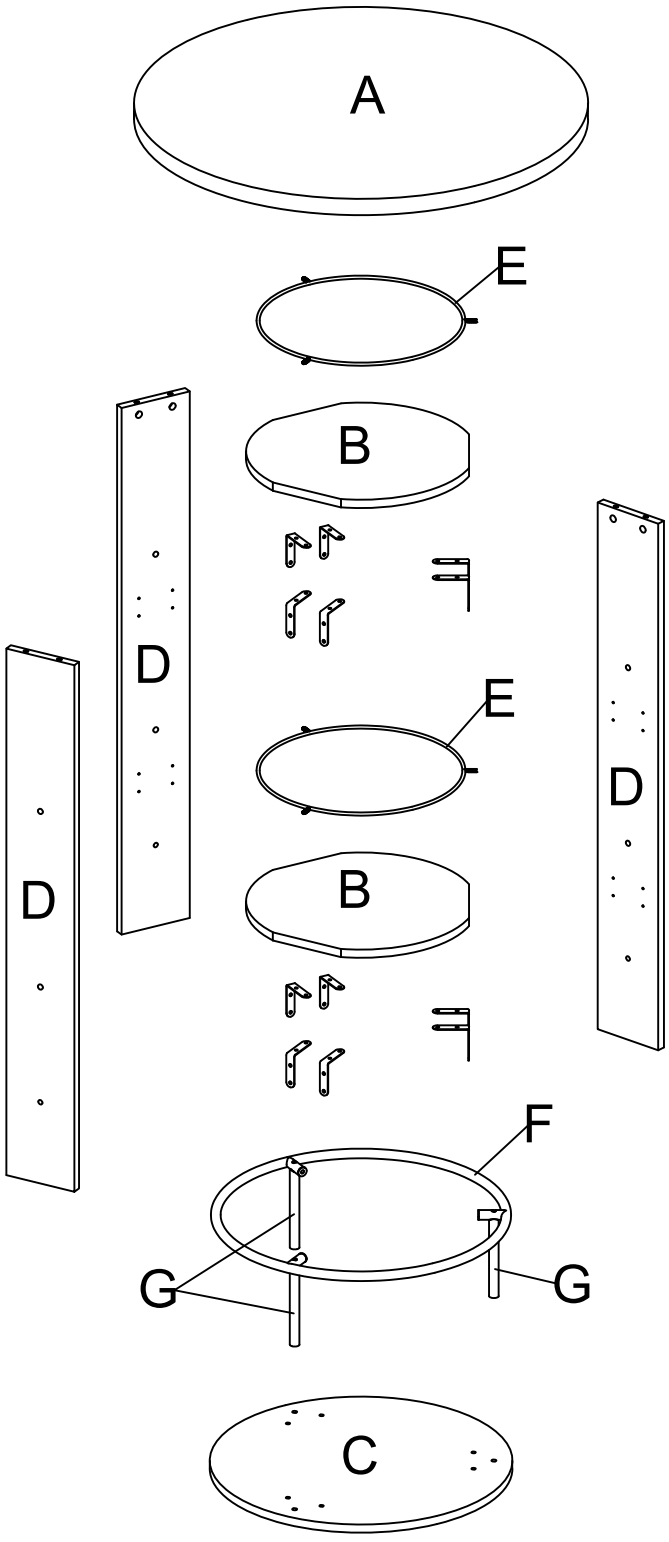


PART LIST

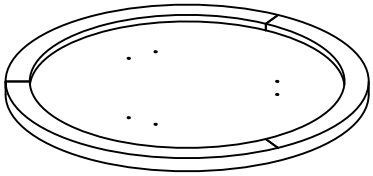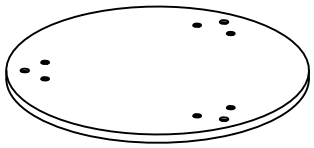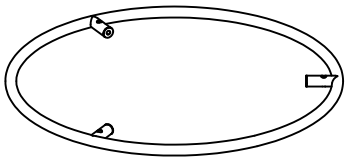A x 1pc 	B x 2pcs 	C x 1pc 
D x 3pcs 	E x 2pcs 	F x 1pc 
G x 3pcs 		

Don't worry, feel free to contact us if you need anything.
Go ahead and give it a try!

HARDWARE LIST

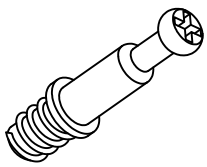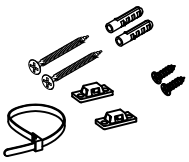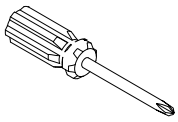
①  M6x28 6 pcs	②  Ø12 6 pcs	③  M4x40*2 M4x14*2 1 pc
④  60*60*15 12 pcs	⑤  M6x40 6 pcs	⑥  M6x30 9 pcs
⑦  M3.5x12 48 pcs	⑧  M6x15 6 pcs	⑨  20*3 6 pcs
⑩  M4 1 pc	⑪  1 pc	

Please count and verify all parts before assembly .


How to install Camlocks

Connect the male camlock as directed in the assembly instructions with a screwdriver.

DO NOT OVER TIGHTEN!

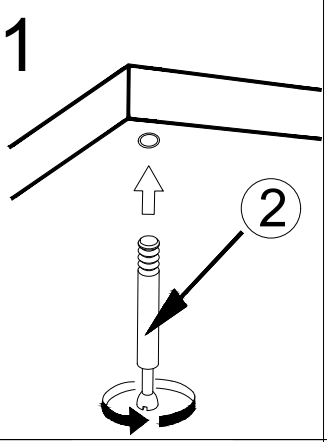


Put the male camlock into the entry hole.

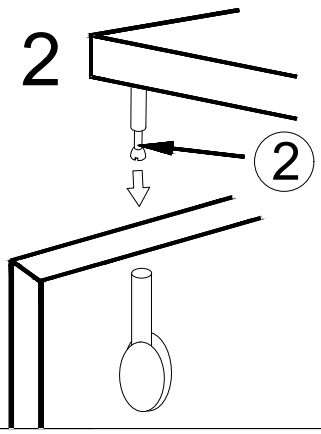

Insert the female camlock as shown in the instruction.


Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

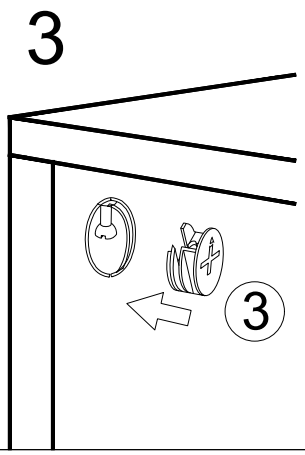


Screw the female camlock clockwise with a screwdriver.

You will feel a click when the camlock is locked in place.


The camlock is now completed.

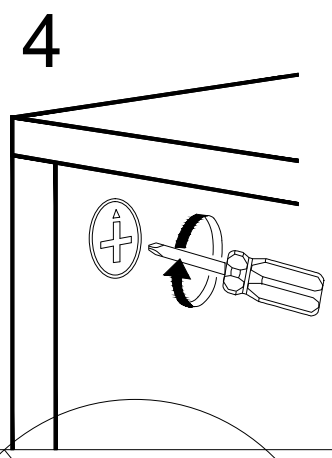


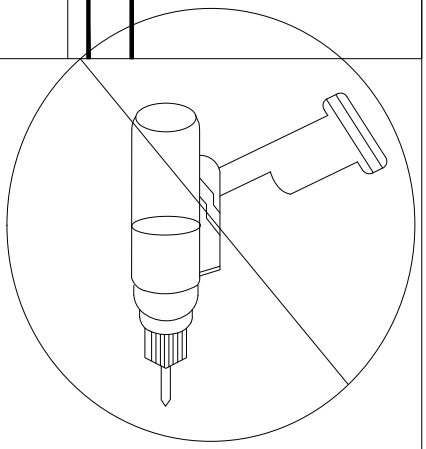



STEP 1

Great job! Now that you have gotten through the initial phase, you're ready to move on to the next steps.

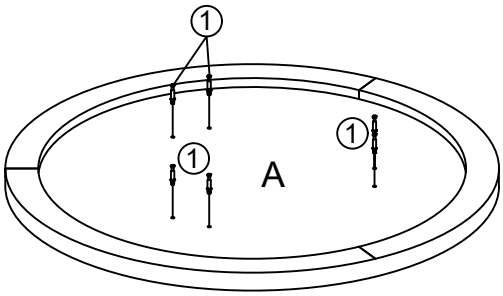

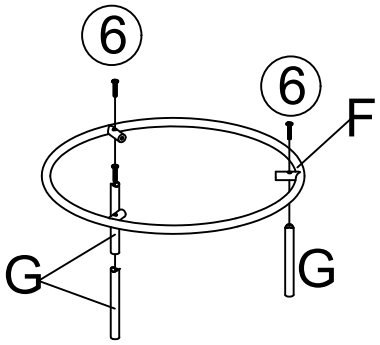

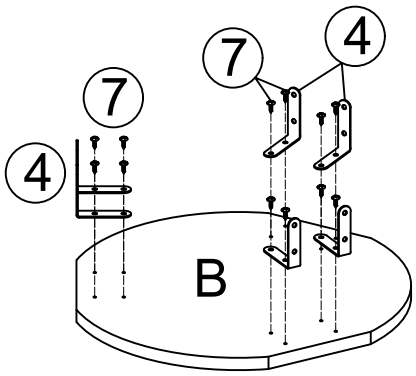

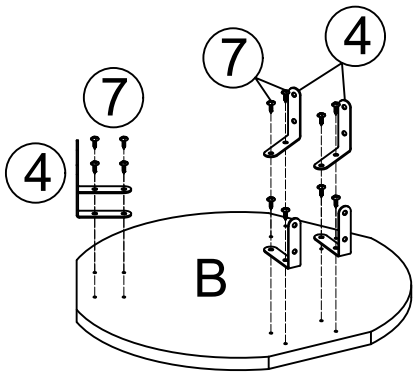

1 x6


4 x12

6 x3


7 x24

STEP 2

8 x6

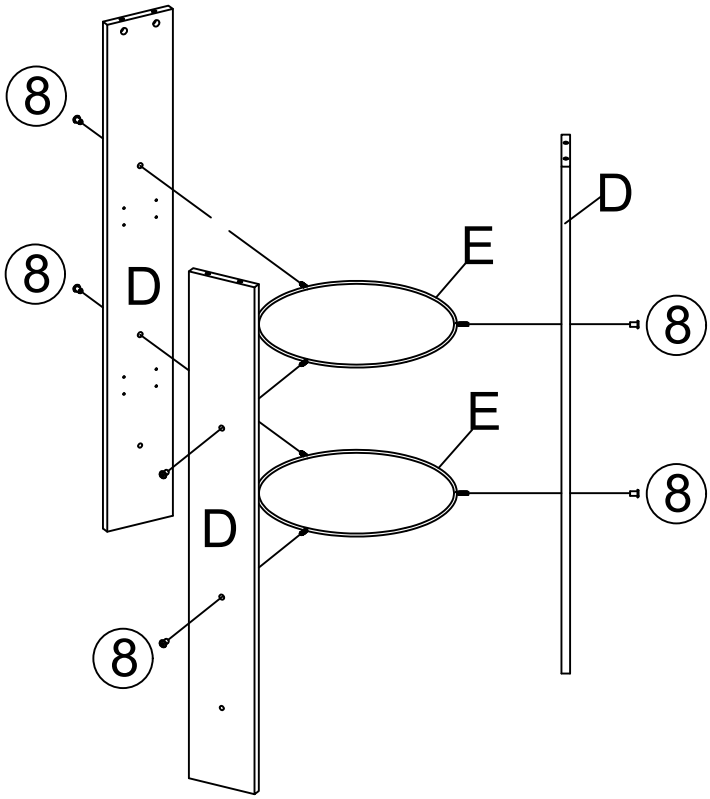


STEP 3

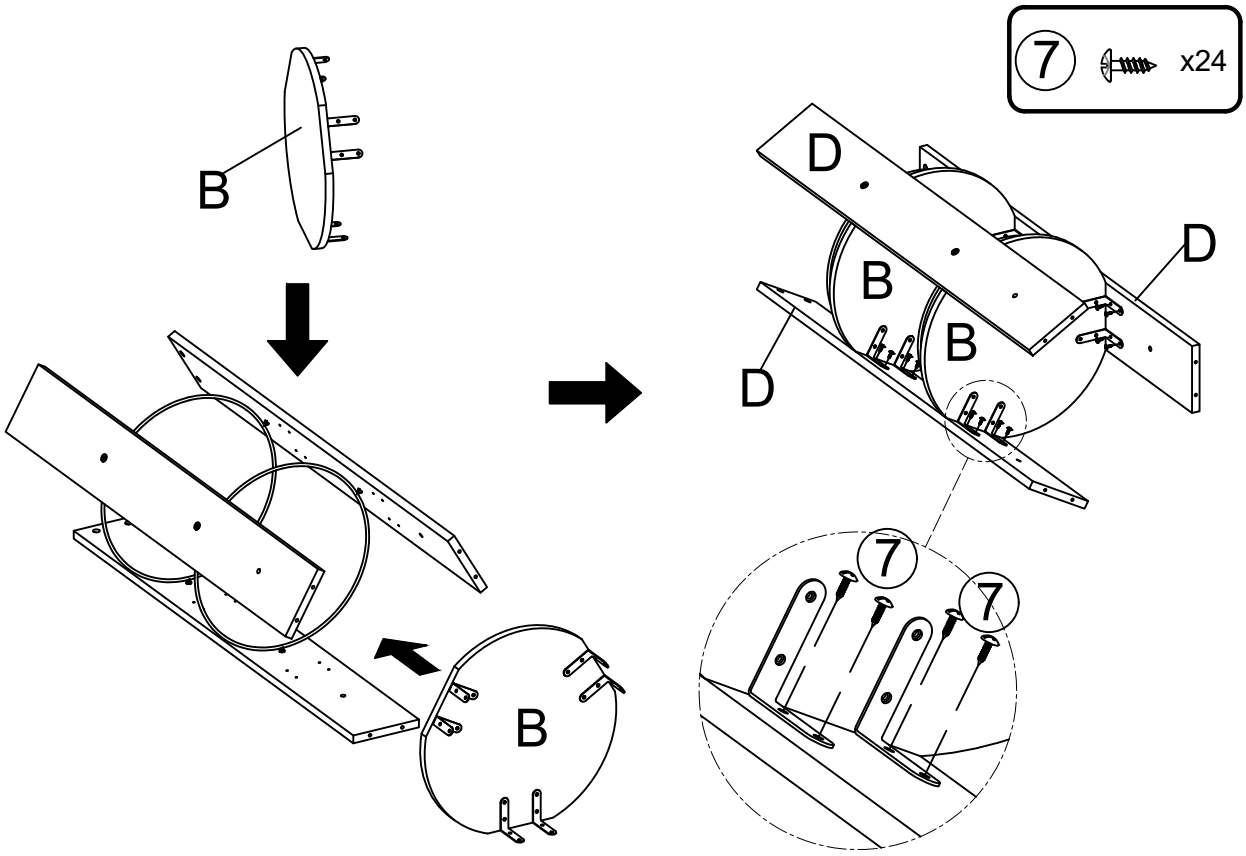

STEP 4

Come on, we can do this! Take a deep breath, and let's tackle it step by step.

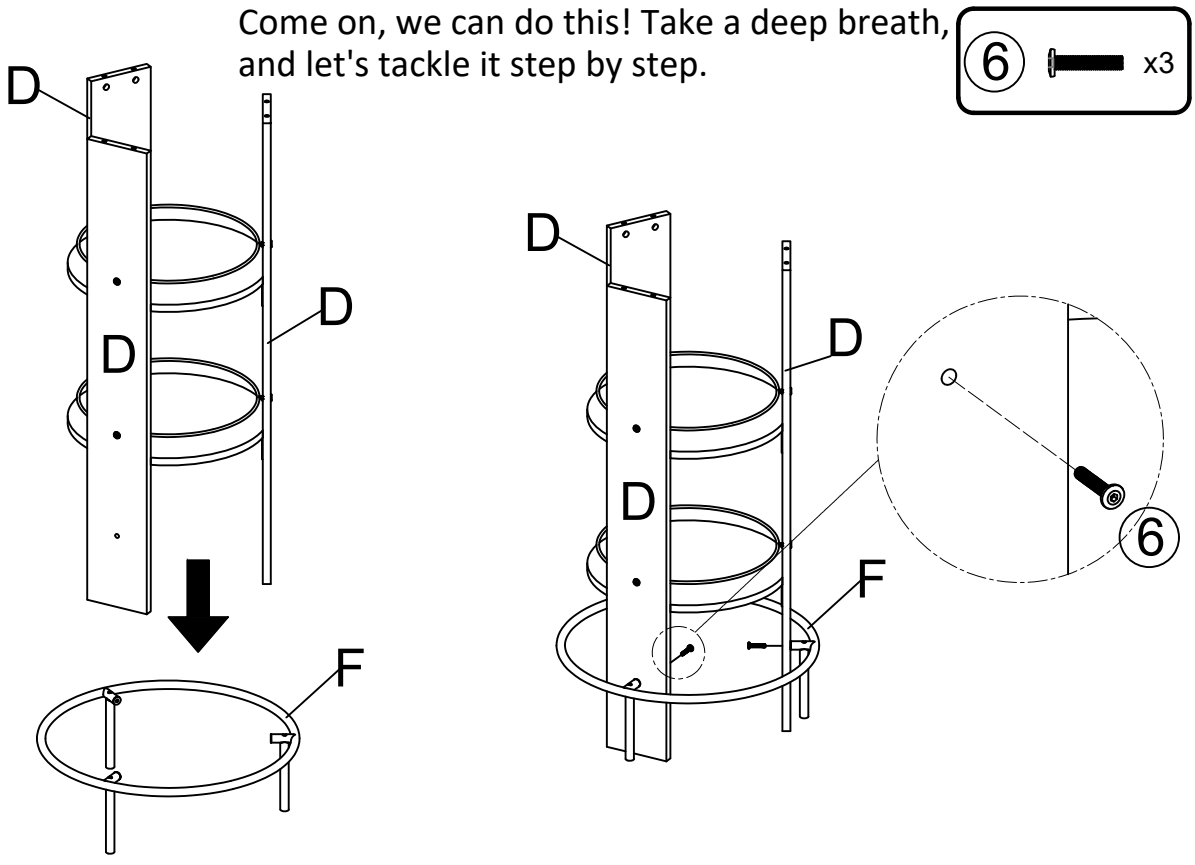


STEP 5

Almost finished! Imagine it sitting in your living room—how perfect!
Keep going, you're so close to success!


5 x6

6 x3

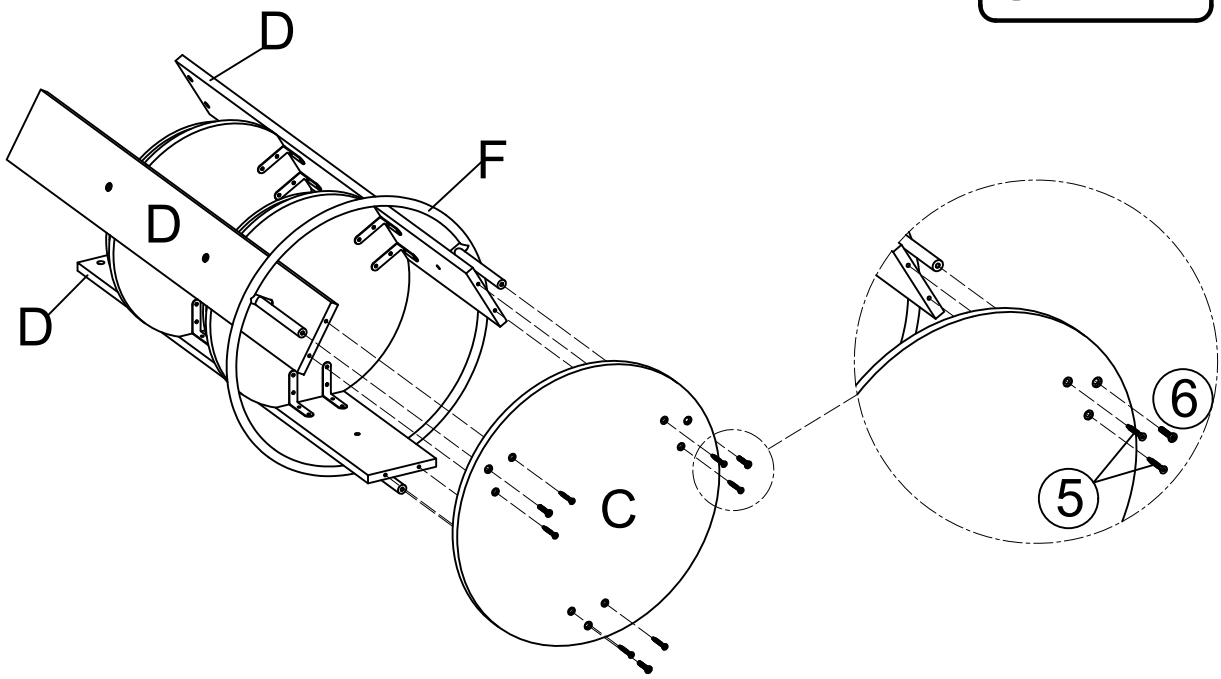


STEP 6


2 x6

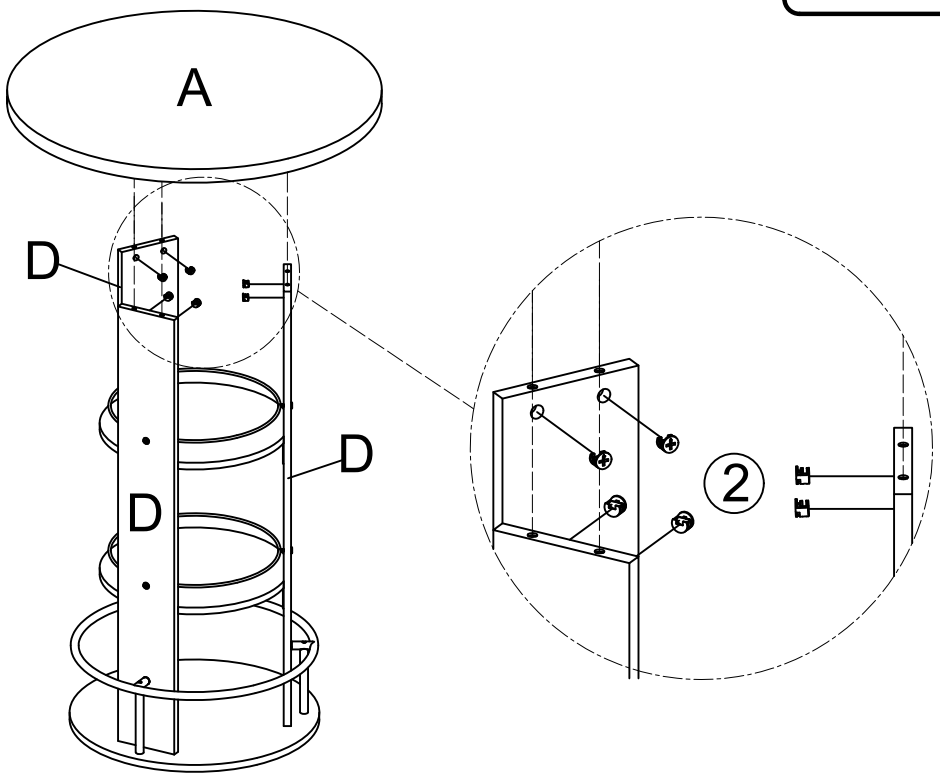


STEP 7




Alright! Give yourself a pat on the back
— now step back and take in your master piece!

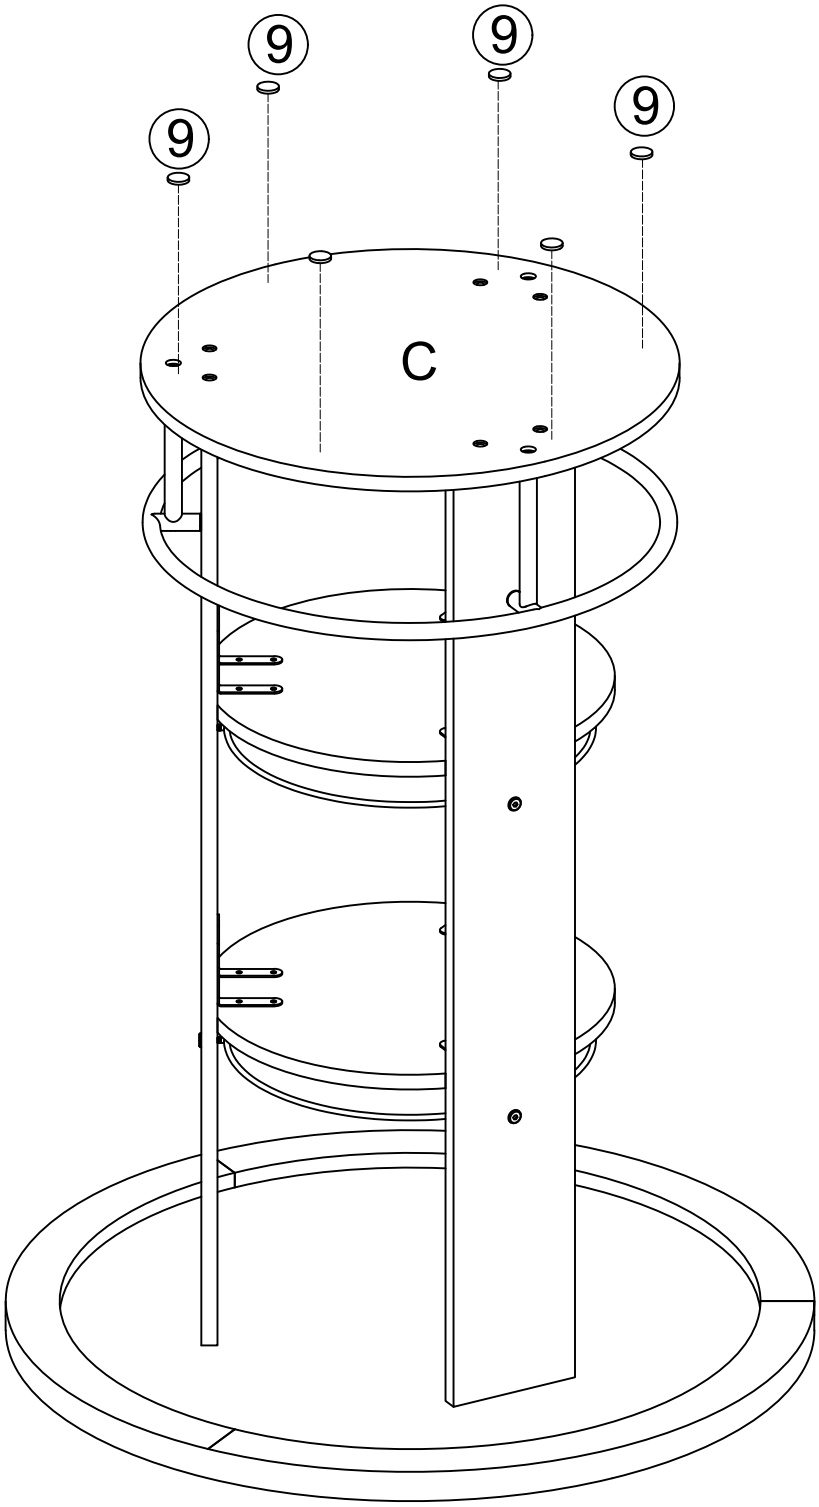

STEP 8



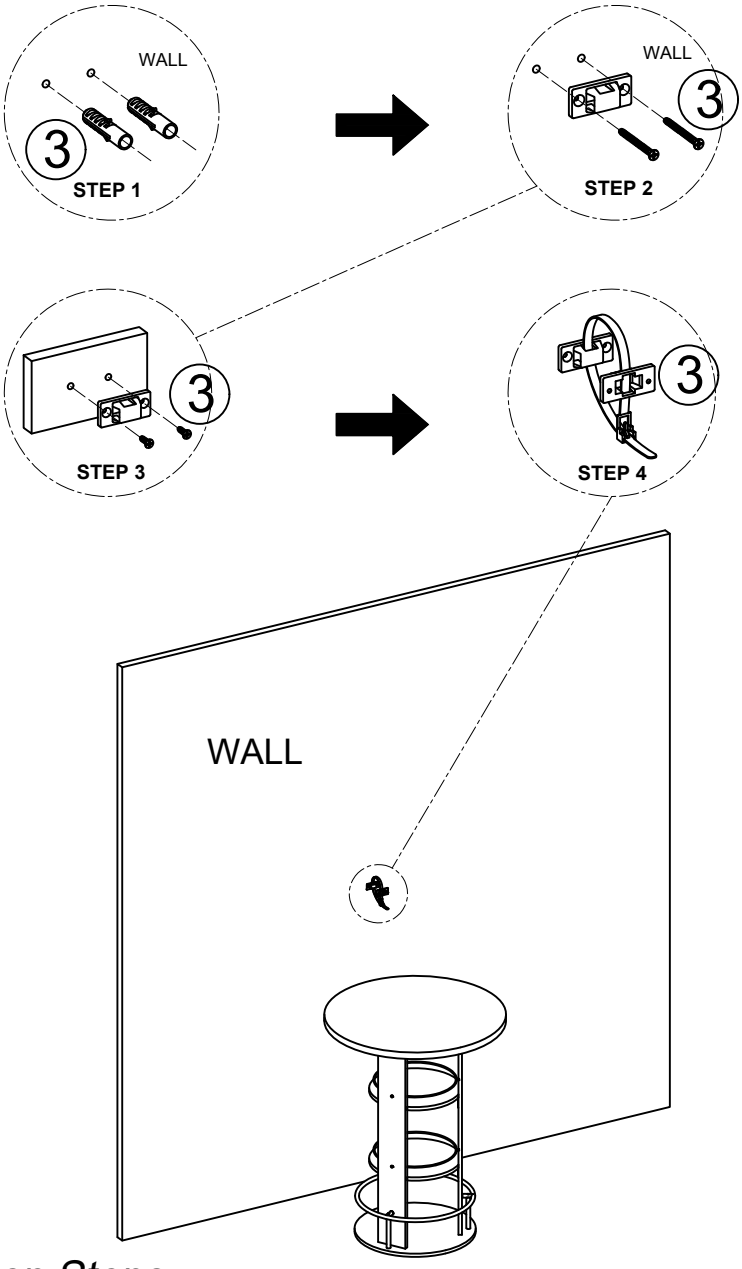

Installation Steps:

1. Drill a hole on the wall, insert the expansion bolt into the hole.
Installation Steps:
2. Secure one bracket into the expansion bolt using the screw.
3. Position the furniture in place. Attach another bracket (aligns with the bracket on the wall)to the back edge of unit top using the screw
4. Thread the male end of the steel cable through both brackets. Securely join the ends by turning the female connector clockwise.

Note:

Before installing the anti-tip kit, please determine where the furniture is to be placed and locate the center line of a wooden stud using a stud finder.
For a concrete wall, ensure no steel b
（Anti-tipping accessories are not mandatory. You can consider whether to install them according to your home decoration）