


LIGHTED VANITY SET WITH HIDDEN SHELVES


















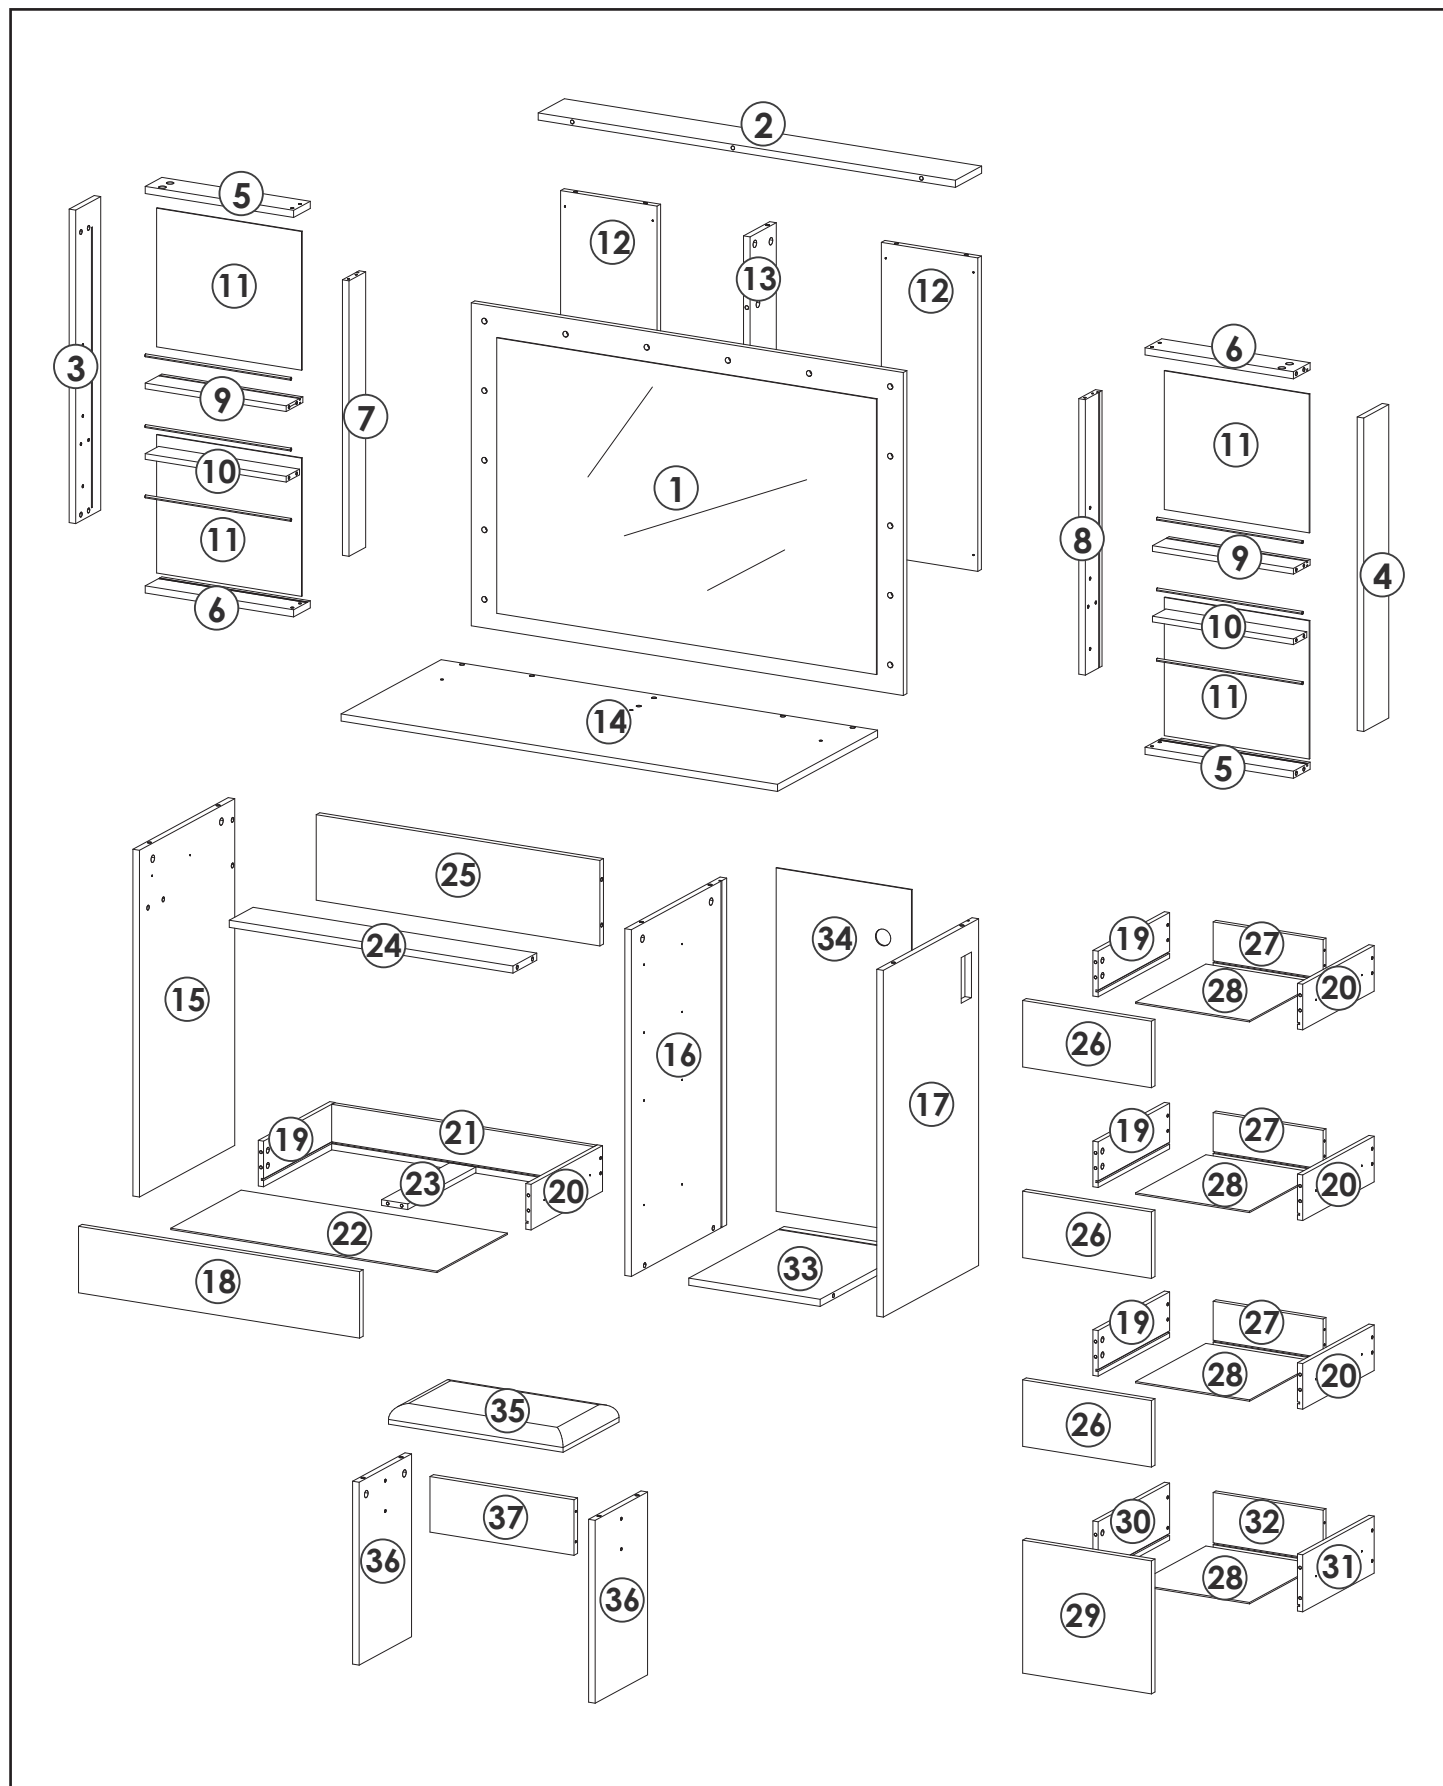




User Manual





















INTRODUCTION

Thank you very much for choosing the Lighted Vanity Set with Hidden shelves. Please read this manual before using the product as it may contains some information you don't know. If you have any questions, please feel free to send us email.

INSTALLATION INSTRUCTION
















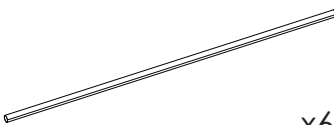









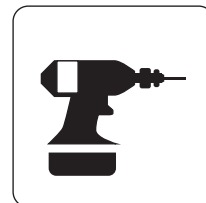



Unit: (mm)		PARTS LIST		→ (A) BOX			
③ x1	660x105	⑤ x2	340x66	⑥ x2	340x66	⑧ x1	580x66
							
⑨ x2	323x66	⑩ x1	323x52	⑪ x3	292x332	⑬ x1	660x110
							
⑮ x1	730x400	⑯ x1	730x400	⑰ x1	730x400	⑱ x1	644x140
							
⑳ x1	601x96	㉔ x1	650x100	㉖ x2	295x140	㉗ x3	252x96
							
㉙ x1	295x280	㉓ x1	300x120	㉒ x1	252x120	㉕ x1	400x235
							
㉚ x2	385x220	㉛ x1	330x117				
							

Unit: (mm)		PARTS LIST		→ B BOX			
① x1	680x990	② x1	956x110	④ x1	660x105	⑦ x1	580x66
							
⑩ x1	323x52	⑪ x1	292x332	⑫ x2	660x221	⑭ x1	1000x420
							
⑰ x4	300x96	⑳ x4	300x96	㉒ x1	608x293	㉓ x1	285x60
							
㉕ x1	650x180	㉖ x1	295x140	㉘ x4	259x293	㉚ x1	300x120
							
㉛ x1	301x400	㉜ x1	723x310				
							

(Company: mm)

ACCESSORIES LIST → (A) BOX

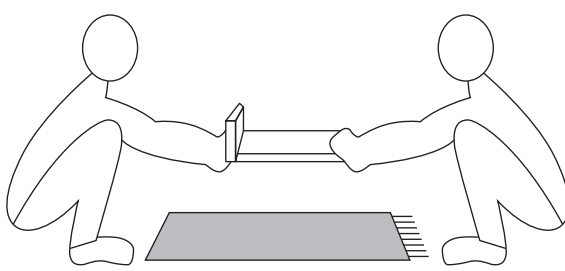(A) 6x40  x38	(B) 15x11  x38	(C) 12inches  x4	
(D) 6x40  x16	(E) M3.5x14  x44	(F) M5x40/#3  x35  x1	(G) 5xΦ12  x10
(H) M4x20  x5  x5	(J) 6x25  x32	(K) 12x10  x32	(L) 21mm  x43
(M) 12inches  x10		(N) USB  x1	
(O) Φ6x341  x6	(P) 320x180  x2	(Q) Back plate card  x4	(R) Socket  x1
(S) Φ35  x1	(T) Wire card  x14	(U) M3.5x12  x20	(V) M3x14  x12
			
			

TIPS


1. When installing the product, use a soft surface (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
2. Do not use any glue.
3. The product is unstable before it is assembled. Please pay attention to the product installation sequence, and align all screws and screw holes before tightening.
4. The structure of this product can not meet the requirements of children climbing.

STEP 1

INSTALLATION STEPS

Press the plastic part in the indicated direction to separate drawer runner **M1** and **M2** before assembling.



REMARK: Please grip the **M1** part while sliding the **M2** part.

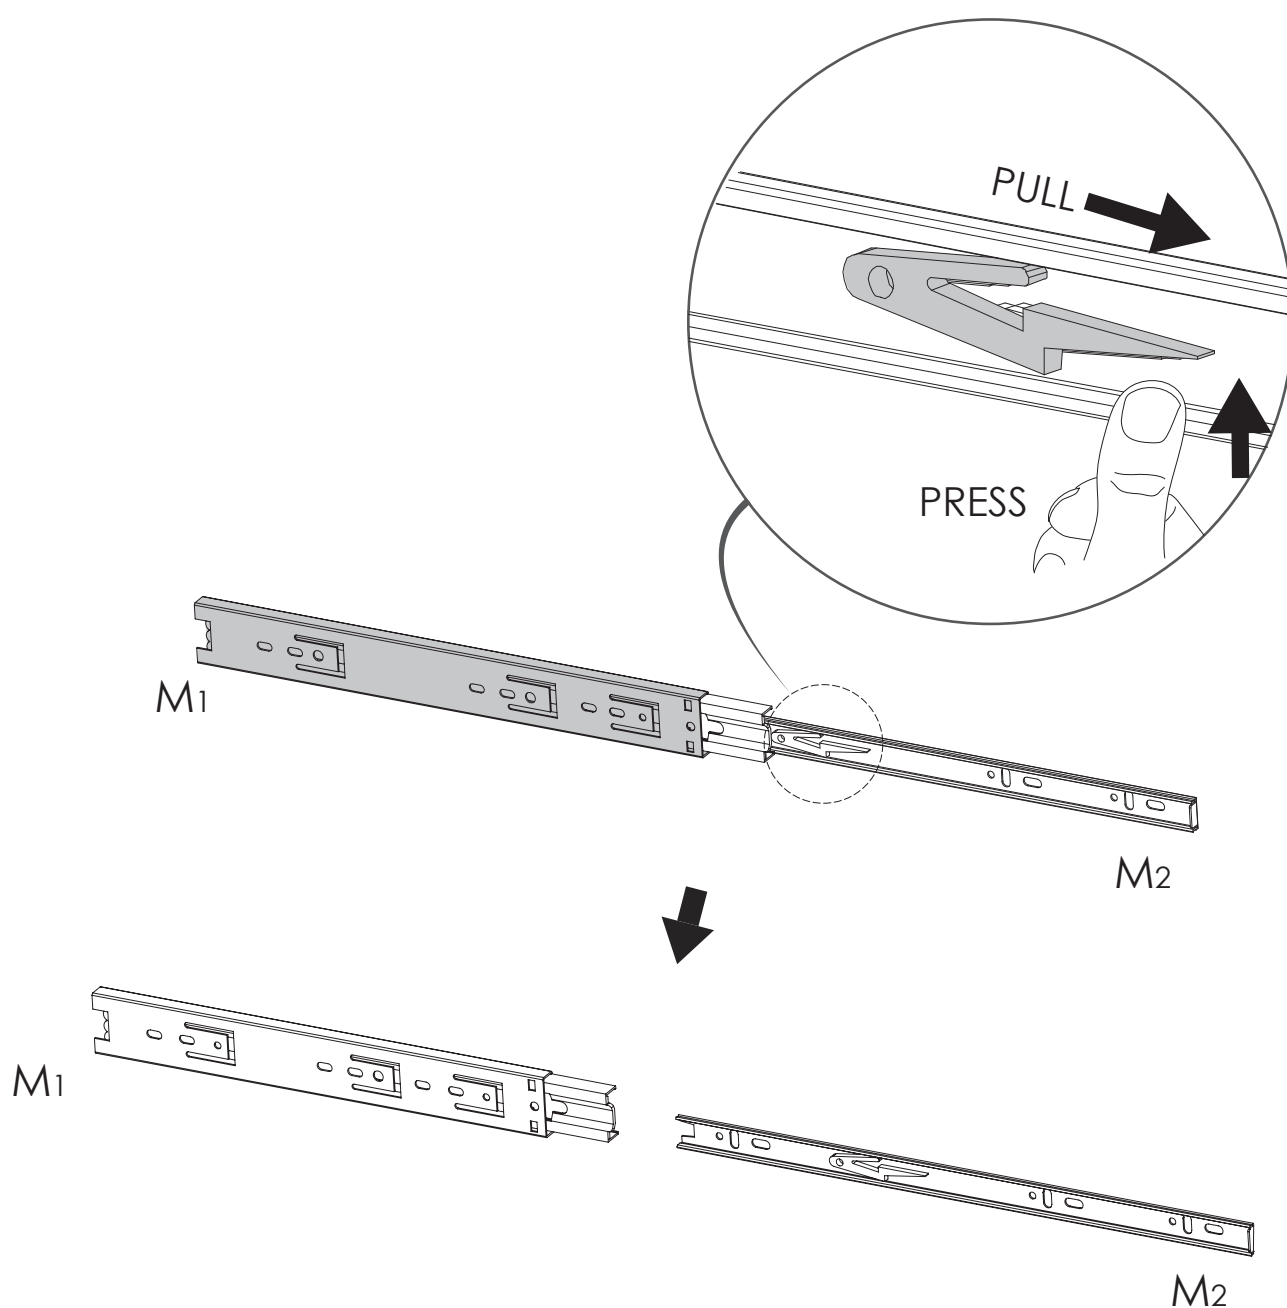


STEP 2

REMARK:

1. Please locate the holes from the back of part **M1**.

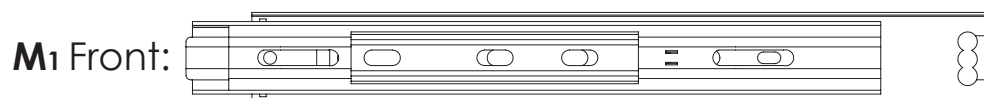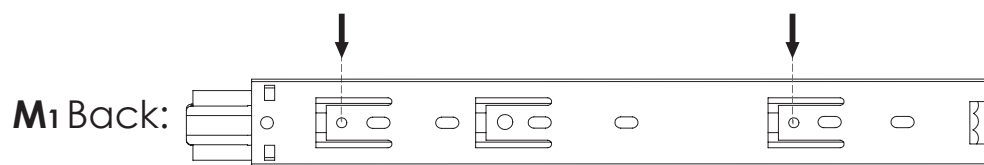

2. Then install part **E** from the front of part **M1**.

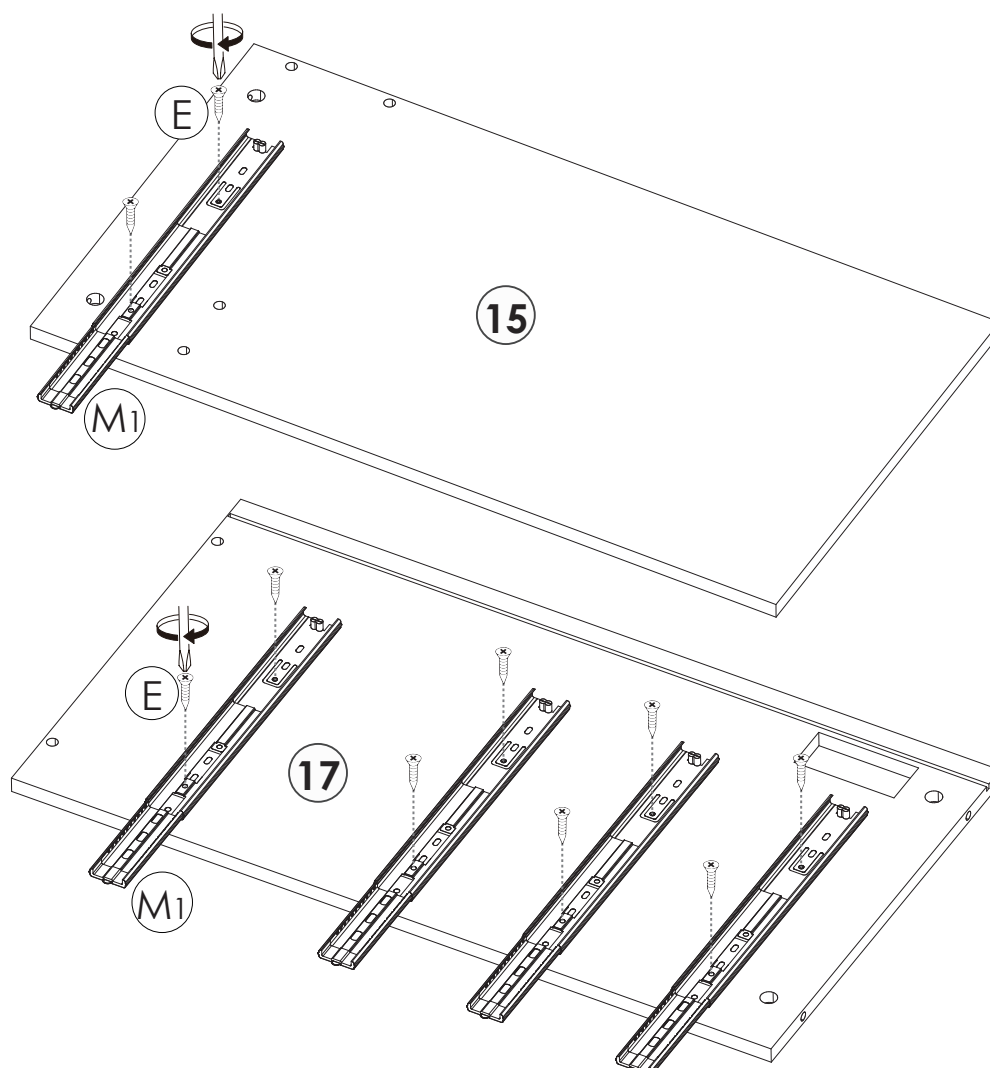

YOU WILL NEED

M1 x5


E x10

STEP 3

YOU WILL NEED

M1 x5

E x10

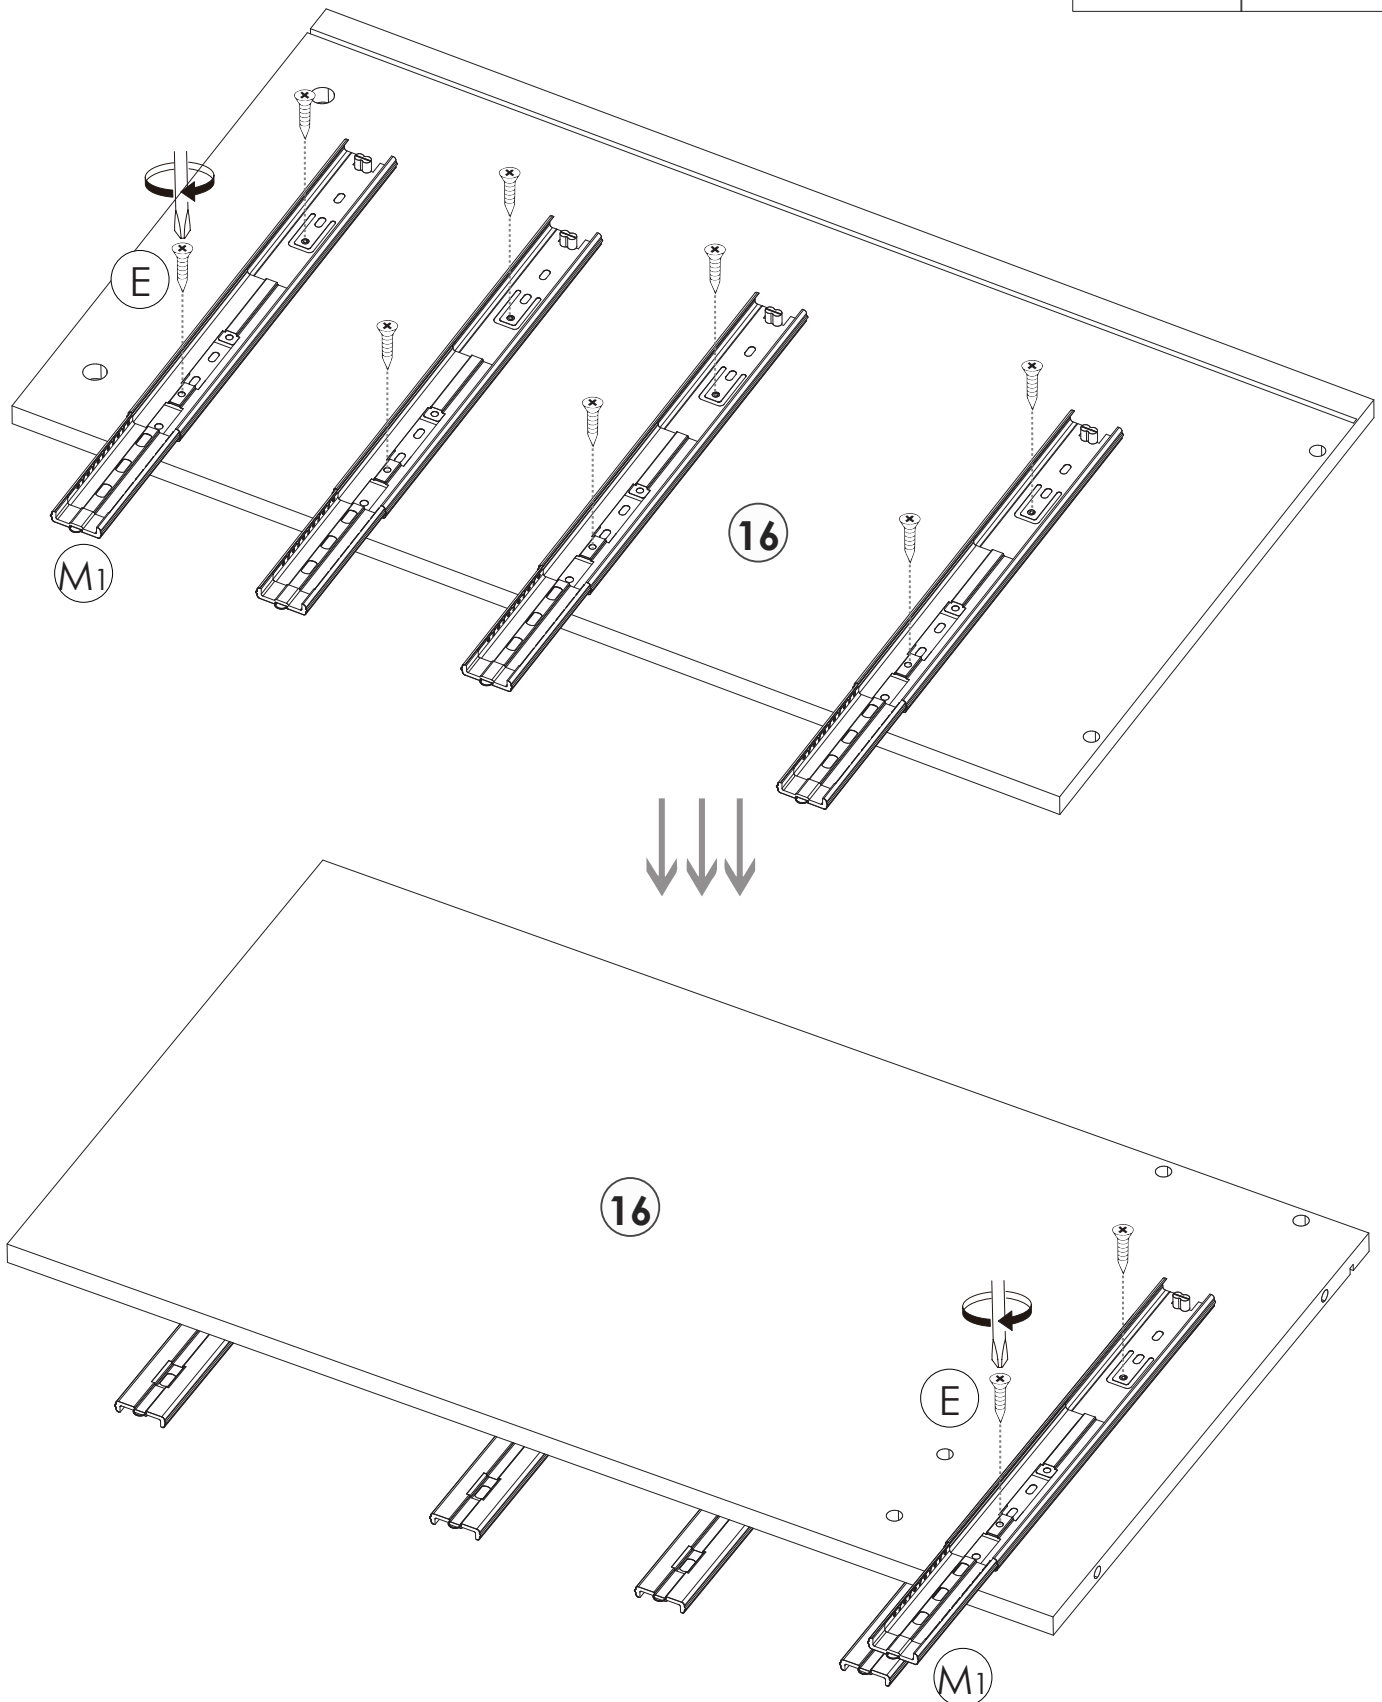




STEP 4

YOU WILL NEED

A x2

B x2

How to install the cam locks and dowels:

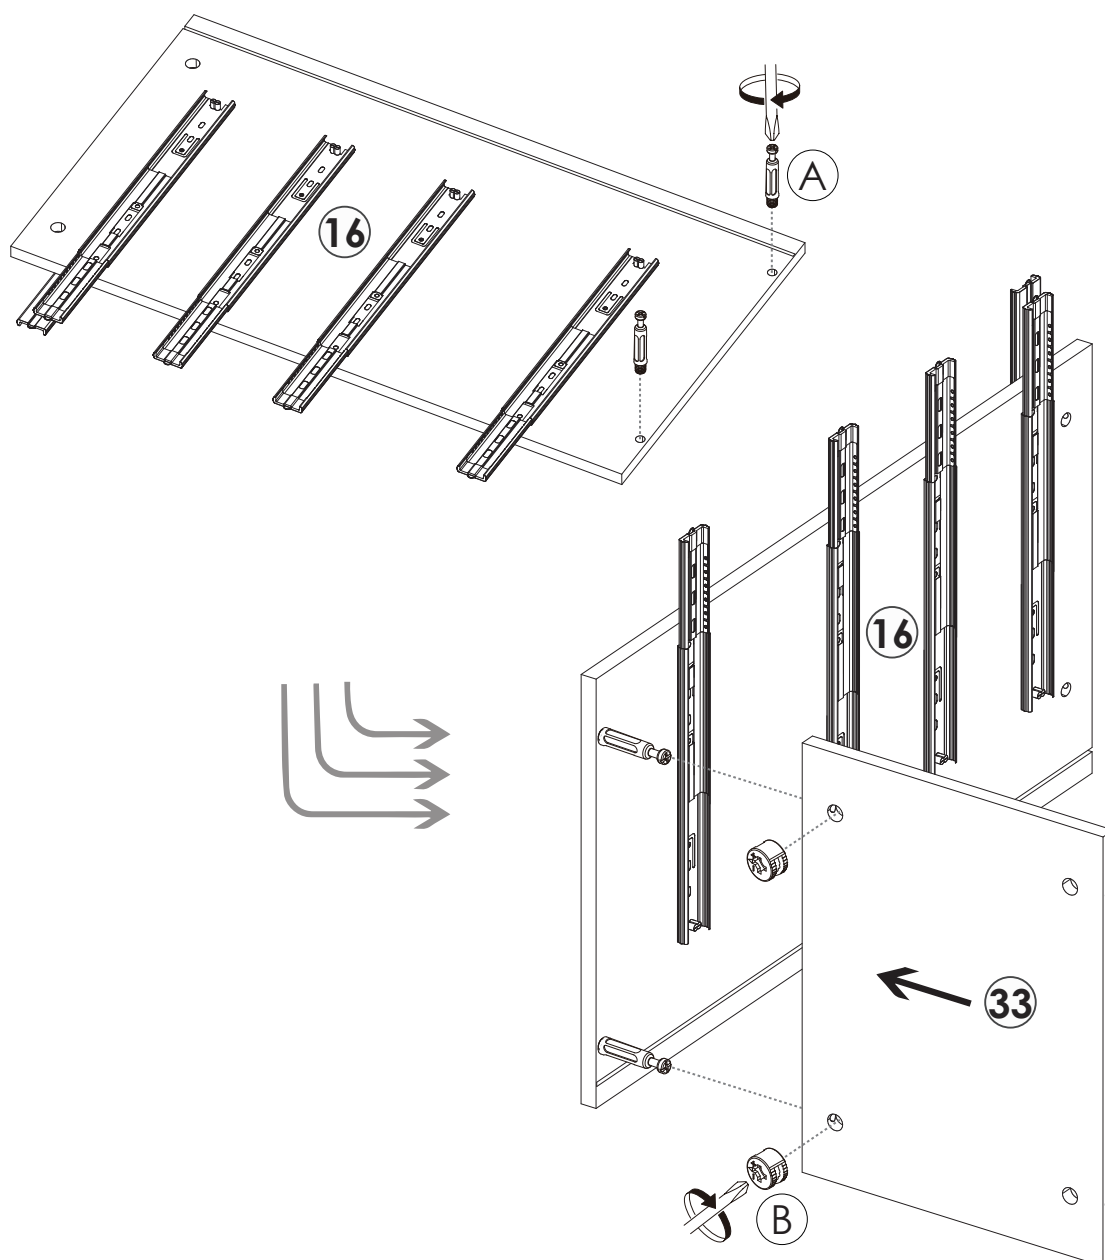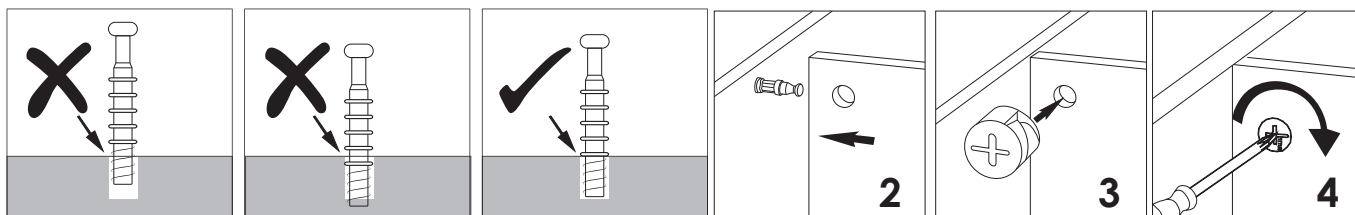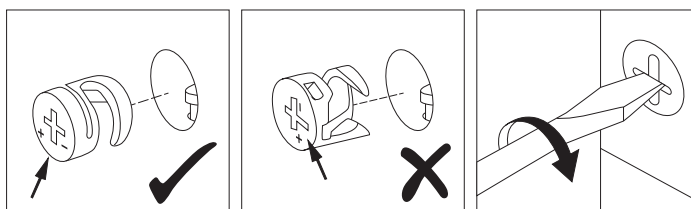



STEP 5

YOU WILL NEED

A x2

B x2

G x4

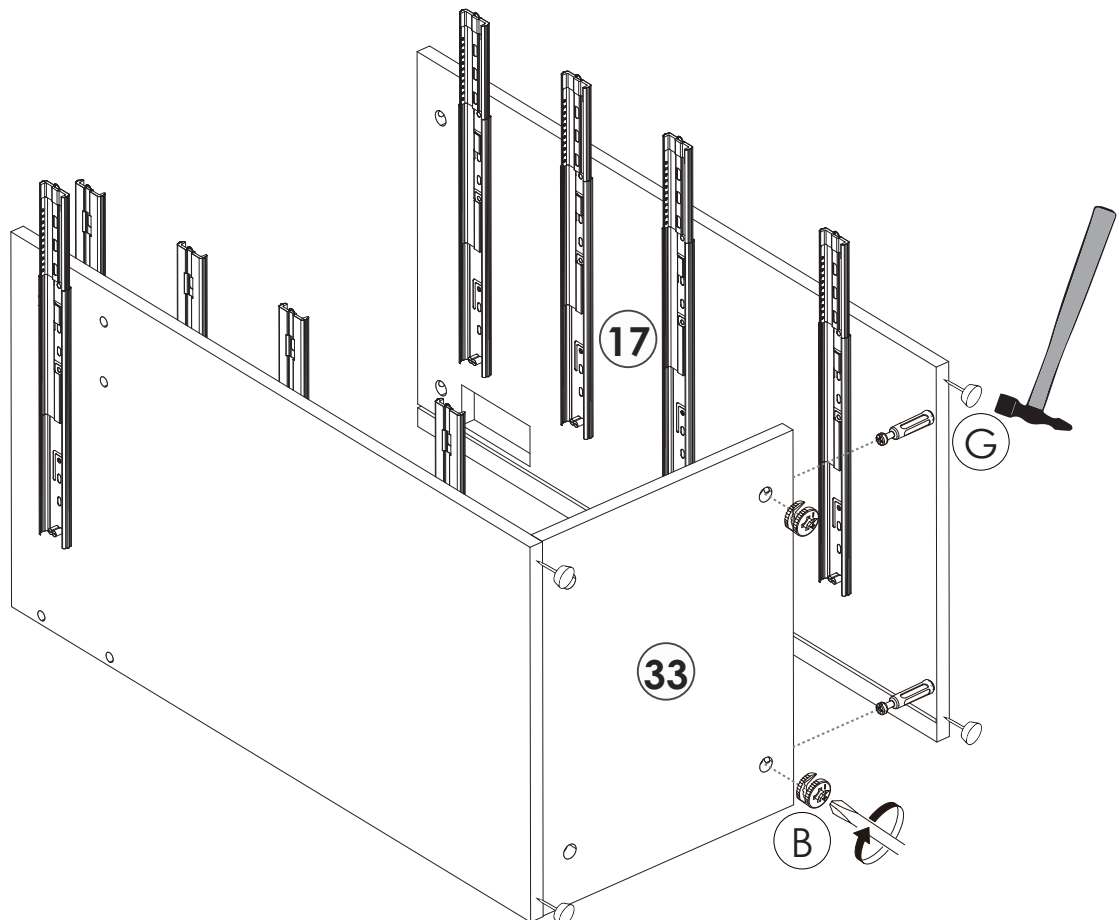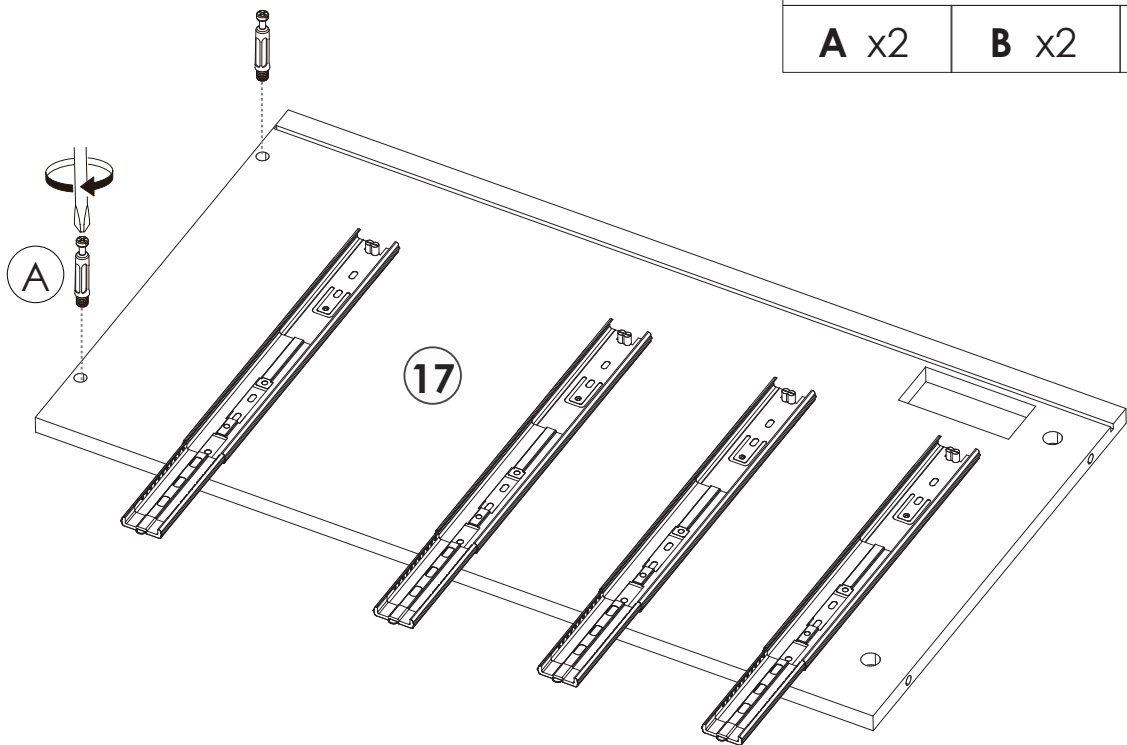


STEP 6

YOU WILL NEED

A x4

B x4

G x2

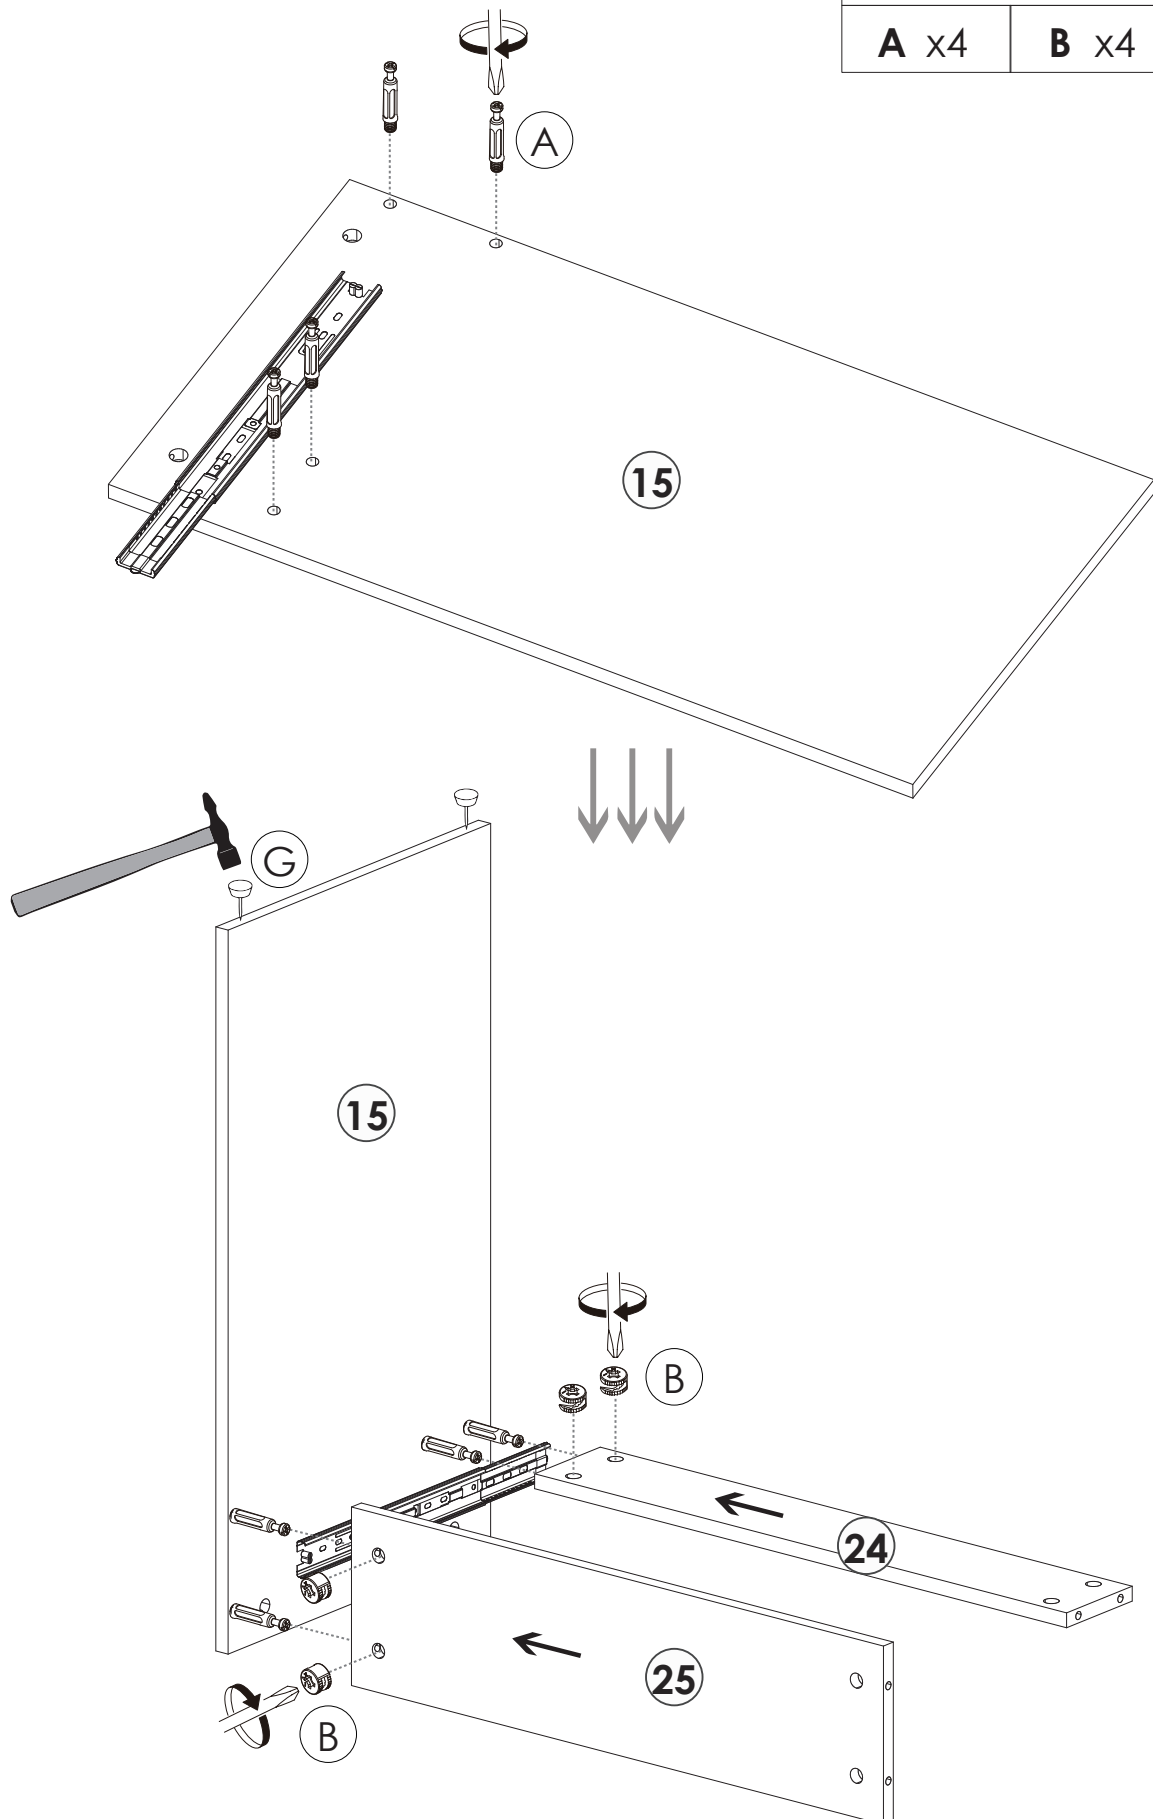



STEP 7

YOU WILL NEED

A x4

B x4

S x1

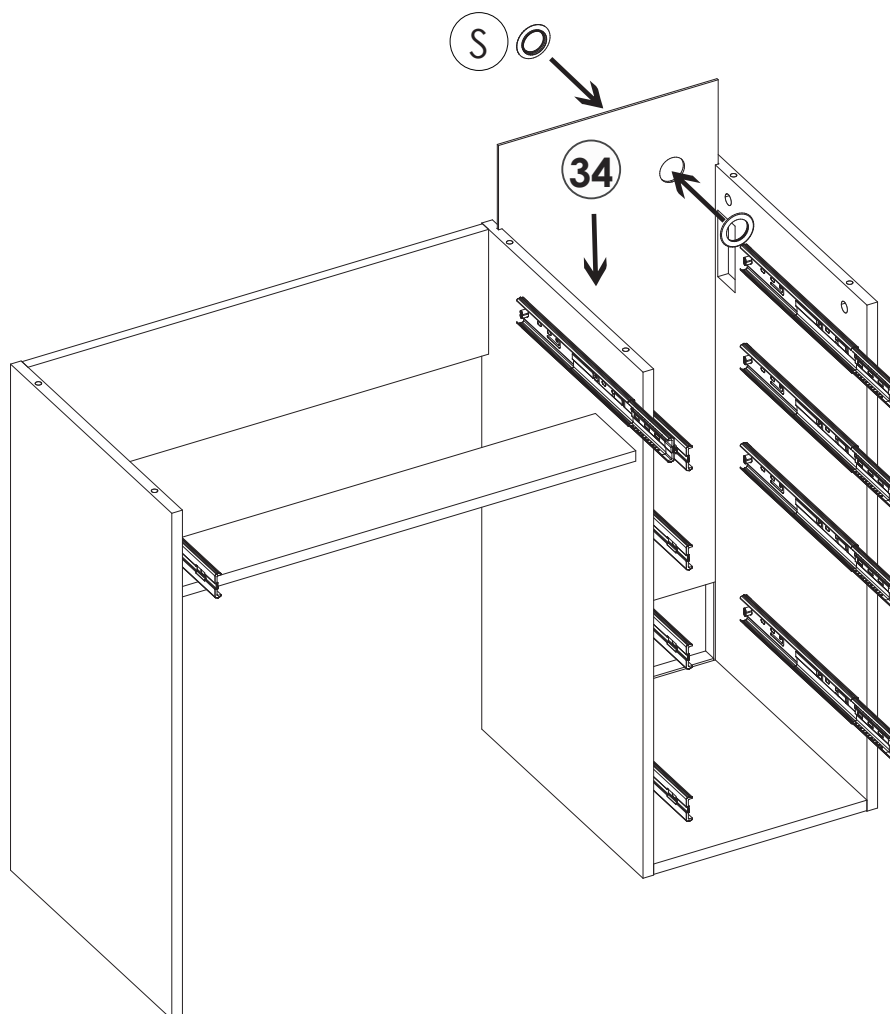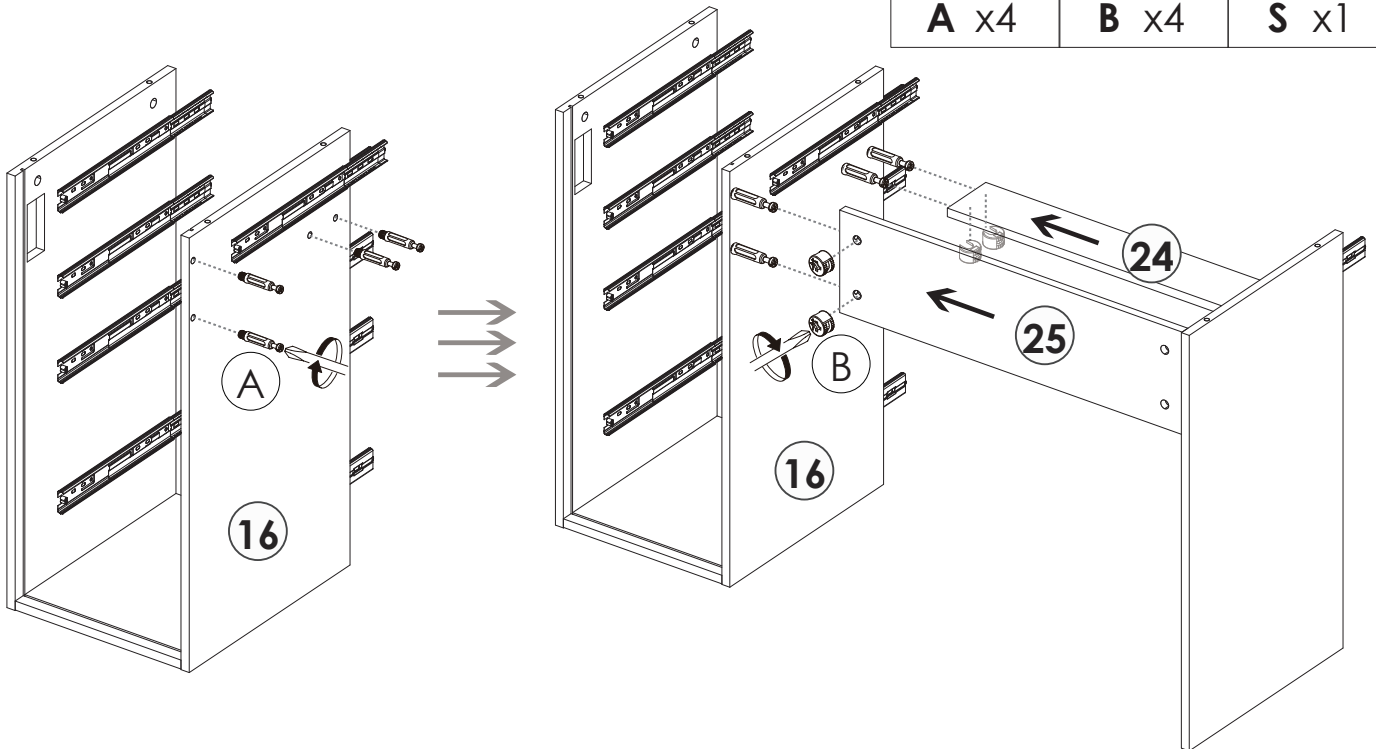


STEP 8


YOU WILL NEED

A x6

B x6

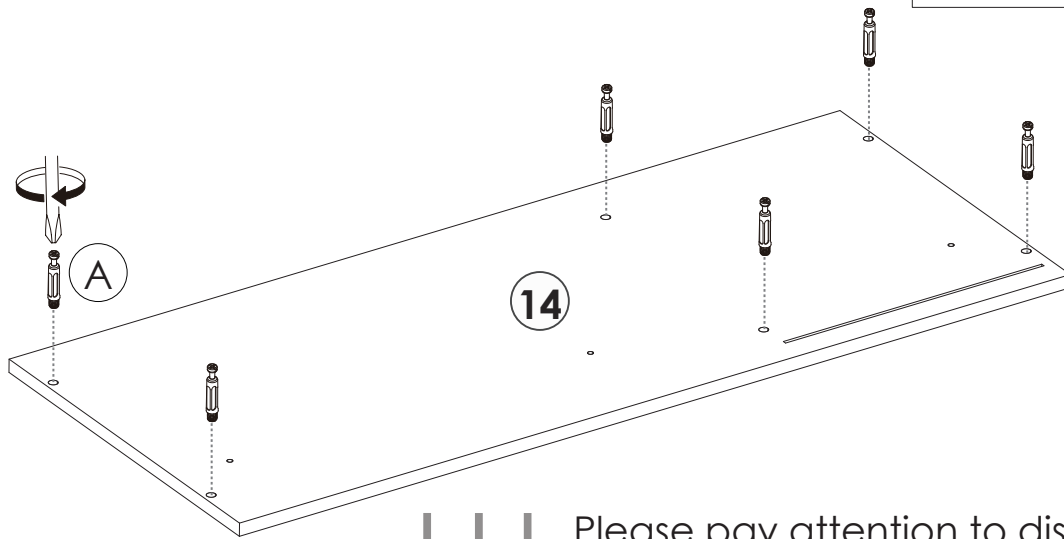

Please pay attention to distinguish the top and bottom of #14 board.

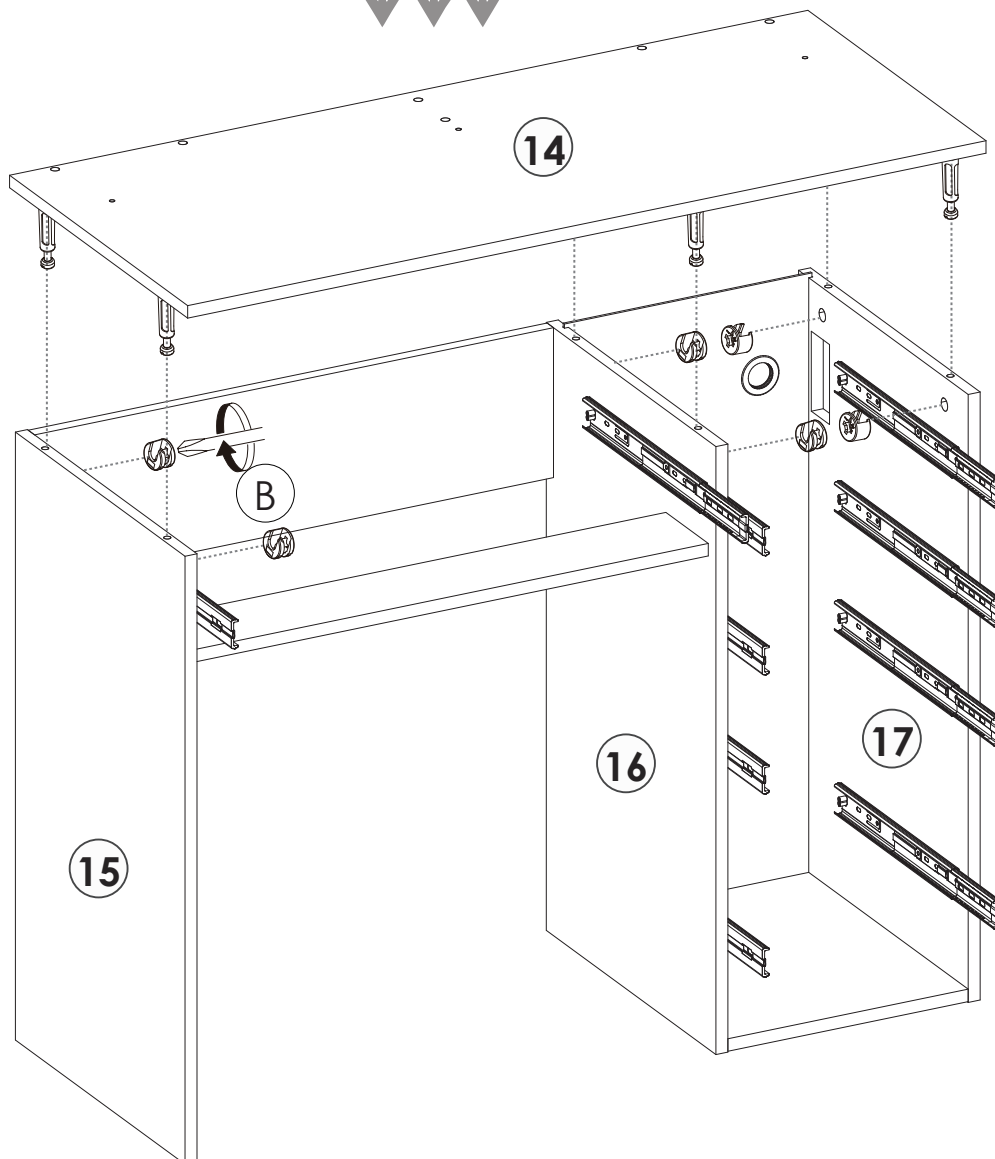

STEP 9




YOU WILL NEED

Q x4

E x2

V x4

R x1

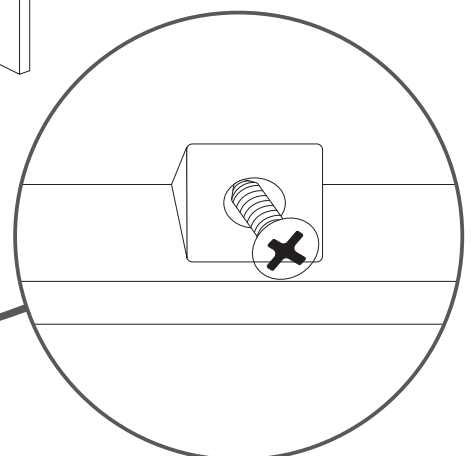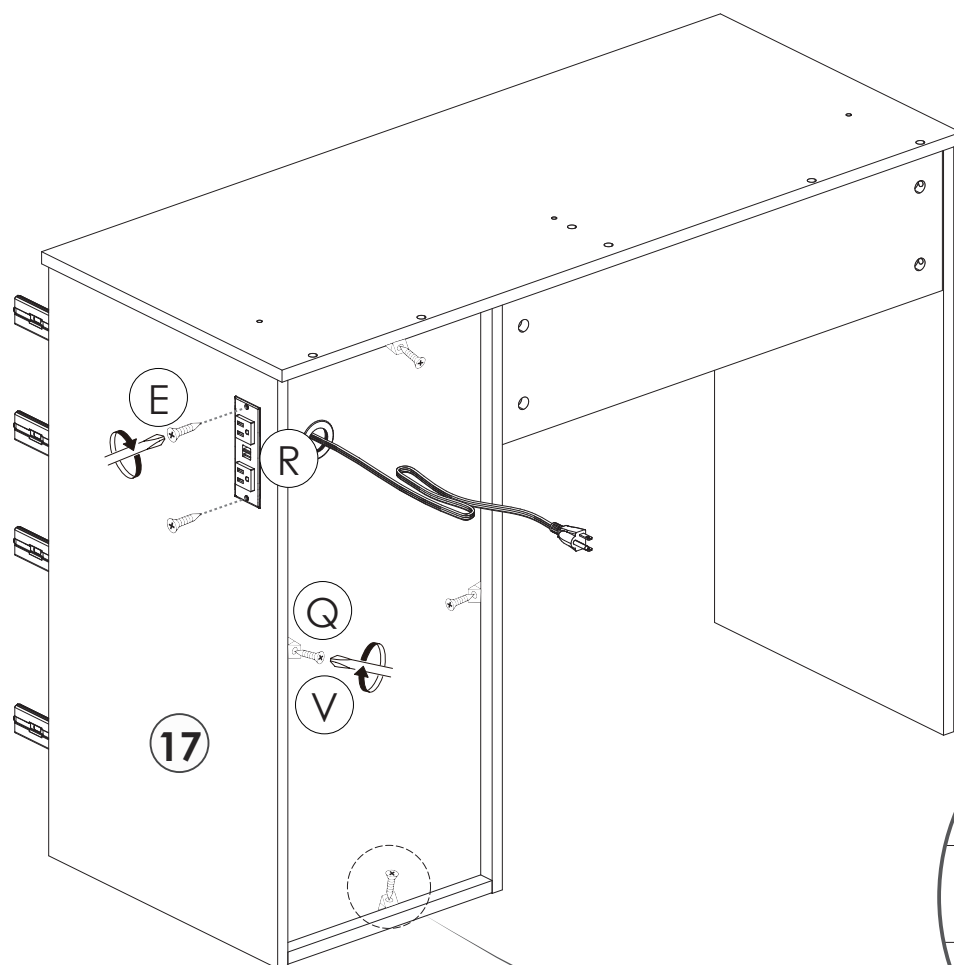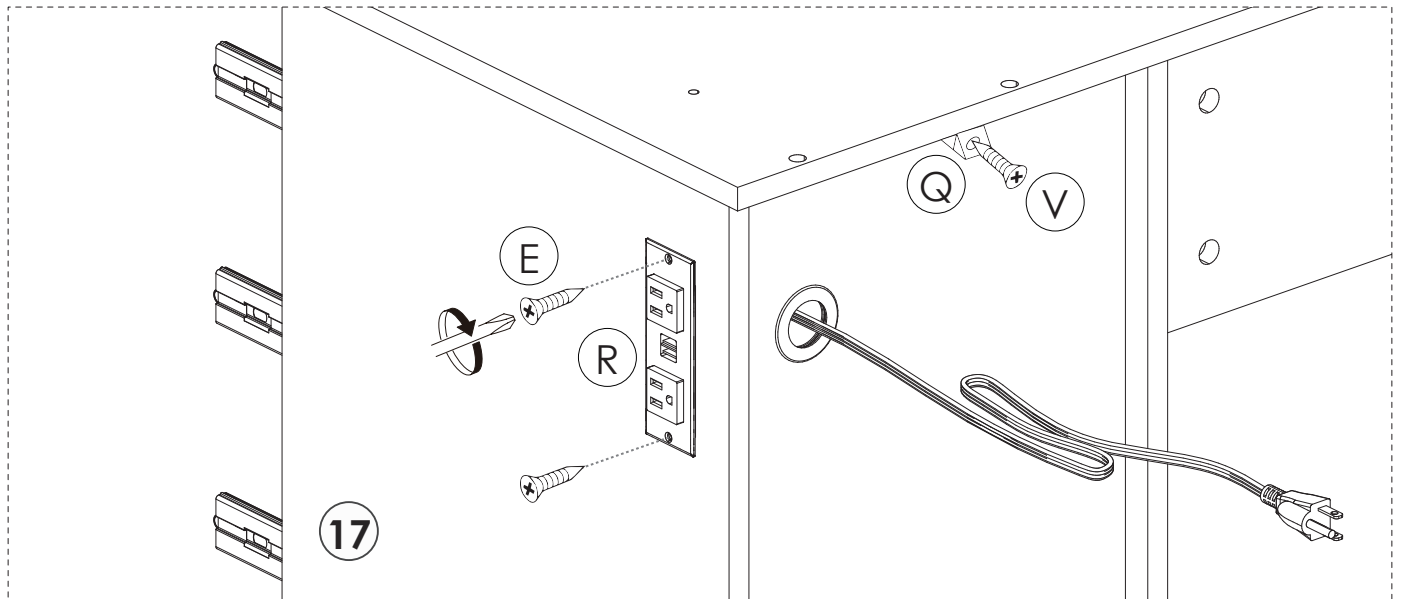


STEP 10

INSTALLATION STEPS

Press the plastic part in the indicated direction to separate drawer runner **C1** and **C2** before assembling.



REMARK: Please grip the **C1** part while sliding the **C2** part.

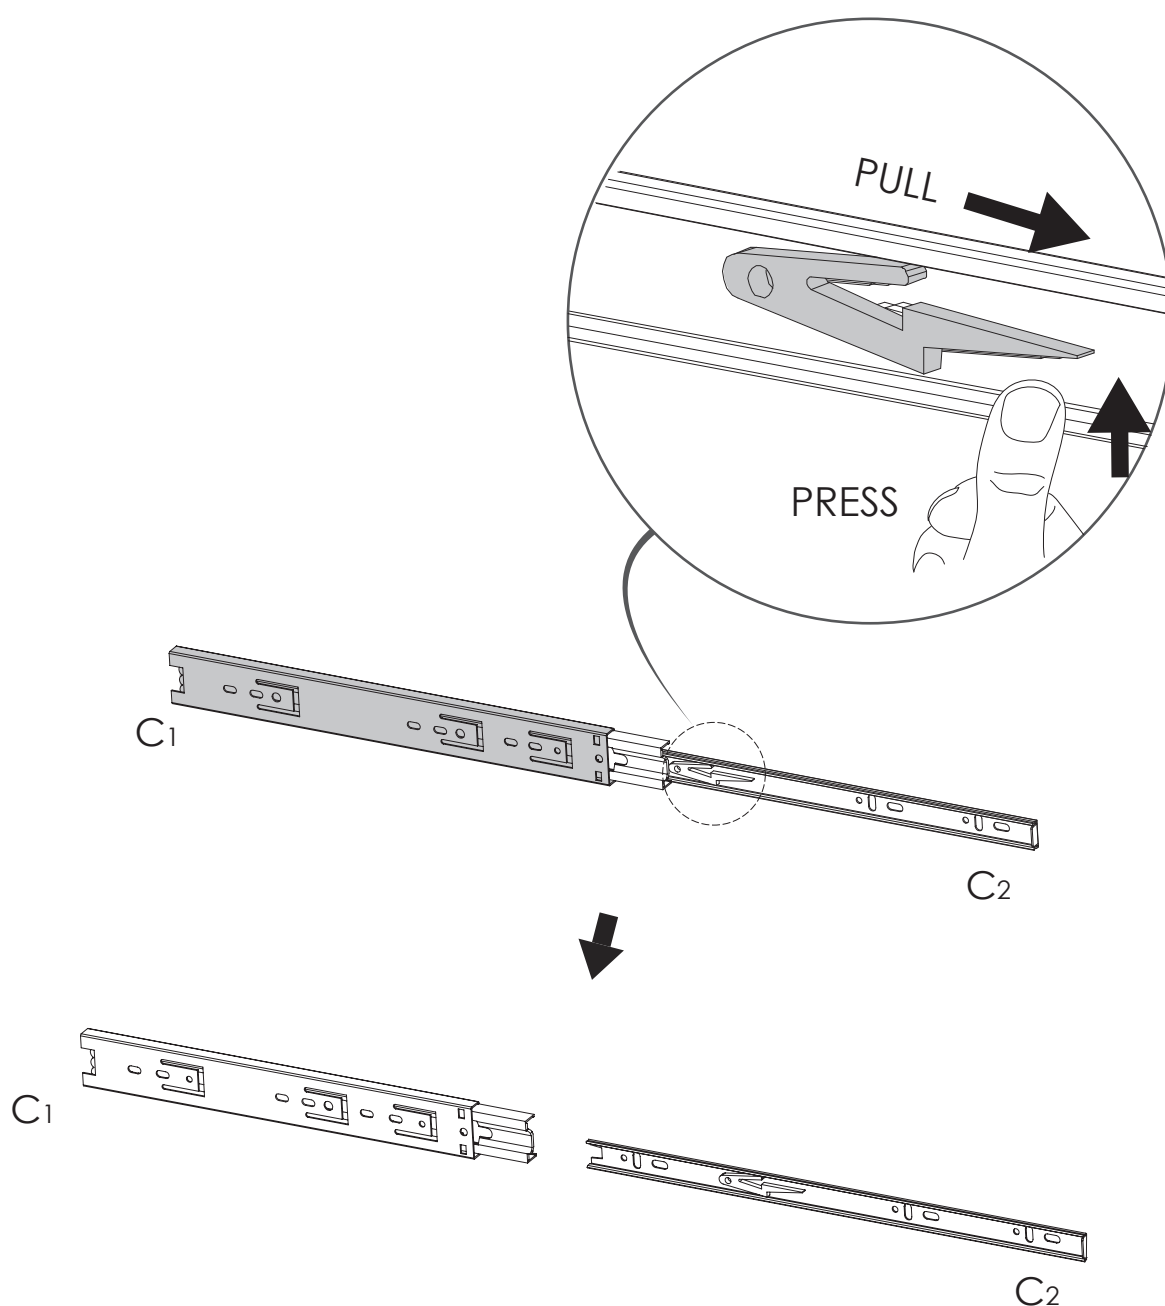

STEP 11


REMARK:

1. Please locate the holes from the back of part **C1**.

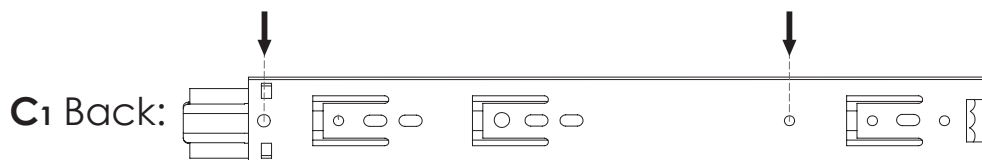

2. Then install part **E** from the front of part **C1**.

3. Please install the slide correctly as shown in the figure.

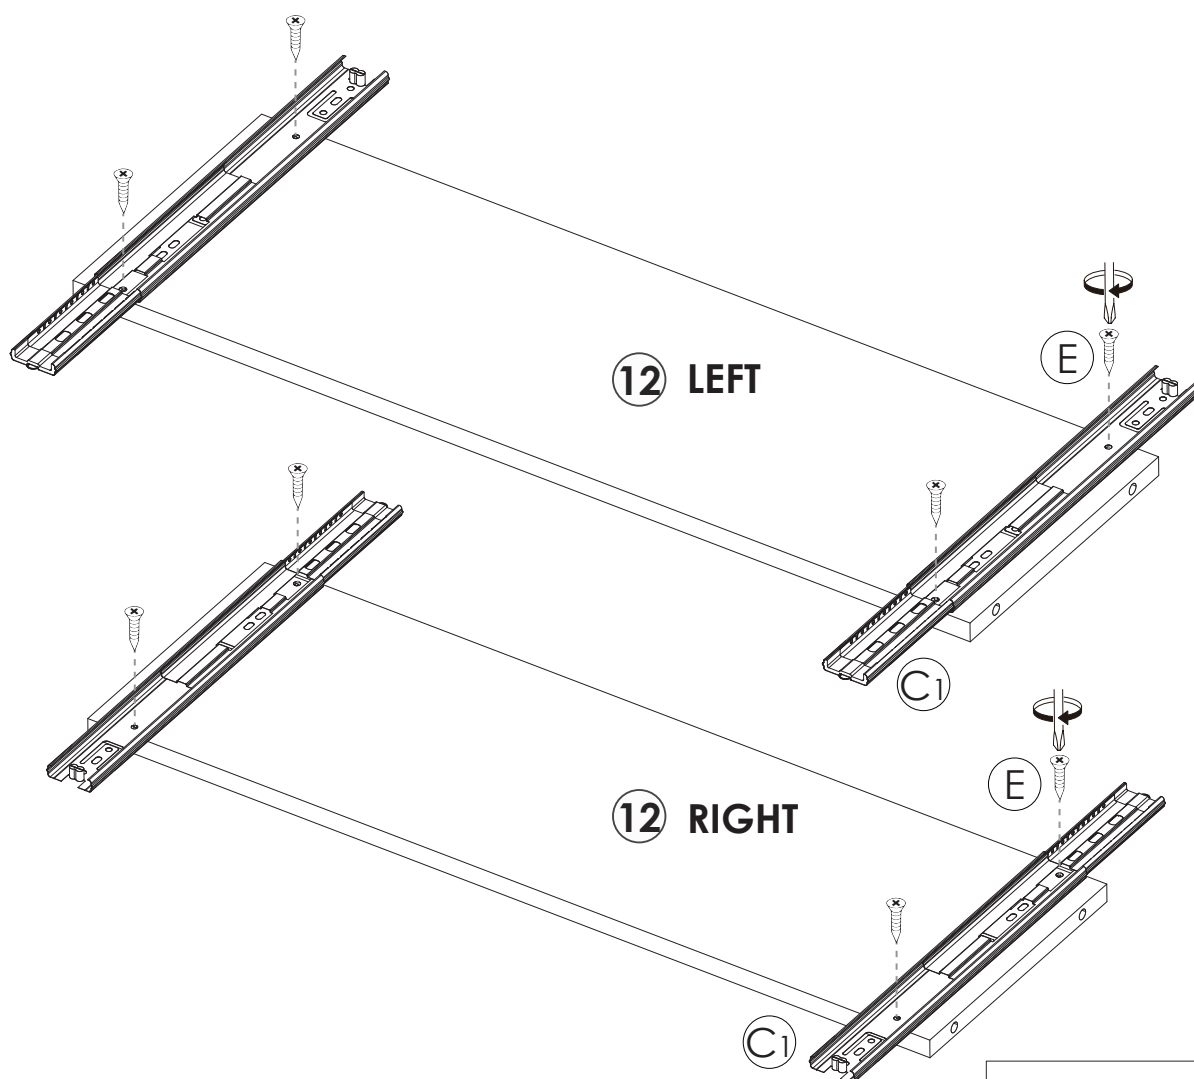

YOU WILL NEED

C1 x4


E x8

STEP 12

YOU WILL NEED

A x6

B x6

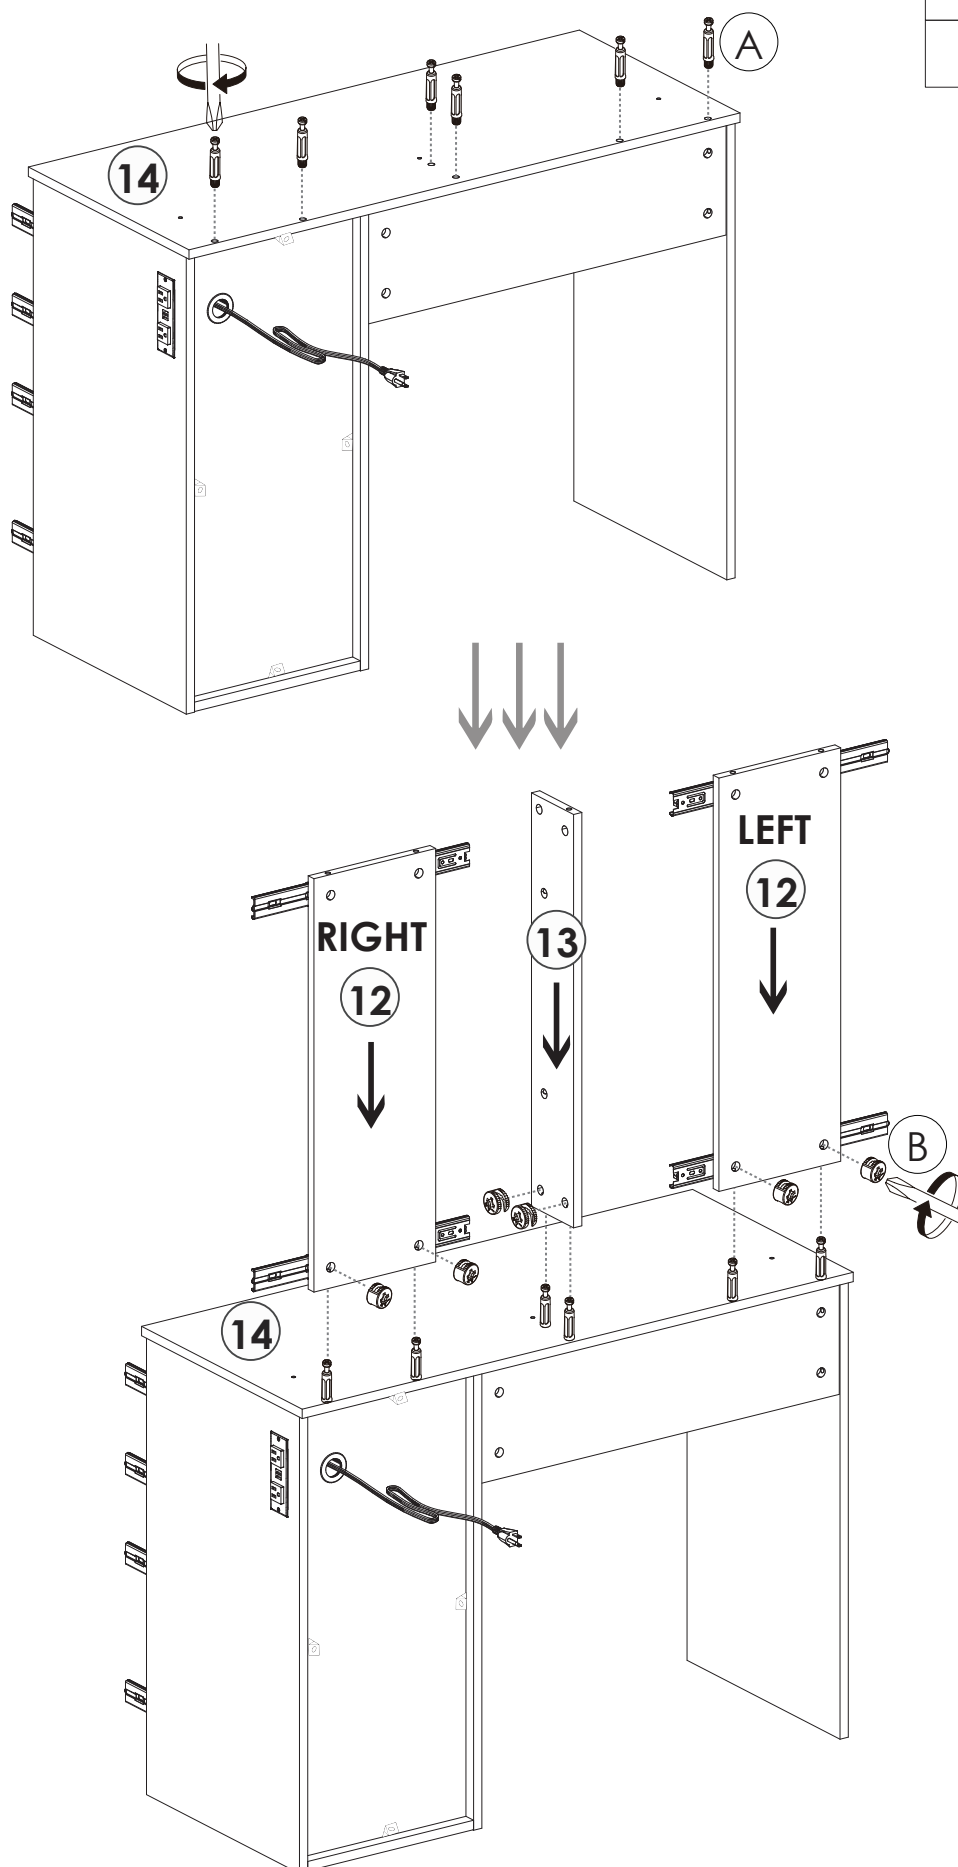


STEP 13


YOU WILL NEED

A x5

B x5

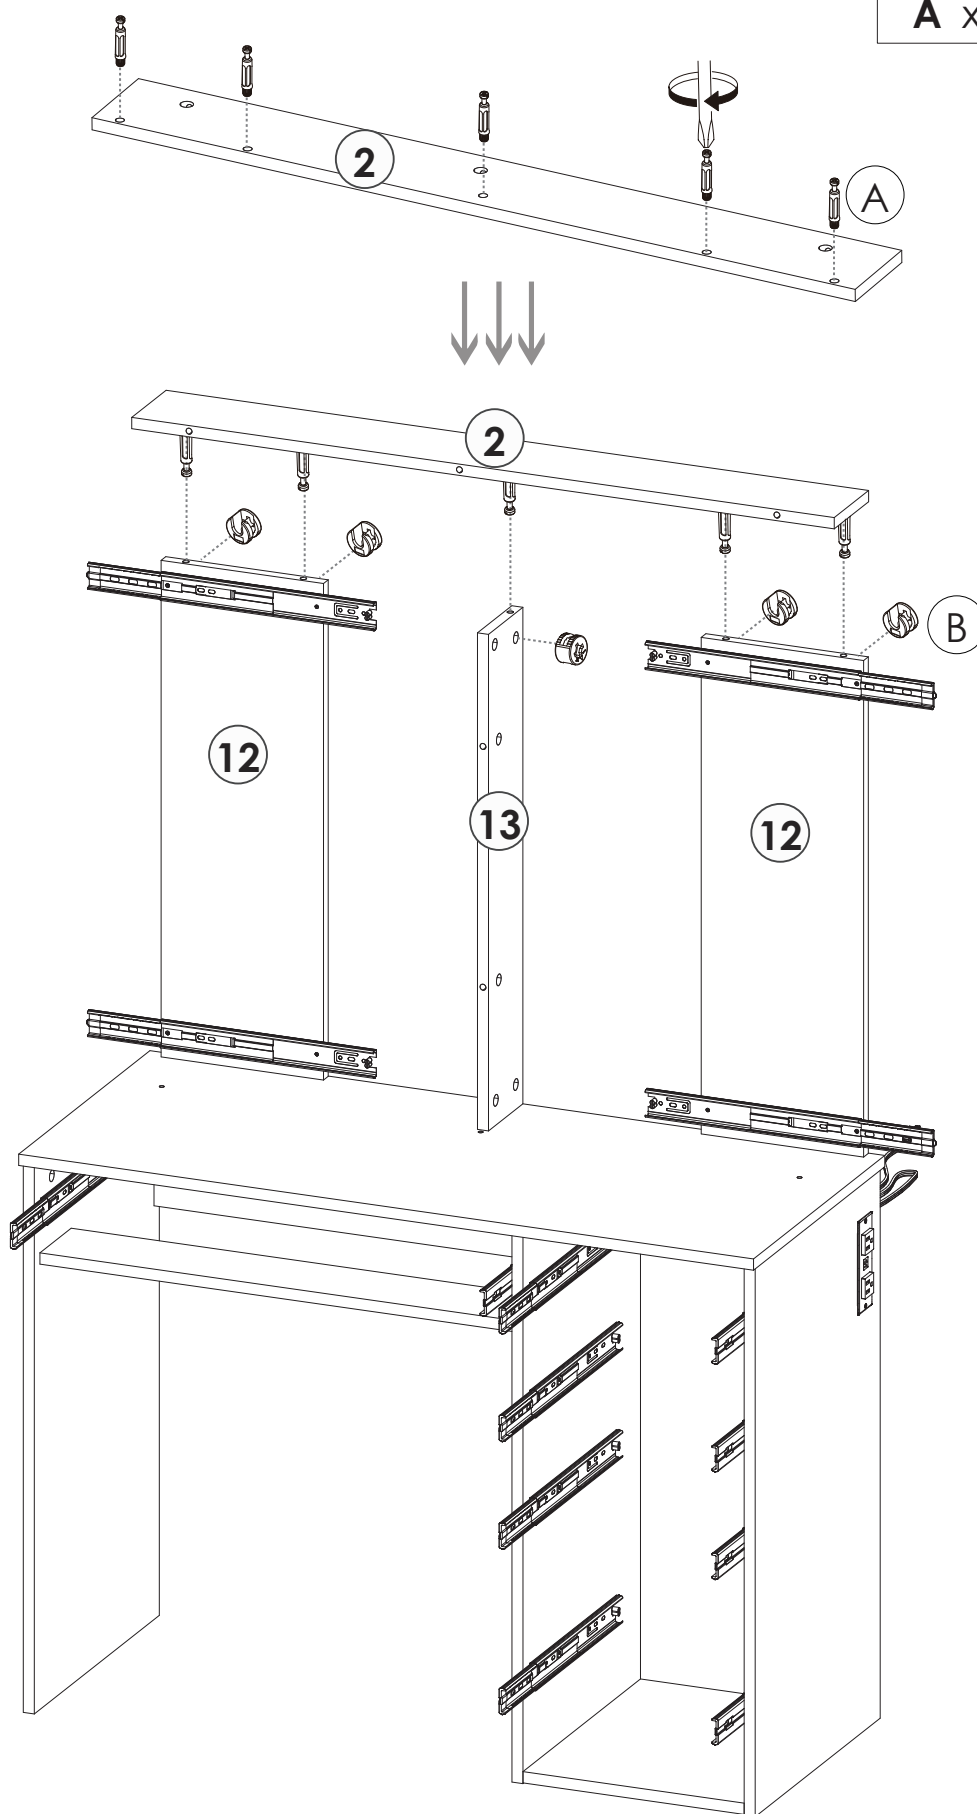


STEP14

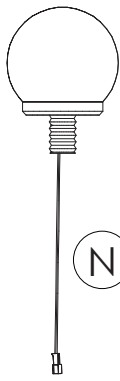

x1 PC

N1

Install the last bulb

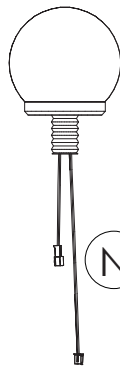

x13 PC


N2

Install the middle bulbs (13 pcs)

YOU WILL NEED


N x1

N1

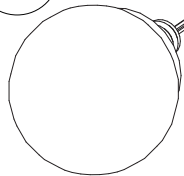

1

1

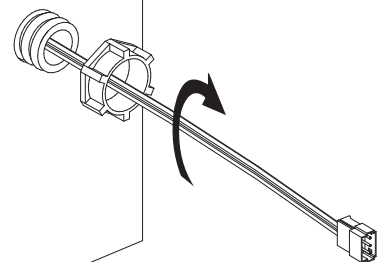



It is recommended that two people install it at the same time, one person install the bulb, and the other secure the plate.

N1




1

STEP15

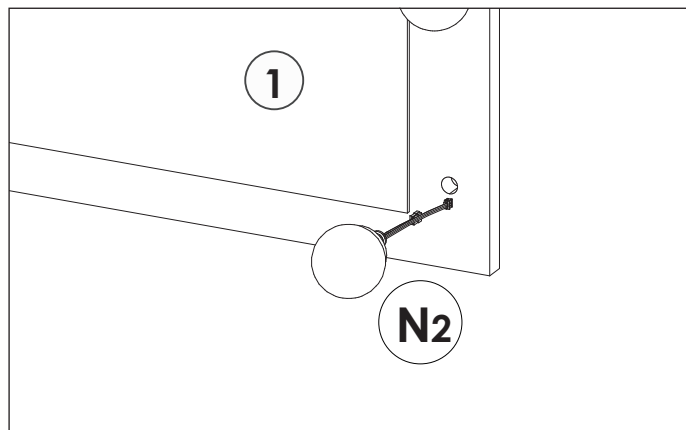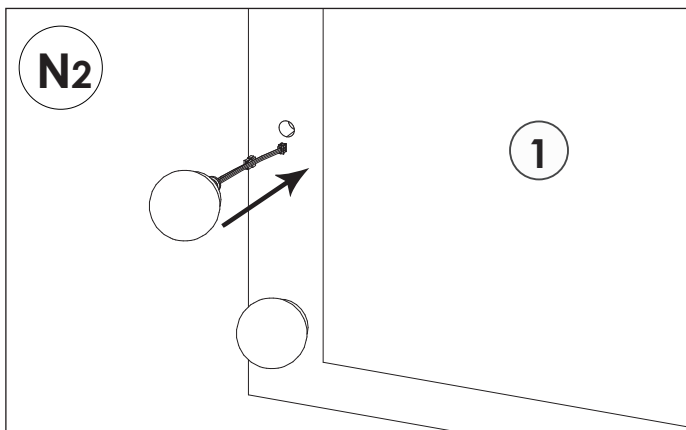

↖ x13 PC

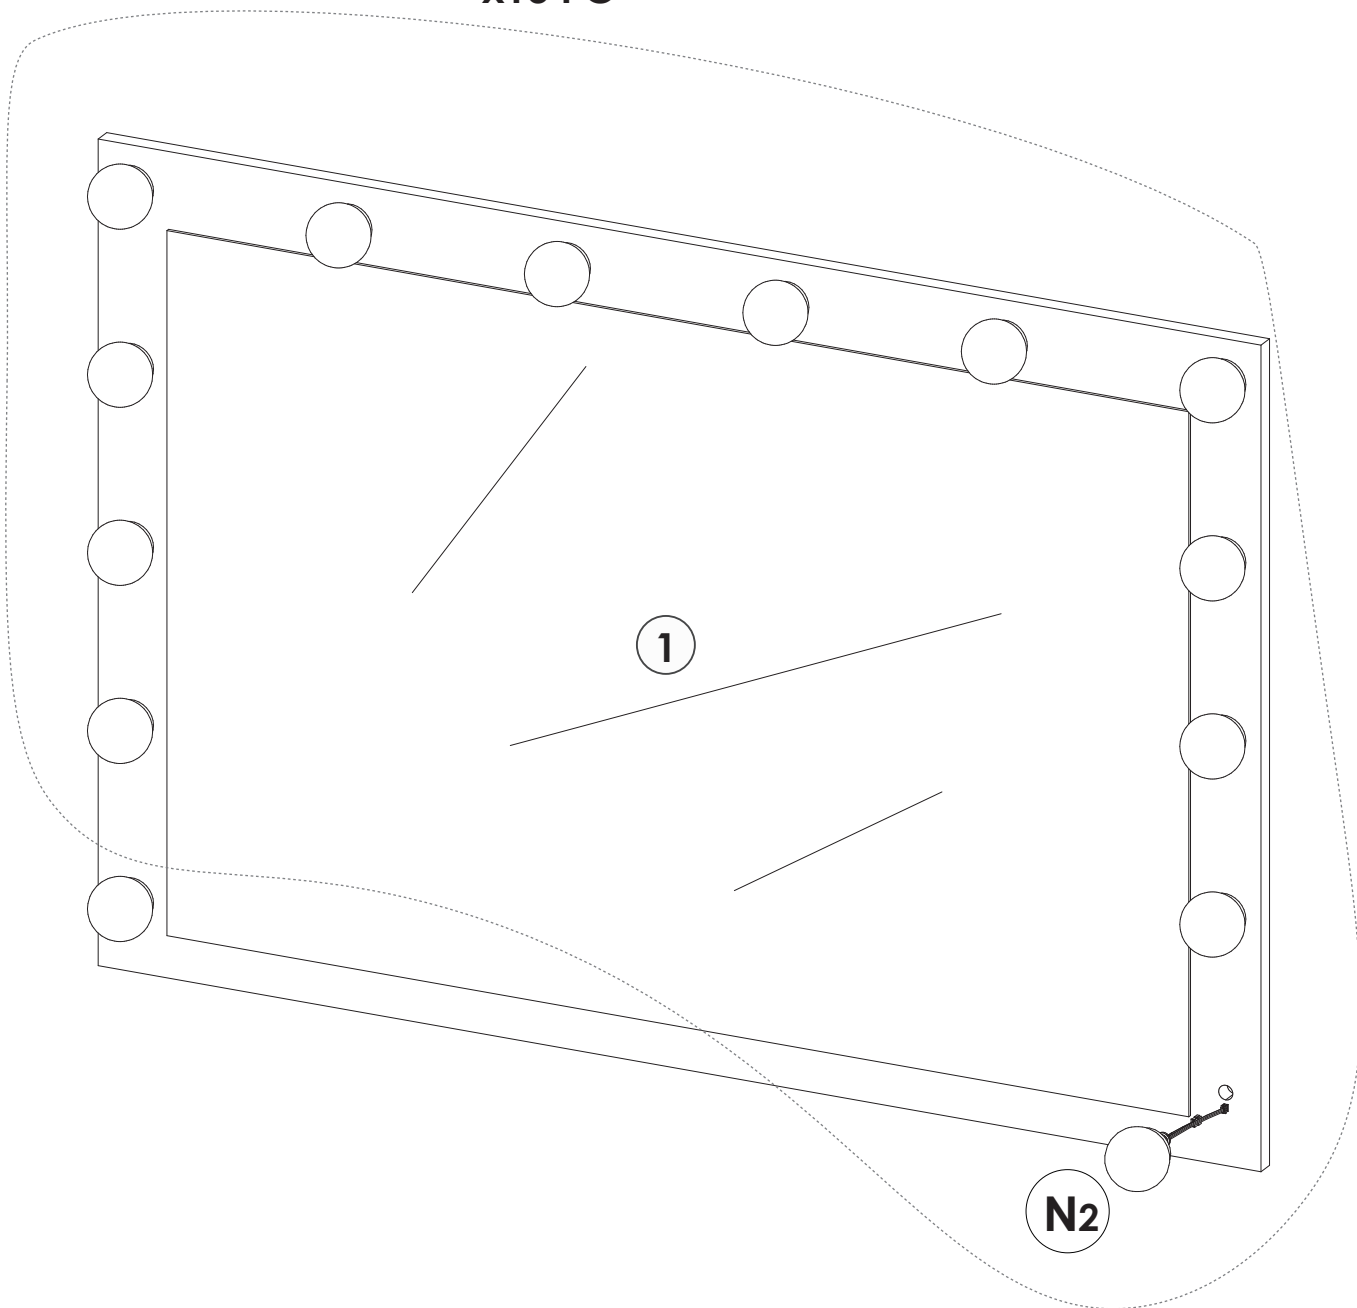



STEP 16

YOU WILL NEED


E x14

T x14

A x5

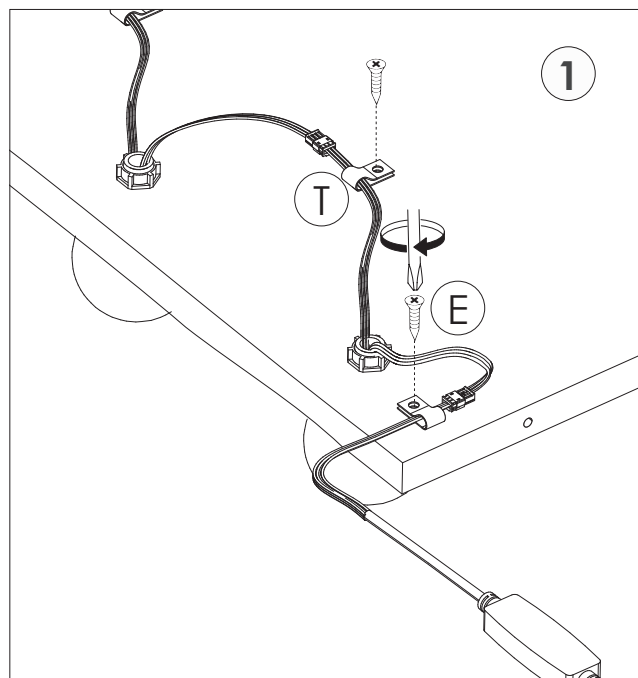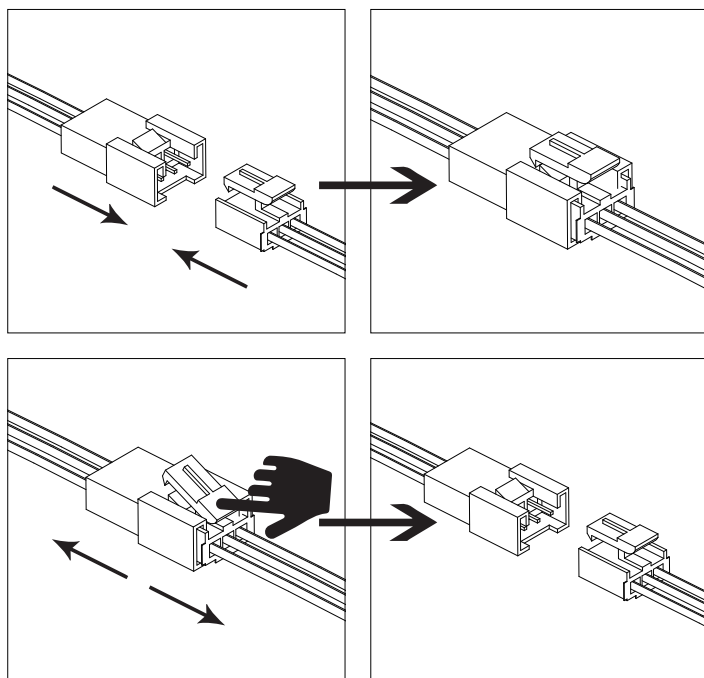

Note: Be careful not to bump or scratch the mirror when installing the bulb.



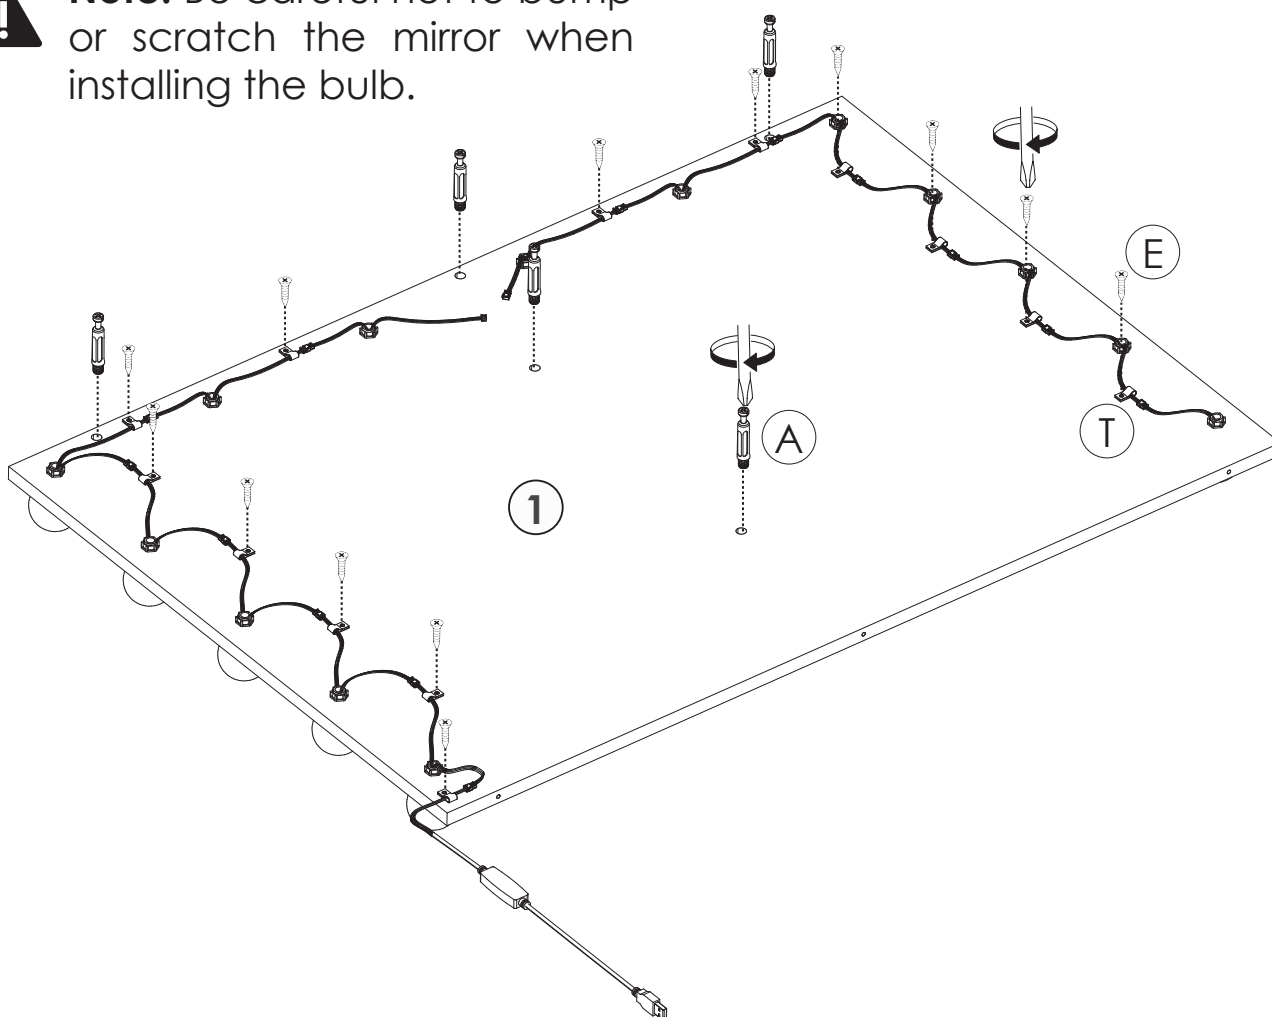


STEP17

YOU WILL NEED

F x3

B x5

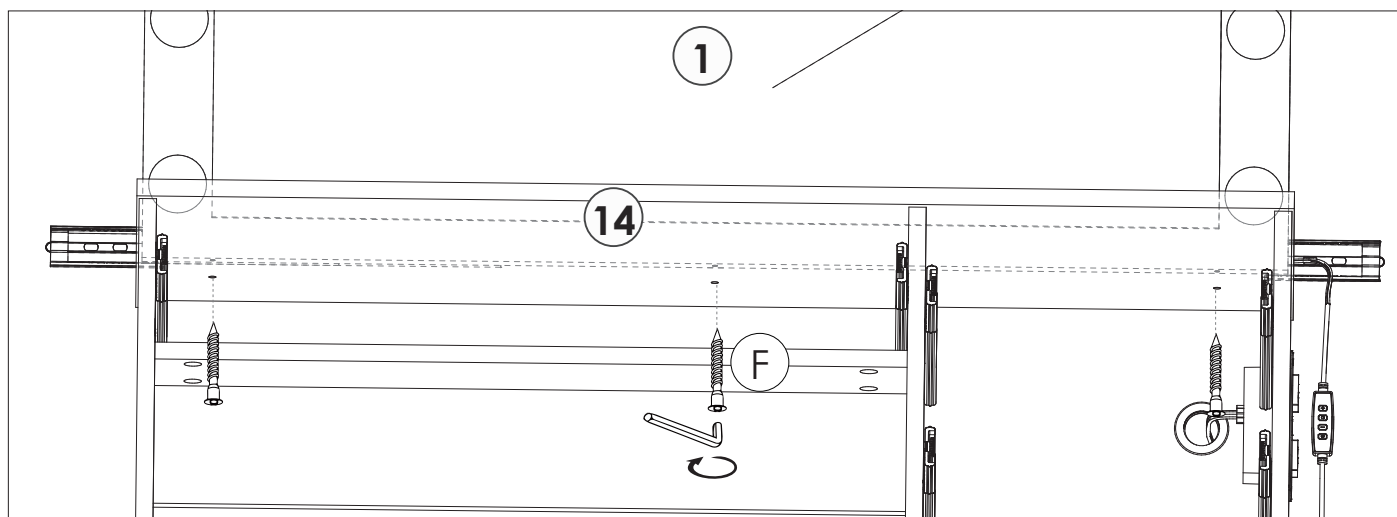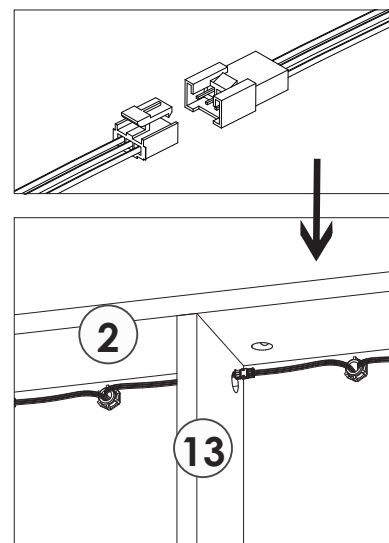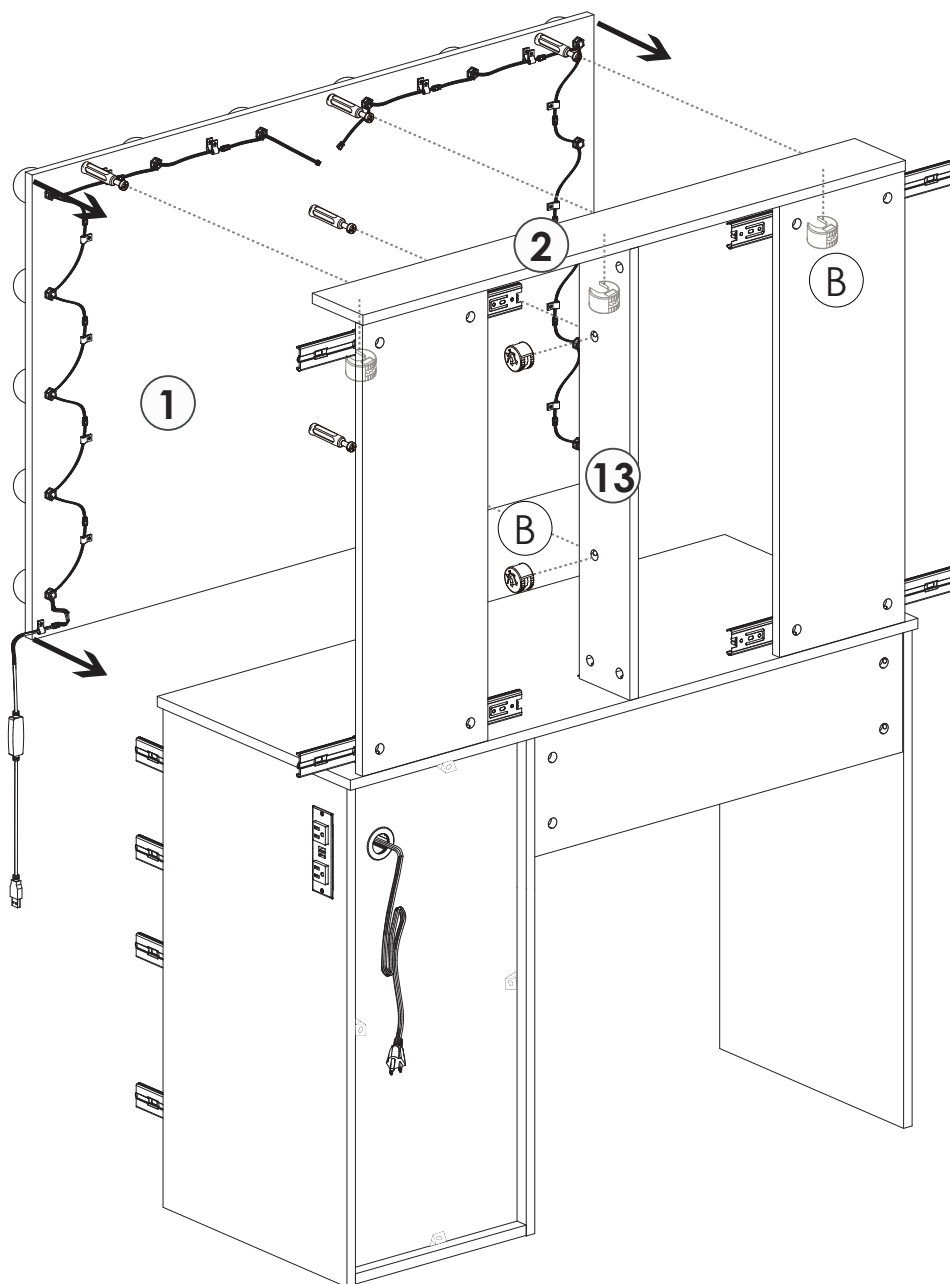

STEP18



YOU WILL NEED

J x4



D x4

F x4


1

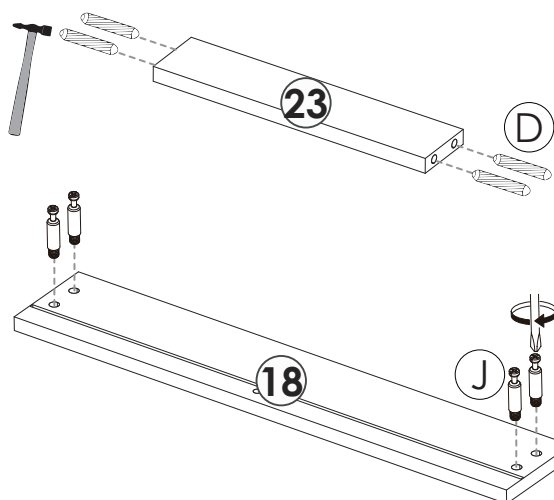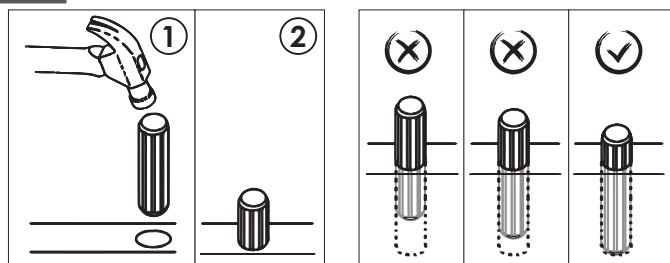


2

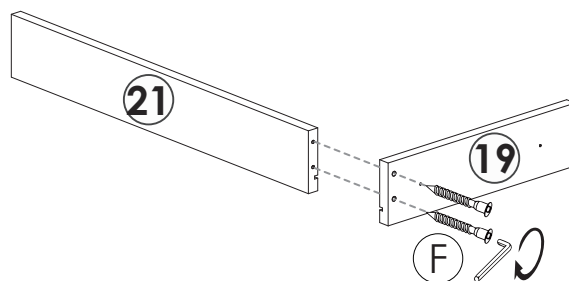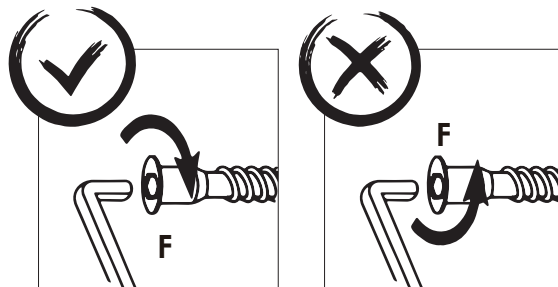

3

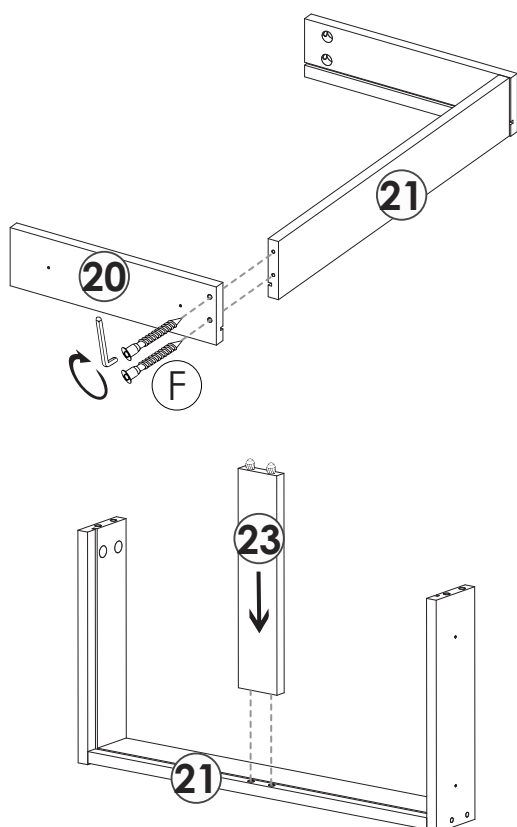

4

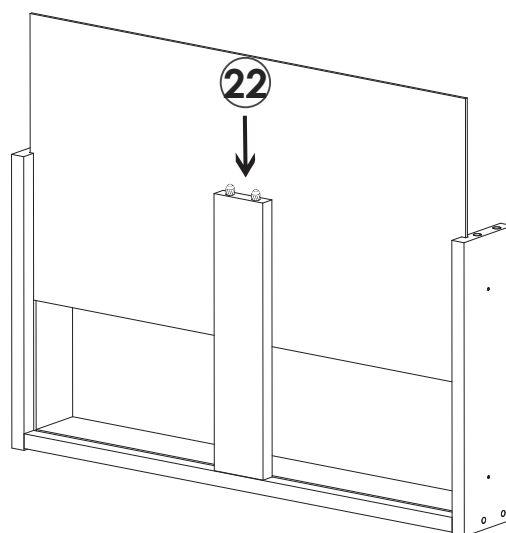

STEP 19




YOU WILL NEED

K x4

U x4

H x1

M2 x2

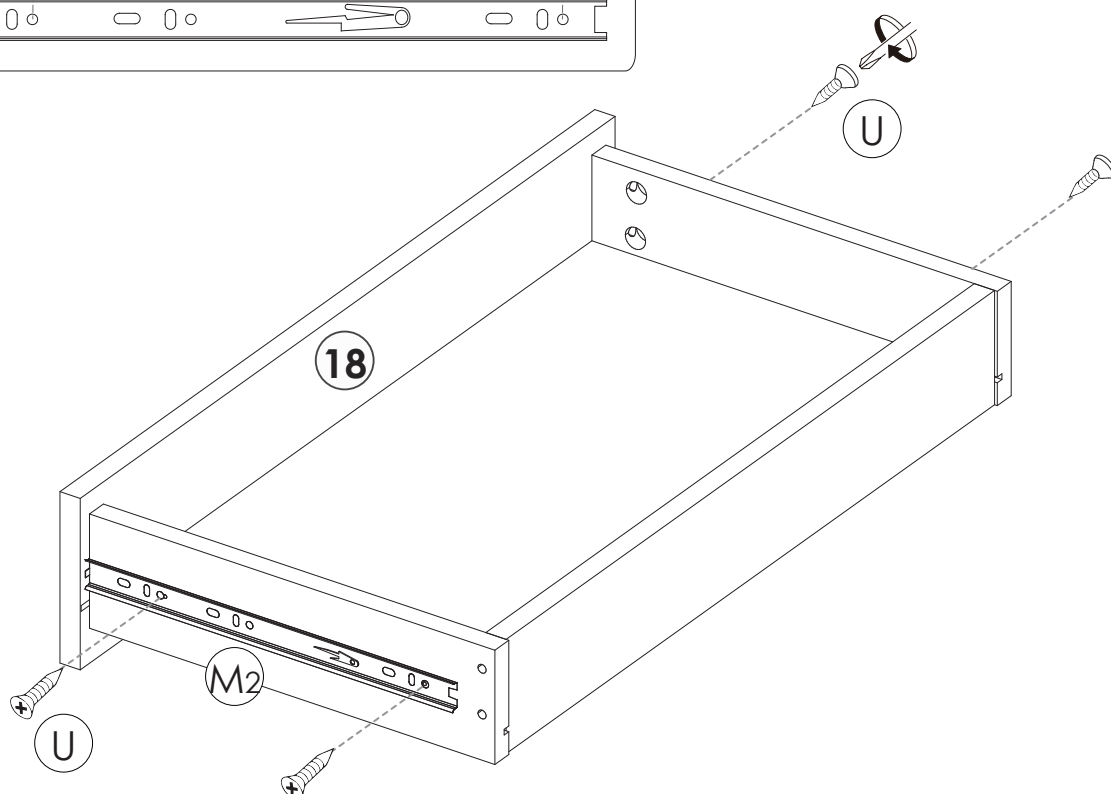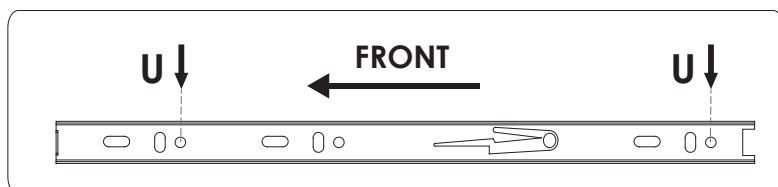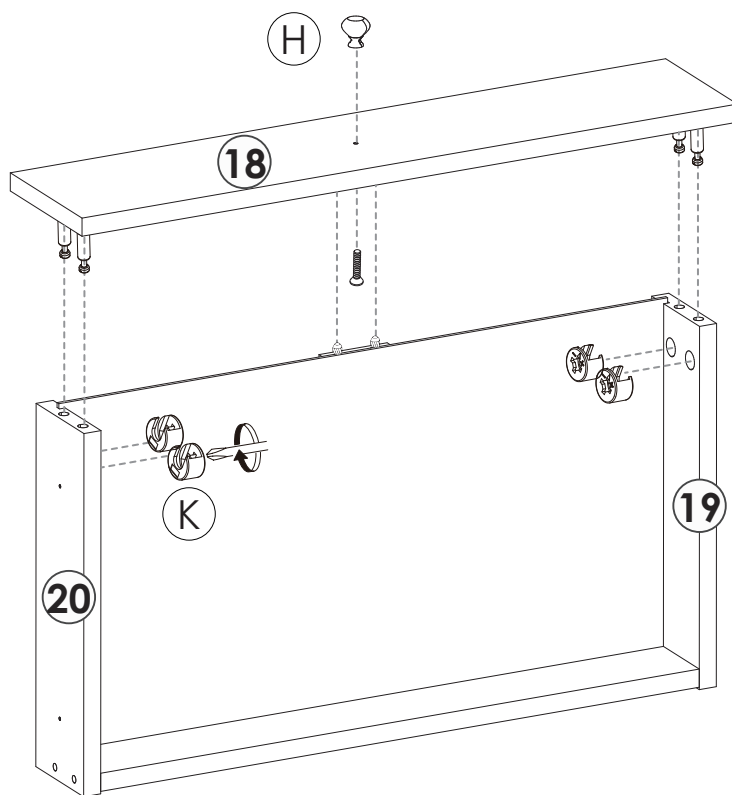


STEP20

YOU WILL NEED


J x12

F x12

1

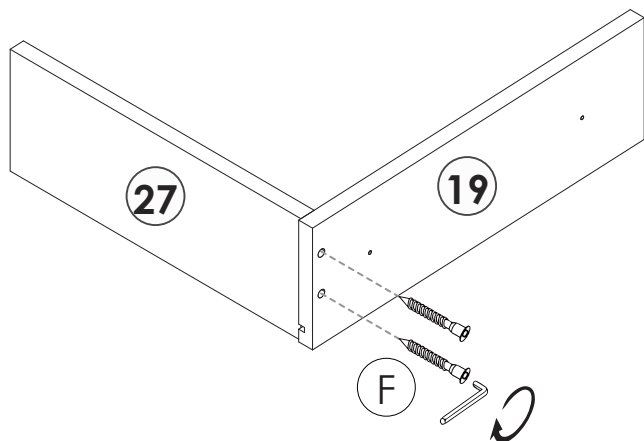


2

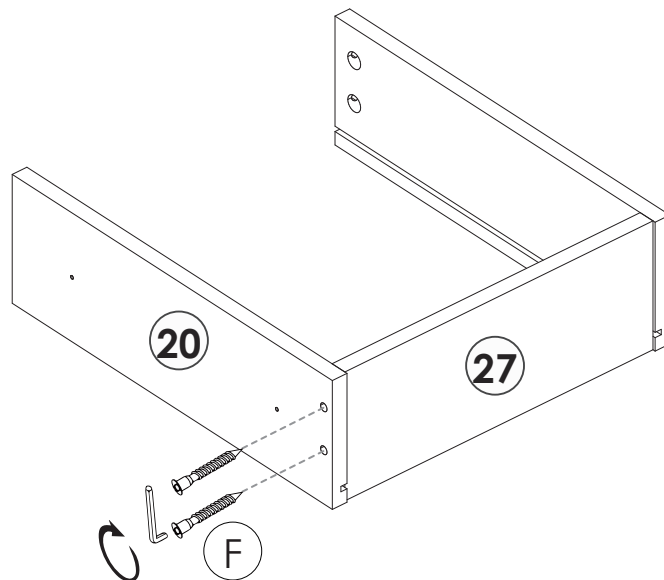


x3

3

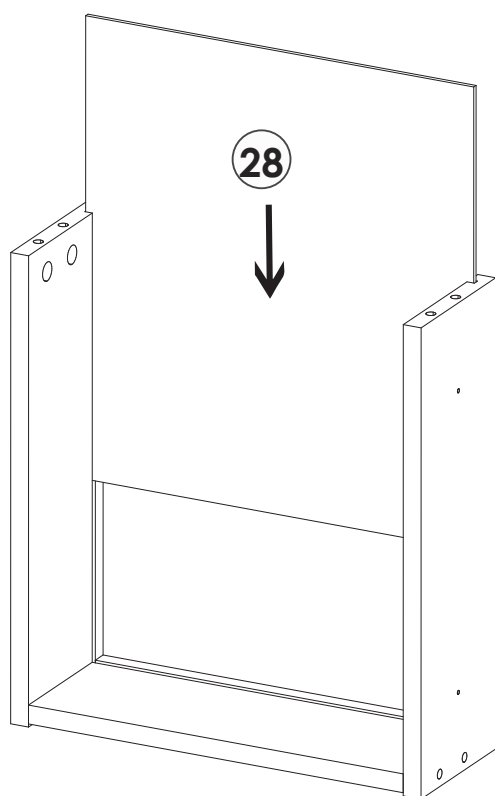

4

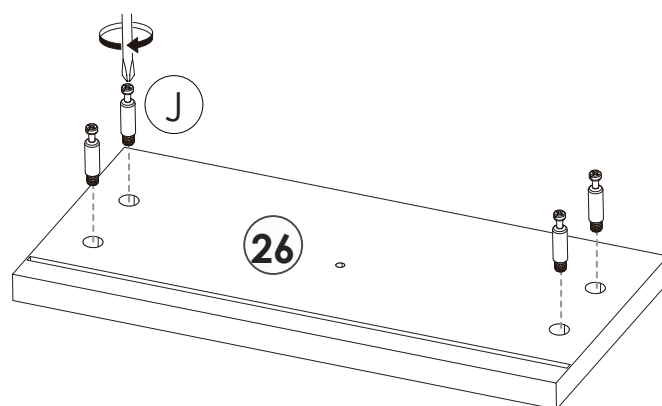

STEP21


YOU WILL NEED

K x12



H x3

U x12

M2 x6

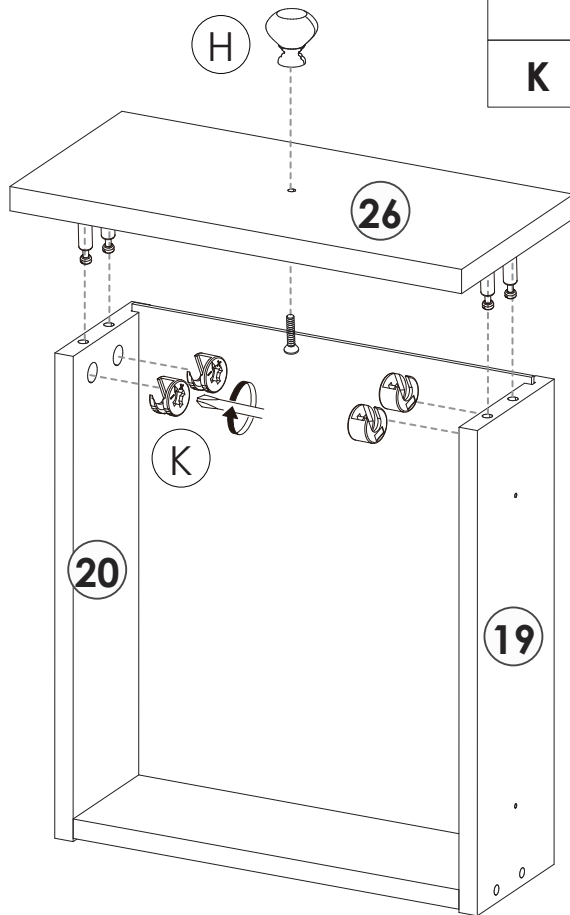

x3

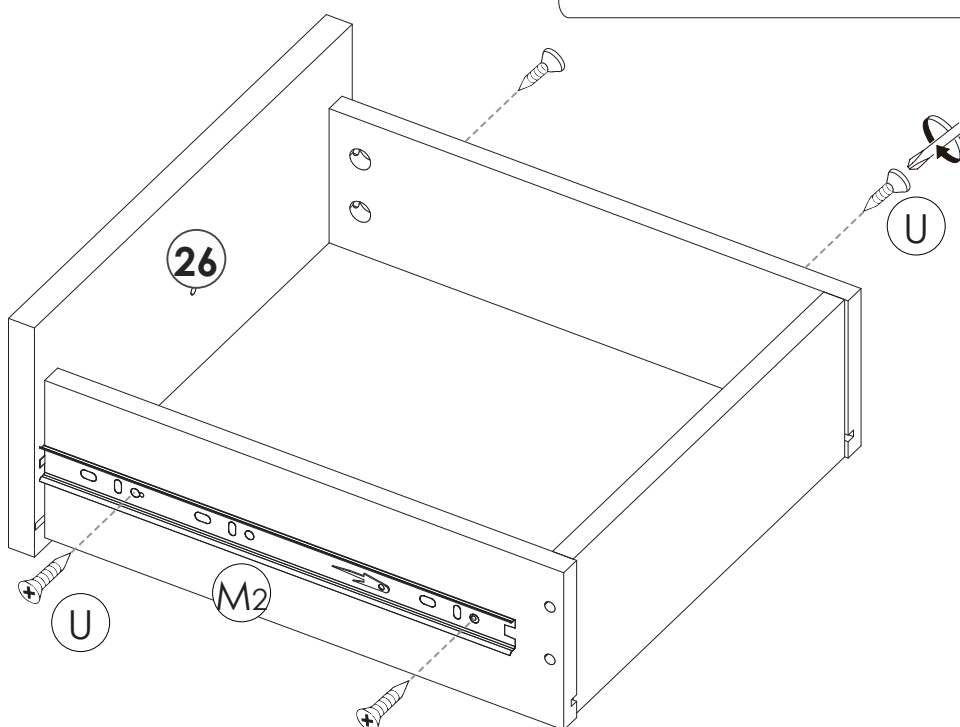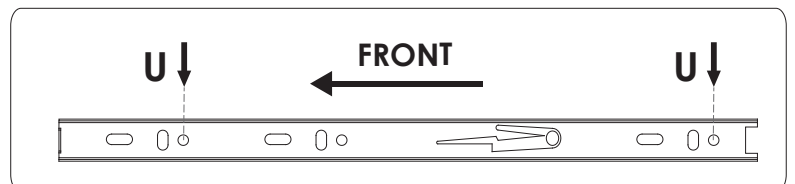


STEP22

YOU WILL NEED


J x4

F x4

1

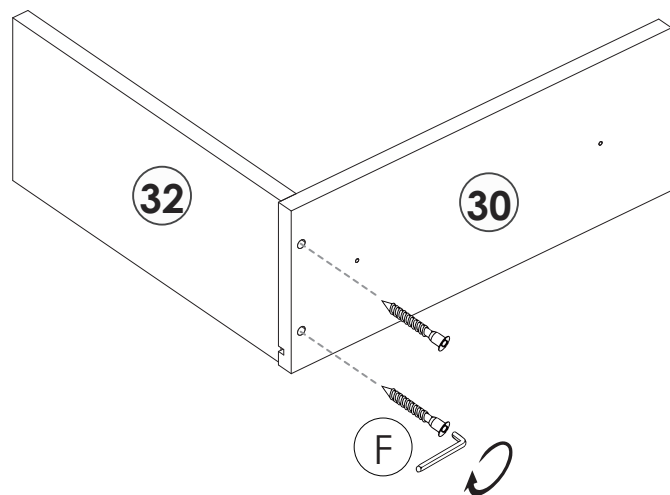


2

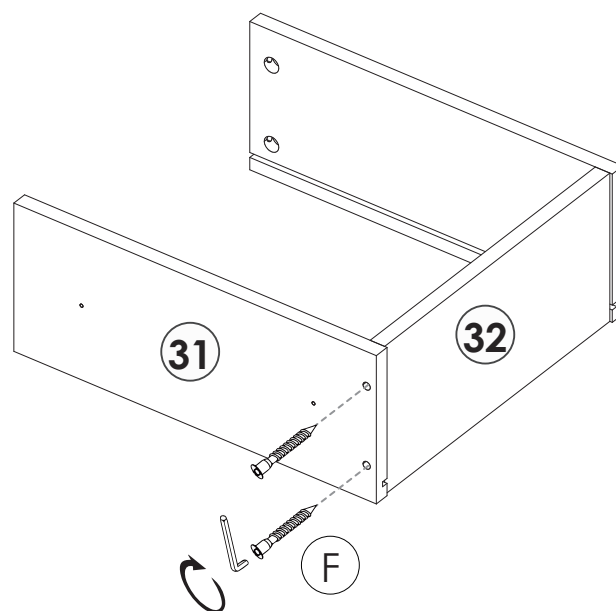


x3

3

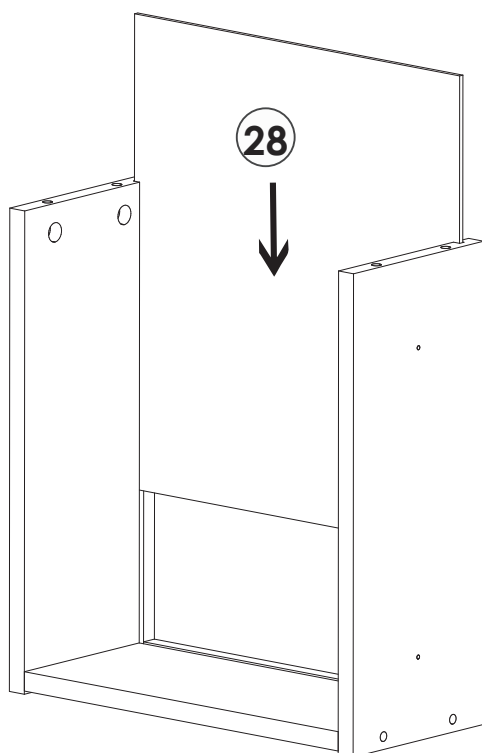

4

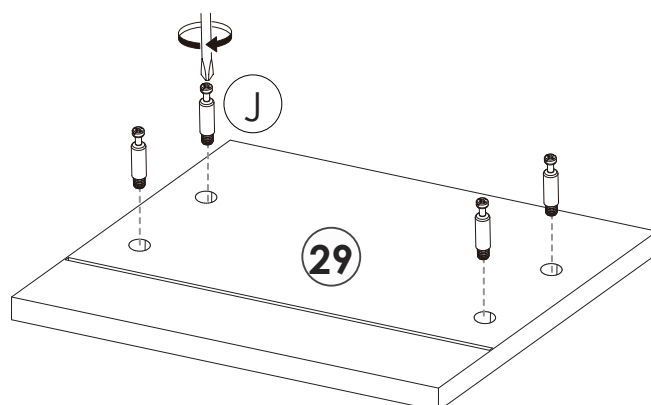

STEP23




YOU WILL NEED

K x4

H x1

U x4



M2 x2

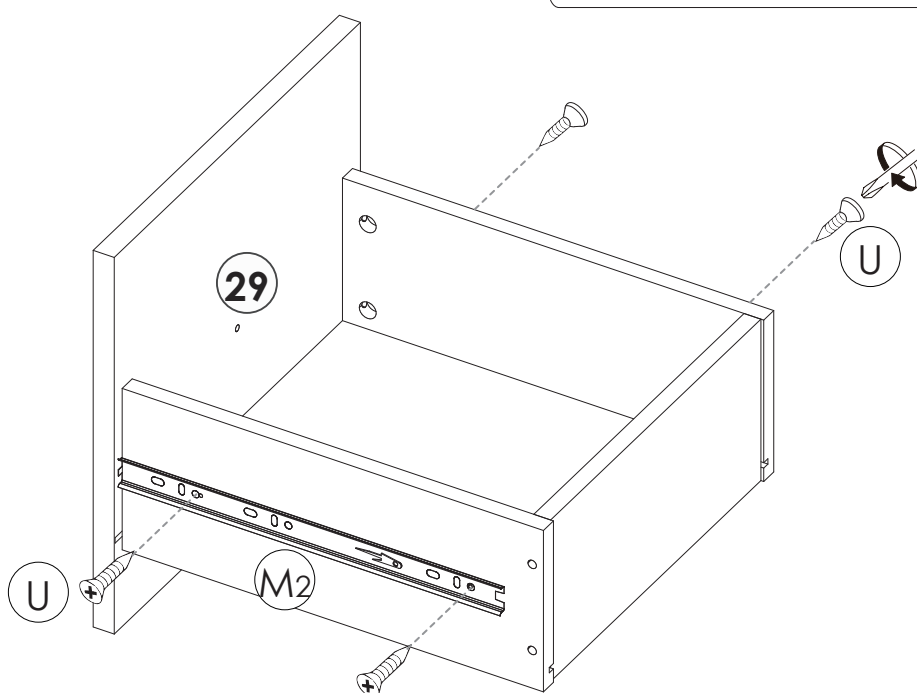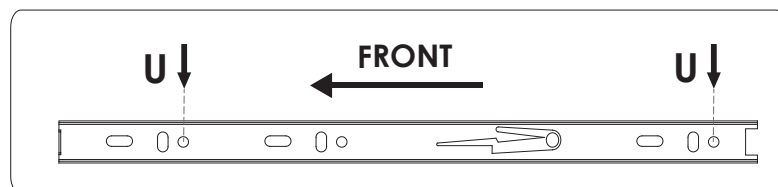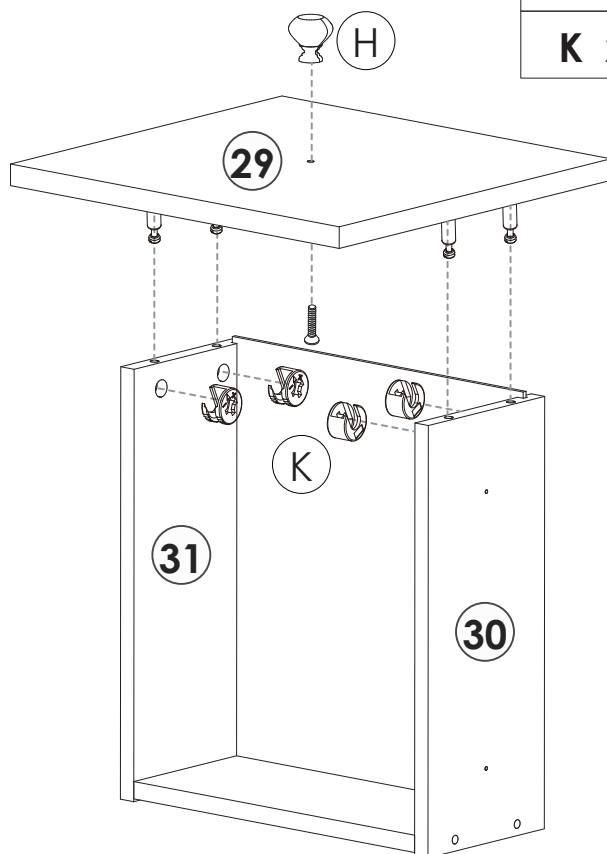

STEP24

REMARK: Align the slides and push the drawer carefully inside until it stops.

★ If the drawer does not go in smoothly please take it out and repeat the step.

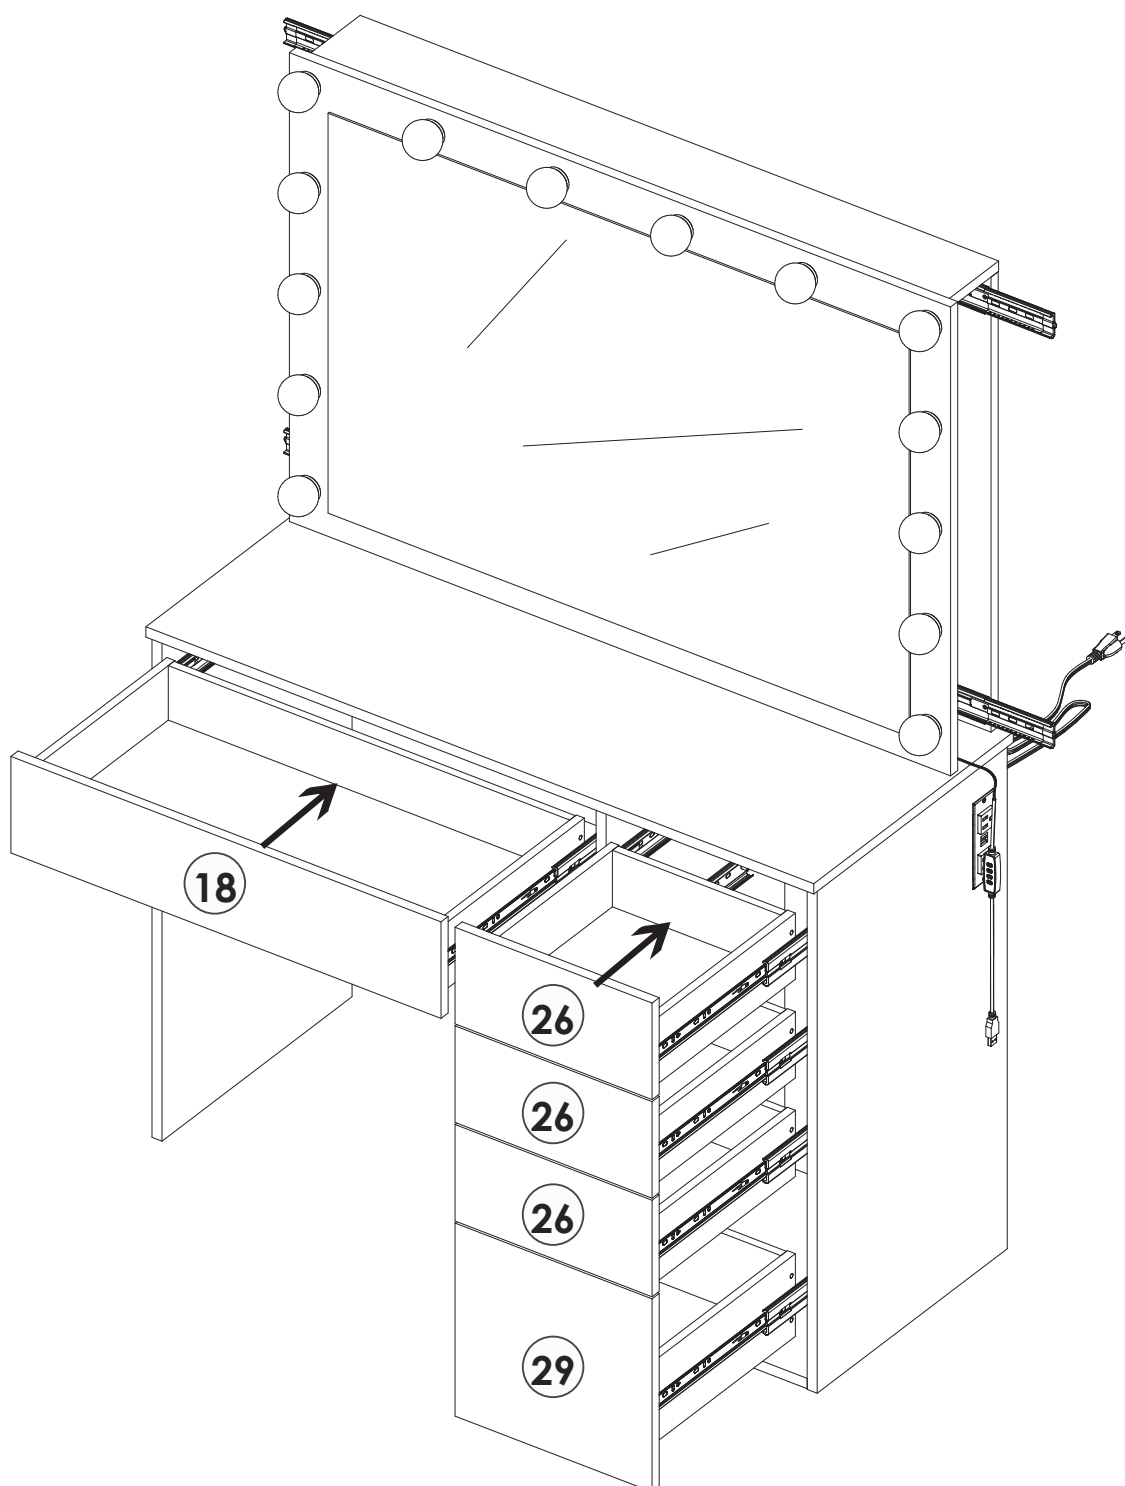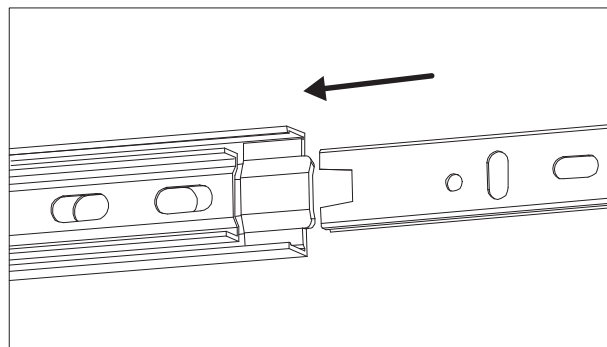

STEP25

YOU WILL NEED


J x6

K x1


D x3

F x4


1

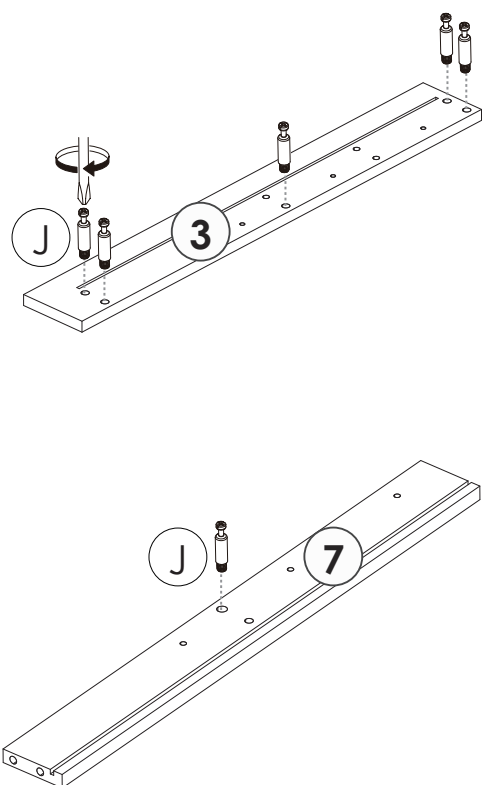


2

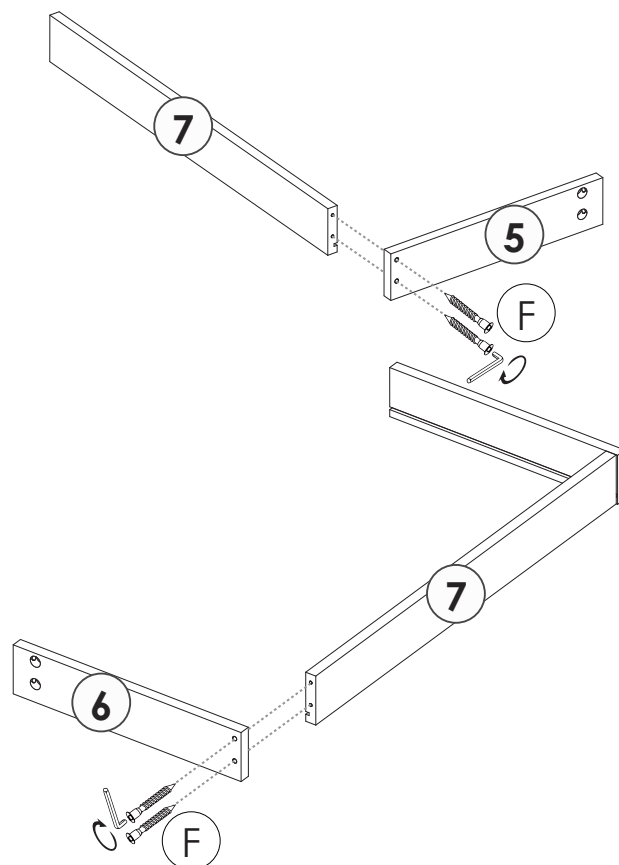

3

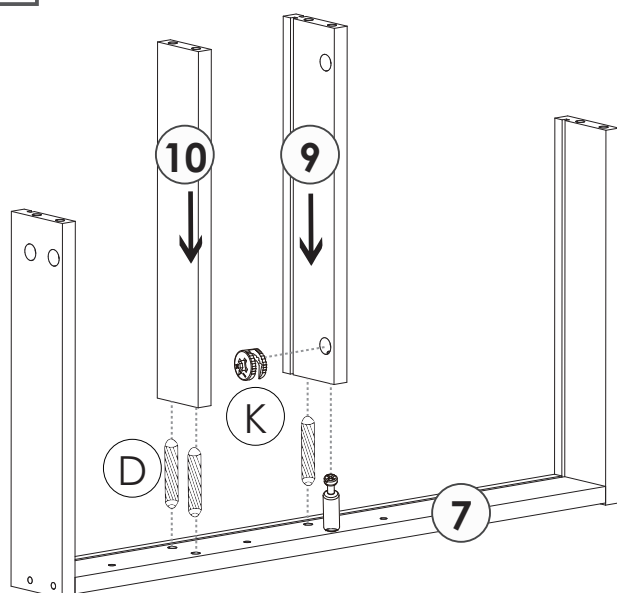

4

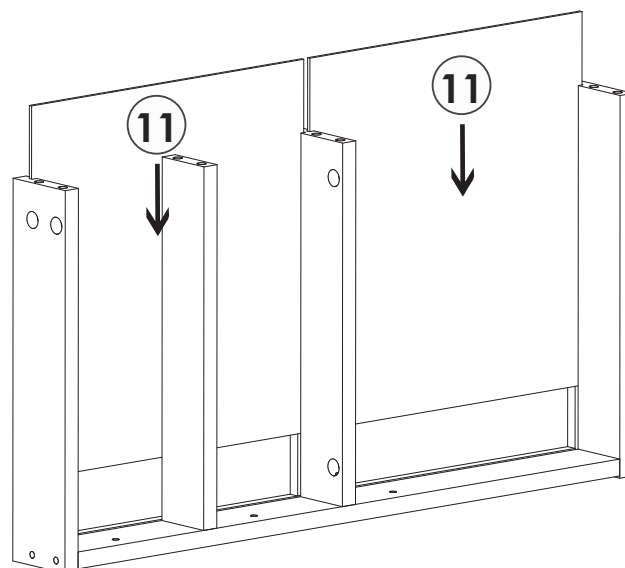


STEP26

YOU WILL NEED

K x5

D x3

O x3

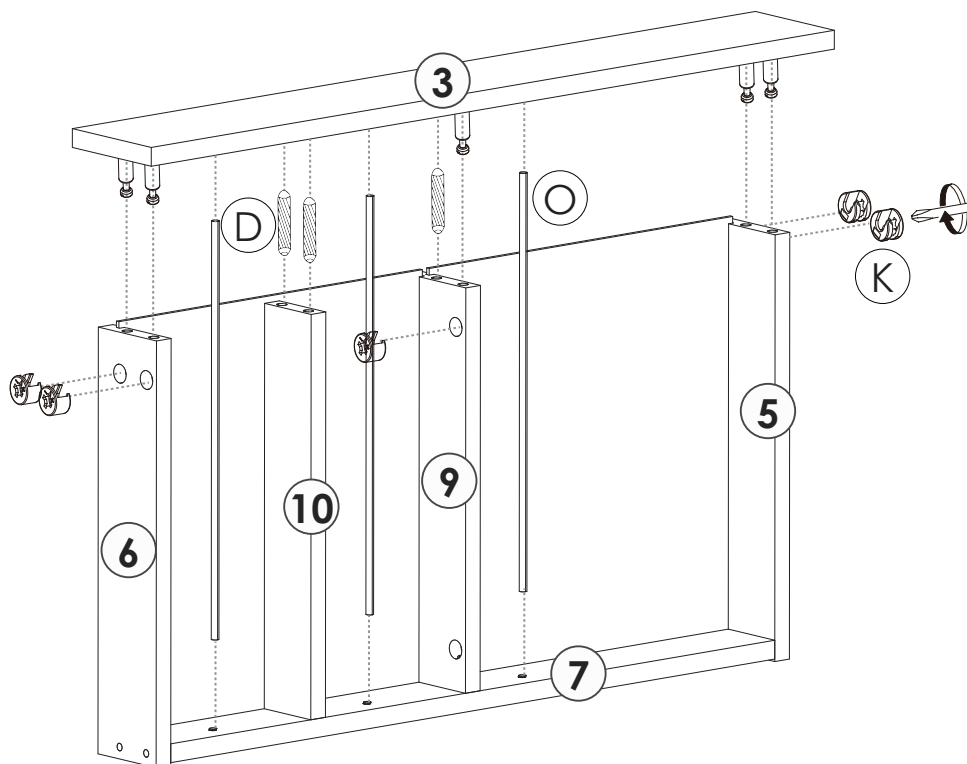

V ↓

FRONT →


↓ **V**



YOU WILL NEED

V x4

C2 x2

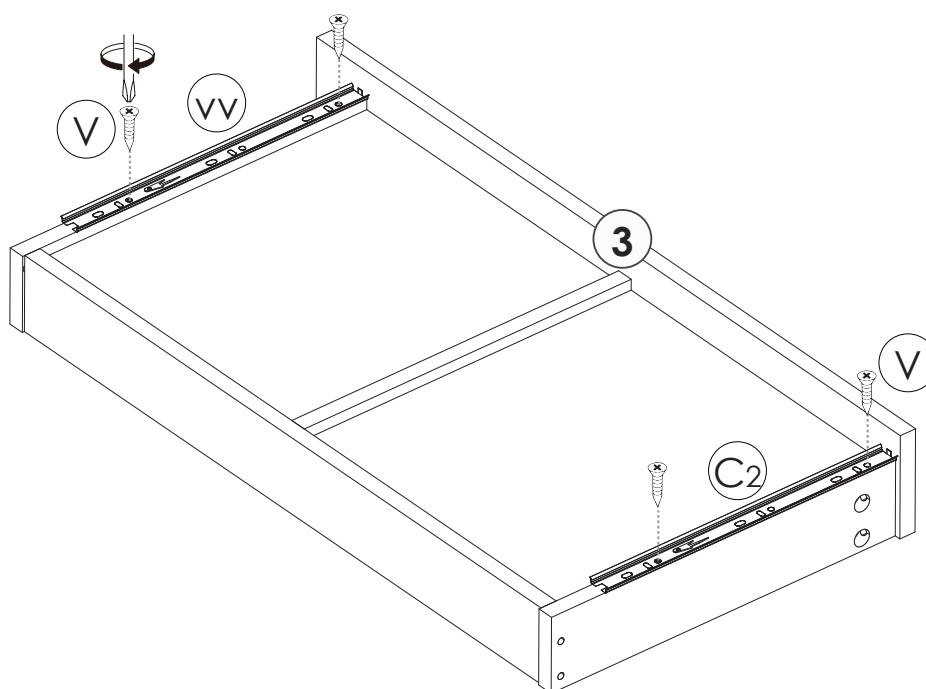

STEP27

YOU WILL NEED


J x6

K x1


D x3

F x4

1

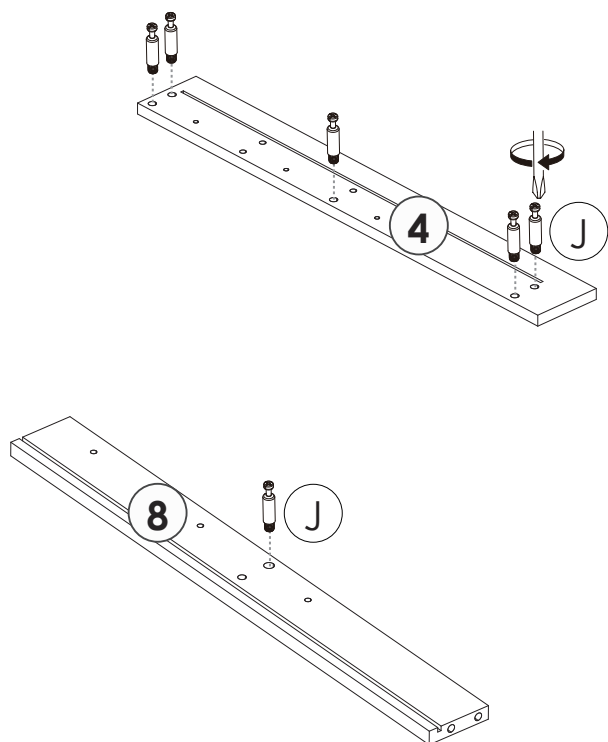


2

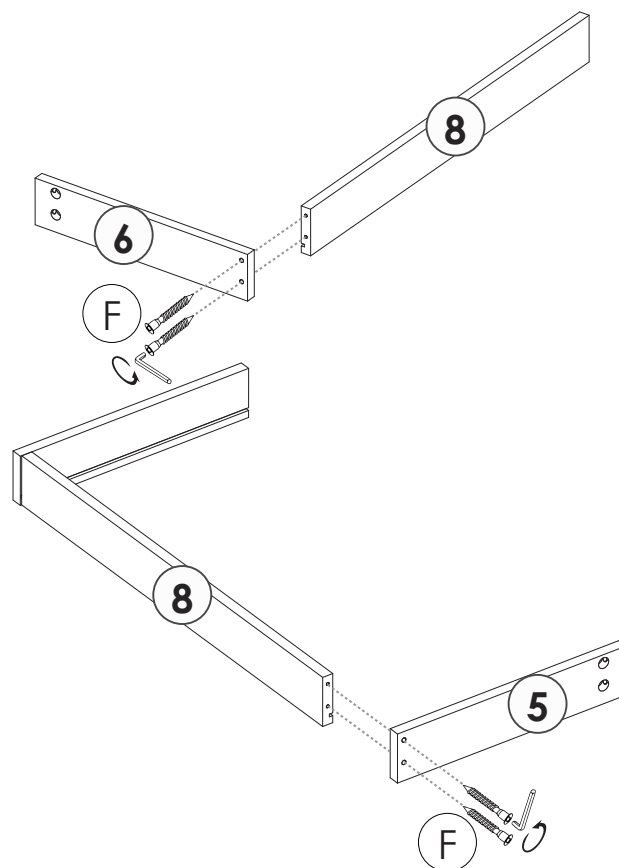


x3

3

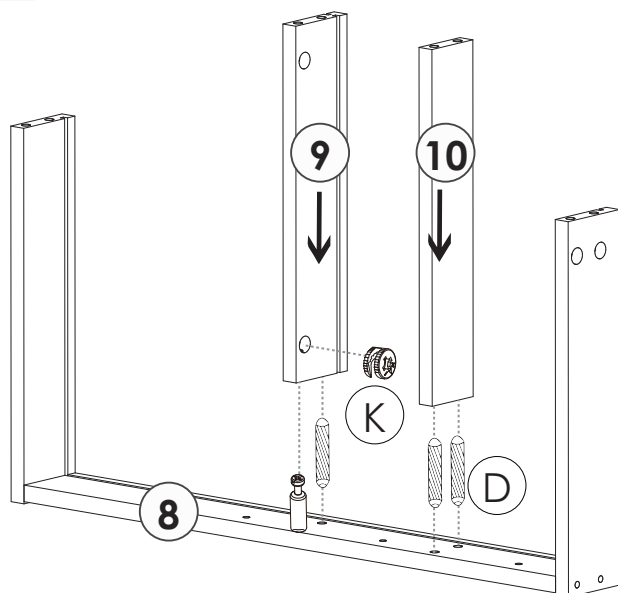

4

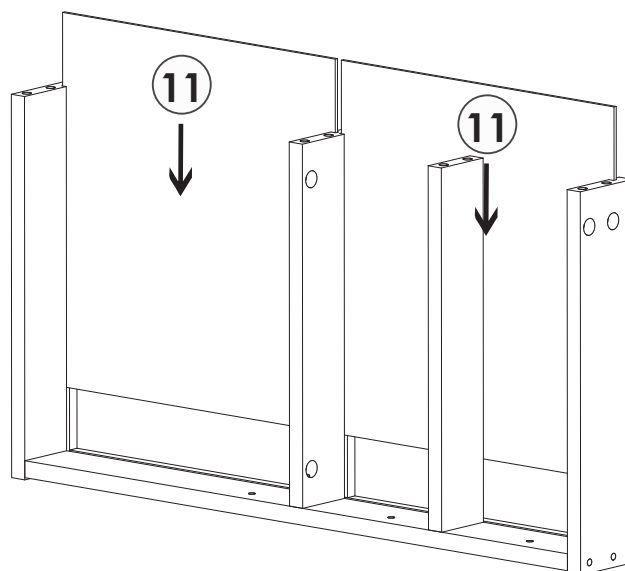


STEP28

YOU WILL NEED

K x5

D x3



O x3

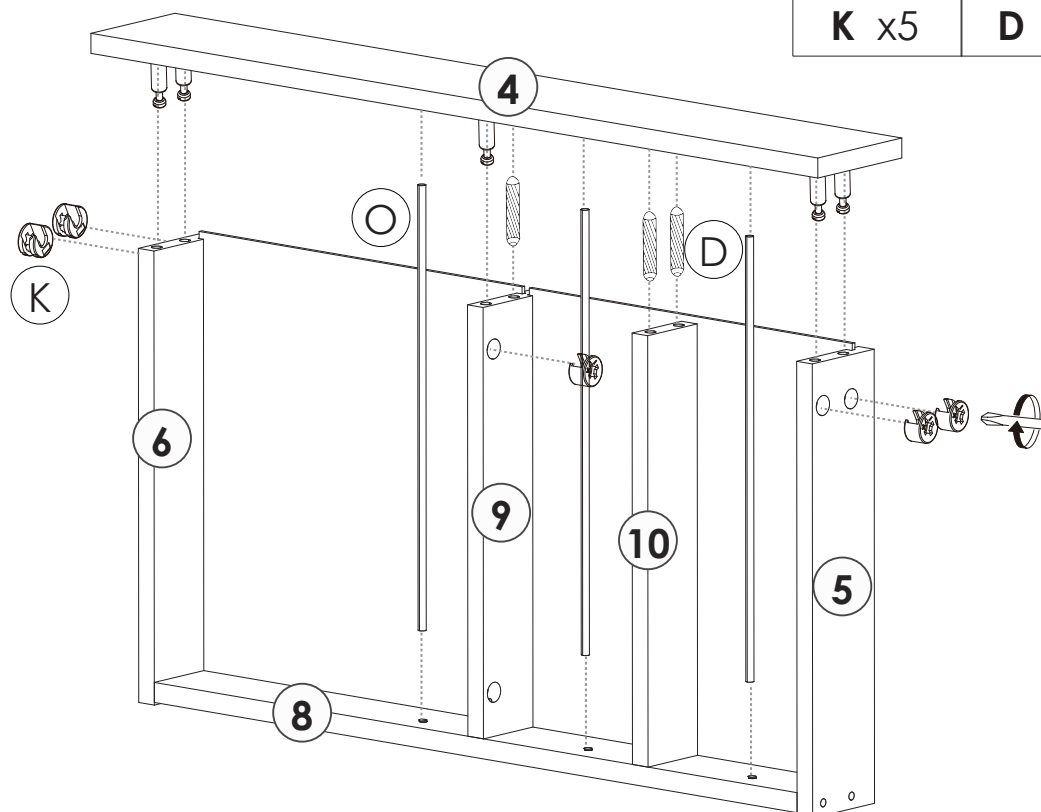

YOU WILL NEED

V x4





C2 x2

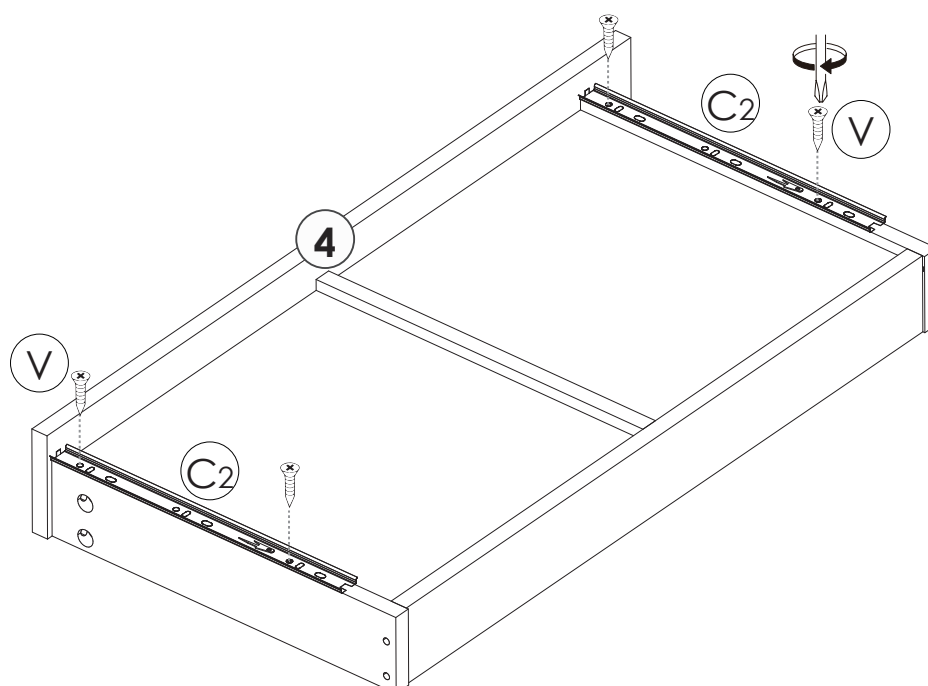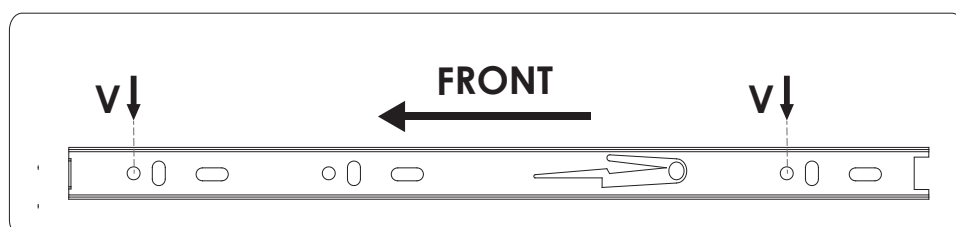

STEP29

YOU WILL NEED



P x2

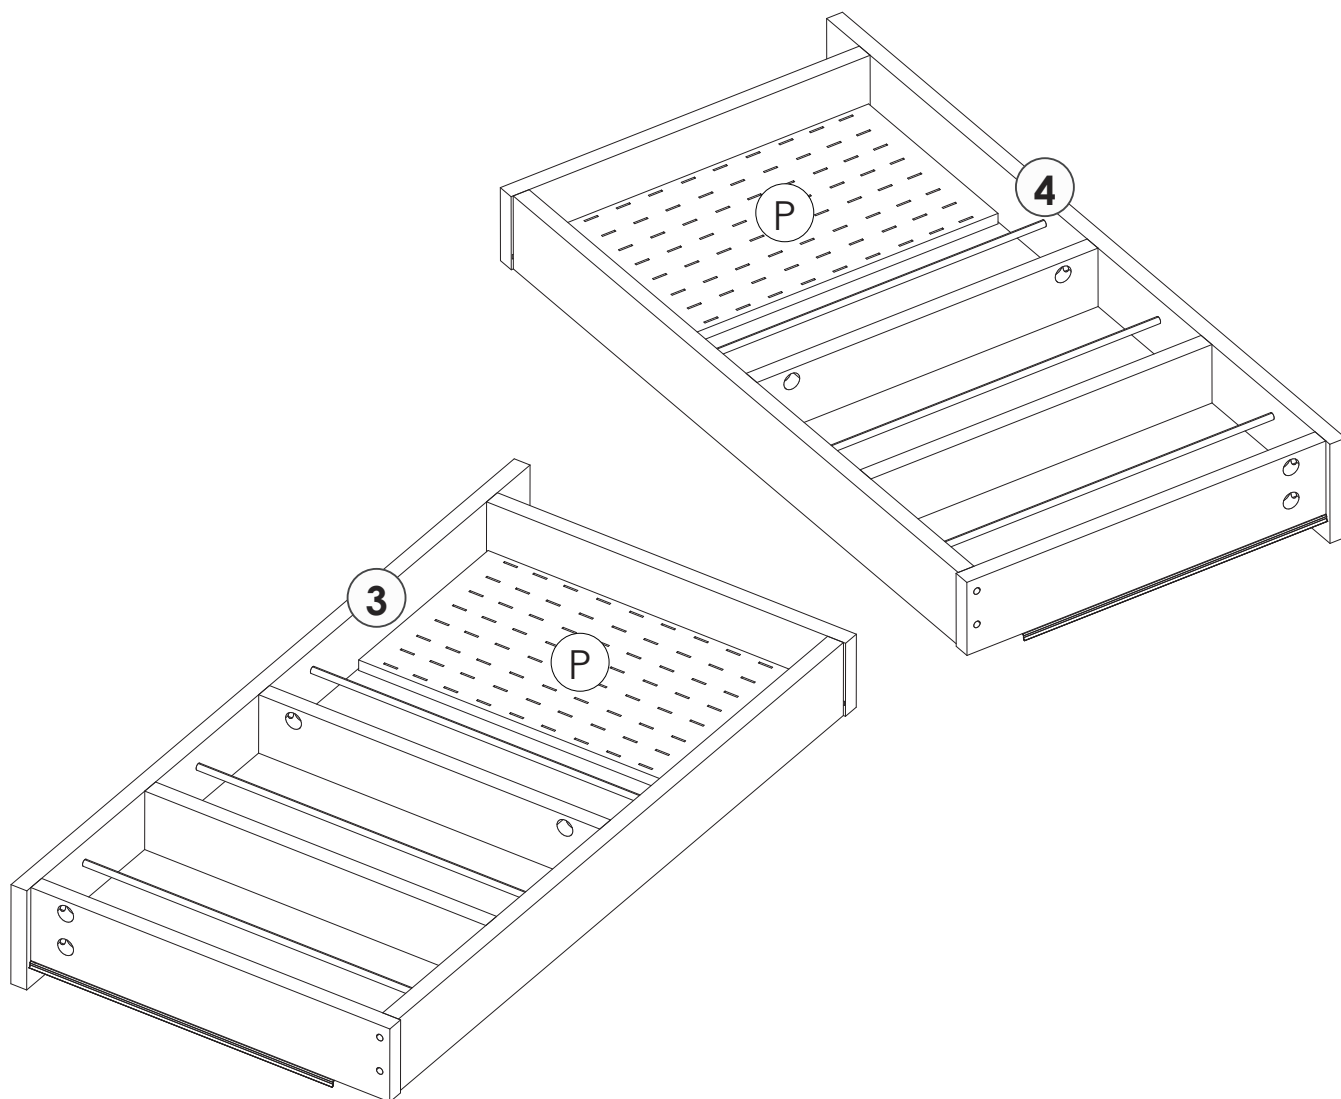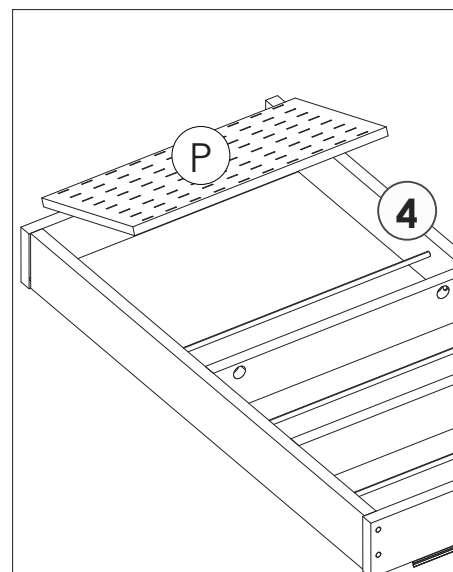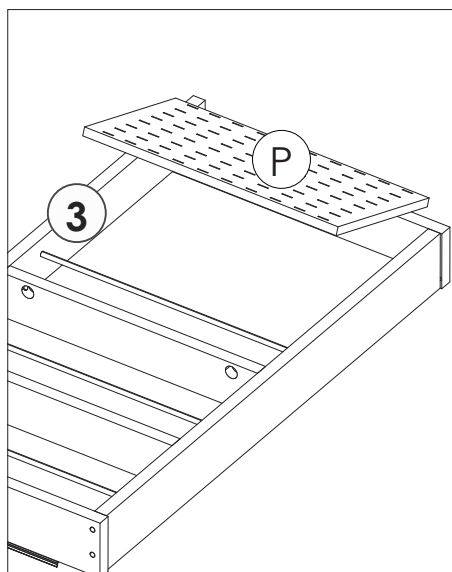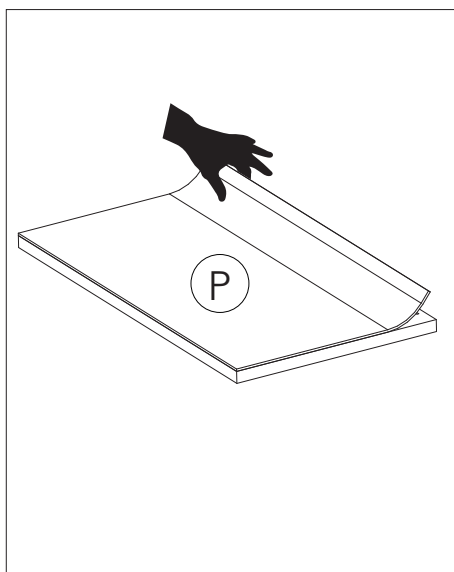

STEP30

REMARK: Align the slides and push the drawer carefully inside until it stops.

★ If the drawer does not go in smoothly please take it out and repeat the step.

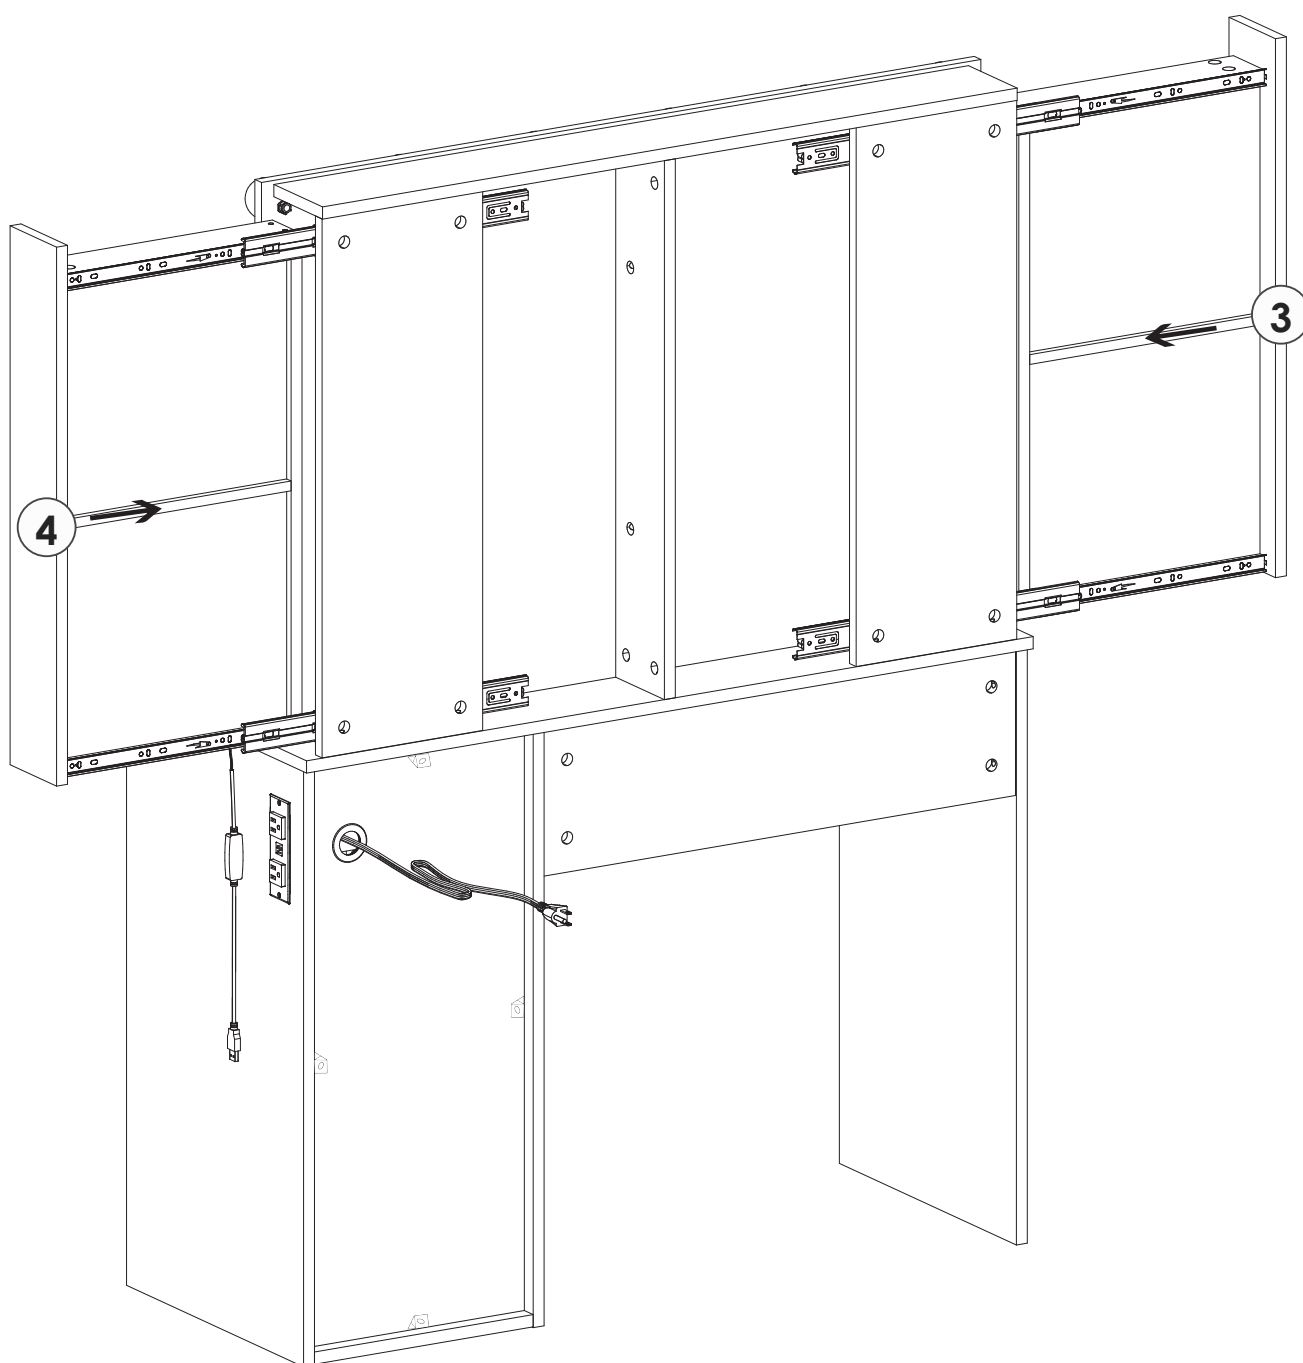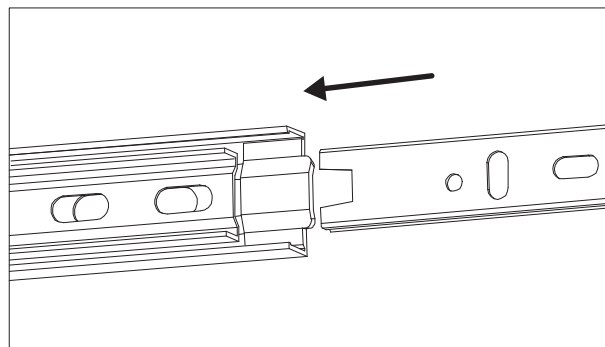


STEP31

1

YOU WILL NEED


F x2

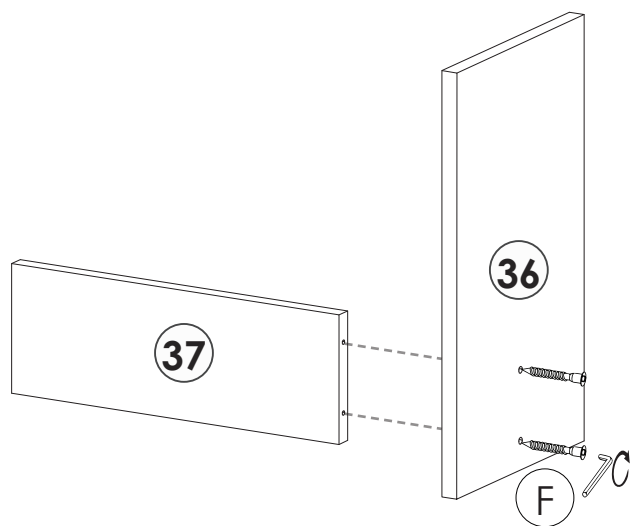

2

YOU WILL NEED


F x2

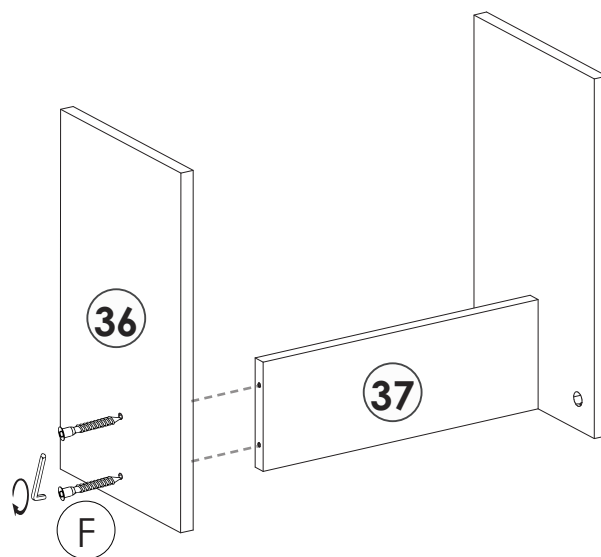

3

YOU WILL NEED

G x4

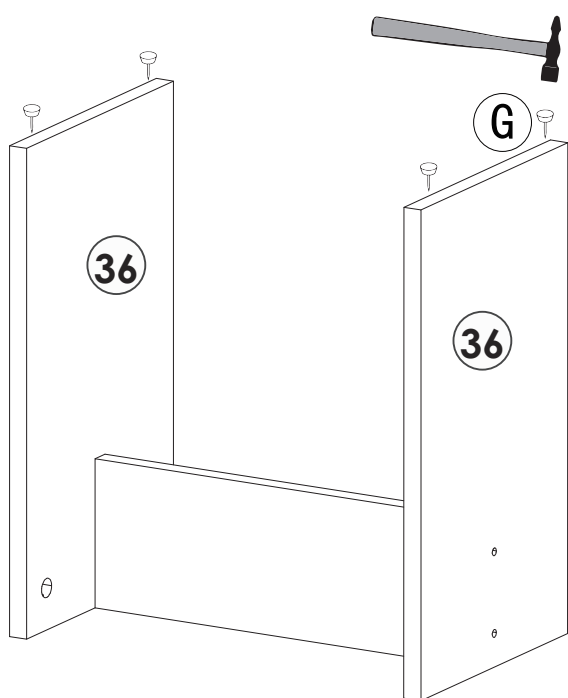


4

YOU WILL NEED

A x4





B x4

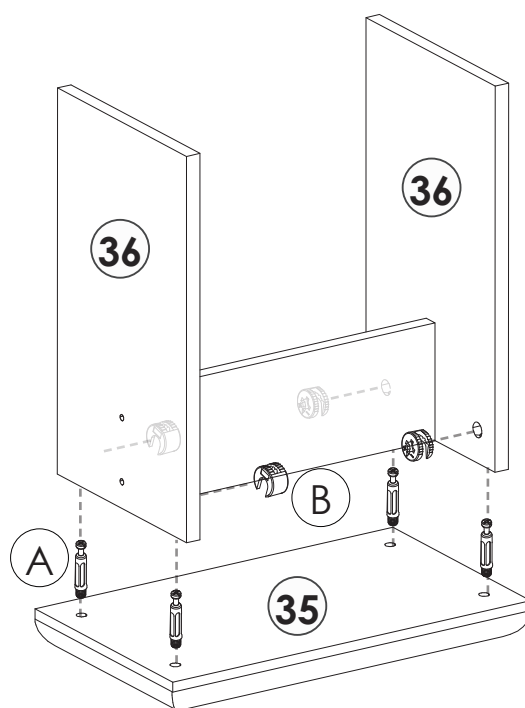

STEP32

YOU WILL NEED

L x43

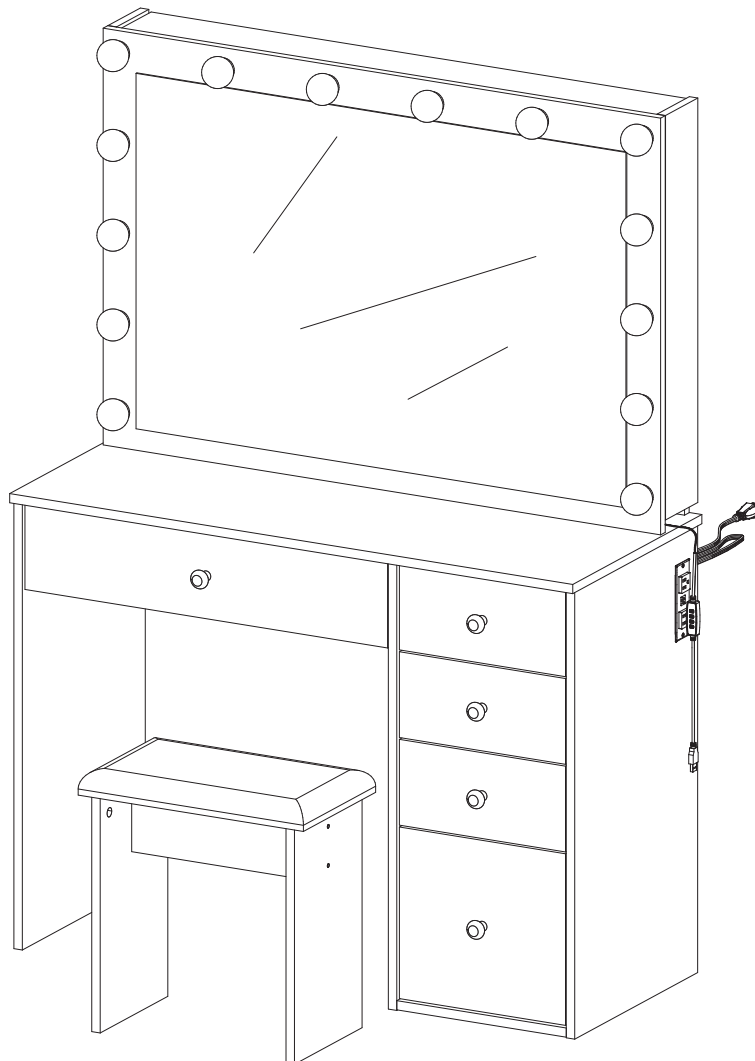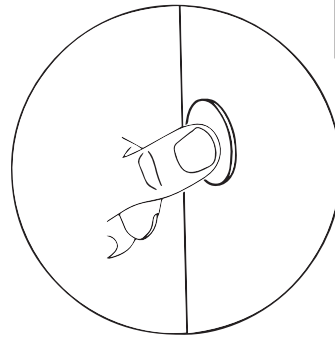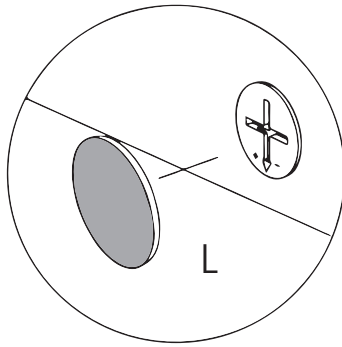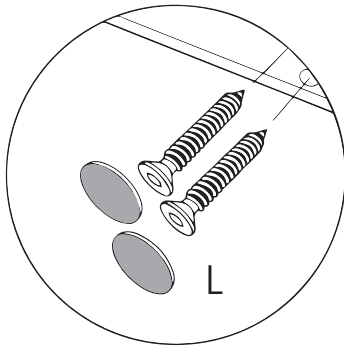

Add L fittings to all exposed holes on the front of the product

WARRANTY

We offer an **18-month** warranty after the original purchase date. If there are manufacturing defects on this product, please contact support by email with your order number and other details about the problem.