


SKU:DSNO17GN200A SKU:DSNO17BN201A

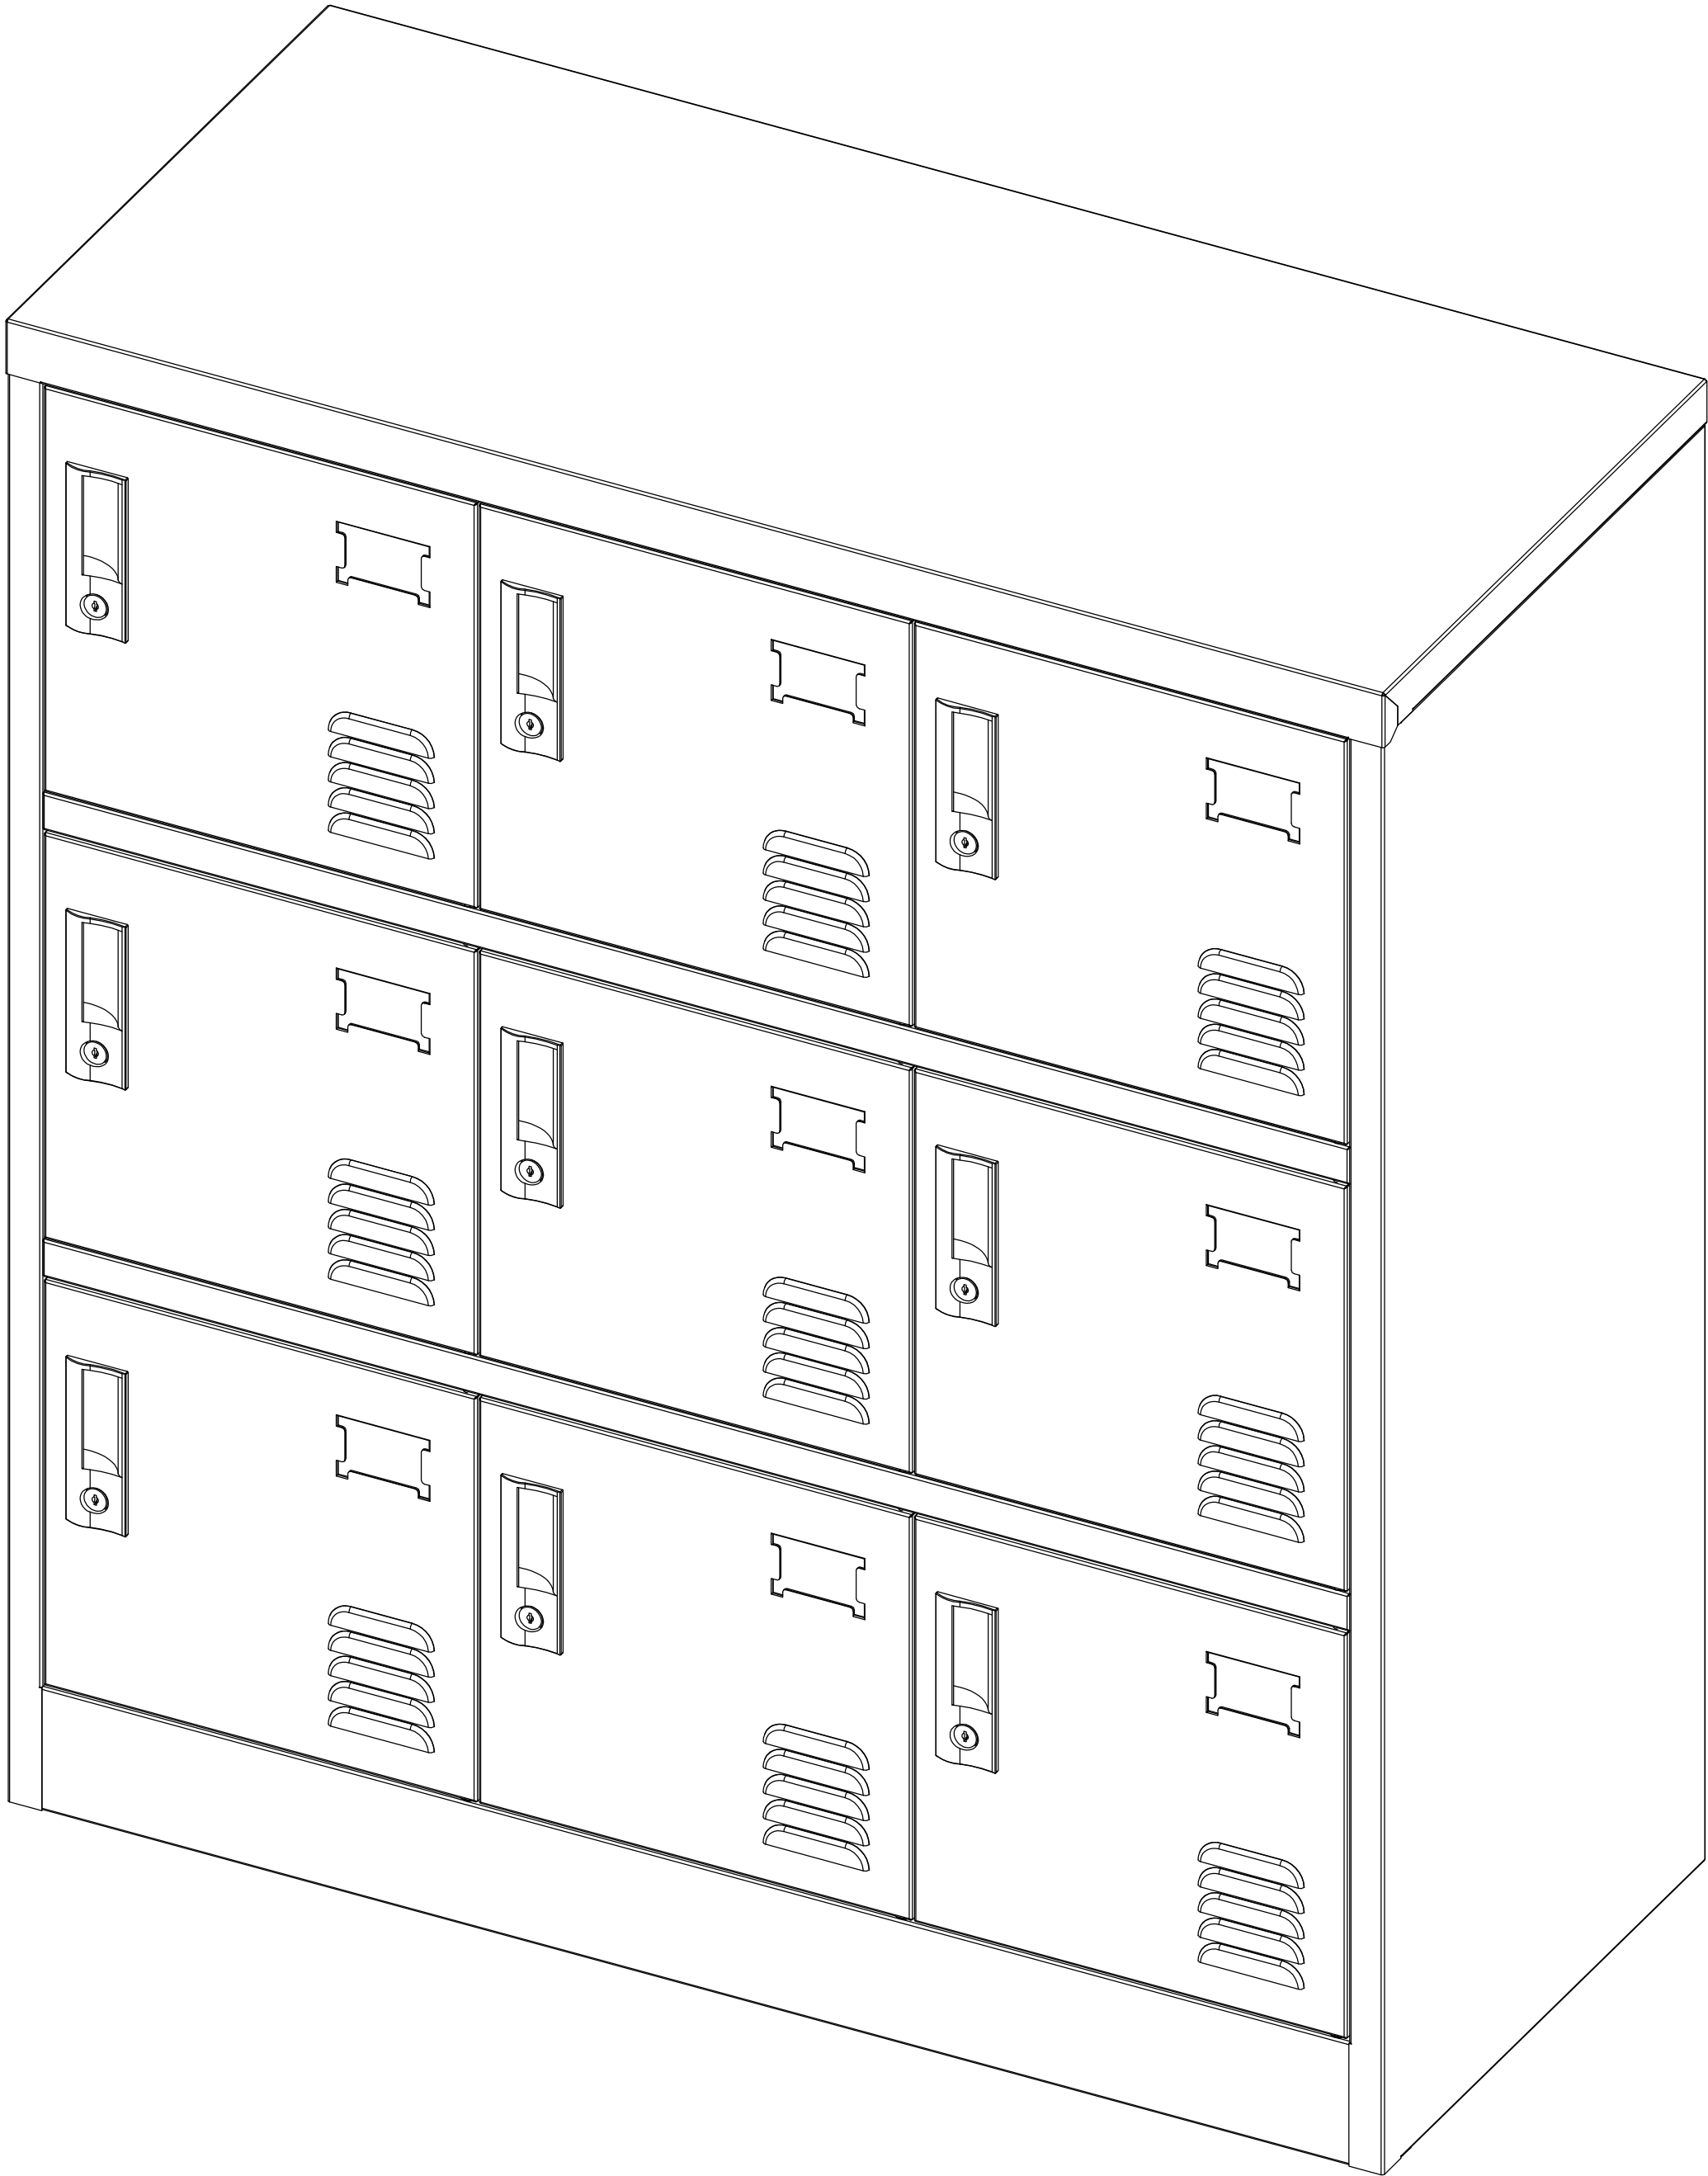

THANK YOU FOR CHOOSING US!

Your new metal storage cabinet has arrived and it will make your life so much easier. That's why we put so much effort into designing it to perfectly fit your needs.

But first things first, we need to install it!

When we say “we” , we mean we're going to guide you, step by step. We created this instructions manual so that you won't feel overwhelmed and get your new metal storage cabinet up and ready to use in no time! We also know that sometimes things just don't seem to fit, so don't hesitate to drop us a line at help@amrecianoffice.com if you have questions or need help!

Anyways, this metal storage cabinet CAN'T WAIT To BE OF SERVICE so let's assemble it!


MISSING A PART? DON'T WORRY, WE GOTYOUR BACK!

**Compare the sketch on the next page with your package. Are all the pieces there?
However, sometimes errors happen,so if anything is missing just send us an email and we will make sure to fix it!**


Before you start, here are a few quick pointers:

The installation requires two people. so call a friend to join the fun!



For more stability, it's best to anchor the cabinet to the wall.
In this case, along with the items provided you will also need a Level, Percussion Drill and a Hammer

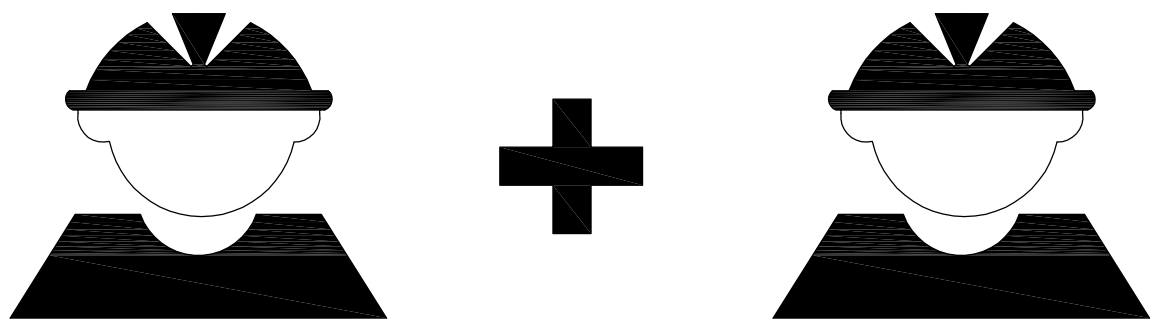

SUGGEST
2PEOPLE

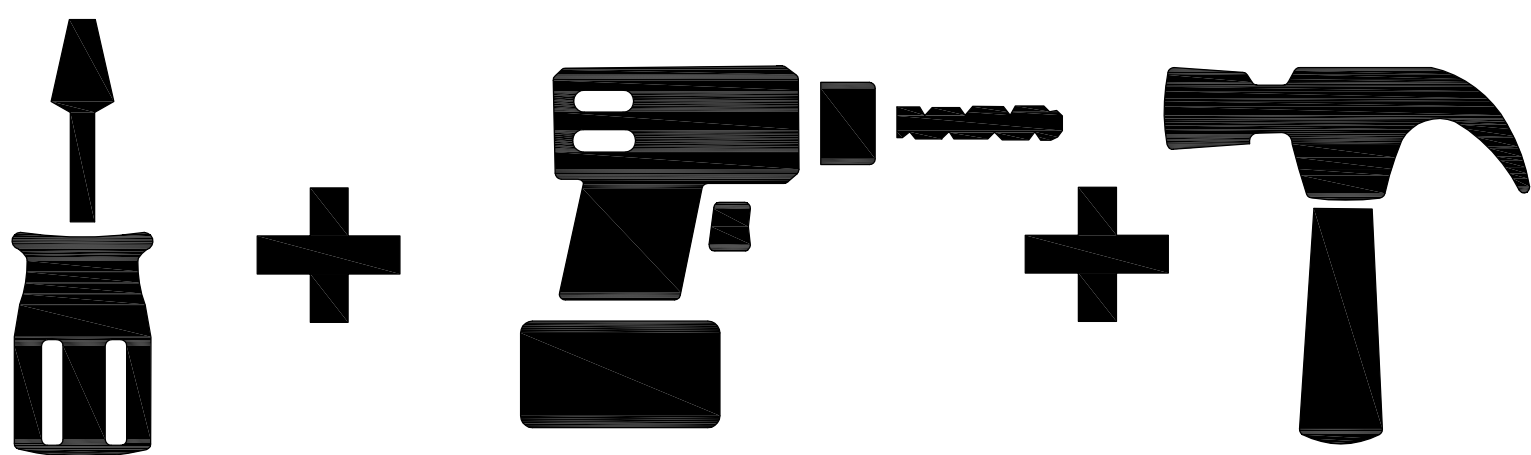


TOOLS
REQUIRED

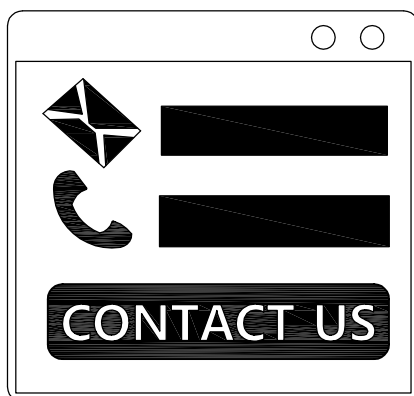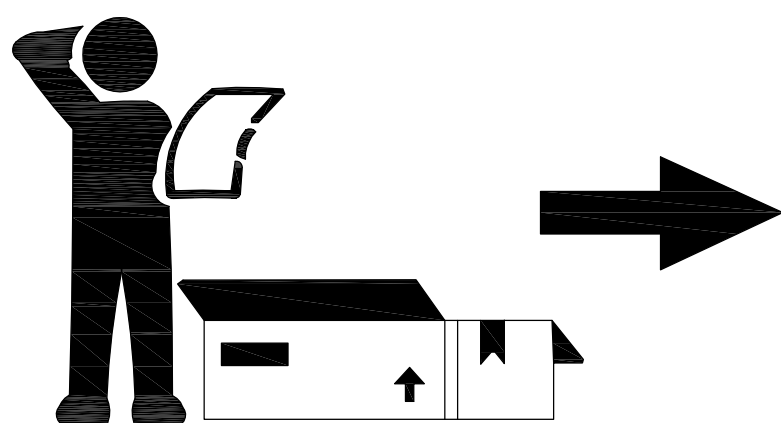


WE ARE
GLAD TO
HELP

PARTS LIST


A*1

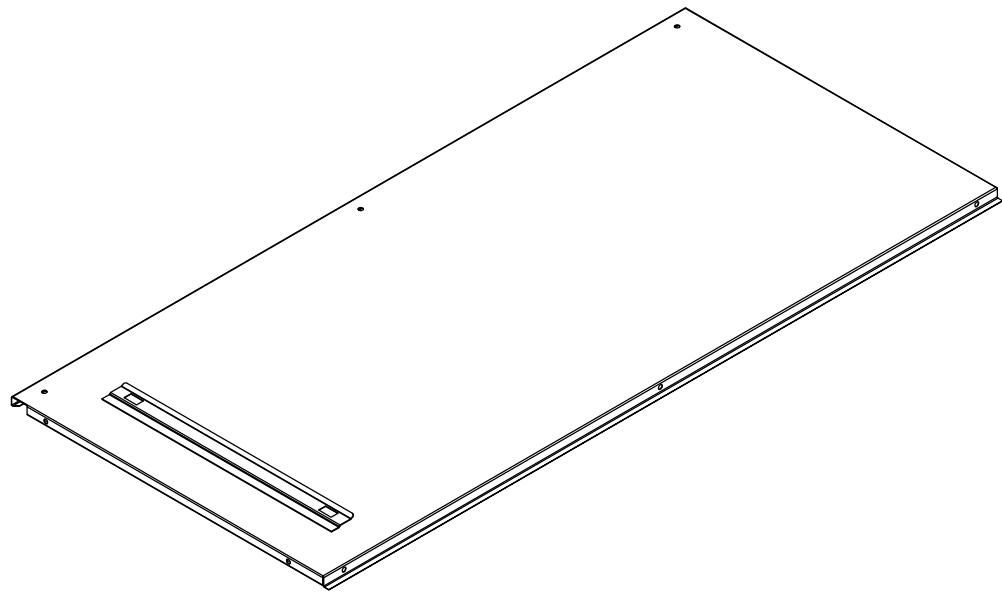


B*1

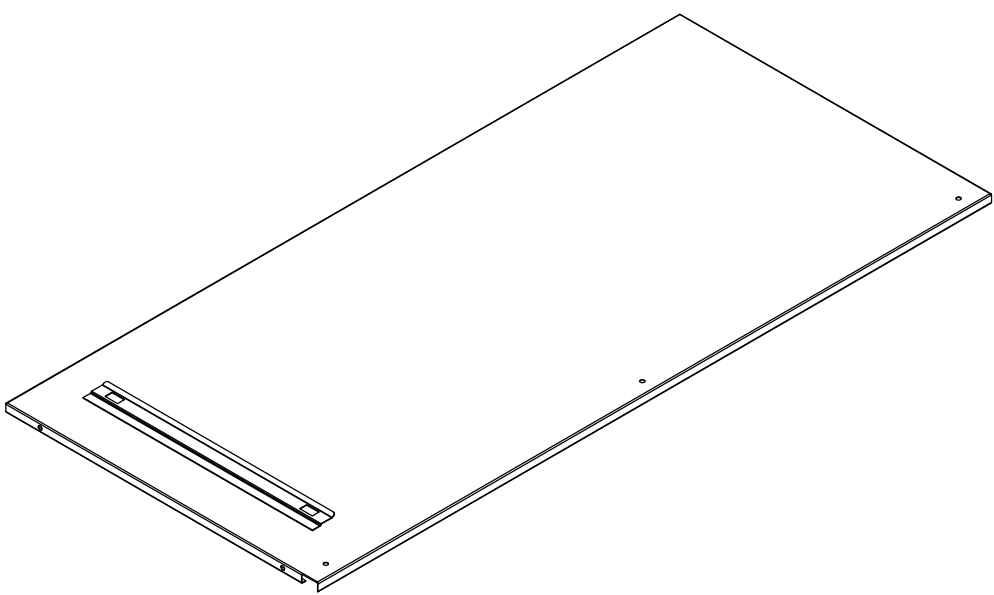


C*1

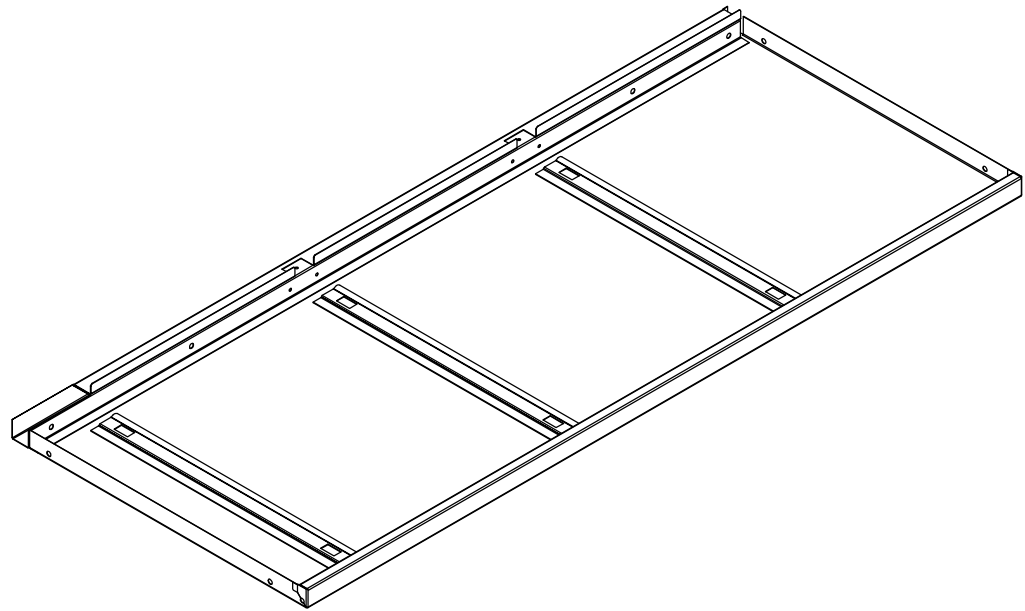


D*1

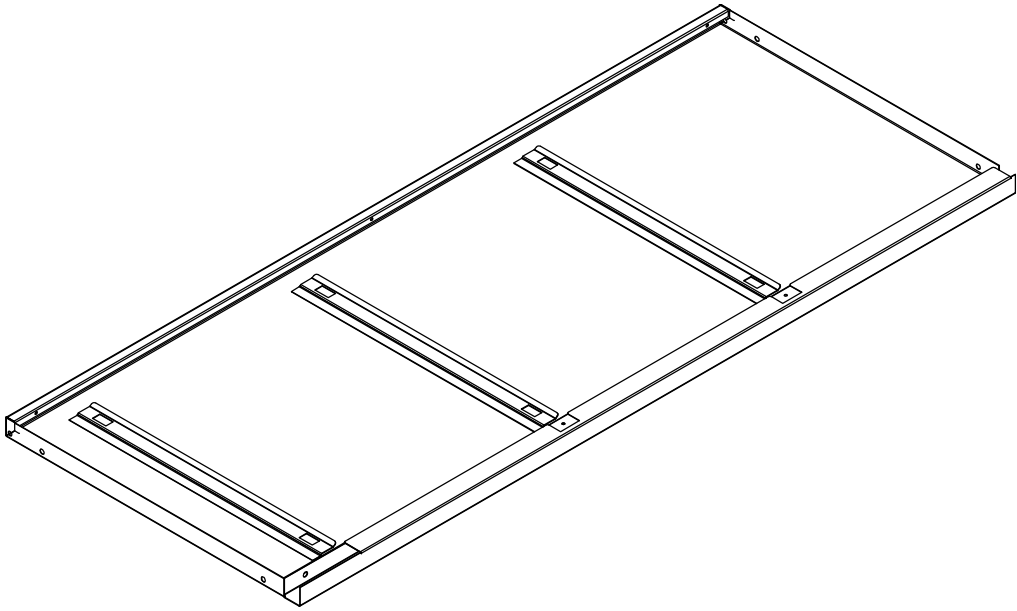


E*1

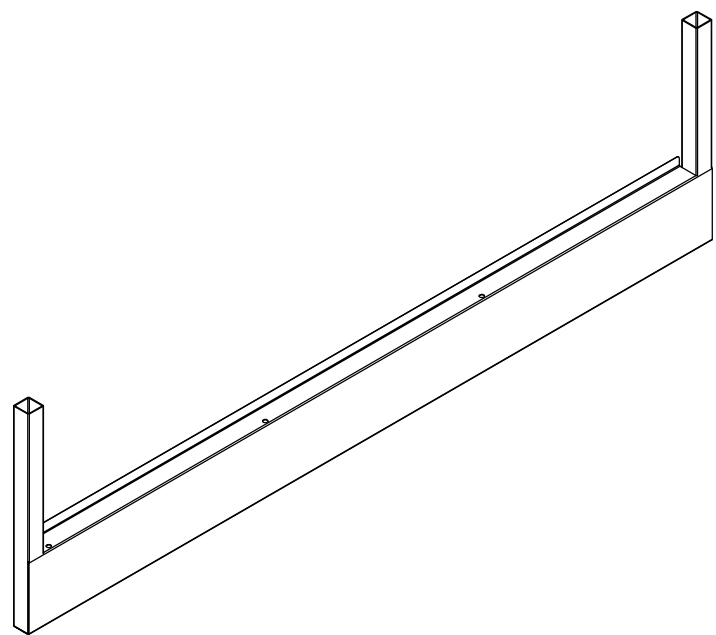


F*1

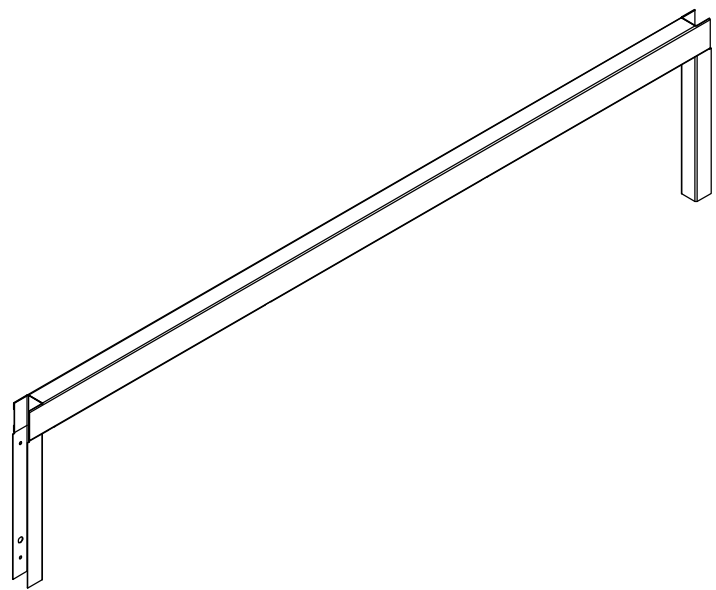


G*2

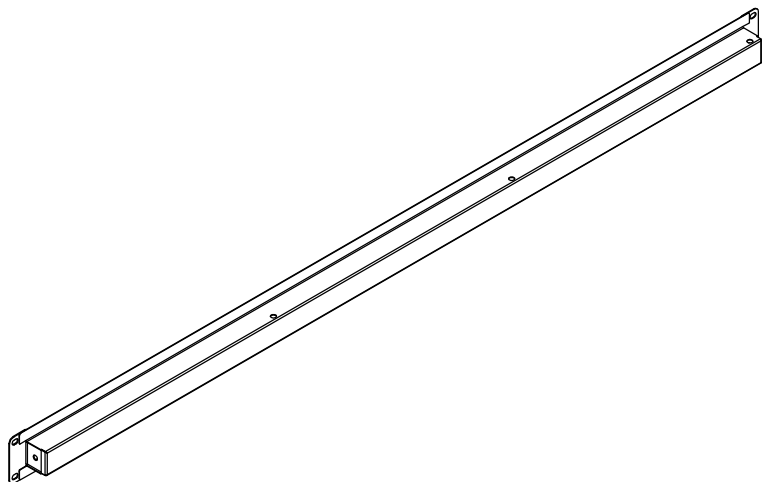


H*2

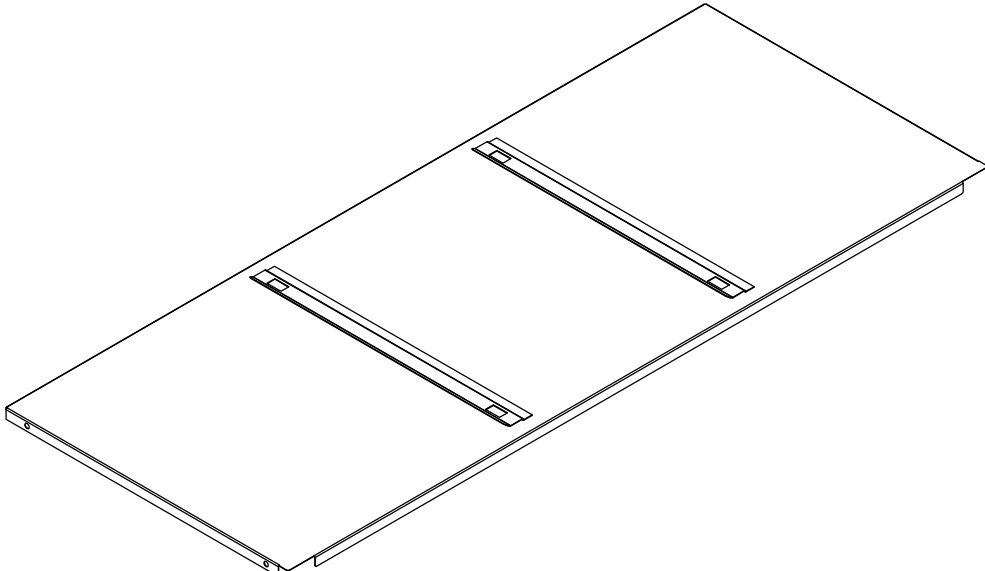


I*1

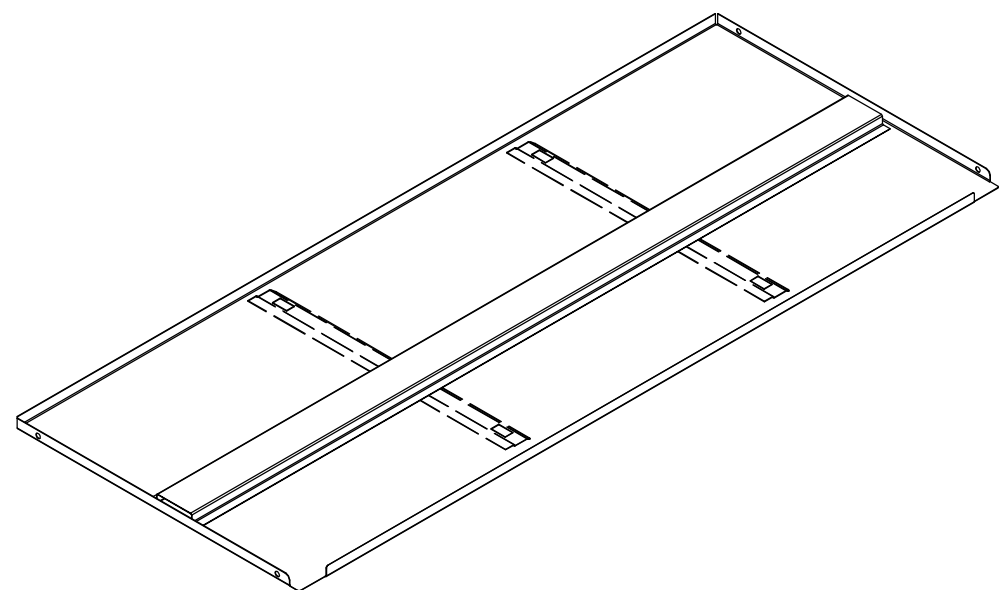


J*1

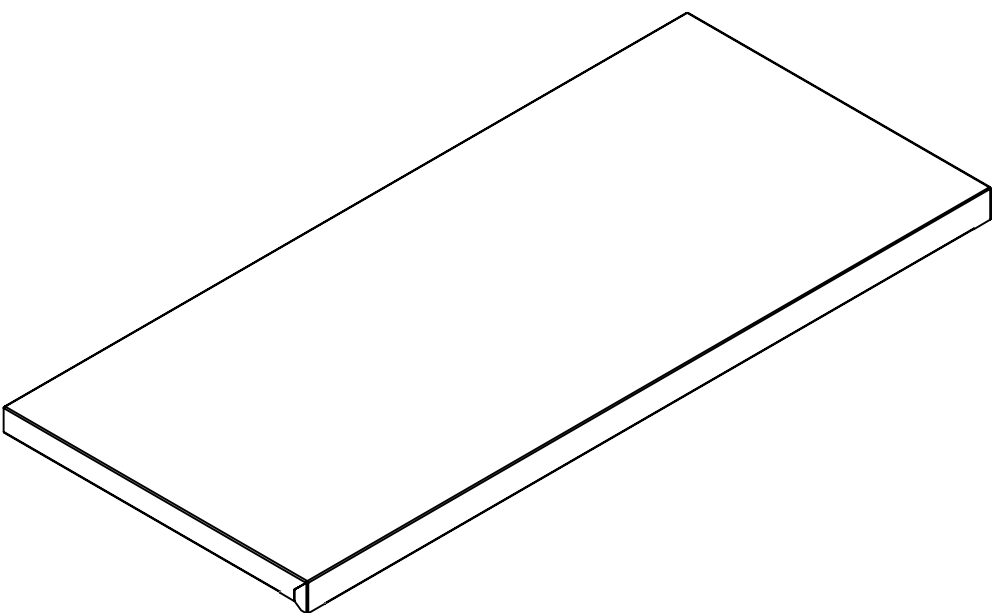


K*6

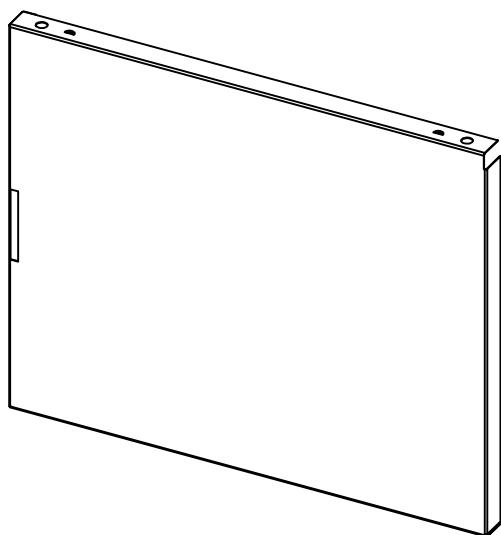


L*3

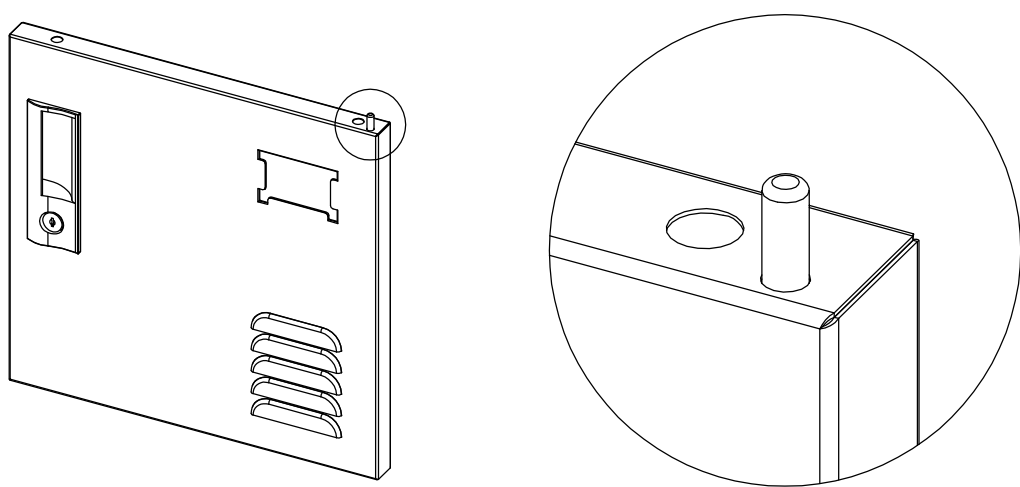


M*6

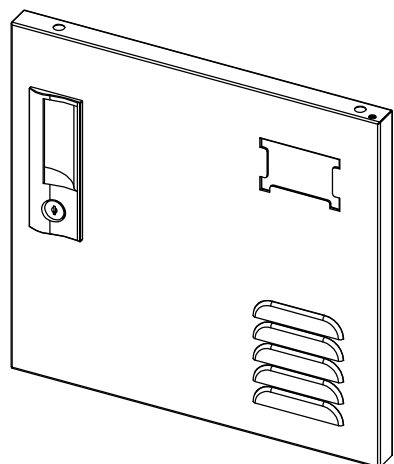


N*37

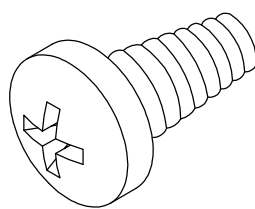


O*9

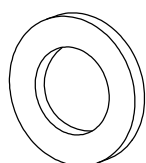


P*3

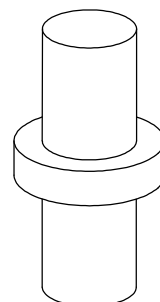


Q*6

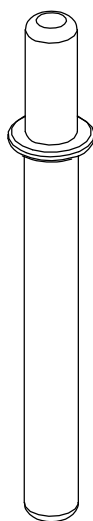


R*18



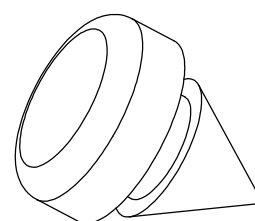



S*9

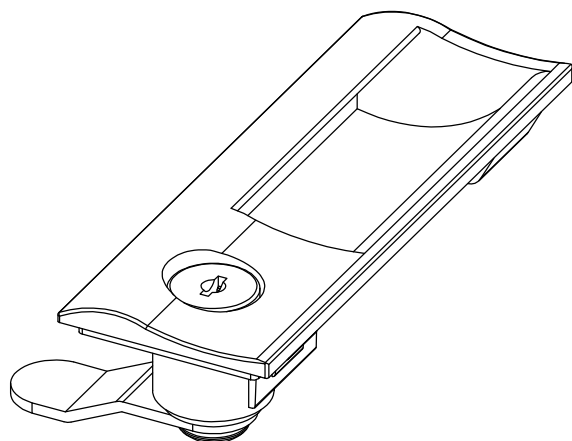

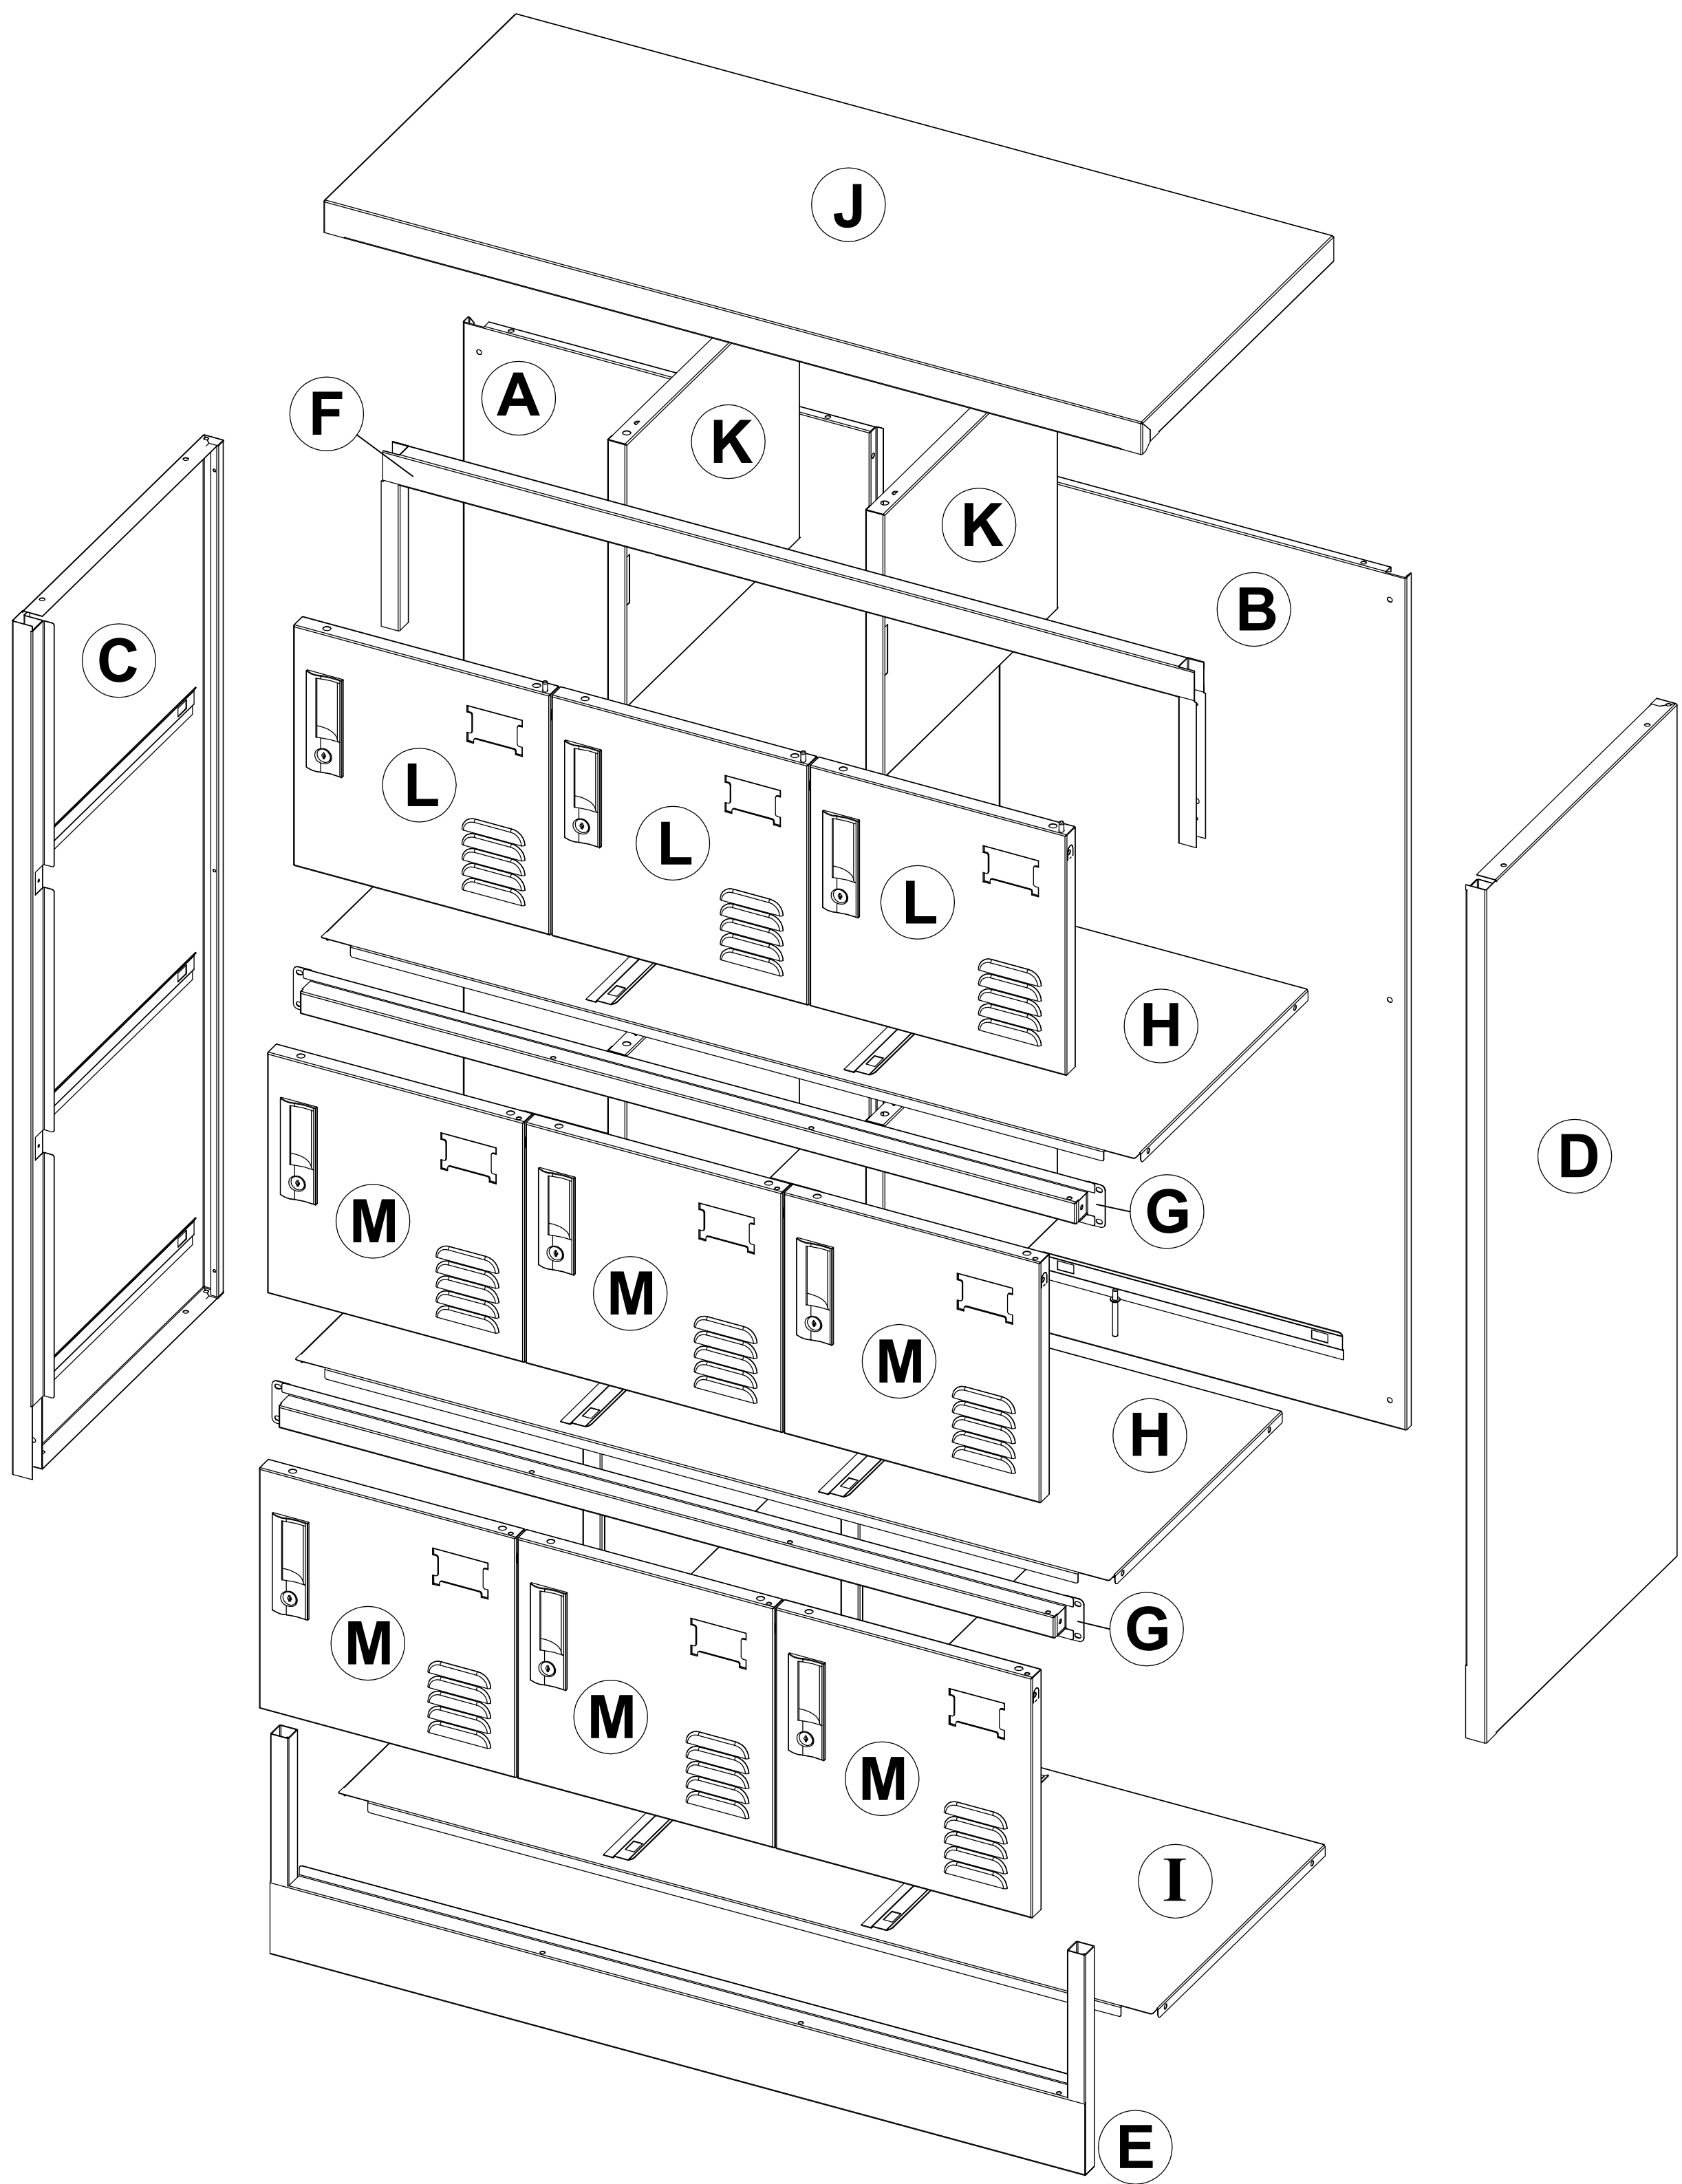




Step 1 Connect panel A and panel B to each other on the back and align them Position the hole and secure it with screw N.

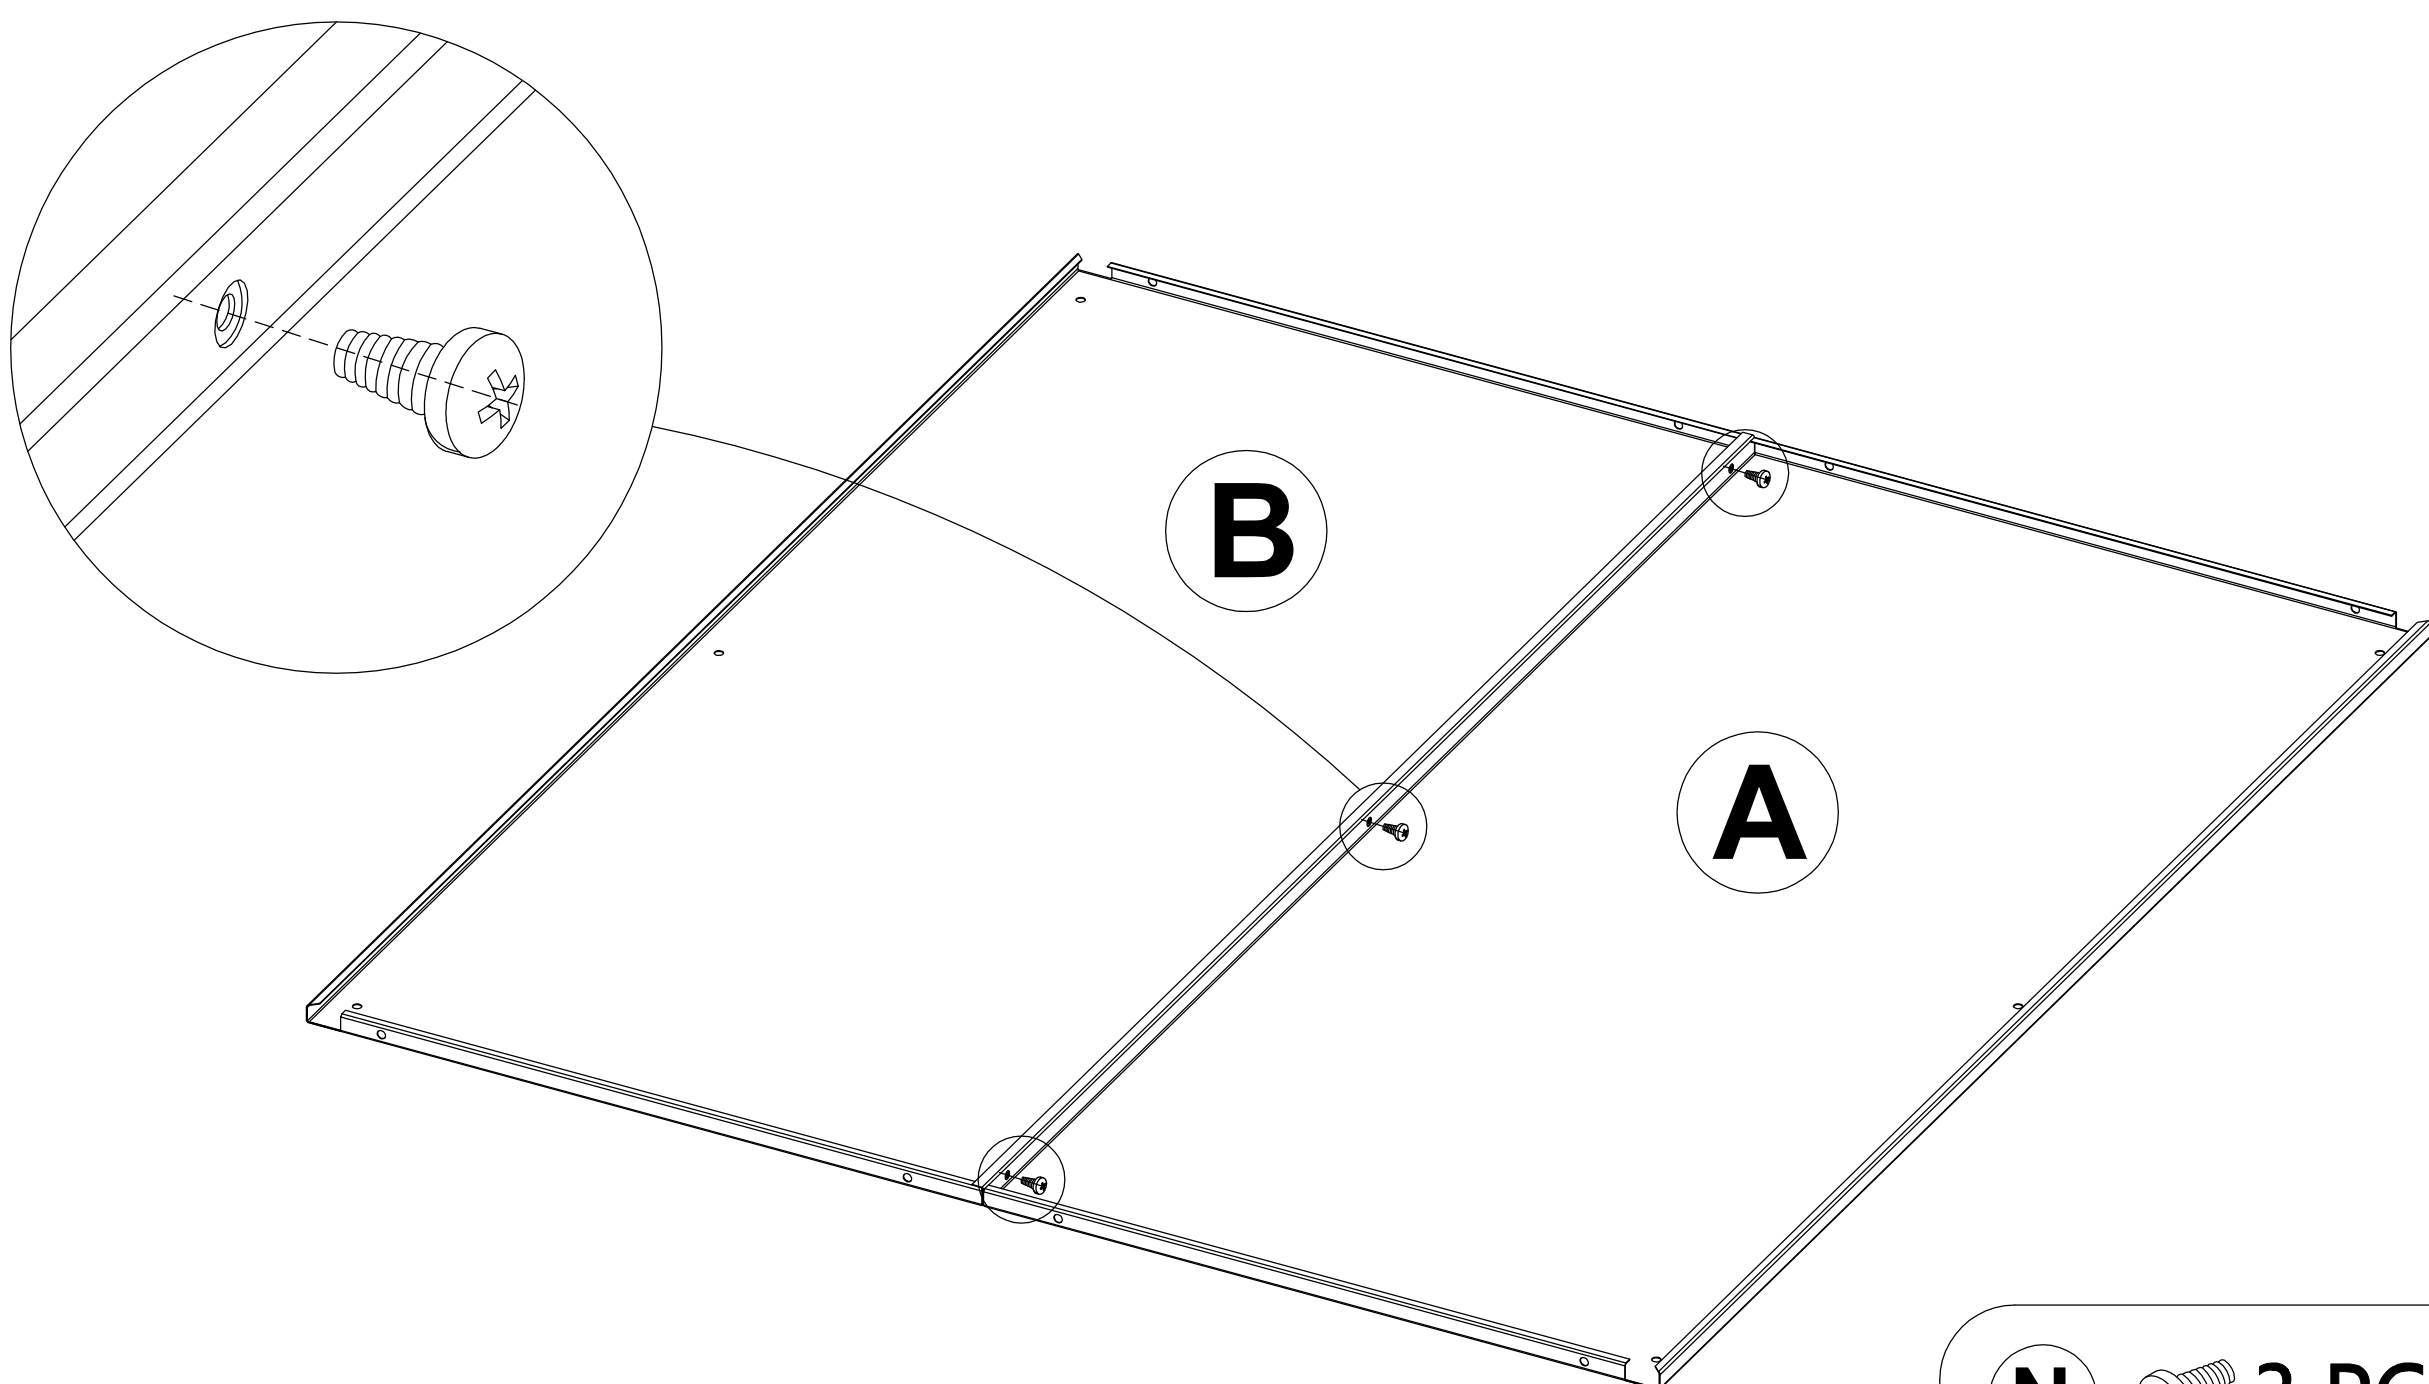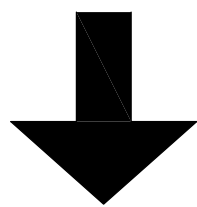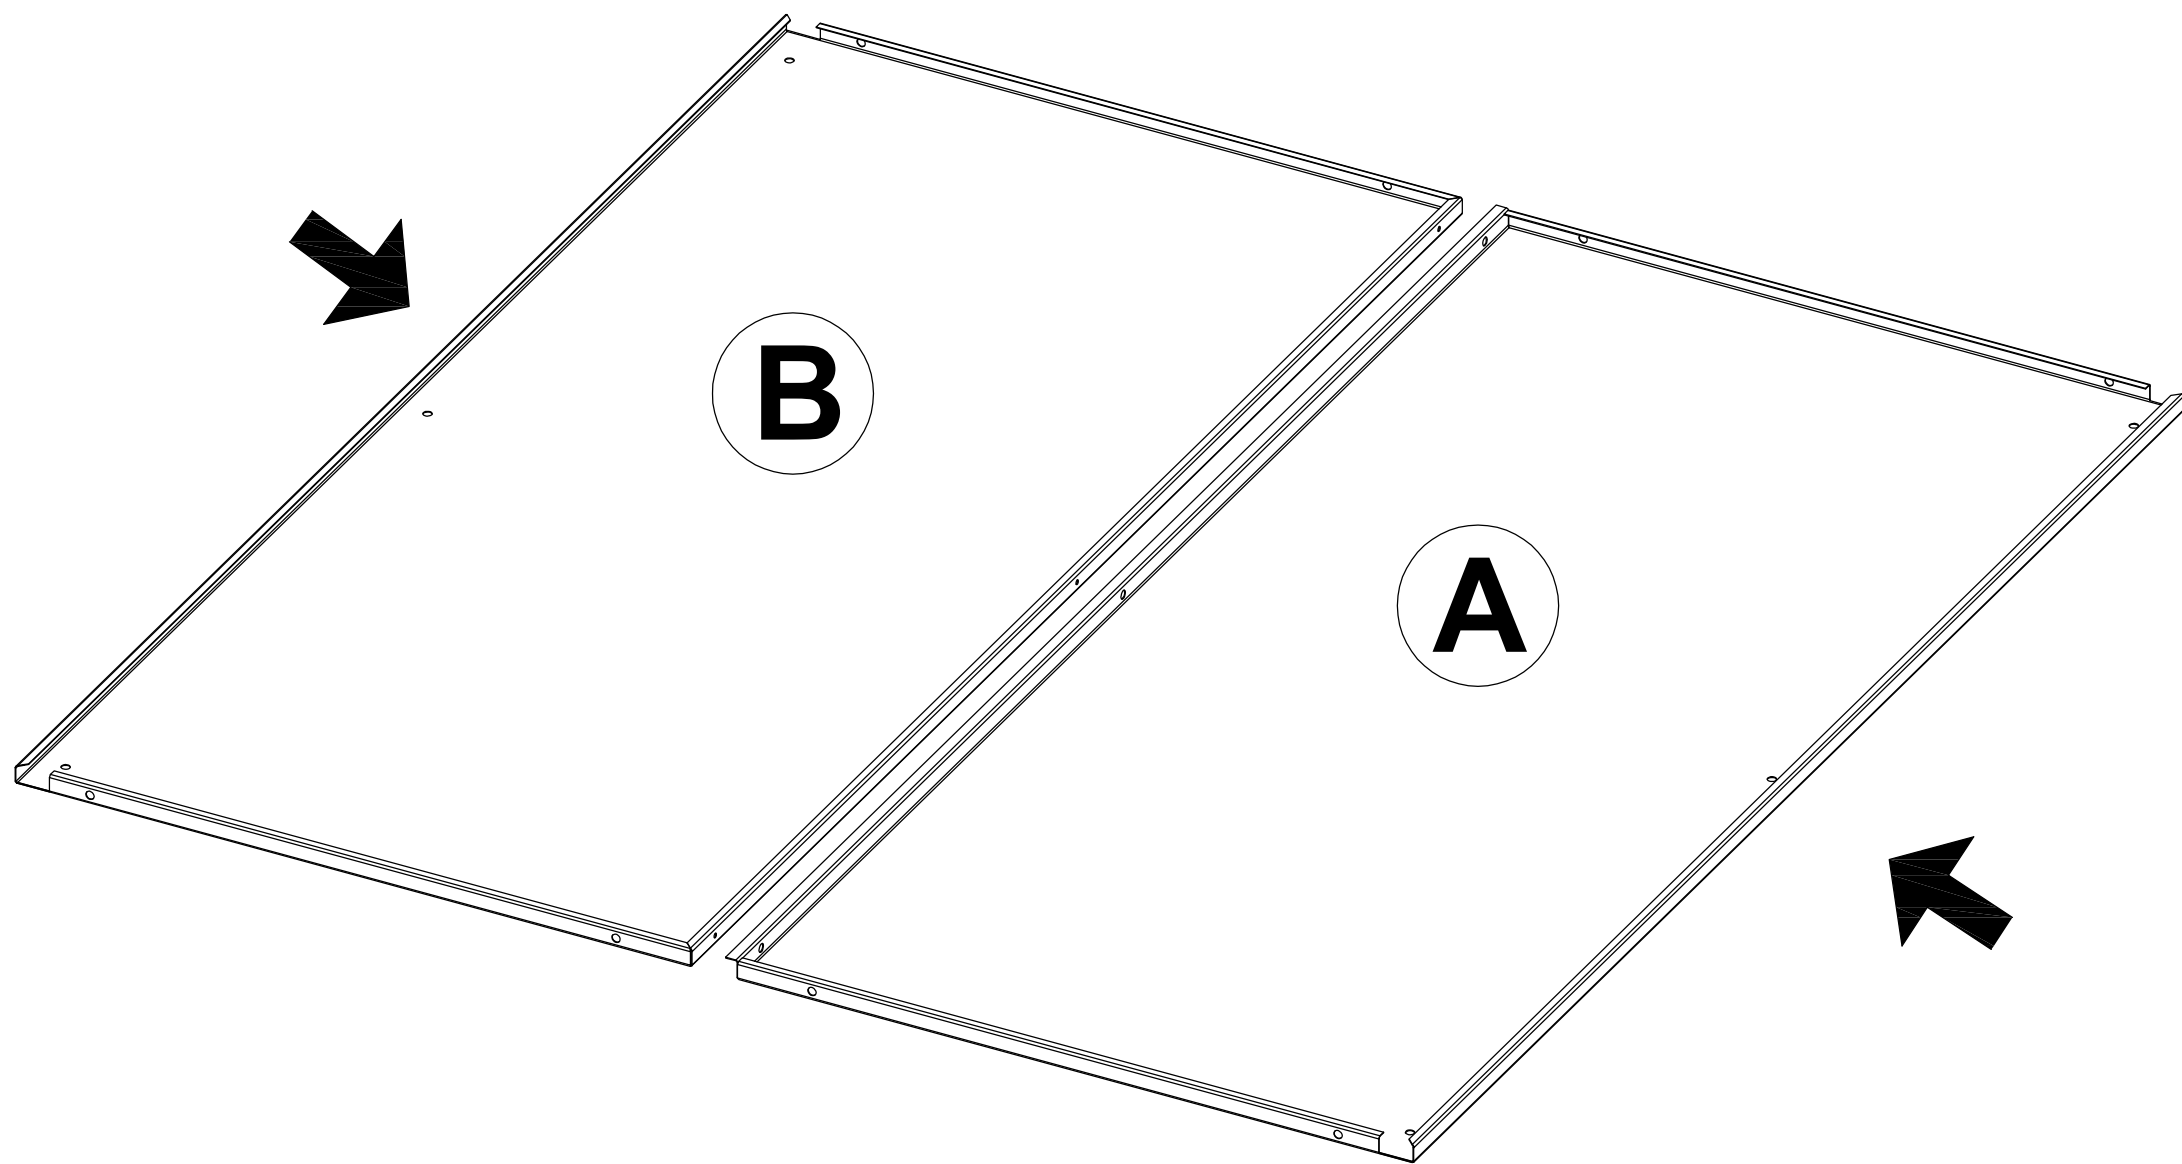

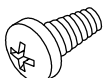N  **3 PCS**

Step 2


Connect panel C to panel A and panel D to panel B, then align the hole position and secure with screw N.

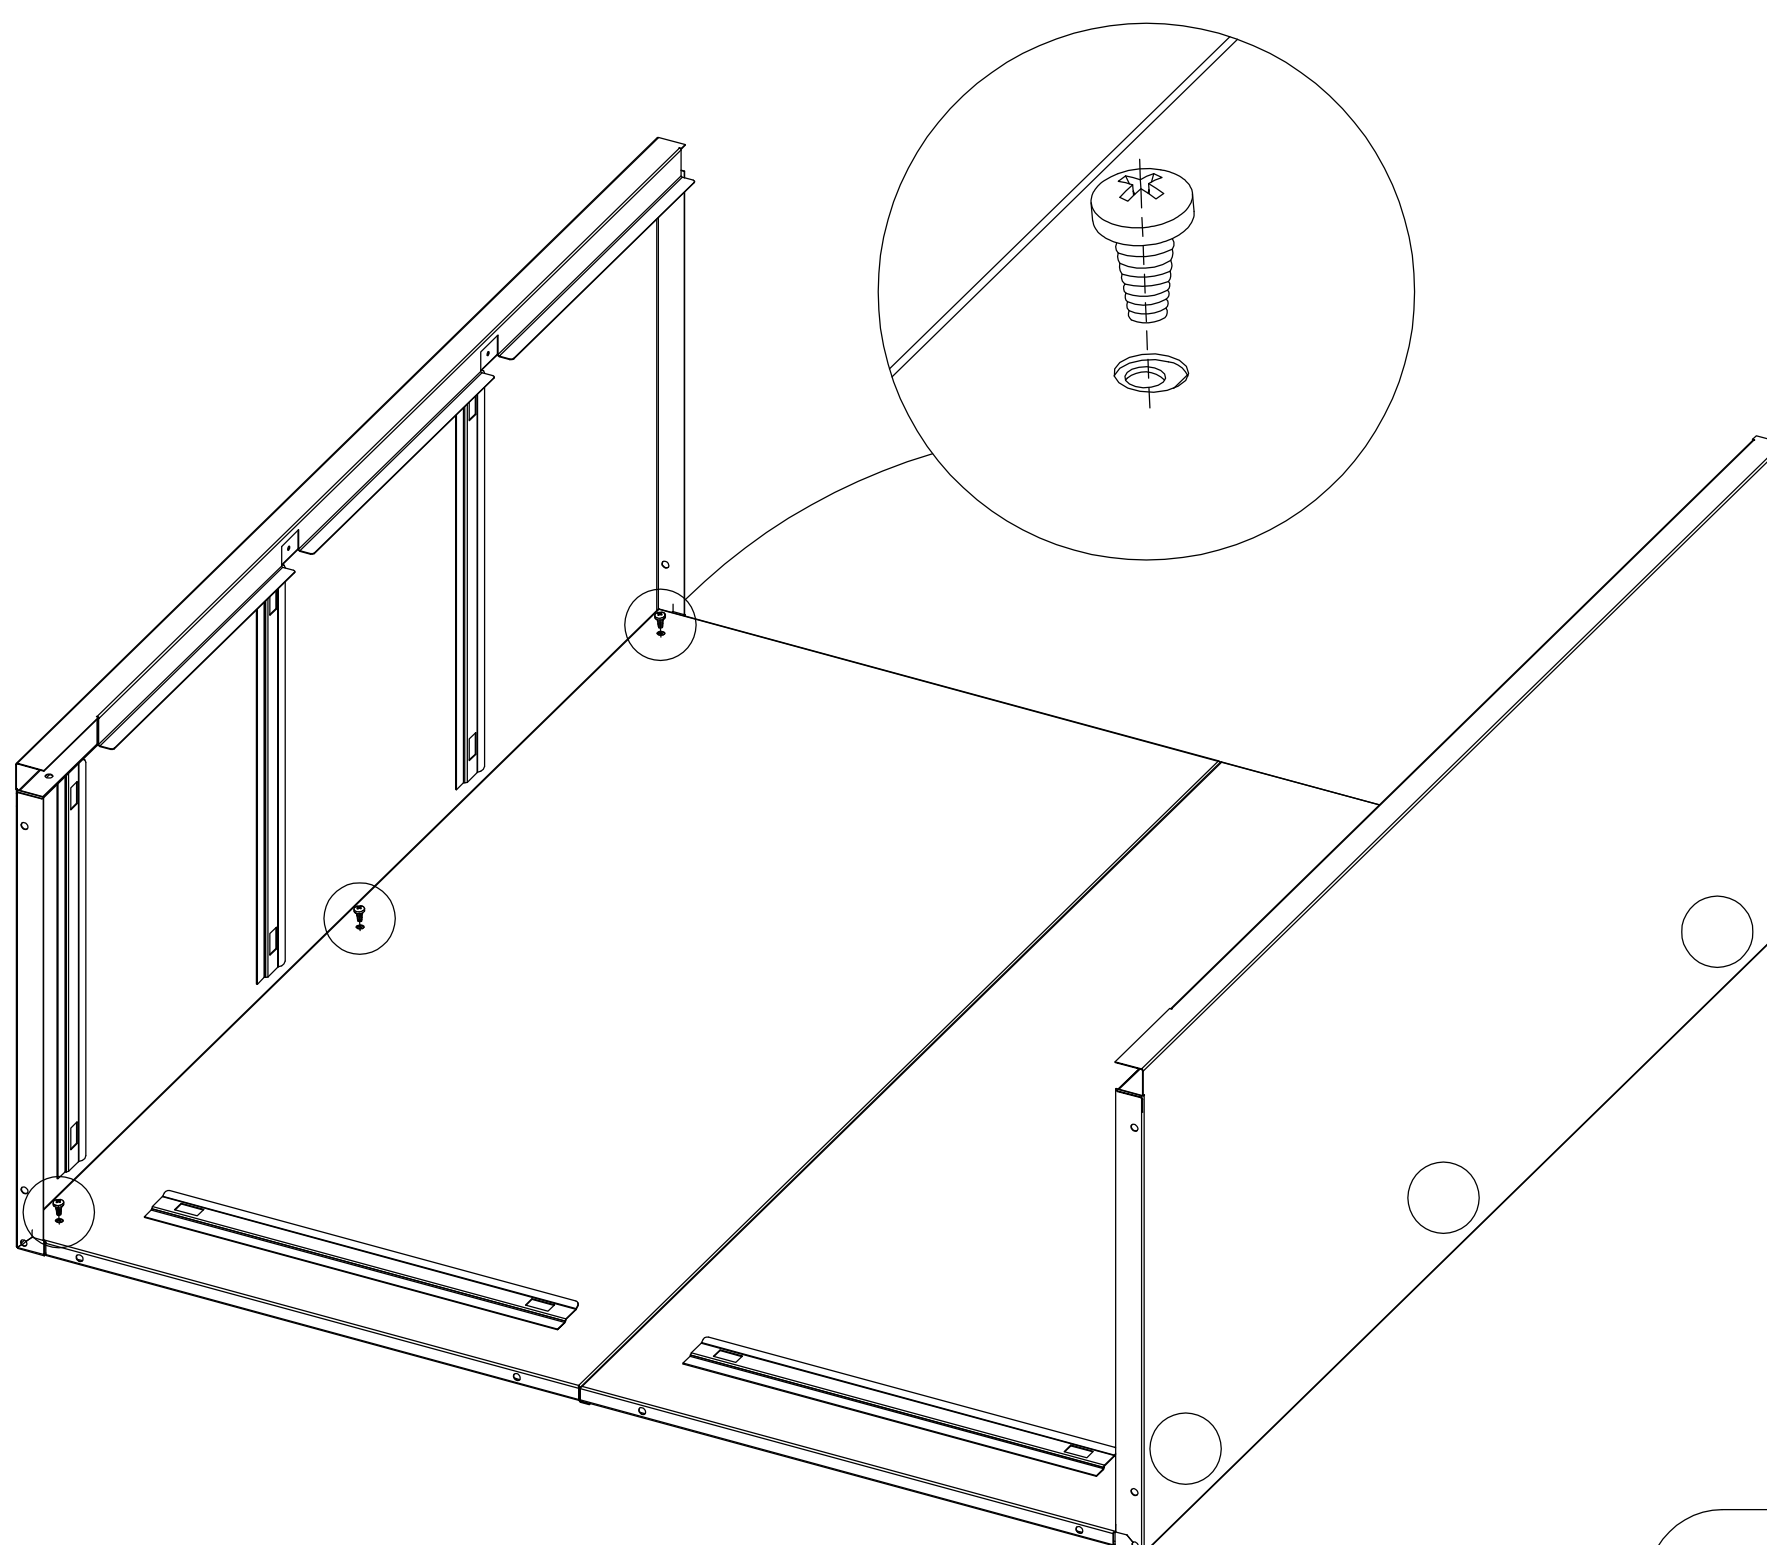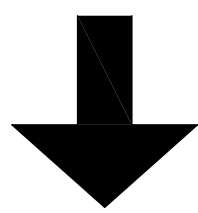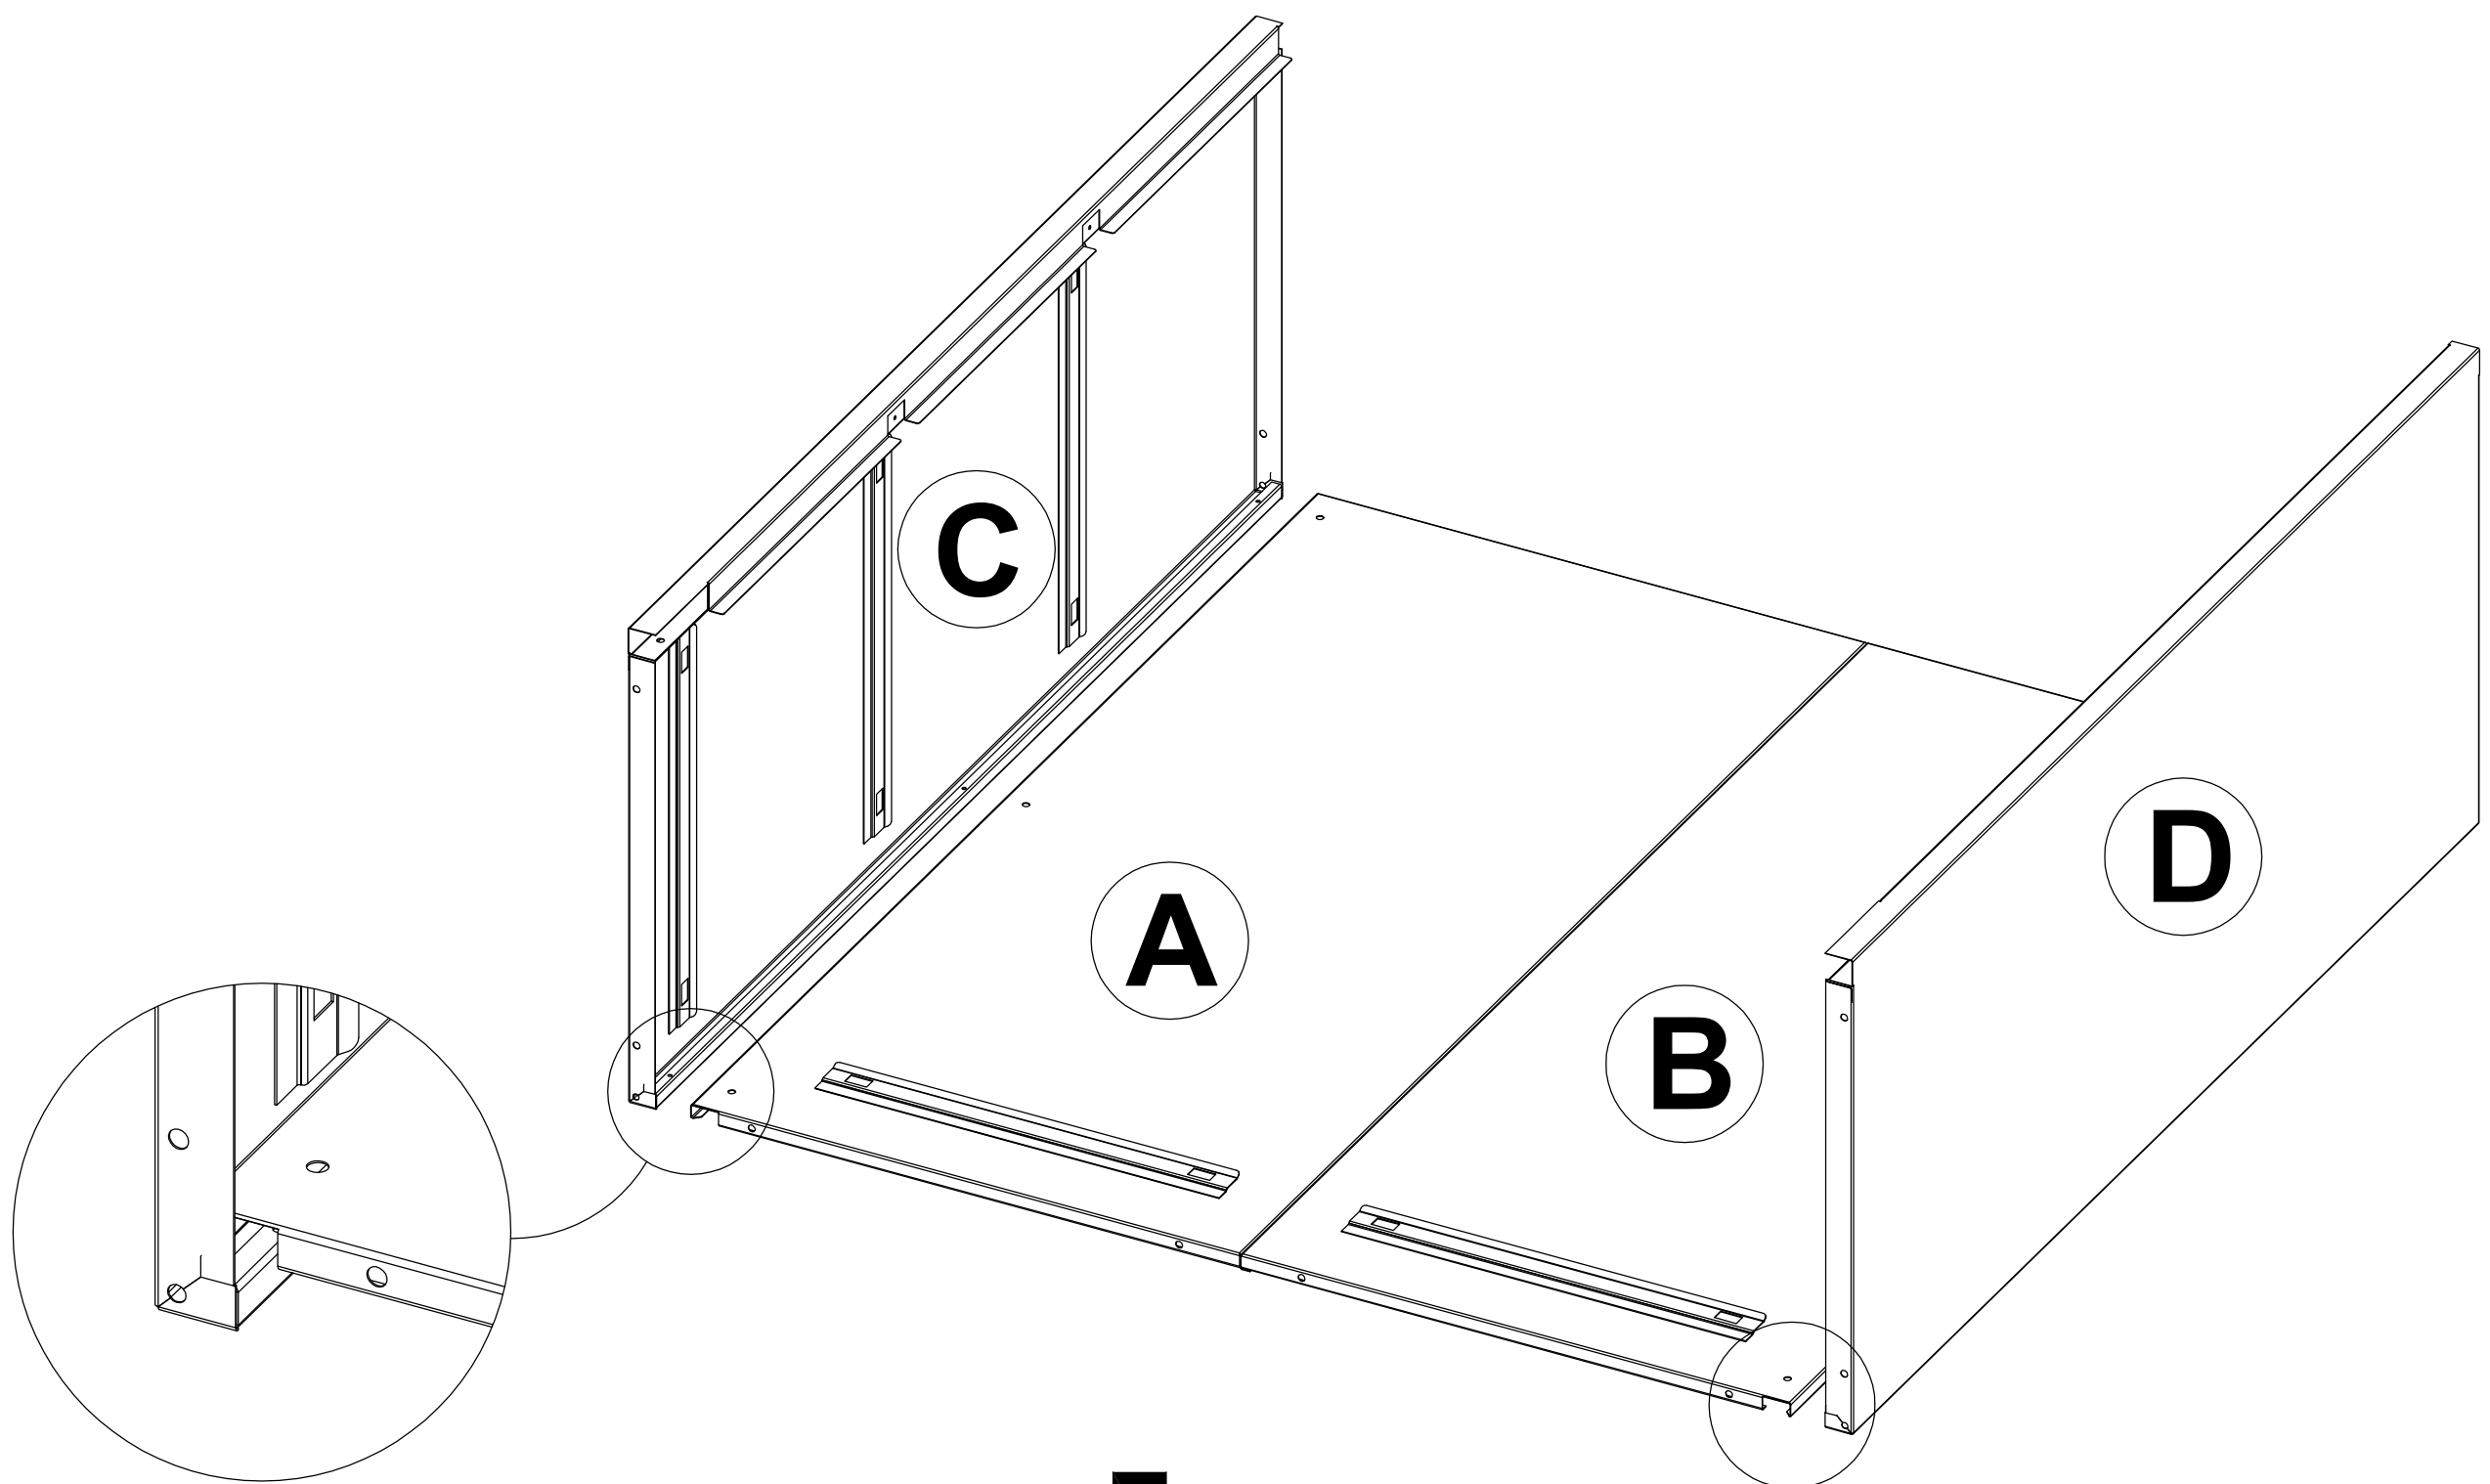

N  6 PCS


Step 3

Install the frame F to the top of the C and D.
Drive two screws on each side.

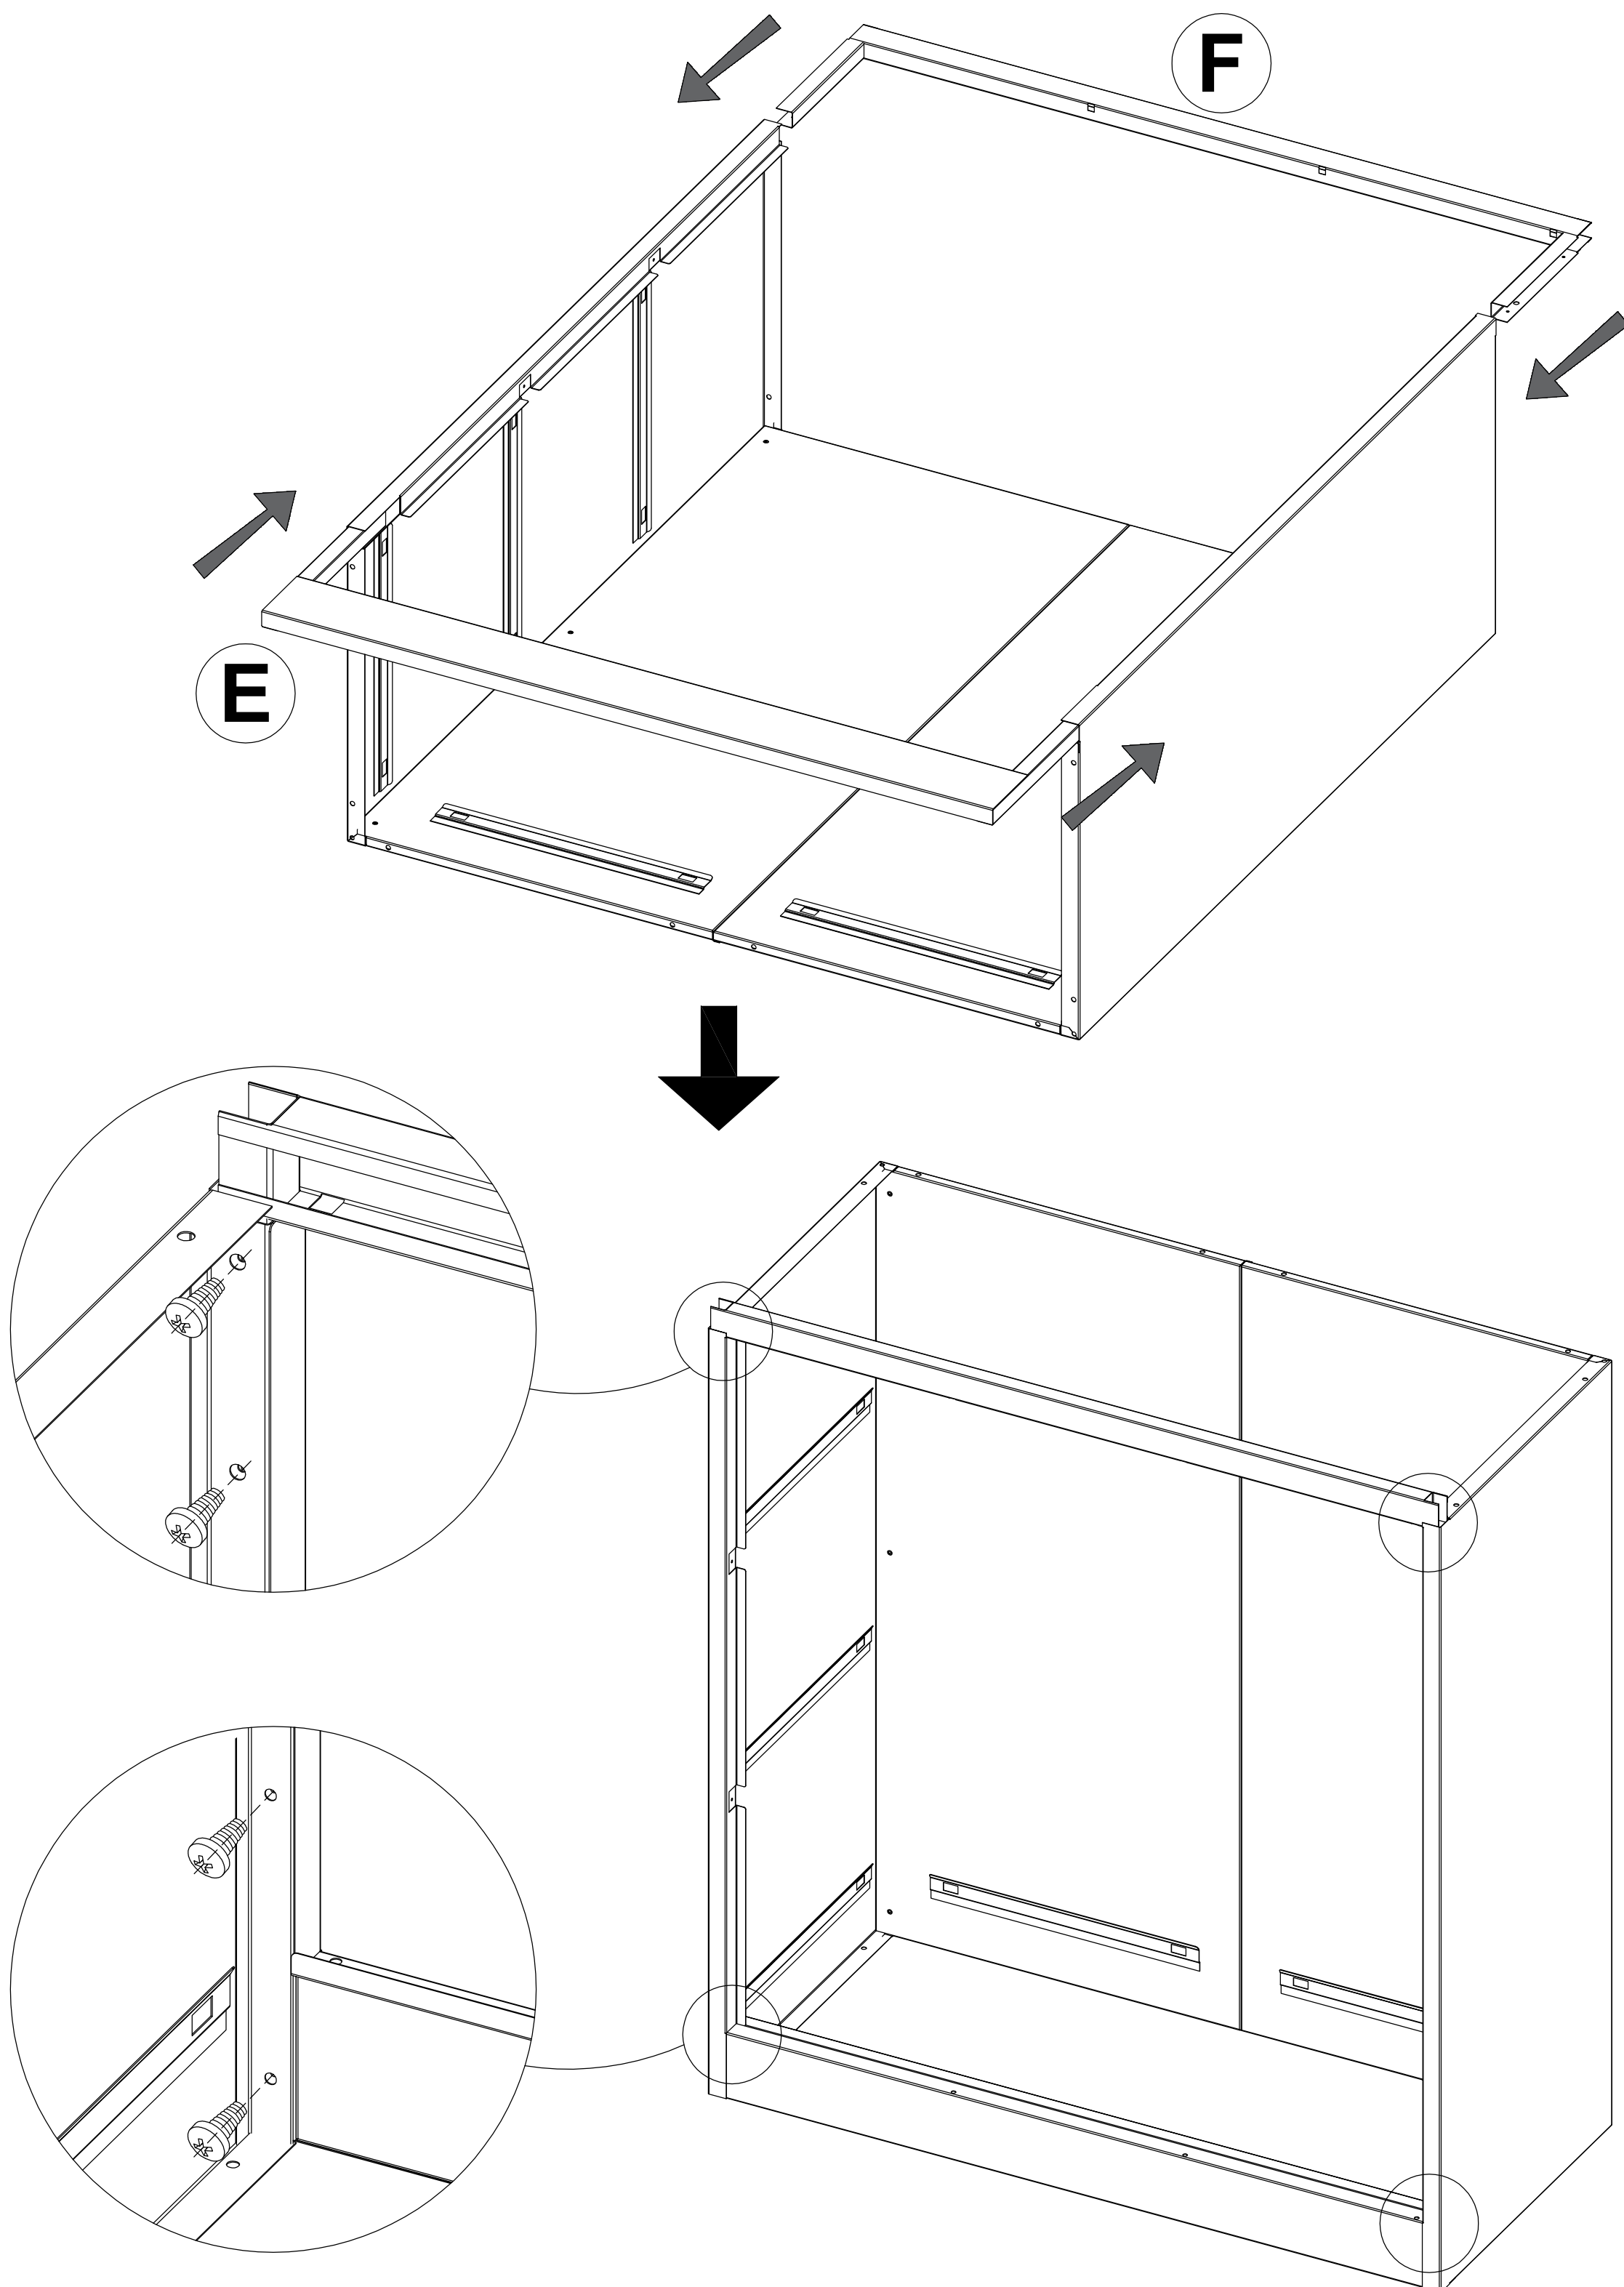

Insert frame E into the bottom of side panel C and D.
Drive two screws on each side.


N

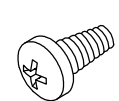


8 PCS

Step 4

Set the frame G at the middle of the C D position.
Drive three screws on each side.

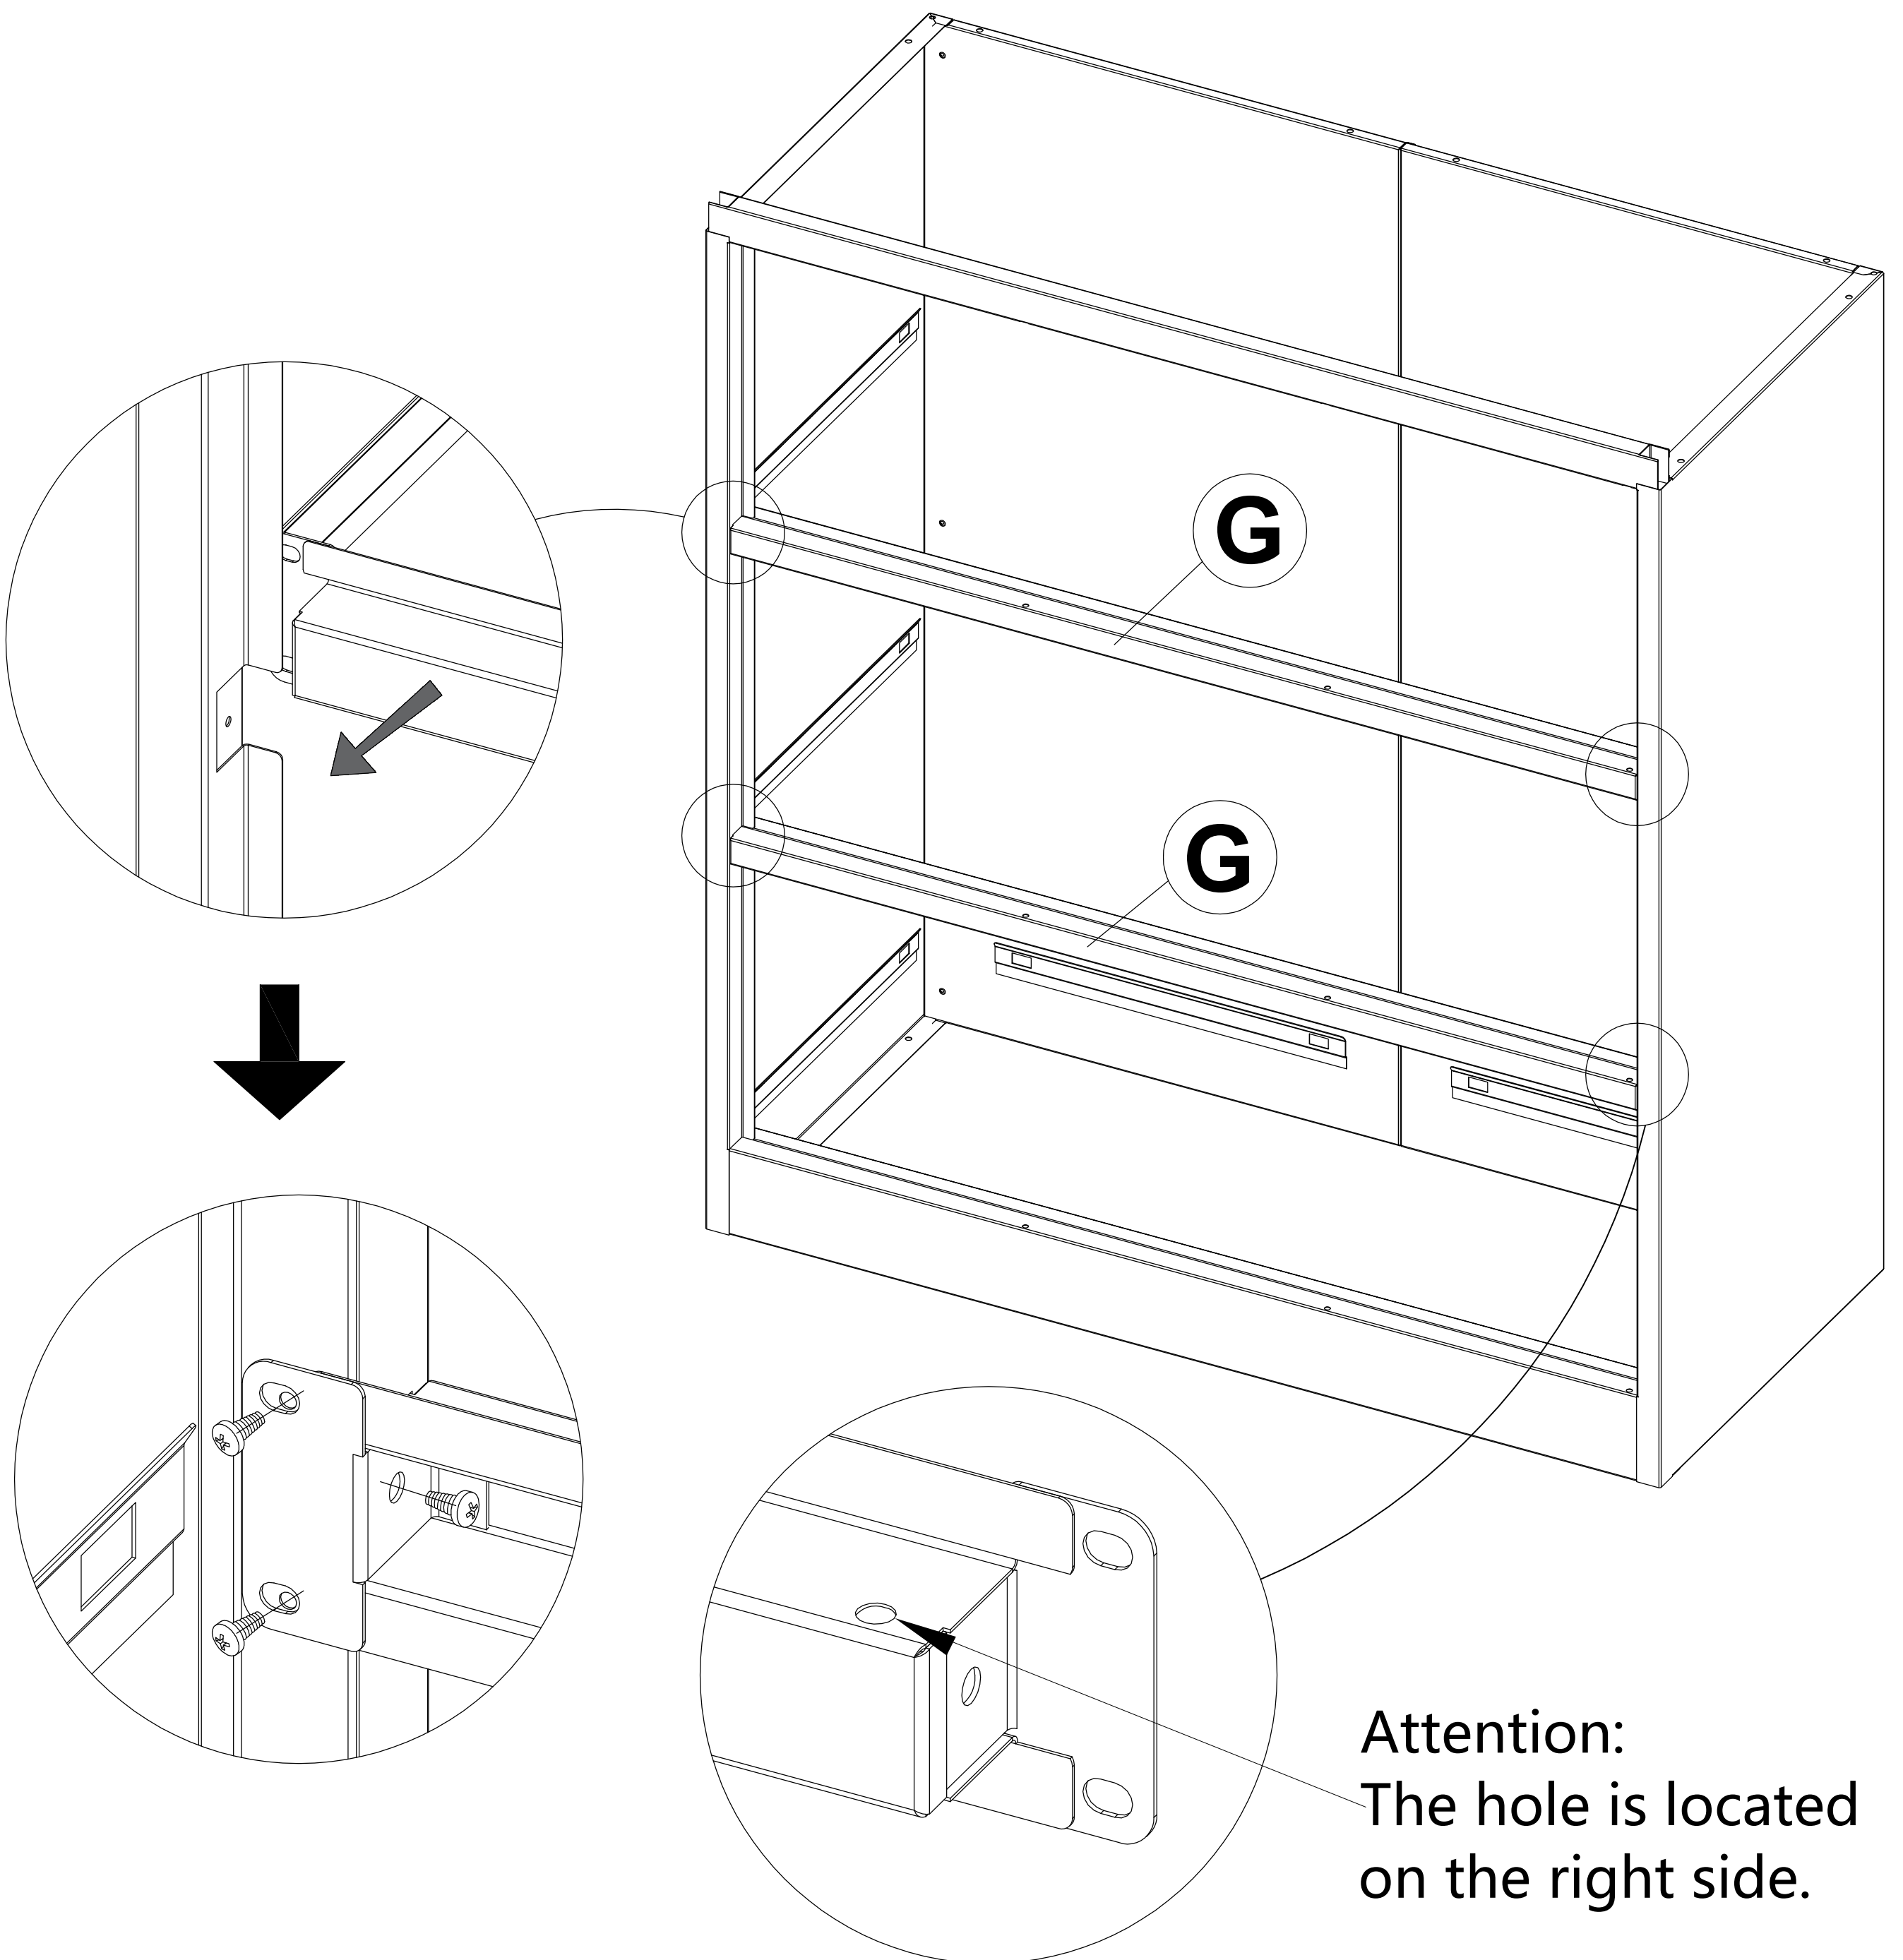


N

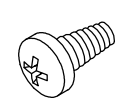

12 PCS


Step 5

Insert the bottom panel I starting at the front and push it down all the way into place.



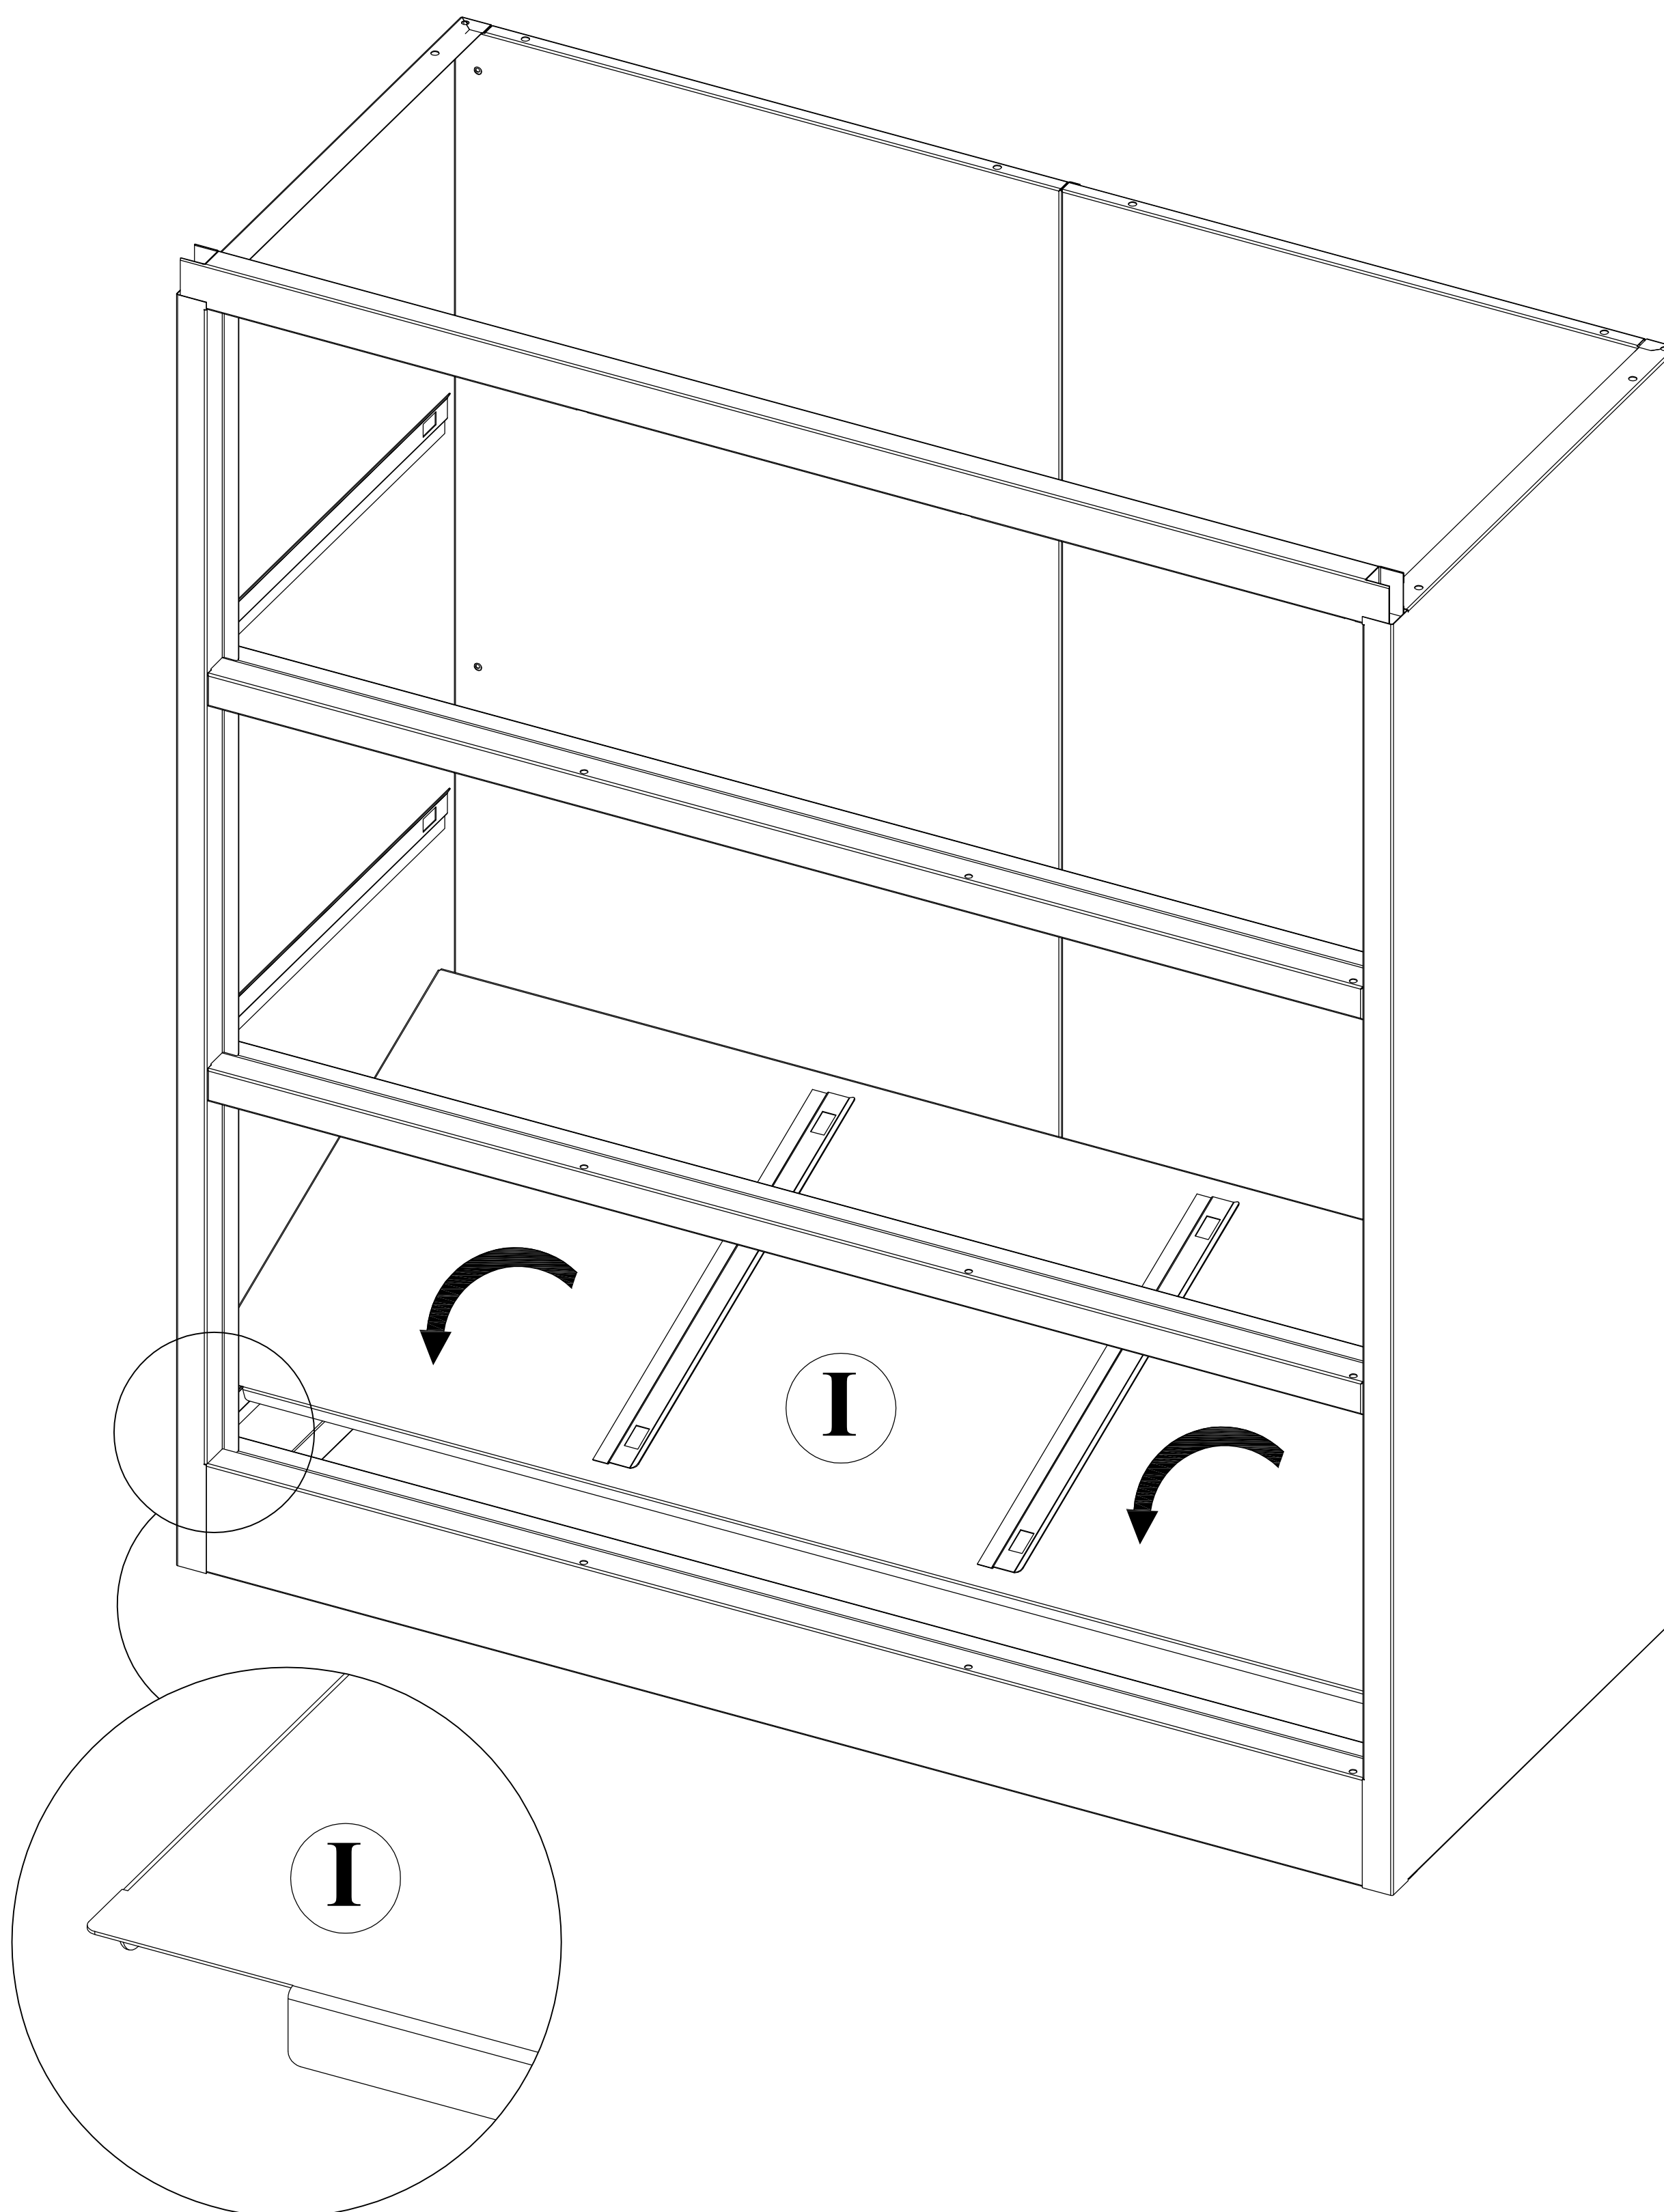


Step 6


Insert the bottom panel H starting at the front and push it down all the way into place.

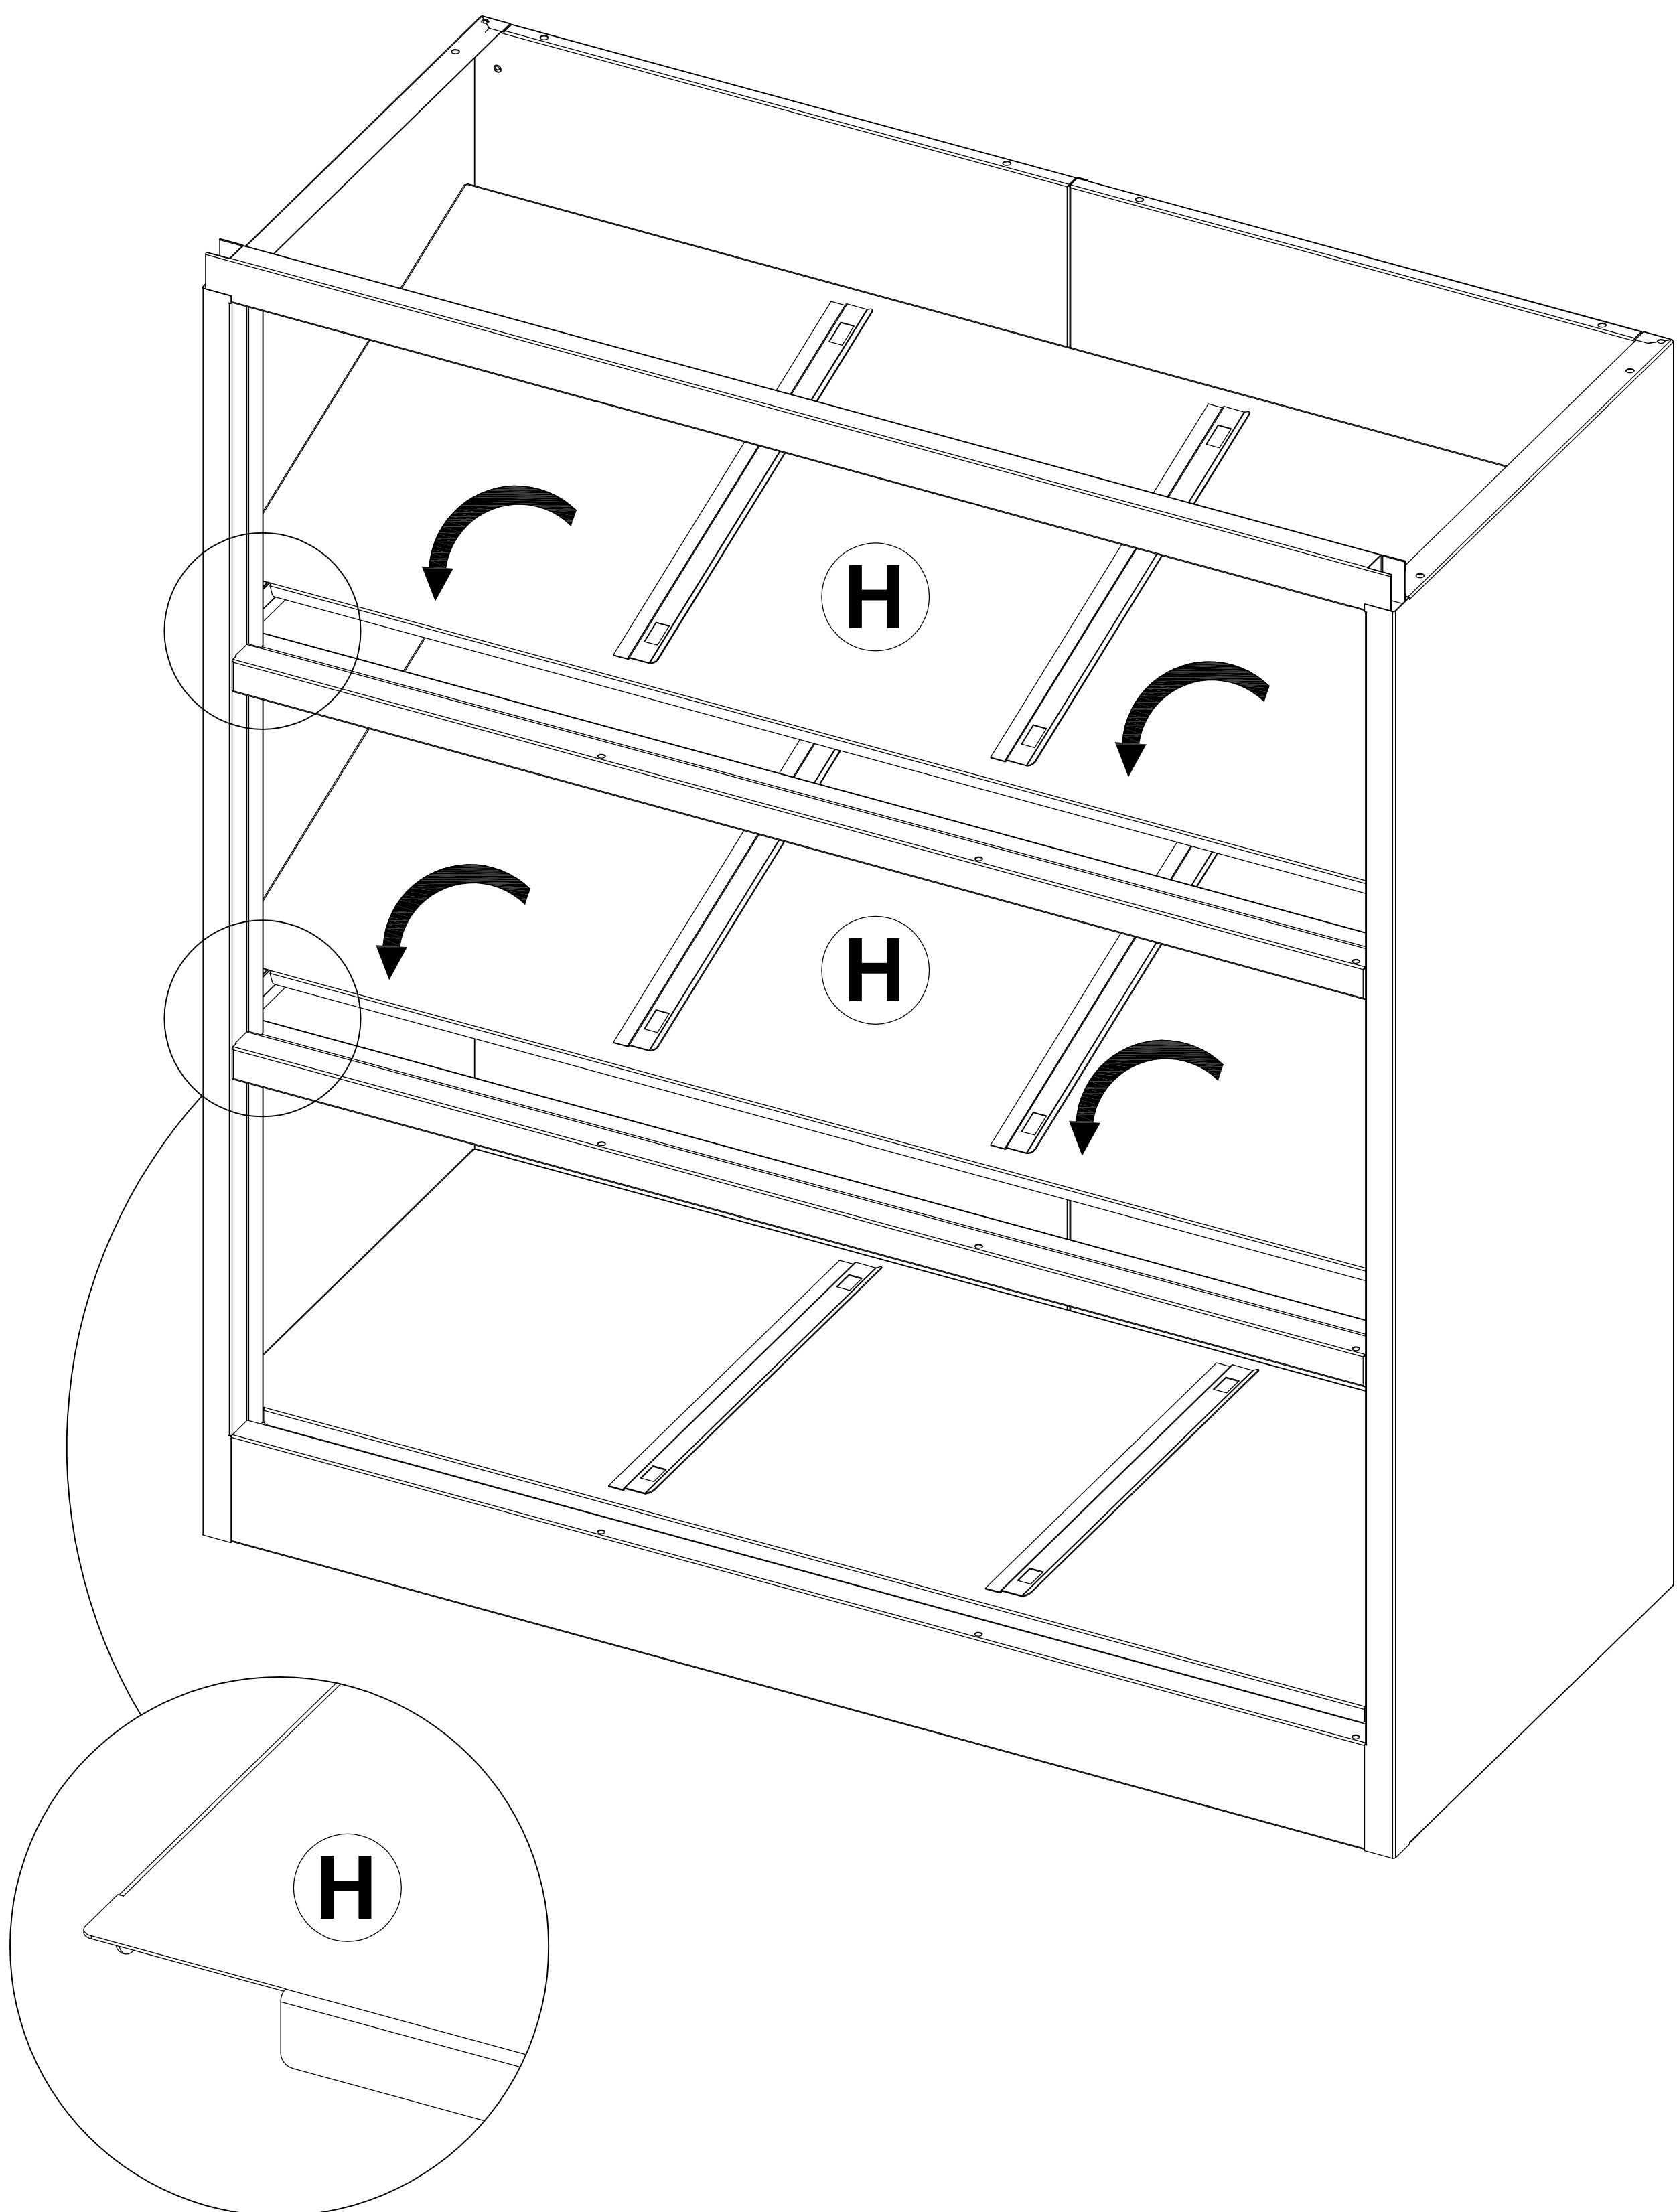

Step 7 Push the top plate J from front to back and fix it in the top position, then align the holes and fix them with 8 screws N.

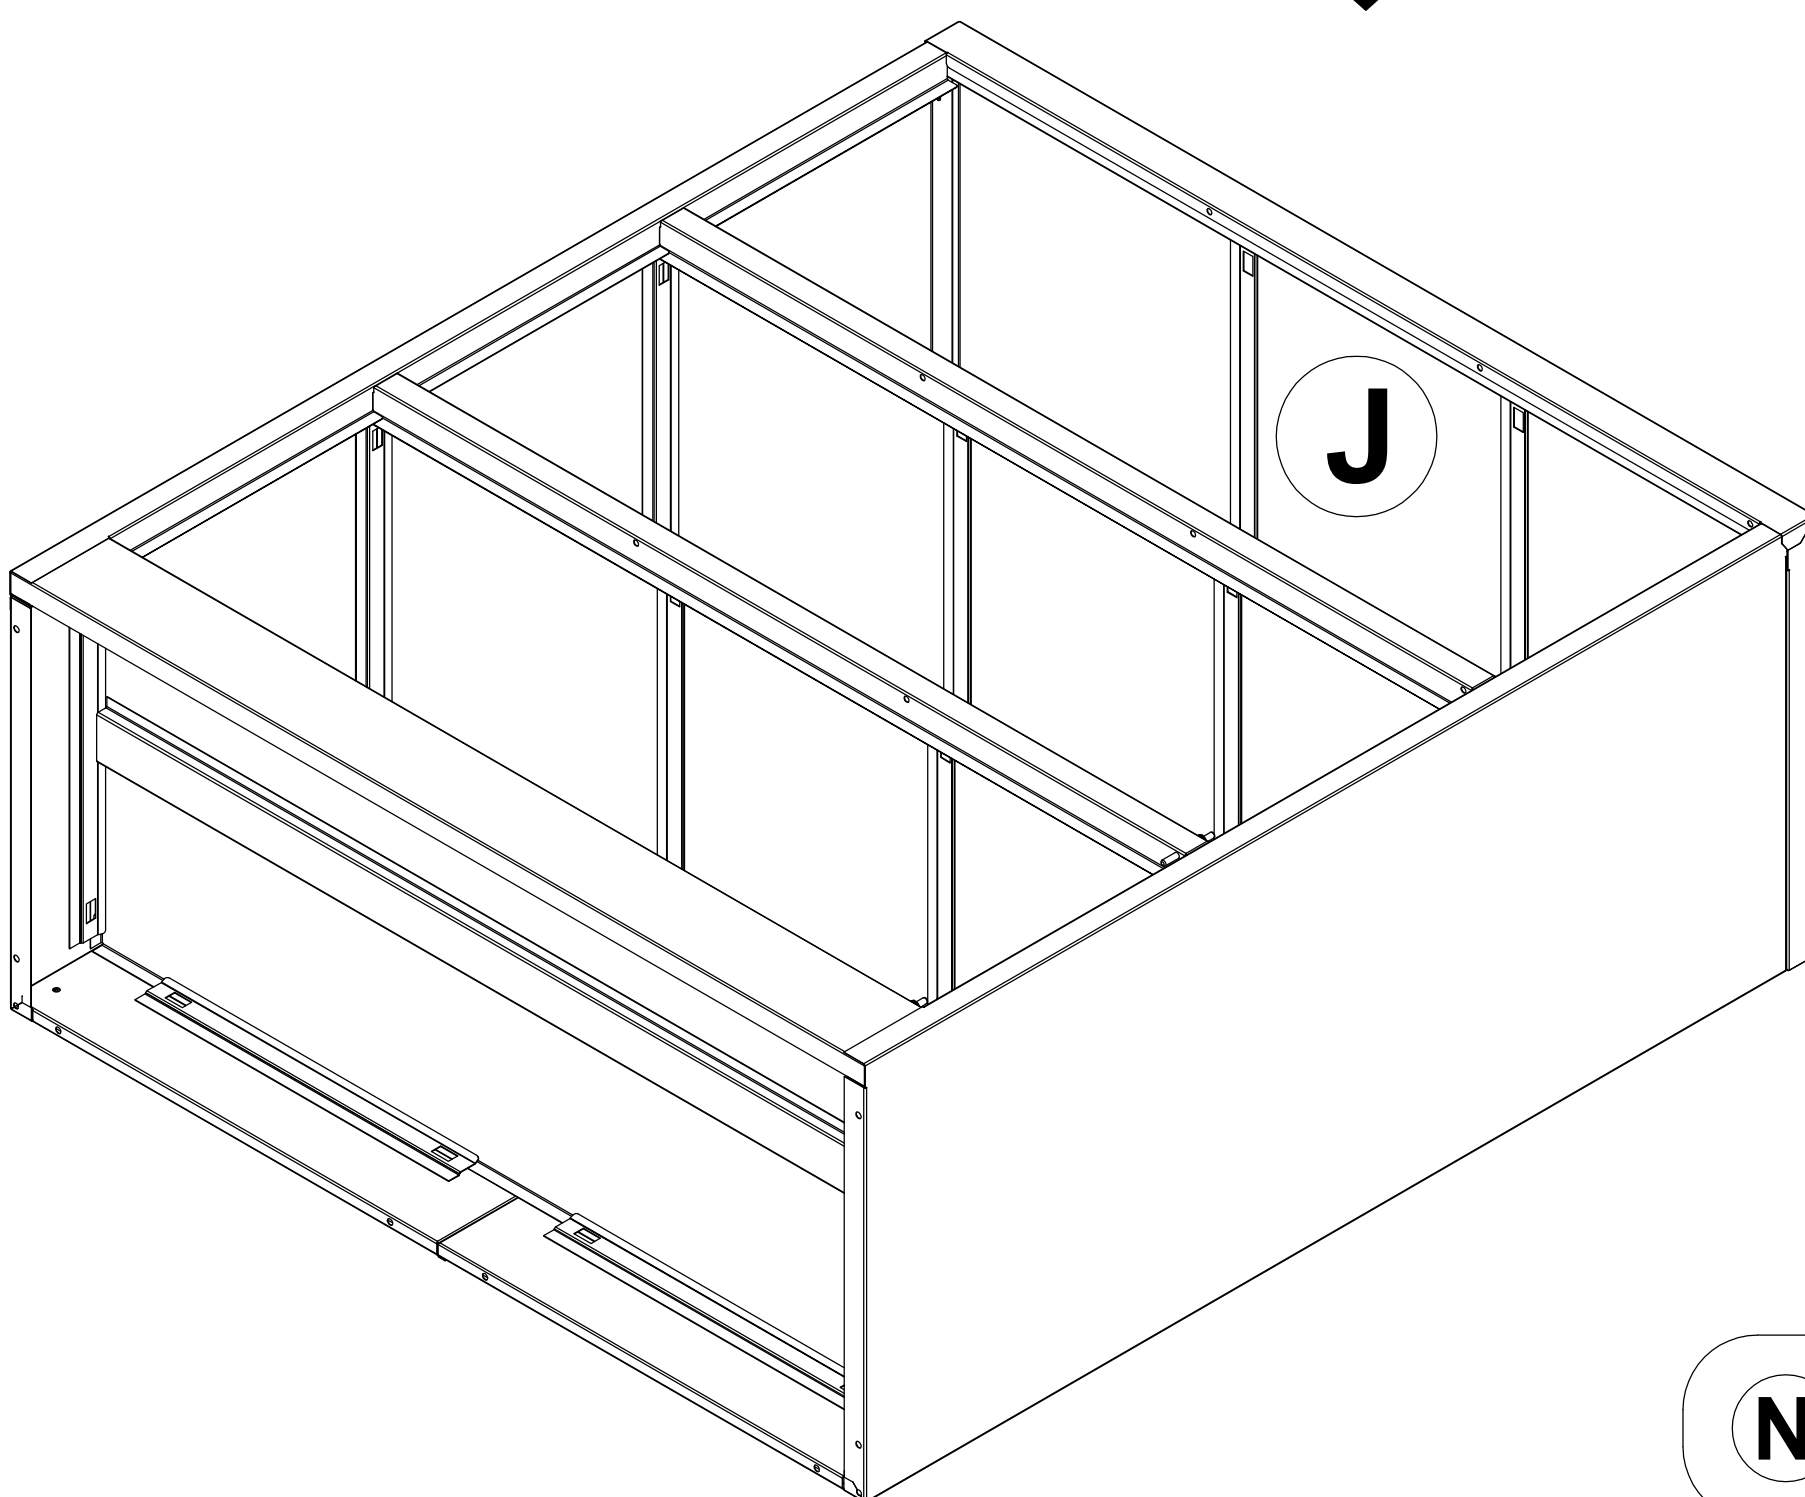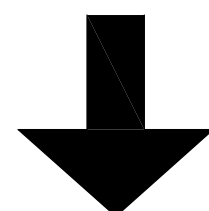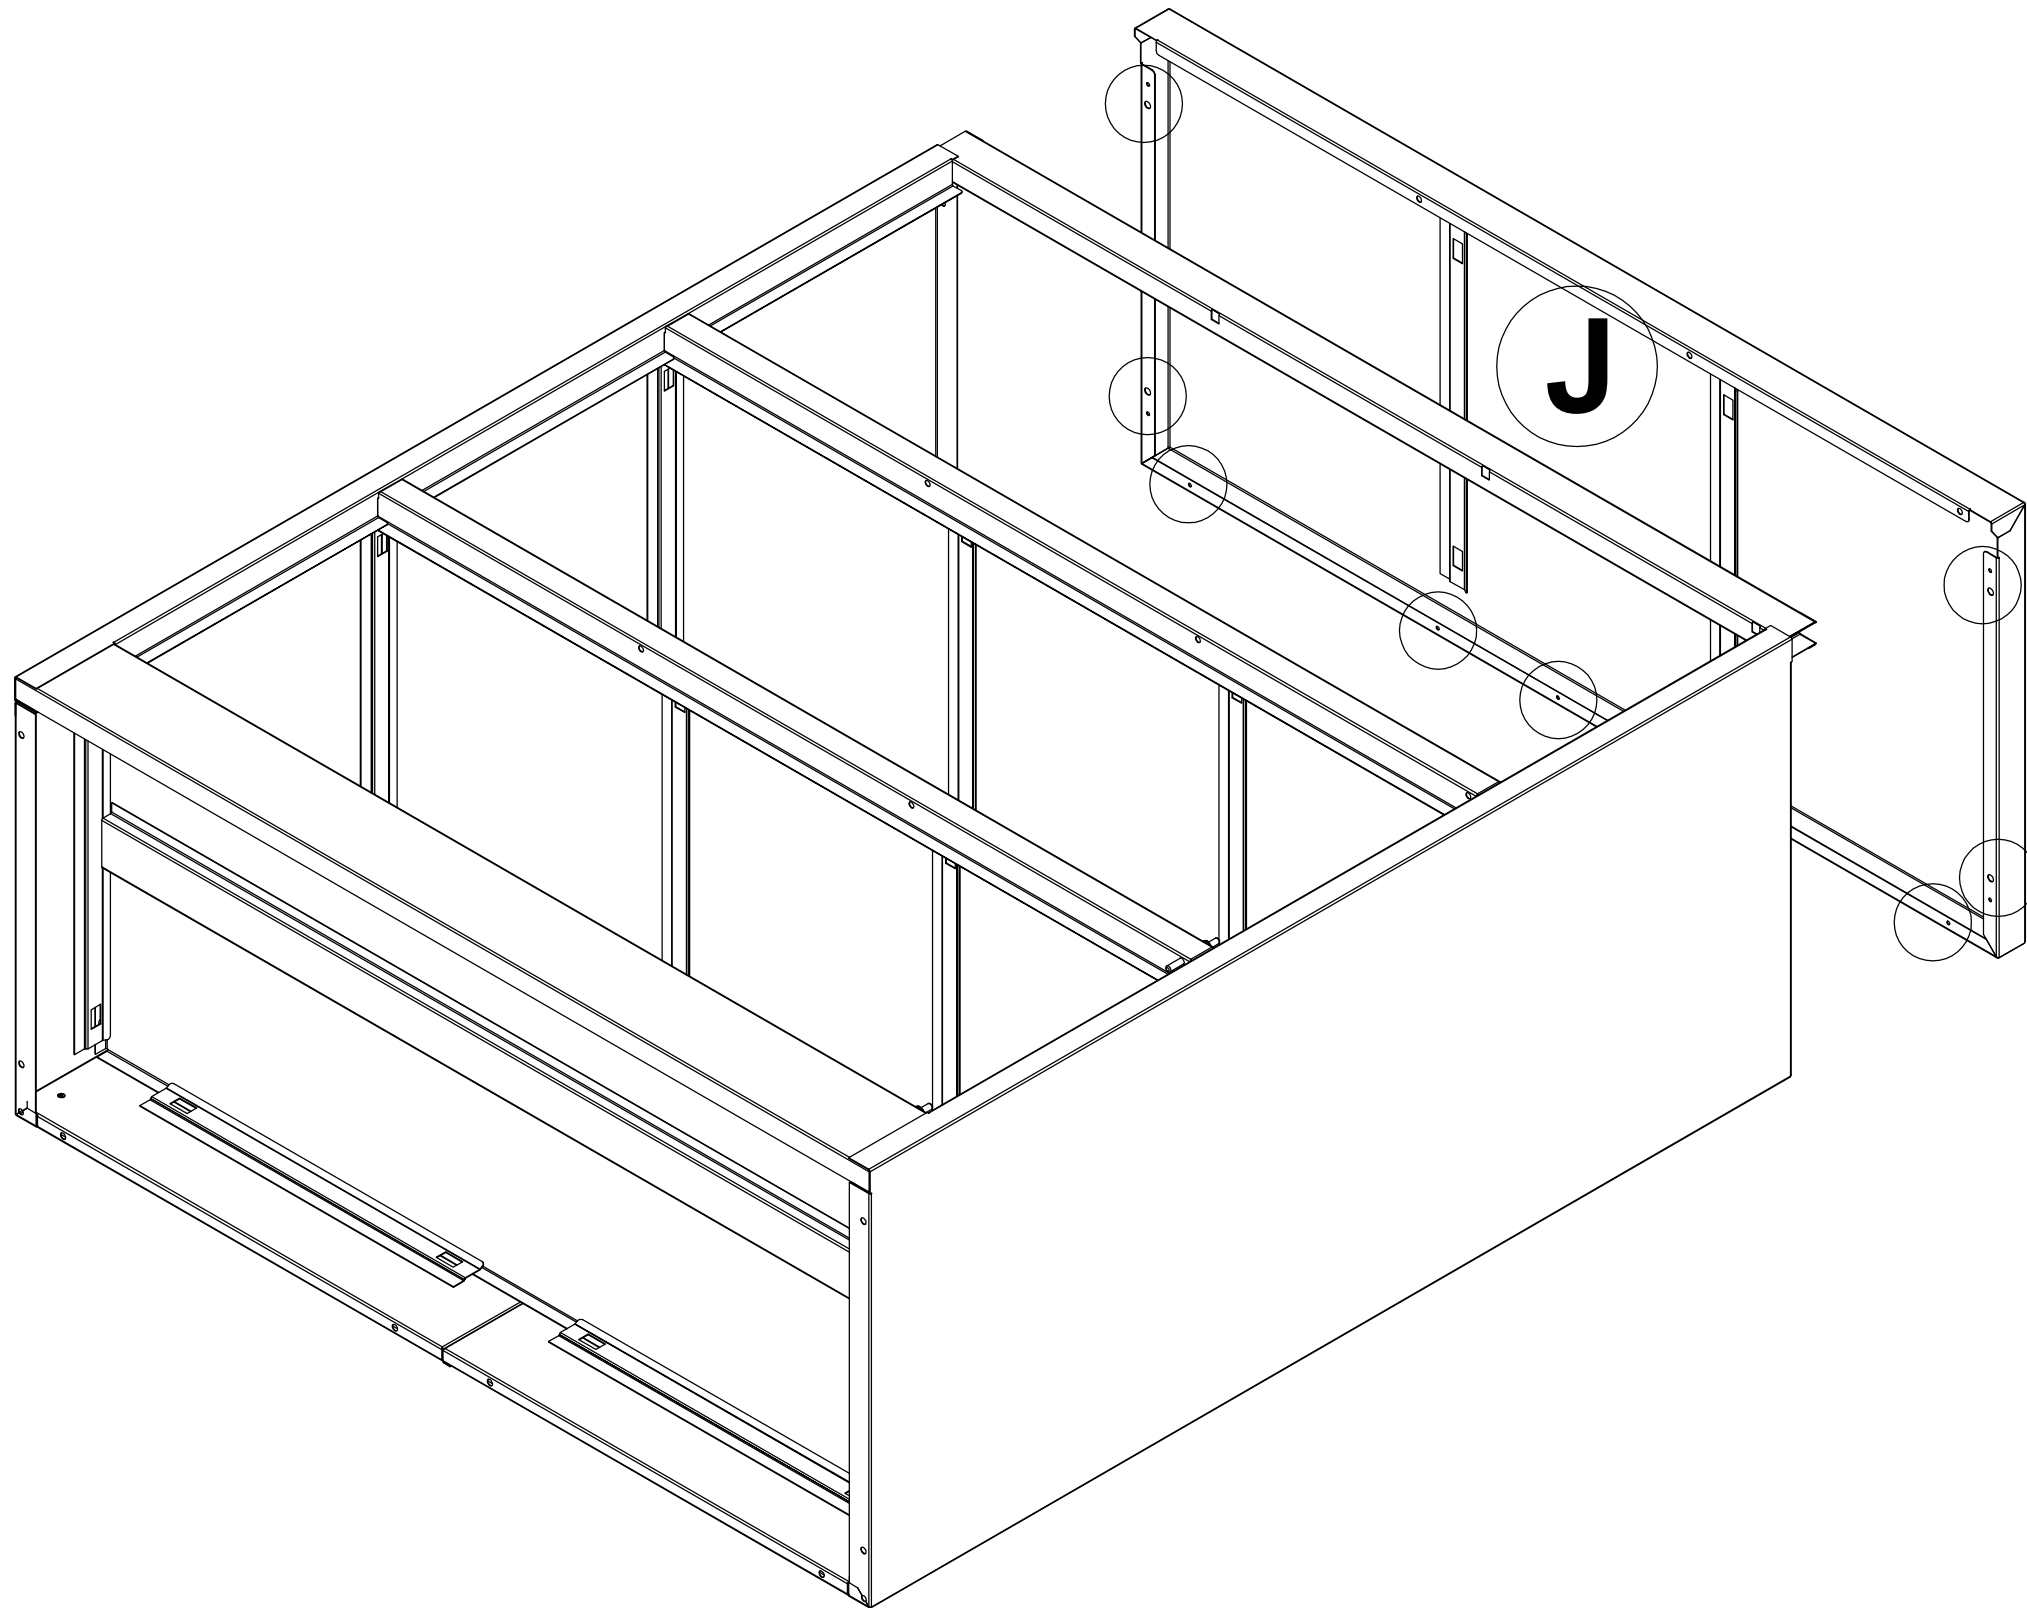


N

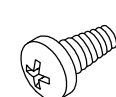

8 PCS


Step 8



Install the middle plate K and fix it on the top plate J middle plate H and on the bottom plate I.

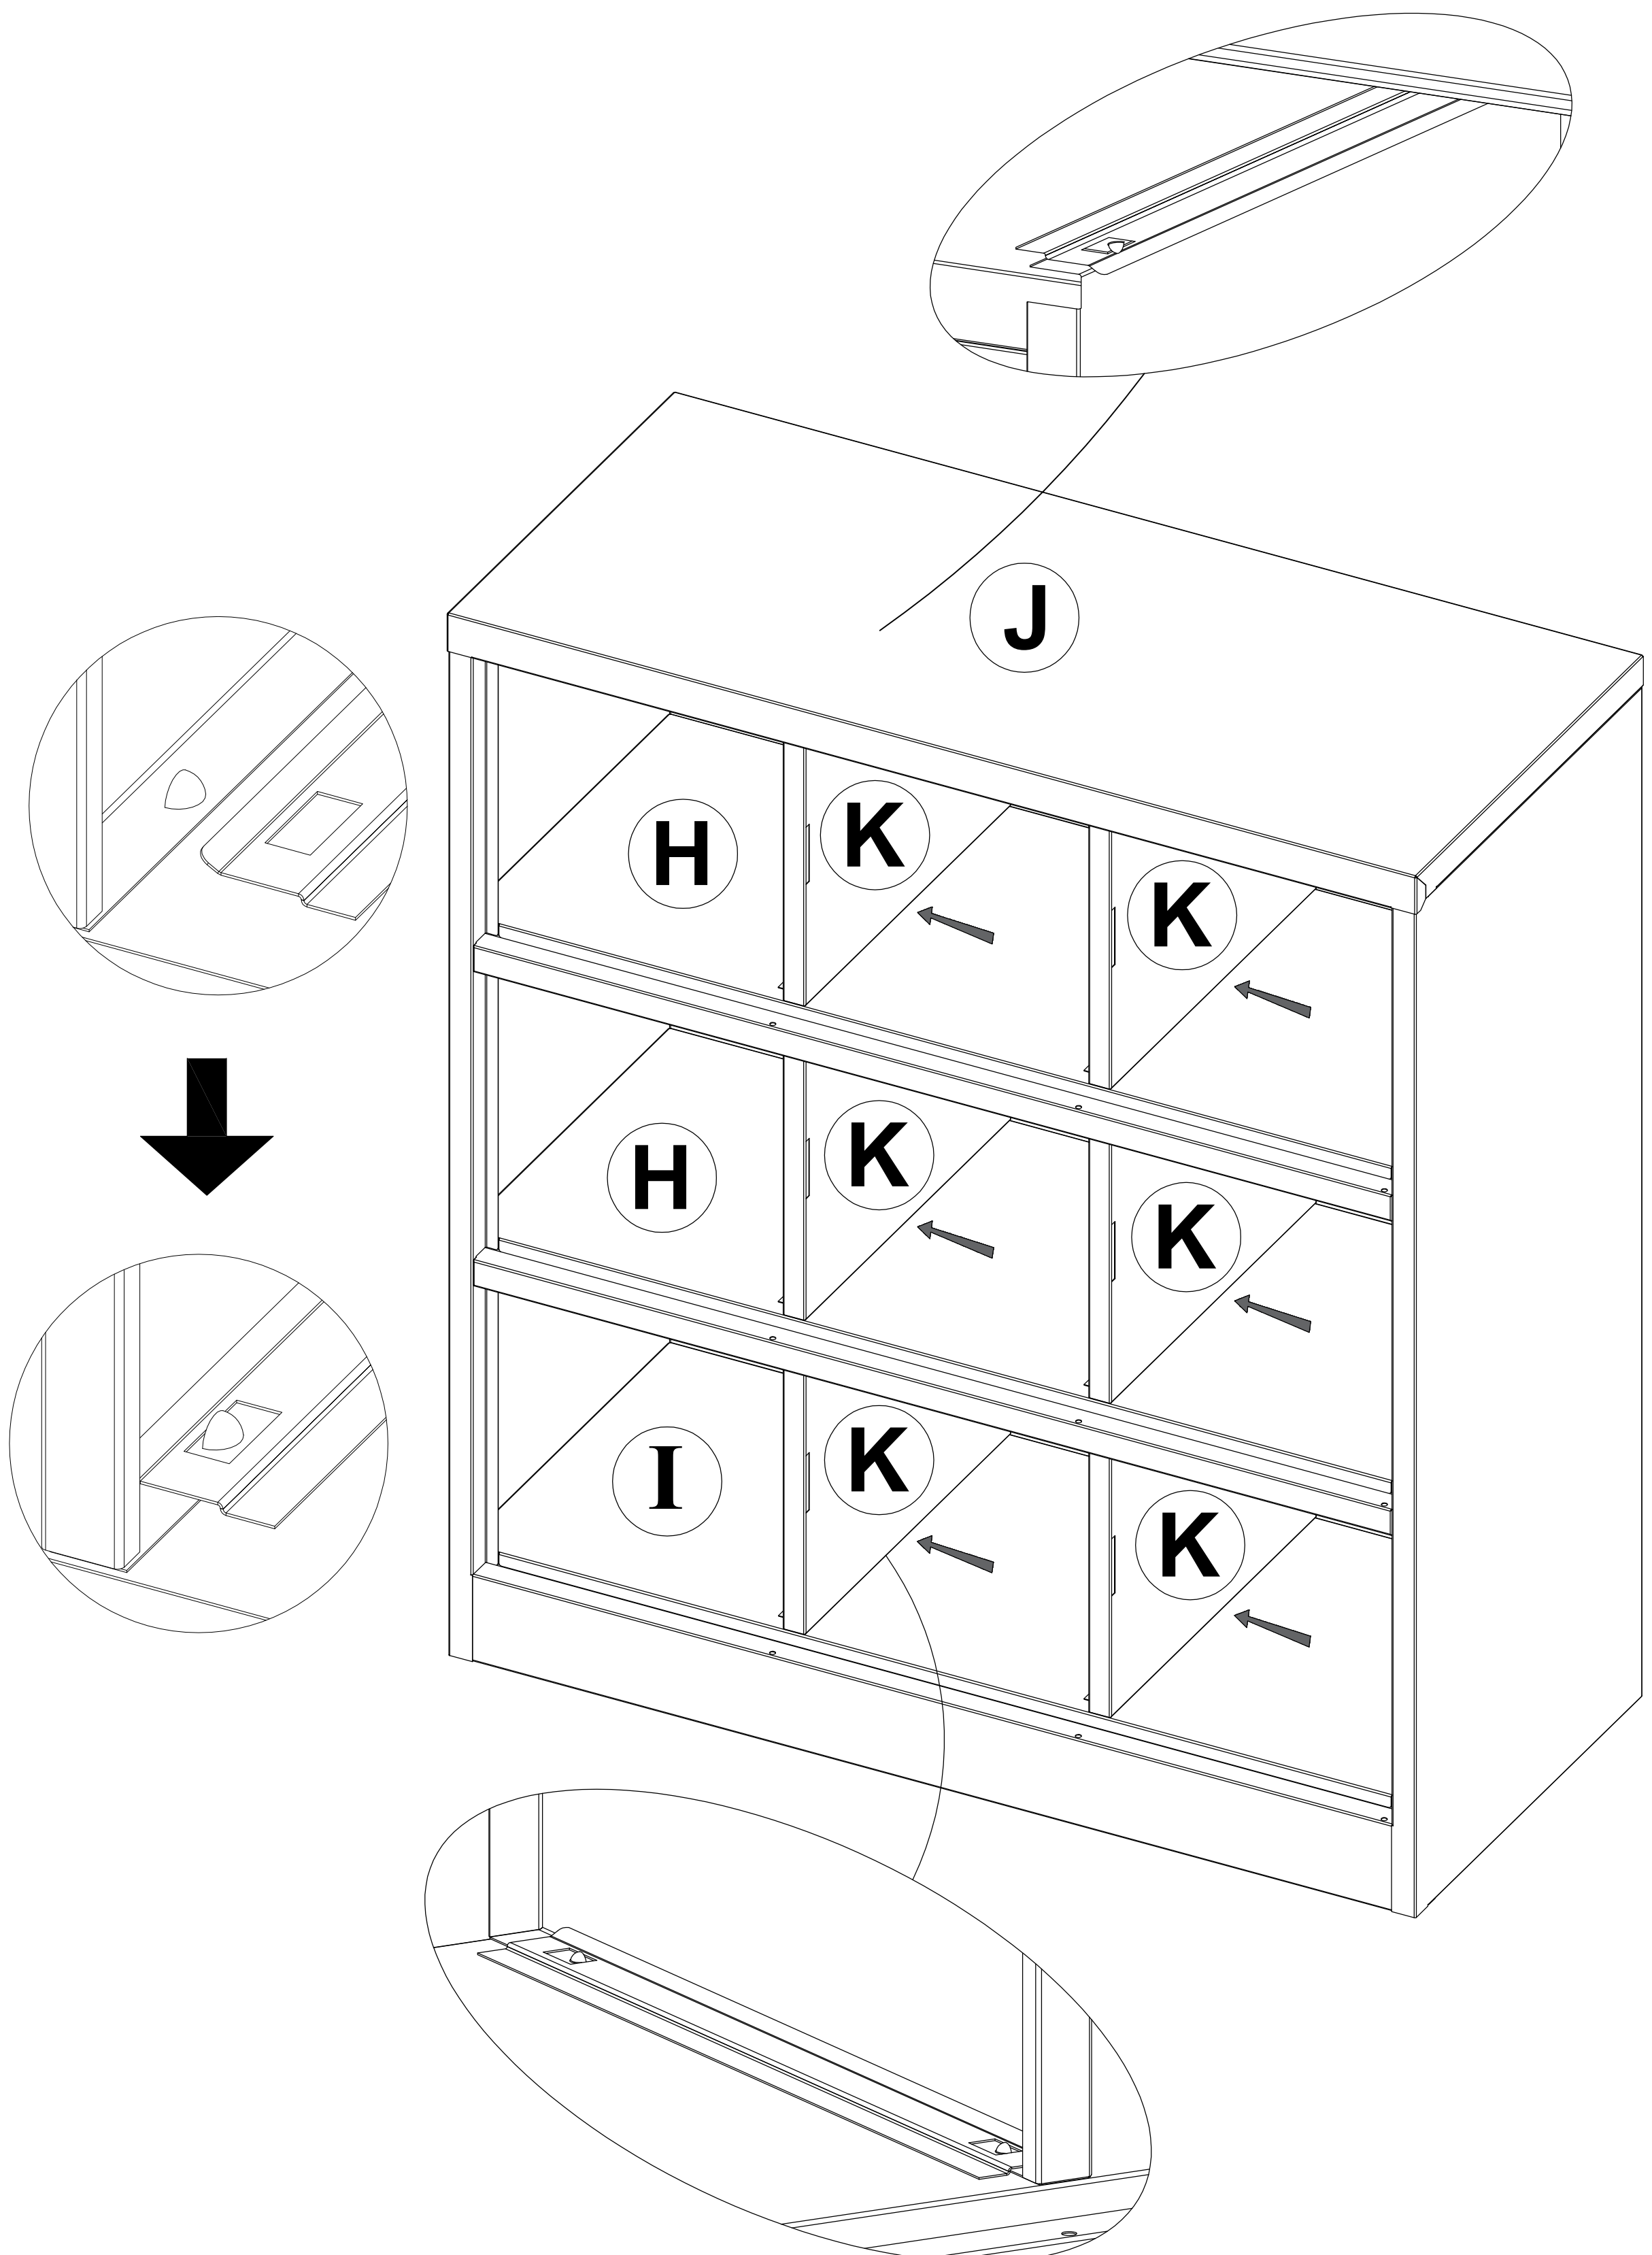

Step 9


Press lock S into the door and install door pad R on the door above.

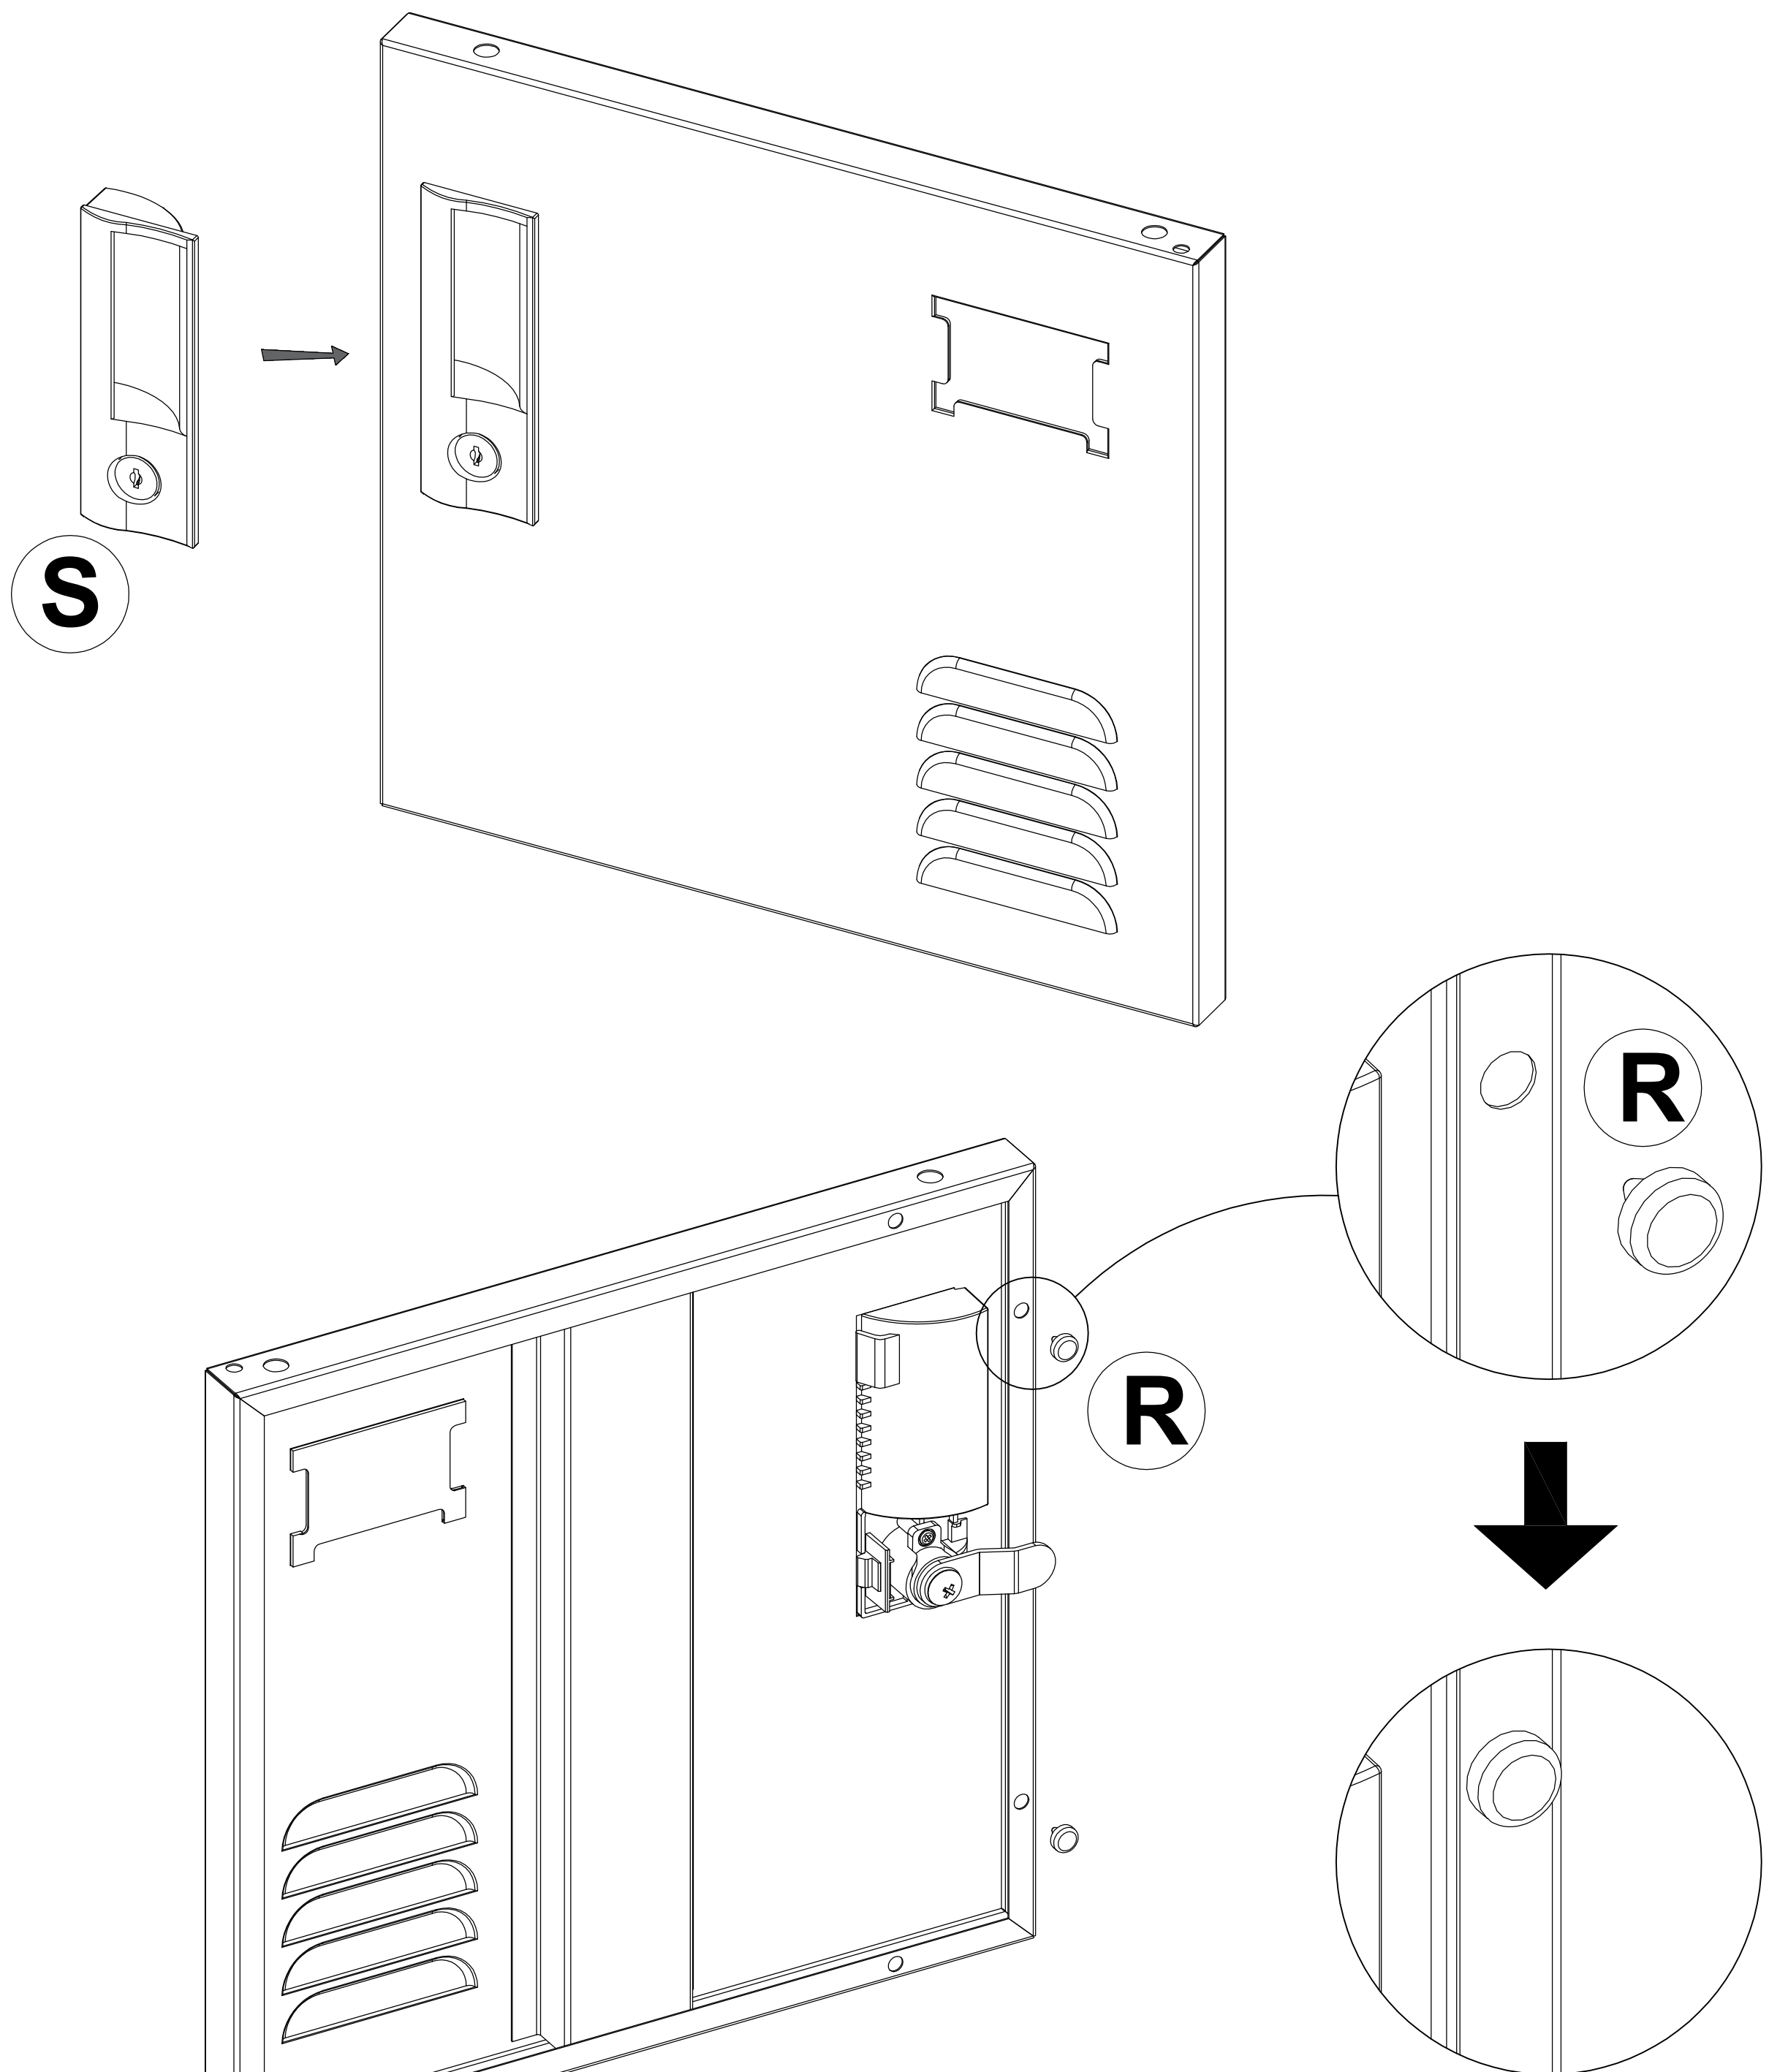

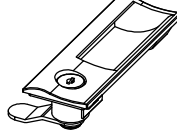
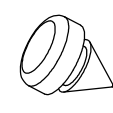
S		9 PCS
R		18 PCS

Step 10

Insert metal post P and washer O into the bottom.
Then insert the long metal post Q through the frame G into the Door shaft hole.

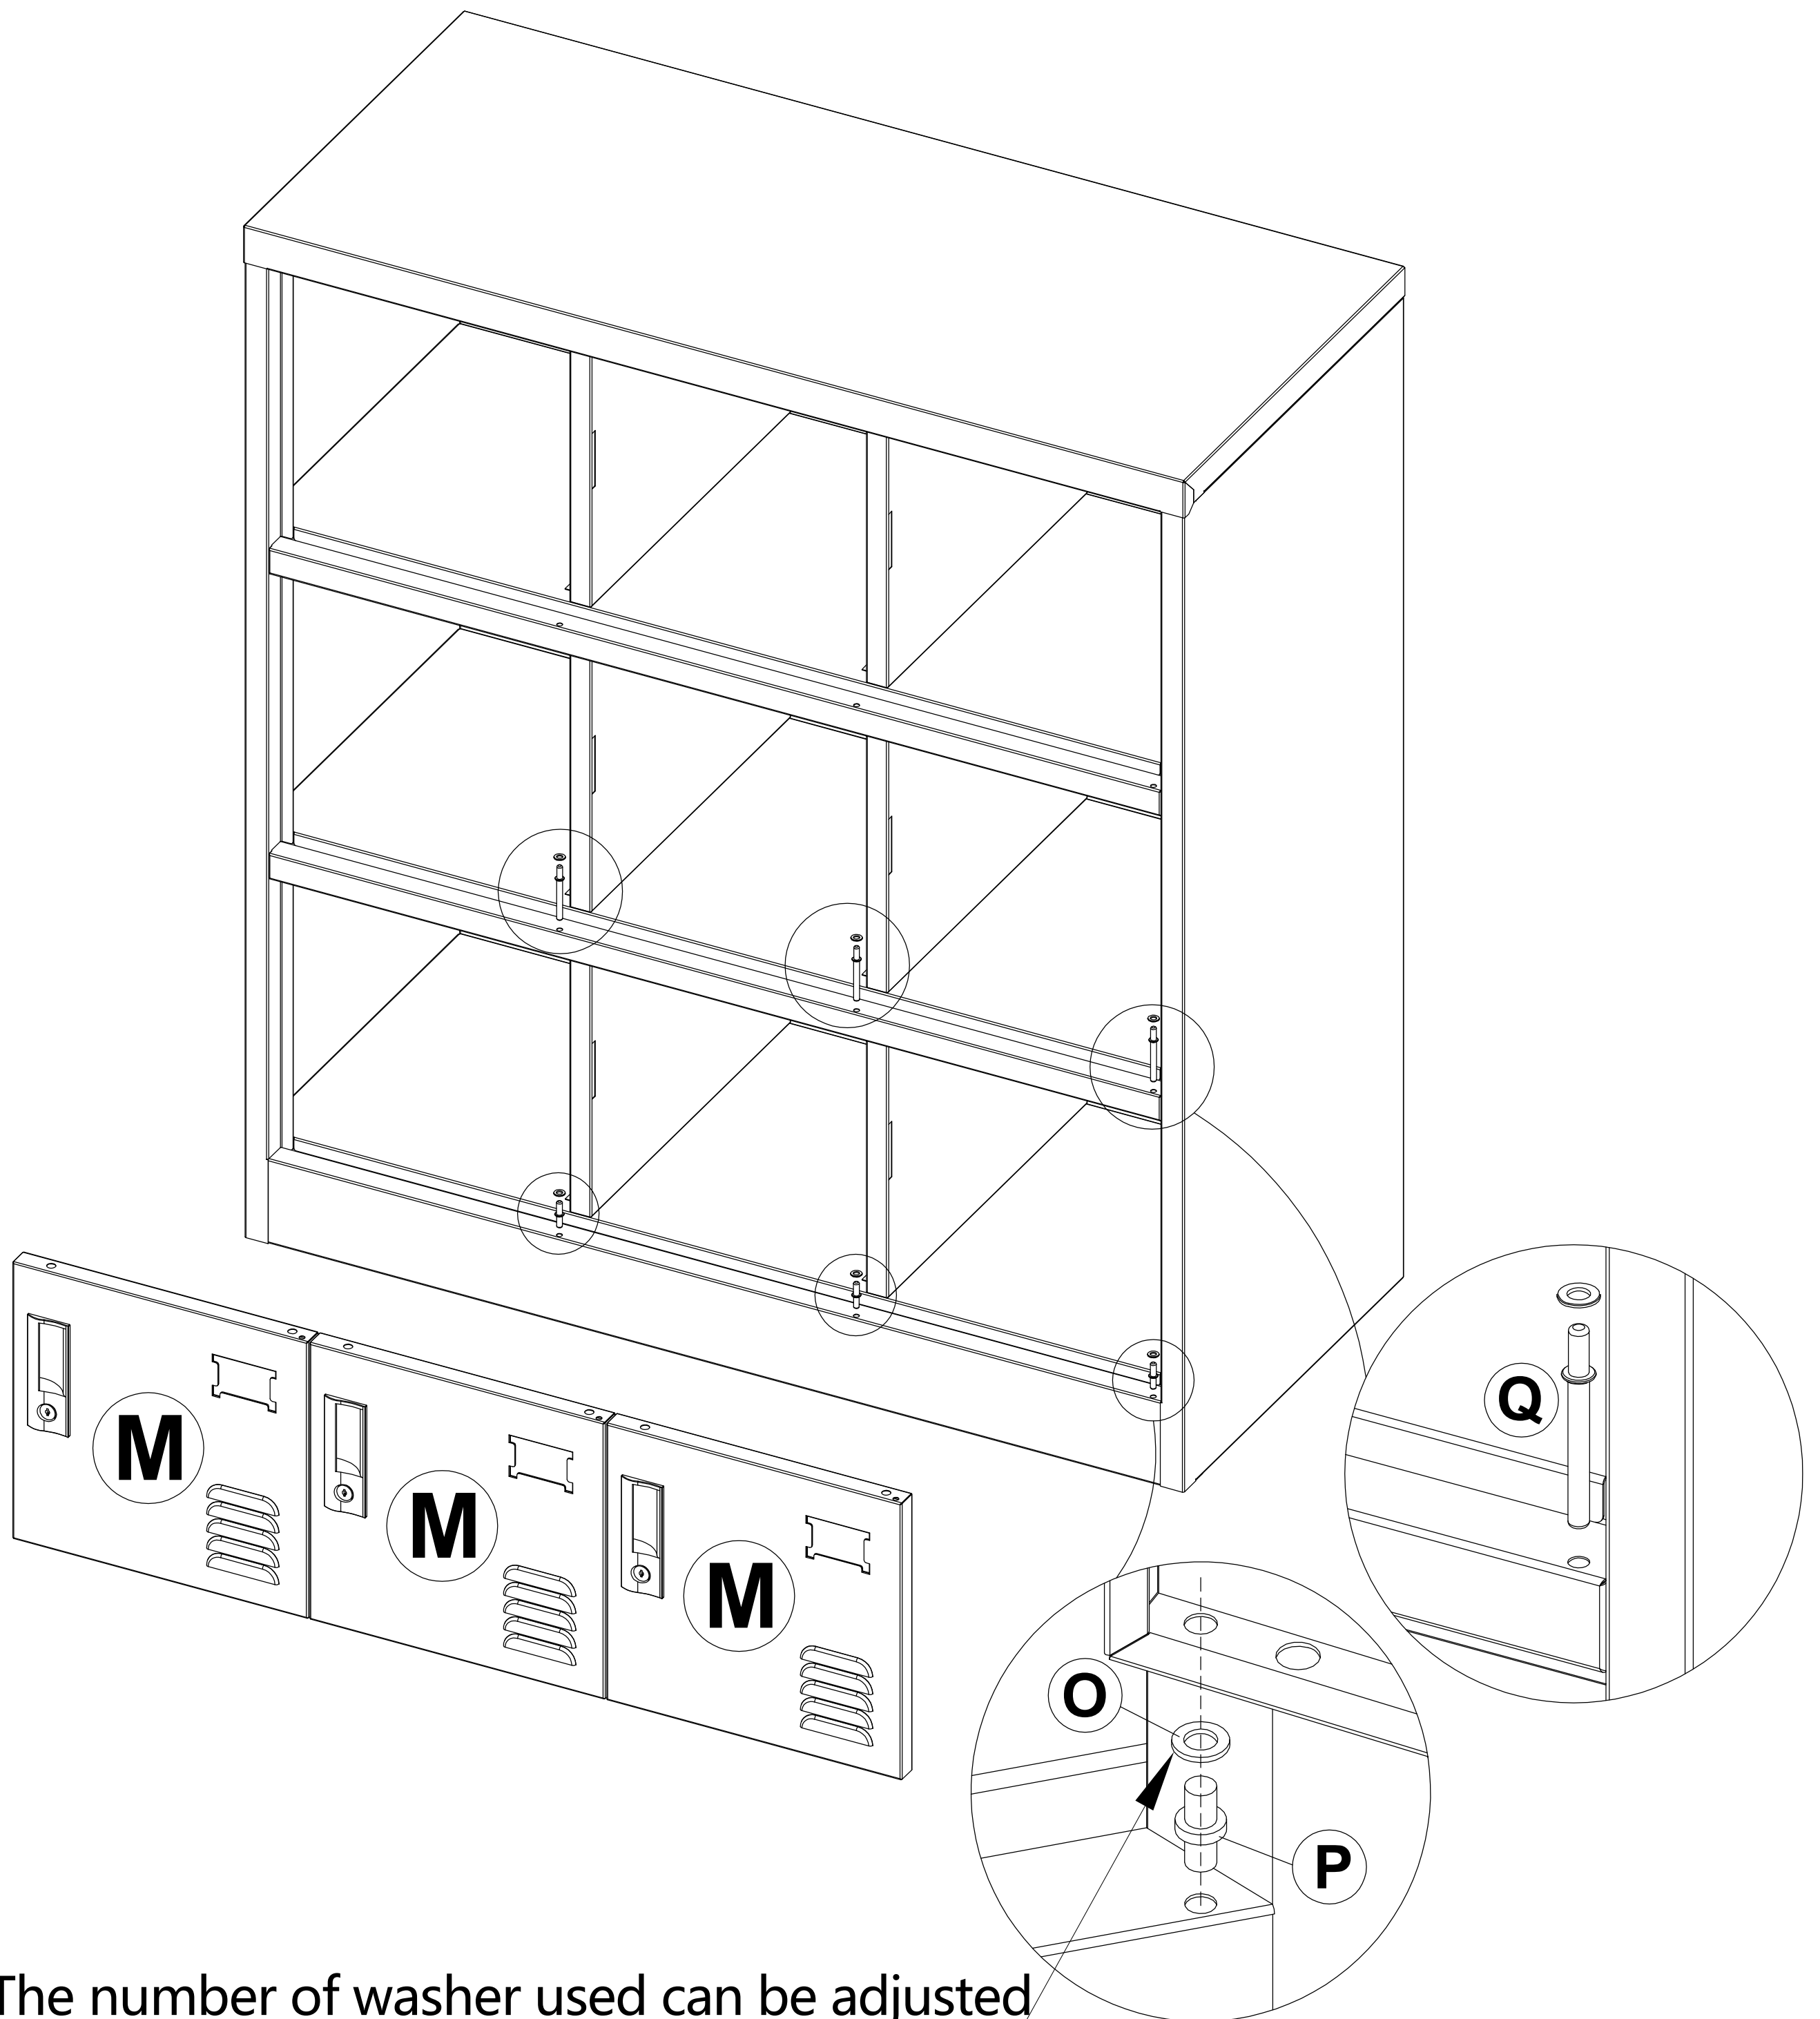


The number of washer used can be adjusted according to the actual situation.

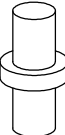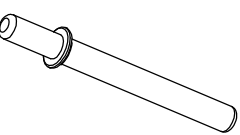
- | | | | | | |
|----------|---|--------------|----------|---|--------------|
| O |  | 6 PCS | P |  | 3 PCS |
| Q |  | 3 PCS | | | |

Step 11

Insert the long metal post Q through the frame G into the Door shaft hole.

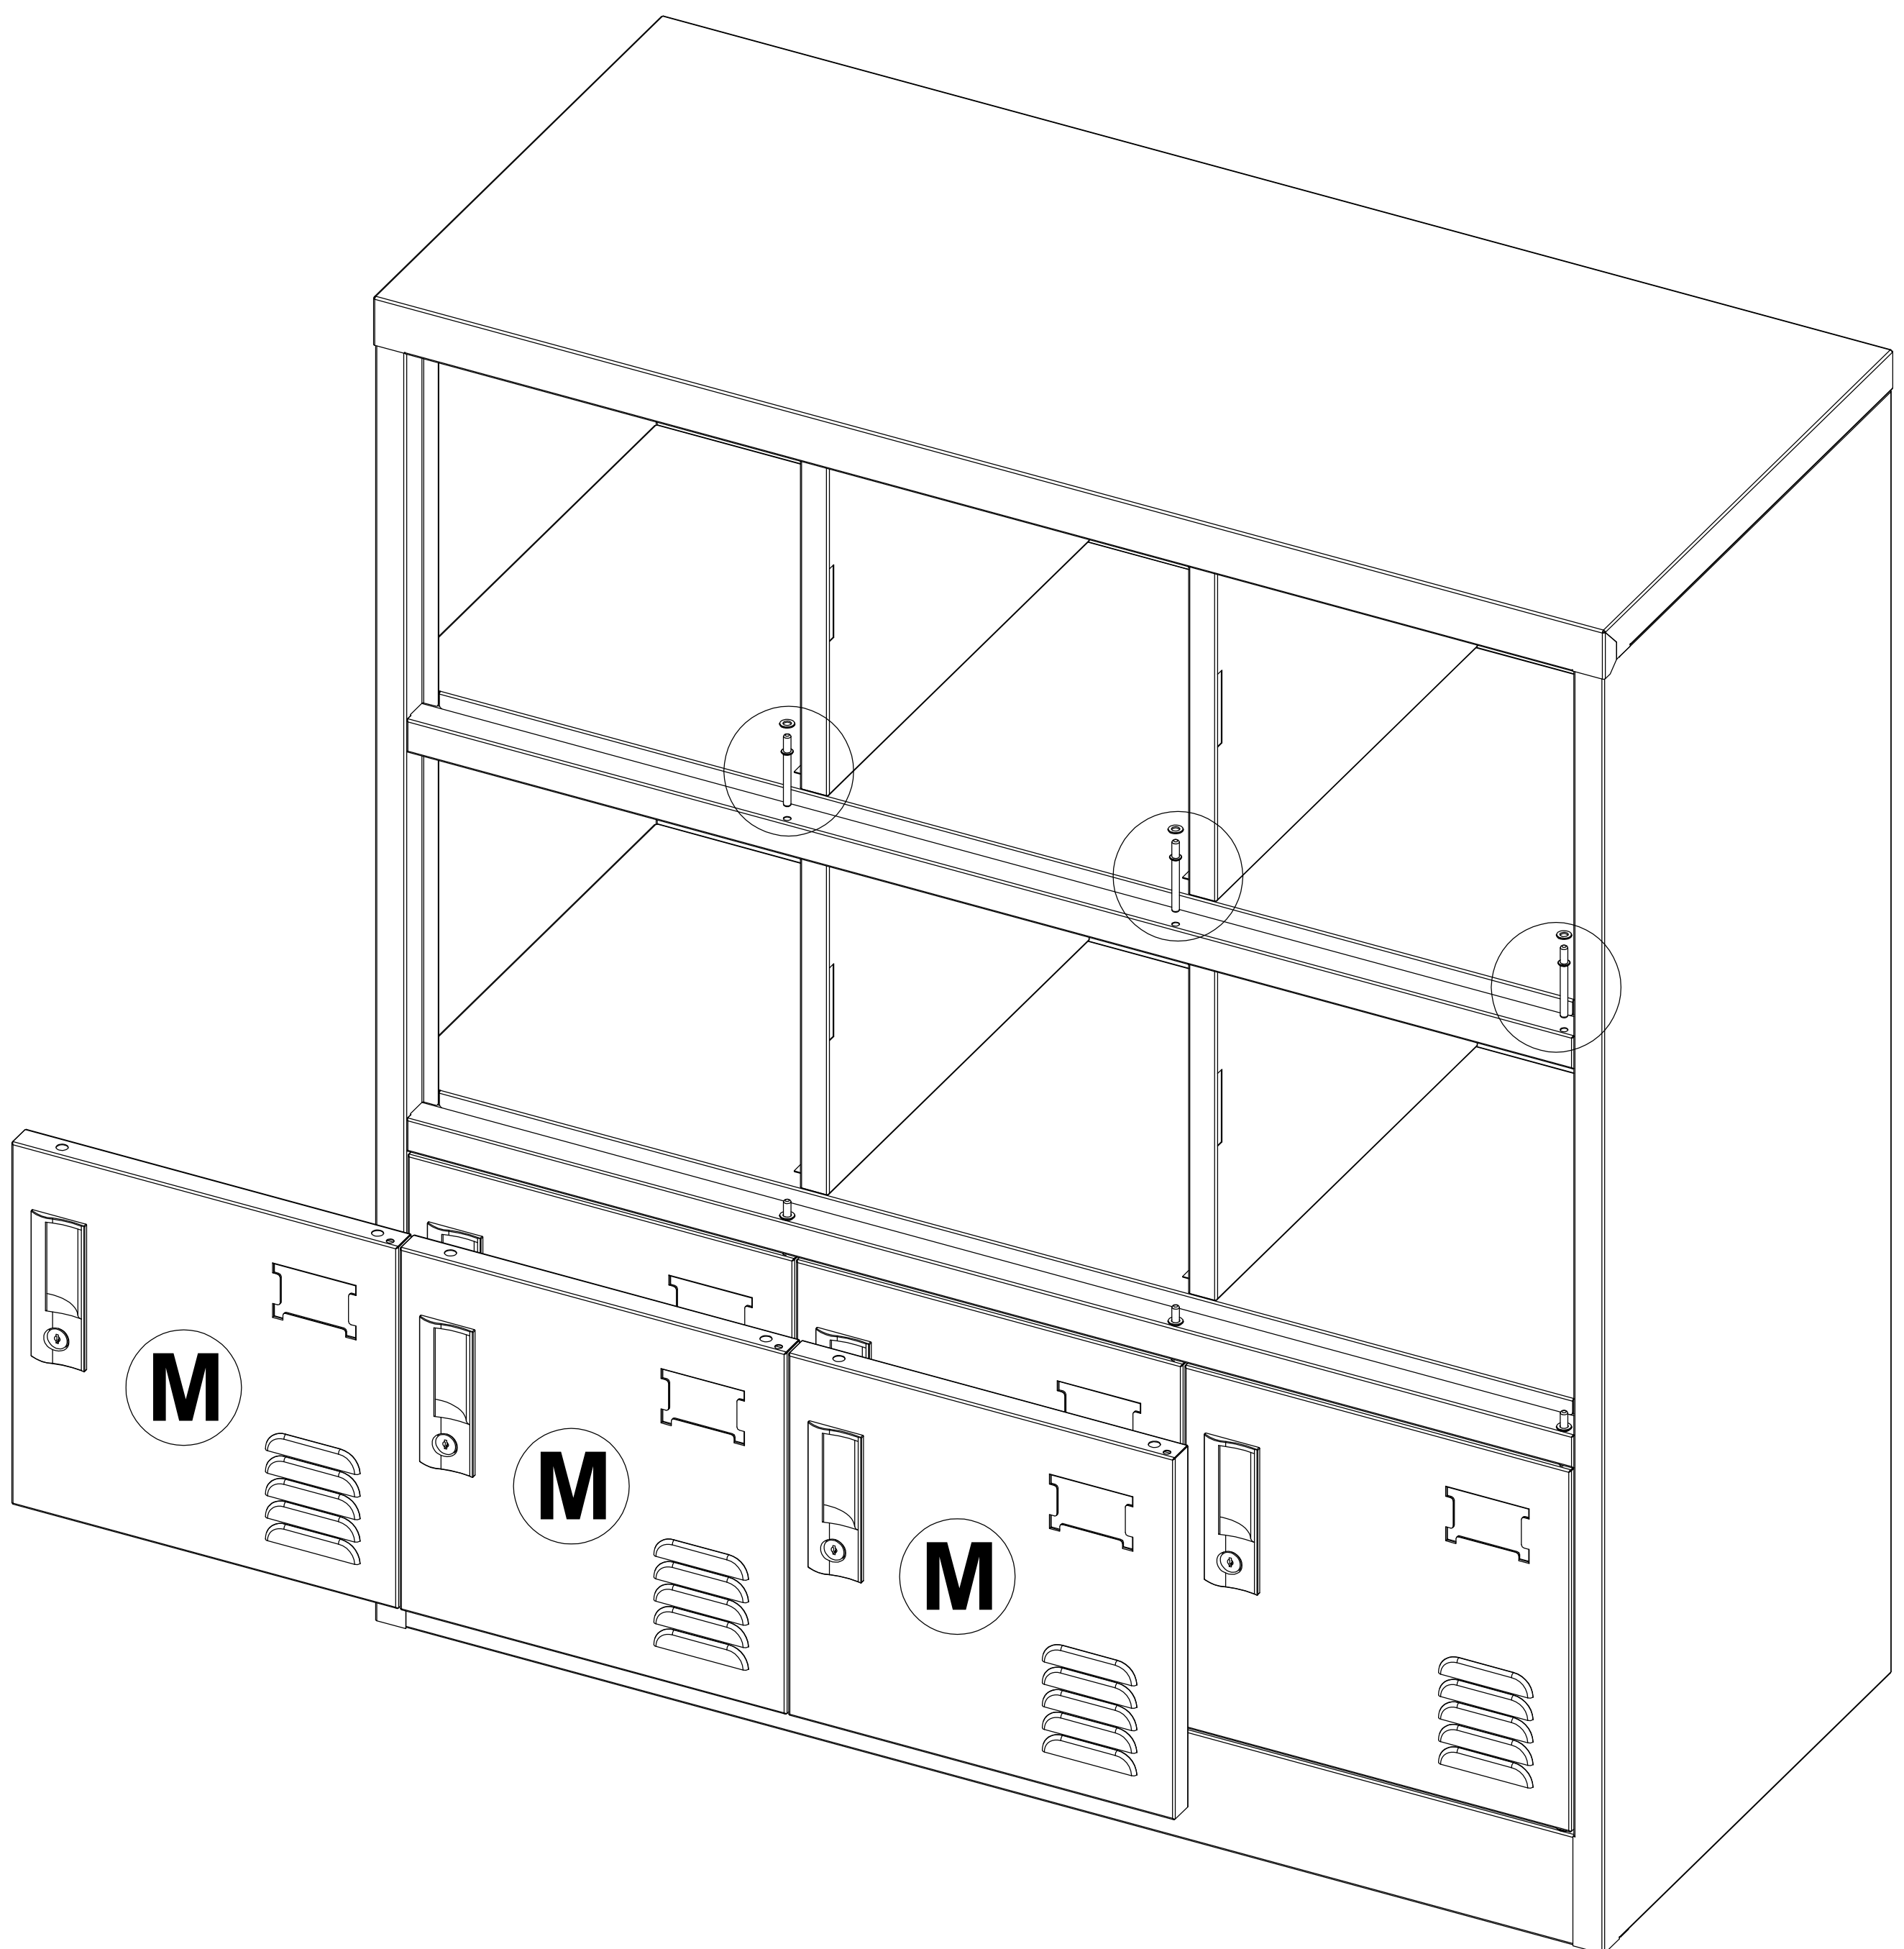

O  3 PCS

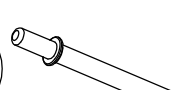Q  3 PCS

Step 12 press the spring door shaft to enter the door shaft hole.

