




GLASS BARN DOOR ASSEMBLY INSTRUCTIONS

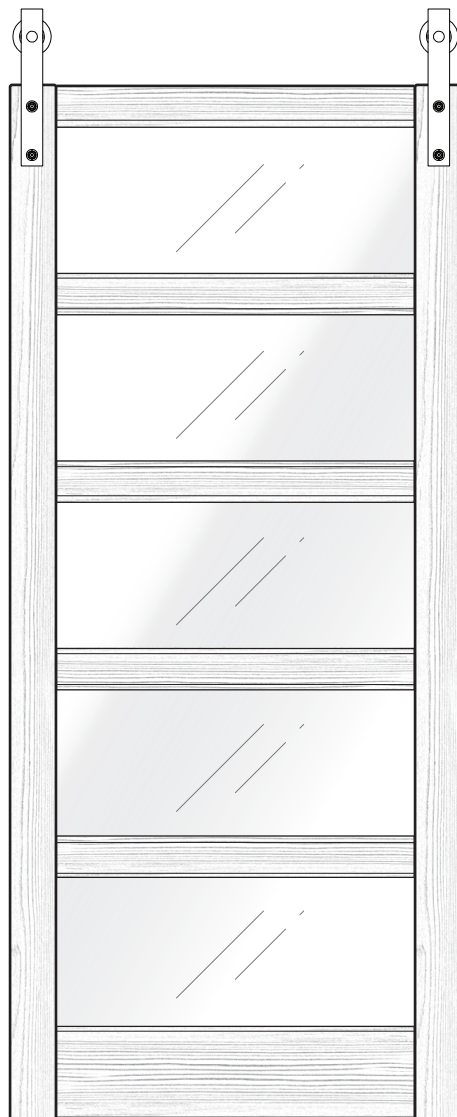



DOOR PANEL ASSEMBLY INSTRUCTIONS

For best results, carefully follow the instructions in this guide. Glue and other adhesives are not required, and we do not recommend their use during the assembly process.

First, remove all parts from the box and place them on a flat, open surface. Then, using the guide drawings at the bottom of this page, identify each slat. Next, follow the drawing on the left to place each part as shown.

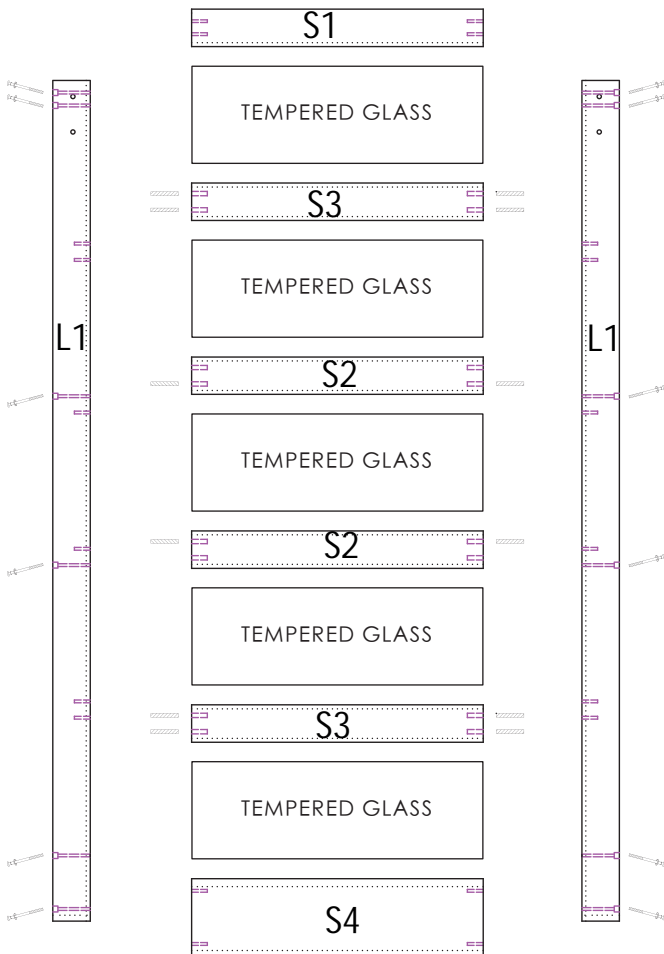

	<i>Description</i>	<i>QTY</i>
L1	Side Stile	2
S1	Top Rail	1
S2	Rail with 2 different holes	2
S3	Rail with 2 same holes	2
S4	Bottom Rail	1
D	Carriage Bolts	12



Carriage Bolt

Wood Plug


Stickers

1	3
2	4

ONE


Attach S1 (top slat) and S4 (lower slat) to stile L1 by inserting the tongues into the groove of L1 and fastening with four carriage bolts.

Using one wood plug and one carriage bolt to connect each S2 with stile L1.

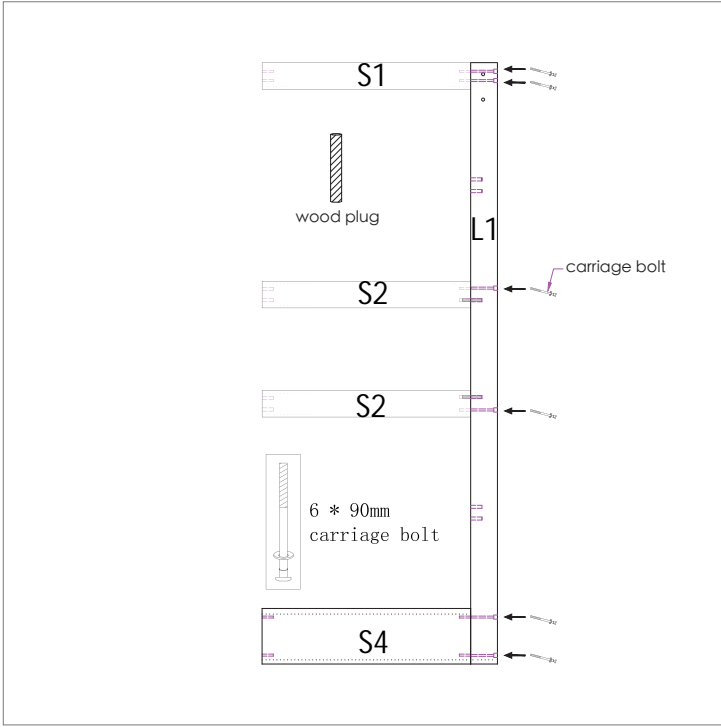


TWO

Using two wood plugs to connect each S3 with stile L1. Make sure that each slats of S1, S2 and S3 is tightly connected with L1.

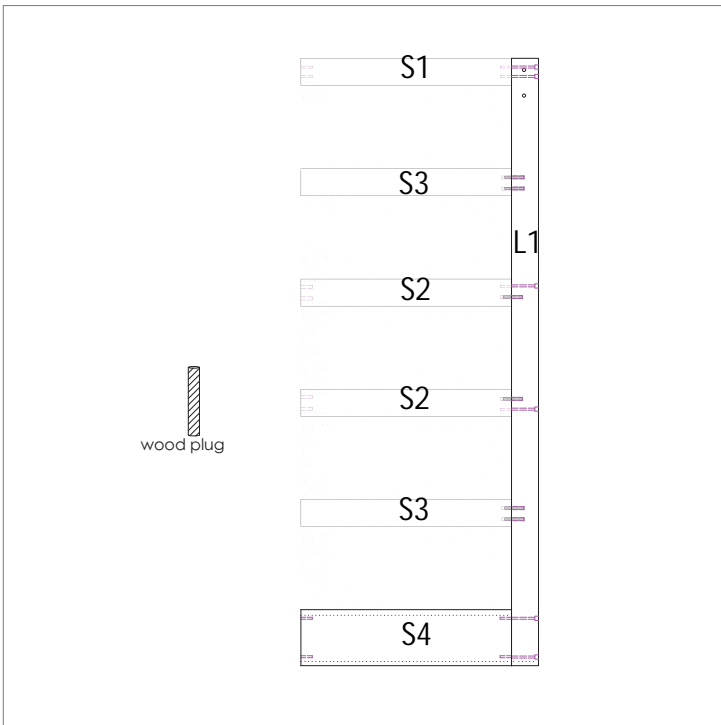

THREE

Gently slide five tempered glass into L1's groove following the instruction. Then insert 2 wood plugs into each left side of S3 slat and 1 wood plug into each left side of S2 slat.

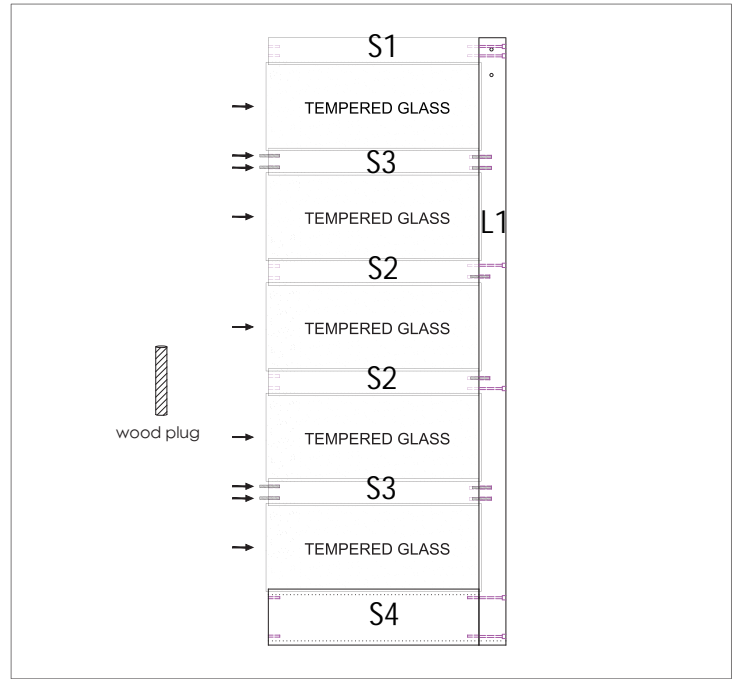

FOUR

Align stile L1's holes with wood plugs and make sure all the tempered glass is align with stile's groove. In the end, fasten L1 with all S1 S2 and S4 with 12 carriage bolts. After making sure all the bolts are tightened, place hole stickers covers on top of the bolts. Then your door is ready to hang.

