
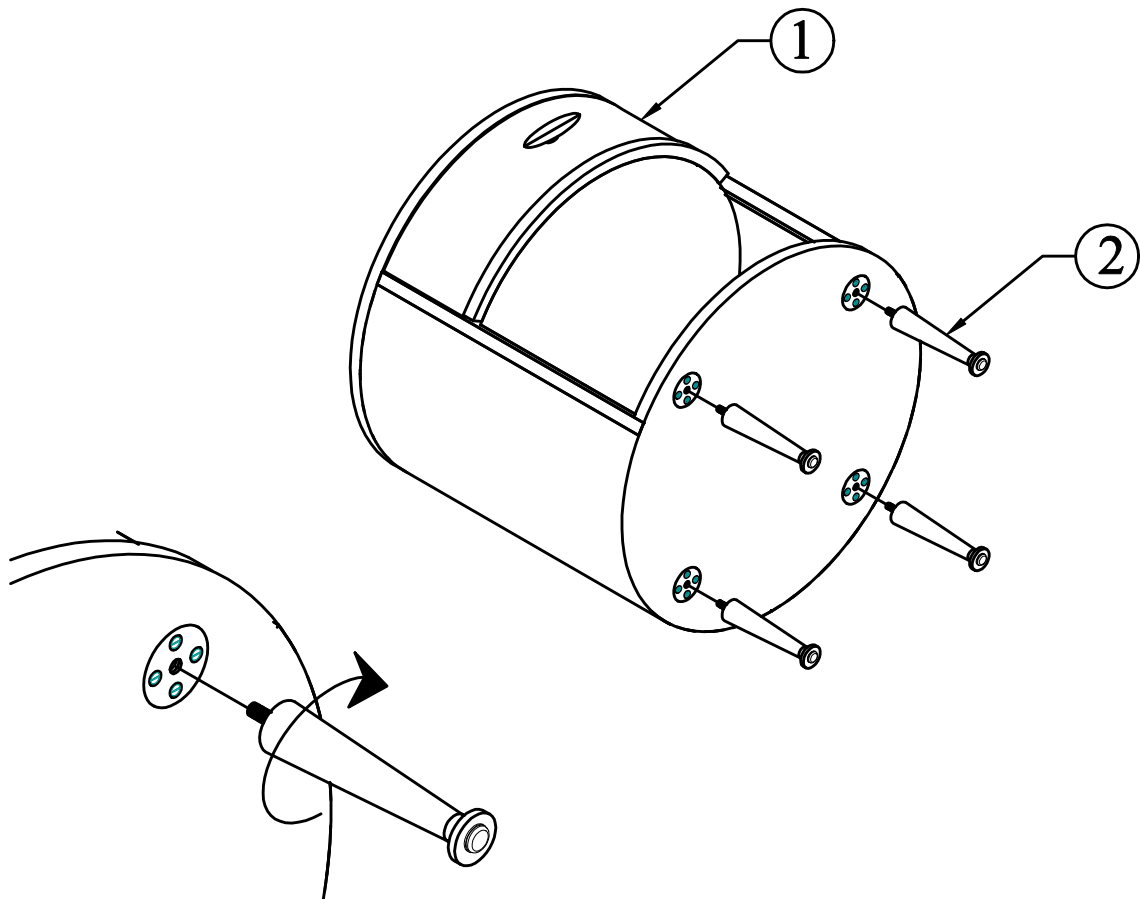
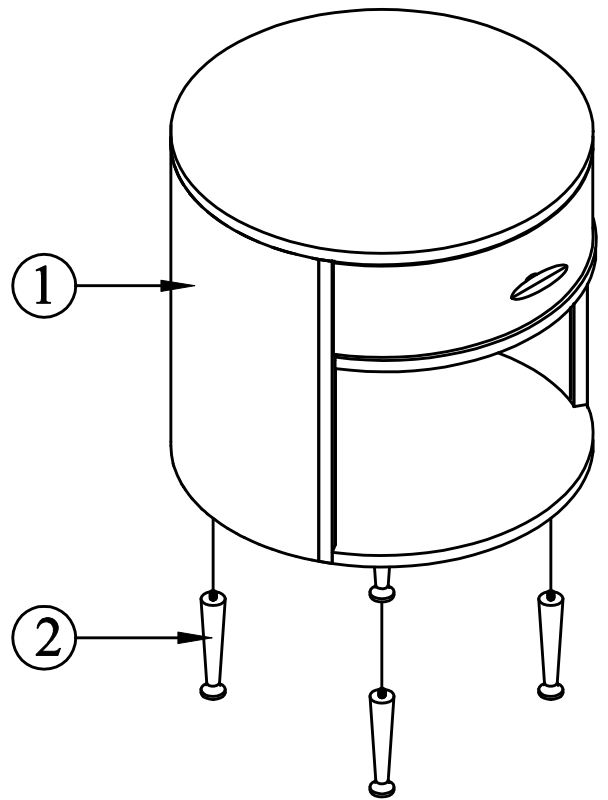


ASSEMBLY INSTRUCTION

MODEL: VELLUM ROUND NIGHTSTAND

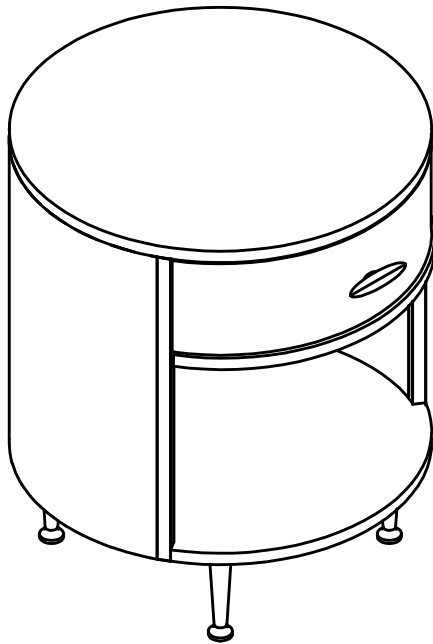

INSTRUCTION FOR LEVELER

MODEL: VELLUM ROUND NIGHTSTAND

ADJUSTING FLOOR LEVELERS


Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

ADJUST THE FLOOR LEVELERS

Check for Stability - Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.


Locate the Levelers - These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed - Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

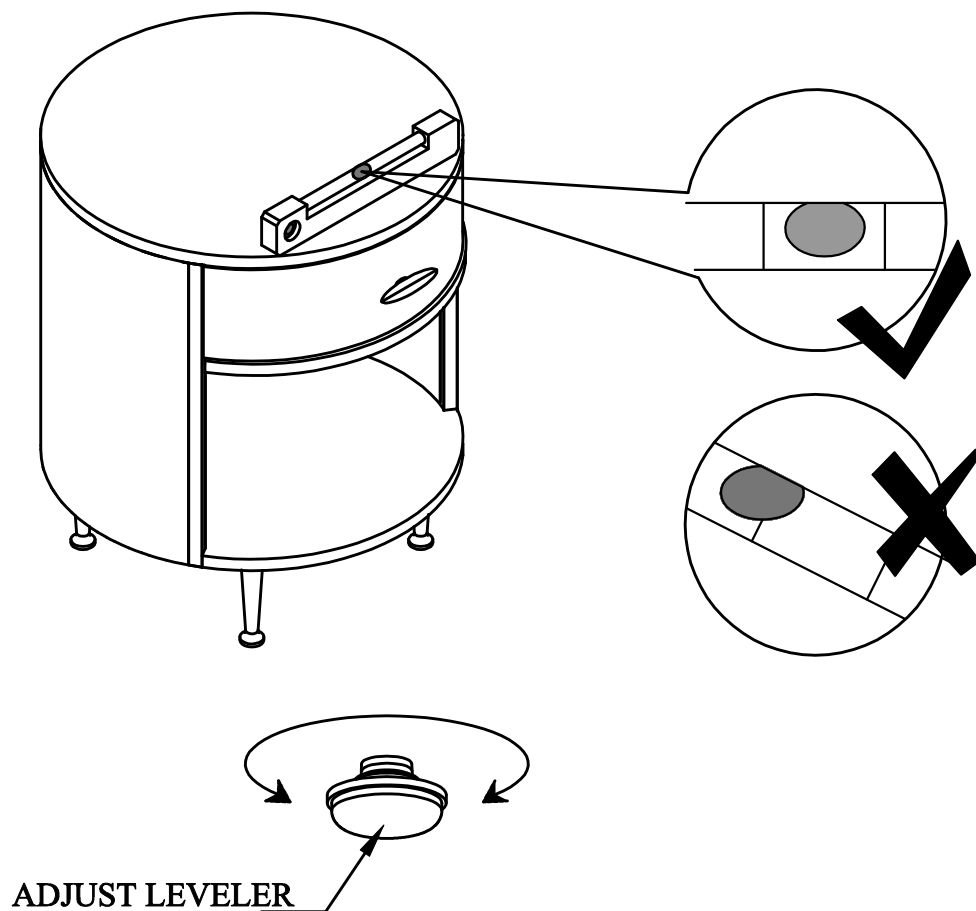

MODEL: VELLUM ROUND NIGHTSTAND

1 SET



ASSEMBLY INSTRUCTION

MODEL: VELLUM ROUND NIGHTSTAND

Manufactured by QUOC HUNG VIETNAM Co., LTD.

17/13B Tan Phuoc Area, Tan Binh Ward, Di An District, Binh Duong Province Viet Nam

Tel: 0274 3764 372-3 Fax: 0274 3764 925

Meets ASTM F3096 - 23

MFG Date: Jan, 2025

FURNITURE TIPPING RESTRAINT HH510

WARNING

Injury may result from tipping furniture

This restraint is not a substitute for proper adult supervision.

This restraint may provide protection against tipping furniture.

Do not allow children to climb on furniture.

Failure to detach this restraint before moving furniture may result in injury and damage.

THIS BAG IS NOT A TOY

"WARNING TO AVOID DANGER OF SUFFOCATION, KEEP THIS BAG AWAY FROM BABIES AND SMALL CHILDREN. DO NOT USE IN CRIBS, BEDS, CARRIAGES OR PLAY PENS. THIS BAG IS NOT A TOY."
KNOT BAG BEFORE THROWING AWAY.

Installation instructions:

1. Attach a bracket securely to the back top rail of the furniture using the 5/8" screw provided, through the smaller hole.
2. Wall Stud: Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole.
Wall Board: Locate the other bracket on the wall board and 2 inches below the mounting bracket secured to the back of your unit.
Attach to the wall board using the hollow wall anchor, through the smaller hole.
Masonry wall: Locate the other bracket on the masonry wall and 2 inches below the mounting bracket secured to the back of your unit.
Attach to the wall board using the 1 1/4" screw and plastic anchor provided, through the smaller hole.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Confirm that the strap is securely laced and locked.