
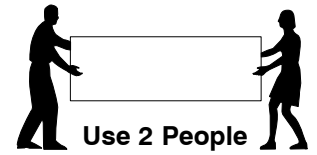


# Daybed


## Assembly Instructions

### 1 Assembled View

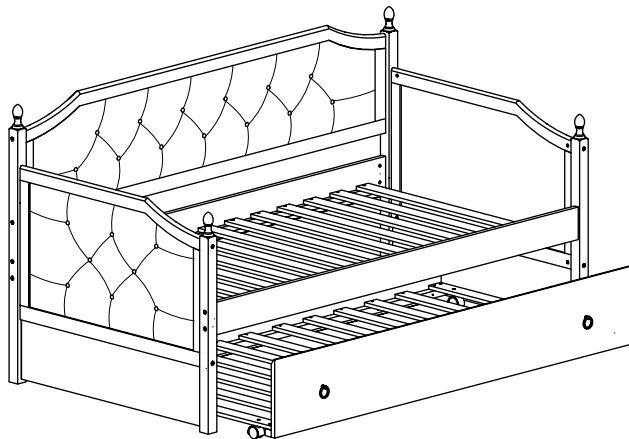


**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 2 Parts in this Box

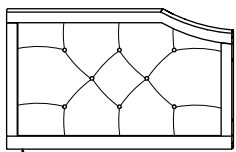


**A** Side Panel (Left Hand) x 1

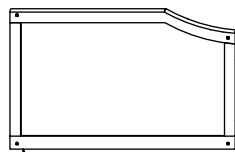


**B** Side Panel (Right Hand) x 1




**C** Bottom Panel x 2

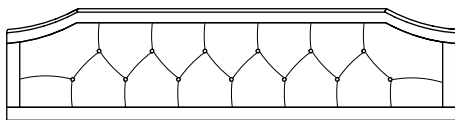


**D** Back Panel x 1



**E** Side Rail x 2

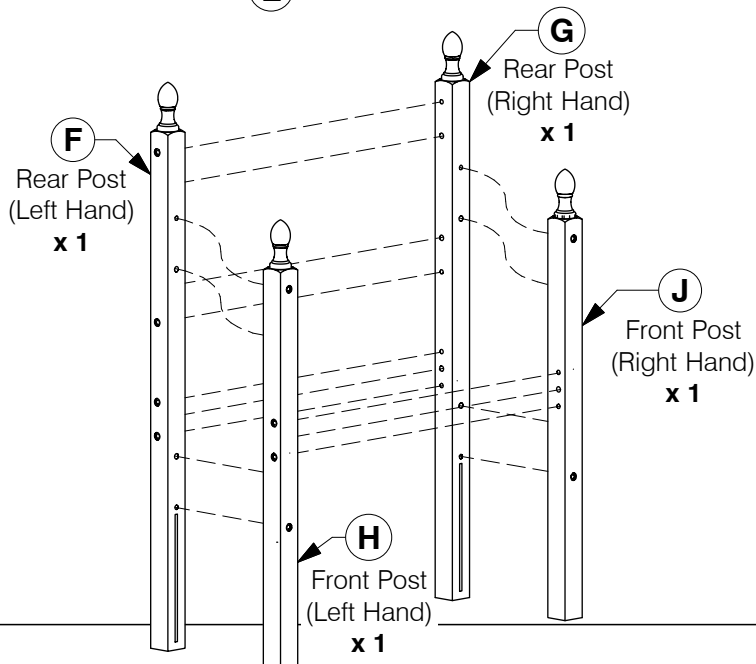

Slats are packed in separately in Box B

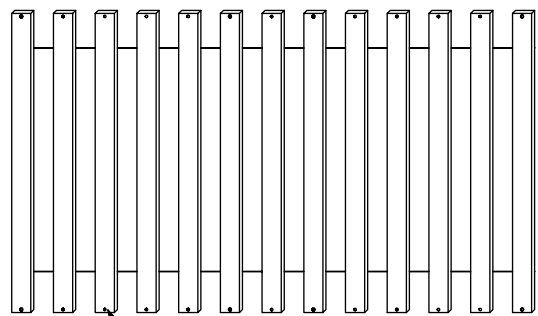

**K** Set of Slats x 1


### 3 Hardware in this Box



**1** M6 x 90mm JCB x 20




**4** Barrel Nut x 20



**2** M6 x 40mm JCB x 8



**5** Wood Dowel (10 x 40mm) x 16



**3** Wood Screw (M4 x 32mm) x 18




**6** Allen Key x 1


# Daybed

Assembly Instructions


- 4** Assemble the Rear Post (F/G) to the Side Panel (A/B).

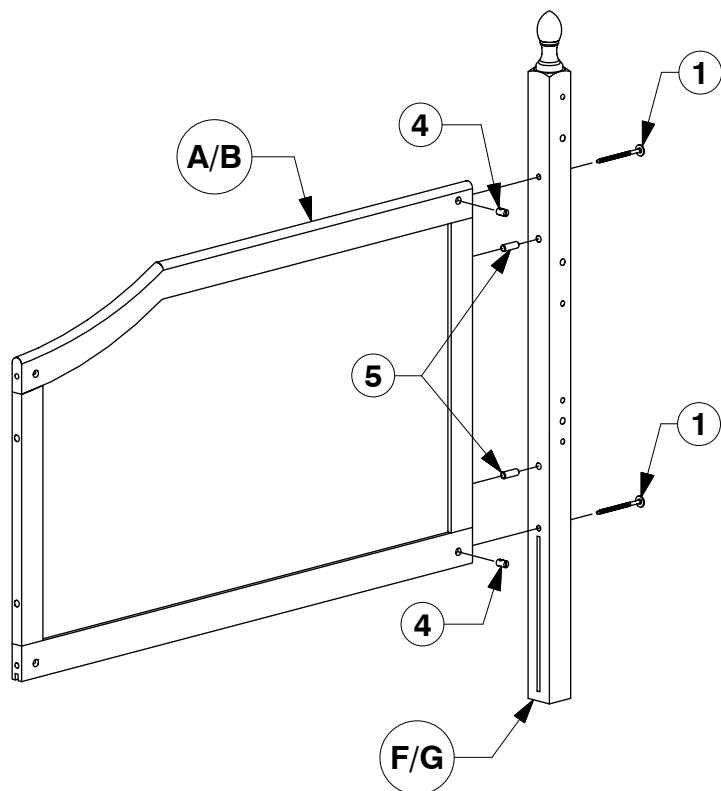

- 5** Slide the Bottom Panel (C) into the groove on the Side Panel (A/B) & Rear Post (F/G).

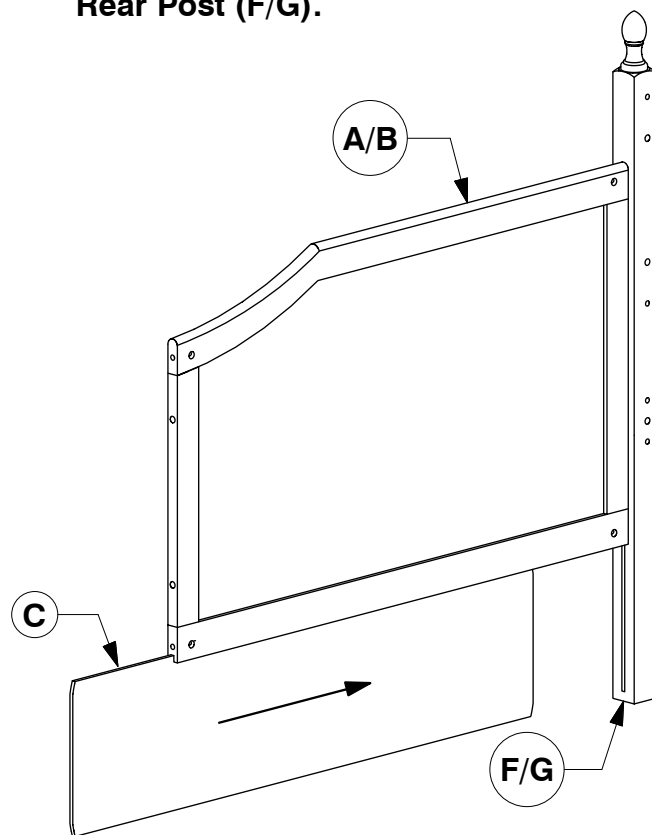


- 6** Assemble the Front Post (H/J) to the Side Panel (A/B).

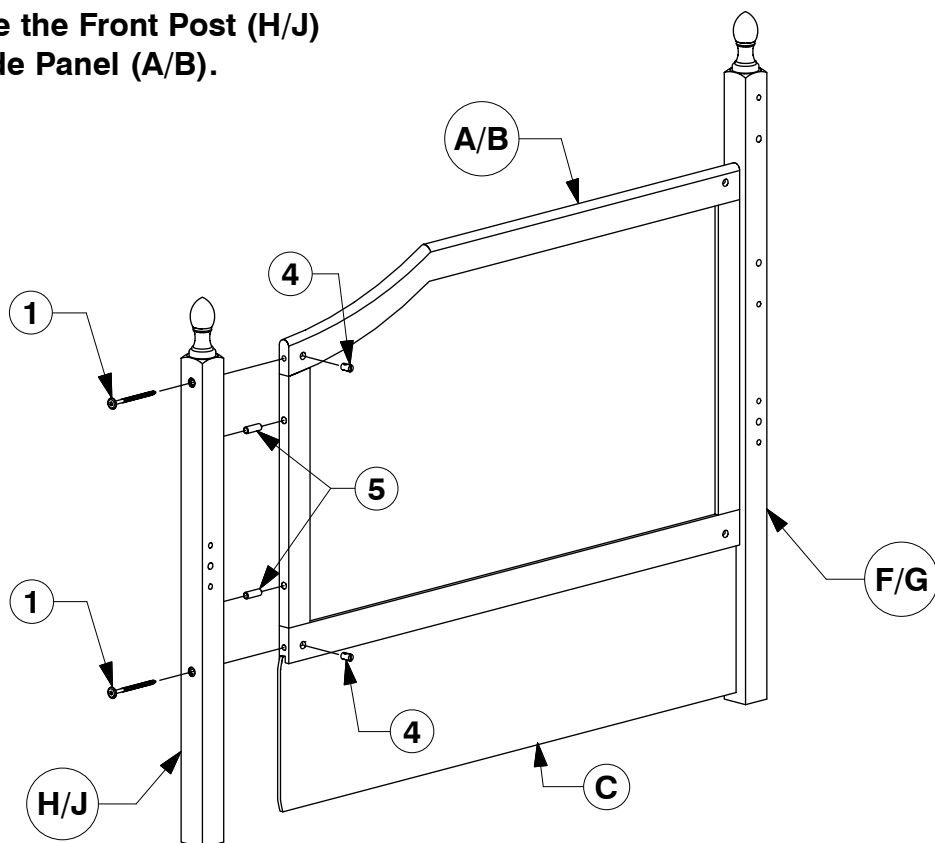



# Daybed

Assembly Instructions

- 7** Assemble the Side Panel (A & B) to the Back Panel (D) & Side Rail (E).

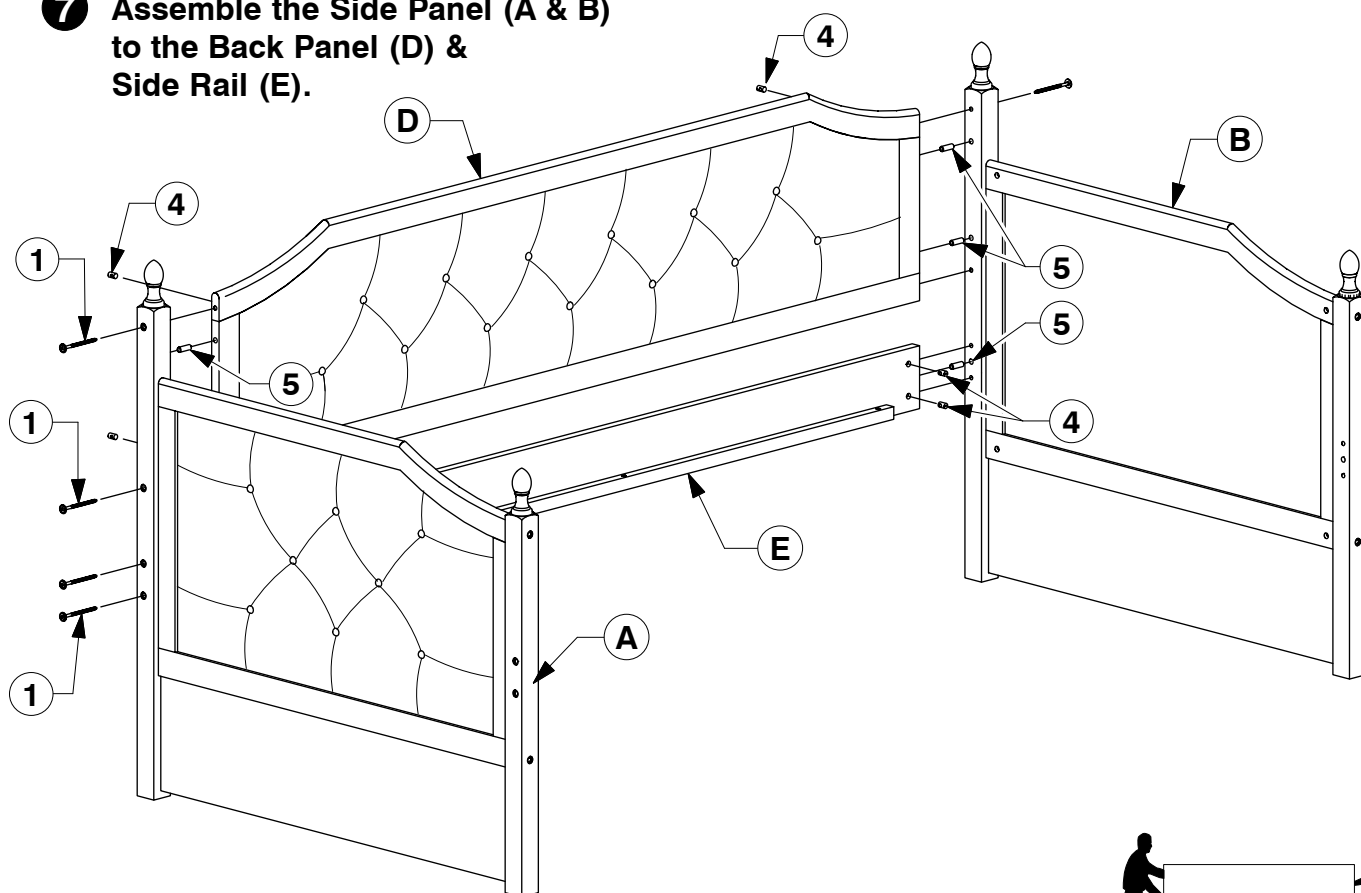


- 8** Assemble the Side Rail (E) to the Front Post (H/J).

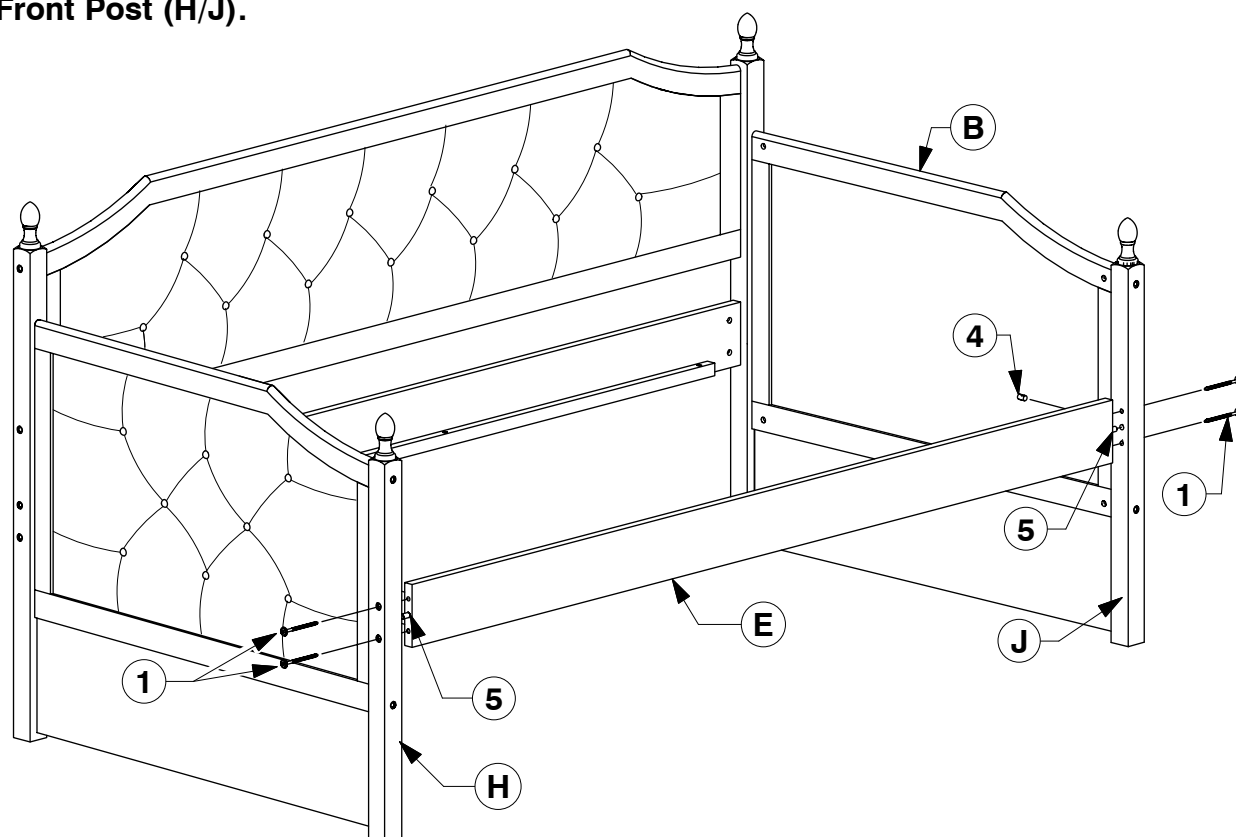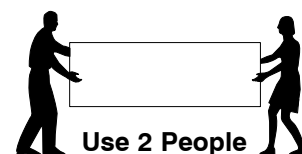

# Daybed

## Assembly Instructions

- 9** Bolt the Set of Slats (K) between the Side Rail (E).

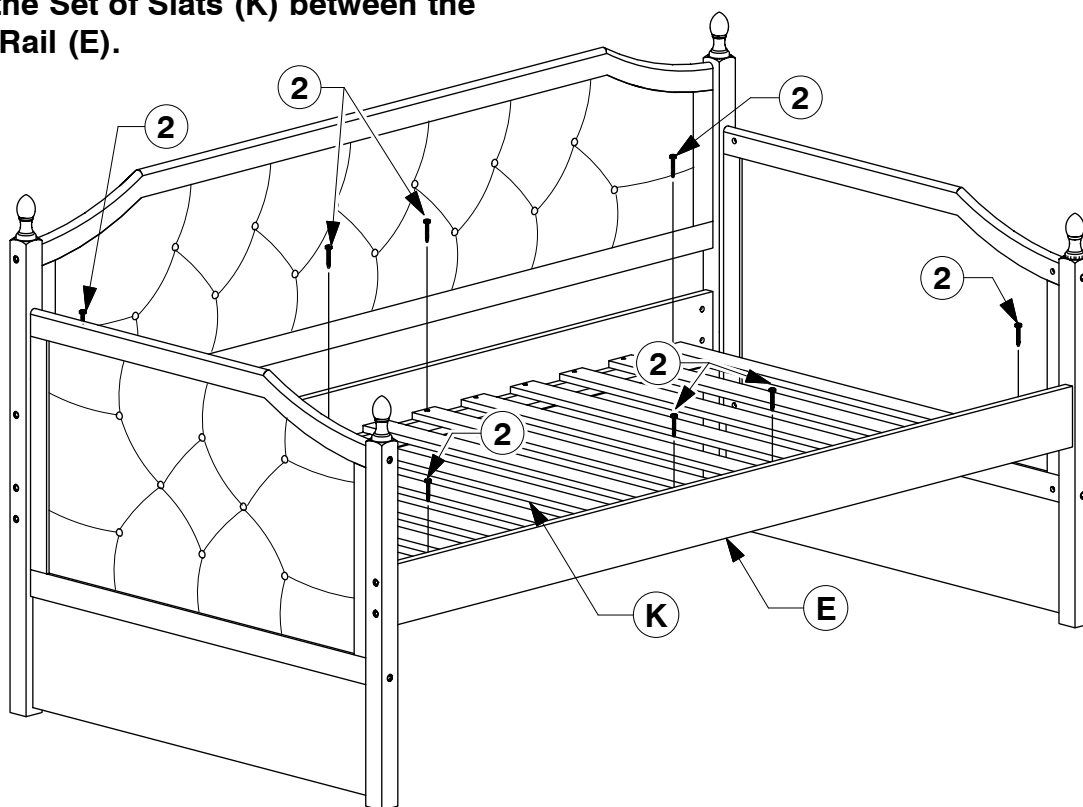

- 10** Screw the Set of Slats (K) between the Side Rail (E).  
Finally, fit the assembled Trundle.

