







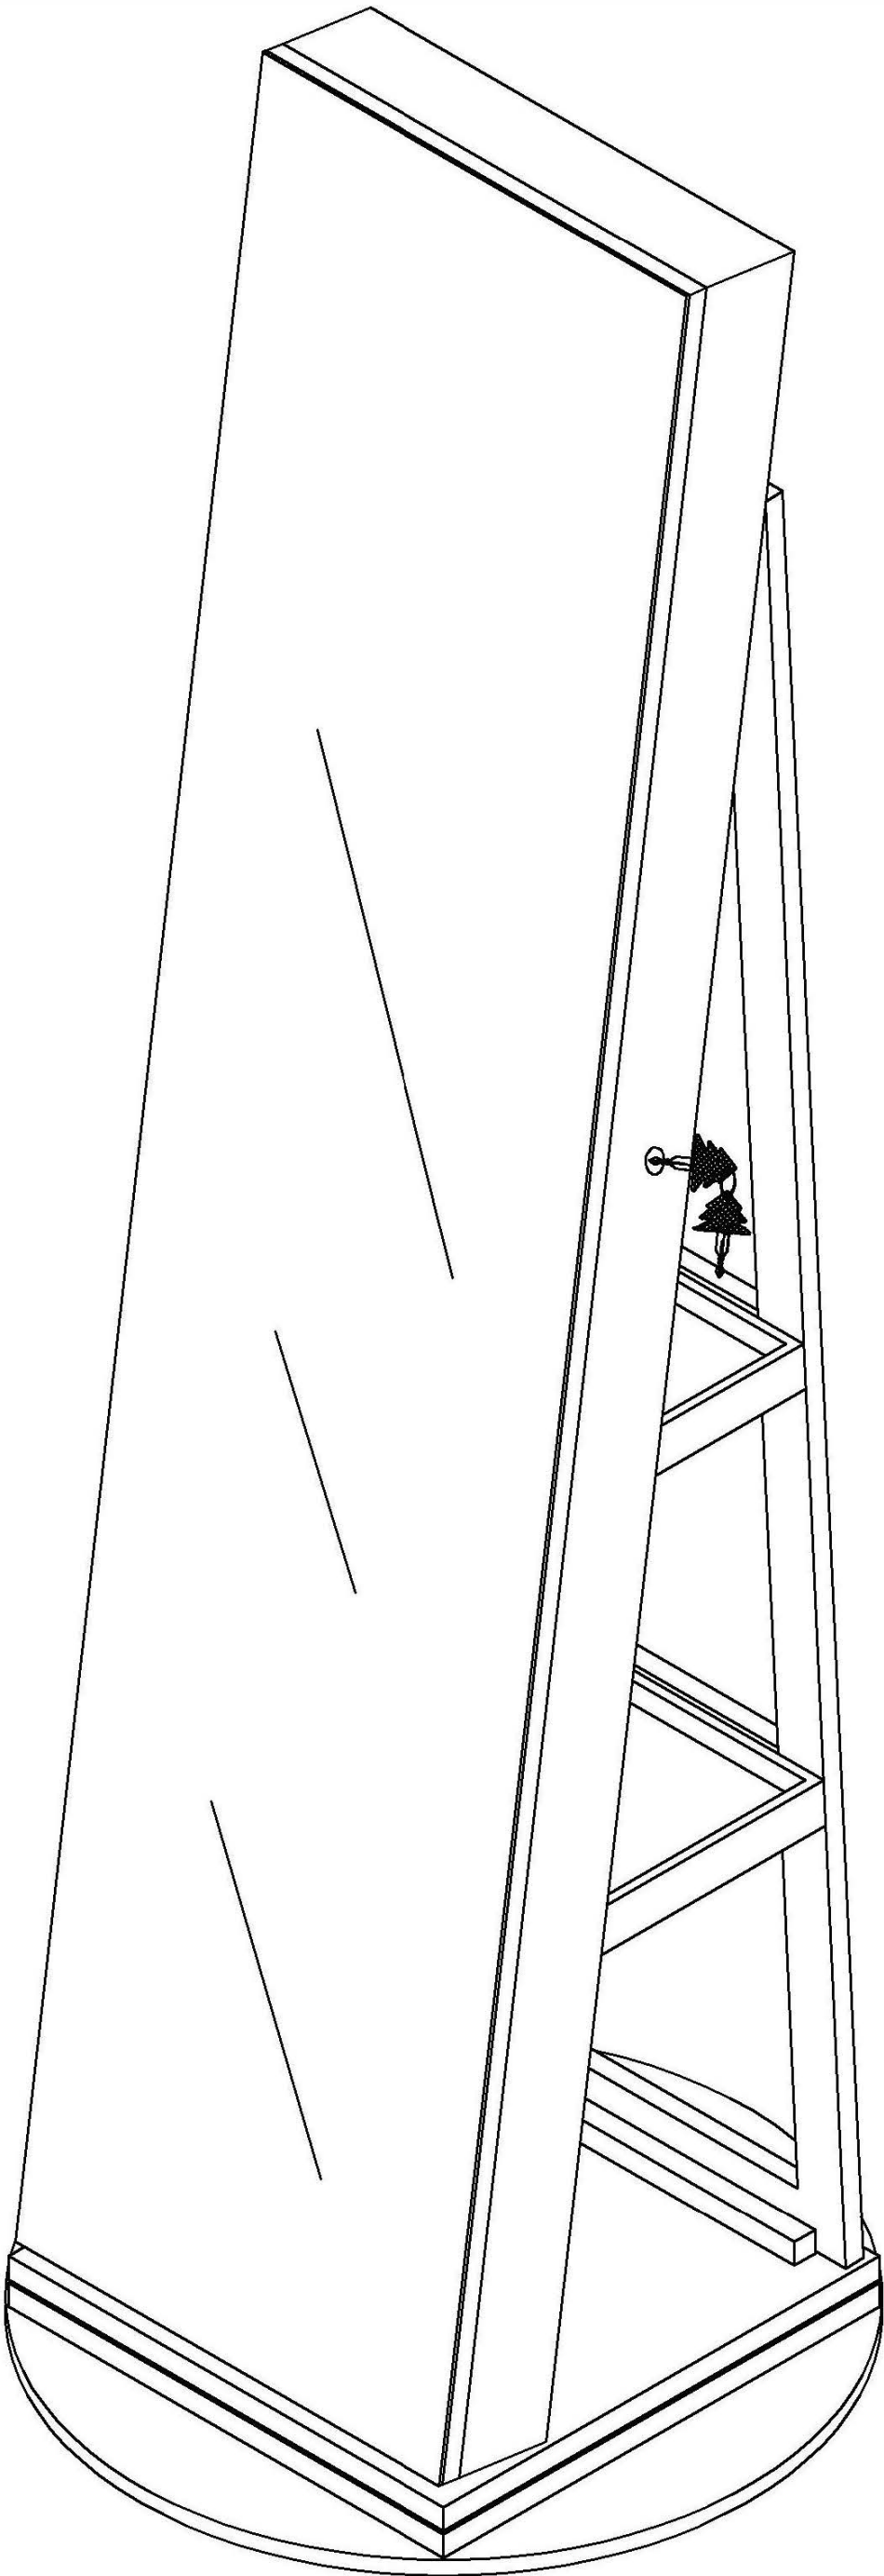

MIRROR JEWELLERY CABINET



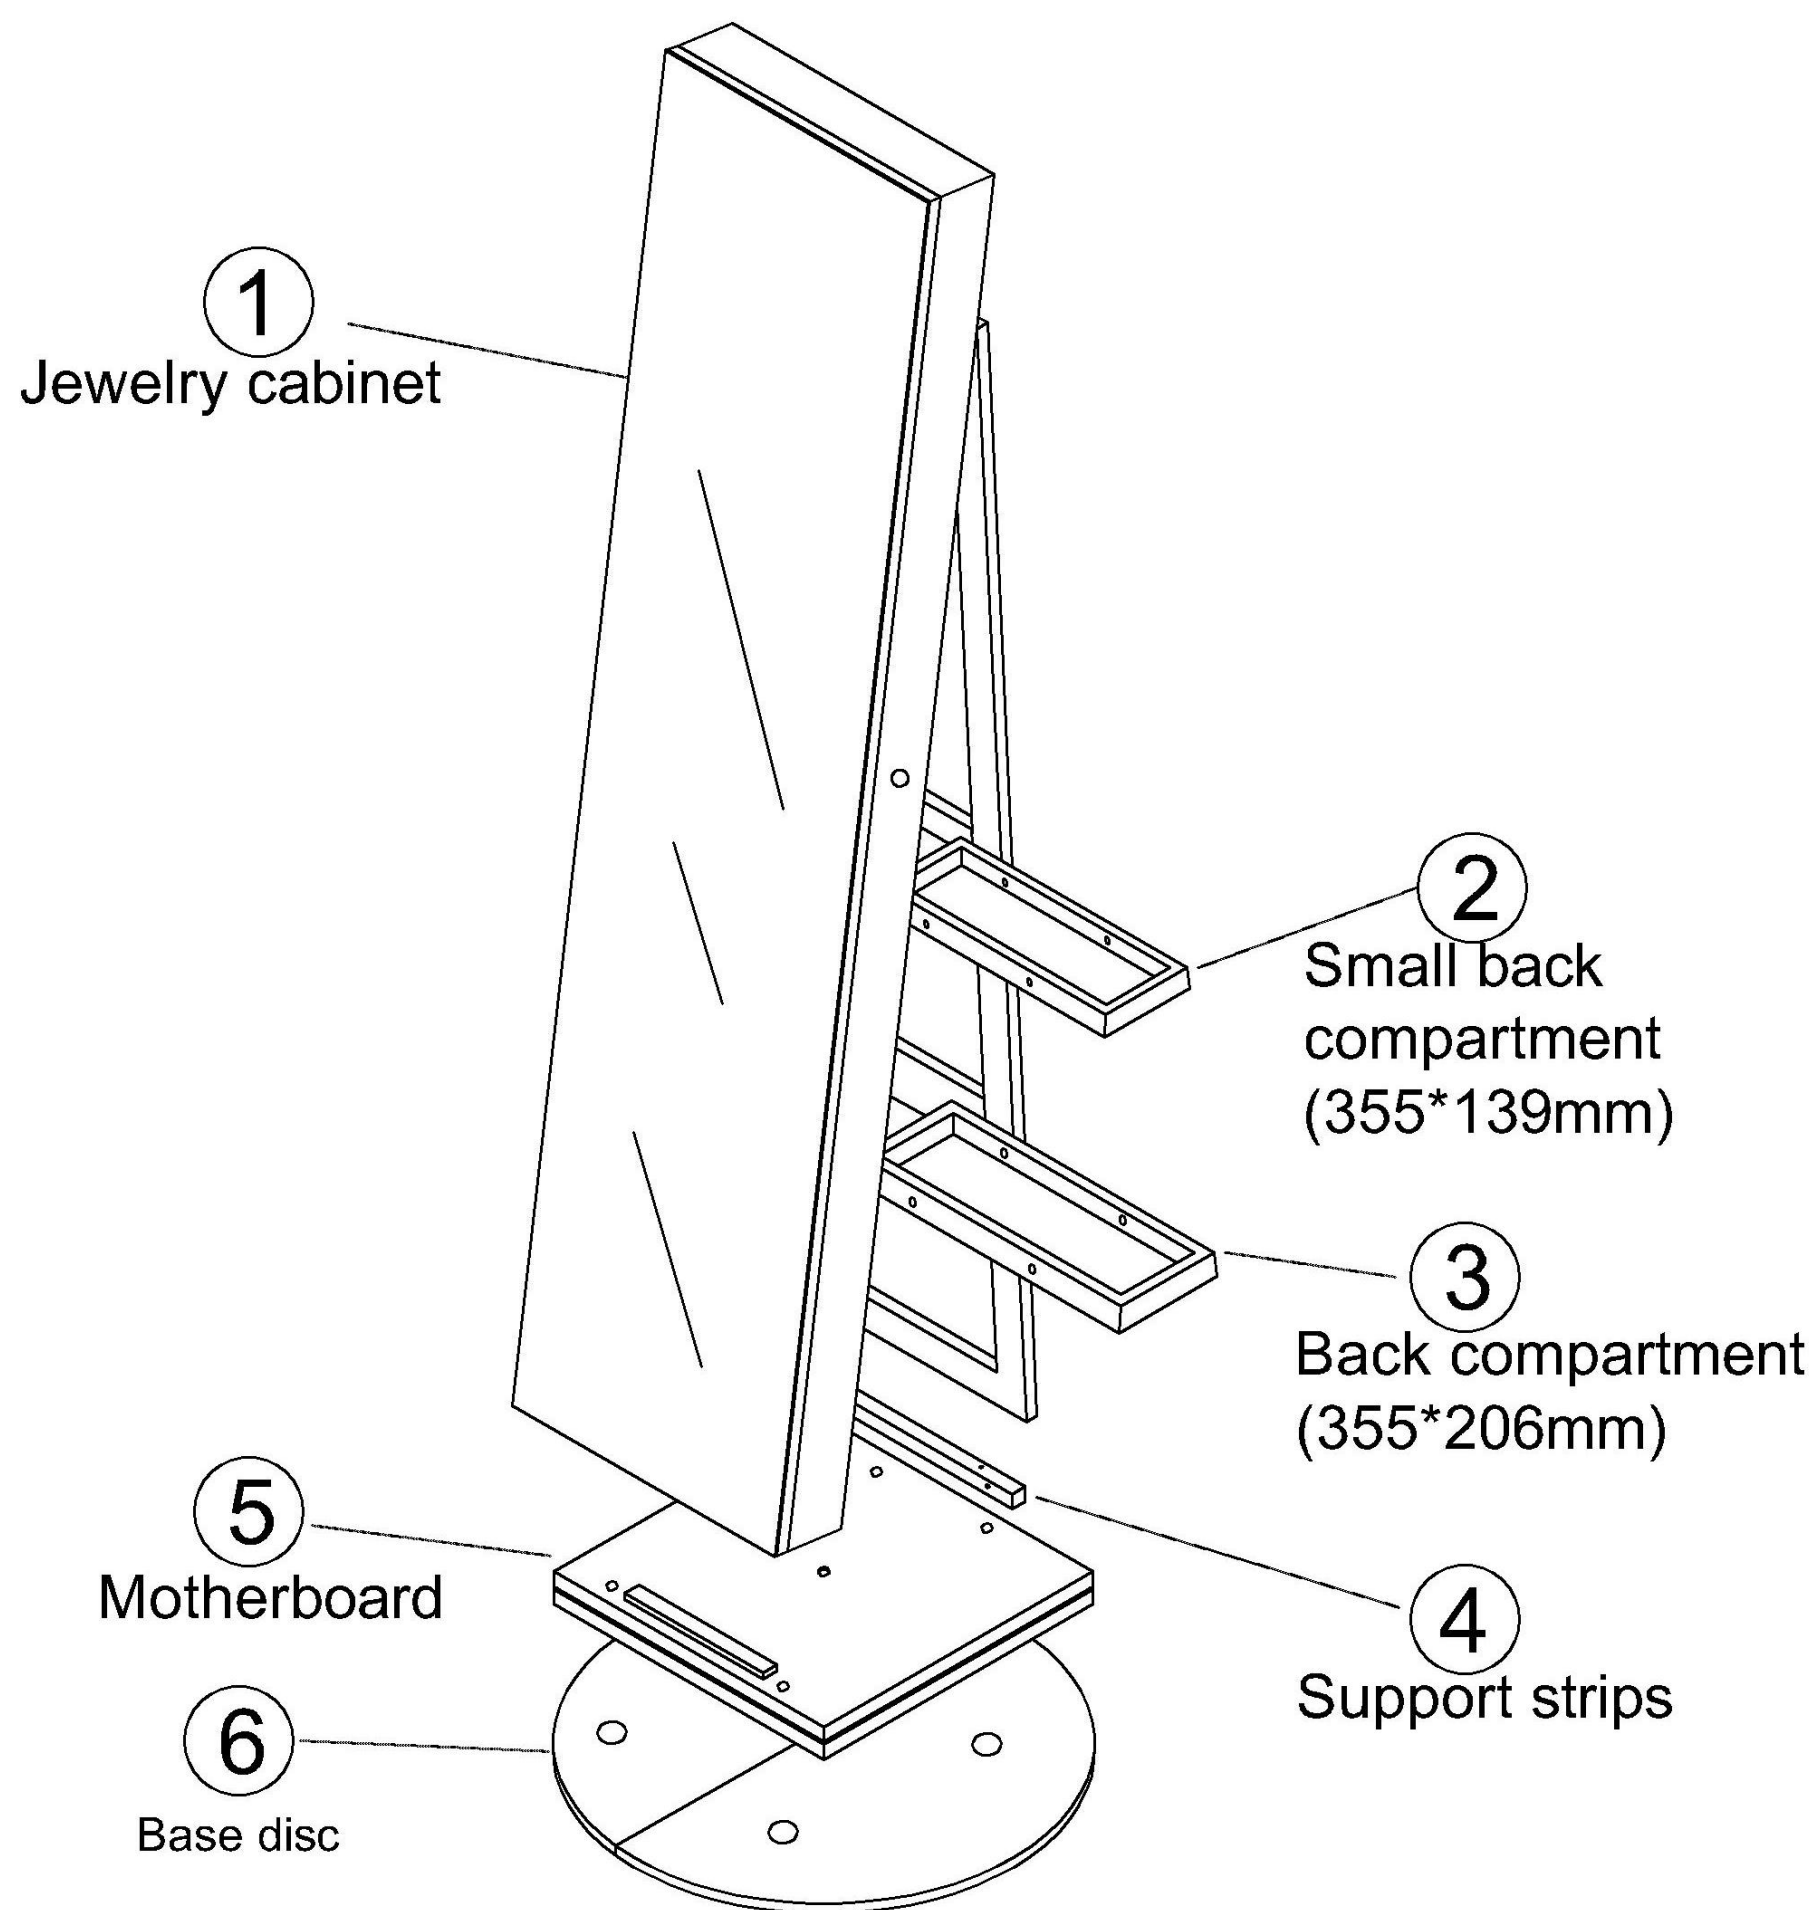

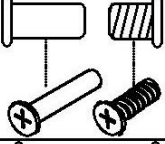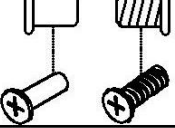Accessories list




(A)		Long screw(6*30mm)	6 Pcs
(B)		The key	1 Pcs
(C)		Long cross screw assembly (5*20mm)	4 Pcs
(D)		Short cross screw assembly (5*8mm)	4 Pcs
(E)		Bolt driver	1 Pcs
(F)		Short screw(6*20mm)	4 Pcs


Step 1

F	 (6*20mm)	x 4
A	 (6*30mm)	x 2


Use short screw
F (6*20mm)

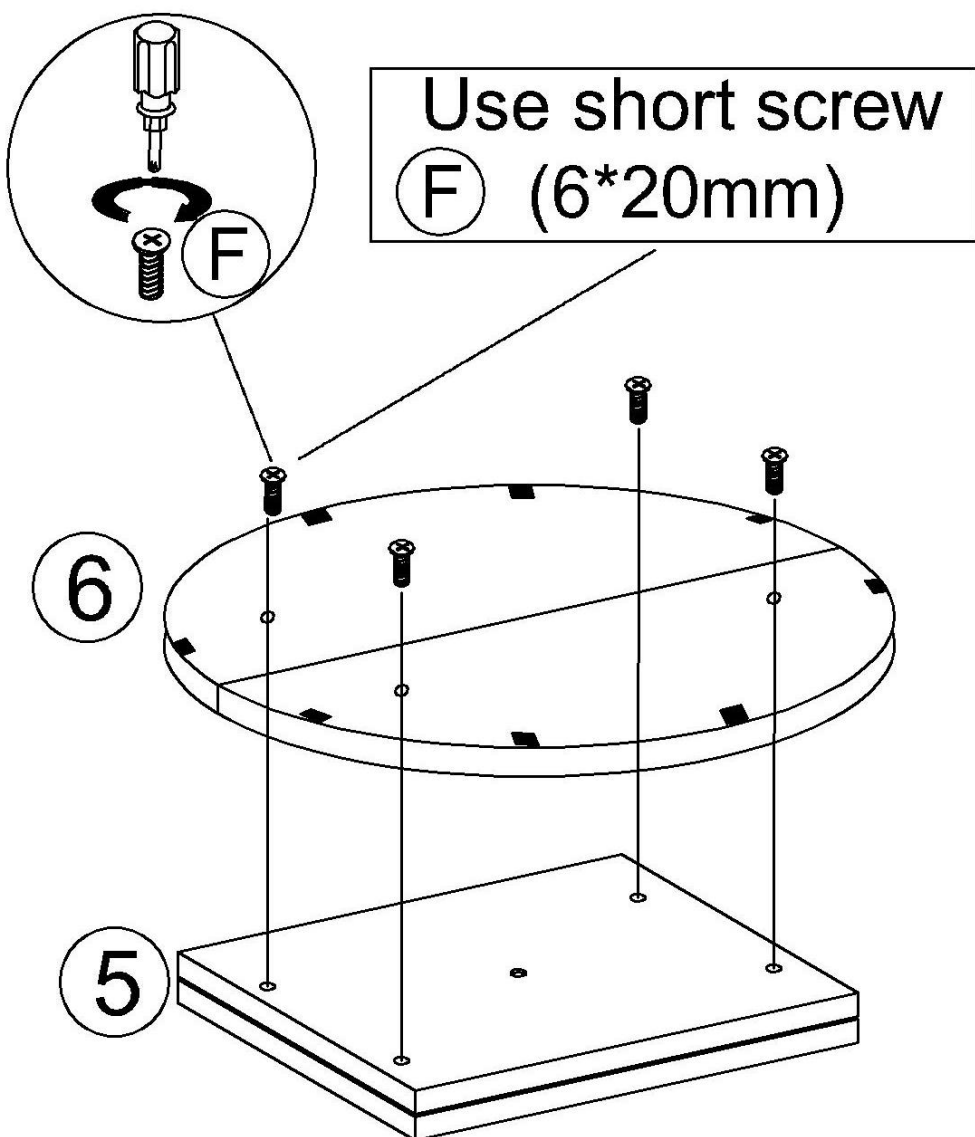

Use long screw
A (6*30mm)


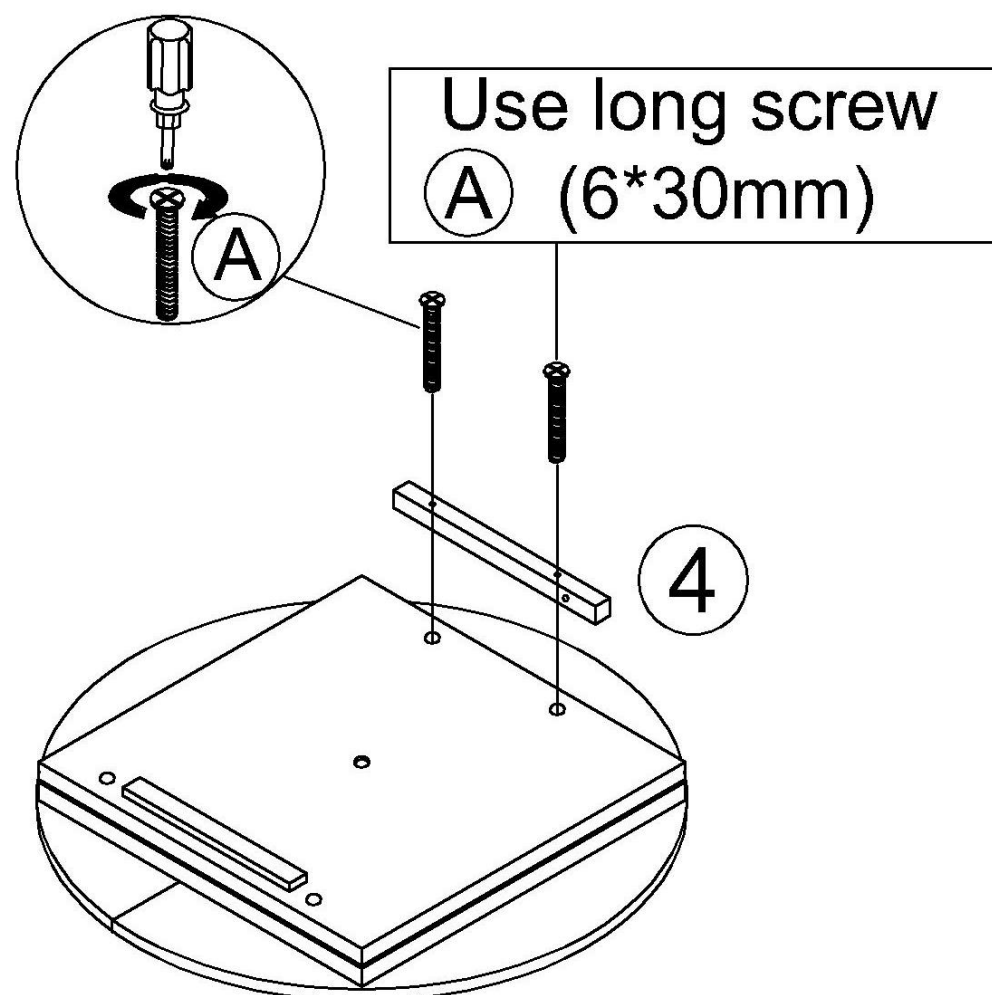


Step 2




A	 (6*30mm)	x 2
---	--	-----


Battery installation

(Tip: use 3 AA Batteries)

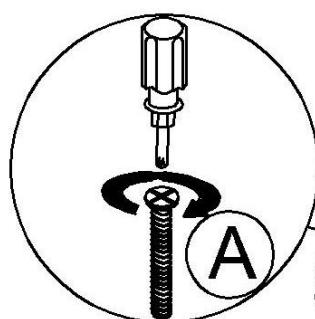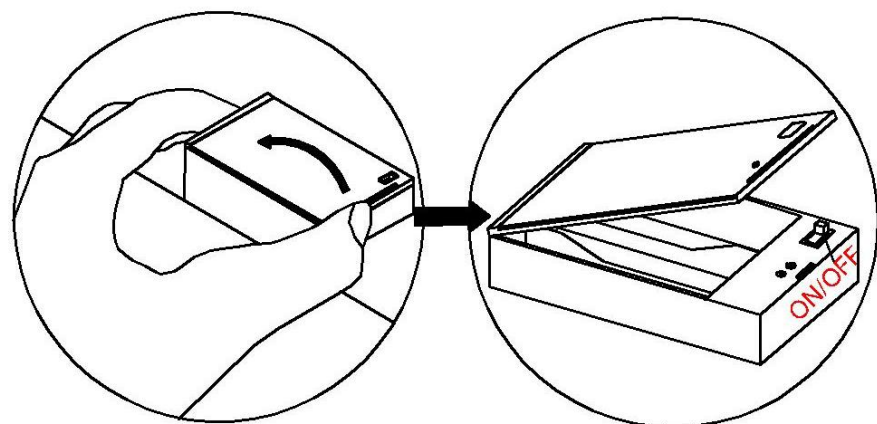

Step 3

D	 (5*8mm)	x 4
C	 (5*20mm)	x 4
A	 (6*30mm)	x 2

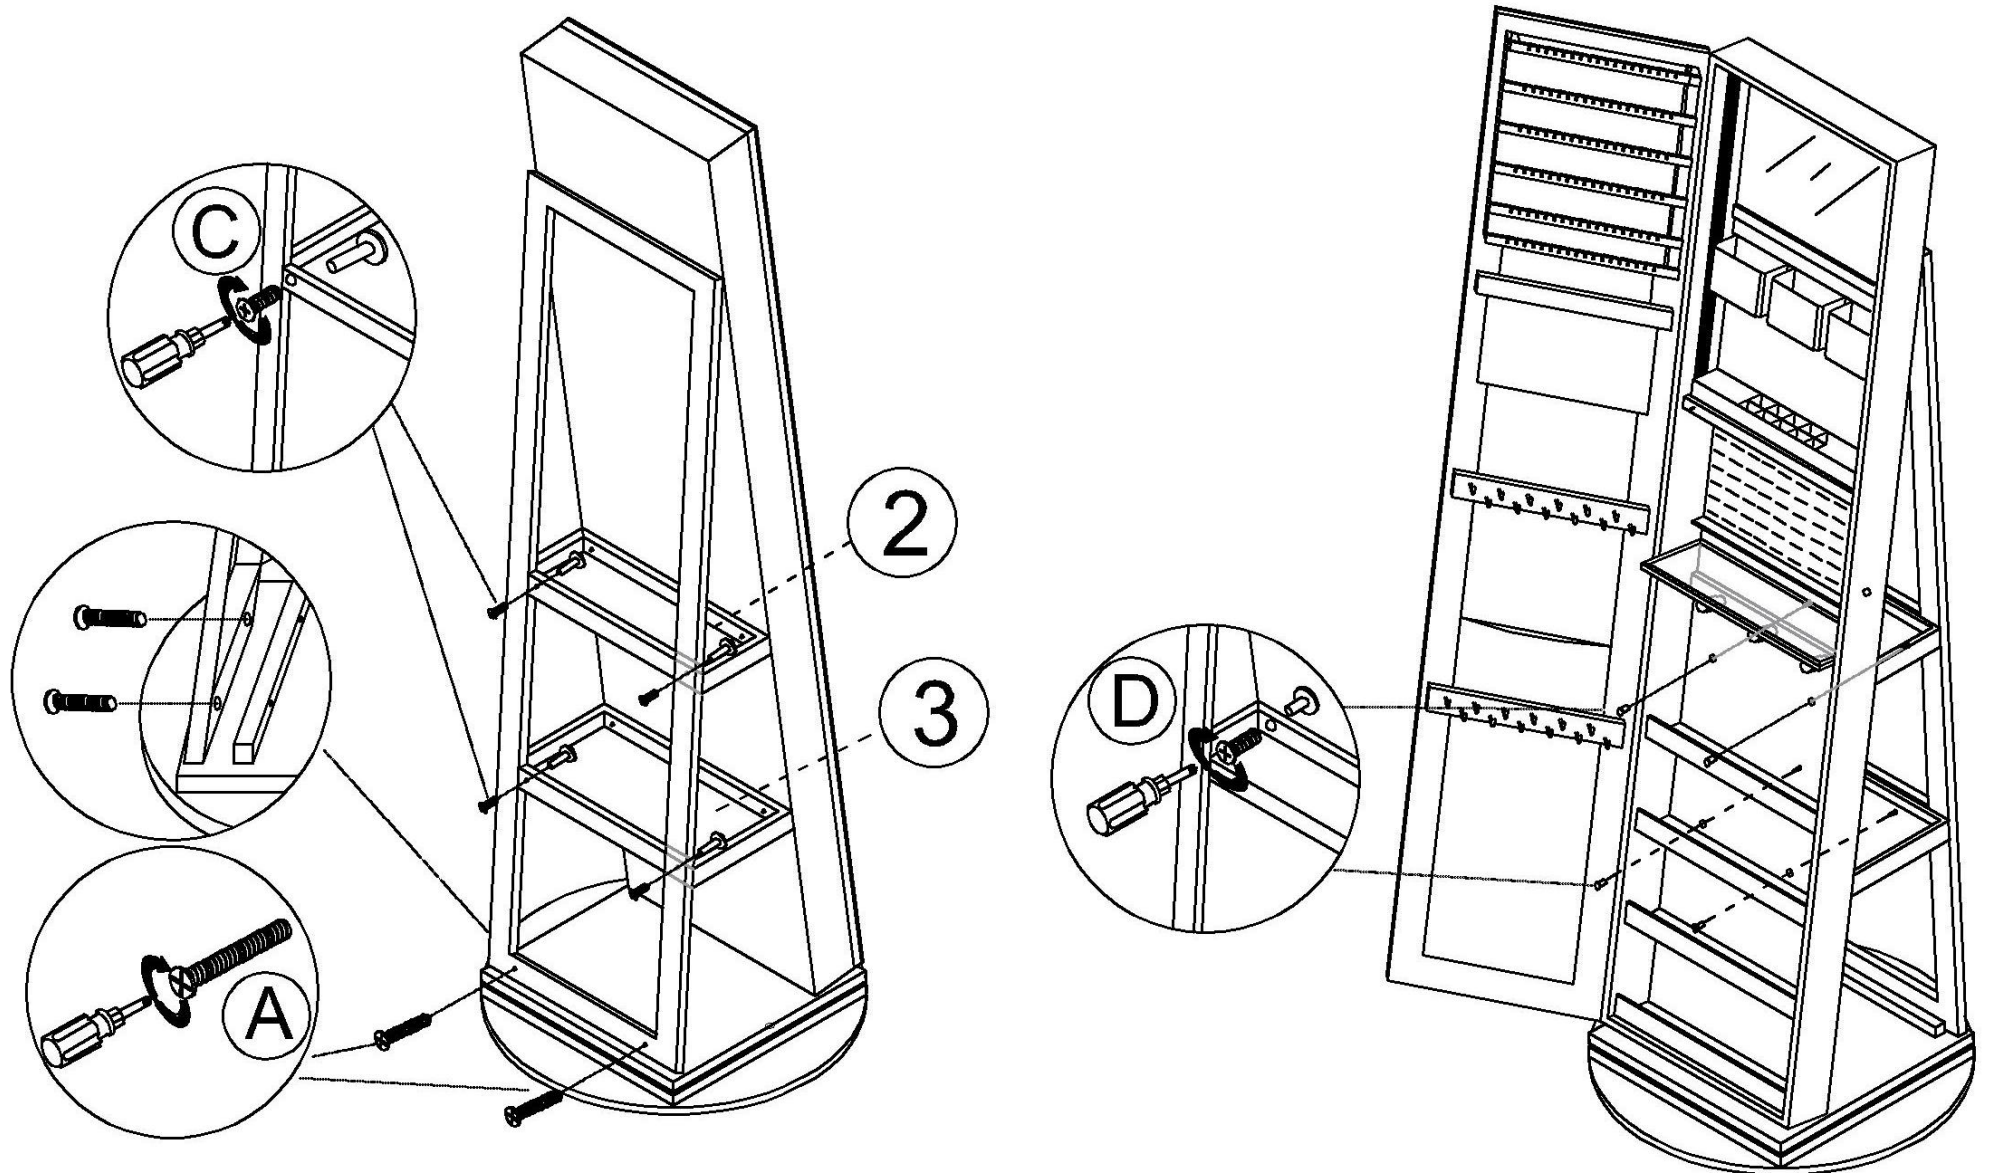

Step 4

B		x 1
---	---	-----

