


INSTALLATION MANUAL

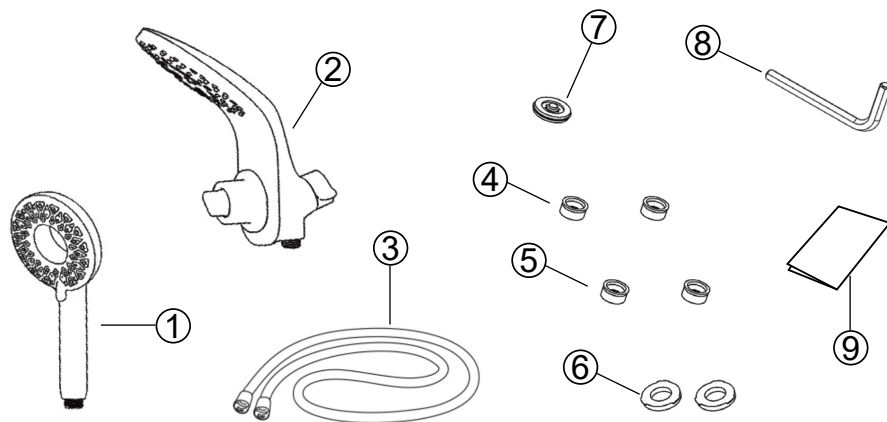

Accessory List

NO	NAME	QTY	NO	NAME	QTY
①	Handheld Spray	1	⑥	Gasket	2
②	Showerhead	1	⑦	Flow Restrictor (small)	1
③	Shower Hose	1	⑧	Allen Wrench	1
④	Gray water-saving Device (large)	2	⑨	Instruction	1
⑤	Blue water-saving Device (small)	2		/	


Cautions

1. Supply lines should be purged to clean impurities before connecting the unit.
2. Screw connections and test for leaks.


Important notice

For Installation Support, Missing Parts or Damaged Product, please do not return, just send email to **service@shamanda.com** to get FREE parts!


1.Remove the showerhead need to be replaced.

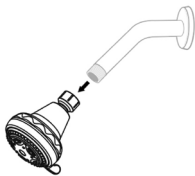



2.First,unscrew the nut of the showerhead.

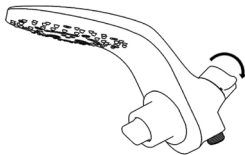


3.If installing a water-saving device,remove the gasket and support plug. Then press the small water-saving device into the ball joint, followed by reinserting the support plug and gasket. (The water-saving device for the showerhead is smaller,while that of the handheld sprayer is larger.)

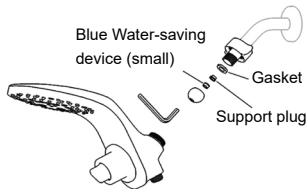


4.Assemble the ball joint and nut to the shower arm by threading them together as shown in the figure.Insert the allen wrench into the rear end of the ball joint to tighten. Once tightened, connect it to the showerhead.

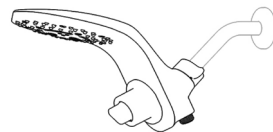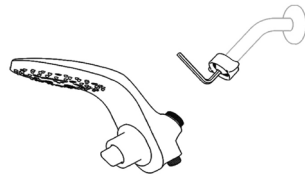

5.Ensure sealing gaskets are placed on both ends of the shower hose, then attach it with the showerhead connector, connect the fared fitting at the other end to the handheld sprayer.

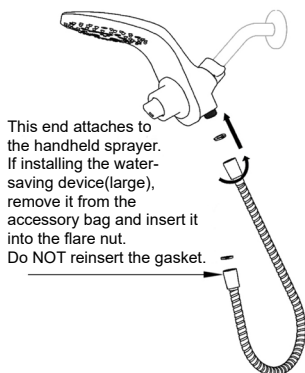

6.Thread the handheld sprayer onto the flared fitting end of the hose,then insert the handheld sprayer into the magnetic base of the showerhead.

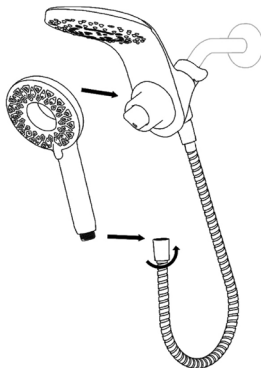

7.As shown above,this is the assembled unit. **Note:if you find a leakage in the connection during use,please follow these steps:**

- 1) Make sure there is a gasket at each connection,otherwise it may cause leakage.
- 2) Wrap 3-4 layers of teflon tape around the leaking connection threads and reinstall.

