


Shampoo Chair Instruction



Step 1: Check all parts you received

Part List			
			
A. (2pcs)	B. (1pc)	C. (1pc)	D. (1pc)
			
E. (1pc)	F. (1pc)	G. (1pc)	H. (1pc)
			
I. (2pcs)	J. (8pcs)	K. (1pc)	L. (1pc)
			
M. (4pcs)	N. (4pcs)	O. (40pcs)	P. (4pcs)
			
Q. (1pc)	R. (1pc)	S. (1pc)	T. (1pc)
			
U. (1pcs)	V. (1pc)	W. (1pc)	X. (1pc)
			
Y. (1pc)	Z. (1pcs)	Footrest. (1pc)	


Step 2: Unscrew the 4 bolts previously assembled on the Part “A”,use those bolts to connect Part “C” and Part “D” together as picture,don’t tighten.(Note the orientation of parts “C” and Part “D”)

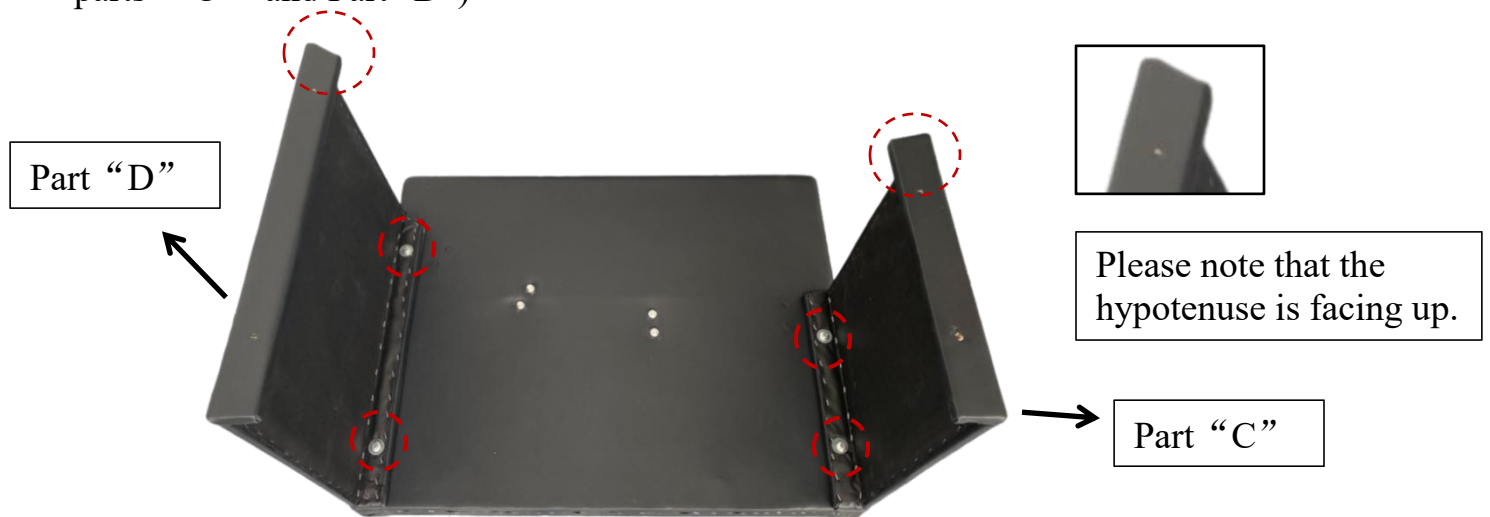

Step 3: Unscrew the 4 screws previously assembled on the Part “E” and Part “F”,assemble 2pcs Part “I” to the Part “E” and Part “F”,tighten.




Step 4: Unscrew the 4 screws previously assembled on the Part “A”, assemble Part “E” and Part “F” to the Part “A” by 4 screws,don’t tighten.(Note the orientation of parts “E” and Part “F”)

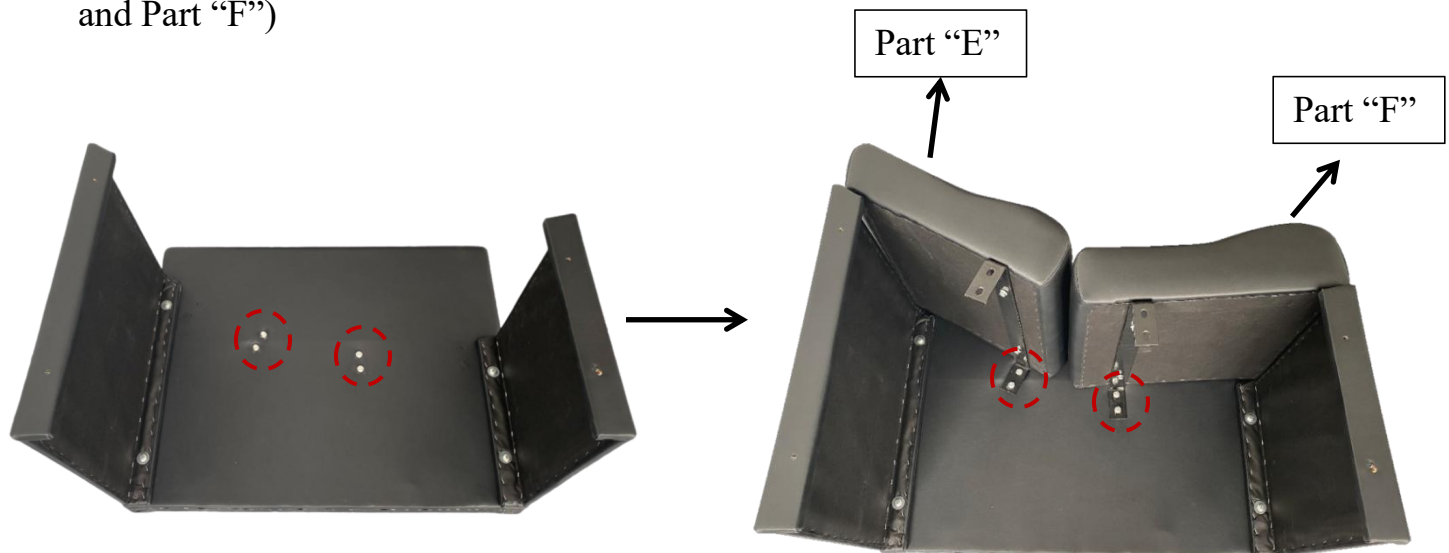


Step 5: Assemble another Part “A” to the cushion by 8 screws ,tighten all the screws.



Step 6: Unscrew the cover on part “J” and install the cover entirely on the Part “A” and Part “B” with screw “O”. Assemble Part “P” to the cushion between the Part “A” by 8 screws “O”,tighten.

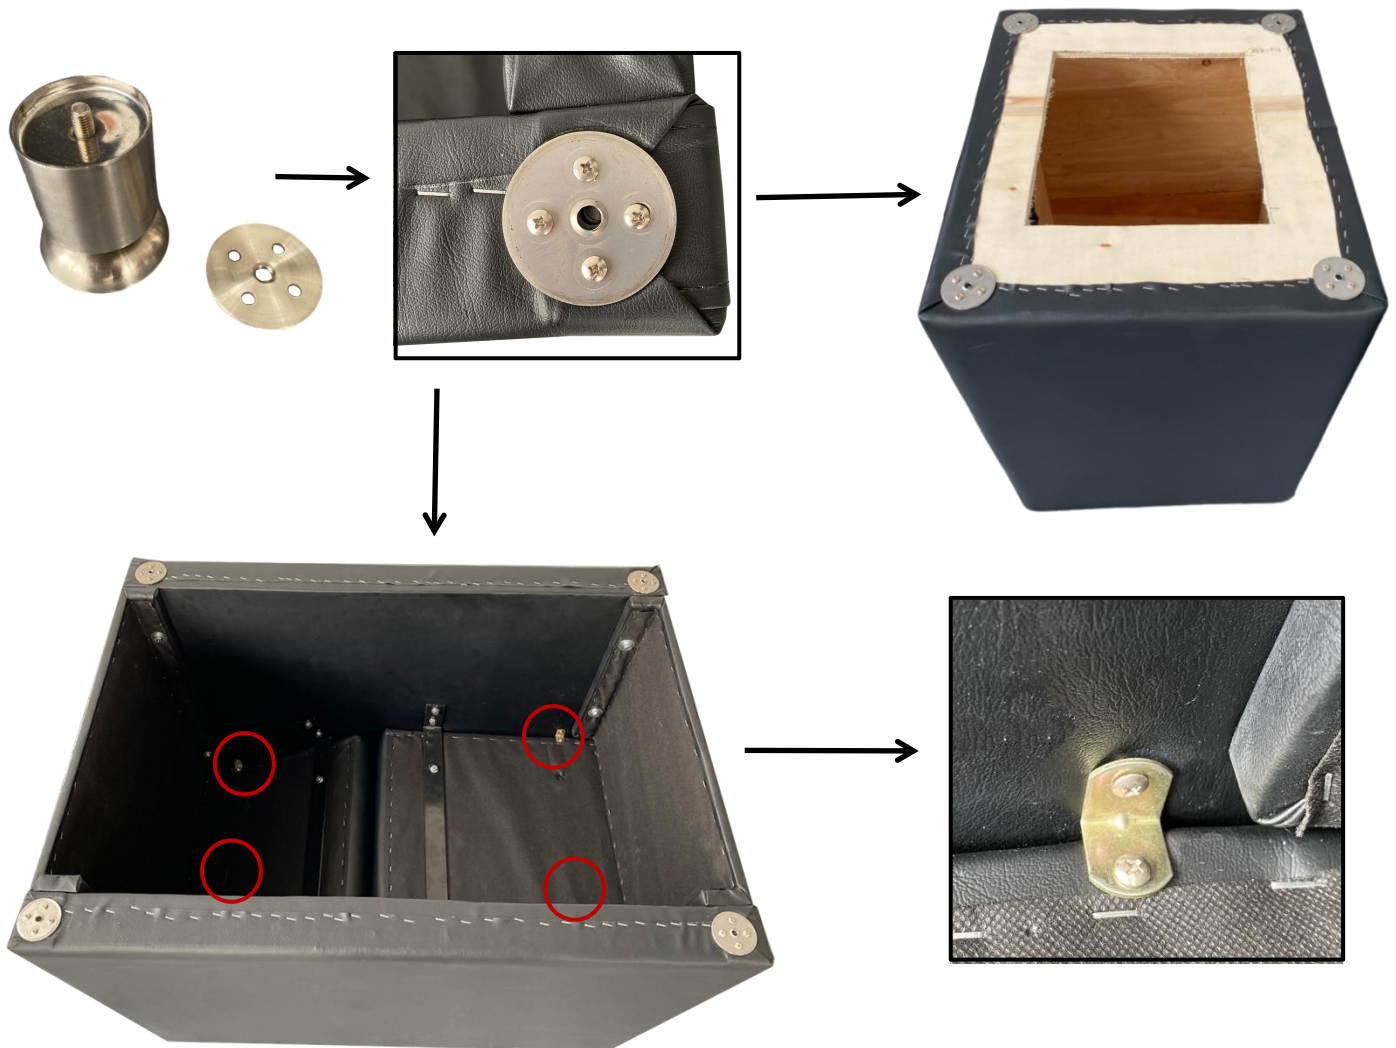


Step 7: Install part “J” on the cover and tighten.

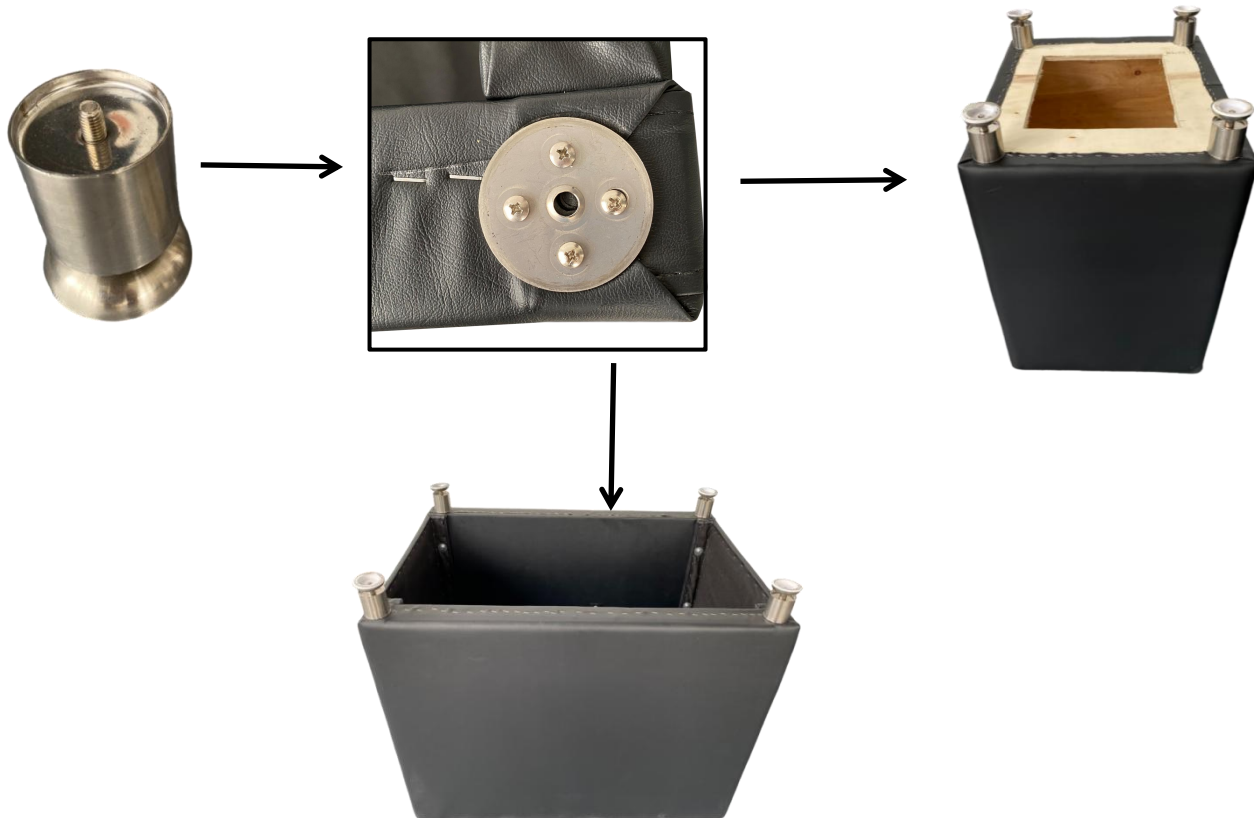


Step 8: Pry off the sliver cover on the Part “B” with a screwdriver and unscrew the screws to remove the cover. Then install Part “B” and the already installed chair are connected with Parts “N” and “M”,tighten.



Step 9:Place rubber ring “Y” in pipe “T” , then put down water pipe on the bottom of filler in ceramic basin, remove 3pcs nuts and washers of the ceramic bowl .

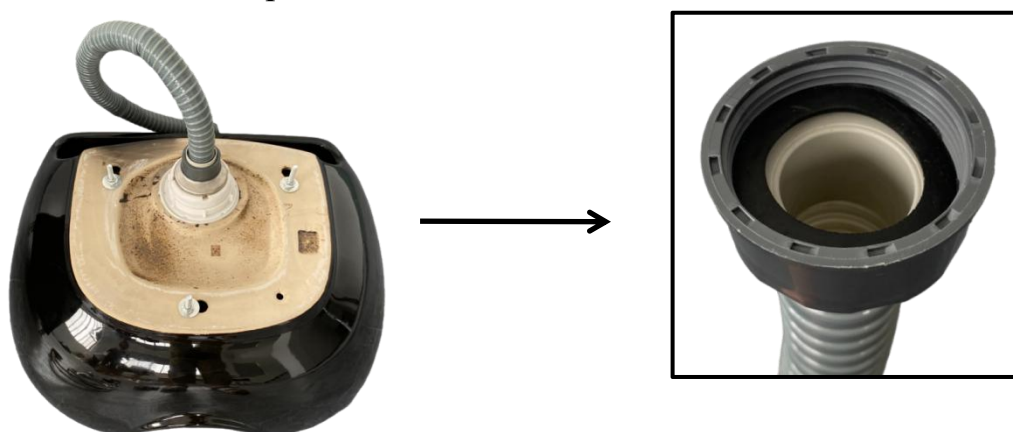

Step 10: Unscrew the nut preinstalled on Part “U” , and install it on Part “V” , and install water pipe “R” and “S” on it according to the picture, tighten.

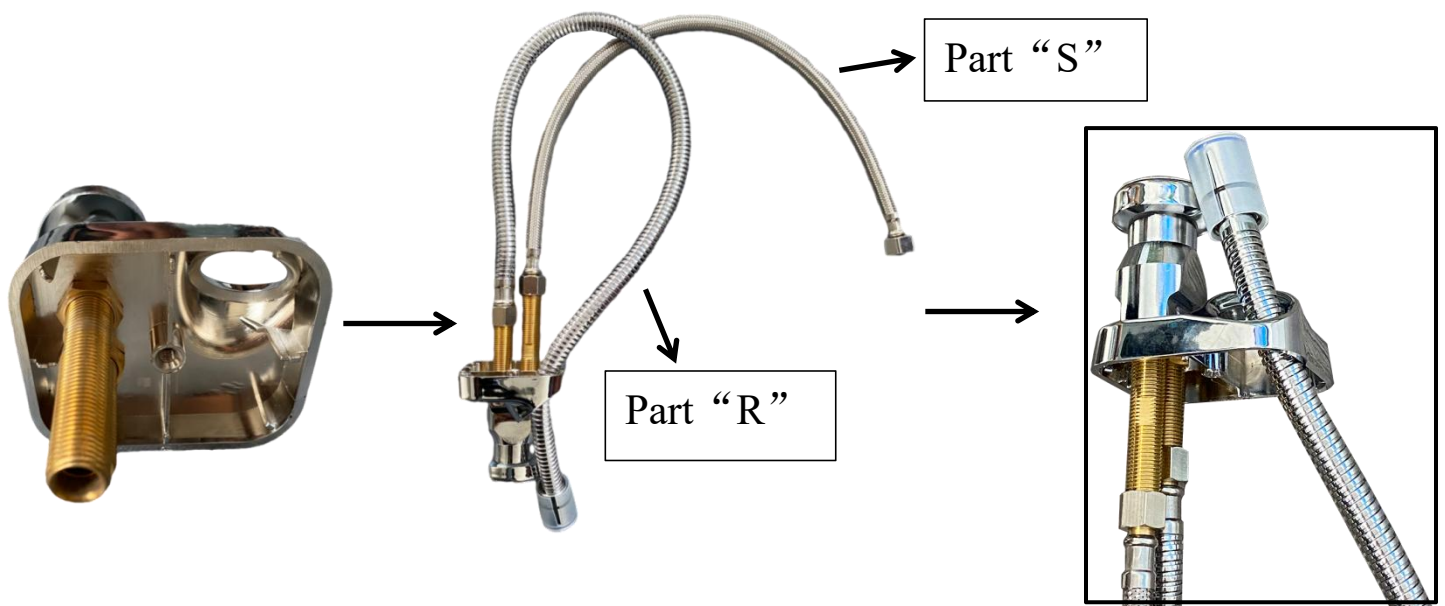


Step 11:

Firstly, put basin into Part “B” .Open the cover under the part “B” and reattach the screws that have been removed from the ceramic basin by step 9. Secondly, close the cover and install the screws ,then install the screw lid  on the screws. Finally, use Parts “W” and “X” to fix Part “V” and ceramic basin as picture, tighten. (Please note that when you feel the screw in a certain distance, do not screw in too much to prevent the screw from puncturing the part.)



Step 12: Loosen nuts on faucet “Q” and take gasket  out, put Part faucet into the hole of bowls, tighten by the nut and gasket. Connect the pipe “S” to the faucet and tighten.

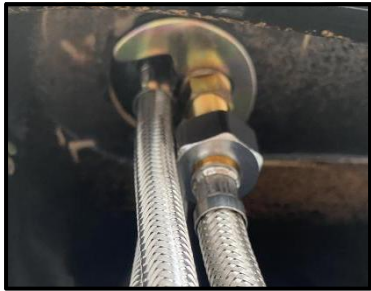

Step 13: Install shower head “Z” onto pipe “R” , install the funnel “H” ,headrest “K” and “L” as shown.

