

Left Arm Installation

Hardware List



Bottom panel

1



Armrest

1



Nuts、
Washers、long screws

8



8x25mm screws

4

Hardware List



Backrest

1



Seat cushion

1




Legs

4




Connecting piece

1

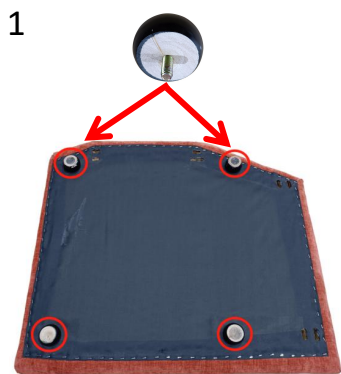

Screw the sofa Legs into the reserving holes on the bottom panel.

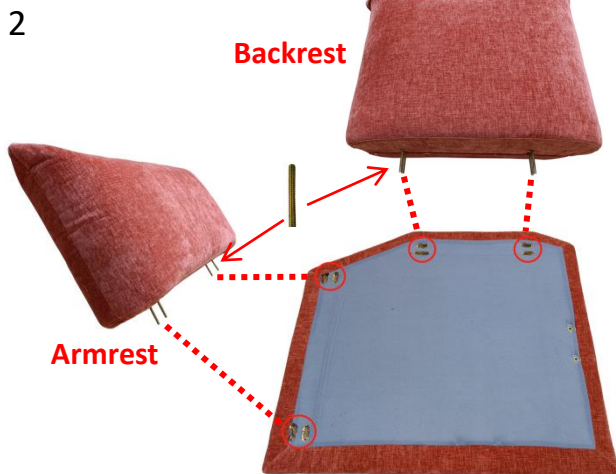

First, screw the long screws into the holes reserved for backrest and armrest about 1/4 of the depth, then insert them to the holes on the bottom panel.

3



Fasten them with nuts from the bottom (please tighten each nut repeatedly to ensure firmness).




4 Place the seat cushion on the half done seat unit to complete seat installation.



5 Use 8x25mm screws and connecting pieces to fix seats together according to the reserved screw holes if connecting seats are preferred.



8x25mm screw

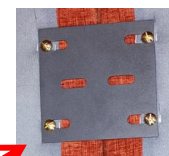


6 Supplementary instructions for installing the connecting pieces (If connecting seats are not preferred, please ignore this step): First screw in the two screws on one side (note not to tighten them completely), then slightly lift the bottom panel on the other side as shown in the figure, and screw in the other two screws. Then level the panels and tighten the 4 screws completely.




Right Arm Installation


Hardware List		Hardware List	
 Bottom panel	1	 Backrest	1
 Armrest	1	 Seat cushion	1
 Nuts、 Washers、long screws	8	 Legs	4

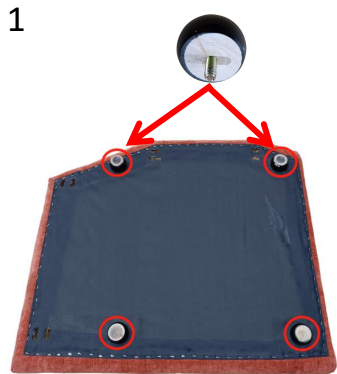

Screw the sofa Legs into the reserving holes on the bottom panel.

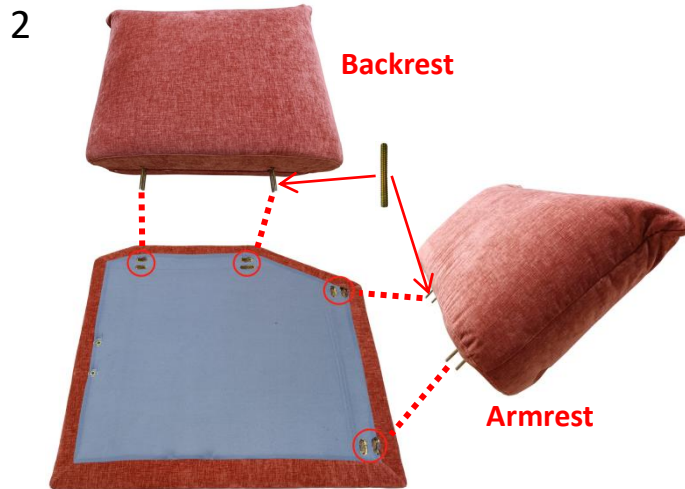

First, screw the long screws into the holes reserved for backrest and armrest about 1/4 of the depth, then insert them to the holes on the bottom panel.

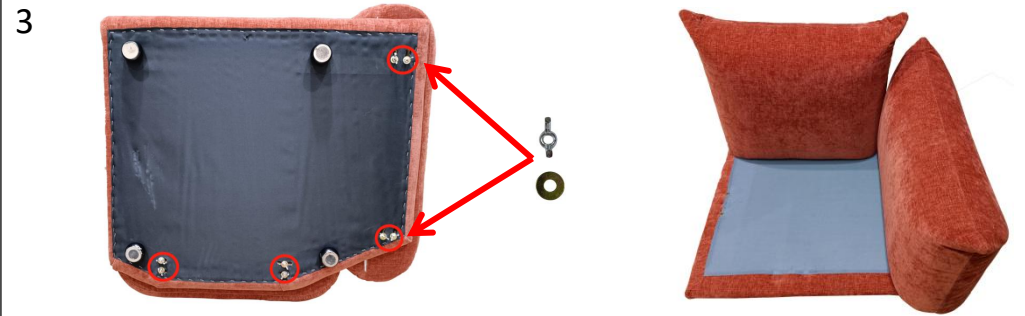


Fasten them with nuts from the bottom (please tighten each nut repeatedly to ensure firmness).

4 Place the seat cushion on the half done seat unit to complete seat installation.



5 Use 8x25mm screws and connecting pieces to fix seats together according to the reserved screw holes if connecting seats are preferred.

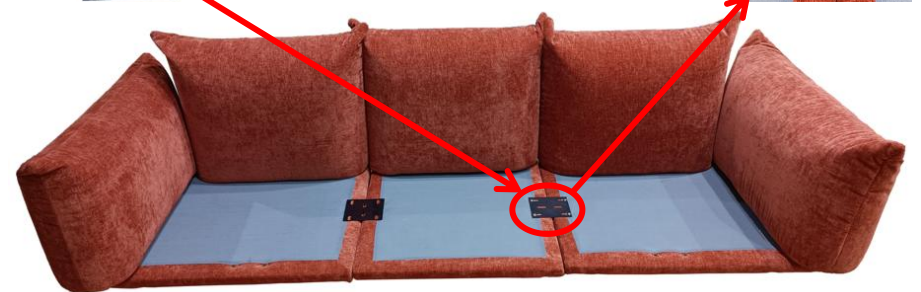


Median Installation


Hardware List		Hardware List	
 Bottom panel	1	 Backrest	1
 Seat cushion	1	 Nuts、 Washers、long screws	4
 Legs	4	 Connecting piece	1
 8x25mm screws	4		



Screw the sofa Legs into the reserving holes on the bottom panel.

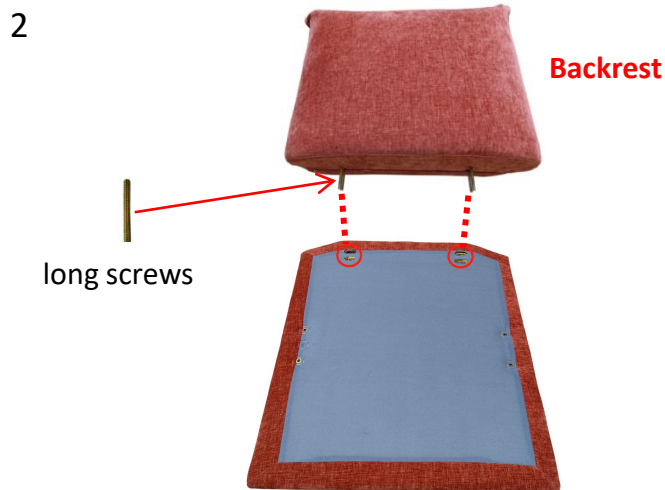

First, screw the long screws into the holes reserved for backrest and armrest about 1/4 of the depth, then insert them to the holes on the bottom panel.

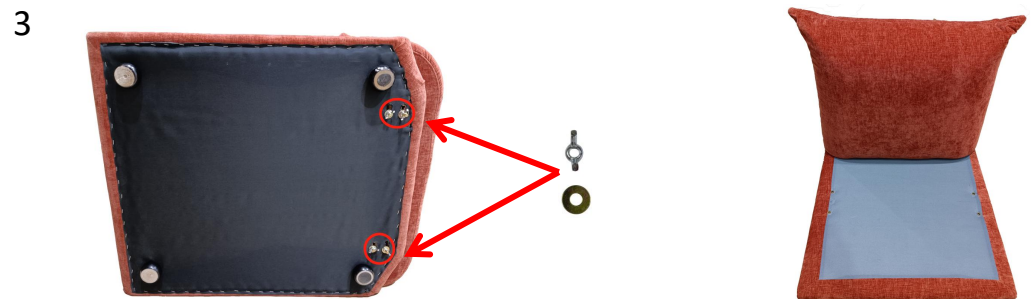


Fasten them with nuts from the bottom (please tighten each nut repeatedly to ensure firmness).


4 Place the seat cushion on the half done seat unit to complete seat installation.




5 Use 8x25mm screws and connecting pieces to fix seats together according to the reserved screw holes if connecting seats are preferred.

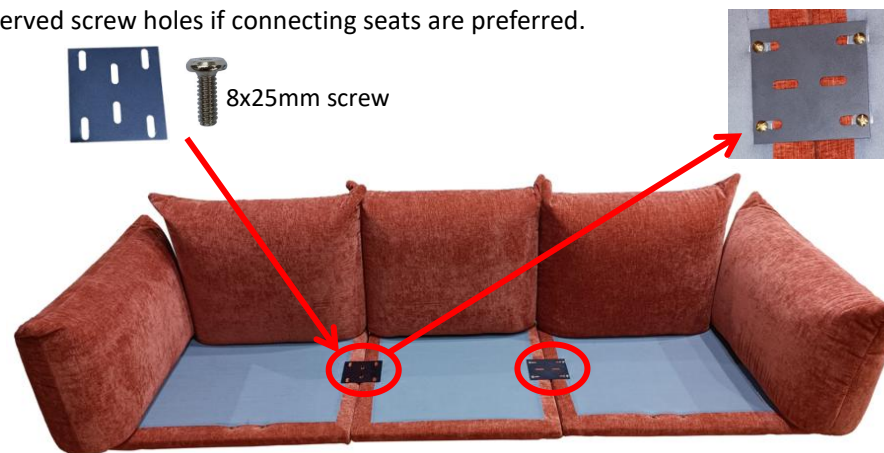

Ottoman Installation

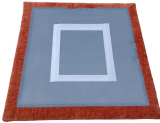Hardware List		Hardware List	
 Bottom panel	1	 Seat cushion	1
 Legs	4		

1

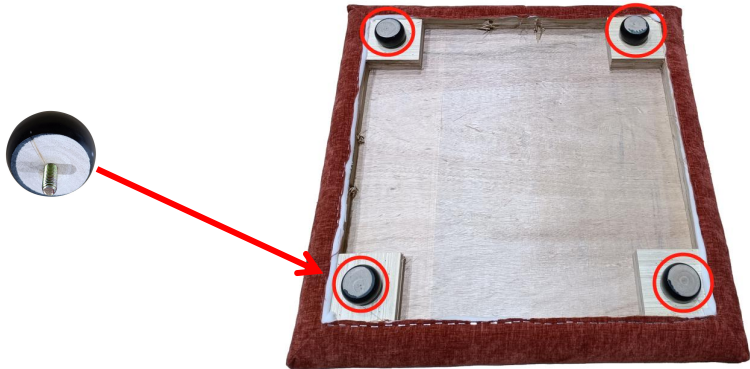

Screw the sofa feet pads into the reserving holes on the bottom panel.

2



Align the Velcro on the seat cushion and on the bottom panel and attach them together.