
# **ASSEMBLY INSTRUCTIONS**

Customer Service: cs@nbrehome.com

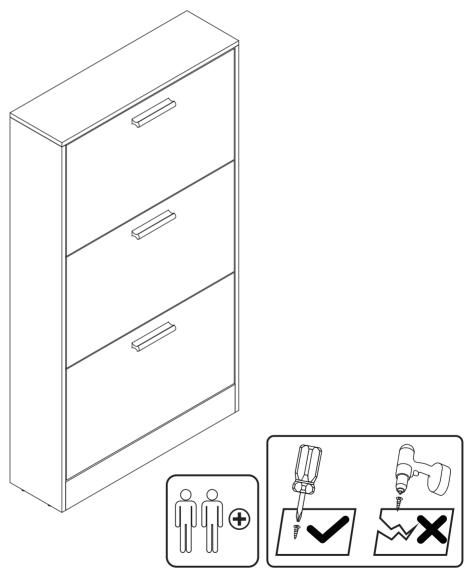

**Tools Recommended** 

THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

Need Parts or Assistance? Email us: cs@nbrehome.com

## **IMPORTANT NOTICE**

- -This product contains small components, please ensure that they are kept away from small children.
- -THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.
- -Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- -Make sure all parts are included. Most parts are labelled or stampled on the raw edge.
- -Work in spacious area, preferably on a carpet, near the place the unit will be used.
- -Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.
- -Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- -Never push, drag or pull your furniture (especially on carpet)



### PLEASE DO NOT RETURN PRODUCT TO US IMMEDIATELY

If a part is missing or damaged, email our customer service. We will gladly ship your replacement parts FREE of charge.

Need Parts or Assistance? Email us: cs@nbrehome.com

For Prompt, reliable service, please have your assemble instruction ready

# WARNING

Children have died from

risk of furniture tipover: ALWAYS install anti-tip device




### provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or



hang on any drawers, doors, or shelves.


furniture tipover. To reduce the

- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers. This is a permanent label. Do not remove!

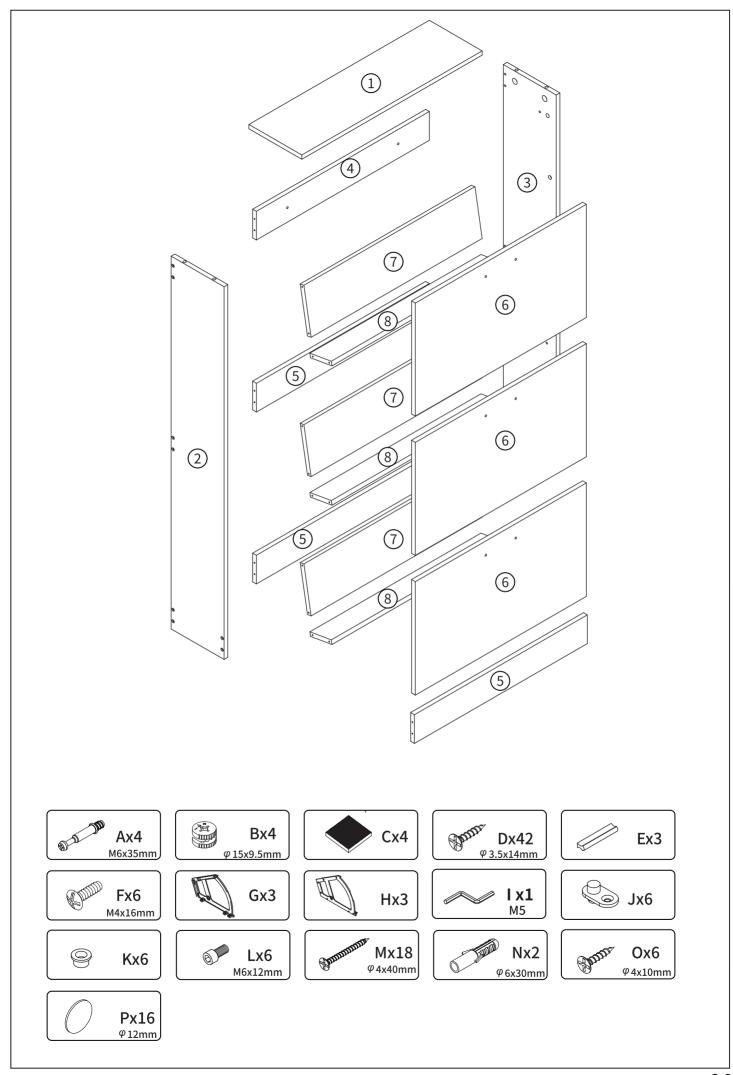


Step 1 Lock screw (A) on the part ①, then use Hardware (O) to install hardware (J) onto parts ② and ③.


The installation position is as shown in the figure below.

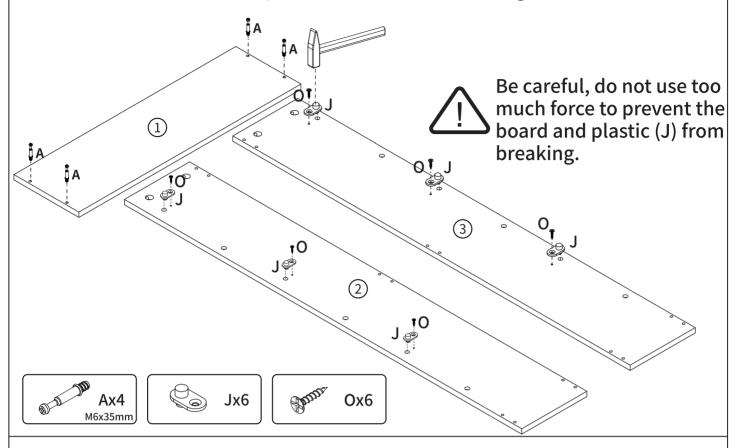

Assemble Part 2 with Part 4 and 5 with screw (M). Part (P) is hole sticker, you can use to cover the hole. The installation position is as shown in the figure below.

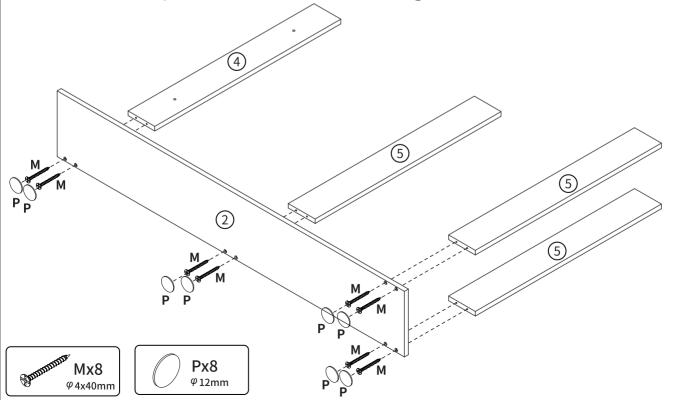


Assemble Part 3 with Part 4 and 5 with screw (M). Part (P) is hole sticker, you can use to cover the hole. The installation position is as shown in the figure below.

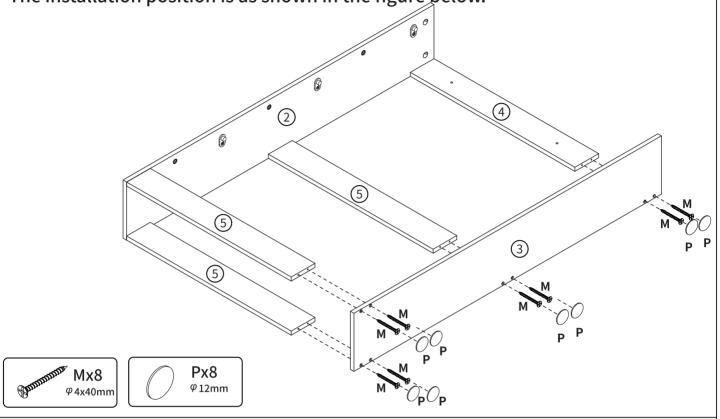


### Step 4


Put the eccentric (B) into the corresponding hole and use a flat-blade screw driver to turn it clockwise to tighten. Install the foot pad (C) in the appropriate position for the parts (2) and (3).

The installation position is as shown below.

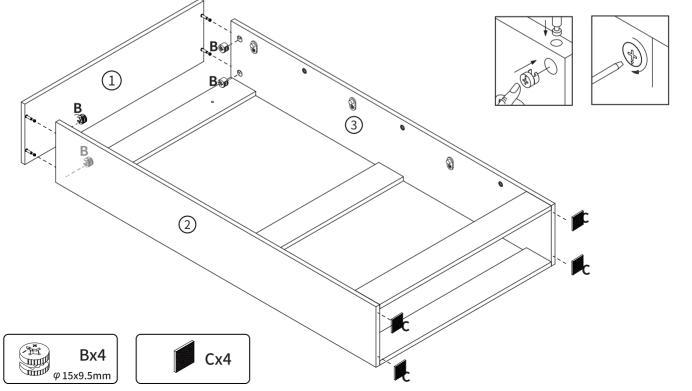

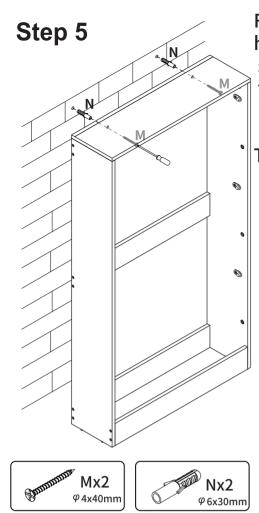


Firstly, determine the hole position of the wall, drill holes in the hole position, and insert the expansion screw (N) into the face of the wall. Secondly, place the back of the shoe cabinet against the wall, and insert the screw (M) through the pilot hole on the part (4) and into the expansion screw (N). The installation position is as shown in the figure below.

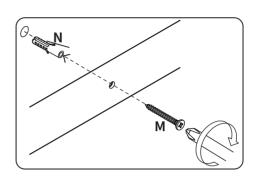


### Step 6

Firstly, assemble (H) and (G) on the part (6) with screw (D), then install handle (E) on the part (6) with screw (F).

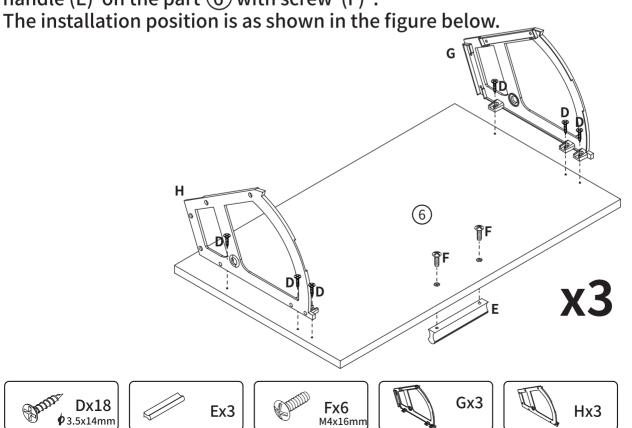

Install the parts 7 and 8 on (H) and (G) using screw (D). The installation position is as shown in the figure below.

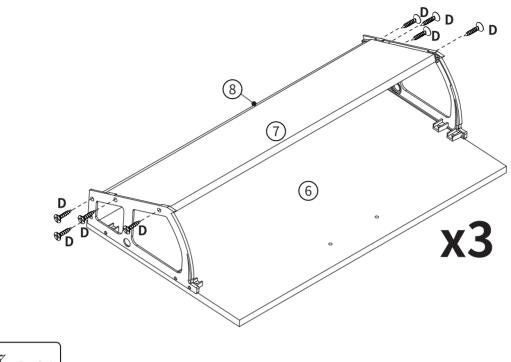



Step 8 Install hardware (K) as shown, then lock it on parts ② and ③ using screw (L) and wrench (I).
The installation position is as shown in the figure below.

