

BOOKCASE

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!!



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

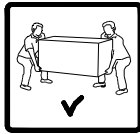





ASSEMBLY TIME PER UNIT: 60 MINUTES

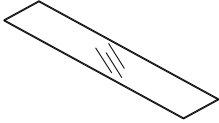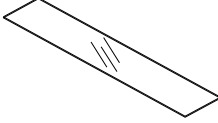B1: TOP




PARTS IDENTIFICATION

<p>A</p> <p>TOP GLASS</p>  <p>1PC</p>	<p>B</p> <p>GLASS SHELF</p>  <p>4PCS</p>
--	---

B2: BASE

<p>C</p> <p>TOP CROSSBAR</p>  <p>2PCS</p>	<p>D</p> <p>SUPPORT CROSSBAR</p>  <p>6PCS</p>
<p>E</p> <p>CROSSBAR</p>  <p>2PCS</p>	<p>F</p> <p>FRAME</p>  <p>2PCS</p>

HARDWARE PACKAGE


Z	DESCRIPTION	FIGURE	Q'TY
1	BOLT (3/16"x50mm)		8PCS
2	CAP (10x20mm)		12PCS
3	BOTTOM CAP (20x20mm)		4PCS

ASSEMBLY INSTRUCTION


4	LED BOLT (3/16"x21mm)		20PCS
5	LED COVER (φ 5x10mm)		20PCS
6	ALLEN WRENCH (3mm)		1PC

Hardware pack is located in B2


STEP 1

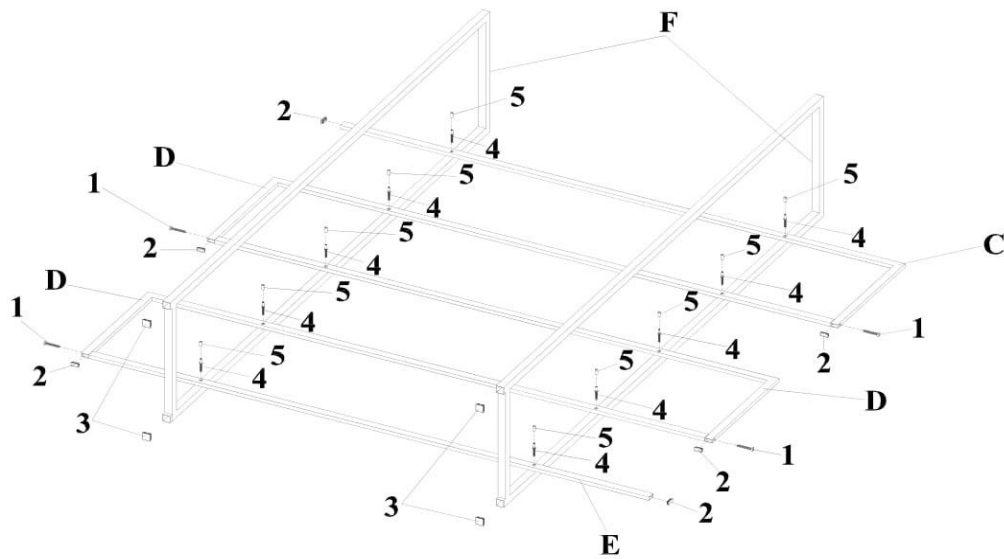



STEP 2

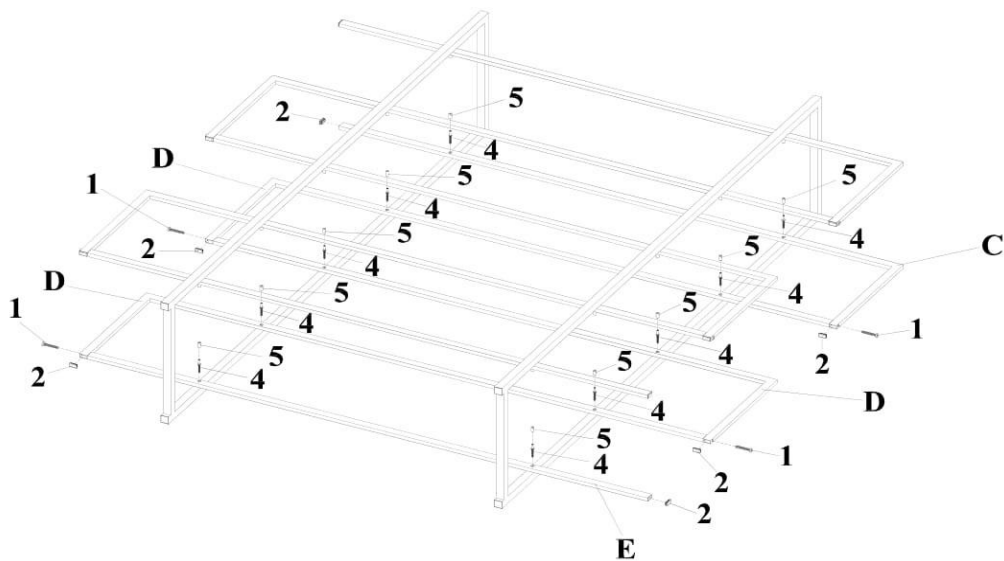

STEP 3


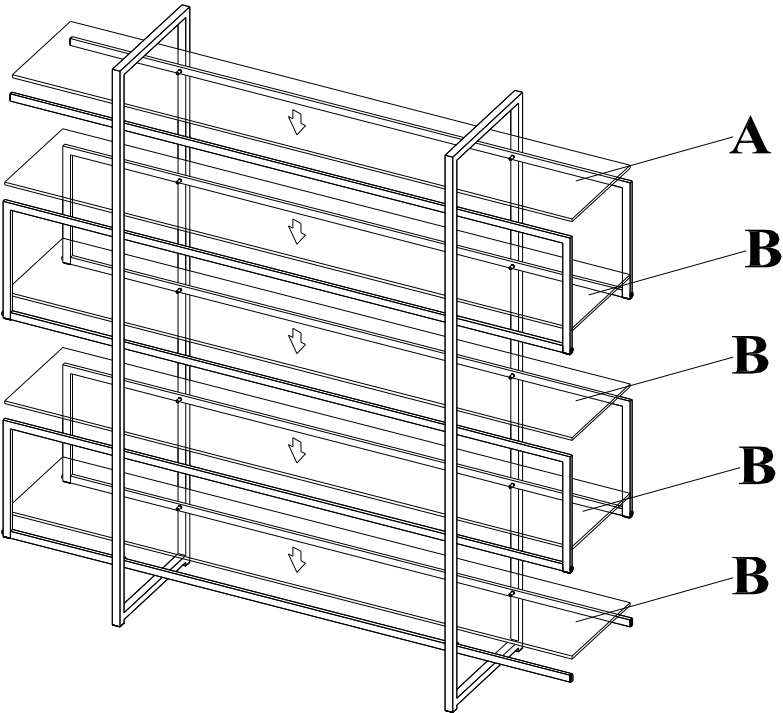


FINISH

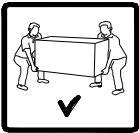
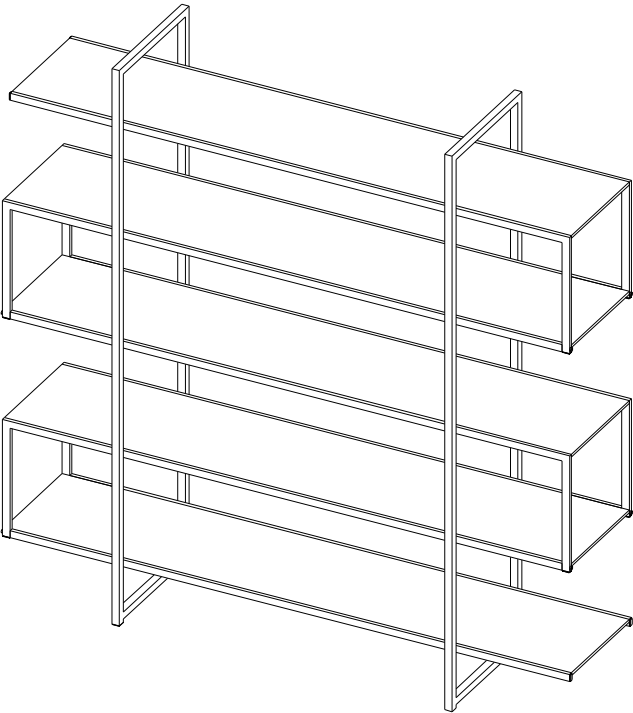


Assembly Instruction of Anti-tipping hardware



STEP 1

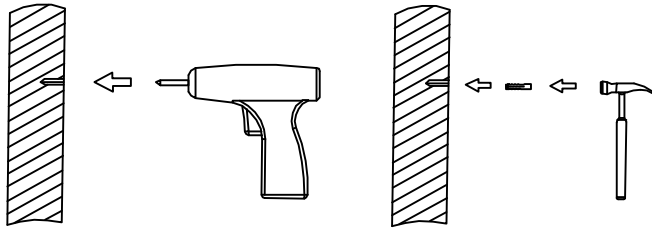



STEP 1

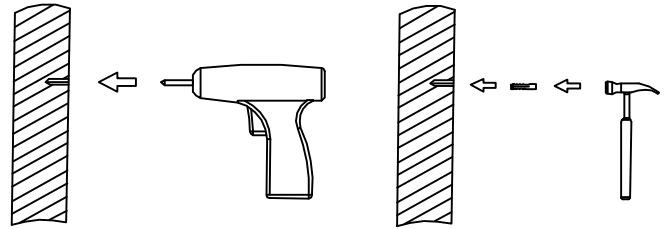



STEP 2

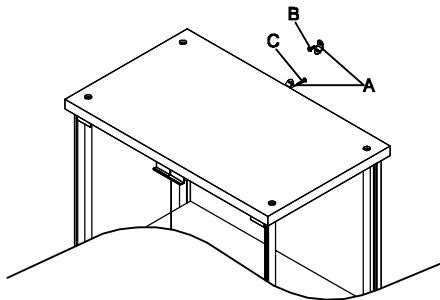


STEP 2

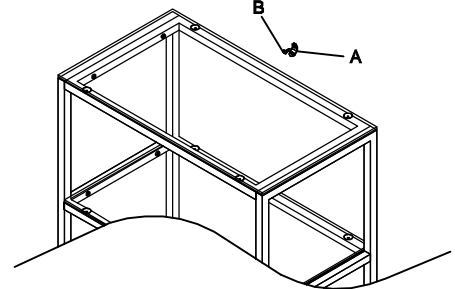

STEP 3

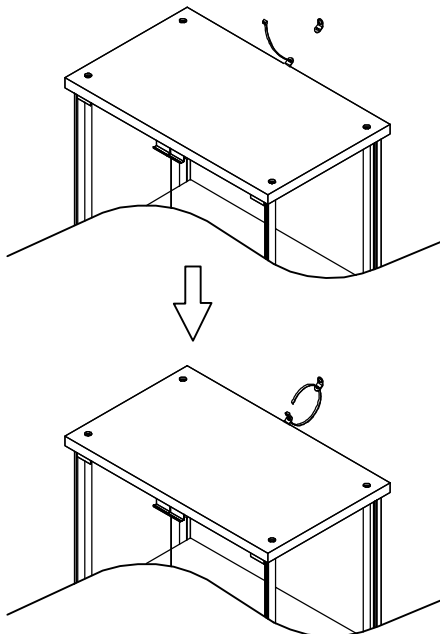

STEP 3

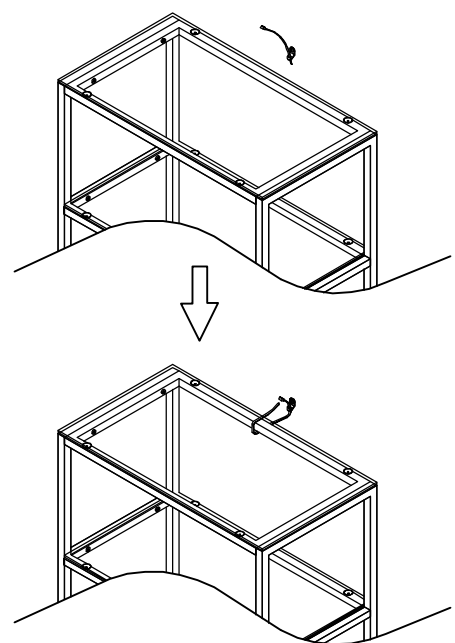

WARNING

Injury may result from tipping furniture
 This restraint is not a substitute for proper adult supervision.
 This restraint may provide protection against tipping furniture.
 Do not allow children to climb on furniture.
 Failure to detach this restraint before moving furniture may
 result in injury and damage.