
Instruction

Step 1: Check all parts you received.

Part List			
			
A.(1pc)	B.(1pc)	C.(1pc)	D.(1pc)
			
E.(2pcs)	F.(2pcs)	G.(1pc)	H.(2pcs)

							
I.(2pcs)	J.(2pcs)	K.(1pc)	L.(1pc)	M.(1pc)	N.(1pc)	O.(5pcs)	P.(2pcs)


Step2: Attach Parts O (5 pcs.) onto the five feet on the back of Part M (1 pc.).




Step3: Put Part K (1 pc.)on thecPart M (1 pc.) Insert the assemble Part K (1 pc.) into Part M (1 pc.).




Step4: Insert Part N (1 pc.) into the central hole of Part L (1 pc.).

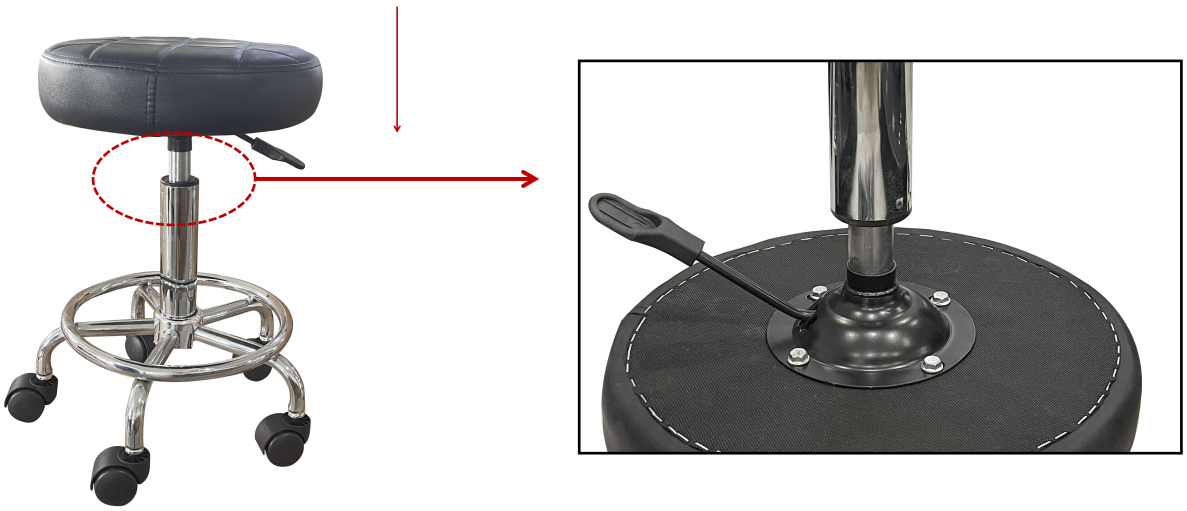

Step 5: Remove the pre-installed screws on the “B” , assembel “H” to “B” by those screws,tighten,pay attention the direction of “H”.

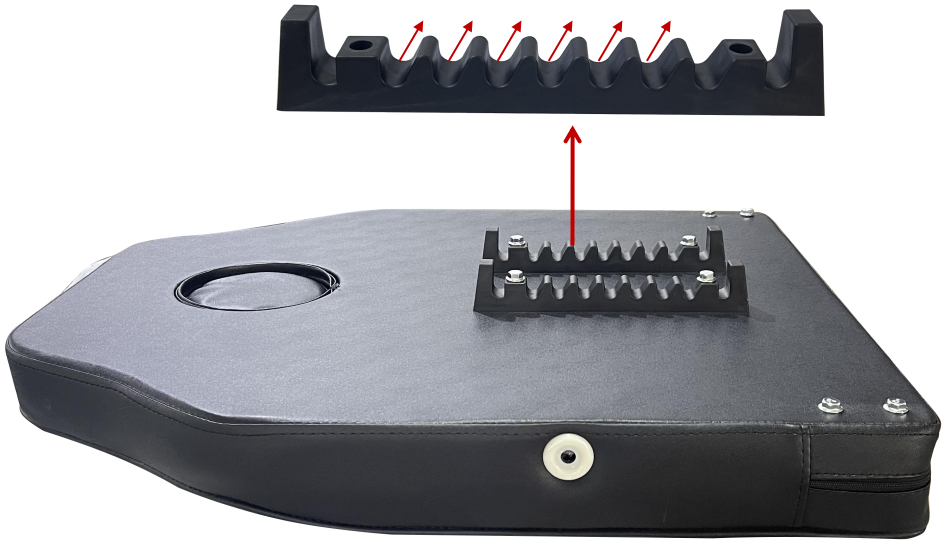

Step 6: Remove the pre-installed screws on the “D” , connect “C” and “D” by those screws,as picture.

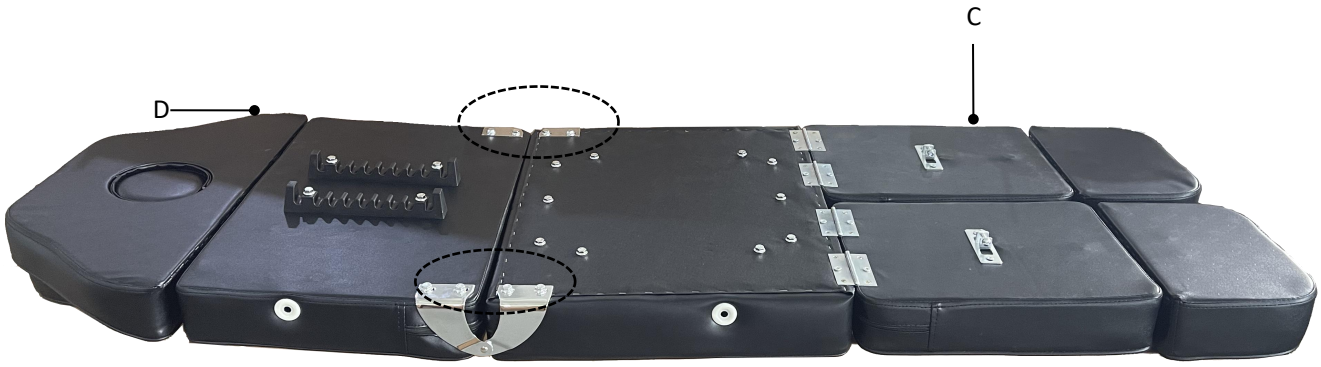


Step 7: Remove 6 pre-installed screws on the “C”, assemble “A” and “B”to the “C” by those screws,as picture show.



Step8: Remove the pre-installed screws at both ends of “G”, pass G horizontally through the hole on “A” and “B”, reinstall the pre-installed screws.



Step 9: Loosen the screw on the metal of “C”, pass the end of “F” with the hole through the hole of the handle of “A”, and fix “F” on the metal of “C “with the screws just loosen,as picture show.

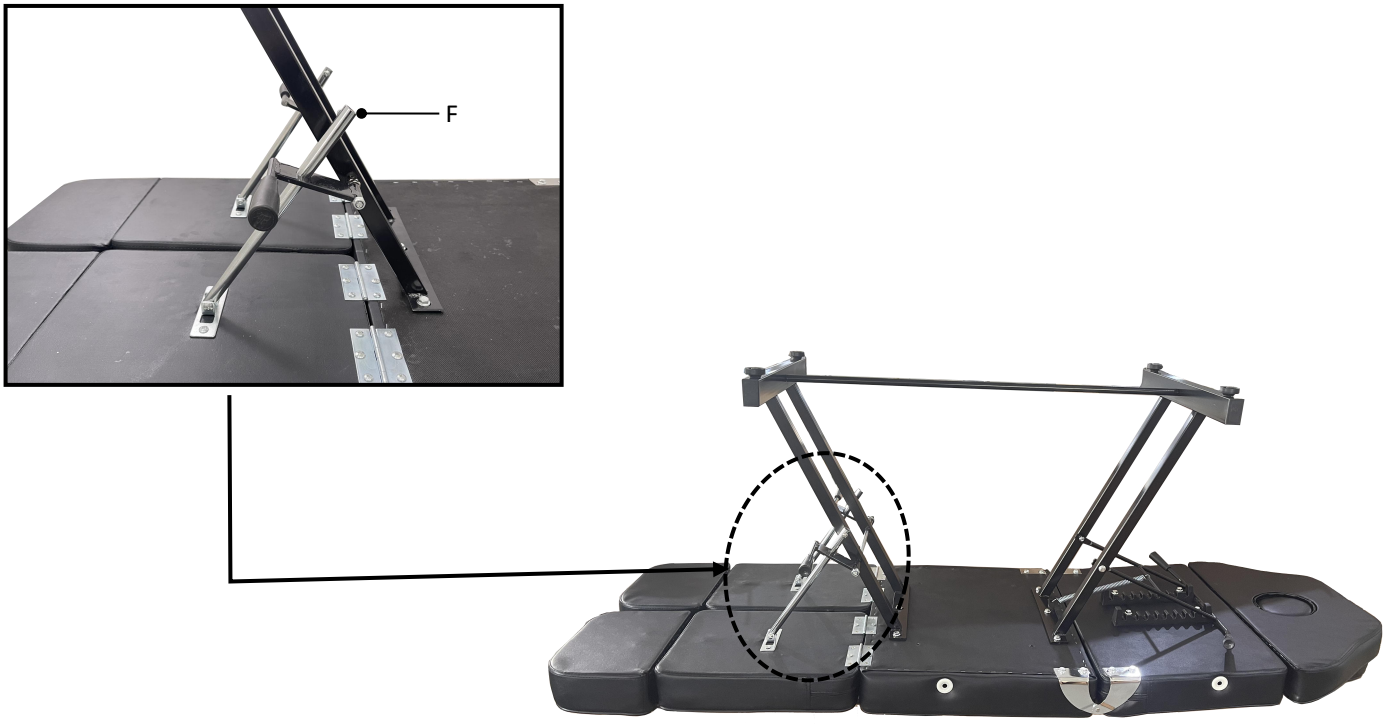

Step10: Remove 4 screws preinstalled on part C(1pc.) ,assemble J(2pcs.) to the C(1pc.) , and tighten screws. Place the part P(2pcs) between the parts J(2pcs) and clamp.



Step 11: Insert “E” into “C” and “D” ， as picture.

