




ASSEMBLY INSTRUCTIONS

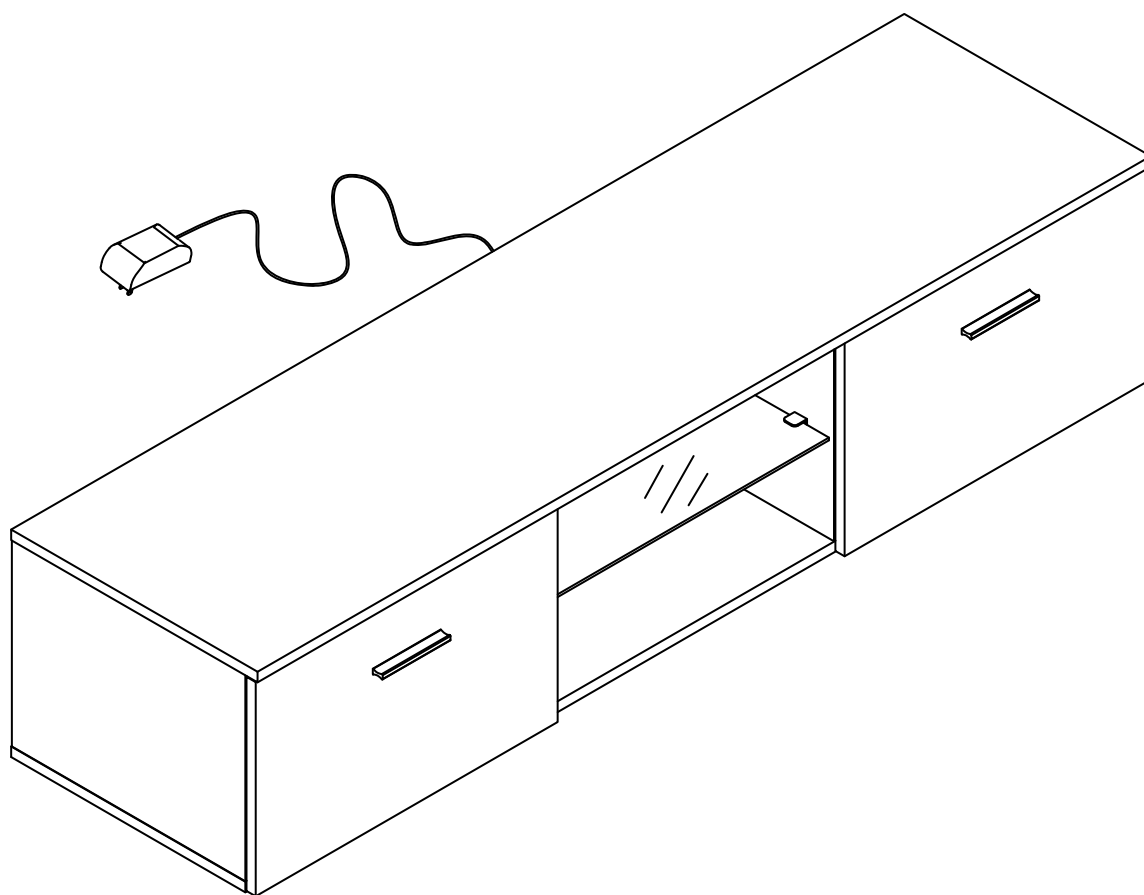


BOARD IDENTIFICATION

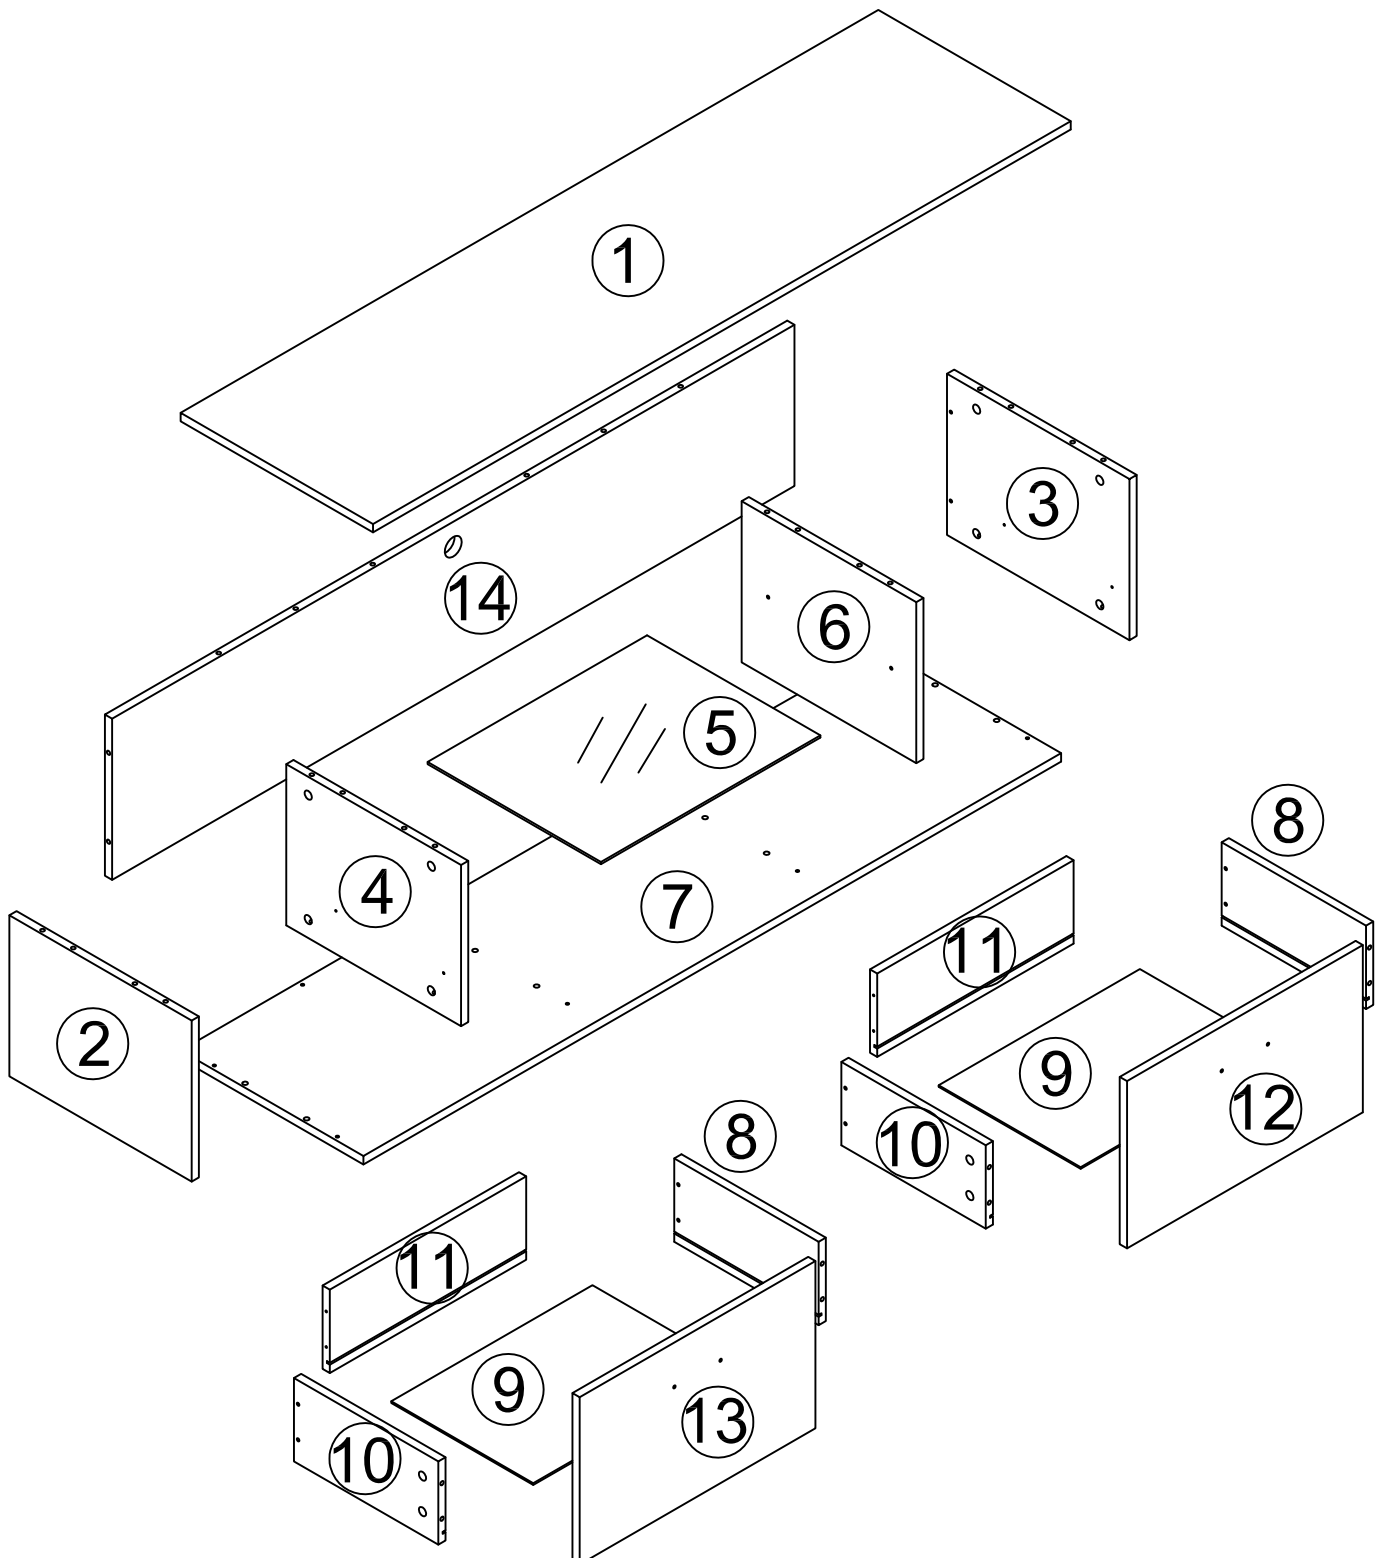


BOARD IDENTIFICATION

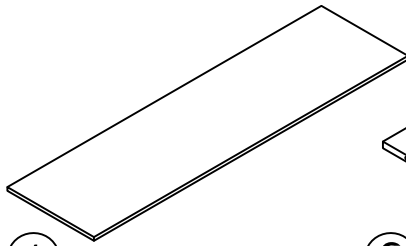


①
MAIN PANE

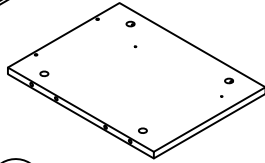


②
LEFT SIDE PANEL

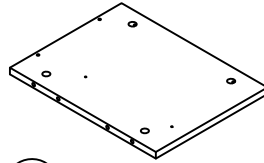


③
RIGHT SIDE PANEL

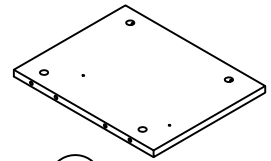


④
MIDDLE LEFT PANEL

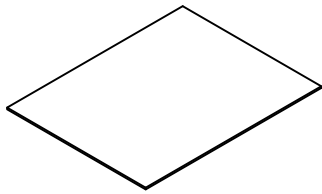


⑤
TEMPERED GLASS

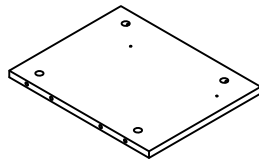


⑥
MIDDLE RIGHT PANEL

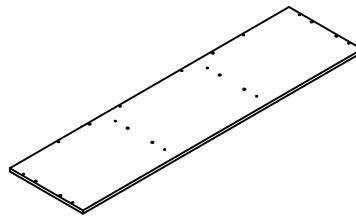


⑦
BOTTOM

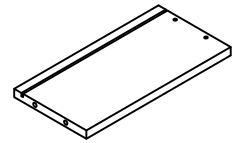


⑧
DRAWER RIGHT
QTY:2

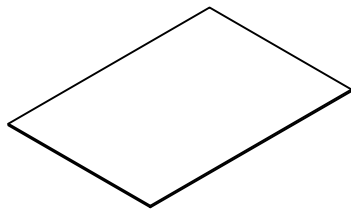


⑨
DRAWER BOTTOM
QTY:2

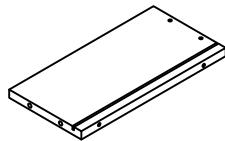


⑩
DRAWER RIGHT
QTY:2

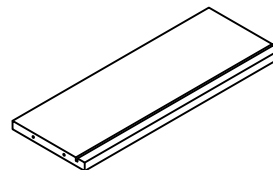


⑪
DRAWER BACK
QTY:2

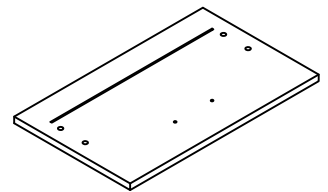

⑫
RIGHT DRAWER FRONT

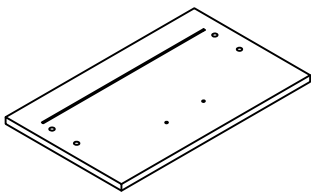


⑬
LEFT DRAWER FRONT

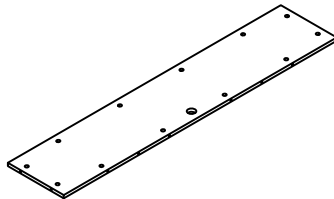


⑭
BACK PANEL



1

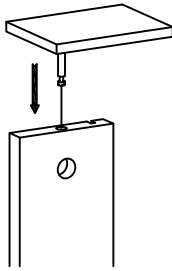

2

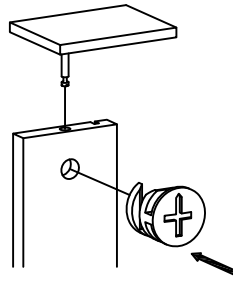


3

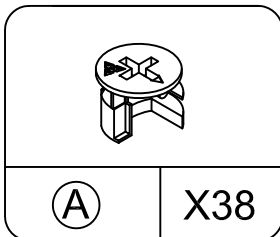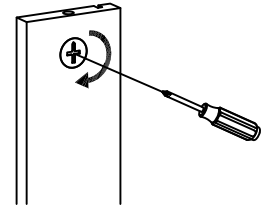


(A)

X38

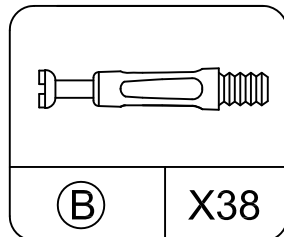CAM LOCK
F15*11


(B)

X38

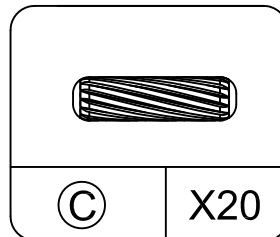CAM BOLT
F7*35


(C)

X20

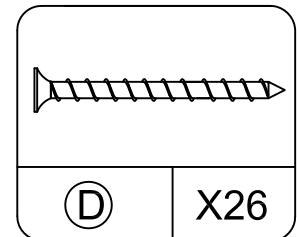WOOD DOWEL
F8*30


(D)

X26

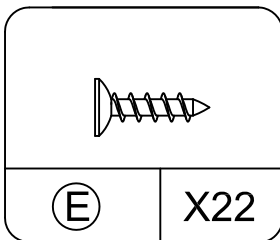SCREW
F4*35


(E)

X22

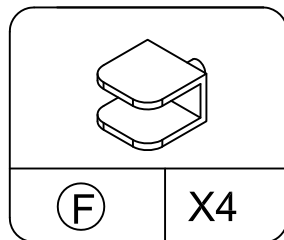SCREW
F3.5*14

(F)


X4

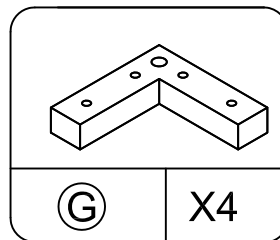GLASS CLIP
F5*25

(G)

X4


FOOT

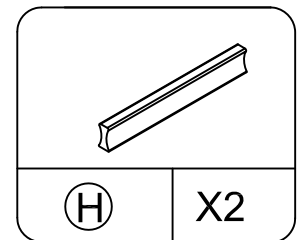

(H)


X2

HANDLE

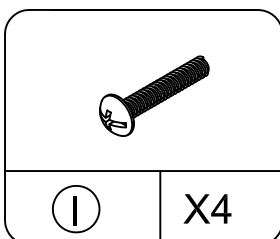

(I)


X4

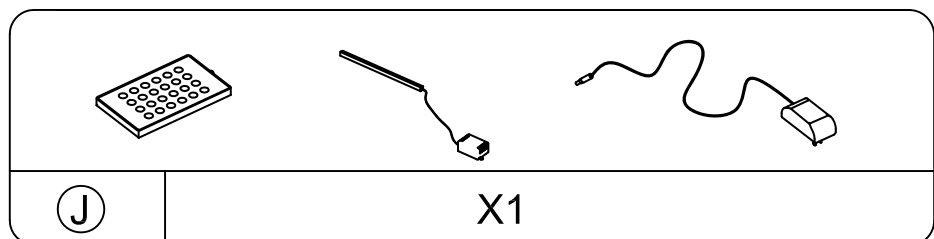BOLT
F4*18

(J)


X1

LIGHT STRIP

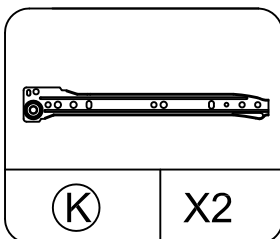


(K)

X2

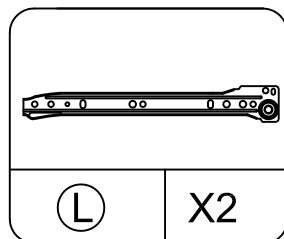LEFT OUTER TRACK
F20*300


(L)

X2

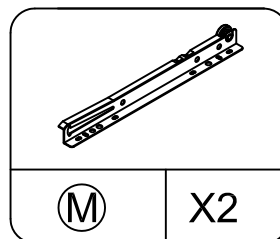RIGHT OUTER TRACK
F20*300

(M)

X2

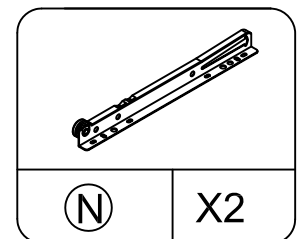LEFT INNER TRACK
F20*300


(N)

X2

RIGHT INNER TRACK
F20*300


STEP 1

- Screw cam bolts (B) into panel (3) as below shown.
- Insert wood dowels (C) into panel (3) & (4) as shown in the picture.
- Install drawer track (L) to panel (3) & (4) with screws (E).

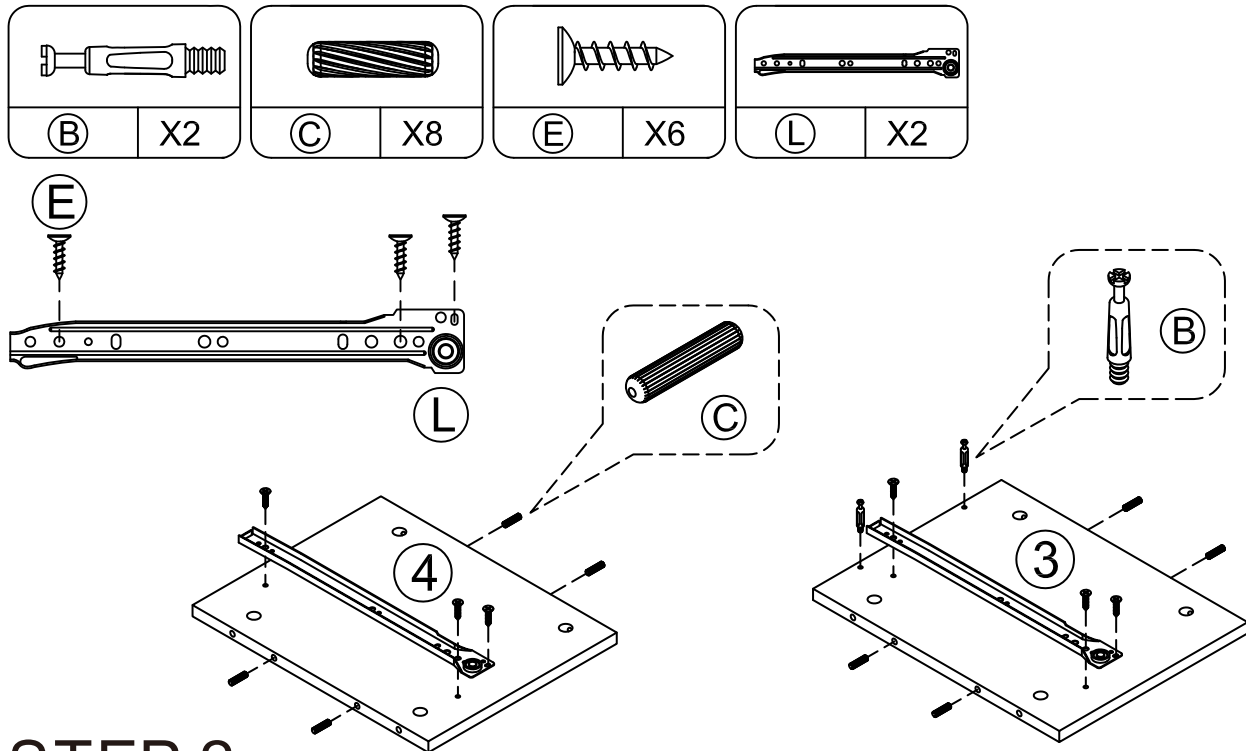


STEP 2

- Screw cam bolts (B) into panel (2) as below shown.
- Insert wood dowels (C) into panel (2) & (6) as shown in the picture.
- Install drawer track (K) to panel (2) & (6) with screws (E).

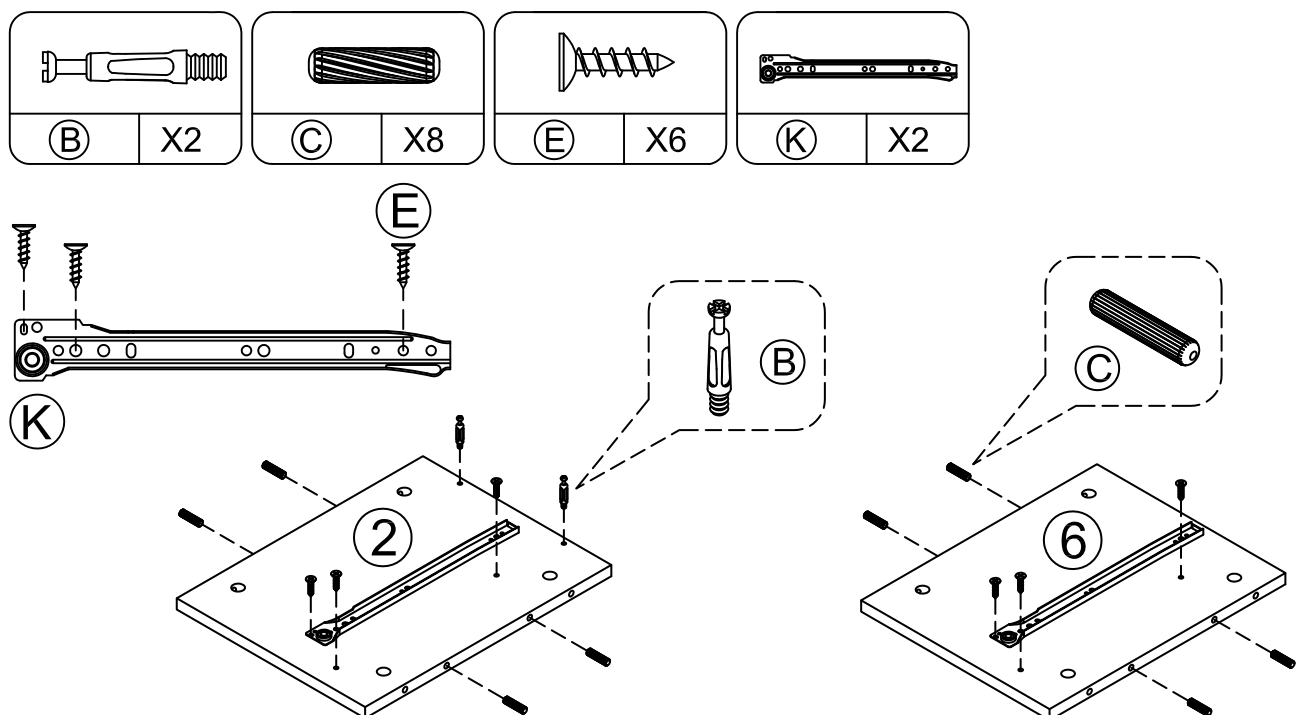


STEP 3

- Screw cam bolts (B) into panel (7) as below shown.
- Attach foot (G) to the panel (7) with screws (D).

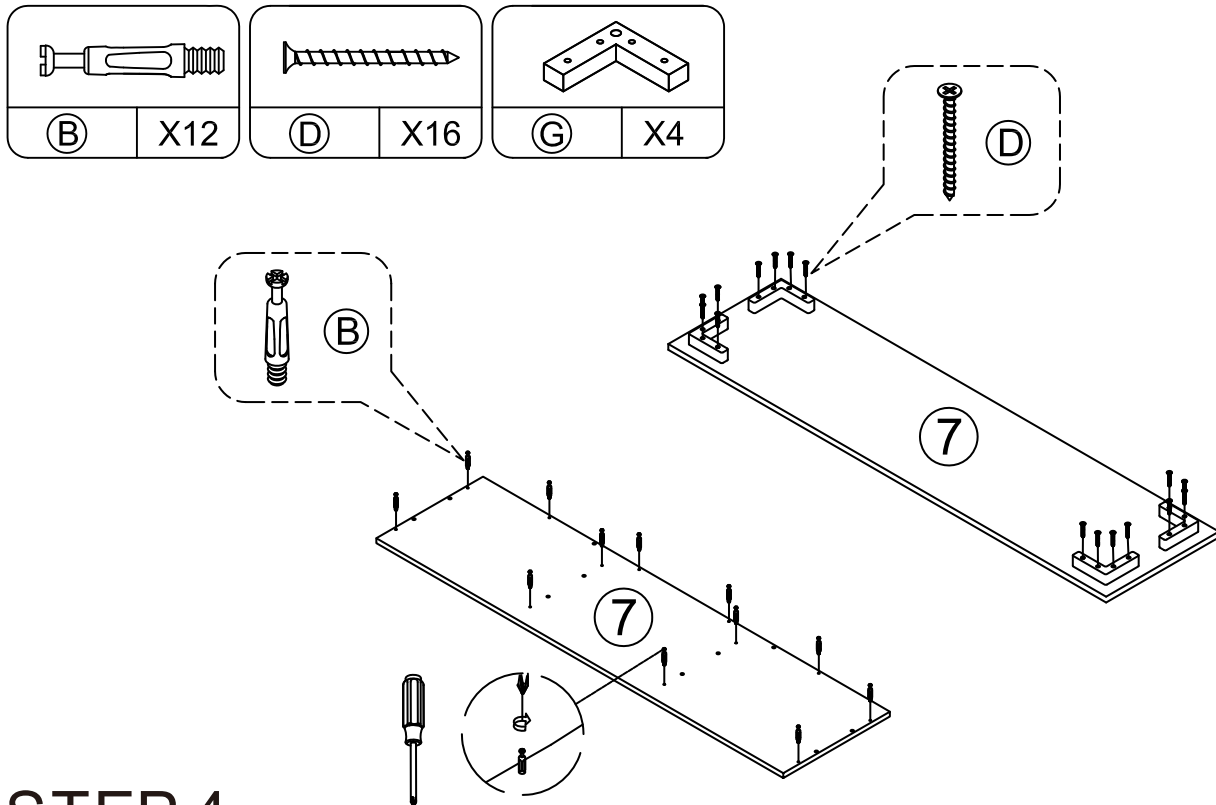



STEP 4

- Attach panel (4) & (6) to (7) with cam locks (A).

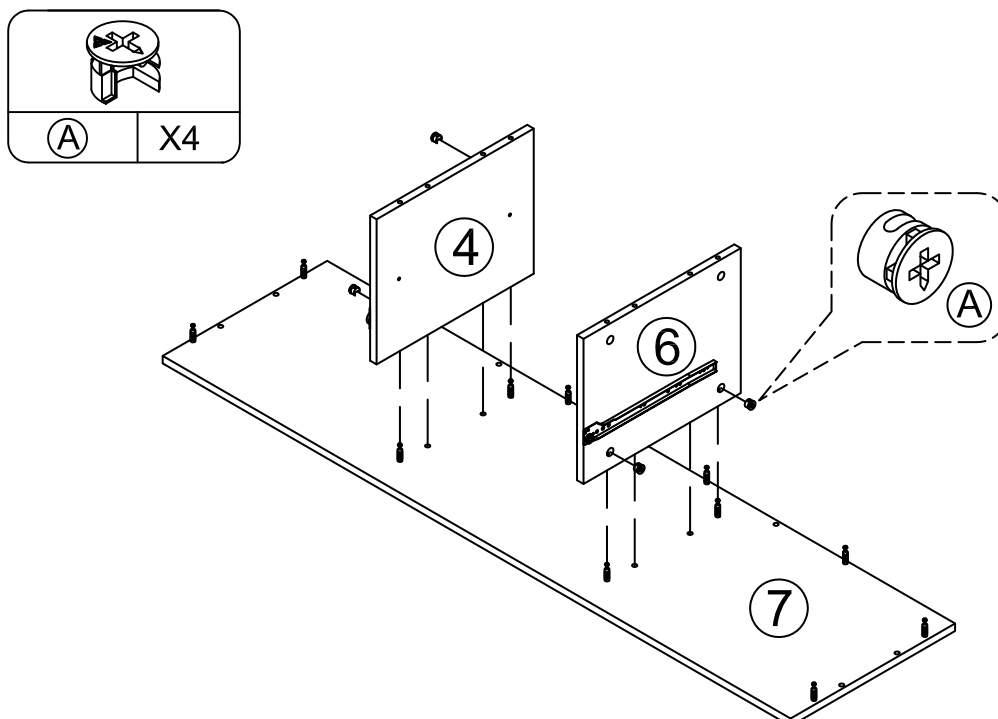



STEP 5

- Insert wood dowels (C) into panel (14) as shown in the picture.

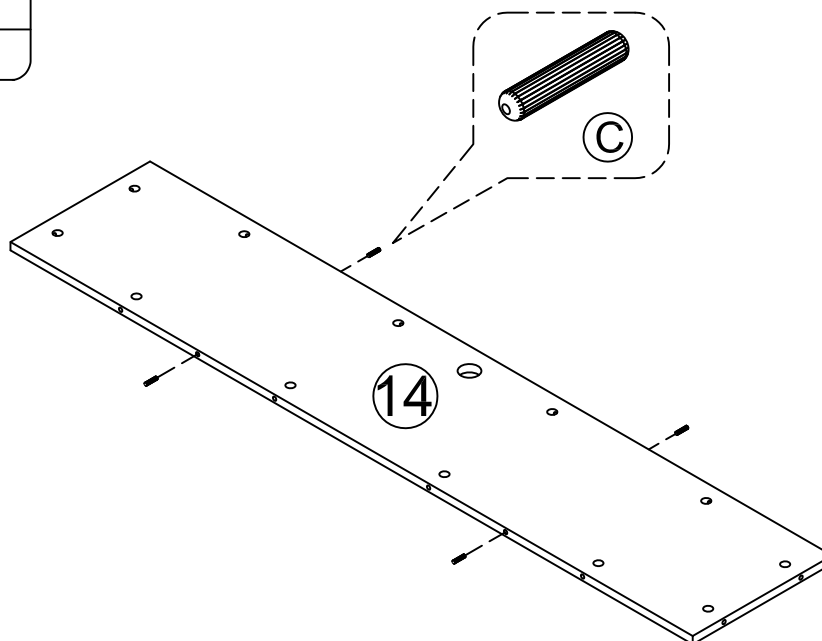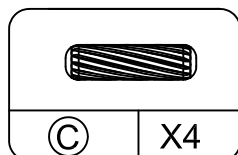



STEP 6

- Attach panel (2) & (3) to (14) with cam locks (A).

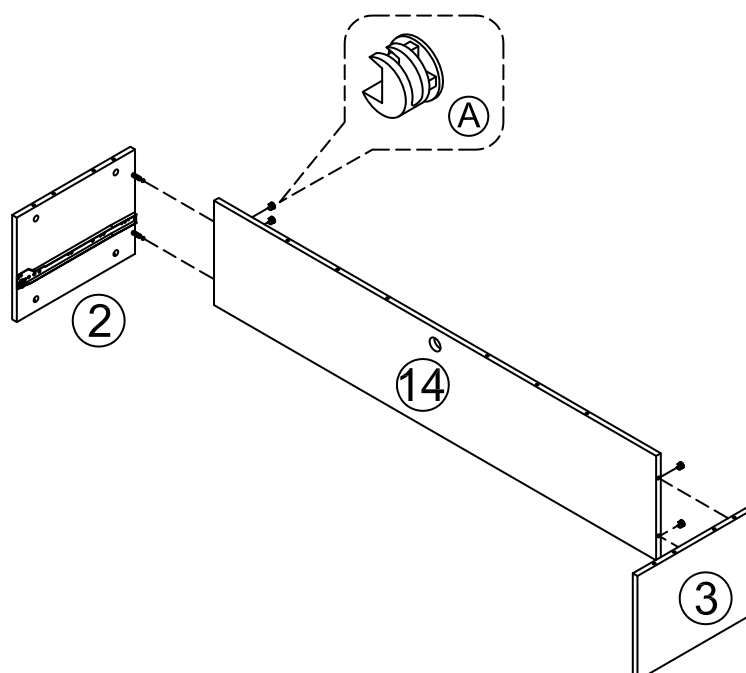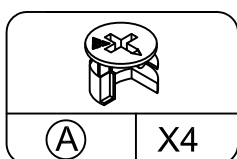



STEP 7

- Attach panel (2) & (3) & (14) to (7) with cam locks (A).

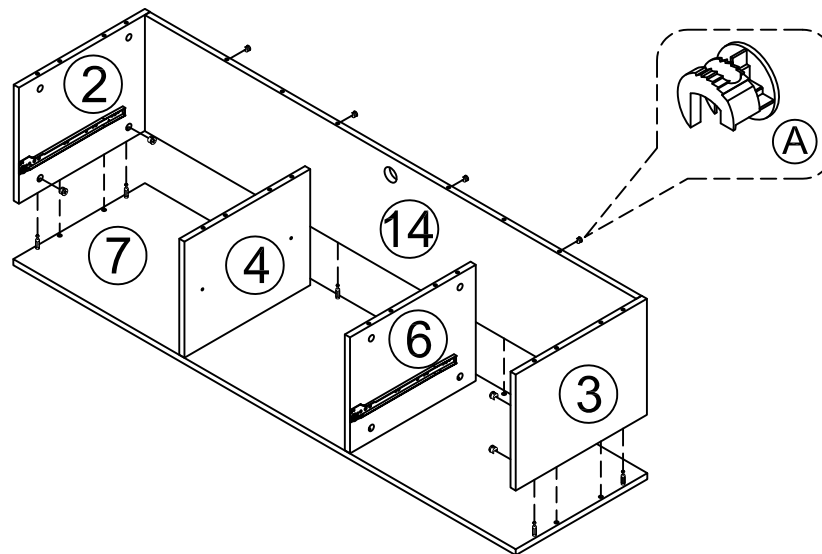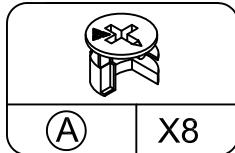



STEP 8

- Screw cam bolts (B) into panel (1) as below shown.

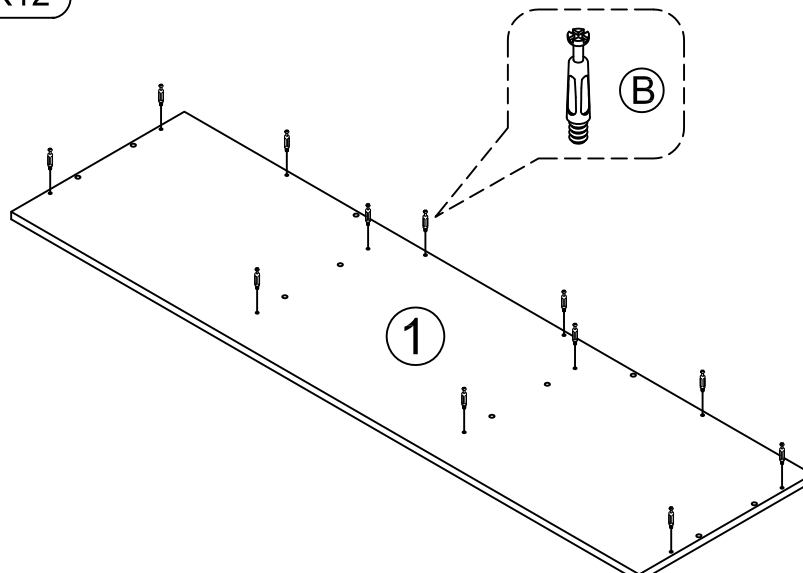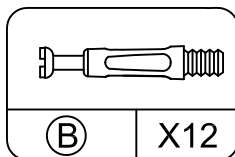



STEP 9

-Screw glass clip (F) into panel (4) & (6) as below shown.

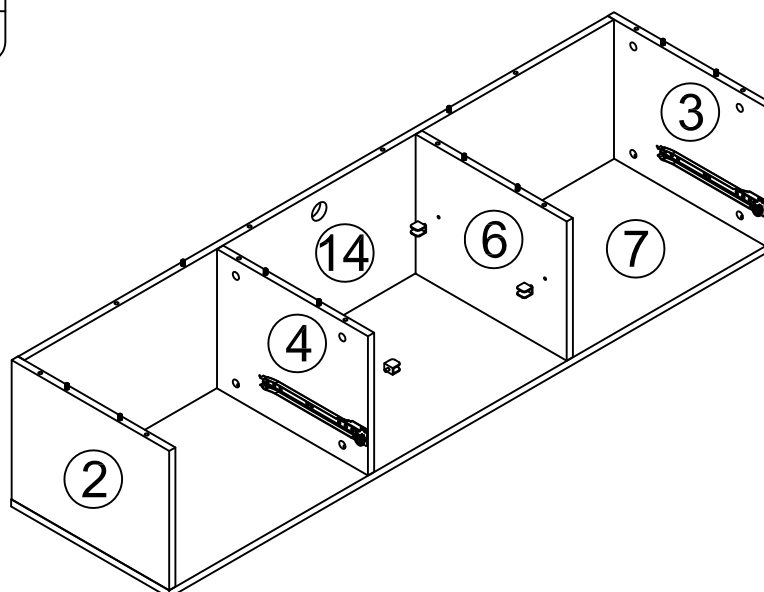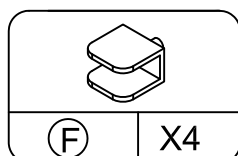


STEP 10

-Insert the glass(5) into the glass clip (F) as shown below.

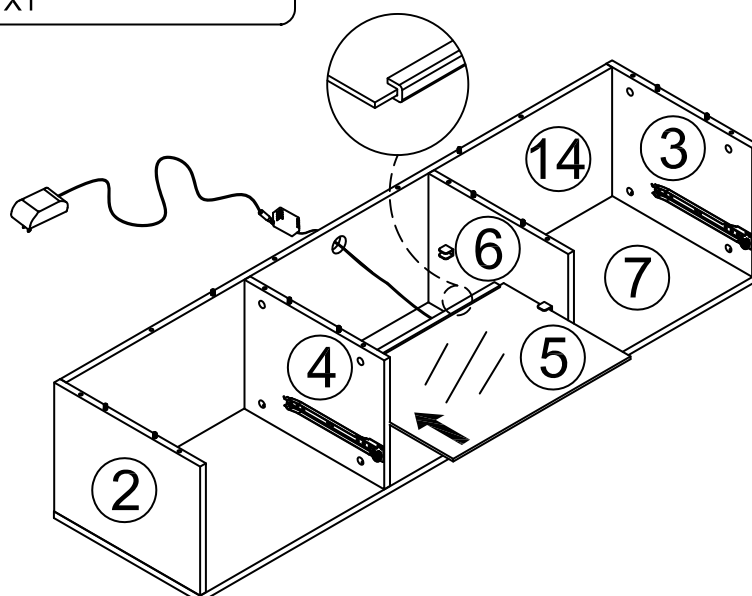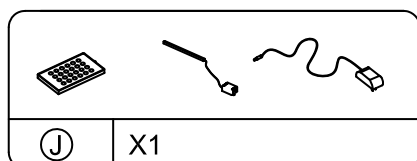



STEP 11

- Connected pin of LED and power adapter to the RGB control box as below.
- Remove the battery protection pad from remote controller; Align remote controller to the RGB Control box to adjust the color mode; Specifications of battery: cr2025 3v
- LED lamp with effective remote control distance of 5 meters

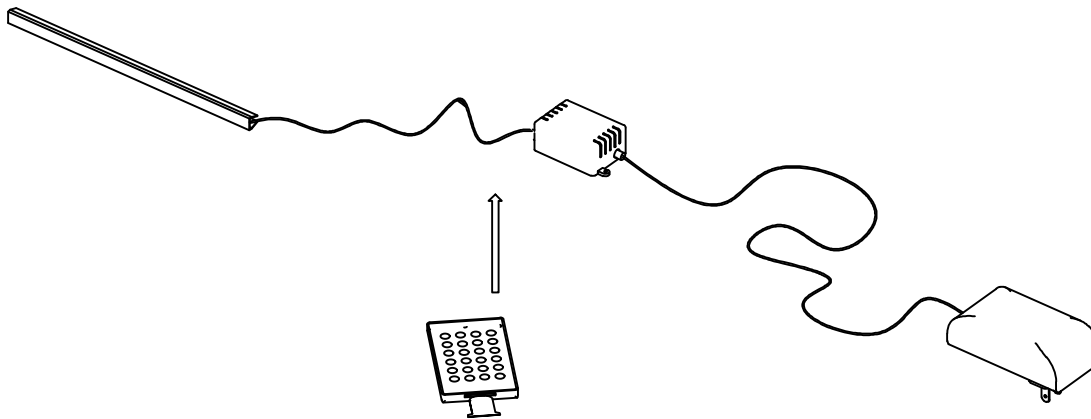




STEP 12

- Attach panel (1) to (2) & (3) & (4) & (6) & (14) with cam locks (A).

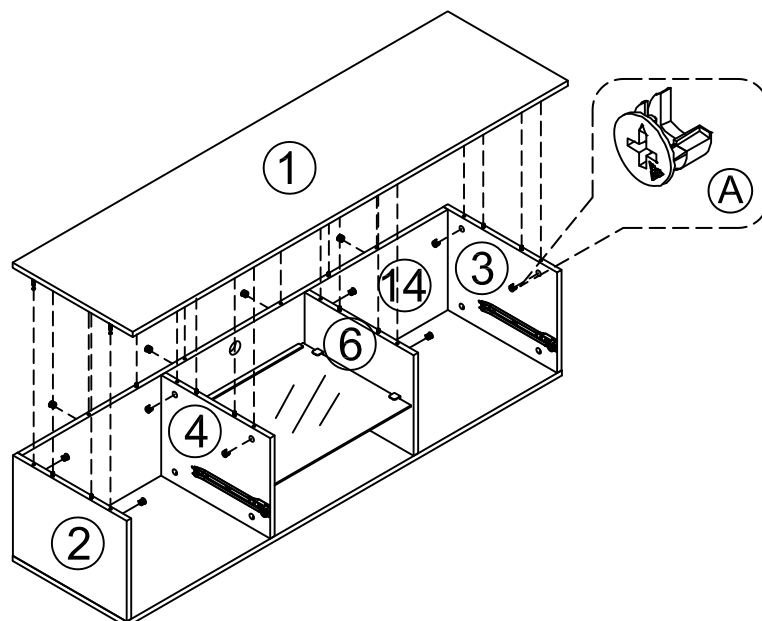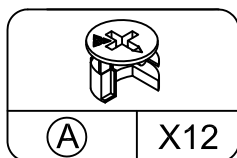



STEP 13

- Screw cam bolts (B) into panel (12) & (13) as below shown.

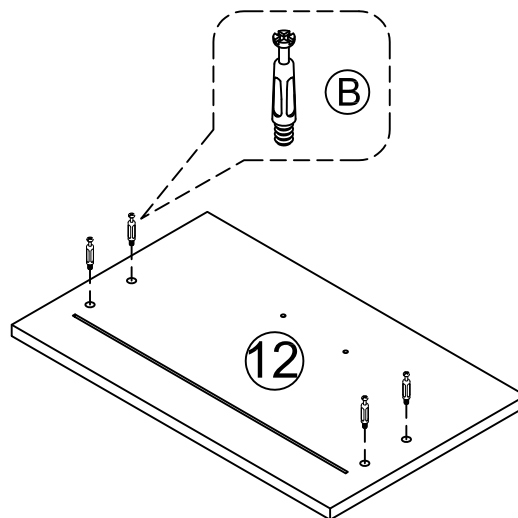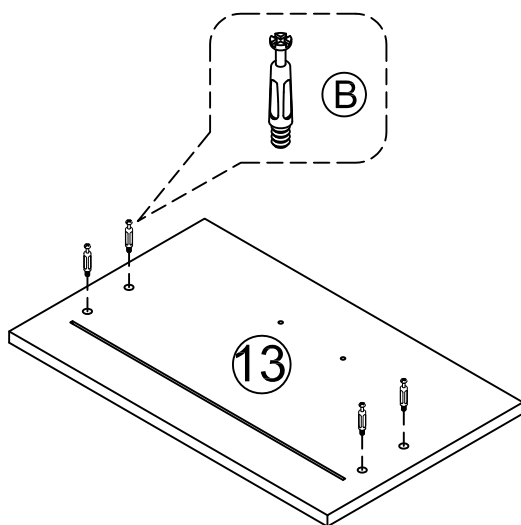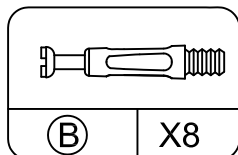

STEP 14




- Attach panel (11) to (8) & (10) with screw (D) as shown in the picture.

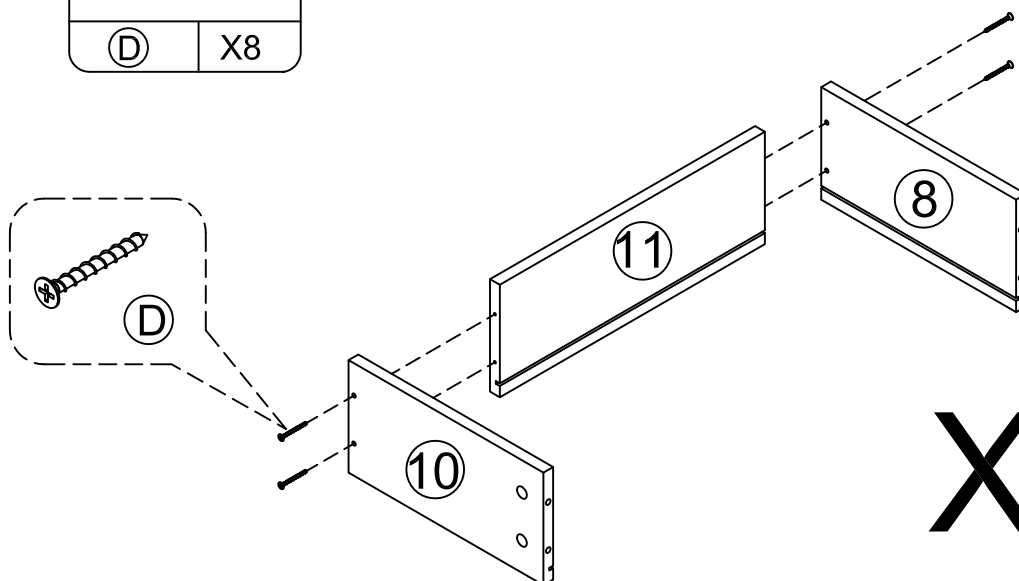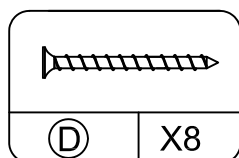

X2








STEP 15

- Attach panel (12) & (13) to (8) & (10) with cam locks (A).

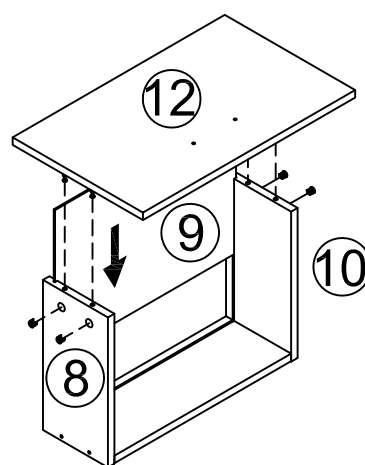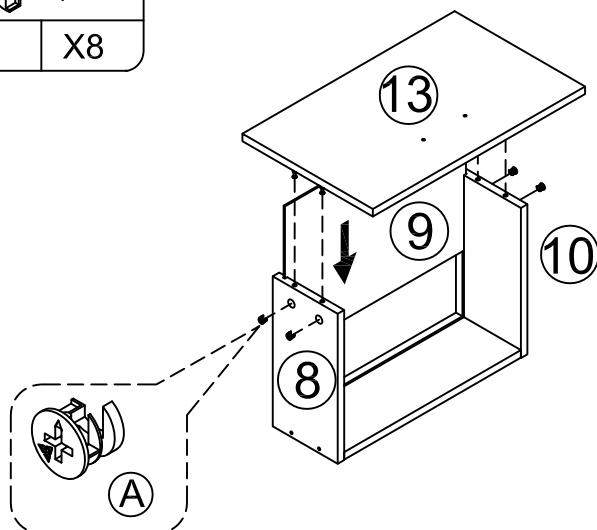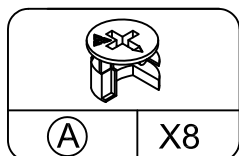





STEP 16

- Install drawer track (M) & (N) to panel (10) & (8) with screws (E).

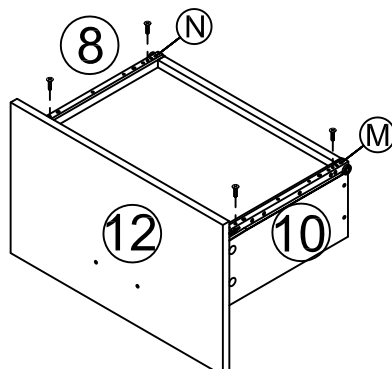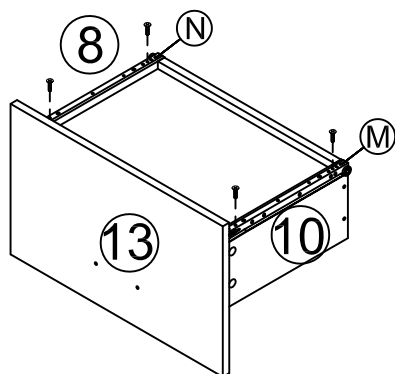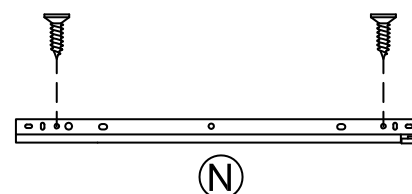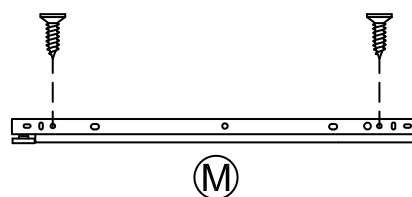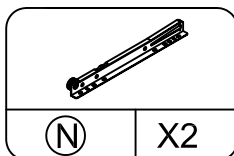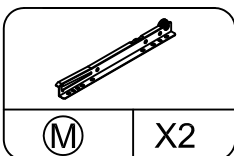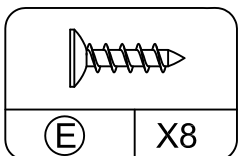


STEP 17

- Install handle (H) to panel (12) & (13) with bolts (I).

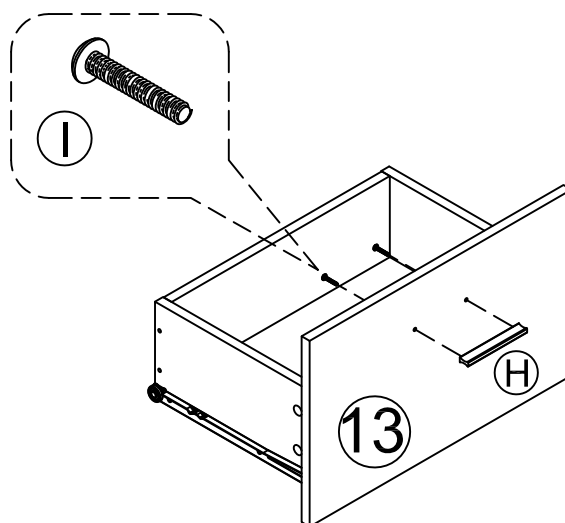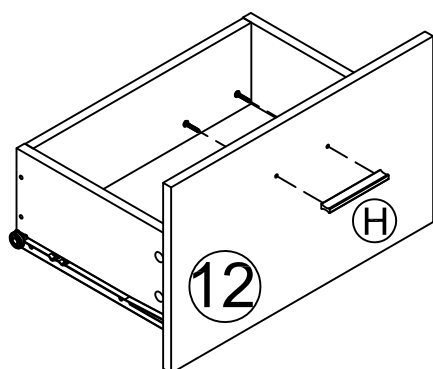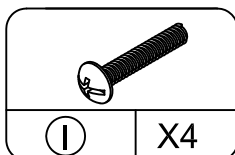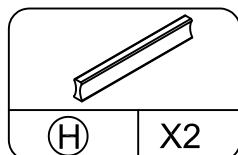

STEP 18

- Insert the drawers.

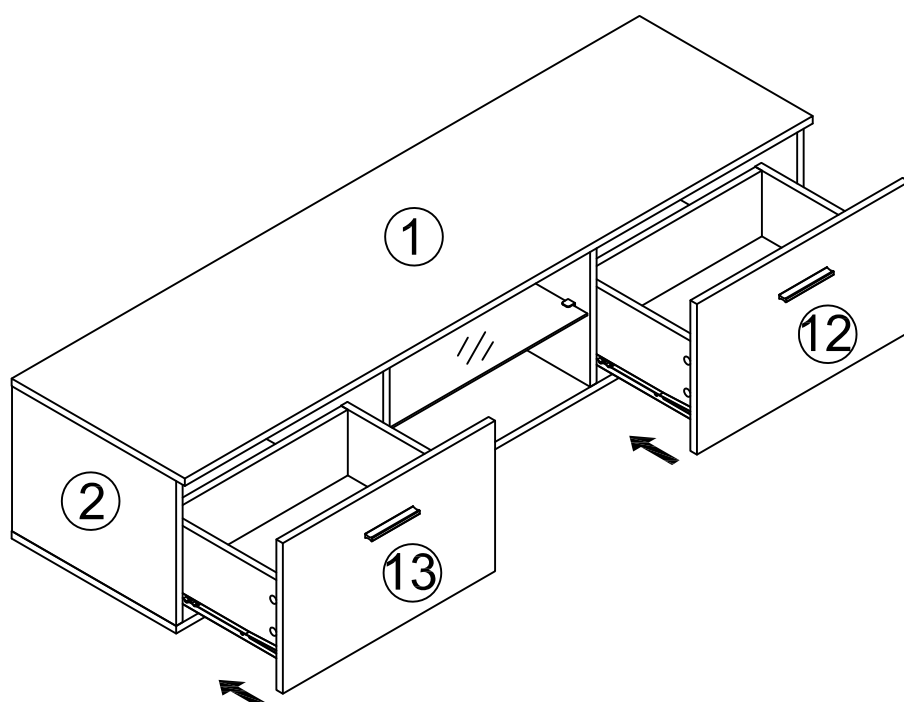

STEP 19

- Installation complete.

