






CORONA LOW 3+3 WIDE CHEST #COR61

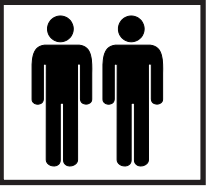

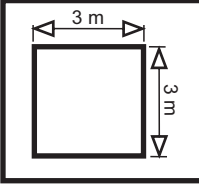



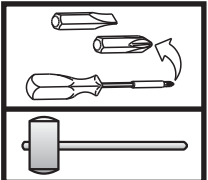


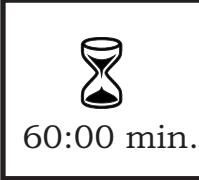


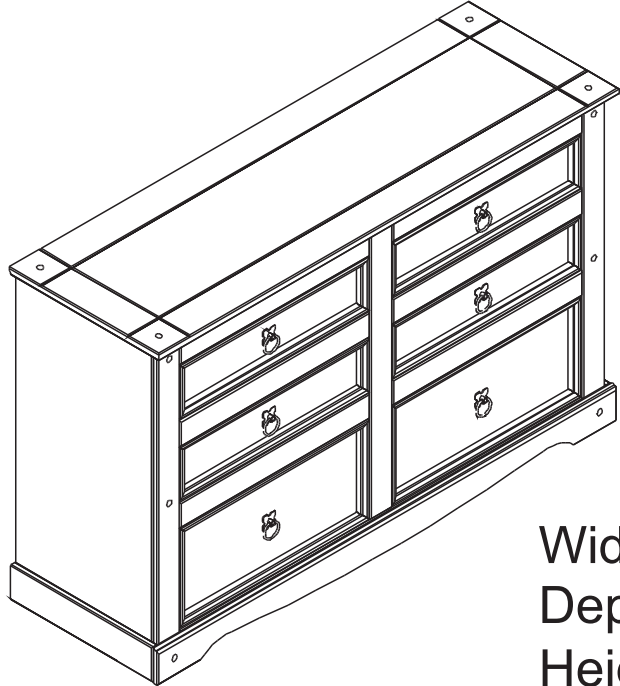


Width = 132cm
Depth = 43cm
Height = 82,7cm




- Please check that all fittings are correct before assembling the item.
- Replacement parts can be supplied for any damages to the item.
- Please keep all packaging until the item is assembled as we will require information from this if replacement parts are required.
- If you have any questions regarding the assembly of your item please call 01709 836856 or email admin@mercर्सfurniture.co.uk

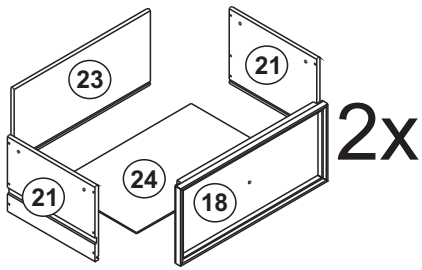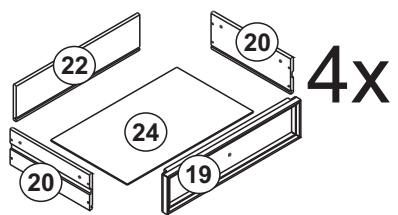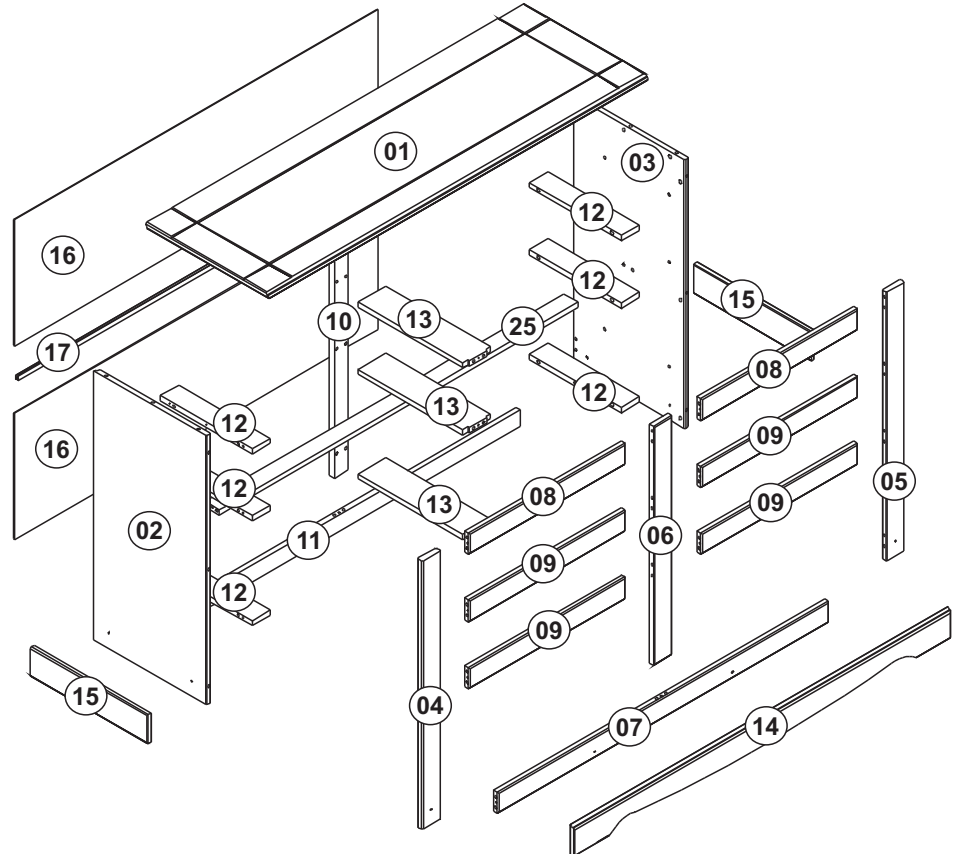


A		8,0 x 25 mm	78 x
B		3,5 x 30 mm	29 x
C		8,0 x 35 mm	12 x

D		8 x 8	32 x
E			06 x
F			06 x


G			10 x
H		4,0 x 50 mm	02 x
I		3,0 x 30 mm	70 x

J			14x
K		4,0 x 30 mm	08x
L		4,0 x 25 mm	14 x
Y			01x



01

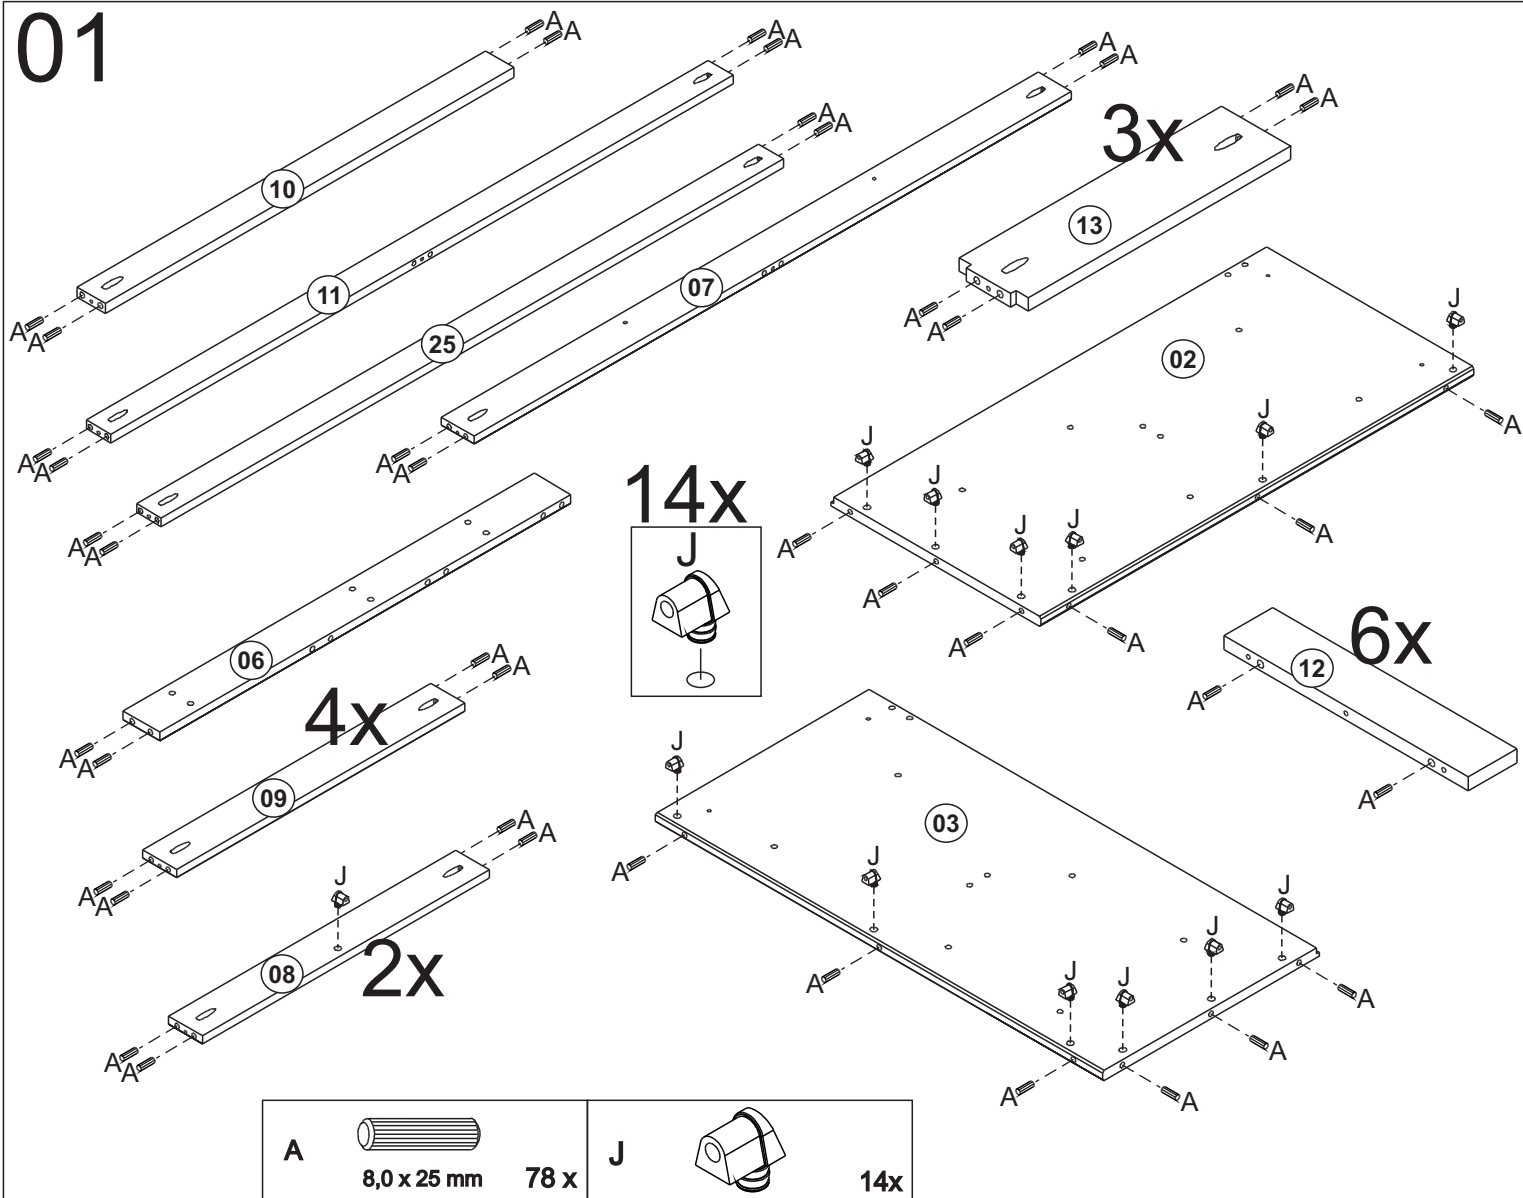



02

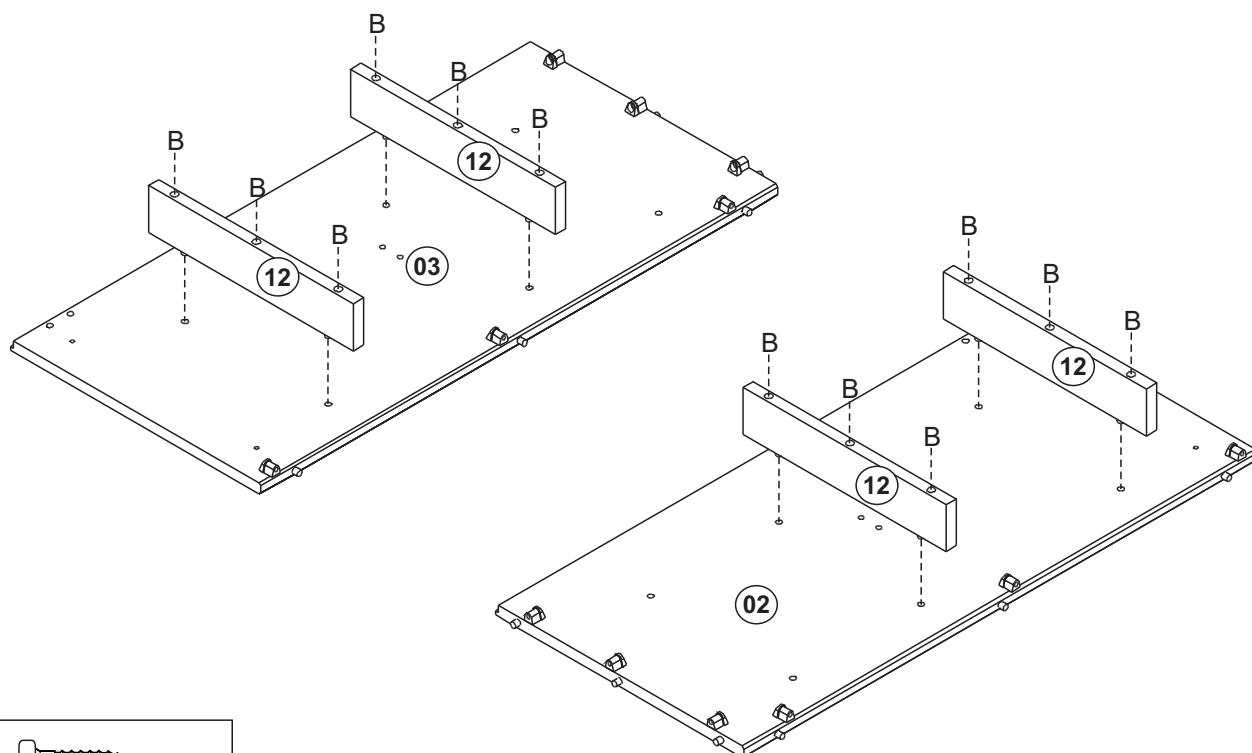

03


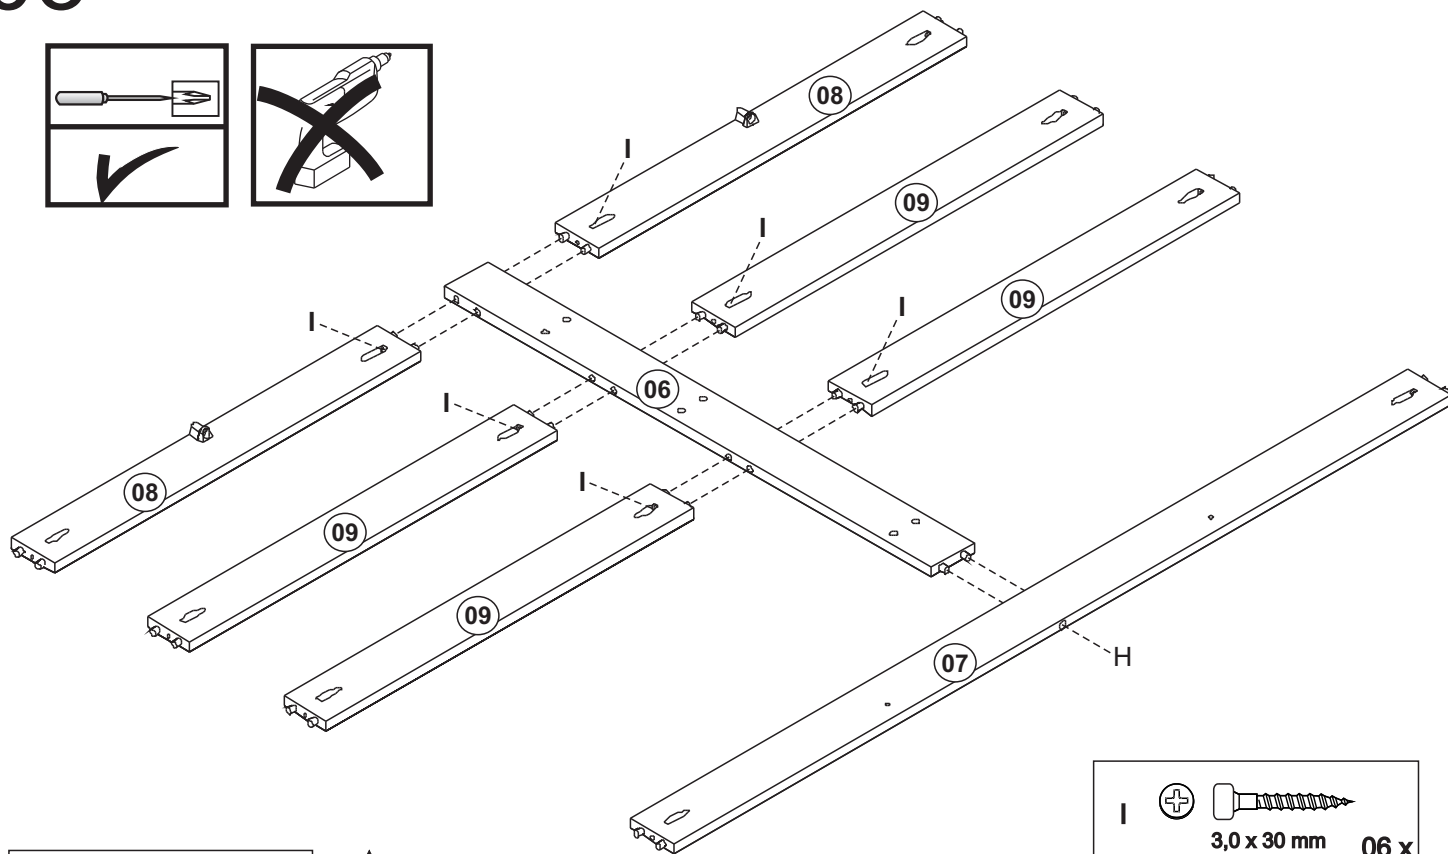
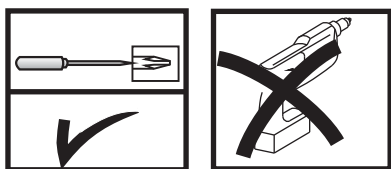


ASSEMBLE ON A
FLAT SURFACE




04


ASSEMBLE ON A
FLAT SURFACE

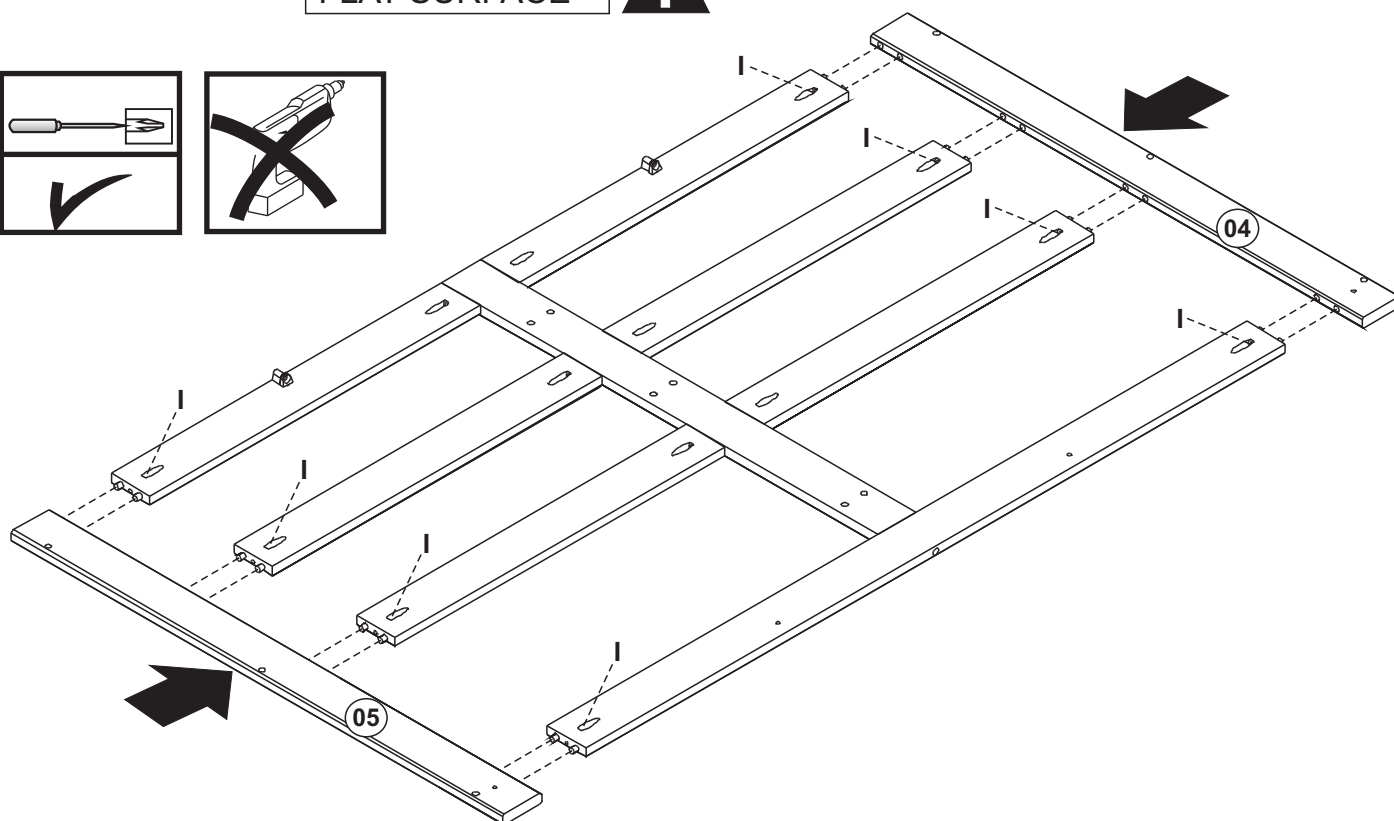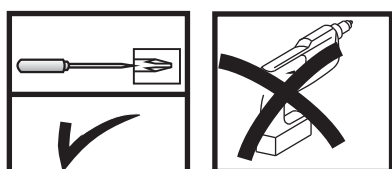




05

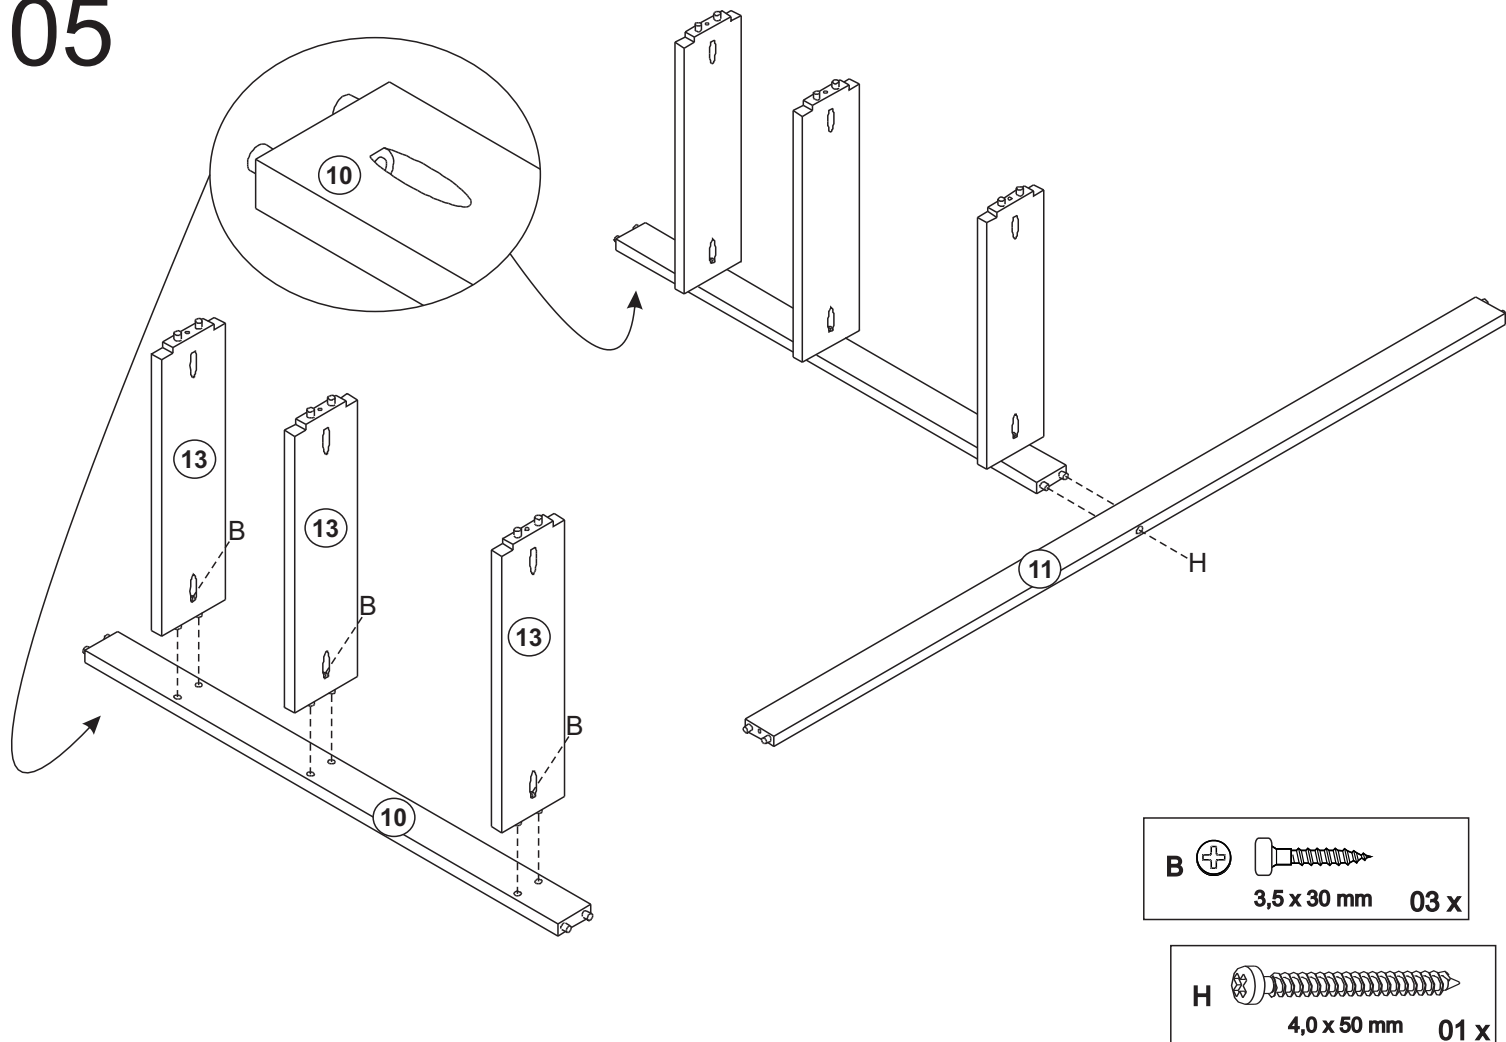




06

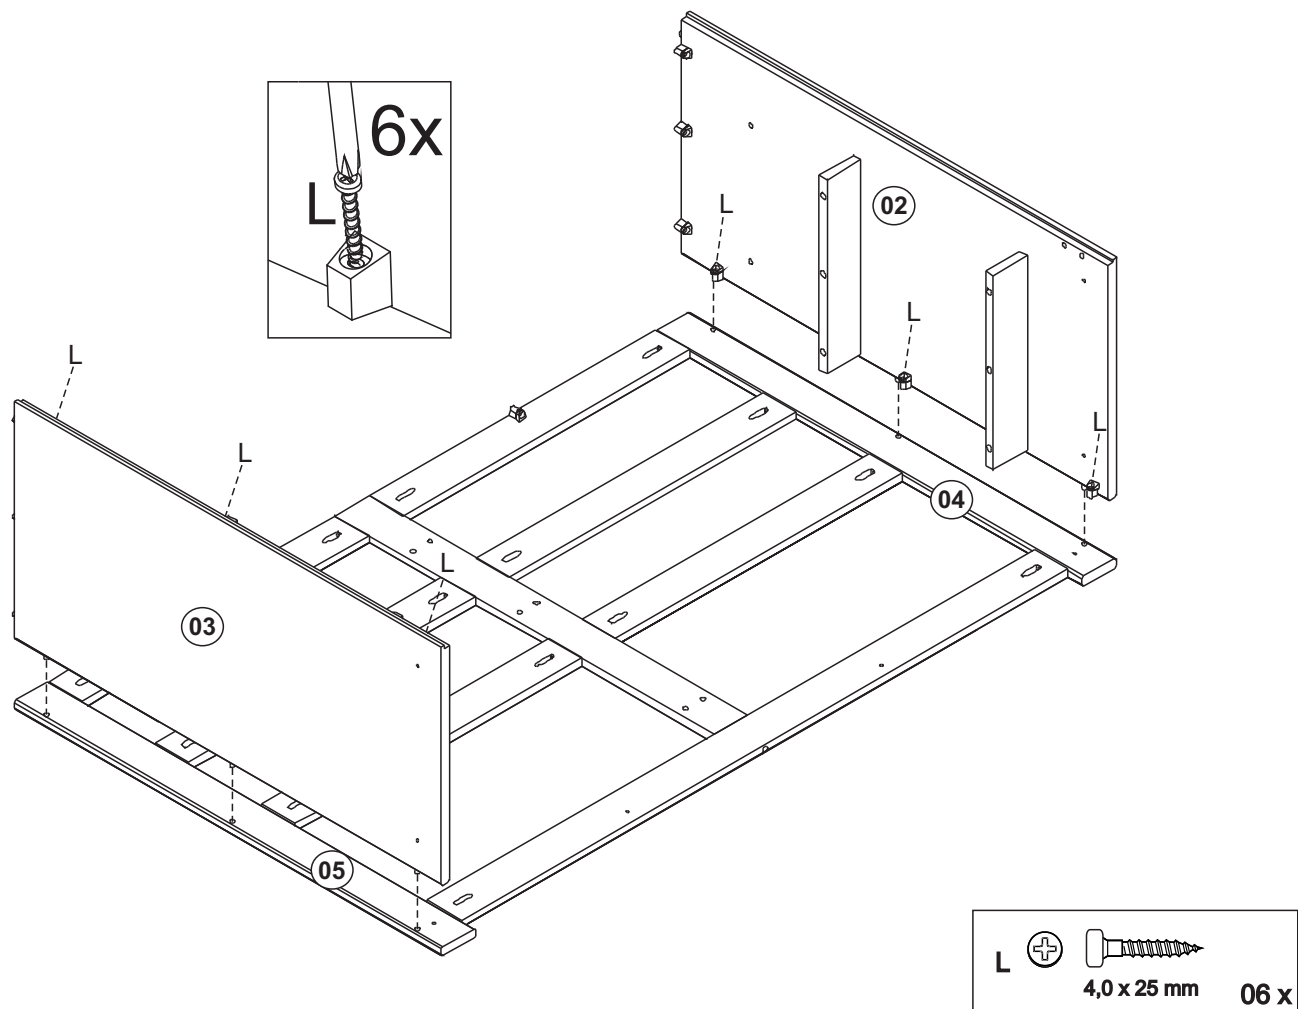





07

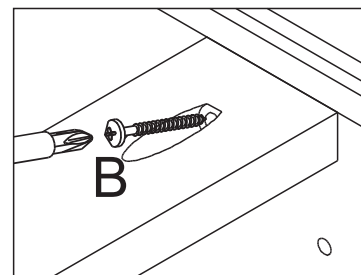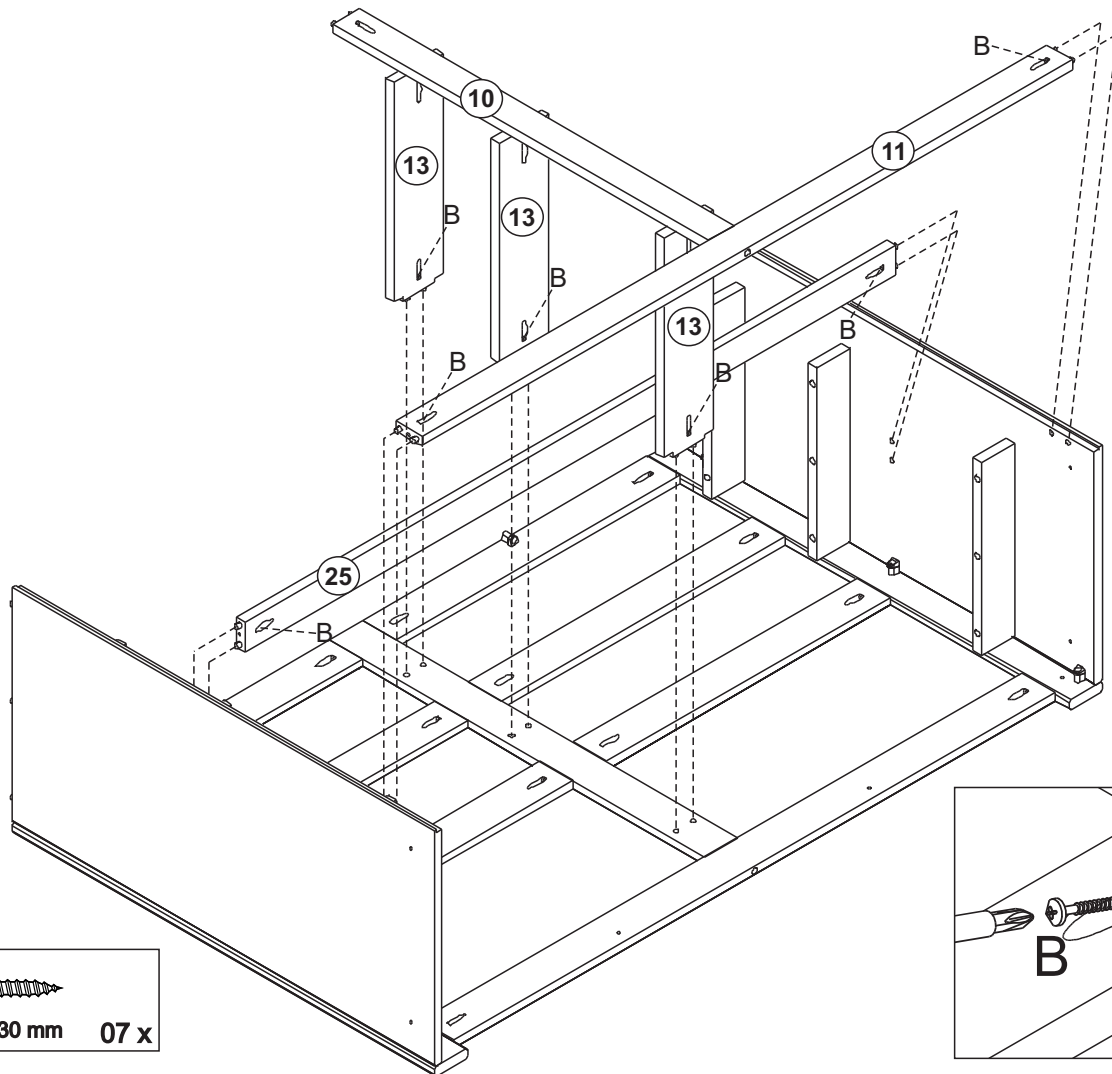




08

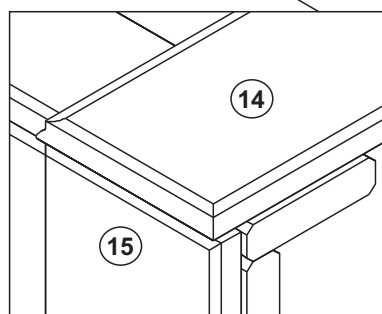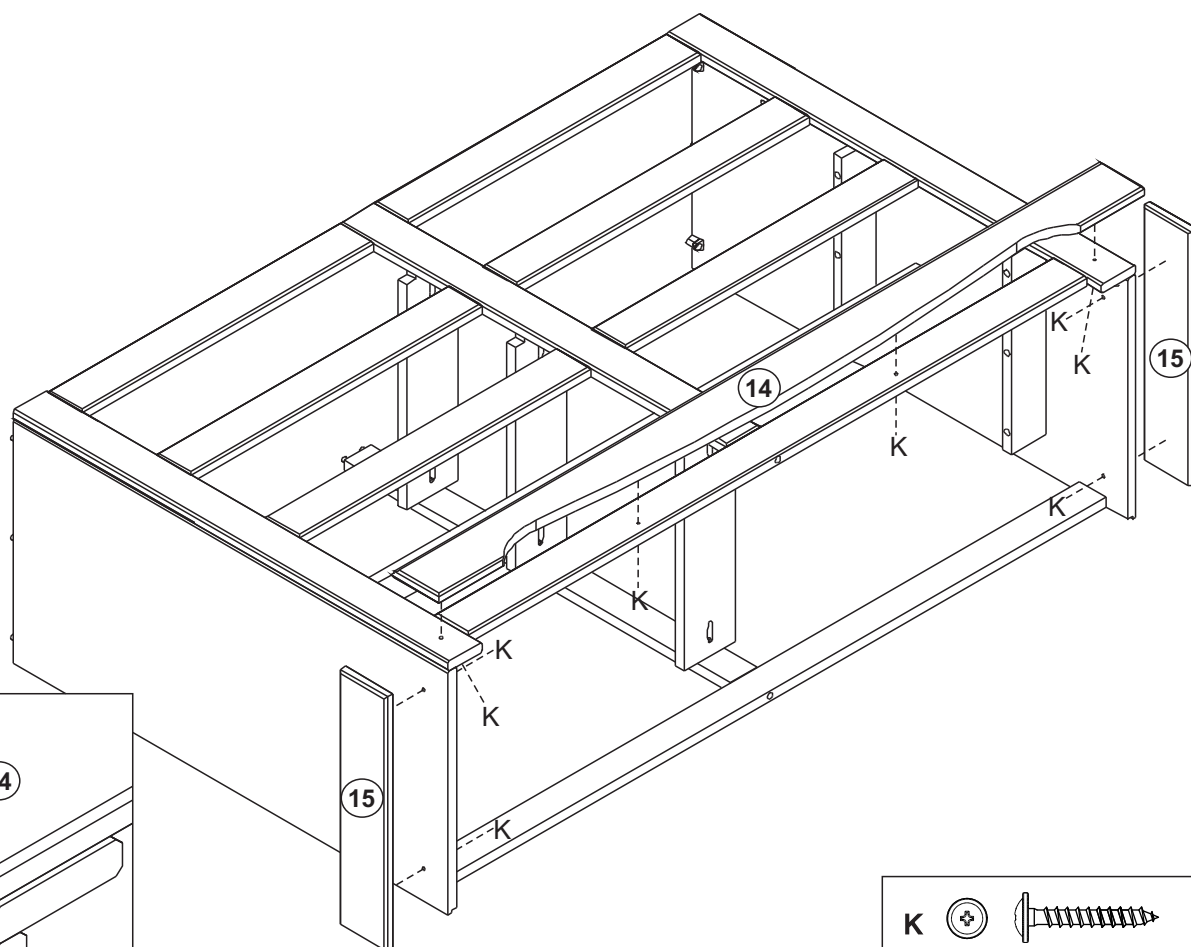





09

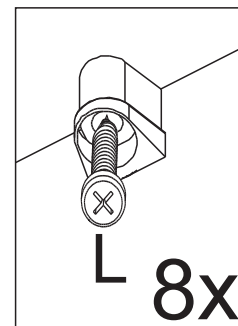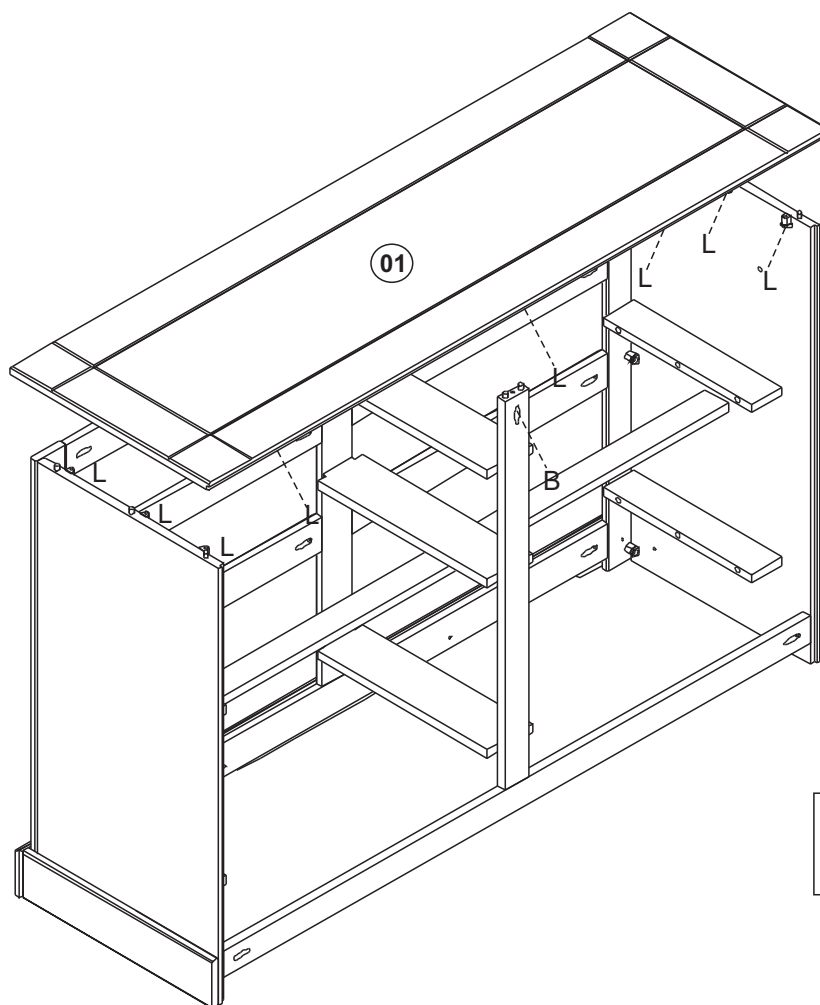







10

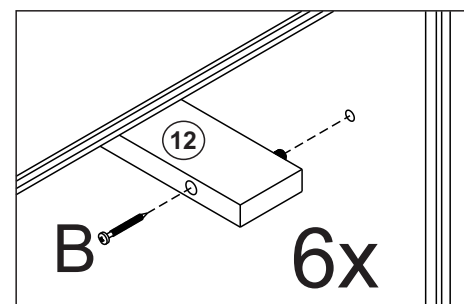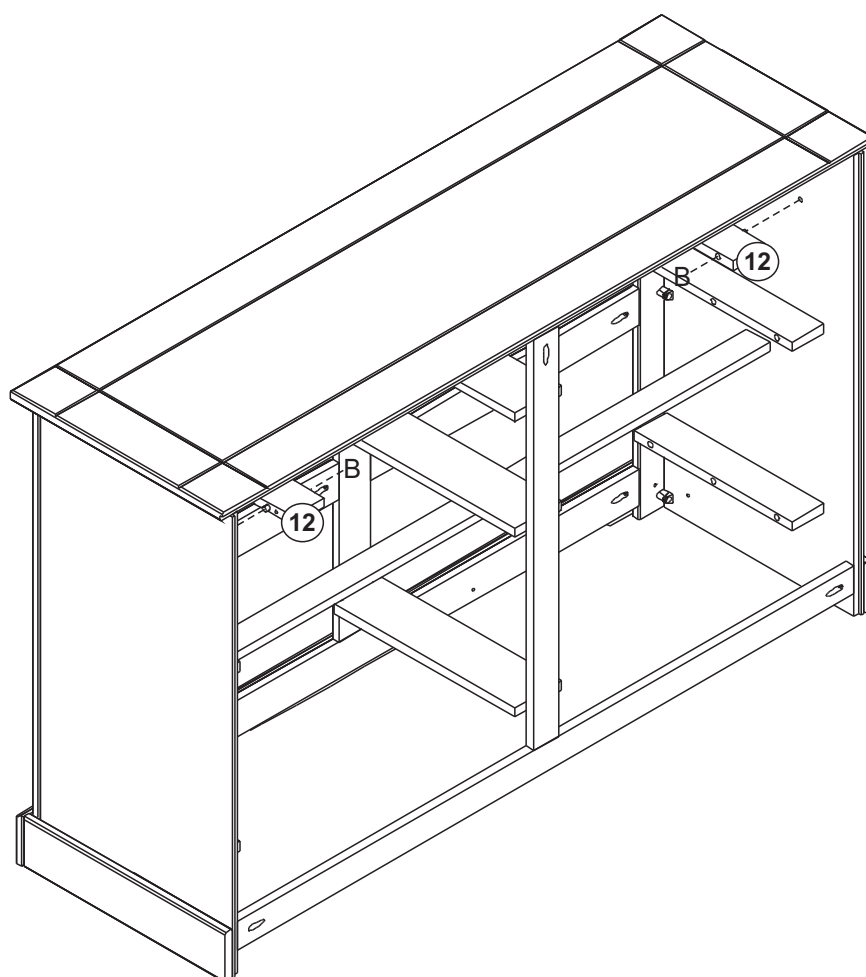


11

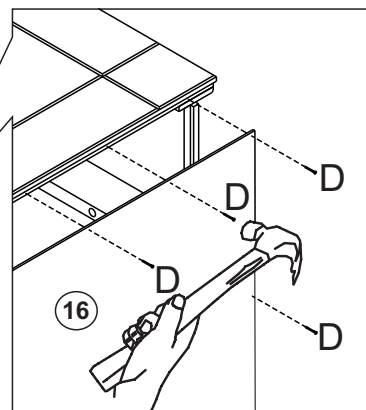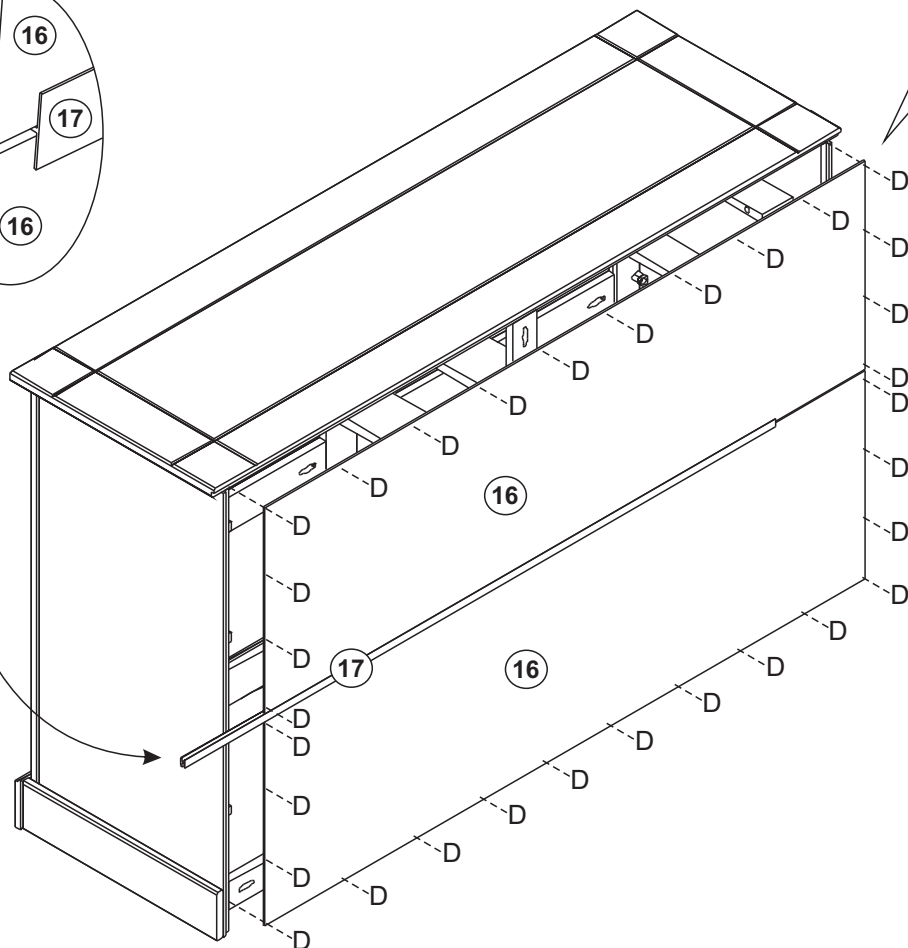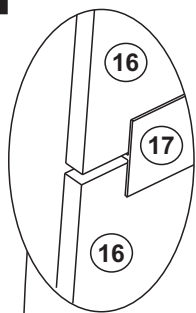


12

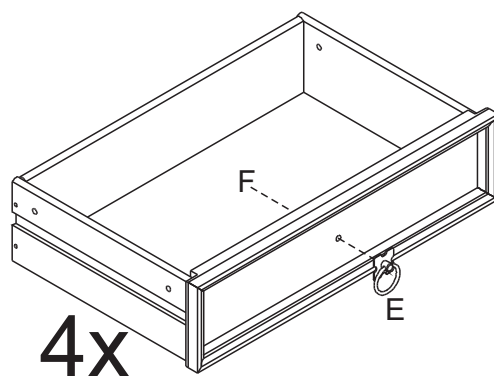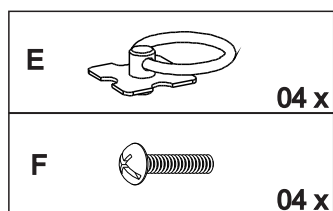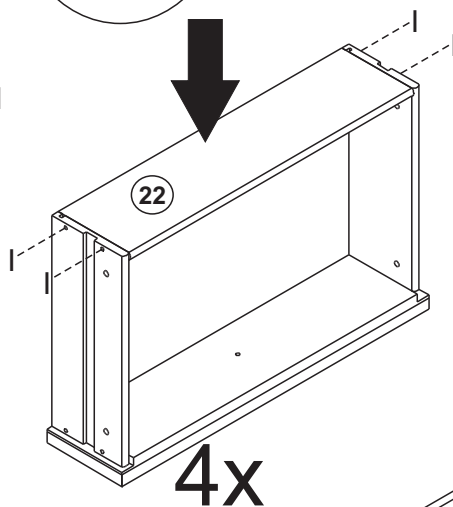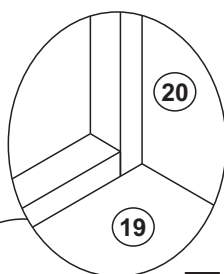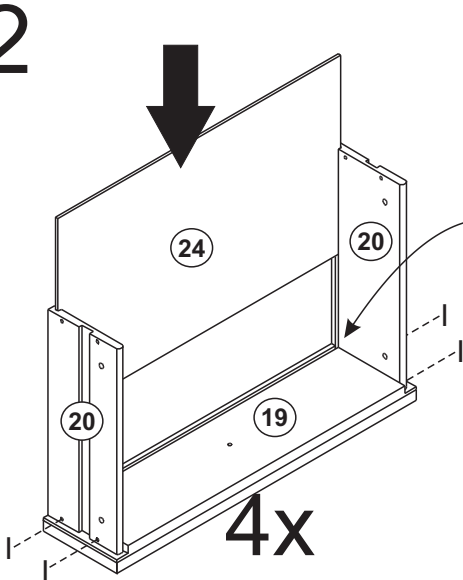


13

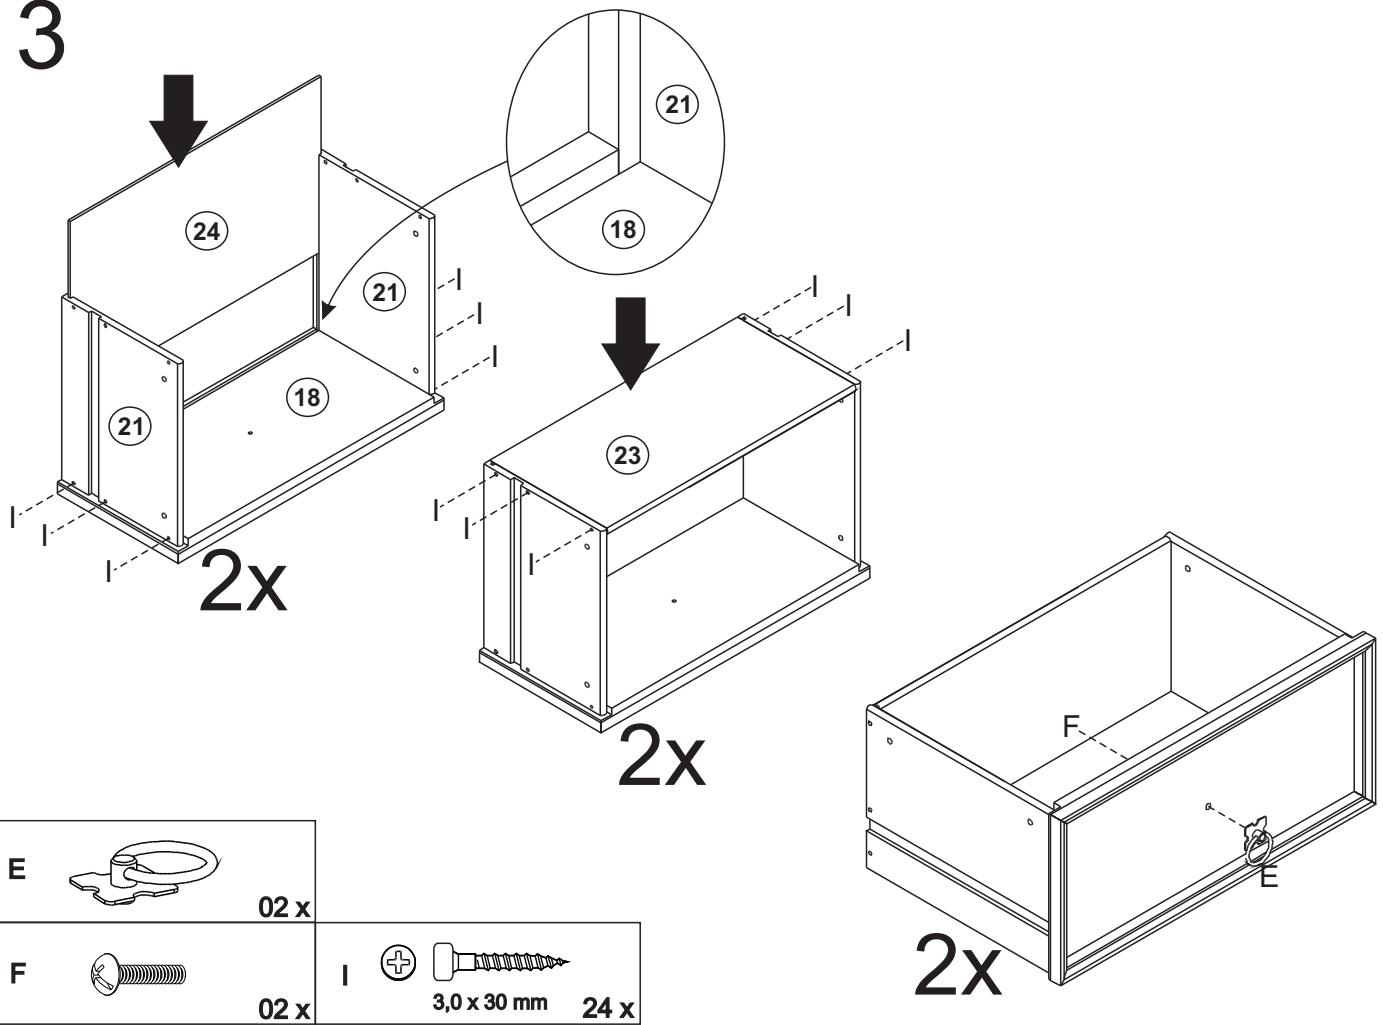


14

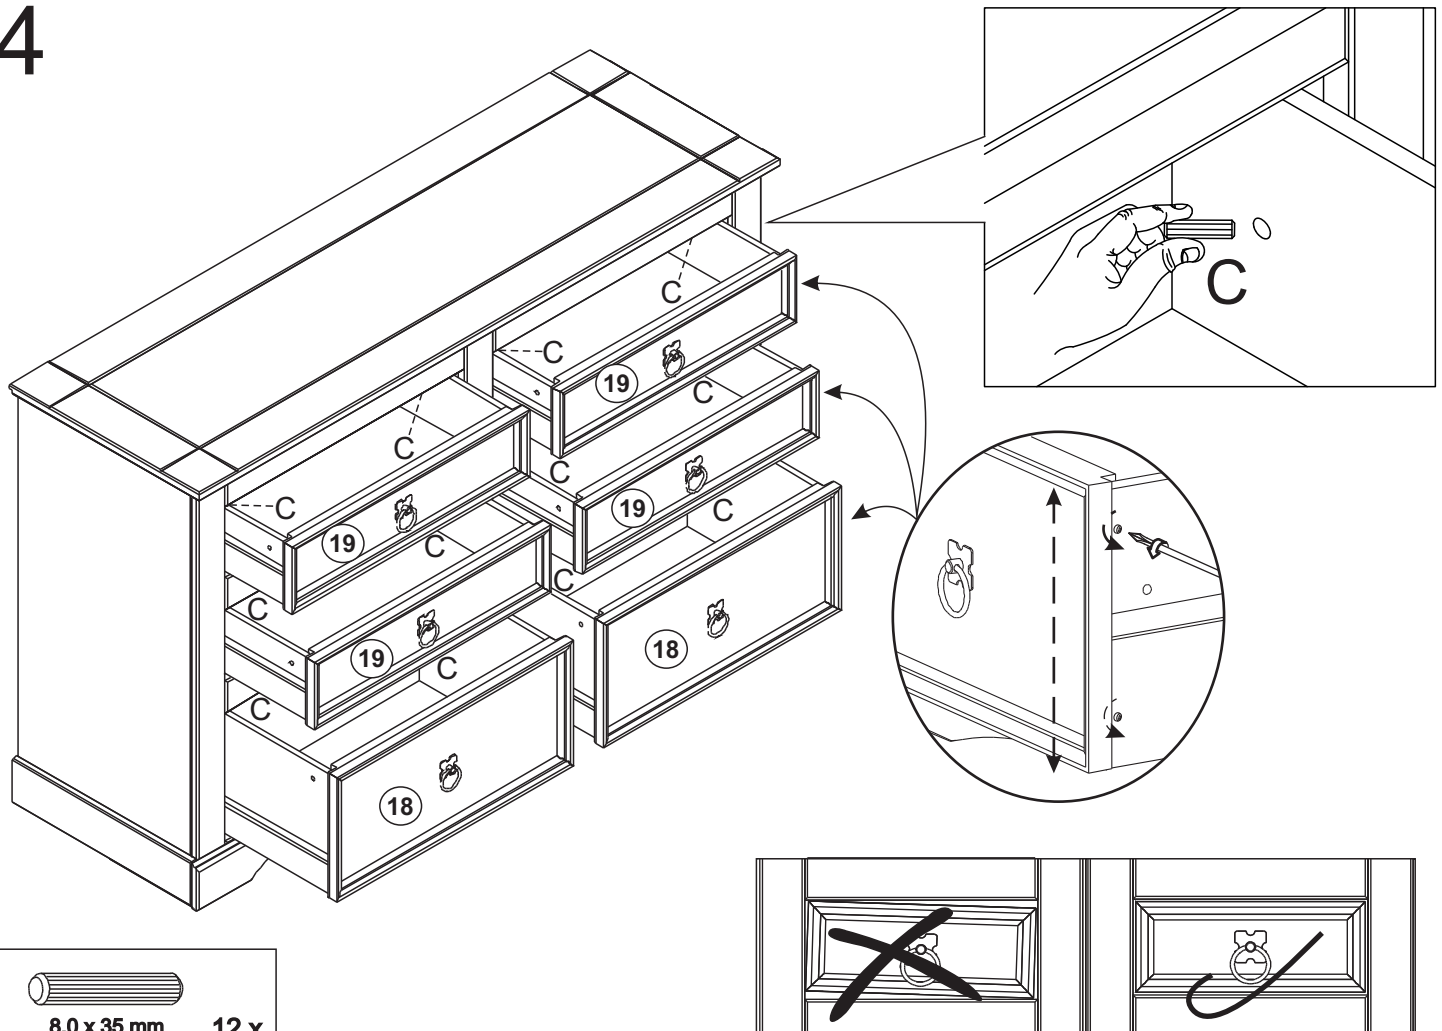

15

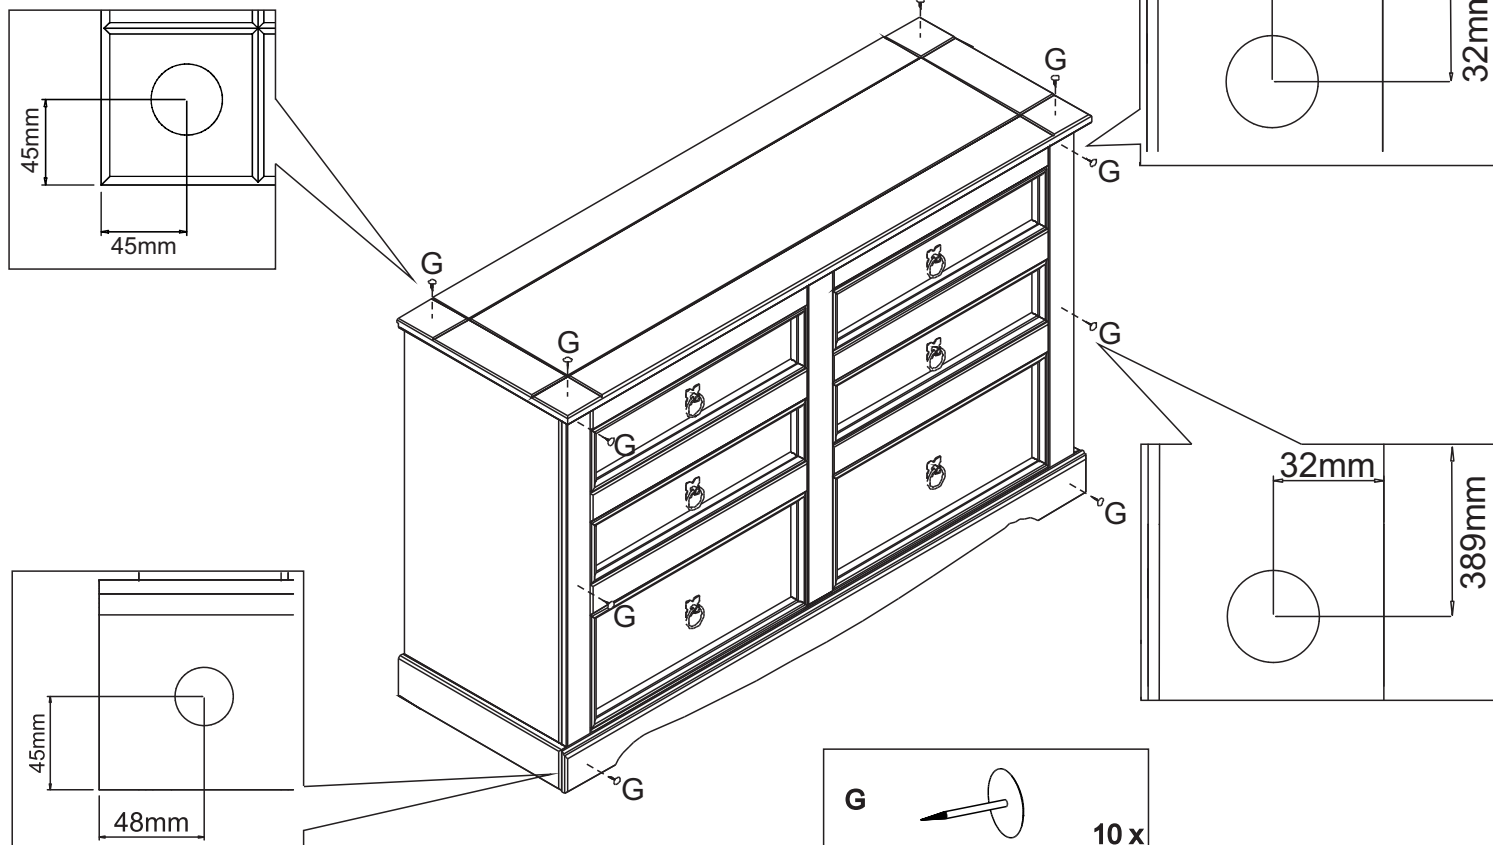

16

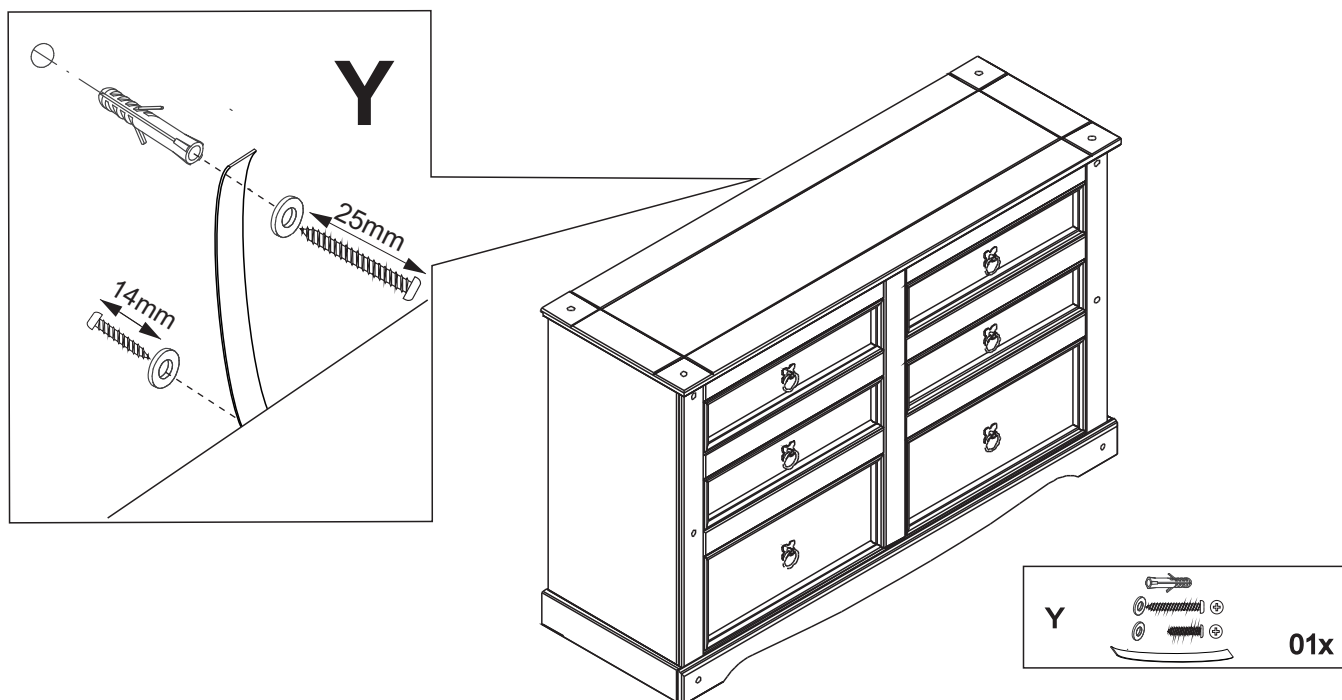

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, IT WILL REQUIRE SPECIAL FITTINGS (NOT SUPPLIED).

- Place the fixing strip against the wall and mark the position for drilling hole.
- Drill a hole in the wall to a depth of 30mm by using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert the wall plug into the hole with end flush to the wall surface.
- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end fixing strip to the back edge of the furniture top using the 14mm screw + washer and securely tighten.