


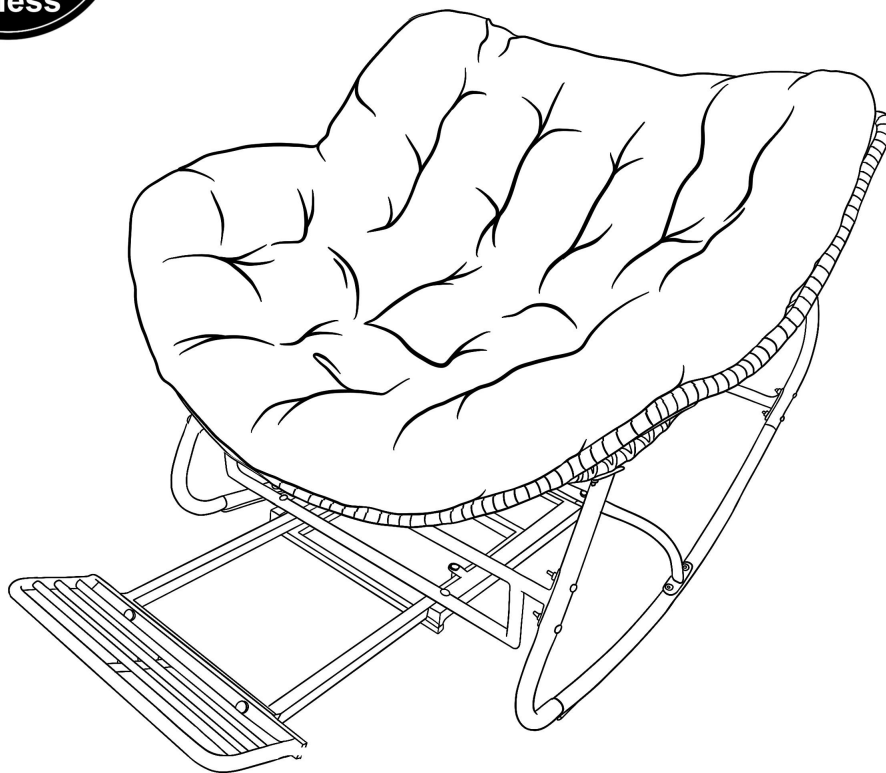








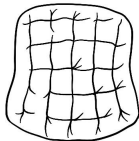













ROCKING CHAIR




Accessories List									
Accessories									
	A	2	B	2	C	2	D	1	
									
	E	1	F	2	G	2	H	1	
									
	I	1	J	1	K	1	L	1	
Tool kit									
	M6,55mm	12	M6,40mm	16	M6,16mm	6	M6,20mm	2	
	 M-6		 M-6		 M-6		 M-6		
	Q	1	R	1	S	1	T	1	

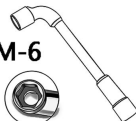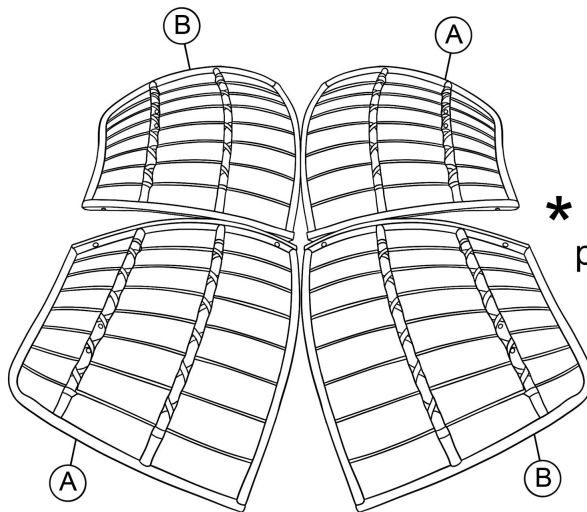

✱ Before installing, be sure to place the bases in alphabetical.


Step1:

Assembling the seat section
Using 8 screws - M6,55mm

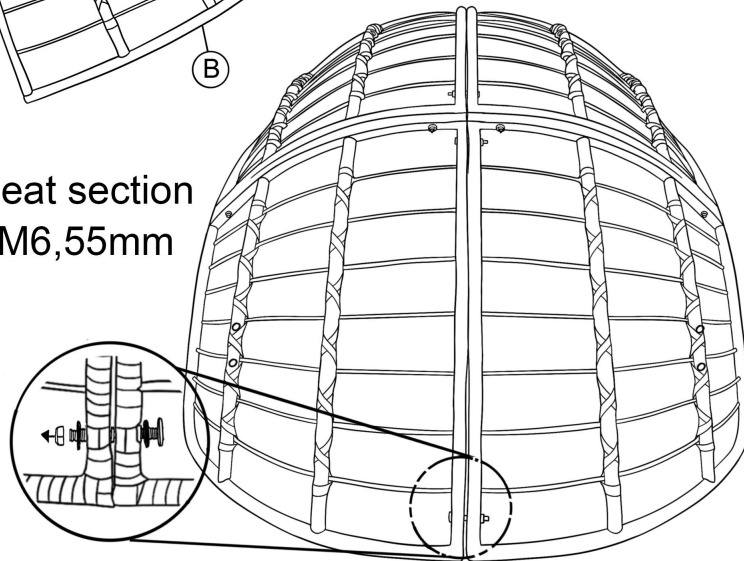

Notice:

- 1-Please don't tighten all screws completely at beginning!
- 2-Fully tighten after completing the seat frame!

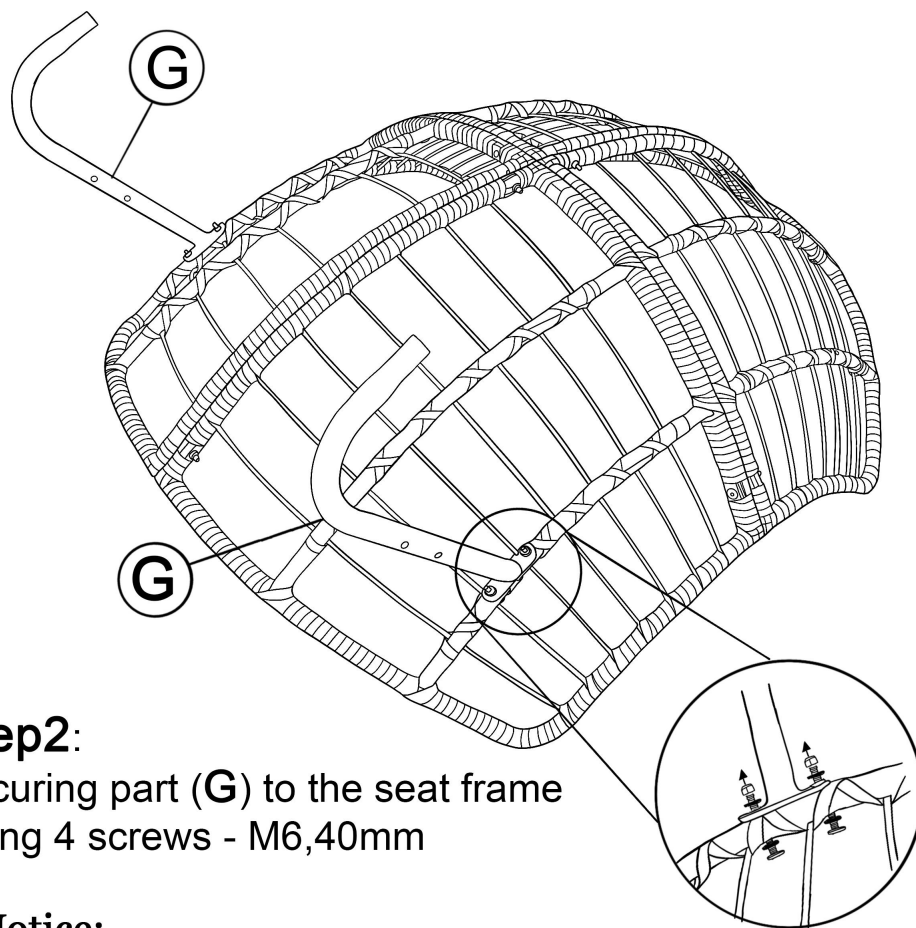


Step2:

Securing part (G) to the seat frame

Using 4 screws - M6,40mm


Notice:

- 1-Please don't tighten all screws completely at beginning!
- 2-Fully tighten after completing the chair!

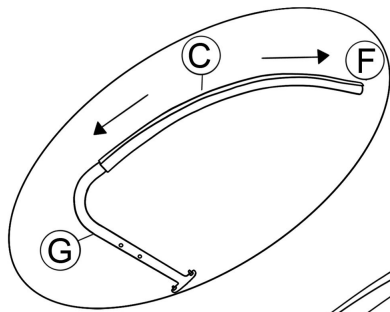

Step 3:


Connect part (G) & (F) with part (C)

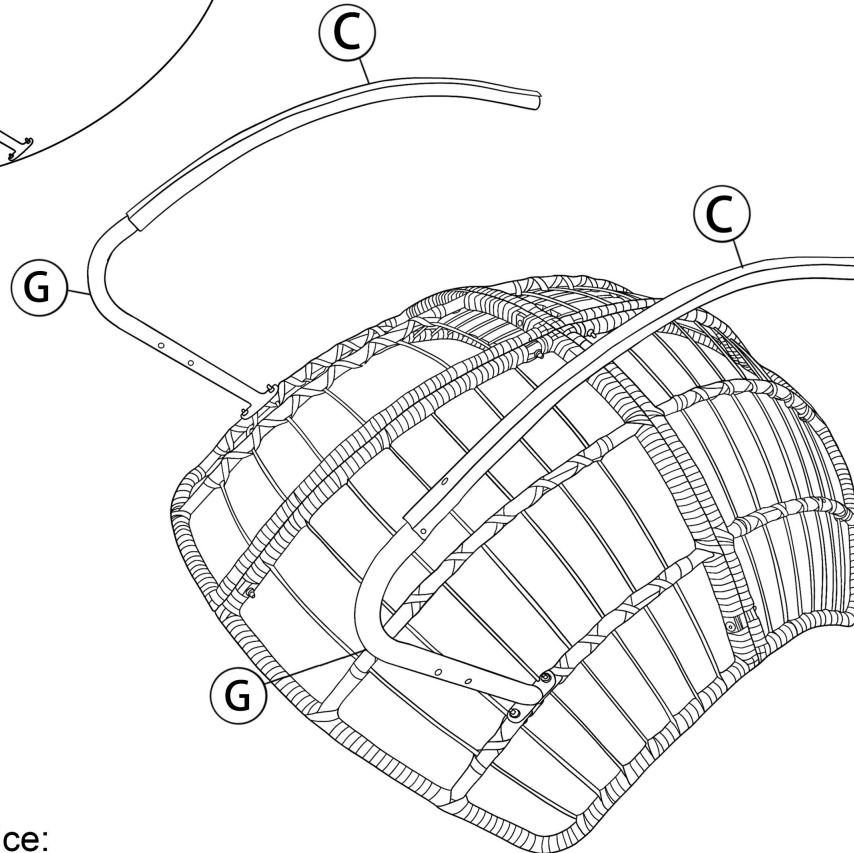

Notice:

- 1-Please don't tighten all screws completely at beginning!
- 2-Fully tighten after completing the chair!

Step4: Securing part (F) to the seat frame
Using 4 screws - M6,40mm

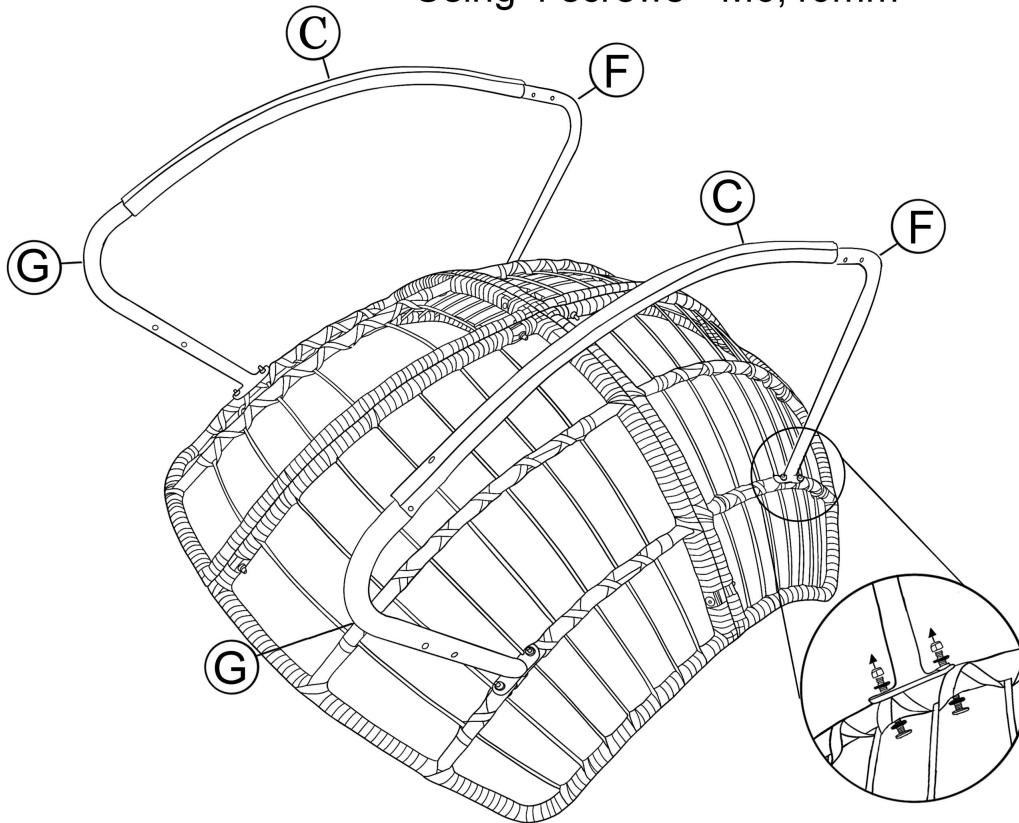

Notice:


- 1-Please don't tighten all screws completely at beginning!
- 2-Fully tighten after completing the chair!


Step5:

Connecting part (D)&(F)
Using 4 screws - M6,40mm

Step6:


Connecting part (E)&(C)
Using 4 screws - M6,16mm

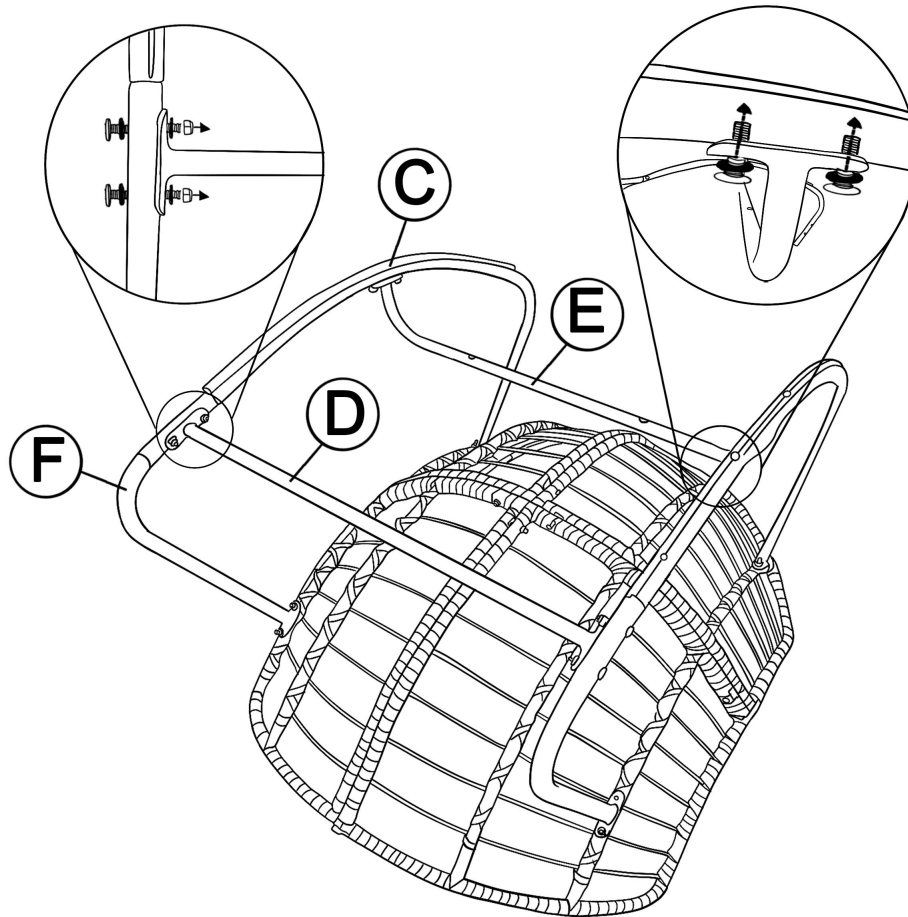

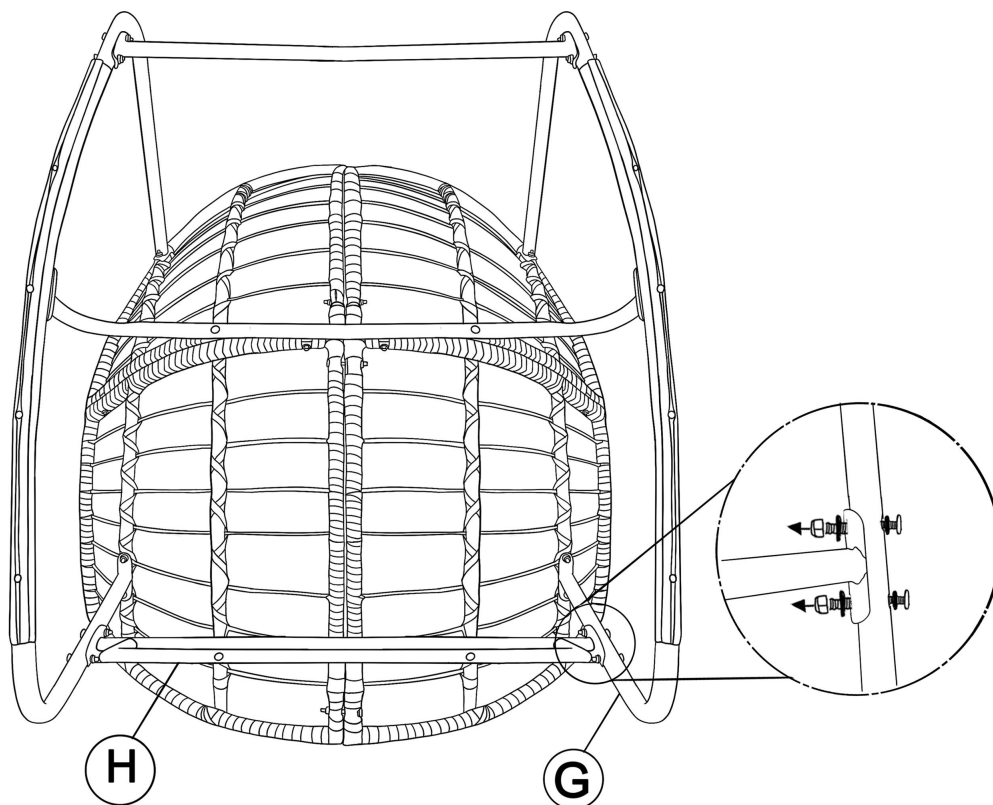


Step7:

Connecting part (H) and (G)
Using 4 screws - M6,40mm

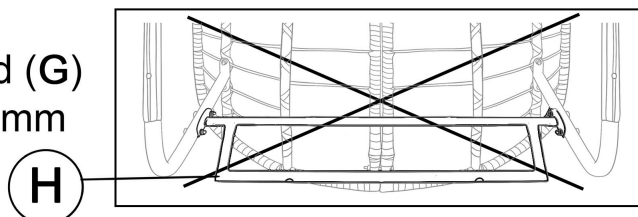

Incorrect Installation Case

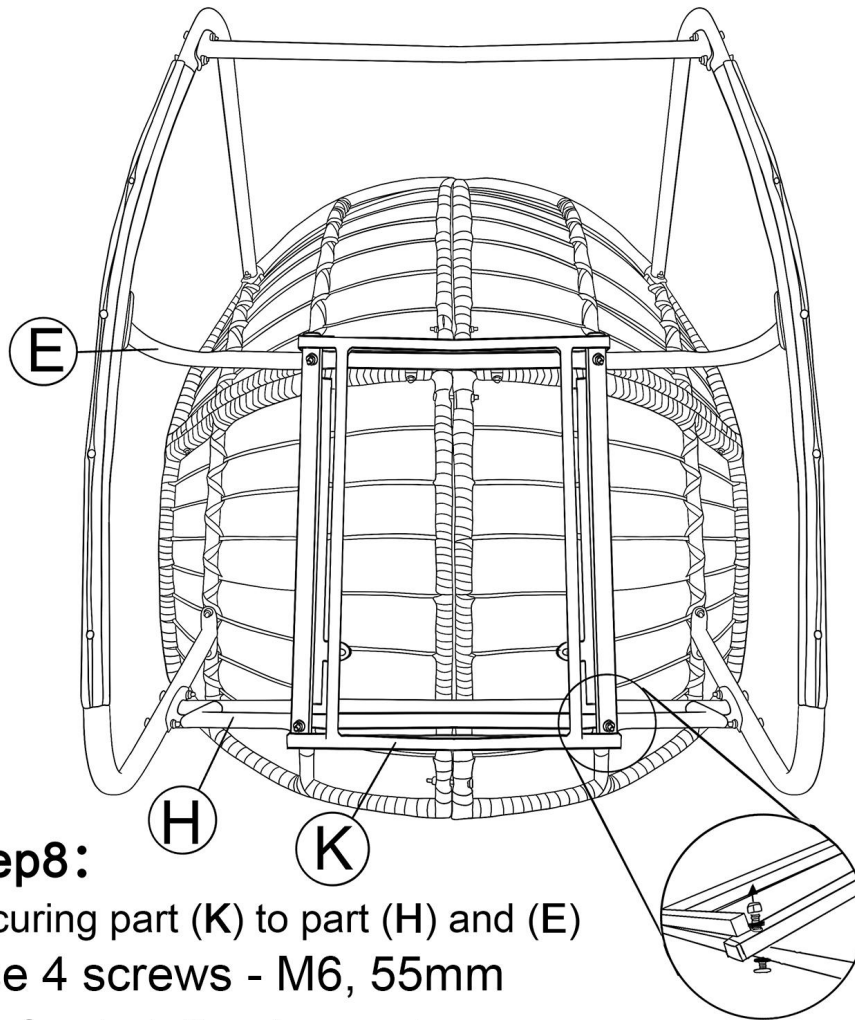


Step8:

Securing part (K) to part (H) and (E)

Use 4 screws - M6, 55mm


* Before installing, be sure to
place the bases in alphabetical.

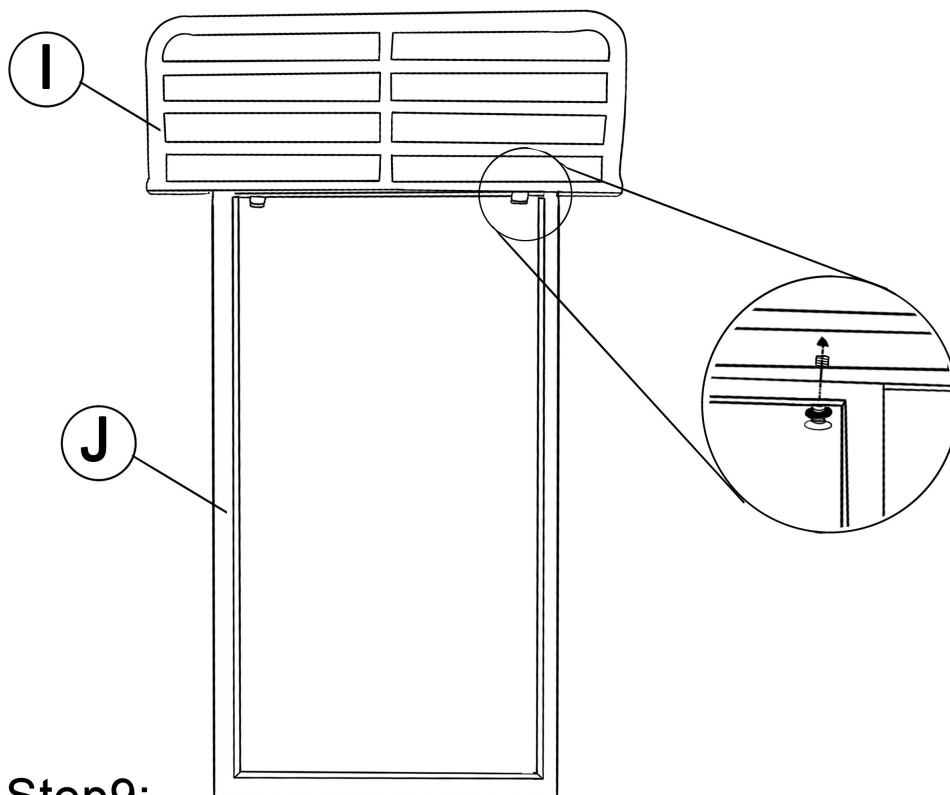

Step9:

Installing the footrest by connecting part (I) and (J).

Using 2 screws - M6,20mm

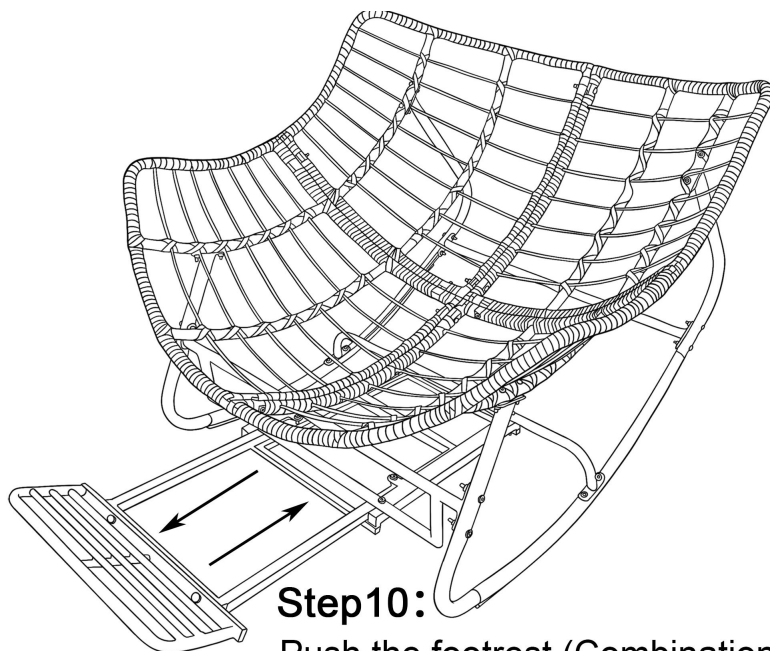


Step10:


Push the footrest (Combination of part (I) & (J))
into the track of part (K)

Step11:

Securing the footrest's trajectory-Using 2 screws - M6,16mm

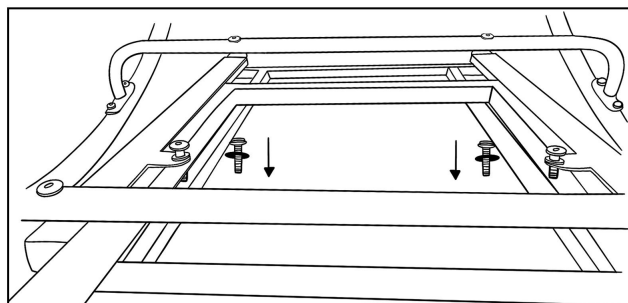

ROCKING CHAIR

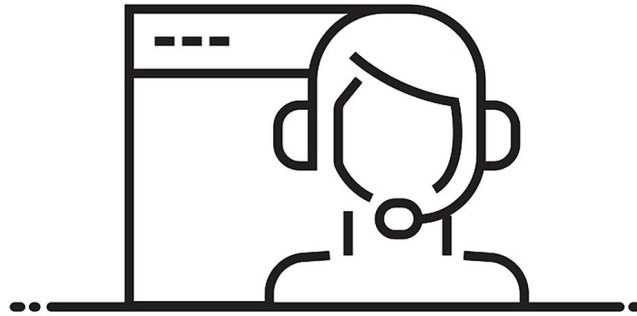

ONLINE SUPPORT

Please read the installation guide carefully before installation
If you have any questions during the installation process
you can contact us and we will provide you a detailed guidance