
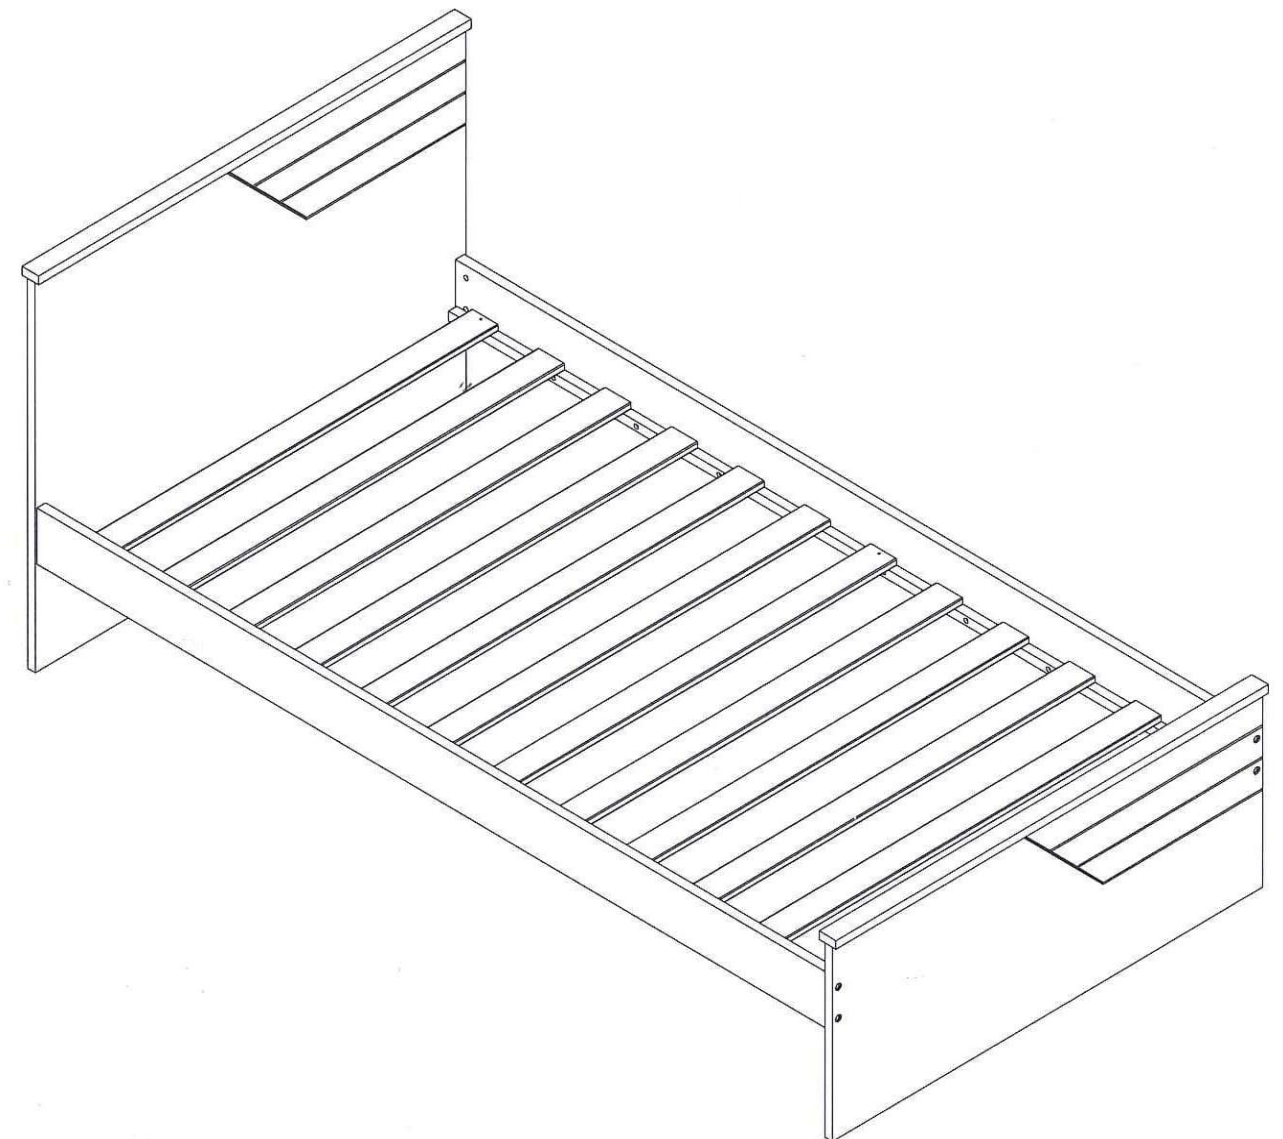




ASSEMBLY INSTRUCTION

TWIN BED (1000 x 1905)MM




HARDWARE LIST

A  PLASTIC DOWEL (M8 x 30MM) 4 PCS	B  PLASTIC DOWEL (M10 x 35MM) 4 PCS	C  JCBC BOLT (M6 x 50MM) 8 PCS
D  JRN NUT (M6 x 13MM) 8 PCS	E  CONNECTING BOLT (34MM) 6 PCS	F  MINIFIX (12MM) 6 PCS
G  CSK C/B SCREW (M4 x 32MM) 6 PCS	H  ALLEN KEY (M4 x 60MM) 1 PC	Tools Required : Crosshead Screw Driver, Rubber Hammer

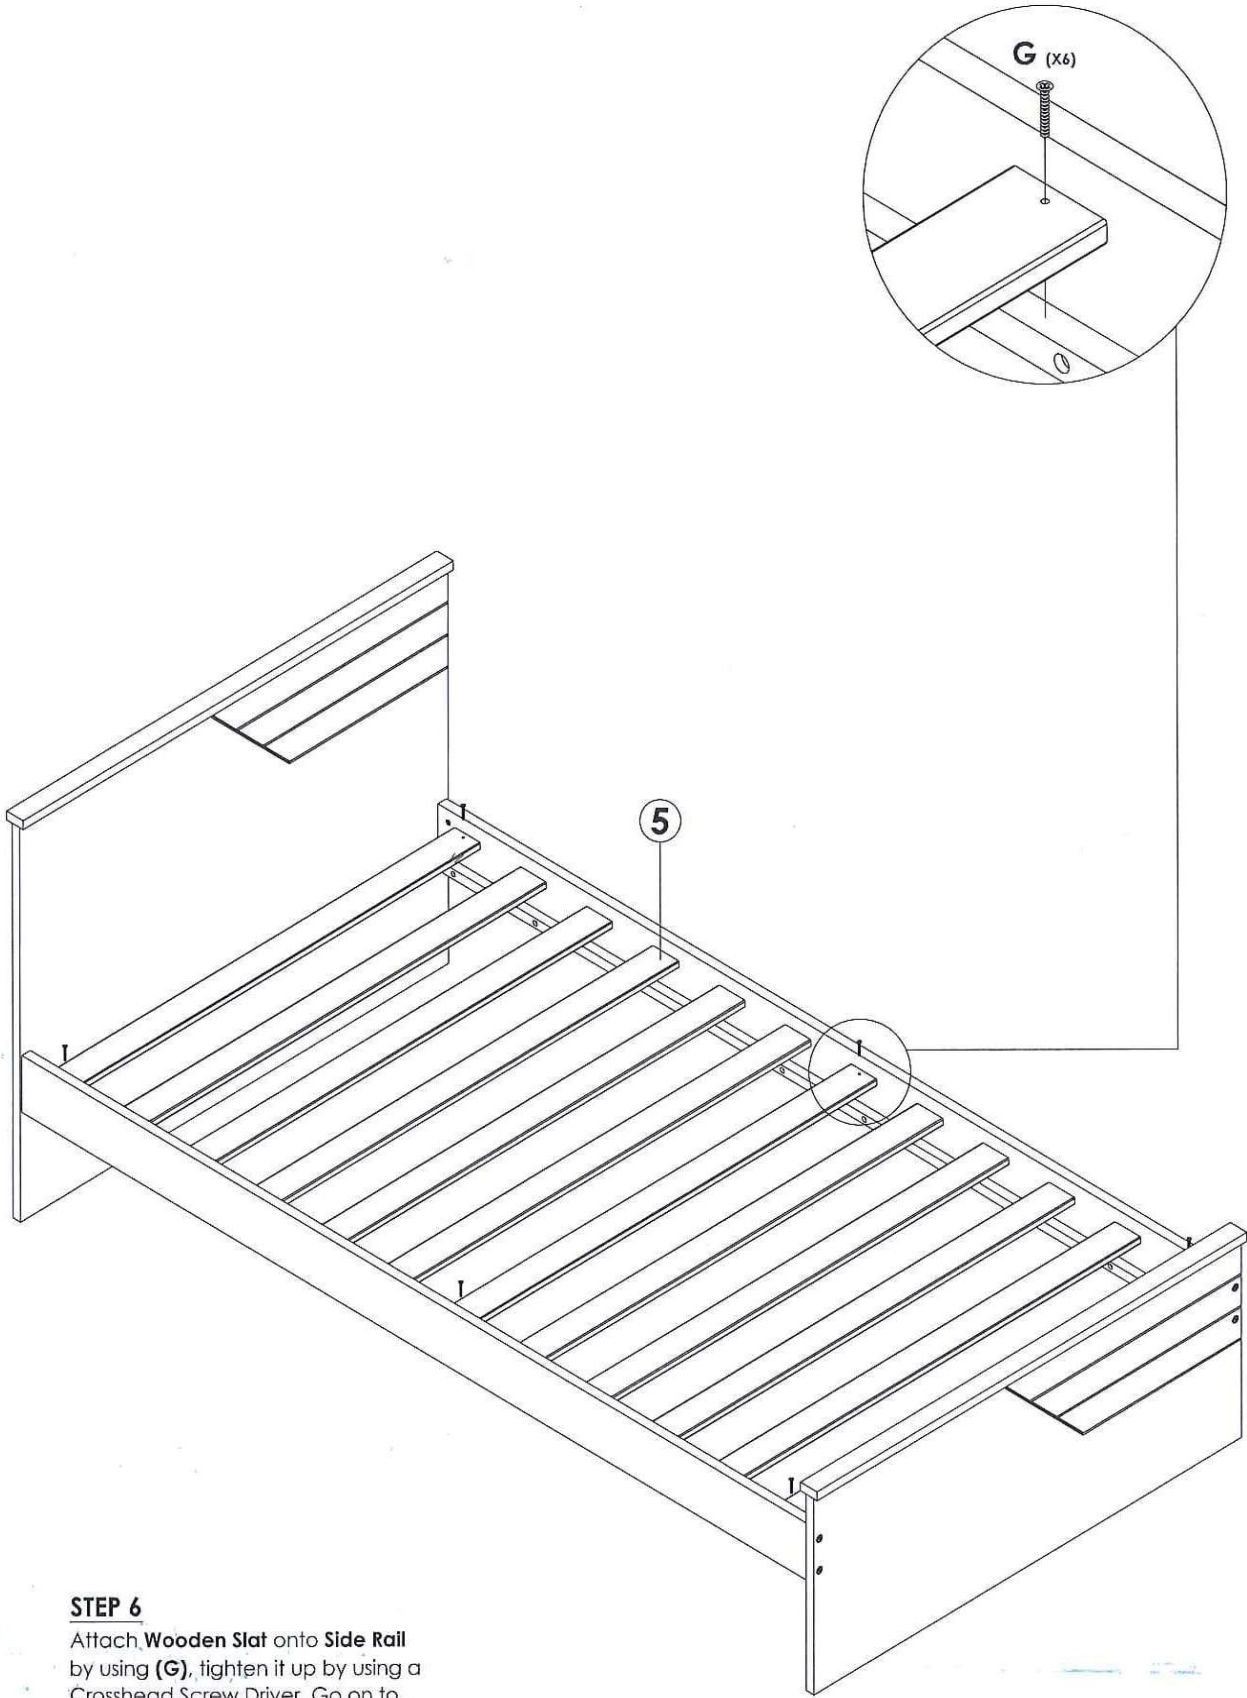


STEP 6
Attach **Wooden Slat** onto **Side Rail** by using **(G)**, tighten it up by using a Crosshead Screw Driver. Go on to complete the entire assembly.

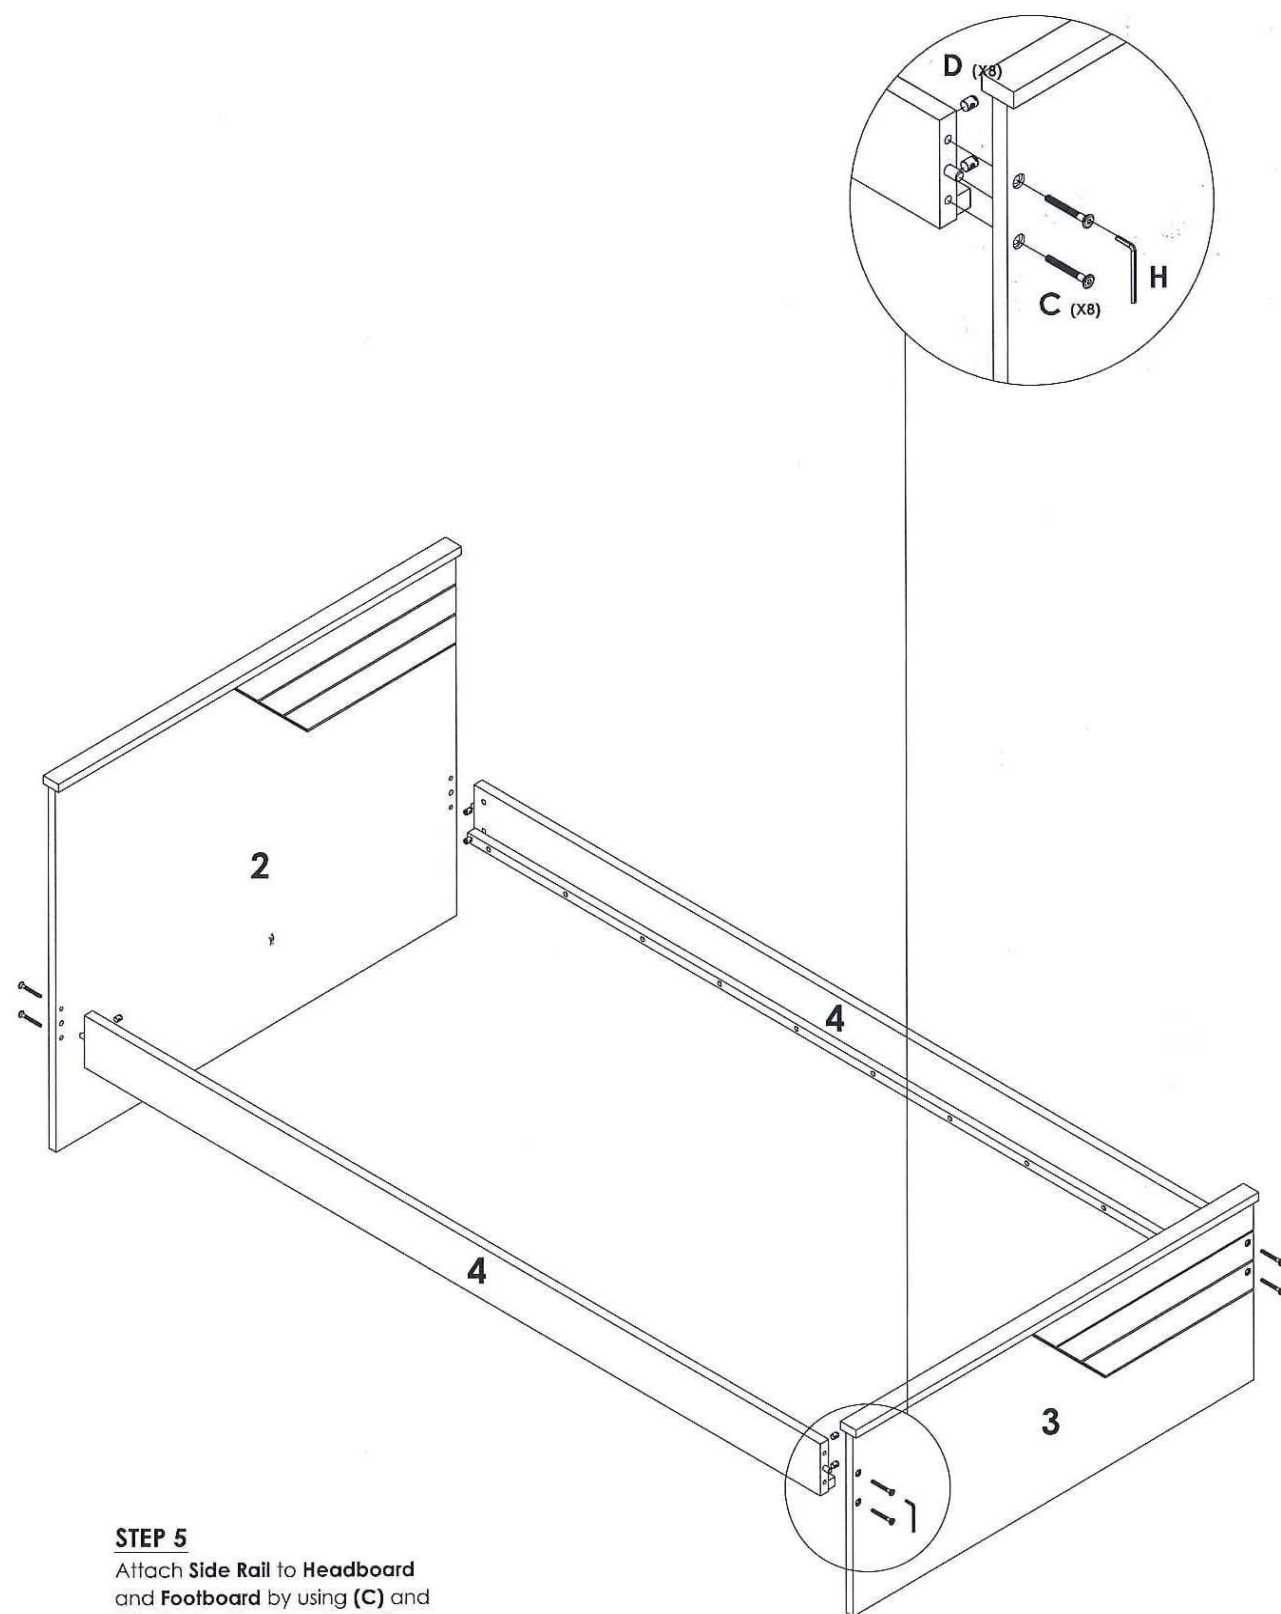


STEP 5
Attach **Side Rail** to **Headboard**
and **Footboard** by using **(C)** and
(D), tighten it up by using **(H)**.


PART LIST

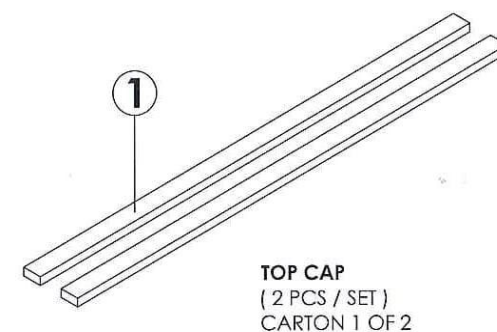


TOP CAP
(2 PCS / SET)
CARTON 1 OF 2

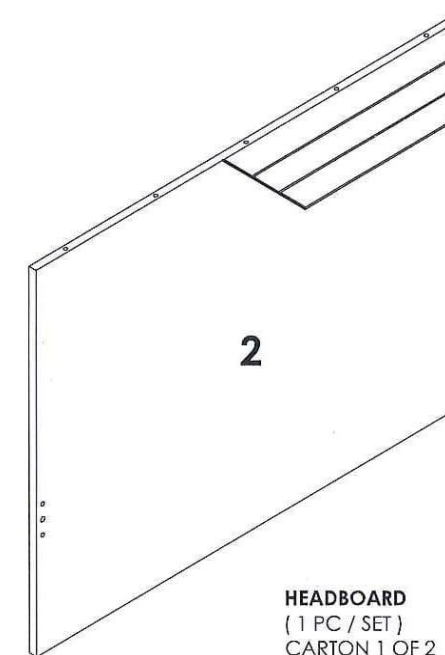


HEADBOARD
(1 PC / SET)
CARTON 1 OF 2

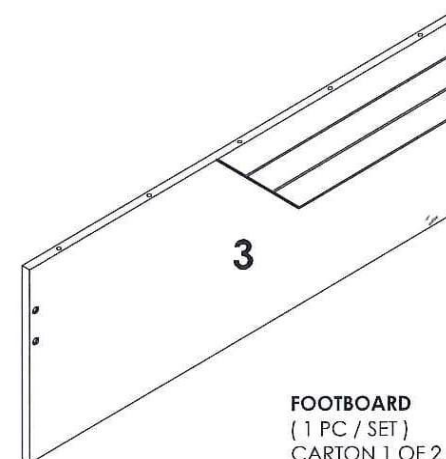


FOOTBOARD
(1 PC / SET)
CARTON 1 OF 2

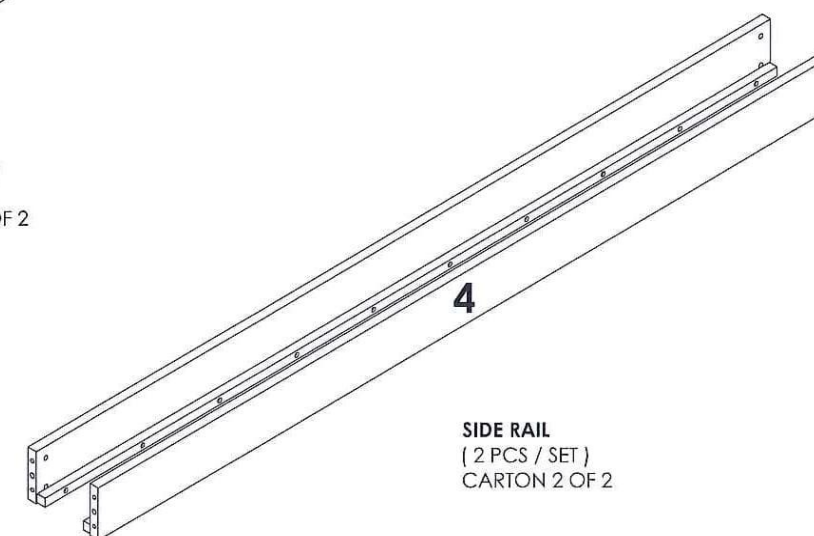


SIDE RAIL
(2 PCS / SET)
CARTON 2 OF 2

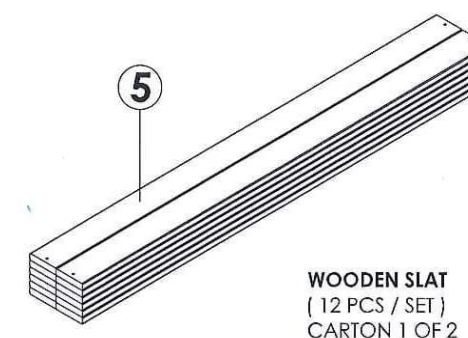


WOODEN SLAT
(12 PCS / SET)
CARTON 1 OF 2

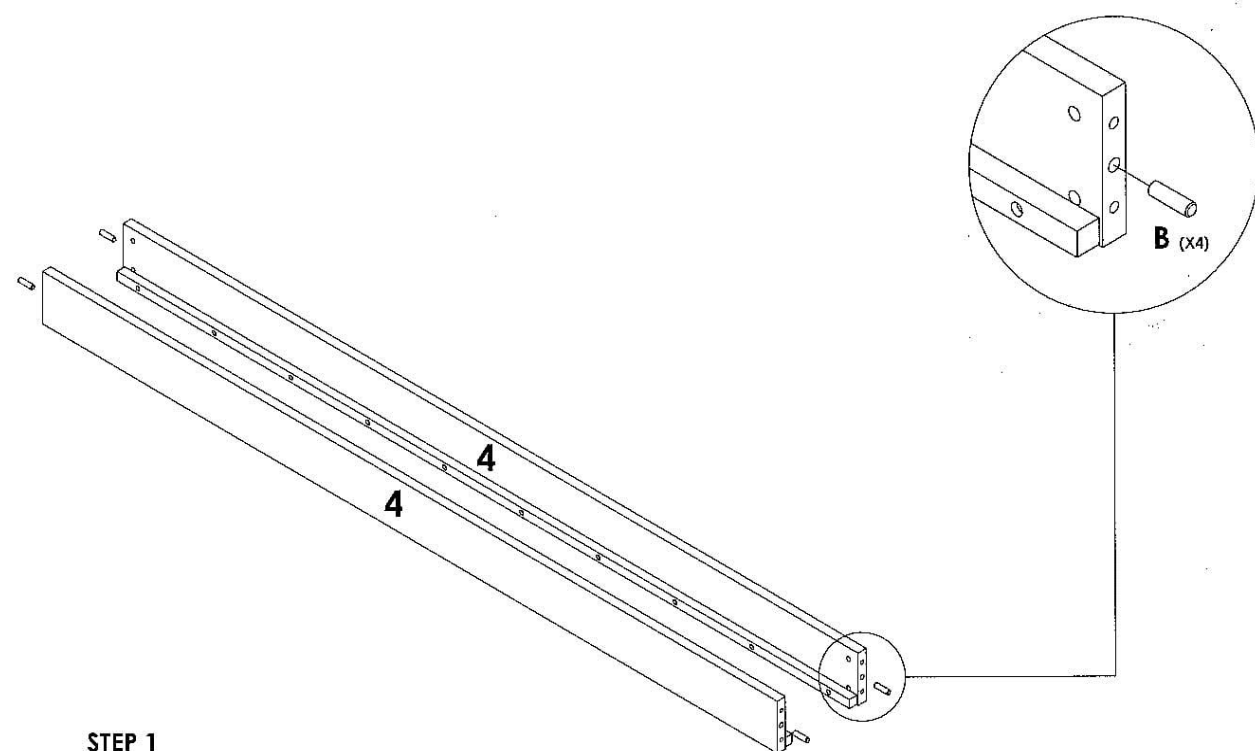


STEP 1
Insert **(B)** into Ø10MM holes on **Side Rail** by using a Rubber Hammer.

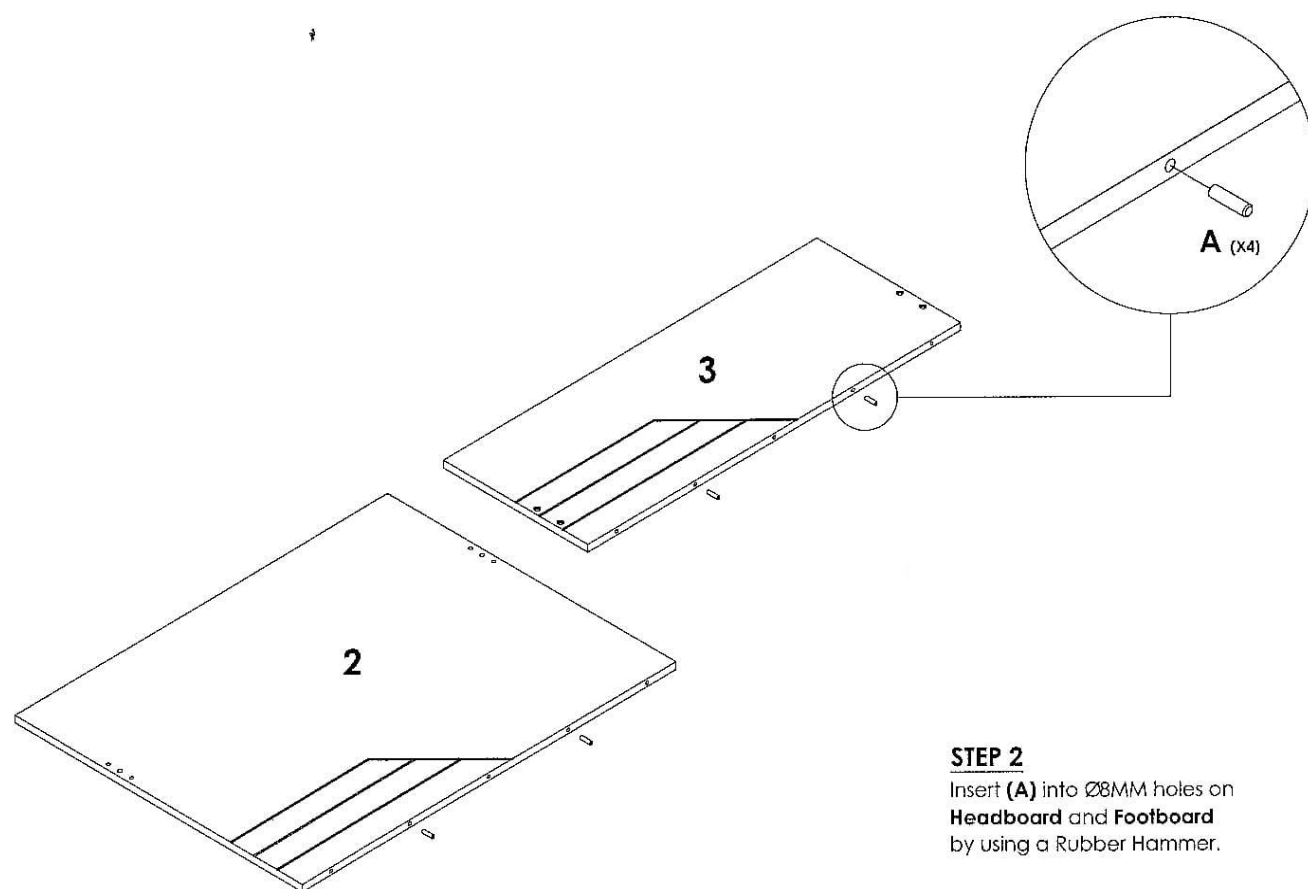

STEP 2
Insert **(A)** into Ø8MM holes on **Headboard** and **Footboard** by using a Rubber Hammer.

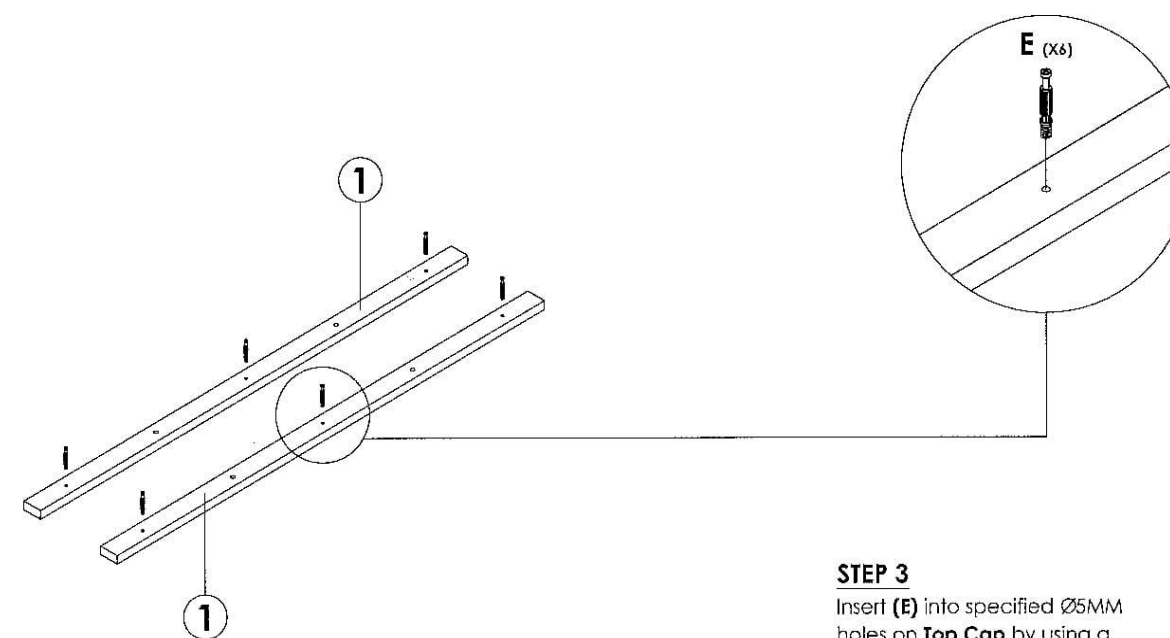

STEP 3
Insert **(E)** into specified Ø5MM holes on **Top Cap** by using a Rubber Hammer.

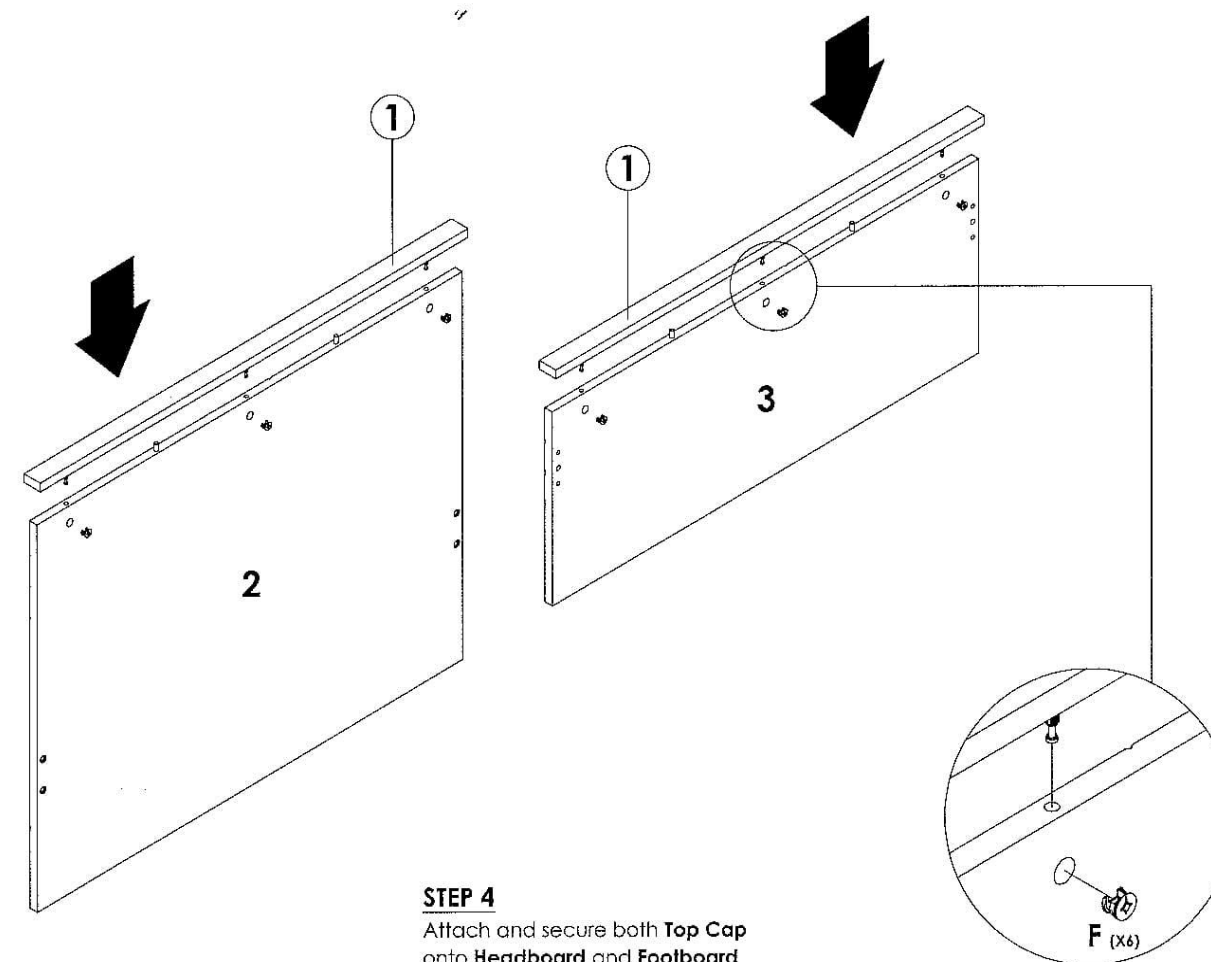

STEP 4
Attach and secure both **Top Cap** onto **Headboard** and **Footboard** by using **(F)**, tighten it up by using a Crosshead Screw Driver.