


# ASSEMBLY INSTRUCTIONS

## **IMPORTANT**

Please Inspect all items carefully before assembling. If for any reason you need to return this item, you must return it in its original packaging. Assembled items cannot be returned.

Please open the zip on the back of the headboard.

You may find the footboard and some of the components inside

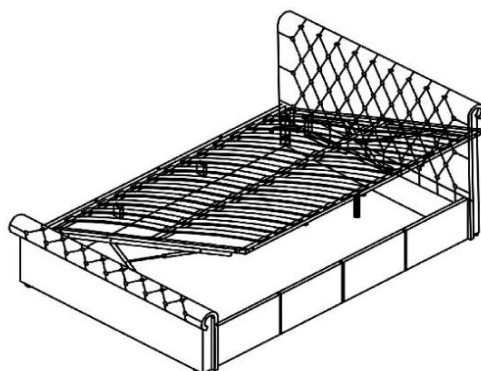

Minimum No.of people recommended  
to assemble this product: Two (2)

Approx. Assembly time: 90 mins

## **HELPFUL ADVICE PRIOR TO ASSEMBLING THE BED**

- 1) Owing to the size and weight of the bed, we recommend that it is assembled by two adults, on a flat surface in a room that it is intended for.
- 2) Please Do Not use any tools other than those provided or recommended in these instructions.
- 3) Please Do Not discard any packaging until you have checked that you have all the parts and fittings. Keep all fittings out of reach of children.
- 4) Assemble all parts loosely until advised to tighten. Depending on use, it maybe necessary to tighten the fittings from time to time, So please save your Allen key and Spanner that has been provided.

## **WARNINGS**


- 1) Please ensure children Do Not play in the storage area or try to lift up the metal frame.
- 2) Once assembled, put mattress on frame before pushing it down and only lift up or push down the metal frame with mattress on top.
- 3) Please Do Not stand on the storage base at any time.
- 4) Do Not throw away any of the packaging or the instructions booklet until you have checked all the components and fittings and the furniture is fully assembled.

## **HOW TO USE BED**


When the bed is fully assembled, Lift the frame up using strap on the footboard. To close the frame you will need to place both hands on the horizontal metal bar at the footboard end that is in the air ( one hand in the centre of each of the two rows of slats). The bed will only work if this done centrally. Apply pressure to close the bed. Do Not try to close from the side or any other way. Please also note the gaslift lift arms do not move up and down on their own and only work if the bed is fully assembled and is assembled correctly and will only work normally with mattress on the frame.

**PLEASE LOCATE FOOTBOARD AND FITTINGS INSIDE THE ZIPPED  
COMPARTMENT BEHIND THE HEADBOARD**


# Components

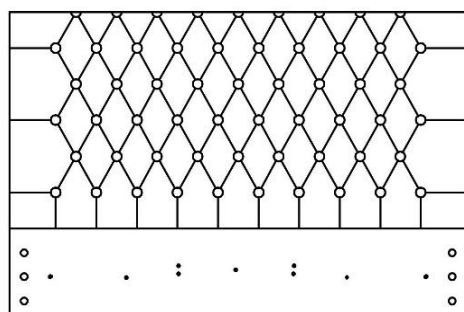

1 Headboard

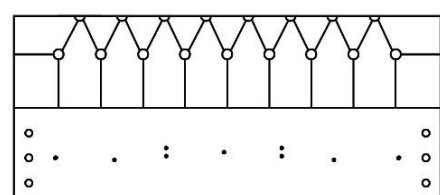


2 Footboard

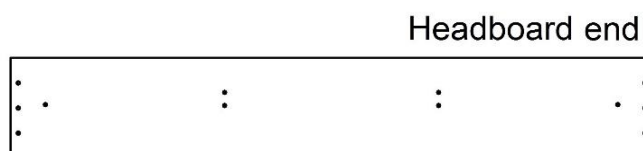

3 Left Side Rail



4 Right side Rail

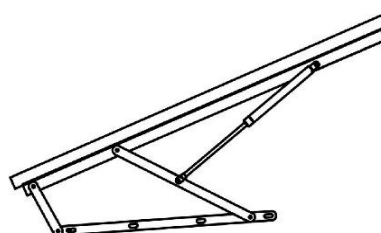


5 Pneumatic Arm x2



6 Pneumatic Support rail x2




7 Horizontal Frame rail x3



8 Centre Frame rail x1



9 Side Frame rail x2

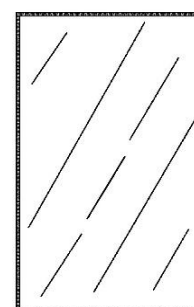


15 Non-Woven Fabric x1




10 Plastic L-Bracket x4



11 Corner Bracket x4

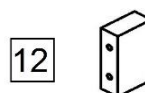

12 Holding Block x4

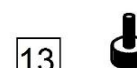

13 Adjustable Leg x4



16 Wood Slat

x26 (Single & Double)  
x30 (King)



17 Side Slat Cap

x26 (Single & Double)  
x30 (King)




18 Centre Slat Cap

x13 (Single & Double)  
x15 (King)




19 Mattress Stopper x 2

## Hardware
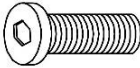
|                                                                                                                                                                                                               |                                                                                                                                                                                                              |                                                                                                                                                                                                                   |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   <p><b>A</b></p> <p>25mm x M8 Bolt x12</p> |   <p><b>B</b></p> <p>Flange nut x2</p>     |   <p><b>C</b></p> <p>15mm x M6 Bolt x12</p> |
|   <p><b>D</b></p> <p>Flat washer x12</p>    |   <p><b>E</b></p> <p>30mm x M6 Bolt x6</p> |   <p><b>F</b></p> <p>40mm x M6 Bolt x8</p>  |
|   <p><b>G</b></p> <p>68mm x M6 Bolt x8</p>  |   <p><b>H</b></p> <p>Spring washer x12</p> |                                                                                                                                                                                                                   |

## Tools (supplied)
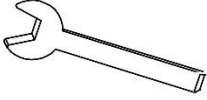
|                                                                                                              |                                                                                                              |                                                                                                          |
|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
|  <p>5mm Allen key x 1</p> |  <p>4mm Allen key x 2</p> |  <p>Spanner x 1</p> |
|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|


# Assembly Instructions

## Step 1: Attaching side rail


Position left side rail (3) adjacent to headboard (1) so that the holes in the headboard line up with the bracket on the side rail.

Secure in place using bolts (A), spring washers (H) and flat washers (D)

Tighten using the allen key provided.

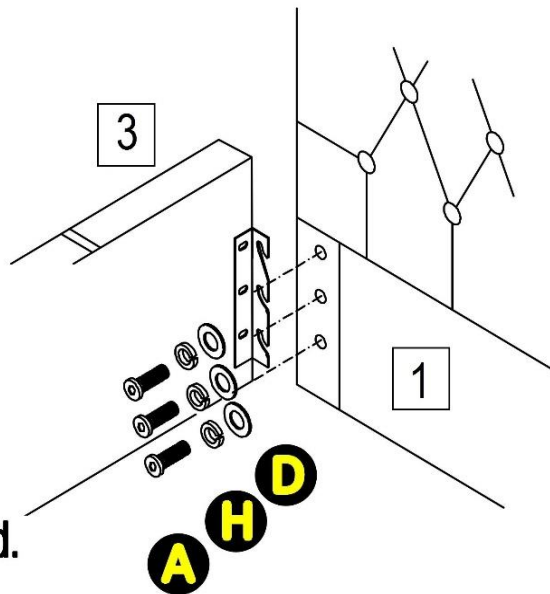


Repeat for right side rail (4).

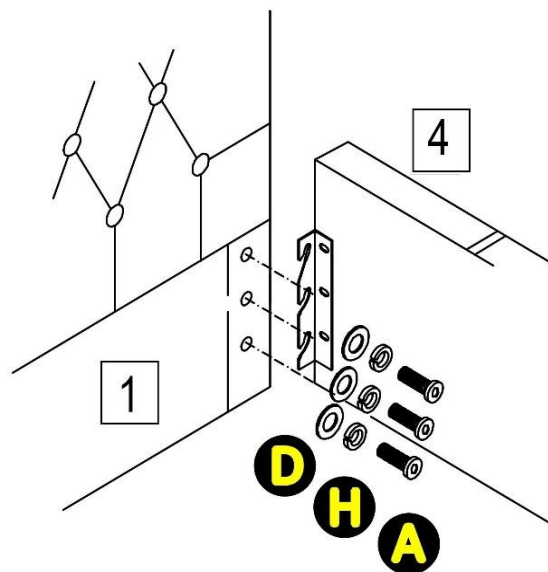


# Assembly Instructions

## Step 2: Attaching footboard


Place footboard (2) in position at the end of the side rails (3) & (1) so the holes in the footboard line up with the brackets on the side rail.

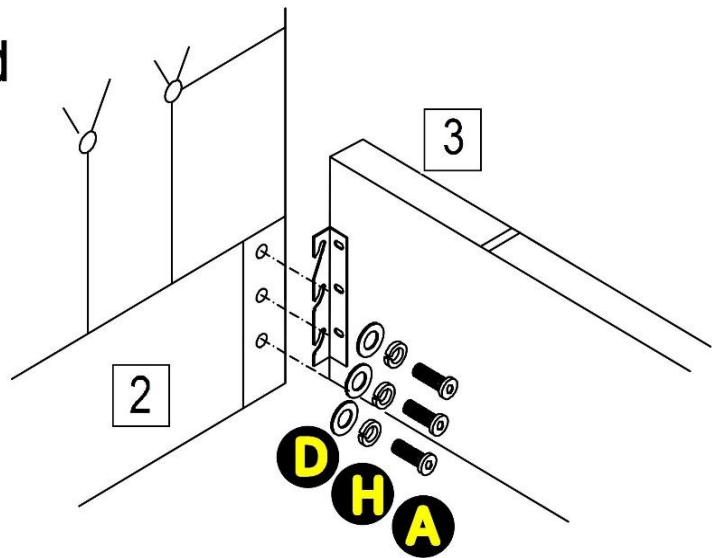

Secure in place using bolts (A), spring washers (H) and flat washers (D). Tighten using the allen key provided.

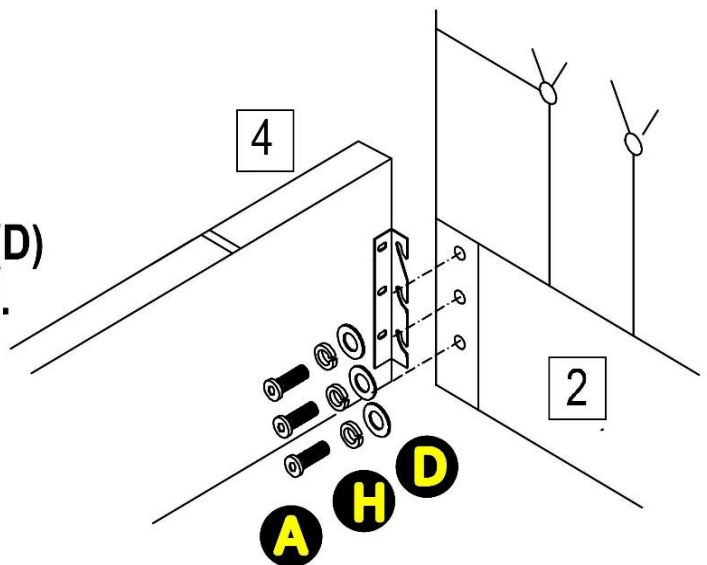

Before tightening the bolts, please ensure the bed frame is square.

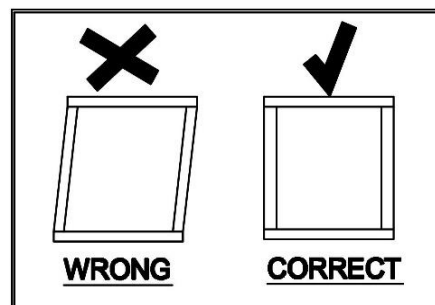


# Assembly Instructions

## Step 3: Fix corner brackets


Fix corner bracket (11) in position between the left side rail (3) and headboard (1) using bolt (C).

Repeat for other 3 corner brackets in each corner of the bed frame.

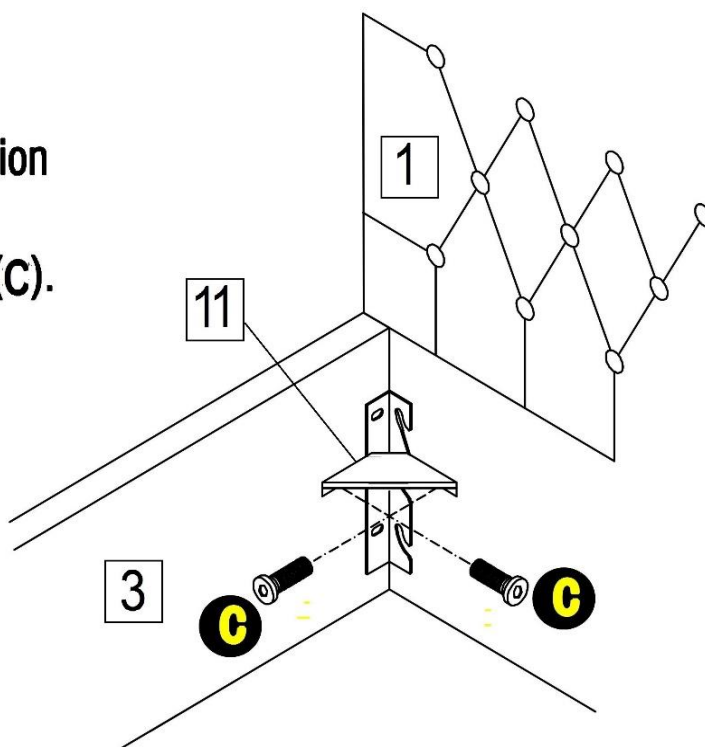


## Step 4: Fix holding block

Fix holding block (12) onto Side Rails (3) & (4) using bolt (G) and tighten using allen key.

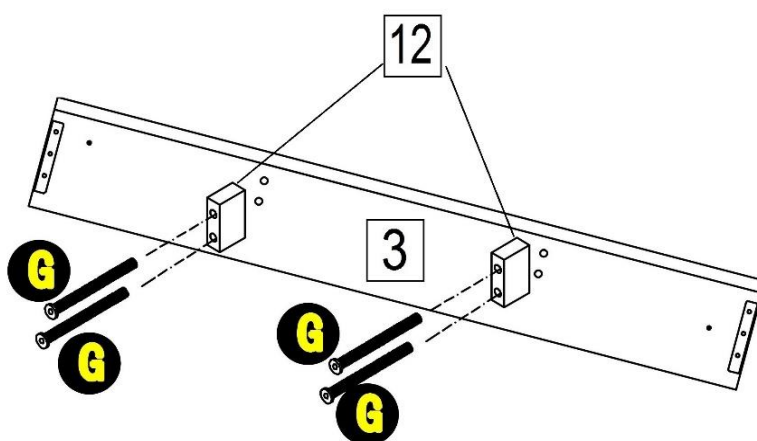

# Assembly Instructions

## Step 5: Fixing Gaslift Mechanism (Pneumatic Arm) to Headboard and Footboard.

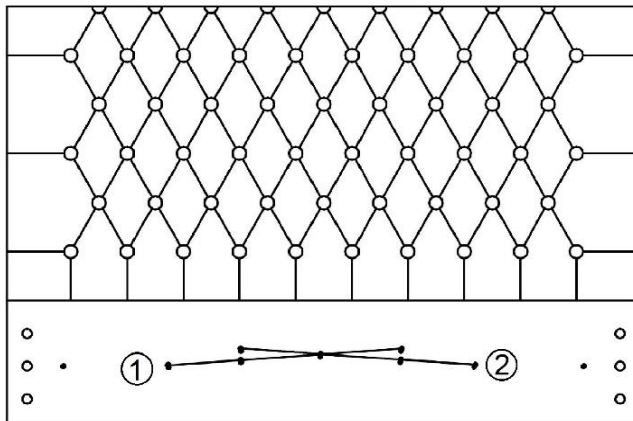


① RIGHT SIDE



② LEFT SIDE

**Step 5a: HEADBOARD** - The Four Pre-drilled holes on the headboard and footboard are for the installation of the gaslift mechanism ( pneumatic arm ) for the ottoman to be lifted **LEFT** or **RIGHT** side.

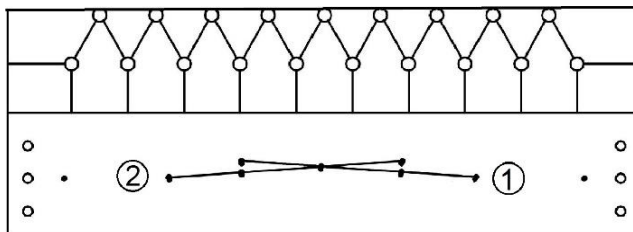

② RIGHT SIDE




① LEFT SIDE

**Step 5b: FOOTBOARD** - The Four Pre-drilled holes on the headboard and footboard are for the installation of the gaslift mechanism ( pneumatic arm ) for the ottoman to be lifted **LEFT** or **RIGHT** side.

# Assembly Instructions


## Step 6: Assemble Pneumatic Arm and Pneumatic Piston.

Step 6a : Attach the pneumatic support rail (6) between headboard (1) and pneumatic arm (5) and secure using 4 bolts (F) and tighten with Allen key provided. Repeat on the footboard (2)

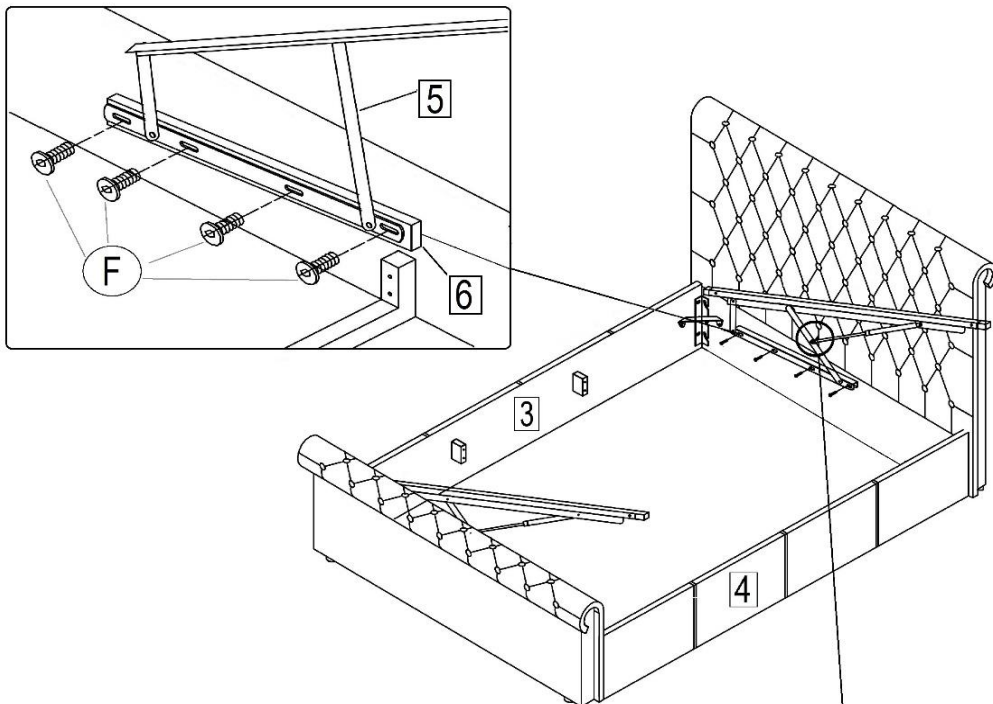


Step 6b : Before connecting the pneumatic piston, ensure the pneumatic arm is functioning correctly. It should be able to lift up and down freely with adequate clearance on all sides.

Secure the Flange Nut (B) as shown, and tighten with Spanner provided. Do Not Over Tighten. !!!

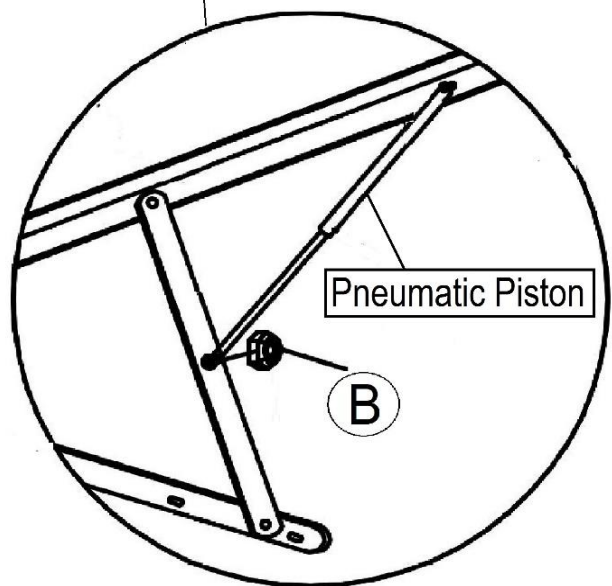

# Assembly Instructions

## Step 7: Assemble slat frame

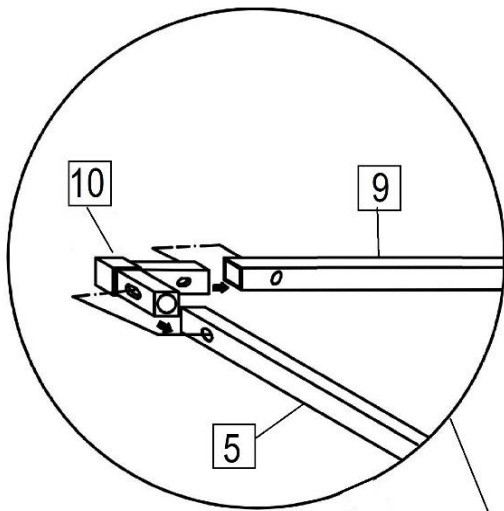



### Step 7a :

Attach the Side Frame Rails (9) to the Pneumatic Rails (5) which are already attached to the Lifting mechanism with the Plastic L-Brackets (10)

Repeat on all the 4 corners


### Step 7b :

Attach Centre Frame Rail (8) to Pneumatic Rail (5) using Bolt (C). Tighten with Allen key provided. Repeat on Footboard end.

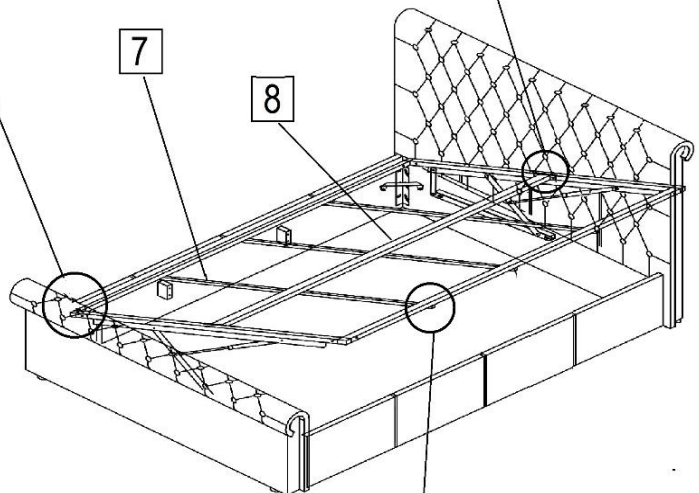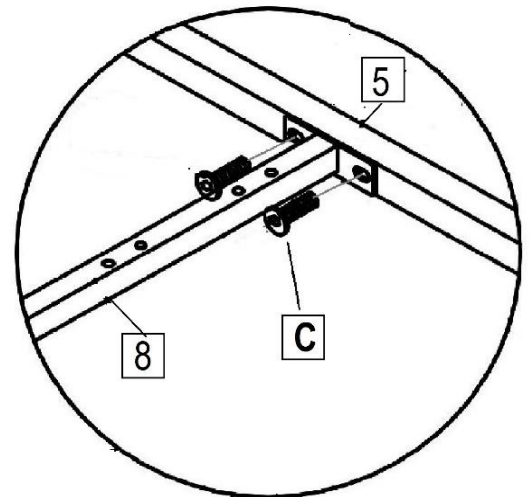

### Step 7c :


Attach the Horizontal Frame Rail (7) on the bottom of Side Frame Rail (9) using Bolt (E). Tighten with Allen provided.

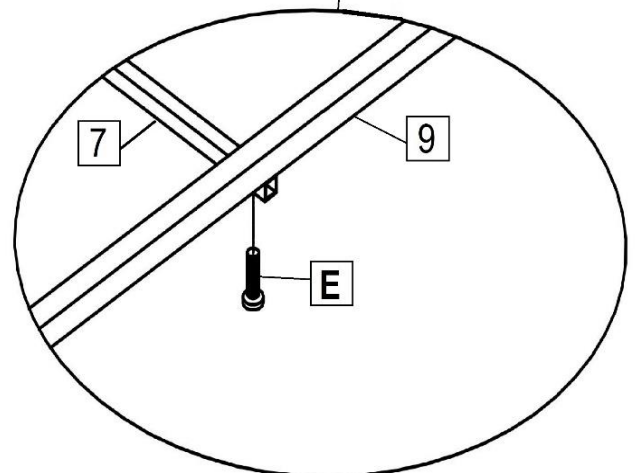

## Assembly Instructions


### Step 8a : Attach Non-Woven Fabric

Turn bed on its side and attach non-woven fabric (15) to bed base.

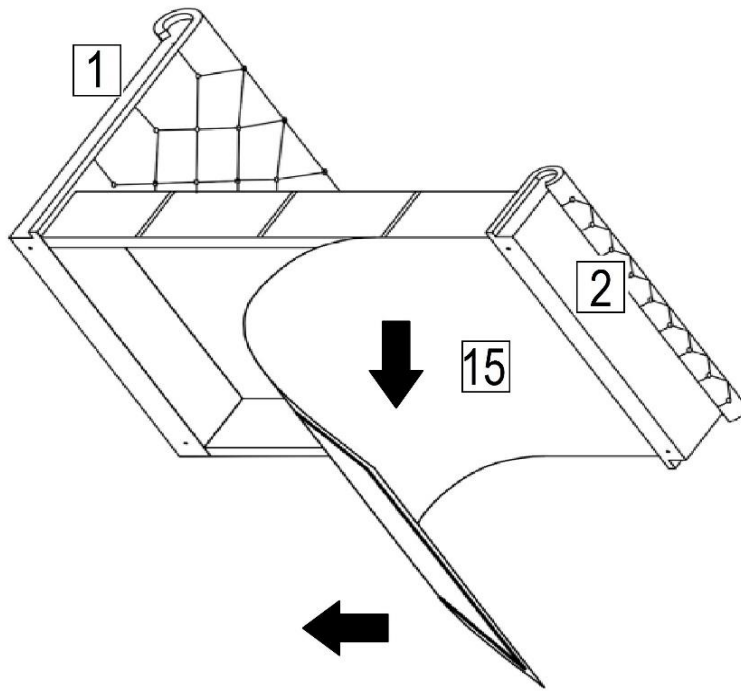

### Step 8b : Attach Adjustable Legs


Attach the adjustable Legs (13) to the base and tighten to the correct bed and floor levelling.

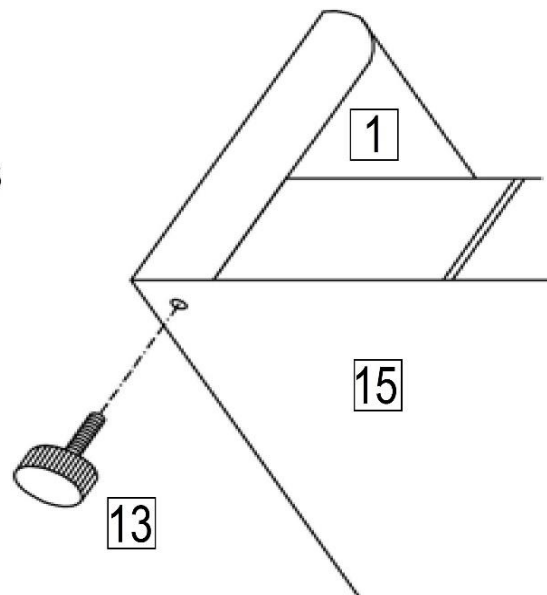

## Assembly Instructions


### Step 9 : Assemble Wood Slats

Attach Centre slat cap (18) and Side slat cap (17) to Wood slat (16) and push into the holes on the rails.

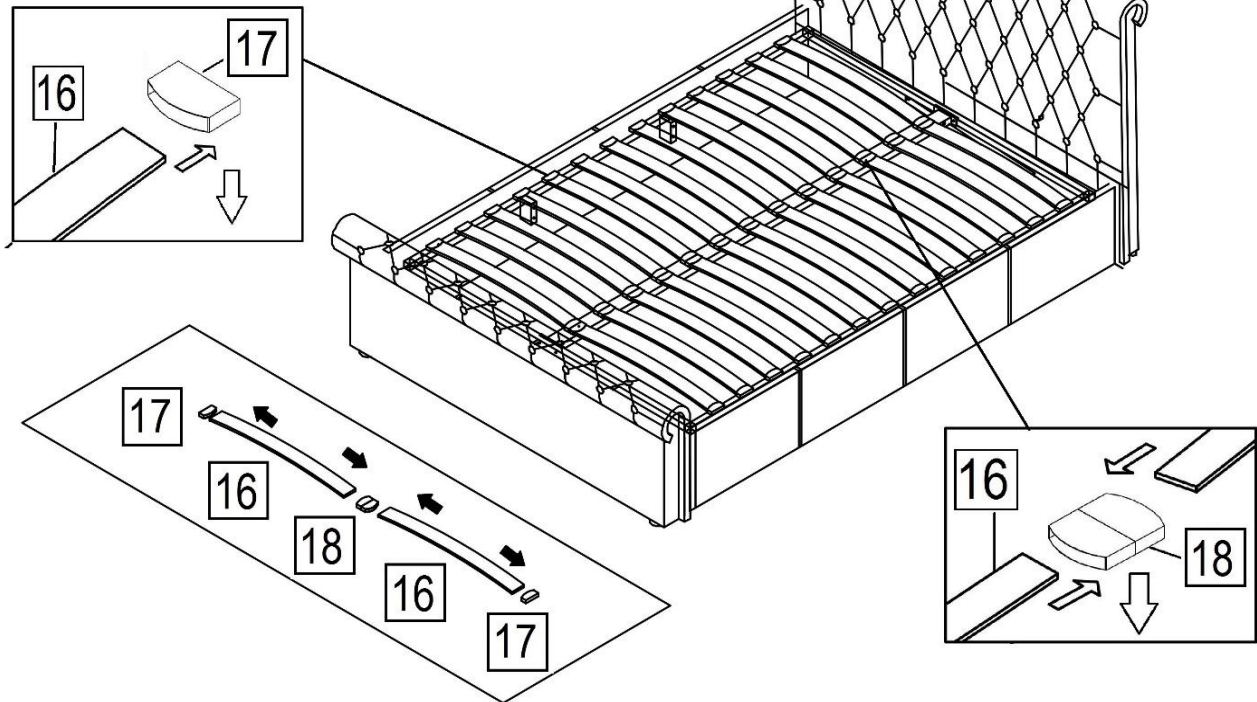

### Step 10: Attach Mattress Stopper

Hook the mattress stopper (19) to the Side Frame rail (9)

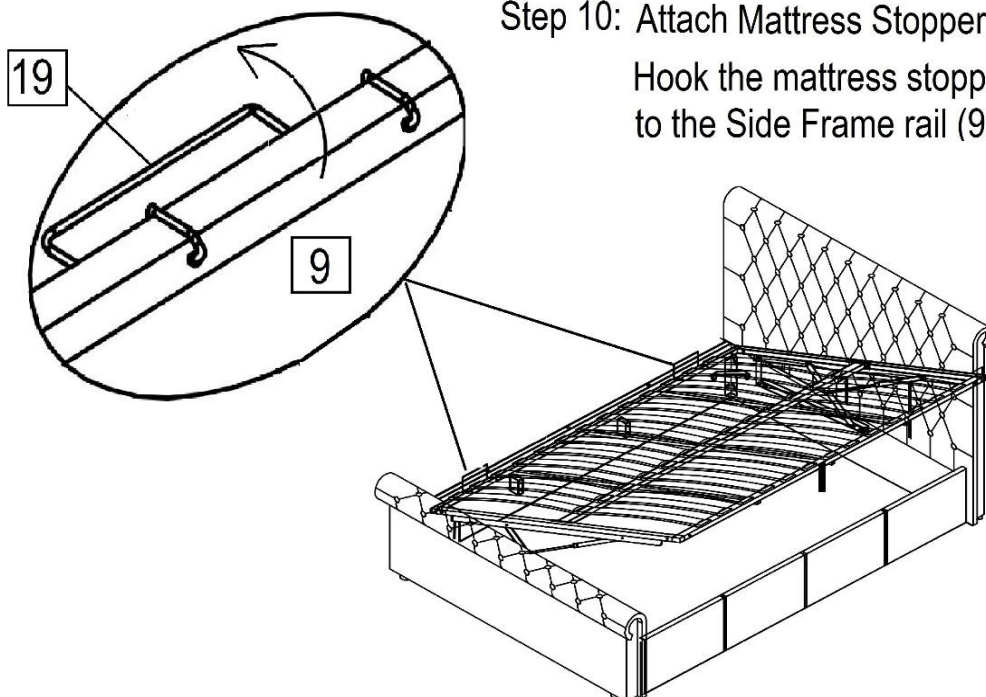

BED ASSEMBLED