

WALKER EDISON

®

Kids Dresser

SKU# WELIN026D4CO1

SKU# WELIN026D4WH1



For Residential Use Only


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com



Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

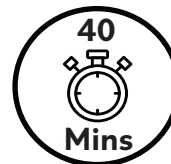

People recommended for assembly

Make it a team effort! Grab a friend for quicker, easier assembly.

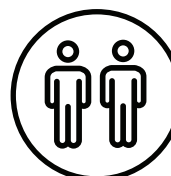

2 People Build

Tools Needed

Grab a Phillips head screwdriver to conquer this assembly.

Phillips head screwdriver is not included.



Use power tools with caution




You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.







Scan to get assembly tips and help!

WE Parts List

Part Number	Description	Quantity
A	Bottom Panel	1
B	Partition	1
C	Lower Back plane	1
D	Left Side Panel	1
E	Right Side Panel	1
F	Foot	5
G	Top Panel	1
H	Upper Back plane	1
I	Drawer left side	6
J	Drawer Back	6
K	Drawer right side	6
L	Drawer Bottom rail	6
M	Drawer Bottom	6
N	Left Drawer Face Panel	3
O	Right Drawer Face Panel	3

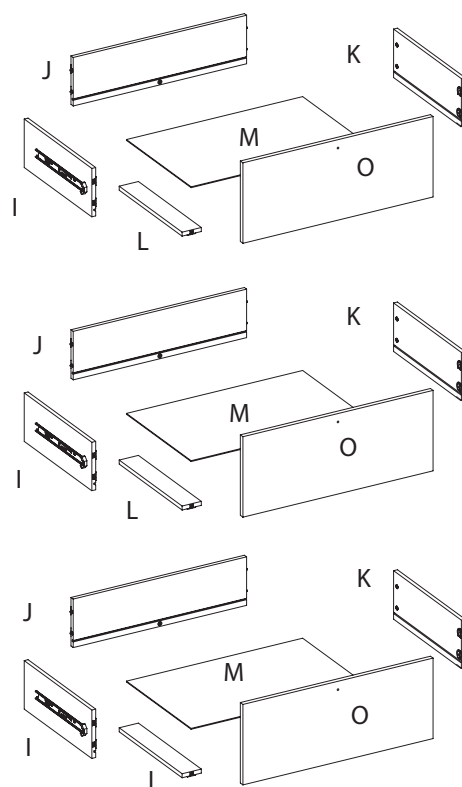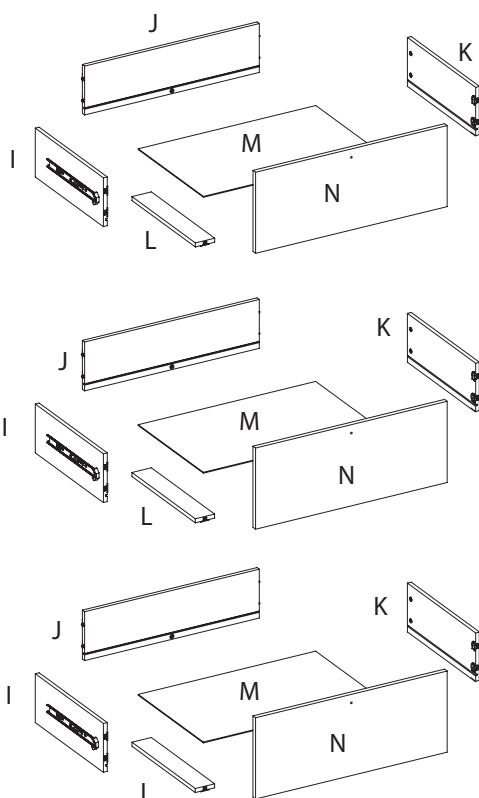
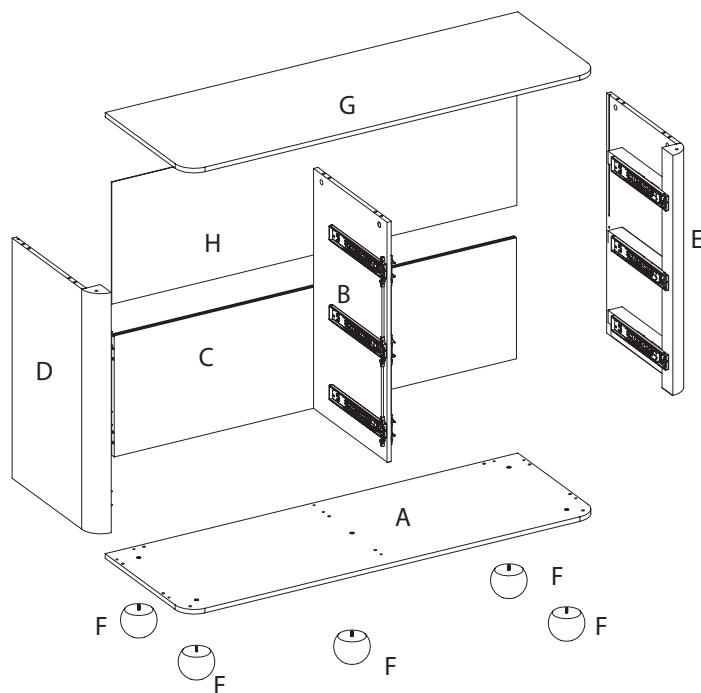


WE Hardware List

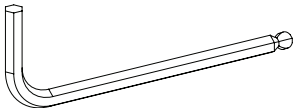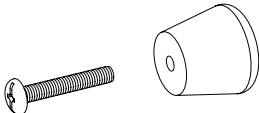	Part	Size	Name	Quantity	Part code
AA		Ø6X50MM	Bolt	11	PC-BLTHZD6L50
BB		Ø8X30MM	Wood Dowels	24	PH-DWLNTL001
CC			Ball End Driver	1	PH-HEXKEYBE4MM
DD			Cam Bolt	10	PH-KDBZNC001
EE			Cam Lock	10	PH-KDCZNC001
FF			Back Panel Bracket	12	PH-BKTBLK017
GG			Handle(with bolt)	6	PH-WELIN026D4-GG
HH			Tipping Restraint Hardware	1	PH-FTRHH510



*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*

WE Installed Replacements Parts

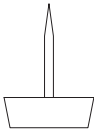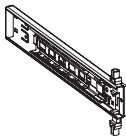Part	Size	Name	Quantity	Part code
II		1/4"-12*10 Threaded Insert	5	PH-THRZNC001
JJ		10" Drawer Slide	12	PC-ESLBLKL285W45
KK		Aluminum Alloy Rod	4	PWELIN026D4-KK


Step 1

Let's get started! First, insert the wood dowels (BB) into the pre-drilled holes in the partition (B). Align the pre-drilled holes in the lower back plane (C) to the wood dowels (BB) in the partition (B). Secure the lower back plane (C) to the partition (B) using the bolts (AA).

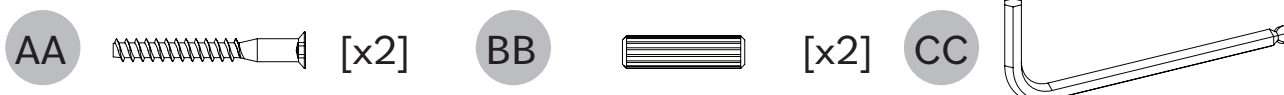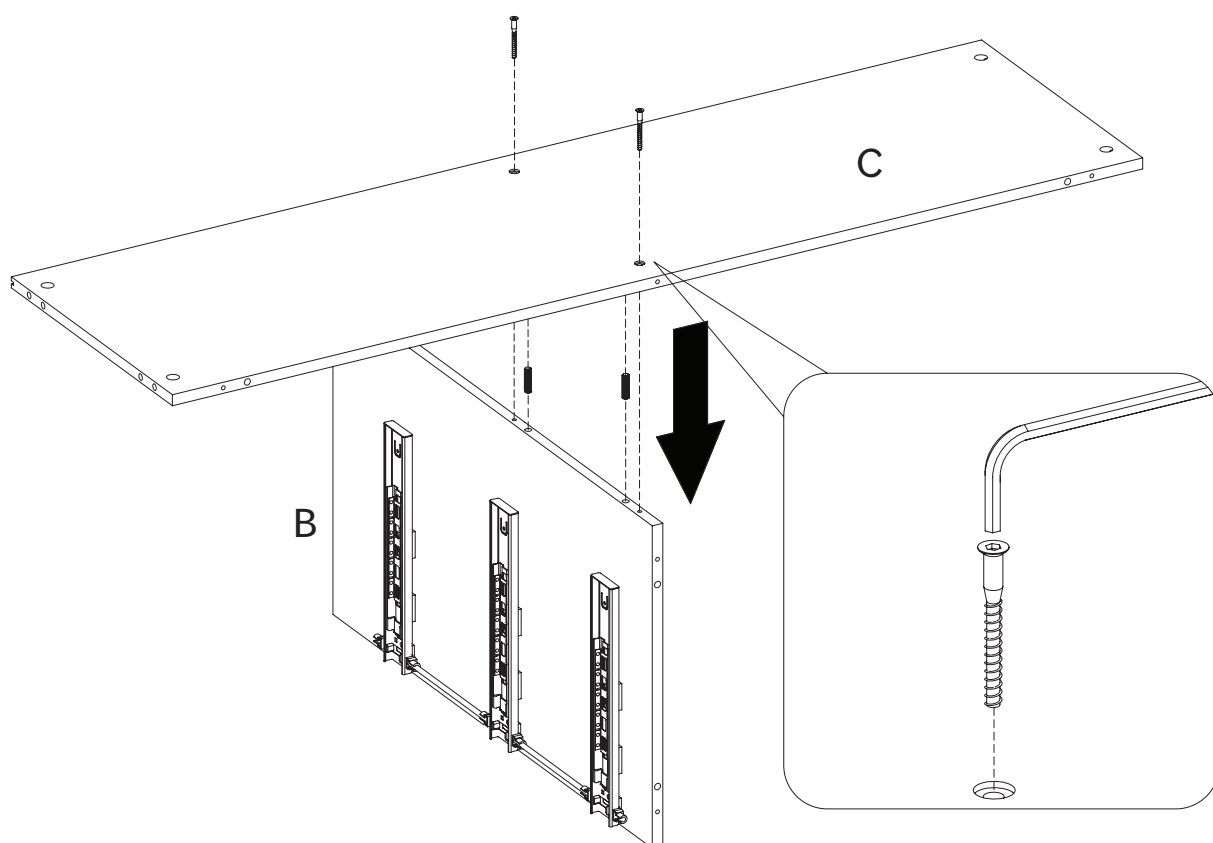

Step 2

Insert the wood dowels (BB) into the pre-drilled holes in the lower back plane (C) as shown in the image below.

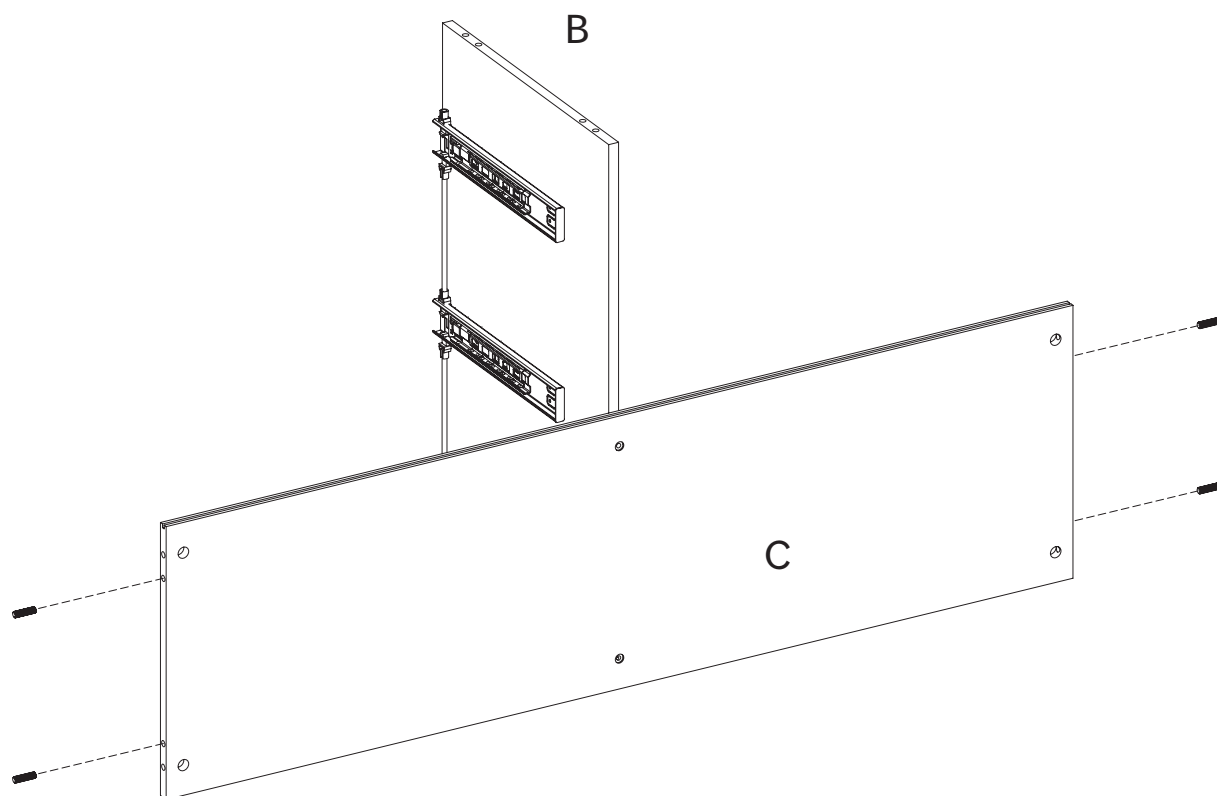


BB



[x4]

Step 3

Insert the cam bolts (DD) to the pre-drilled holes in the left side panel (D) and right side panel (E).

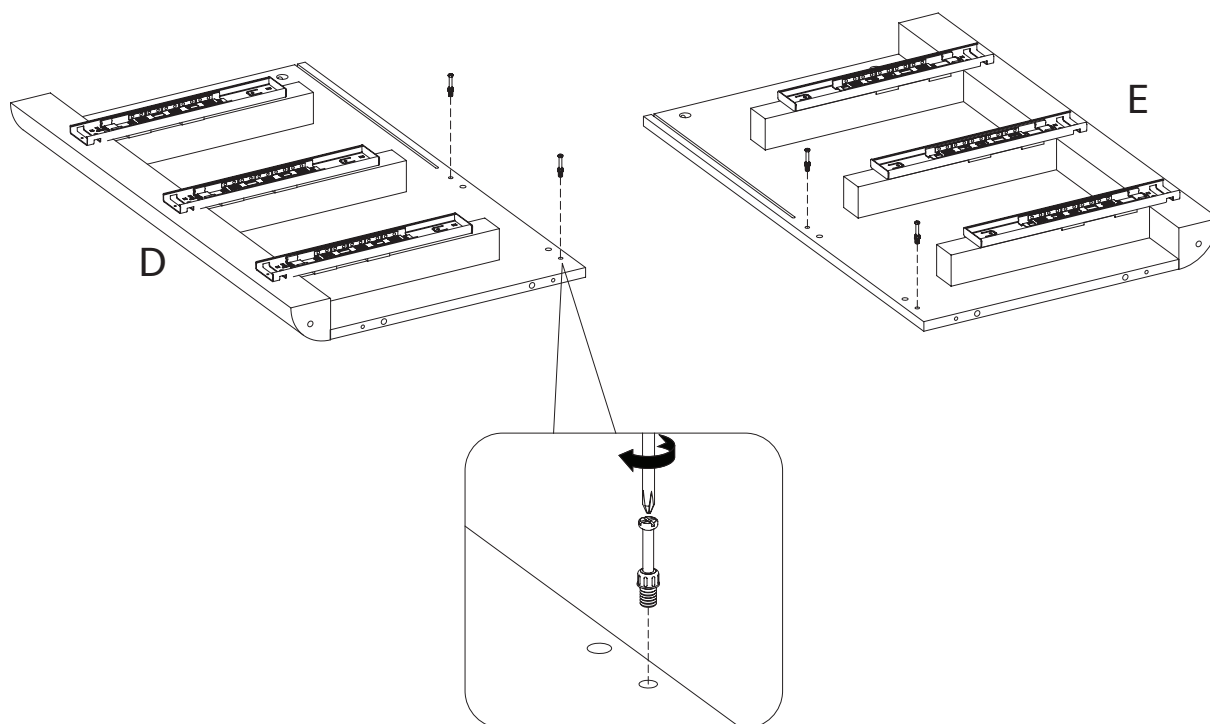



DD



[x4]

Step 4

Align the pre-drilled holes in the lower back plane (C) to the cam bolts in the left side panel (D) and right side panel (E) and attach them together. Insert and tighten the cam locks (EE) as the image below.

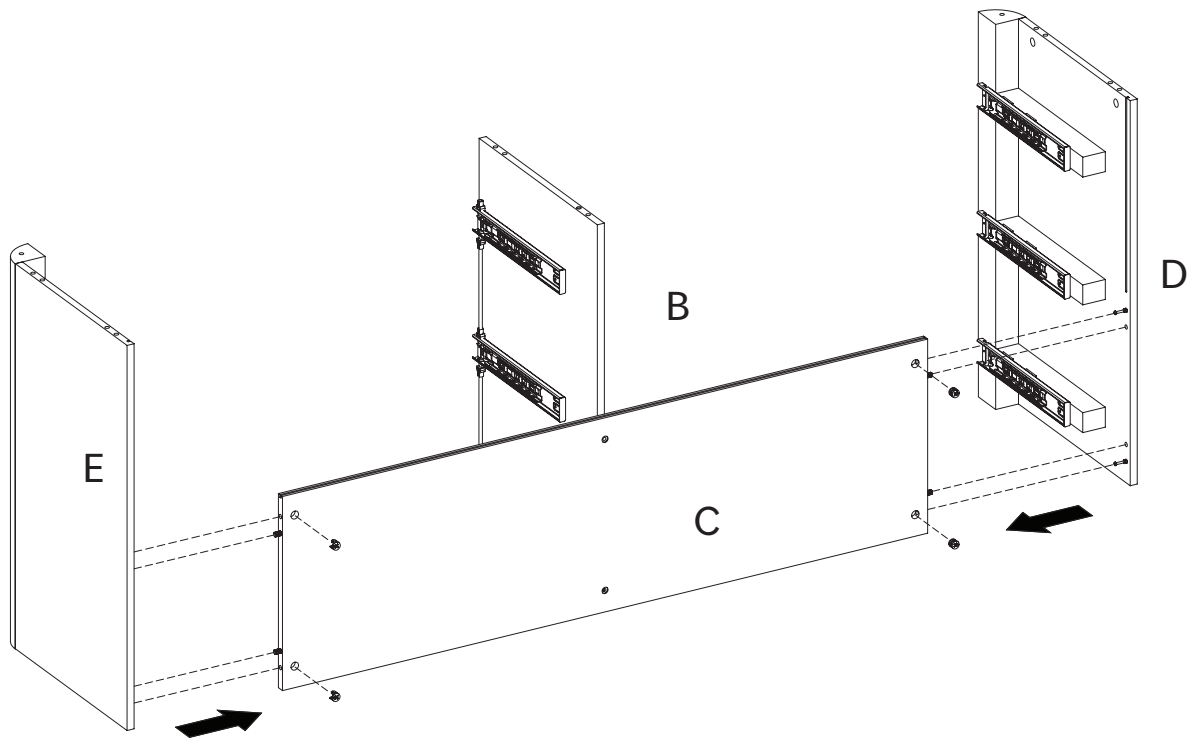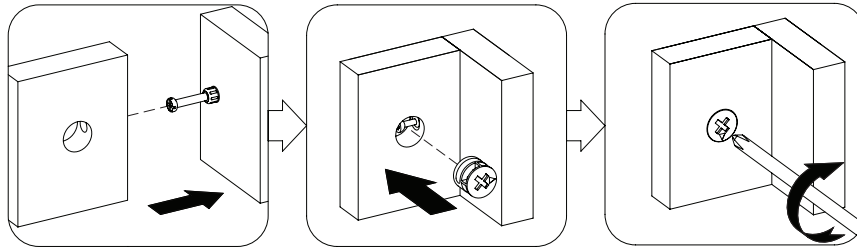


EE



[x4]

Step 5

Insert the wood dowels (BB) into the pre-drilled holes in the left side panel (D), partition (B) and right side panel (E).

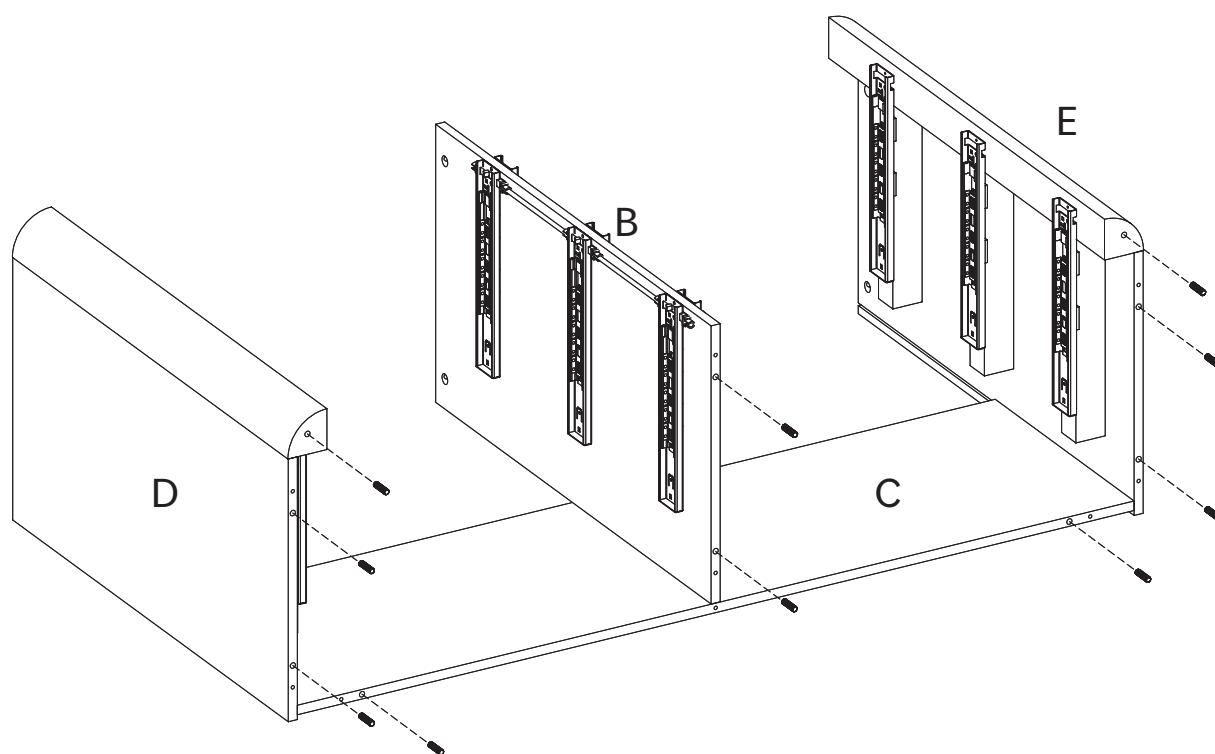


BB




[x10]

Step 6

Align the wood dowels in the left side panel (D), partition (B) and right side panel (E) to the pre-drilled holes in the bottom panel (A) and attach them together, then secure everything into place using the bolts (AA).

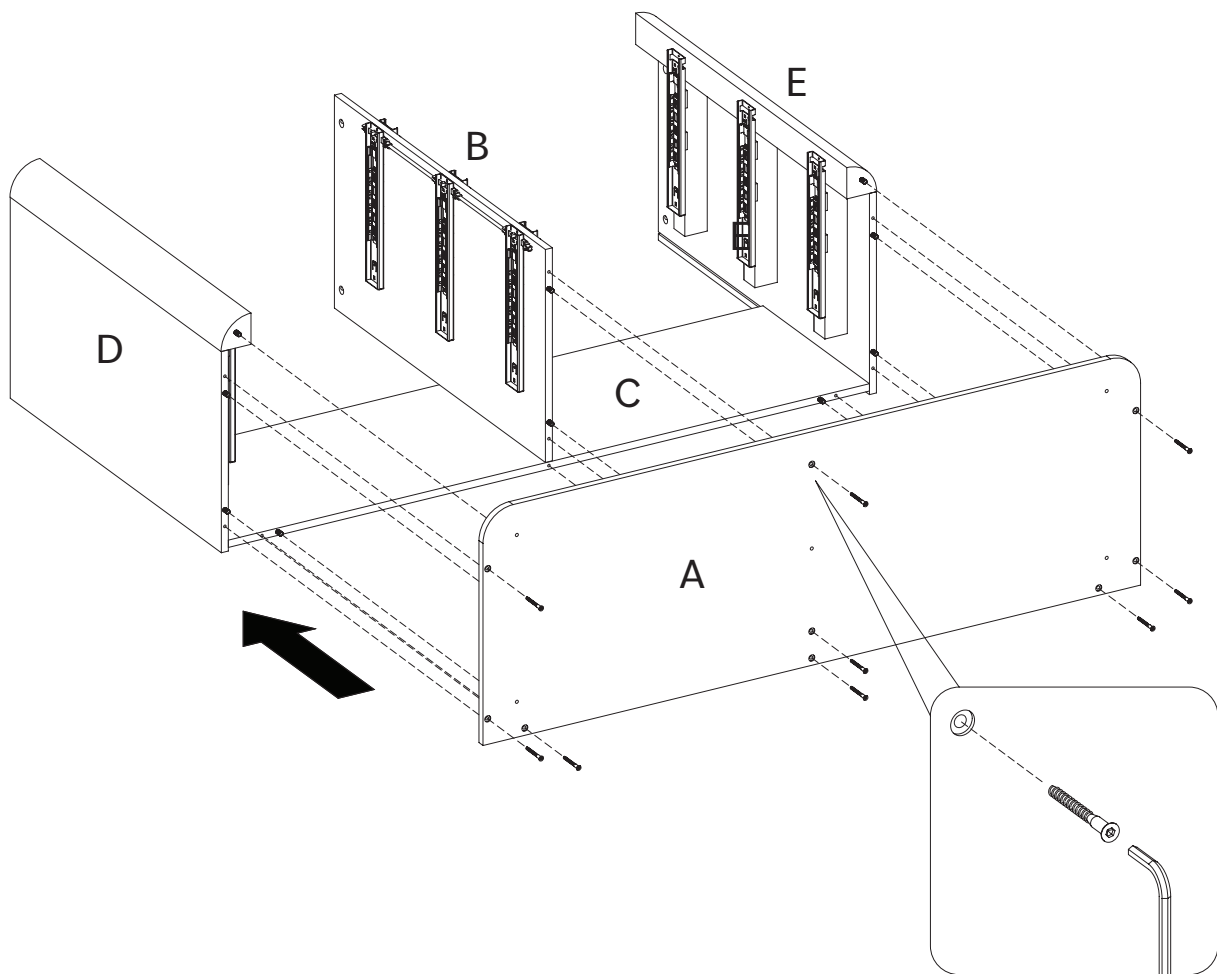


AA




[x9]

CC

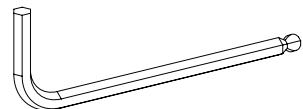


Step 7

Now, let's attach the feet! Insert the feet (F) into the pre-drilled holes in the bottom panel (A) and rotate clockwise until the feet securely fixed to the bottom pane (A).

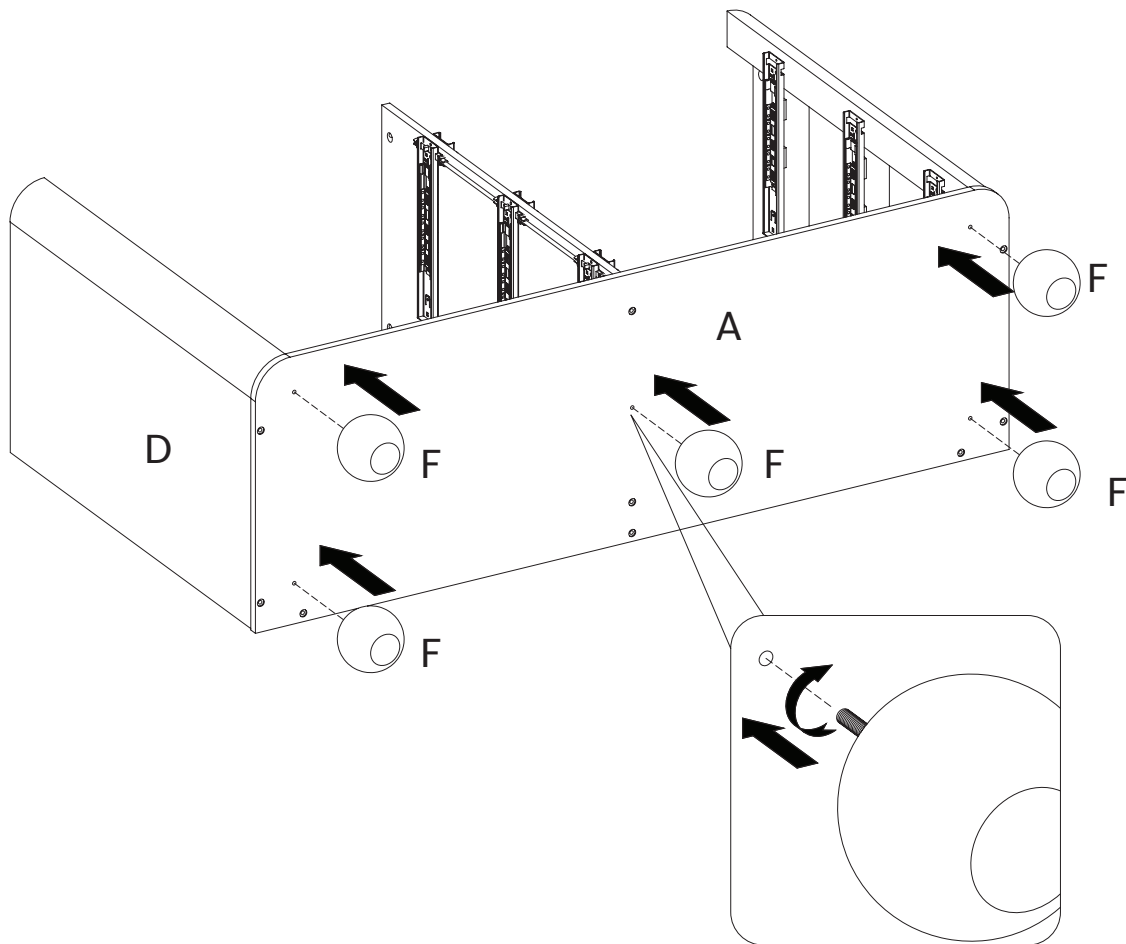


Step 8

Slide the upper back plane (H) into position as shown.

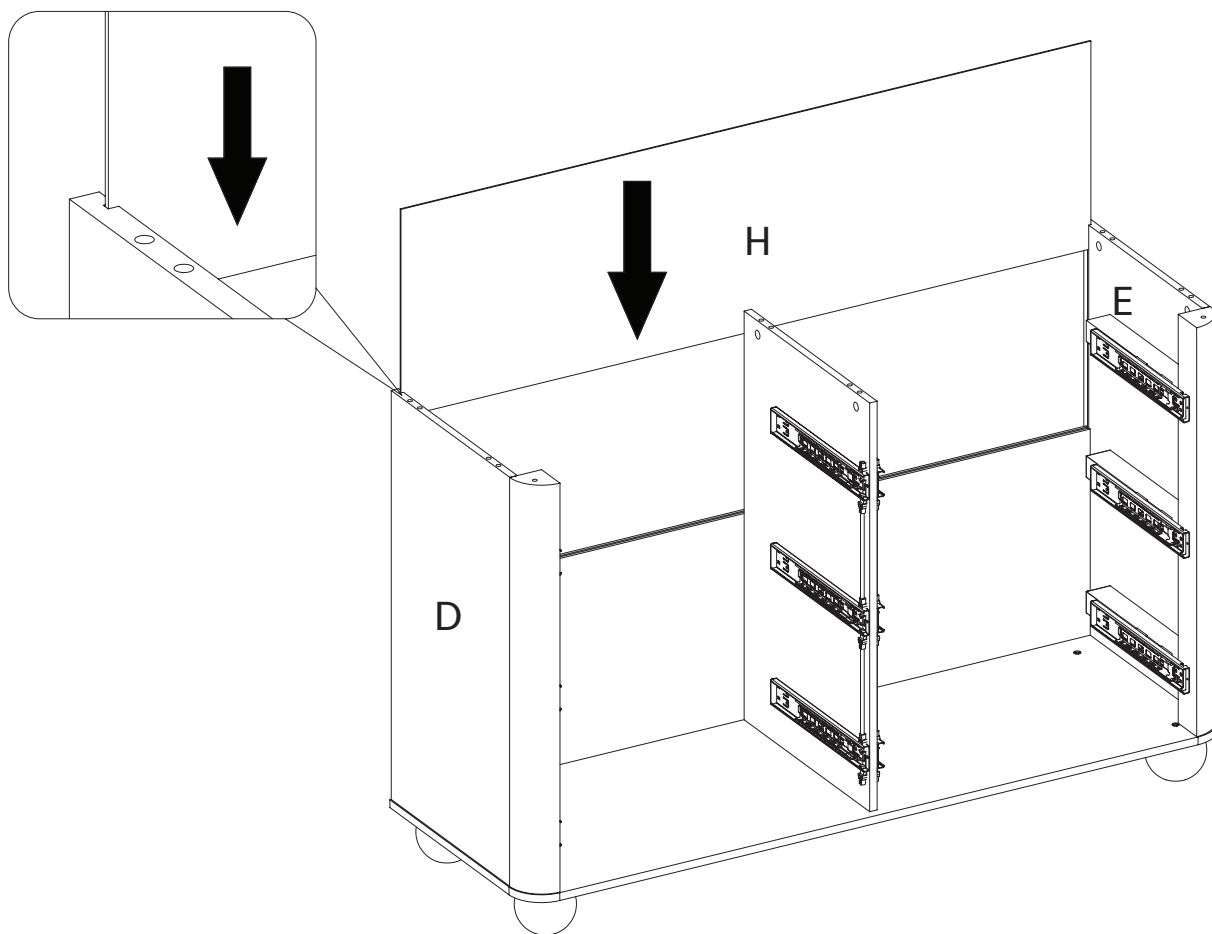

Step 9

Insert the wood dowels (BB) into the pre-drilled holes in the left side panel (D), partition (B) and right side panel (E).

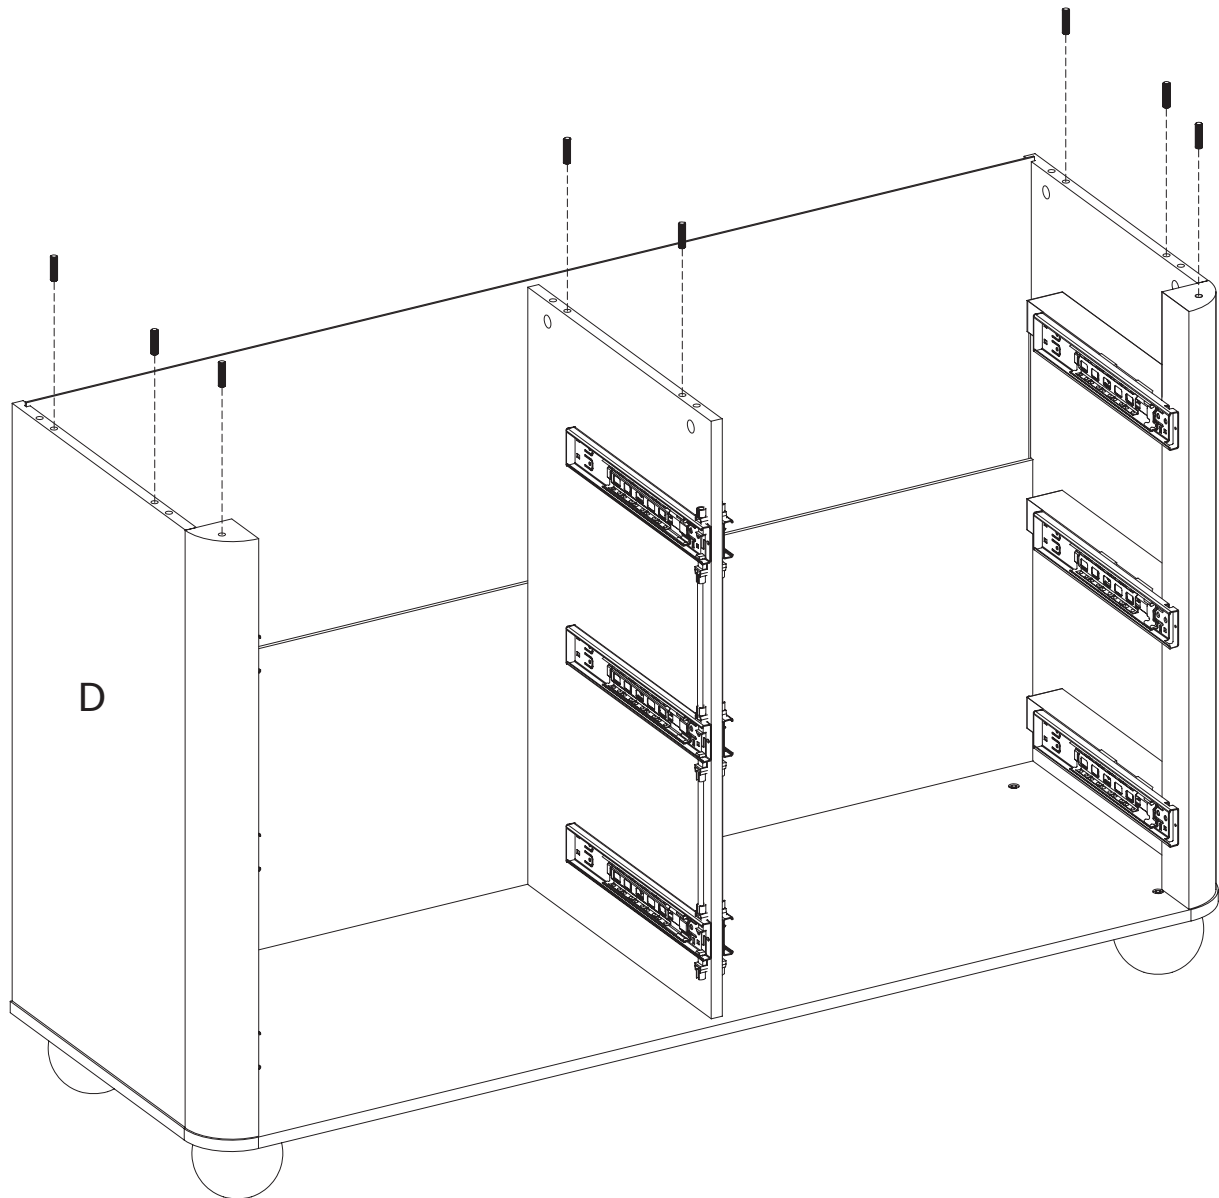


BB




[x8]

Step 10

Screw the cam bolts (DD) into the pre-drilled holes into the top panel(G).

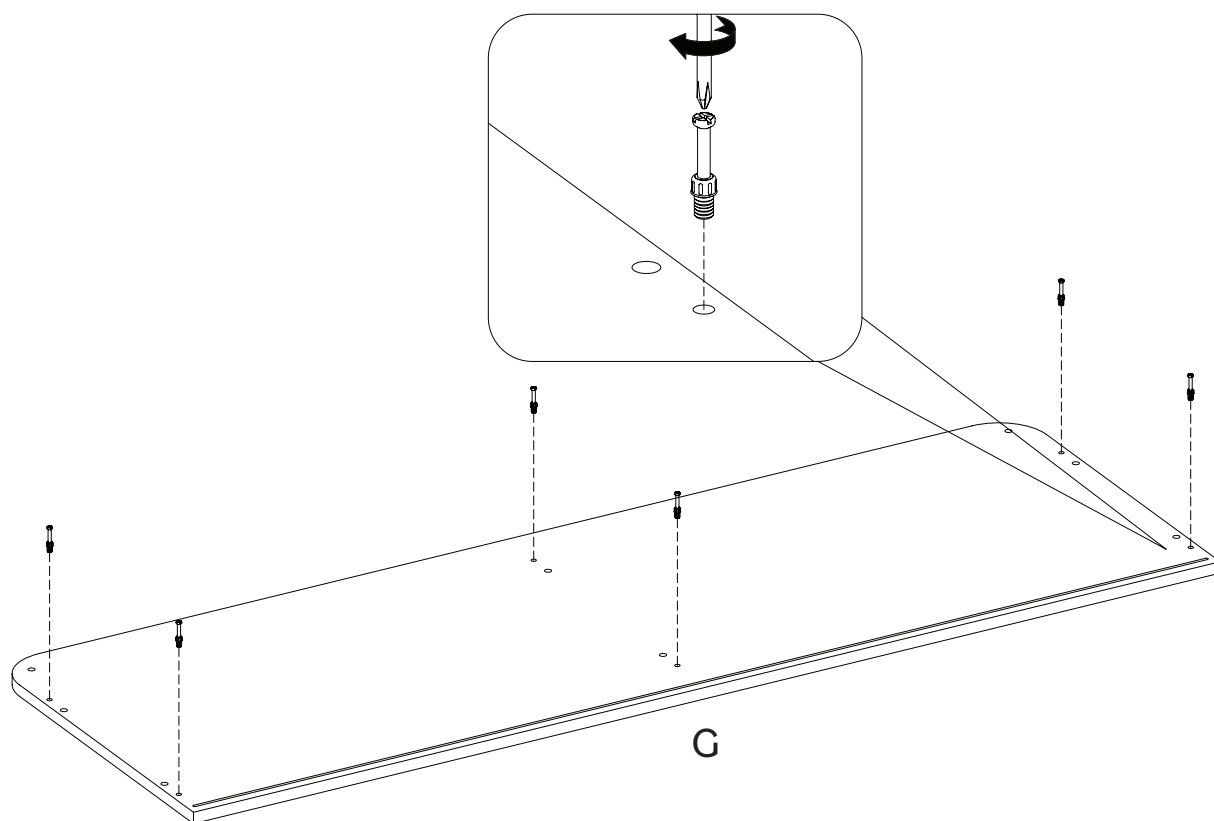



DD



[x6]

Step 11

Flip the top panel (G) over, align the cam bolts to the pre-drilled holes and attach the top panel (G) to the main assembly using the cam locks (EE).

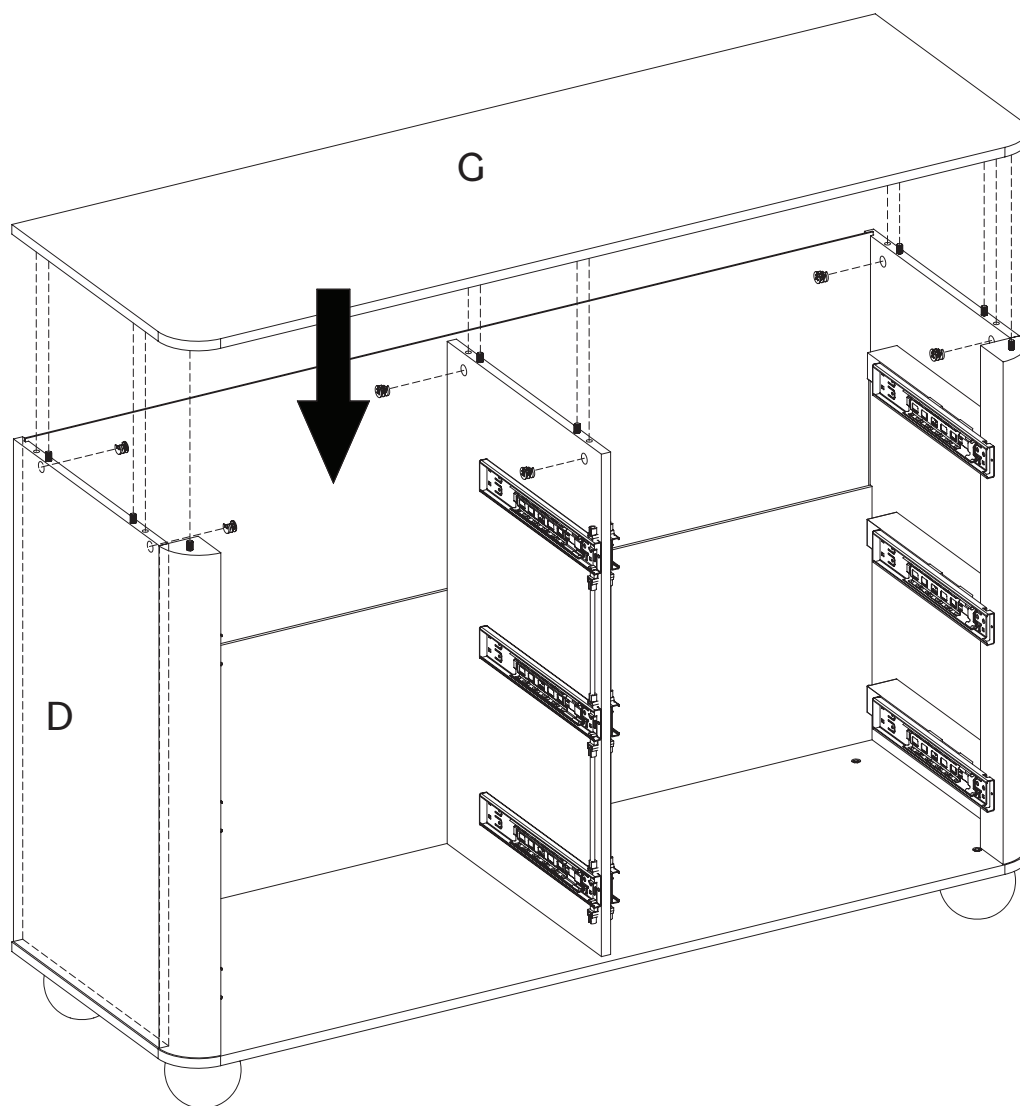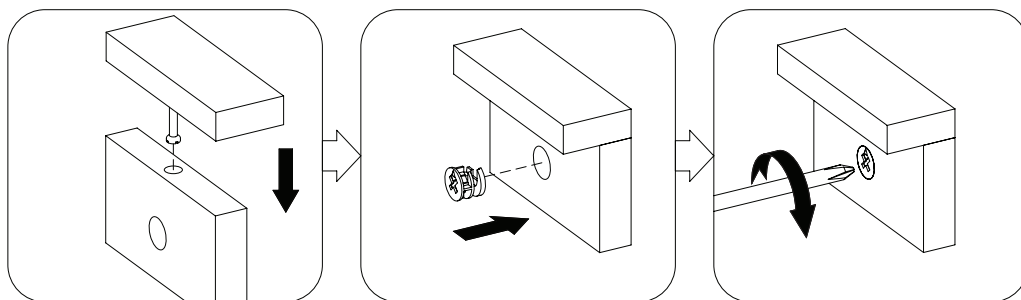


EE



[x6]

Step 12

Place the back panel bracket (FF) between the back panels and the grooves of the assembly as shown. Fasten each back panel bracket (FF) using pre-attached screws.

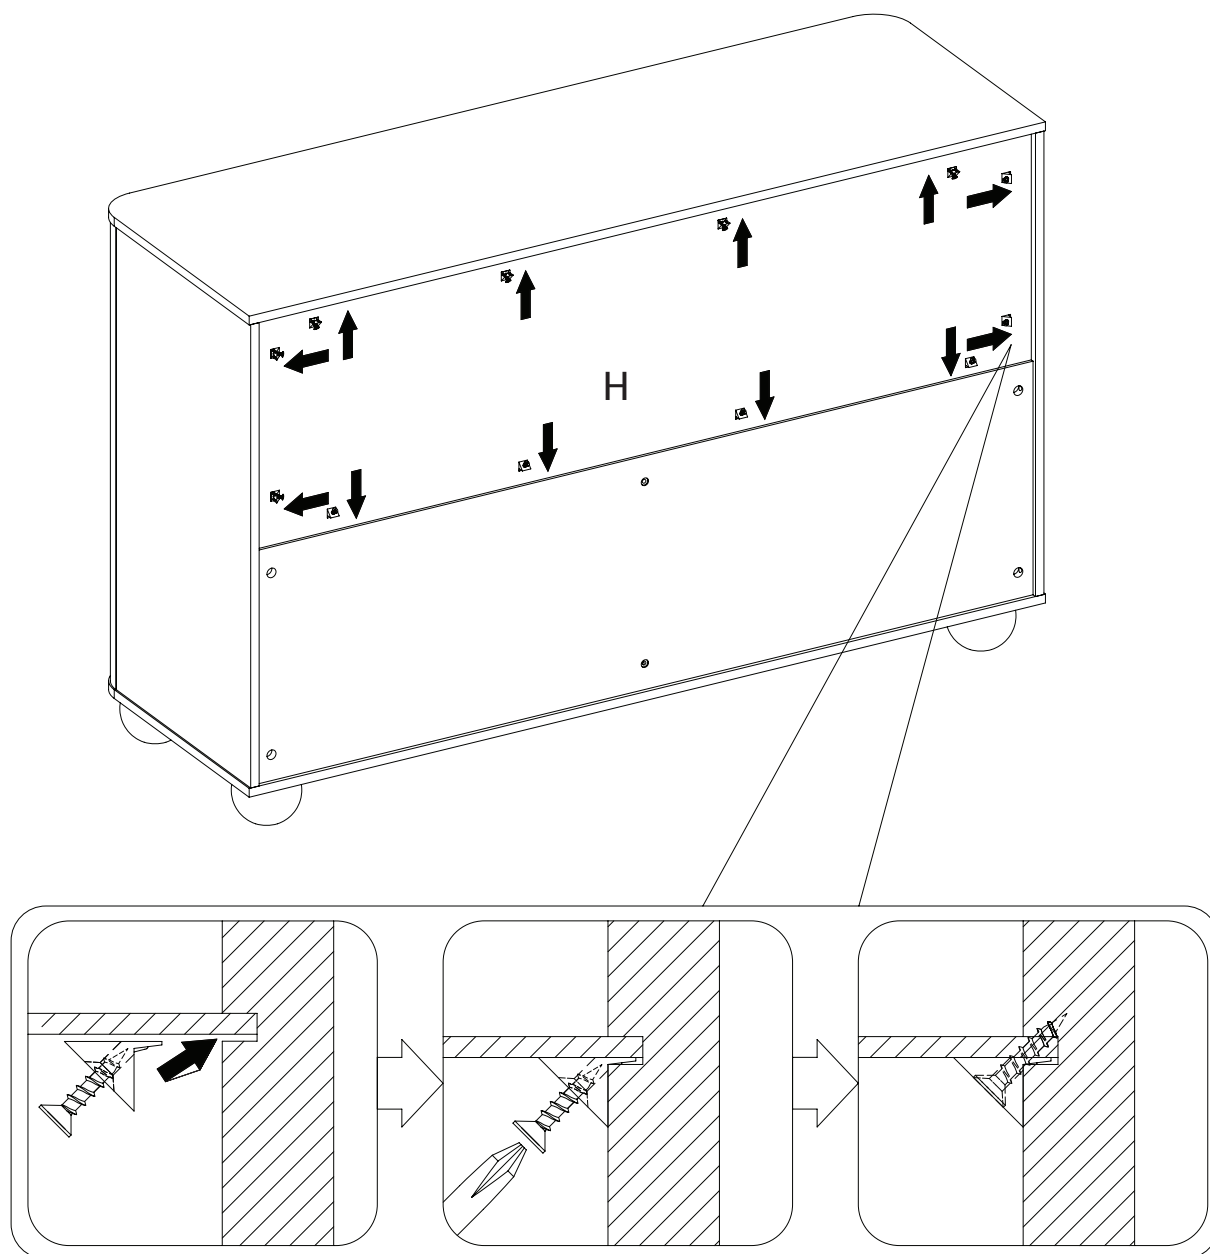



FF



[x12]








Step 13

We're almost done! Now it's time to assemble the drawers. Following the directions of the arrows below, push the tabs up before attaching the drawer left side (I) and drawer right side (K) to the drawer back (J). Once the panels are in place, push the tabs back down.

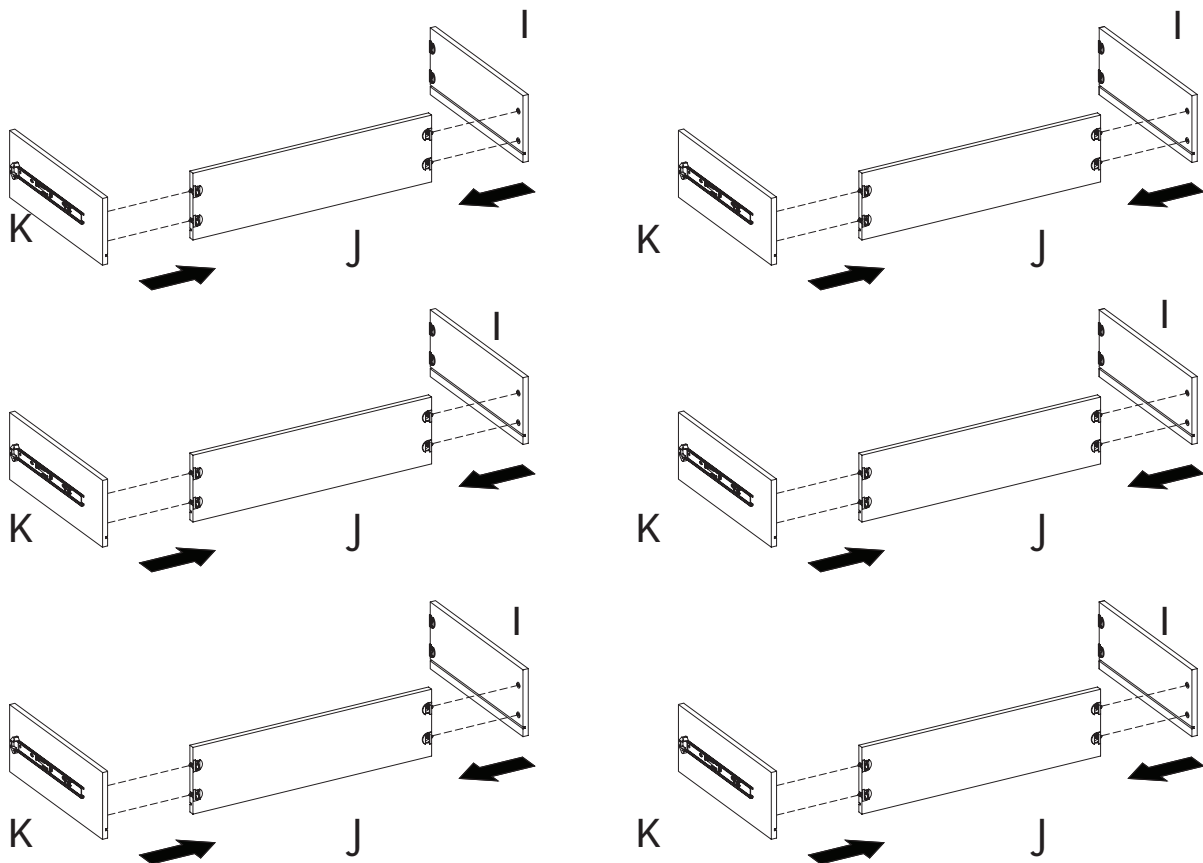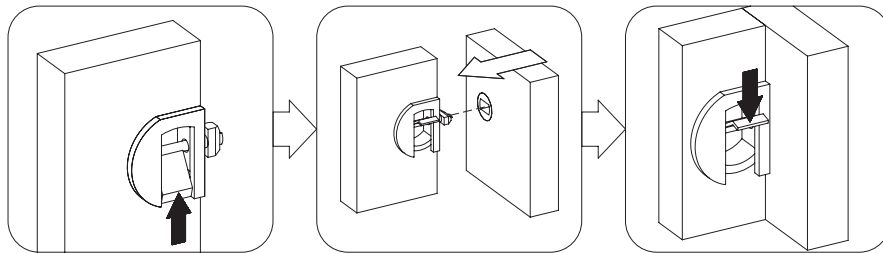


Step 14

Using the same installation method as the previous step, install the drawer bottom rail (L) onto the drawer back (J). Following the directions of the arrow as shown in the figure below.

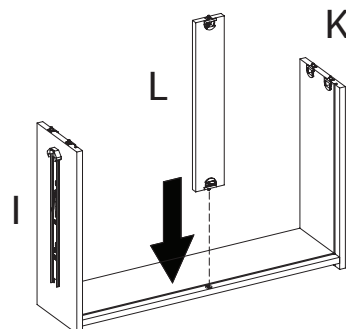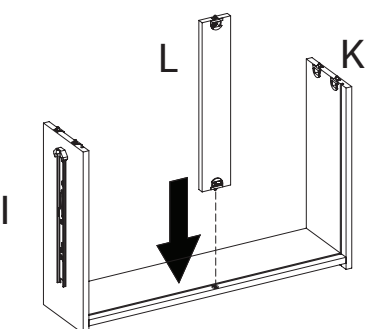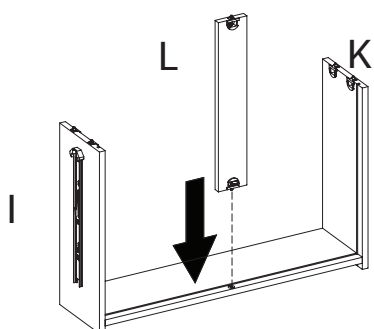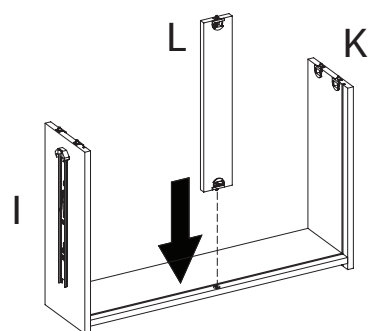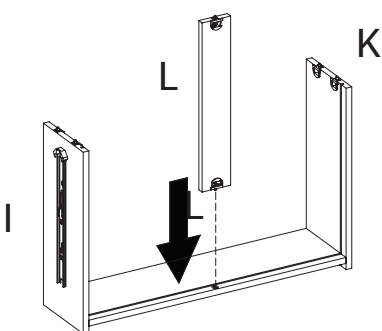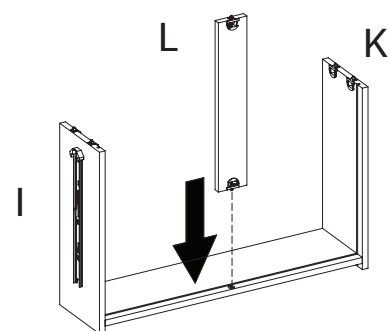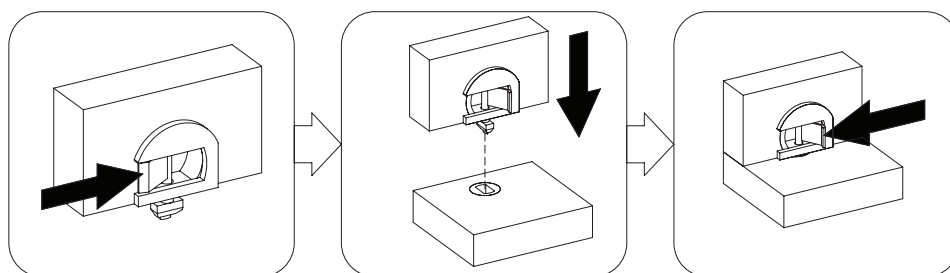








Step 15

Slide the drawer bottom (M) down into place.

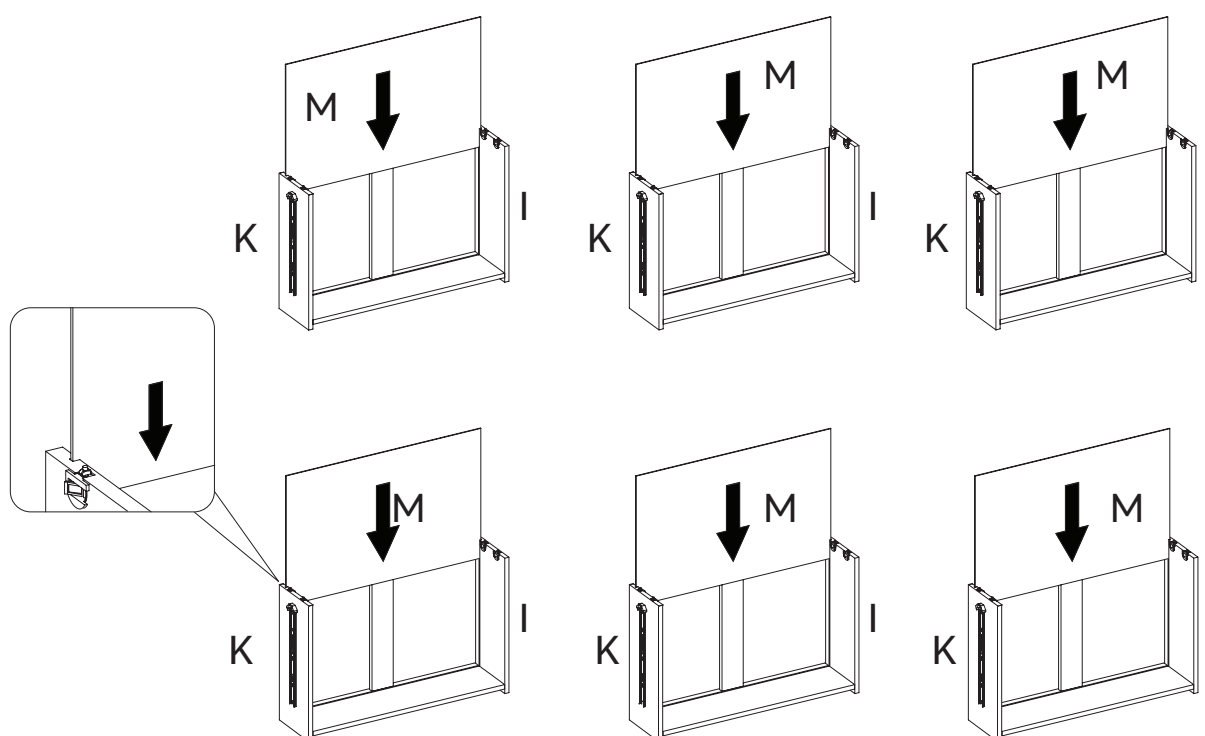









Step 16

Again, following the directions of the arrows below, push the tabs up before attaching the left drawer face panel (N) and right drawer face panel (O) to the drawers. Then push the tabs forward to secure them in place.

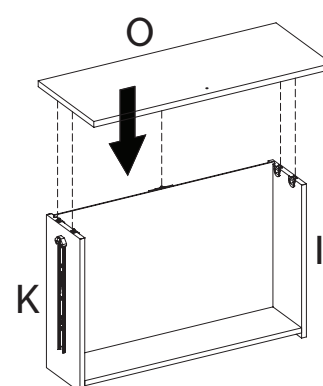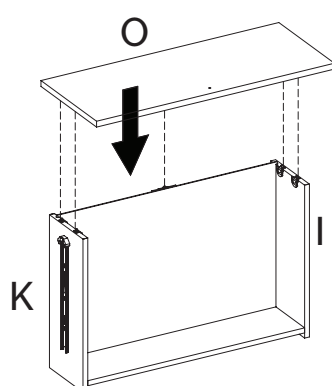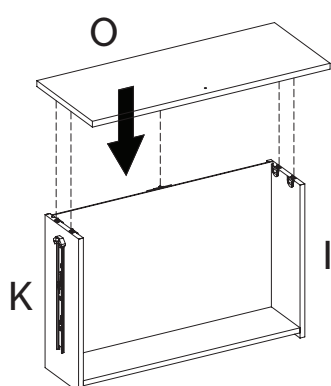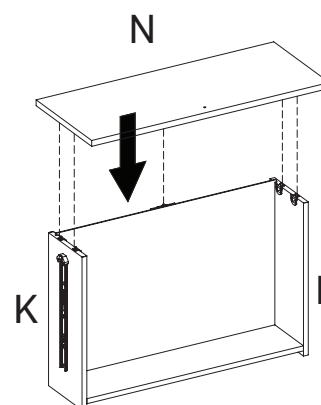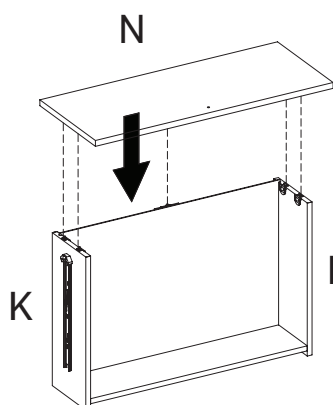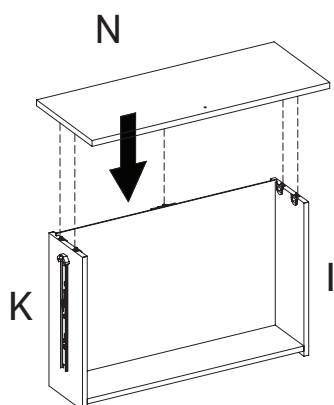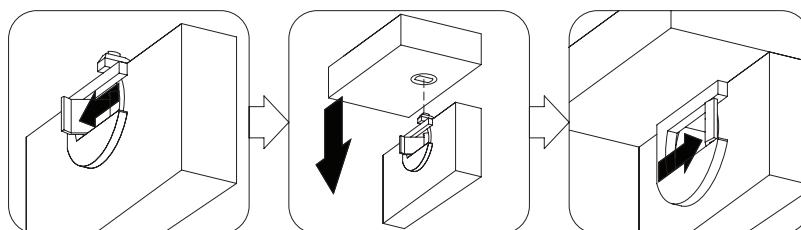



Step 17

Let's attach the handles. Align the handle (GG) to the pre-drilled holes on the outside of the drawer and insert the screw on the other side to secure it in place. Please repeat this process with the other drawers.

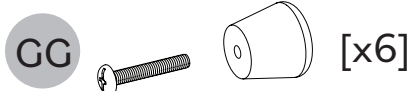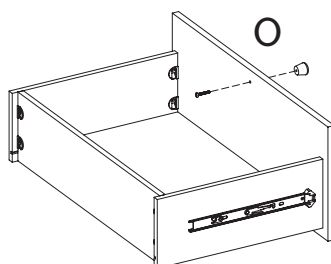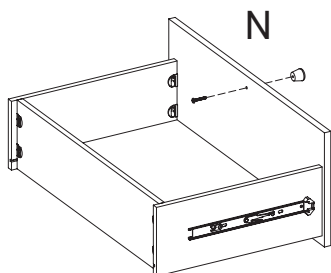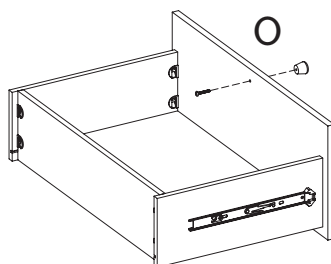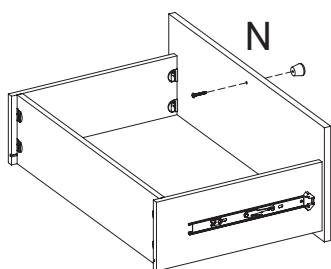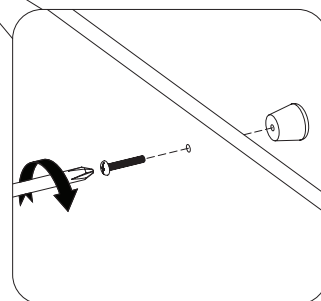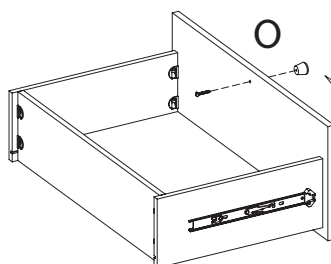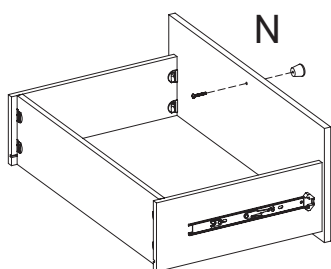


Step 18

Now, align the slider brackets to the slider arms and glide the drawers closed.

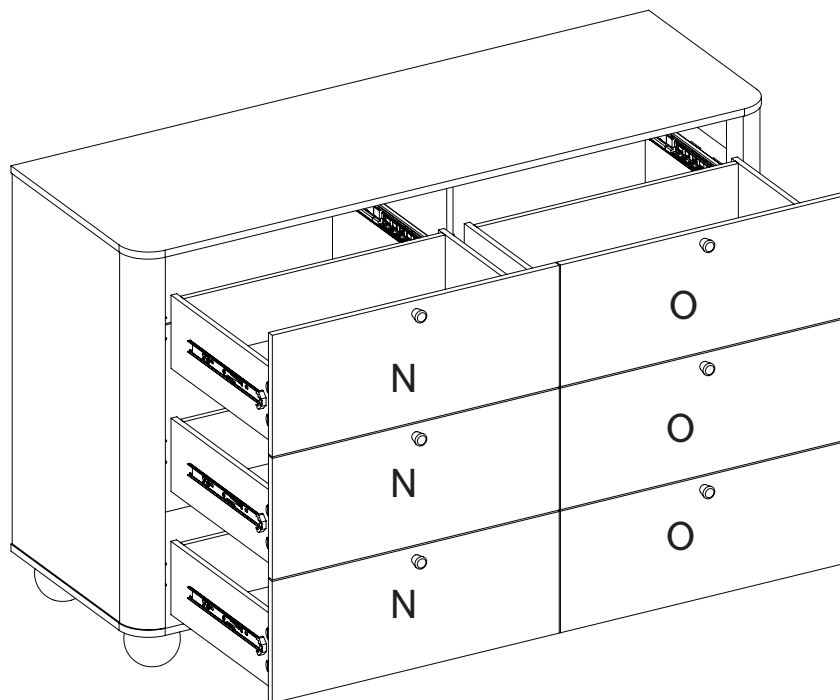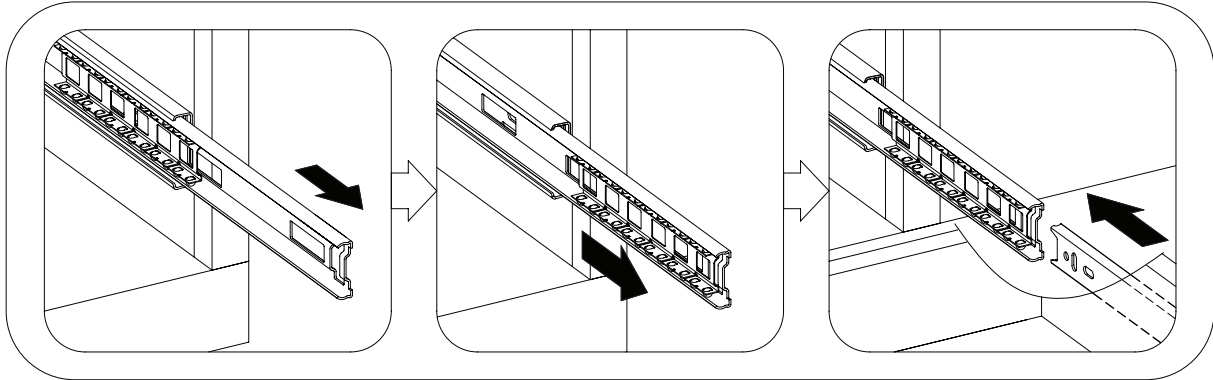

Step 19

Attach the tip-restraint hardware (HH) to the back before securing it to the wall, as shown below.

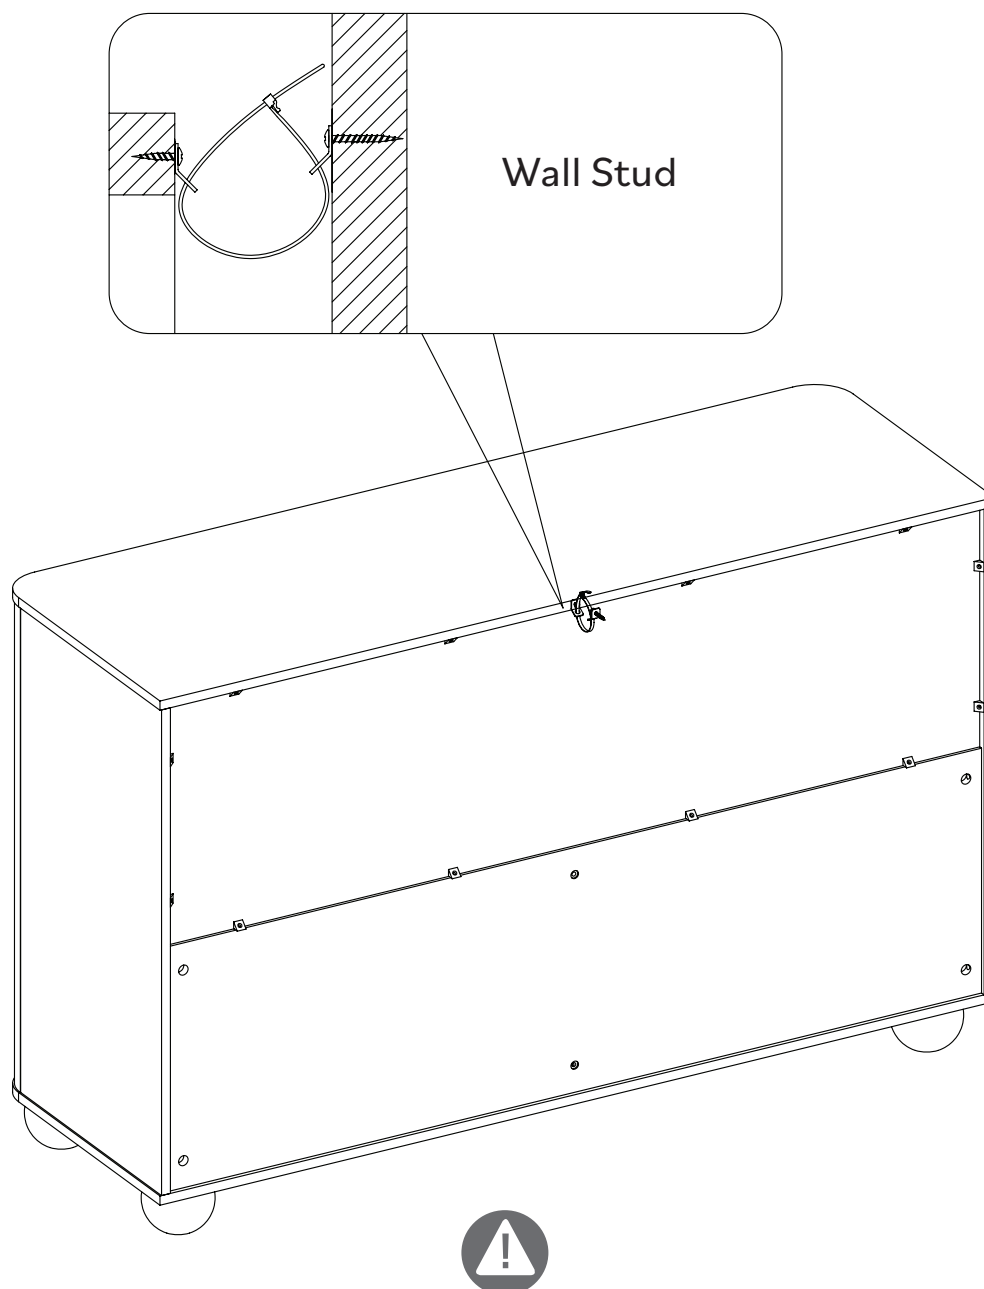


Warning: You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.

HH



[x1]

Final Assembly

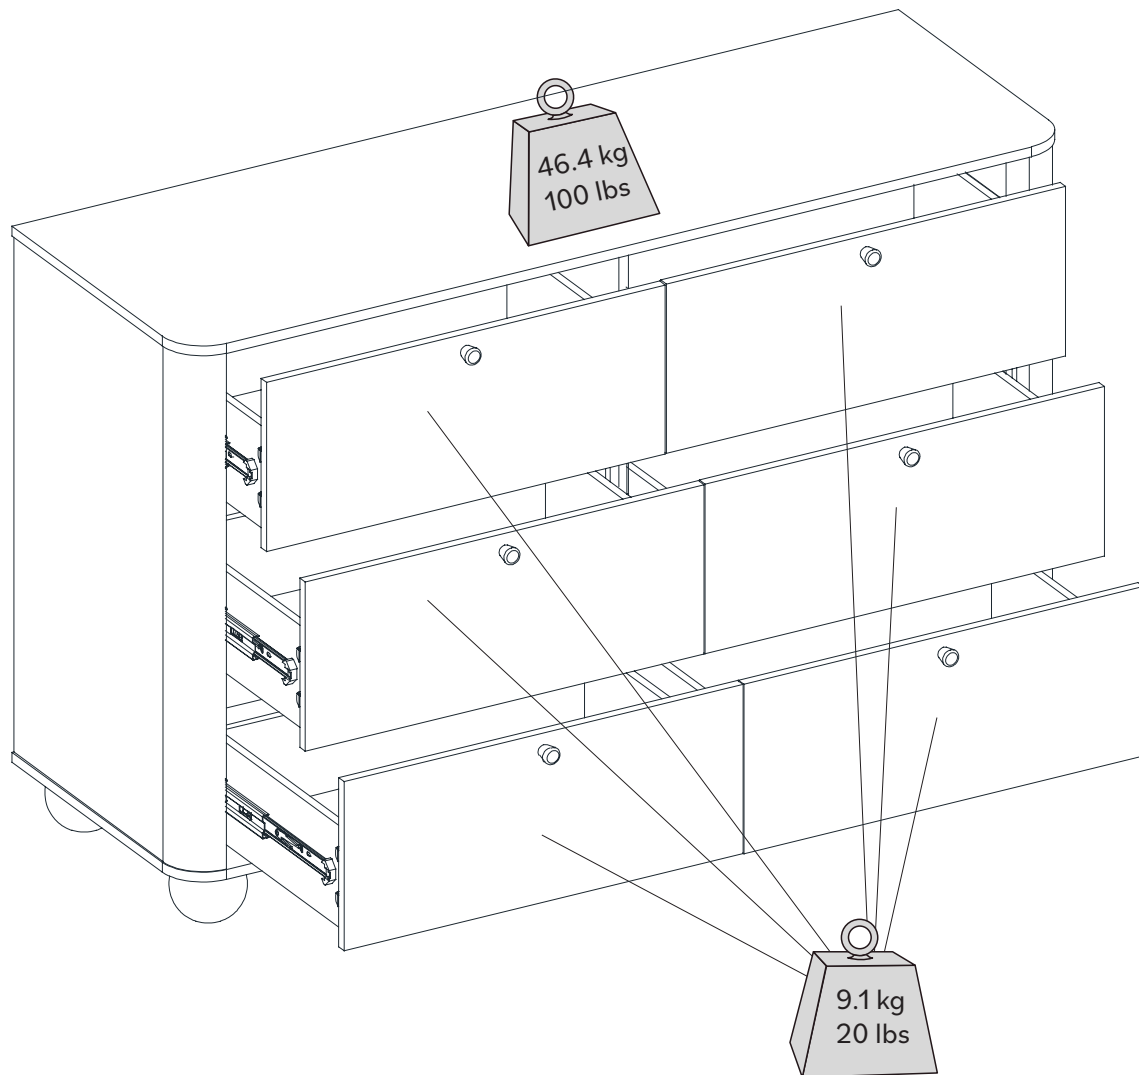

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at service@walkeredison.com

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

