













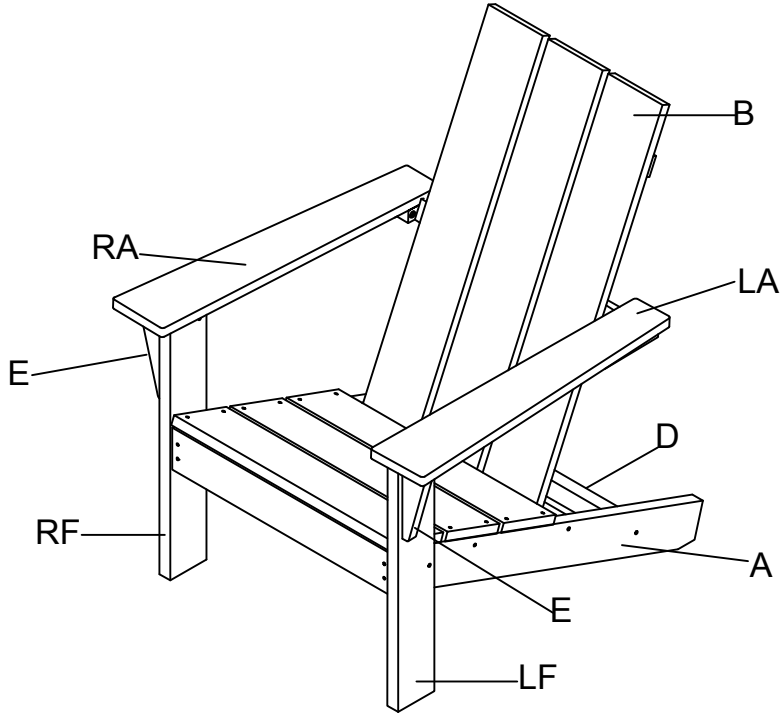


# ASSEMBLY INSTRUCTIONS MODEL: PE2301


## STRUCTURE DIAGRAM:




## CHAIR PARTS INCLUDED:

	(A)Seat x 1 unit		(G) 2" Screw x 6 units
	(B)Backrest x 1 unit		(H) 2.36"Bolt with Washer & Nut x 6 sets
	(LA)Left Armrest x 1 unit		(I) 2.76" Bolt with Washer & Nut x 2 sets
	(RA)Right Armrest x 1 unit		(J) 3.15" Screw x 2 units
	(LF)Left Foot x 1 unit		(K) T-Wrench x 1 unit
	(RF)Right Foot x 1 unit		(L) Nut Wrench x 1 unit
	(D)Rear Brace x 2 units		
	(E)Arm Support x2 units		


STEP 1:

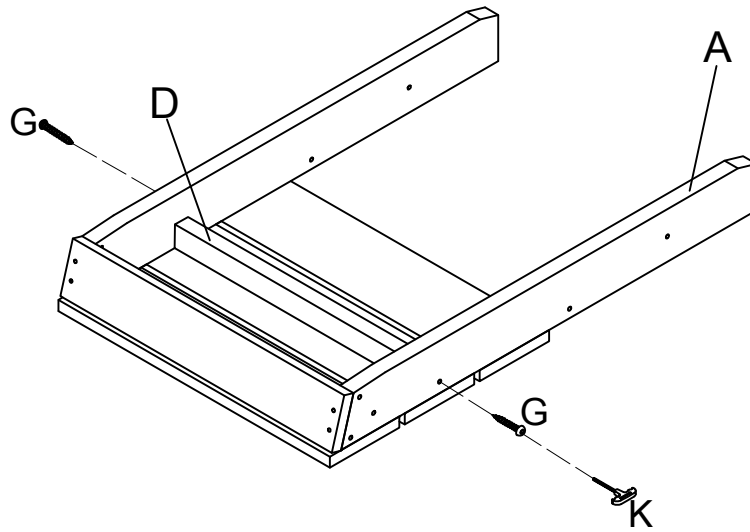


STEP 2:

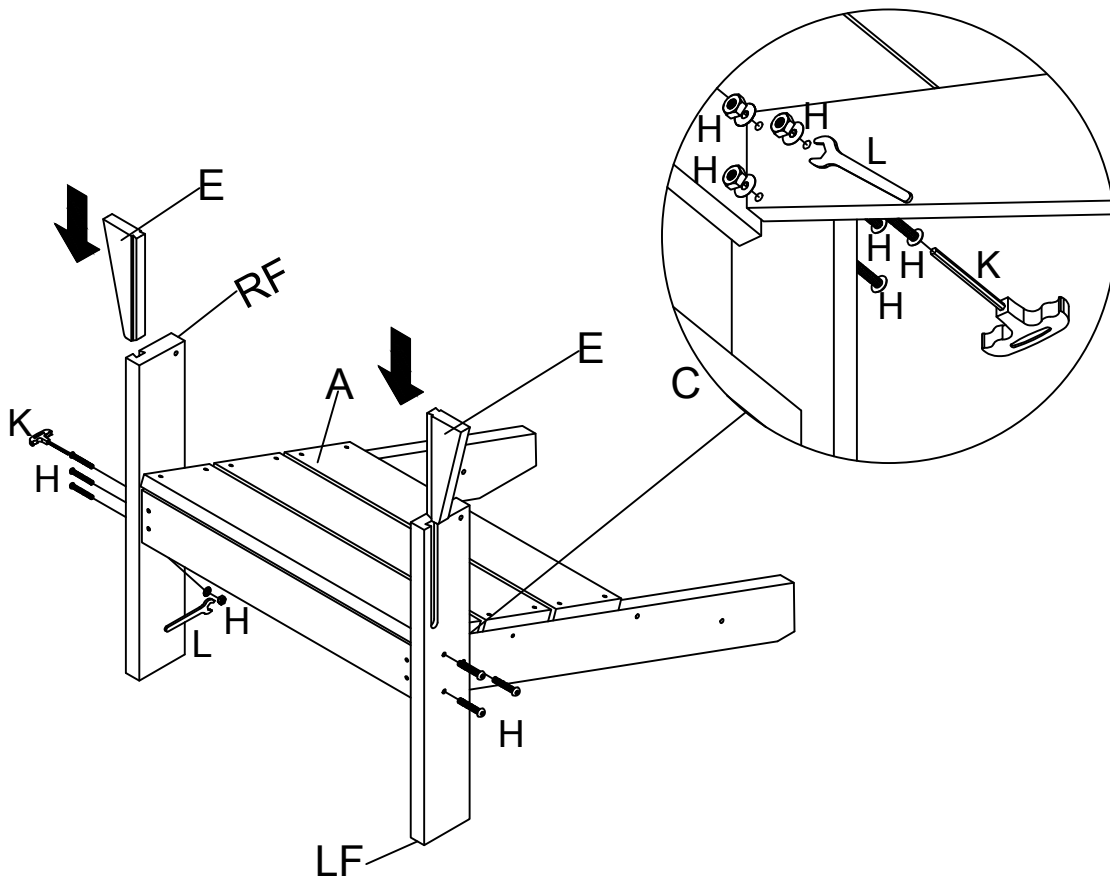


STEP 3:

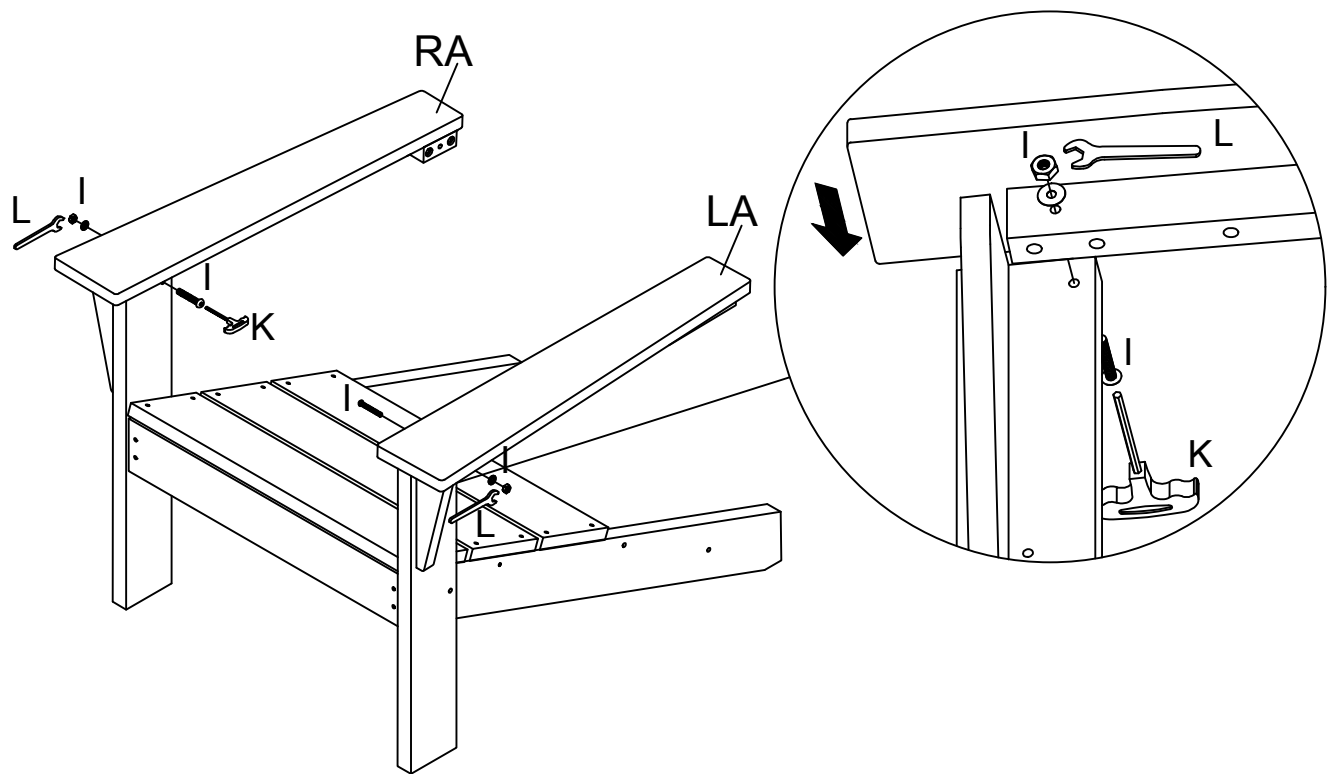

STEP 4:

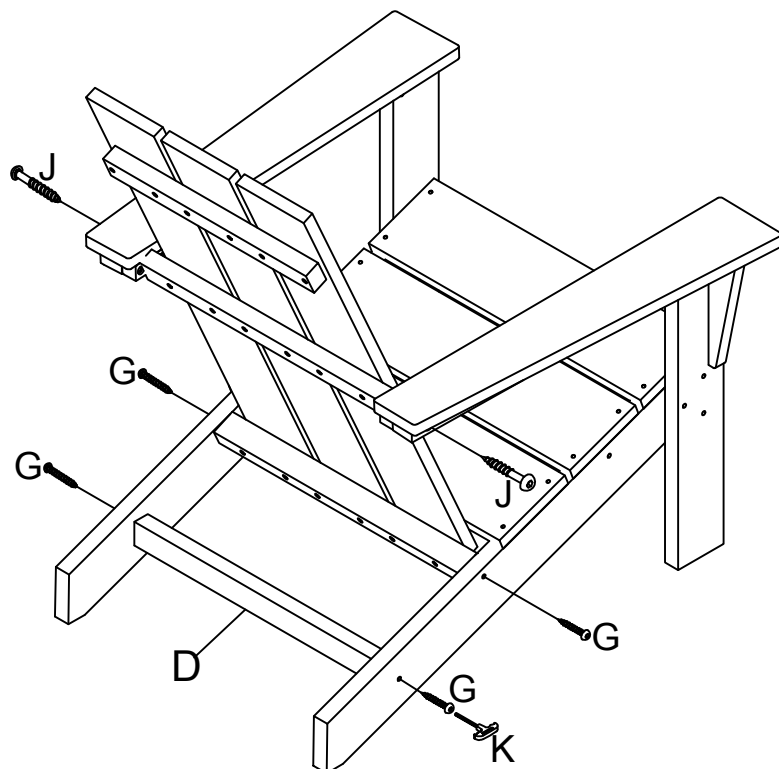

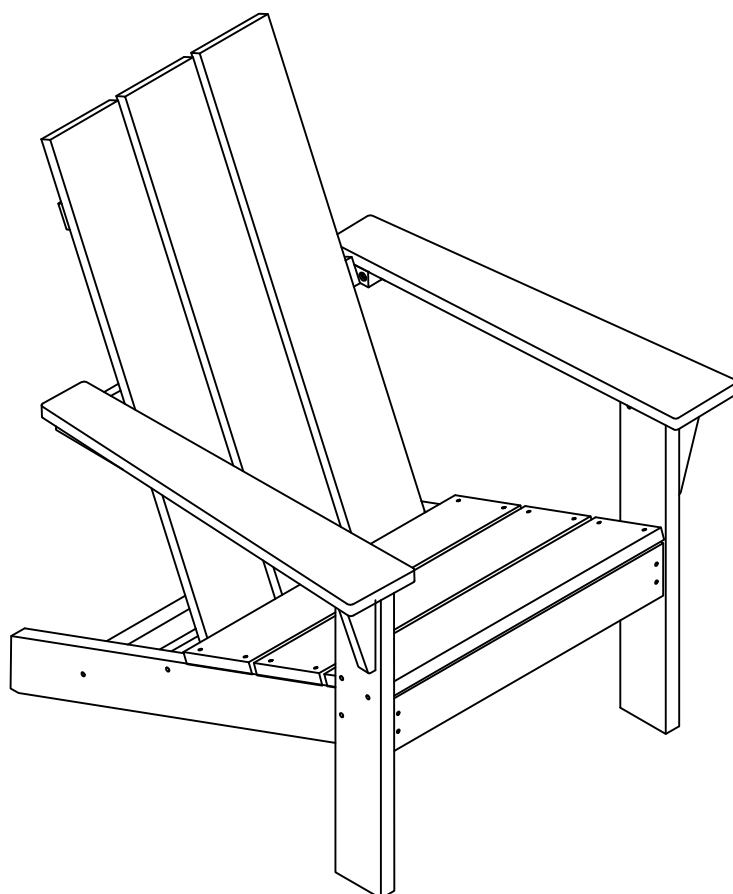


**Customer Service:** [www.facebook.com/ATRartoreal](https://www.facebook.com/ATRartoreal)






**Assembly Video:** [https://youtu.be/fFAkc\\_koqec](https://youtu.be/fFAkc_koqec)

**E-mail:** [service@artoreal.com](mailto:service@artoreal.com)

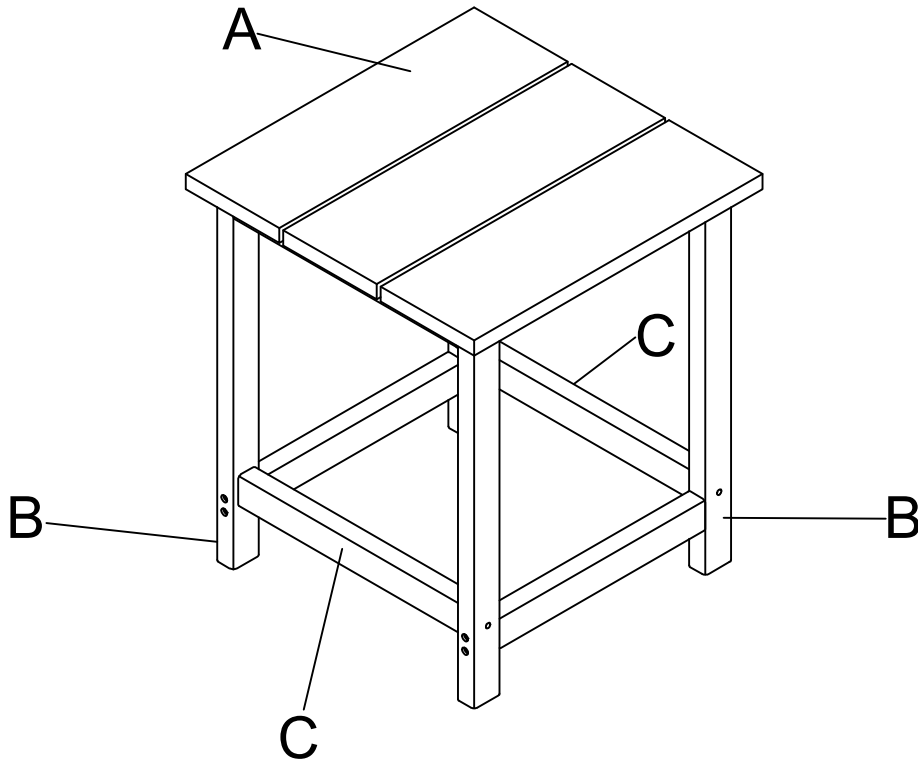
**STRUCTURE DIAGRAM:**



**TABLE PARTS INCLUDED:**

	(A) Table Top x 1 unit	 (E) 2"Bolt x 8 units
	(B) Side Frame x 2 units	 (F) T-Wrench x 1 unit
	(C) Brace x 2 units	

STEP 1:

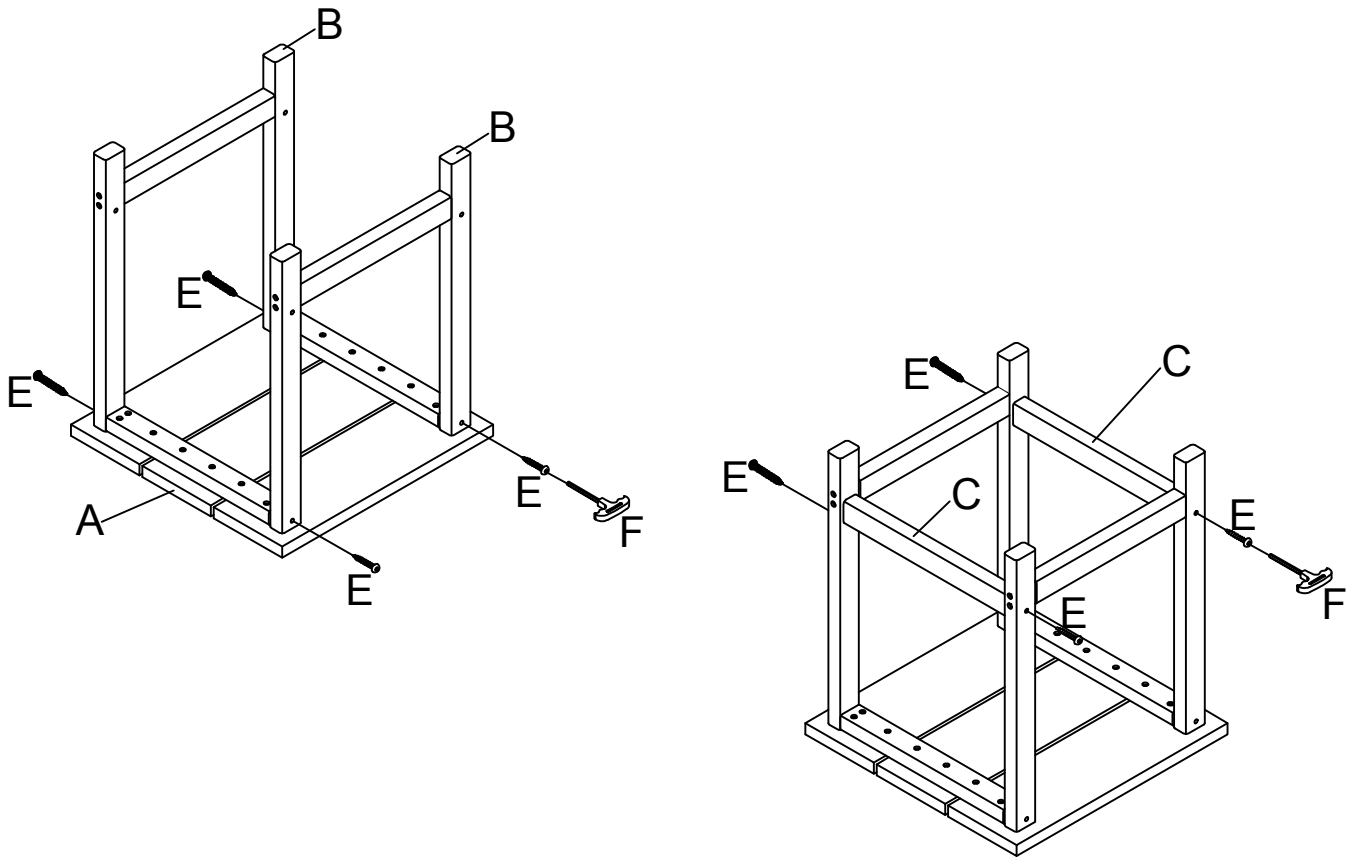

STEP 2:

