Assembly Instruction

Assembly Instructions -Please keep for future reference



Dimensions

Width-30inch

Depth-15.7inch

Height-71.1inch

WARNING

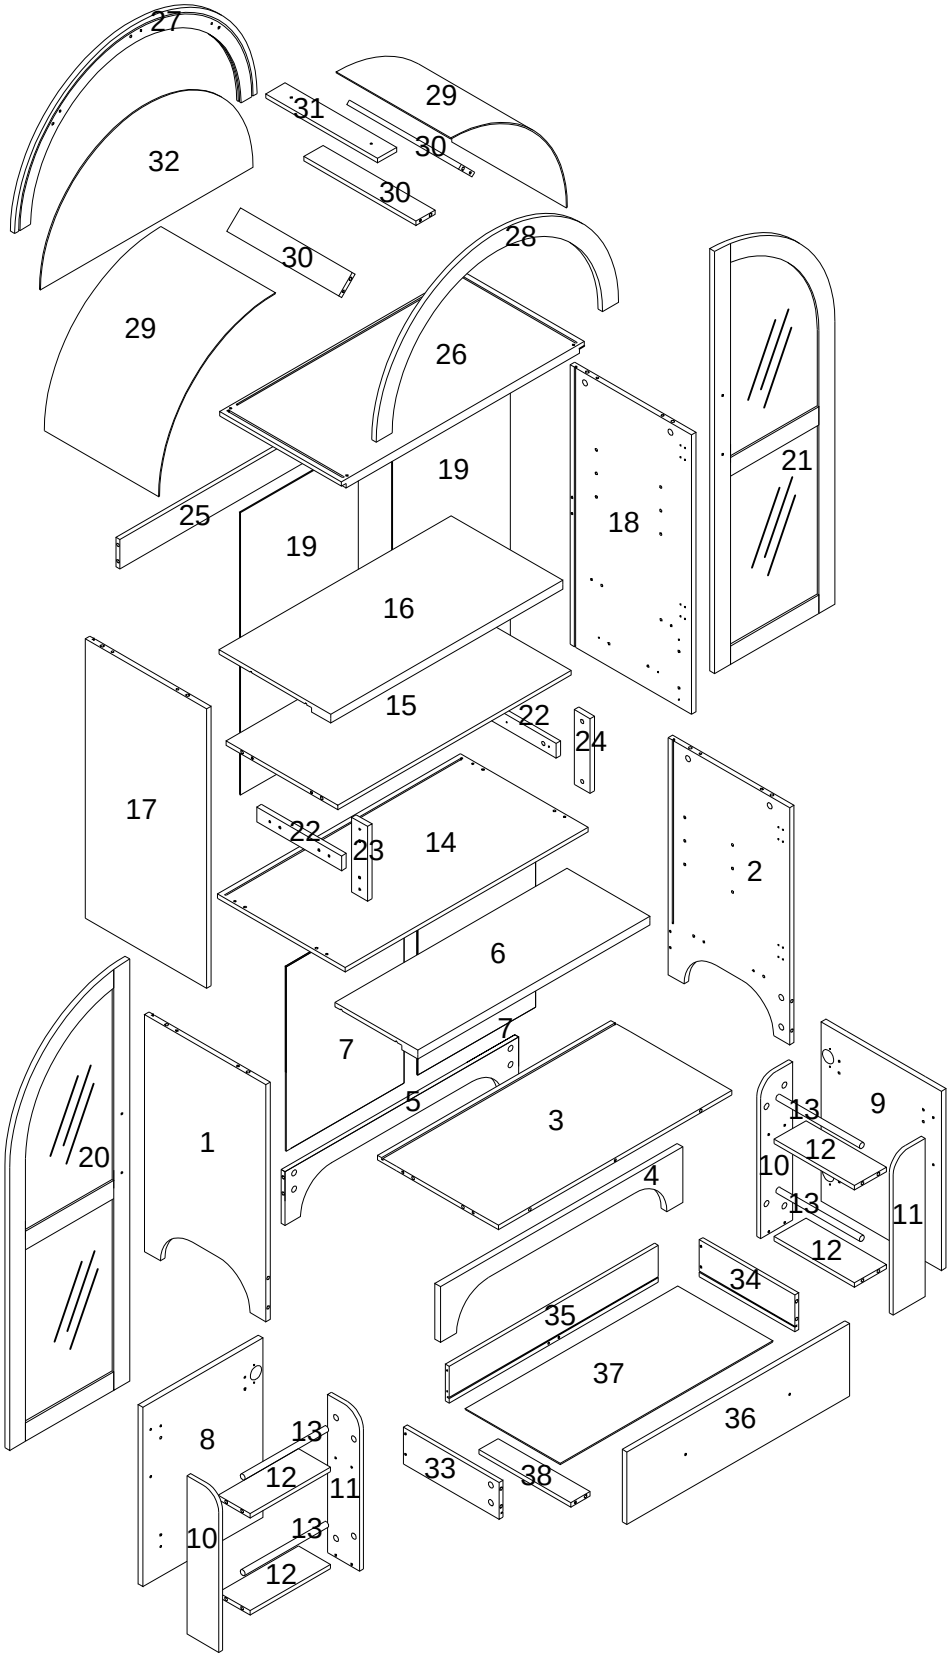


This product is NOT a Clothing Storage Unit (CSU).

DO NOT use it for clothing storage.

Improper use may cause furniture tipover.

Assembly Instruction



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

. Check you have all the components and tools listed on the following pages.
. Remove all fittings from the plastic bags and separate them into their groups.
. Keep children and animals away from the work area, small parts could choke if swallowed.
. Make sure you have enough space to layout the parts before starting.

. During assembly do not stand or put weight on the product, this could cause damage.
. Assemble the item as close to its final position (in the same room) as possible.
. Assemble on a soft level surface to avoid damaging the unit or your floor.
. Parts of the assembly will be easier with 2 people.



. To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and malntenance

. Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

. From time to time check that there are no loose screws on this unit.

.This product should not be discarded with household waste. Take to your local authorlty waste disposal centre.

Handy Hints

. Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

. Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning -
please follow these Instructlons

To help prevent product toppling over please follow the below steps:-

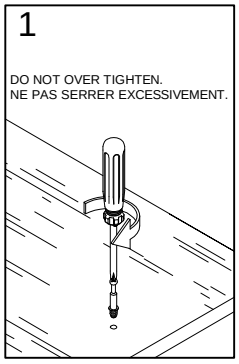
Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Using Camlocks

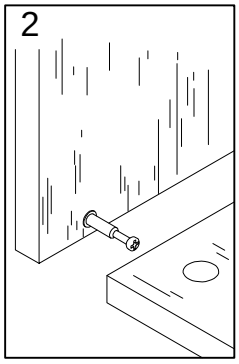
Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.



Step 2

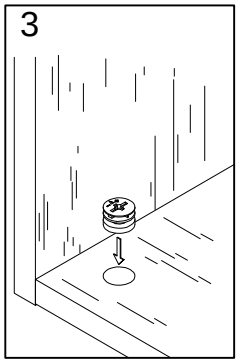
Push the male camlock into the entry hole.



Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

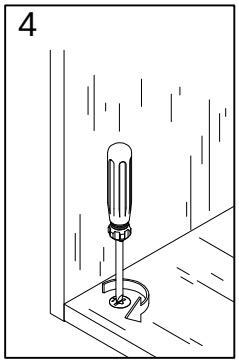


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.





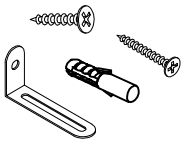


The joint is now secure.



Components -Fittings


Please check you have all the panels llsted below


Note:The quantities below are the correct amount to complete the assembly. in some cases, more fittings may be supplied than required.


Ⓐ  Ø6x33mm x65pcs	Ⓑ  x65pcs	Ⓒ  Ø4x40mm x8pcs	Ⓓ  Ø3x12mm x10pcs	Ⓔ  150mm x2pcs	Ⓕ  Ø4x15mm x2pcs
Ⓖ  250mm x2pcs	Ⓗ  Ø4x22mm x8pcs	Ⓘ  x8pcs	Ⓙ  Ø3x16mm x8pcs	Ⓚ  Ø6x30mm x36pcs	Ⓛ  Ø4x30mm x6pcs
Ⓜ  x8pcs	Ⓝ  Ø4x14mm x48pcs	Ⓞ  x8pcs	Ⓟ  250mm x2pcs	Ⓠ  x1set	Ⓡ  x2pcs
Ⓢ  Ø6x20mm x8pcs	Ⓣ  Ø4x20mm x8pcs	Ⓤ  x1pc	Ⓥ  Ø4x28mm x2pcs	 x1pc	


Assembly Instruction


Box A



1: 1pc


2: 1pc



6: 1pc



8: 1pc



9: 1pc



10: 2pcs



11: 2pcs



12: 4pcs



15: 1pc


17: 1pc

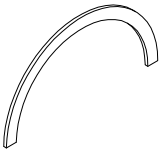

18: 1pc


19: 2pcs



20: 1pc



21: 1pc



27: 1pc



28: 1pc


Box B



3: 1pc



4: 1pc



5: 1pc


7: 2pcs


14: 1pc

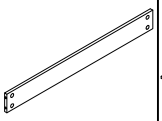

13: 4pcs



16: 1pc

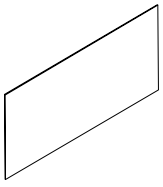

22: 2pcs



23: 1pc



24: 1pc

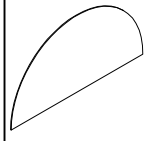

25: 1pc

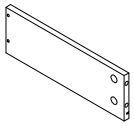

26: 1pc

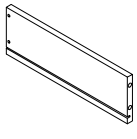

29: 2pcs



30: 3pcs

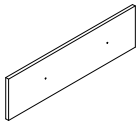

31: 1pc



32: 1pc



33: 1pc


34: 1pc

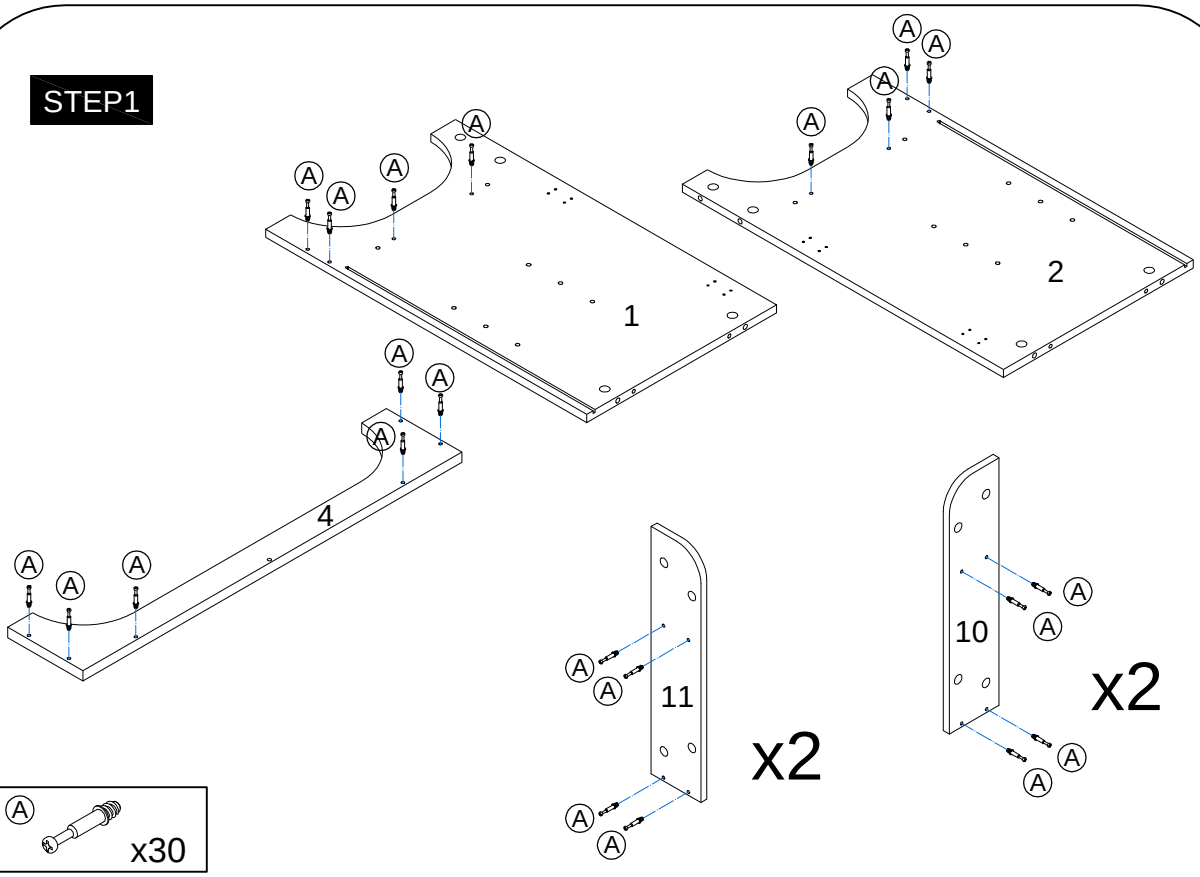

35: 1pc


36: 1pc


37: 1pc

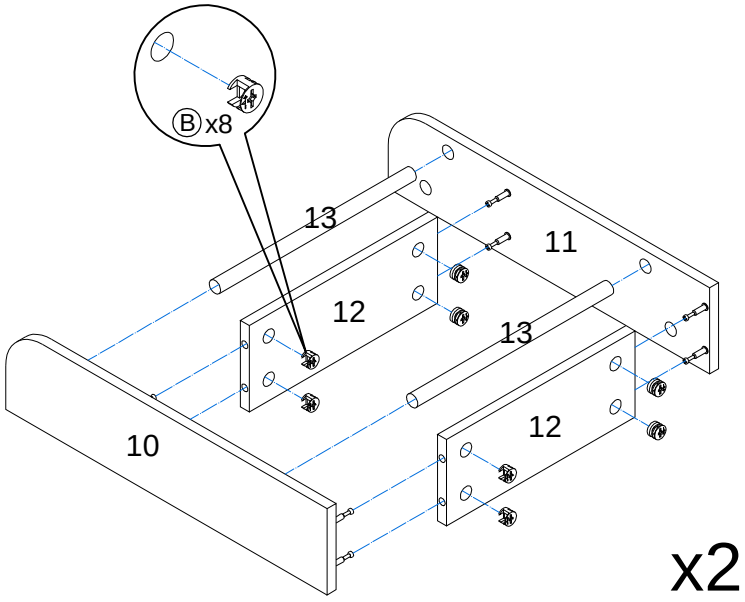

38: 1pc

STEP1



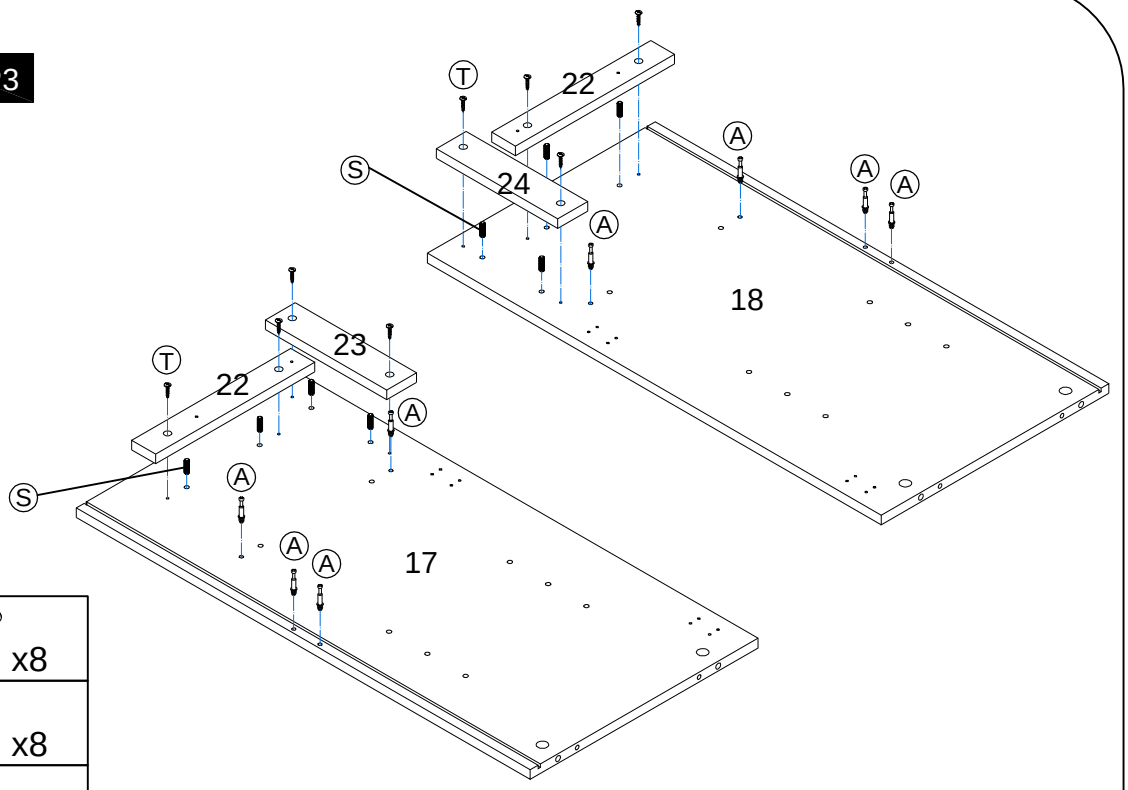
A x30

STEP2



B x16

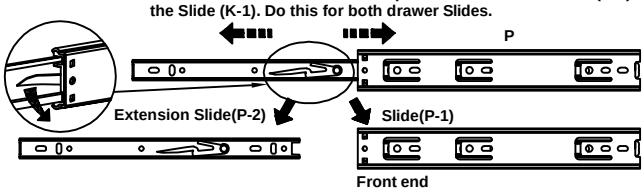
STEP3

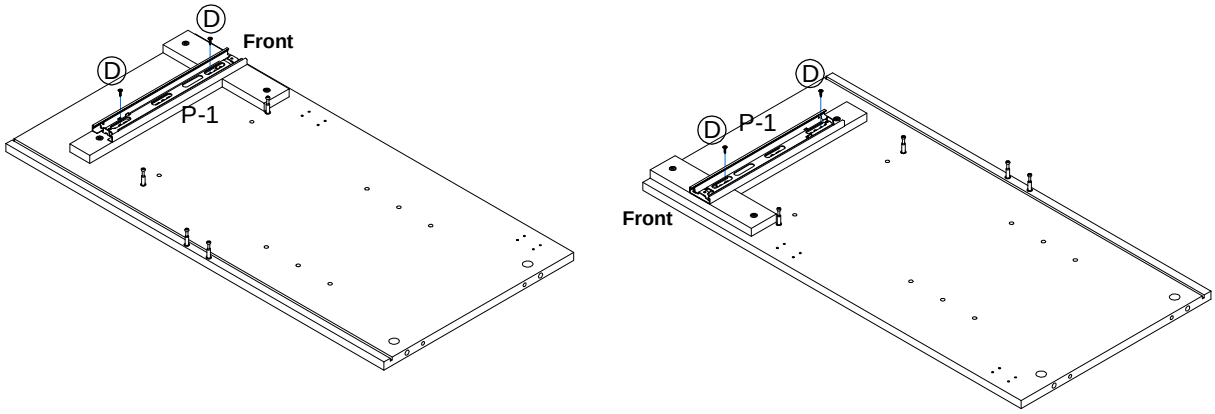


A	x8
T Ø4x20mm	x8
S Ø6x20mm	x8

STEP4


Detaching the Slide
Press lever to disconnect and separate the Extension Slide (K-2) from the Slide (K-1). Do this for both drawer Slides.





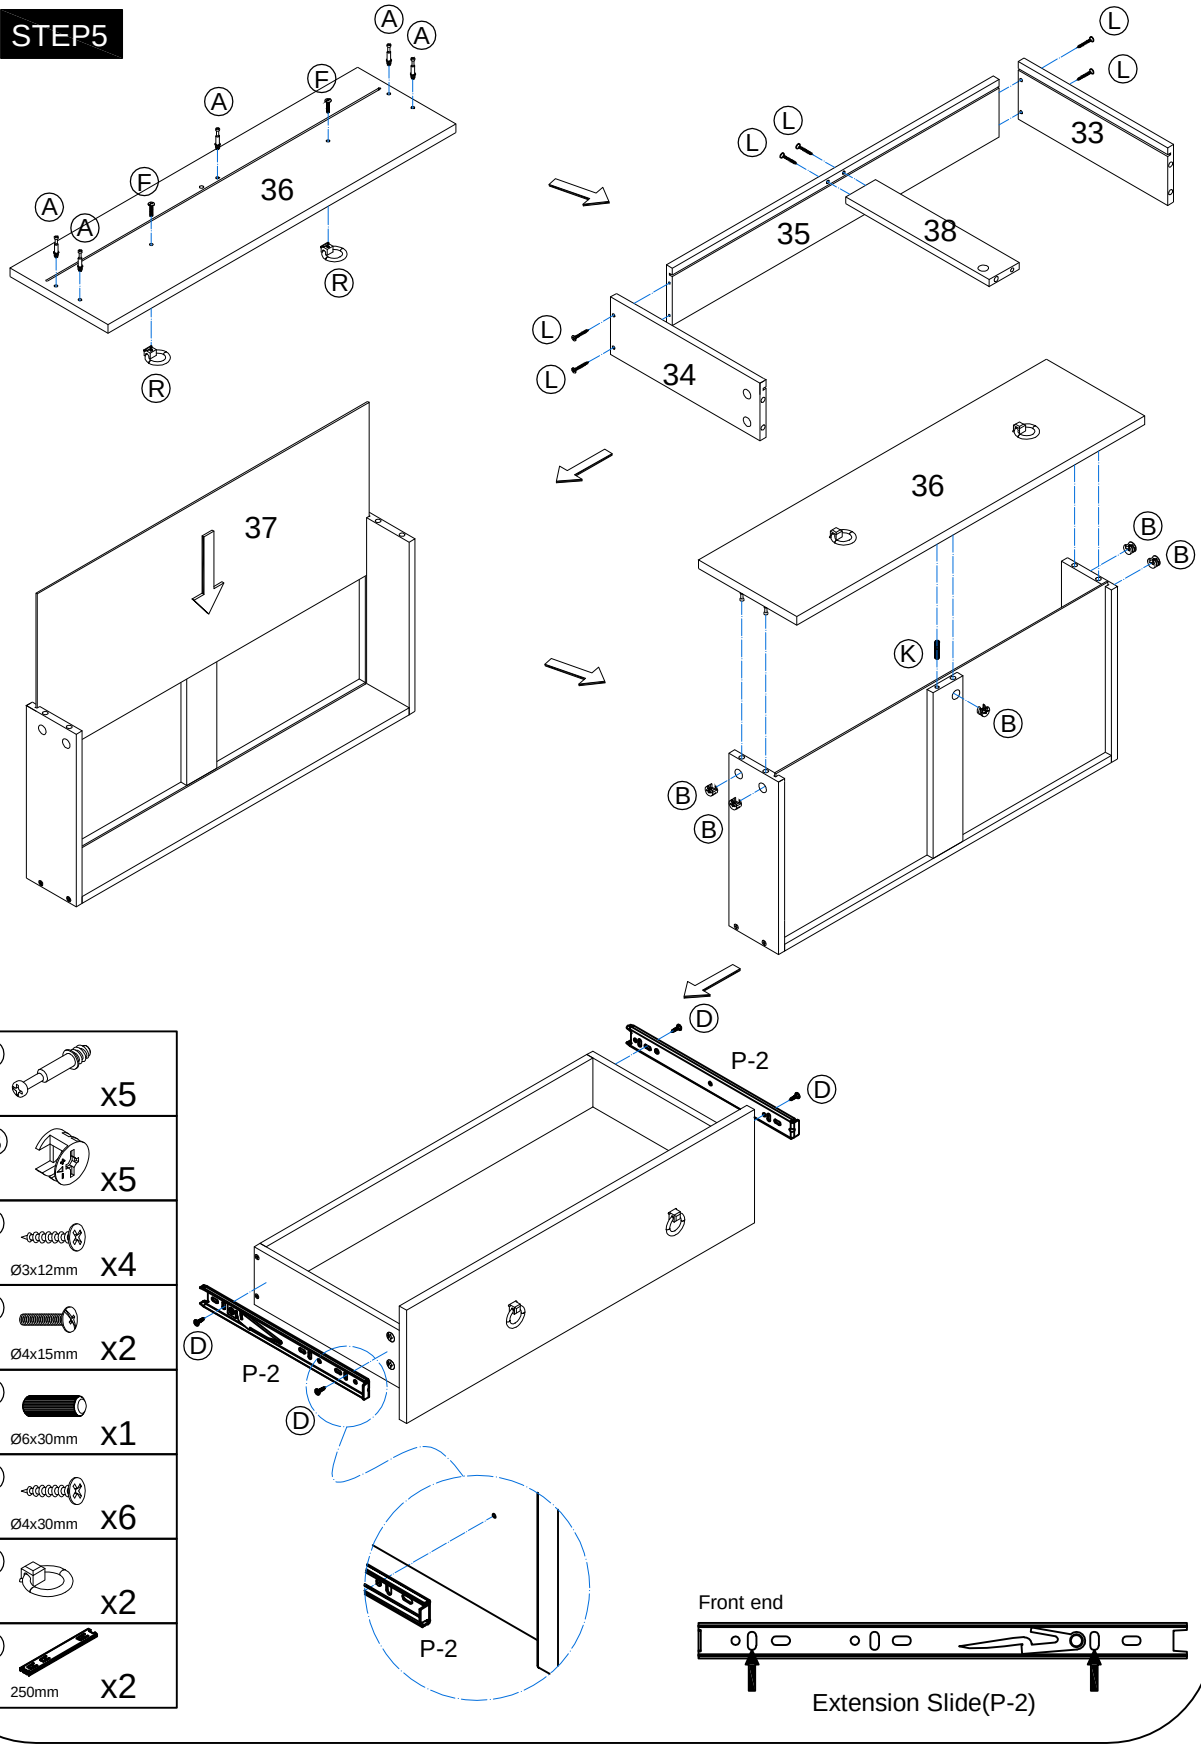
D Ø3x12mm	x4
P 250mm	x2

Front end



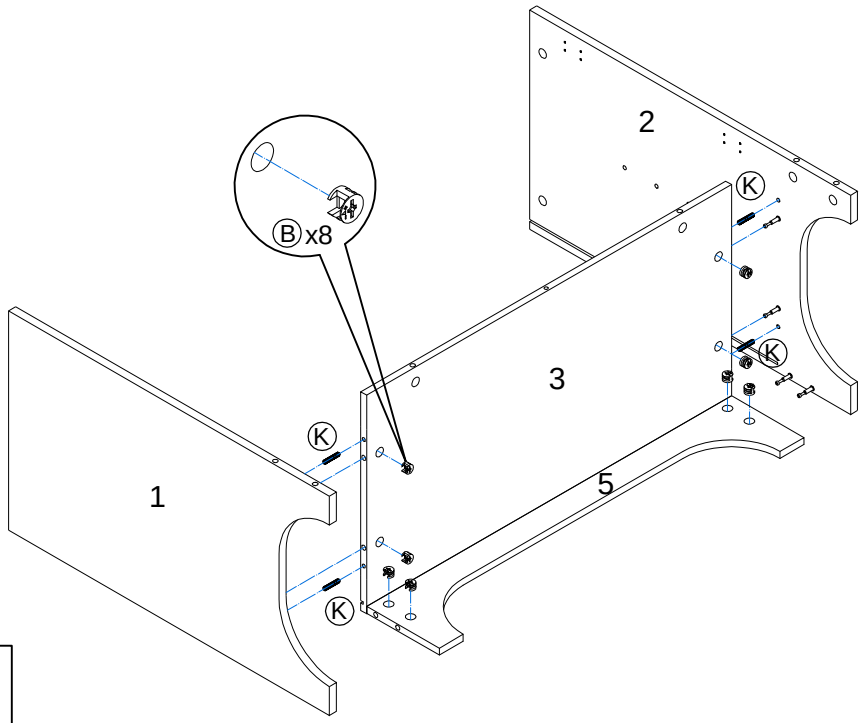
Adjust SLIDE to align with the screw holes.

STEP5



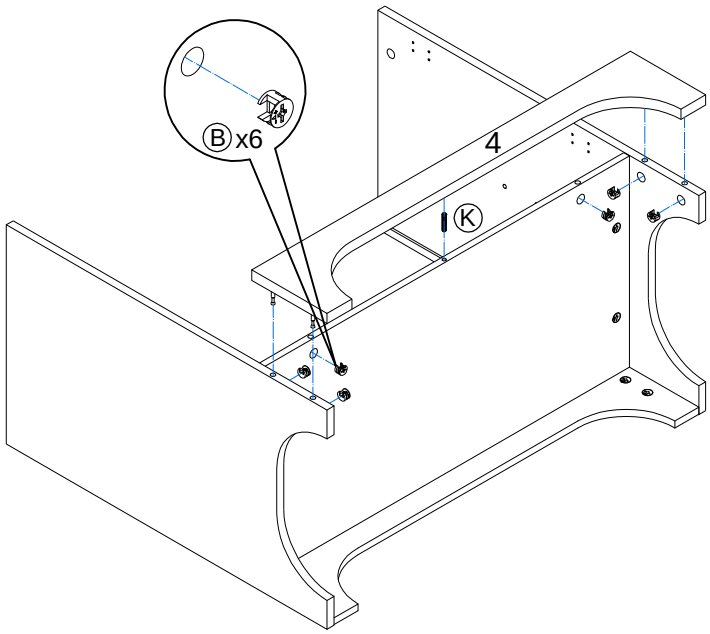
A		x5
B		x5
D	Ø3x12mm	x4
F	Ø4x15mm	x2
K	Ø6x30mm	x1
L	Ø4x30mm	x6
R		x2
P	250mm	x2

STEP6



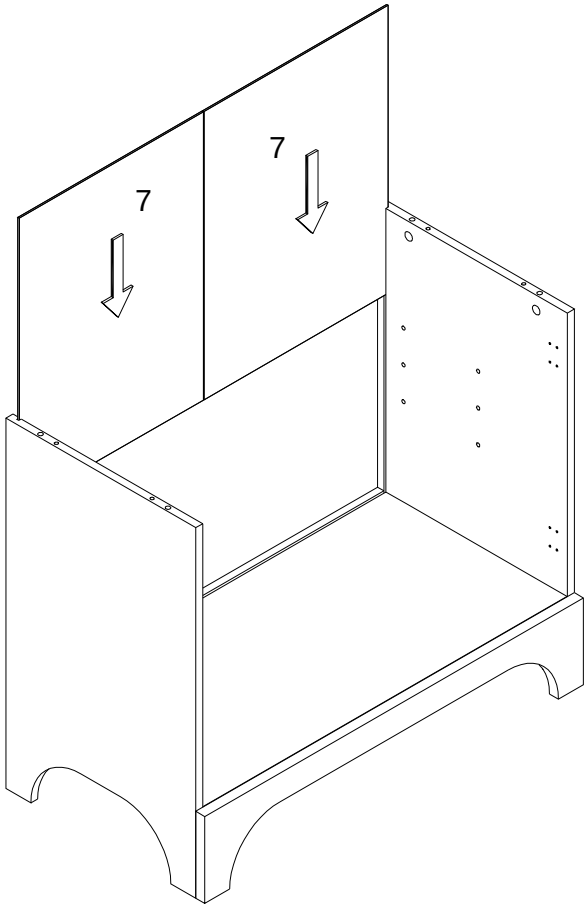
Ⓑ 	x8
Ⓚ  Ø6x30mm	x4

STEP7

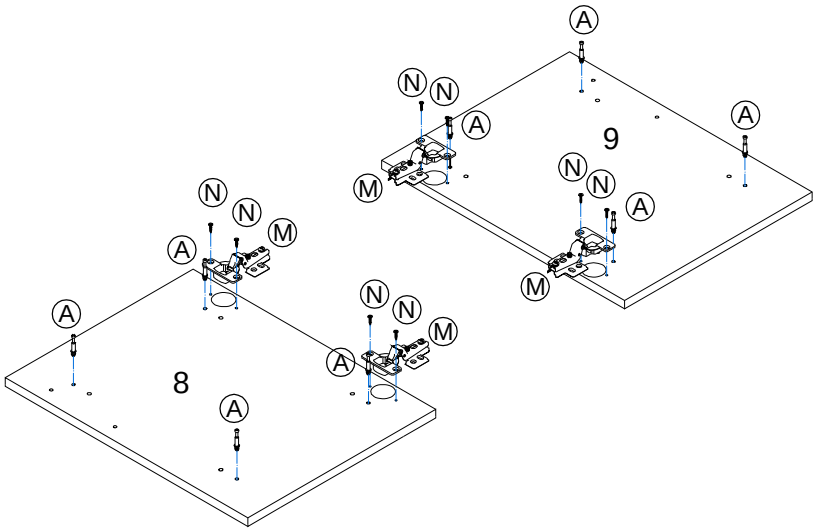


Ⓑ 	x6
Ⓚ  Ø6x30mm	x1

STEP8

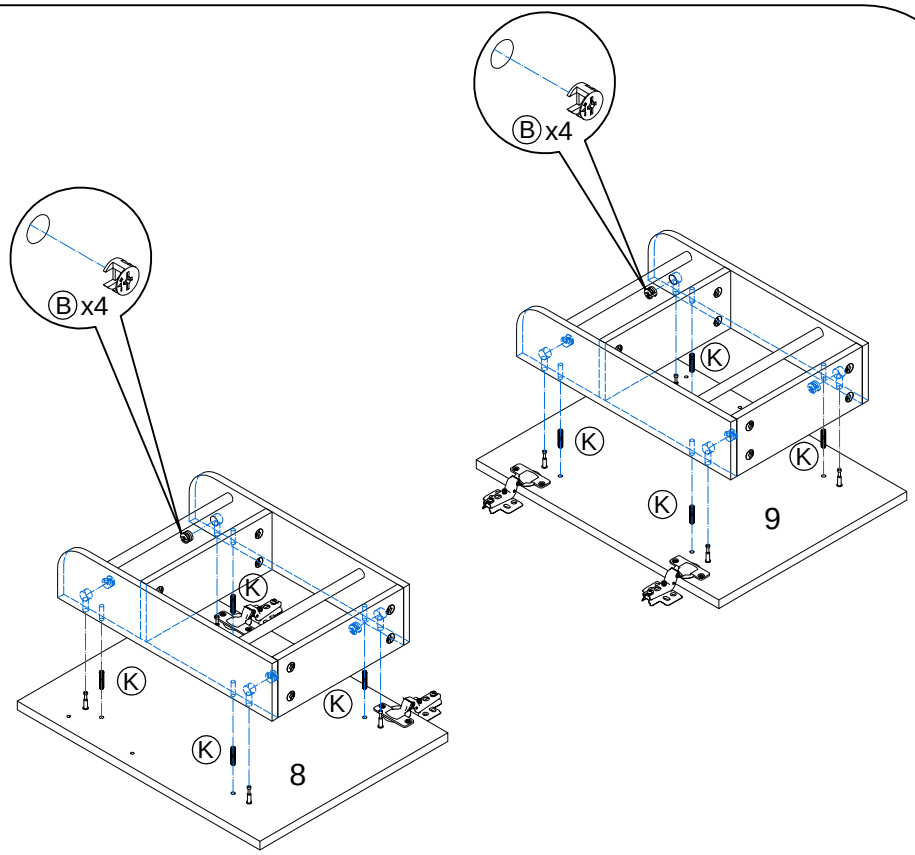


STEP9



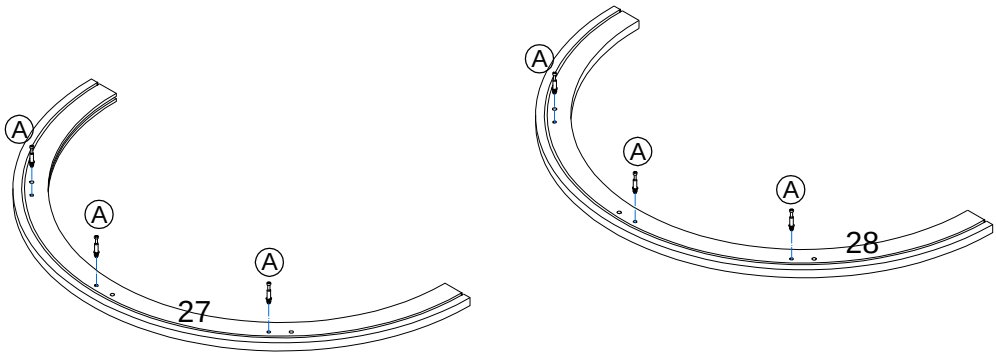
A 	x8
N  Ø4x14mm	x8
M 	x4

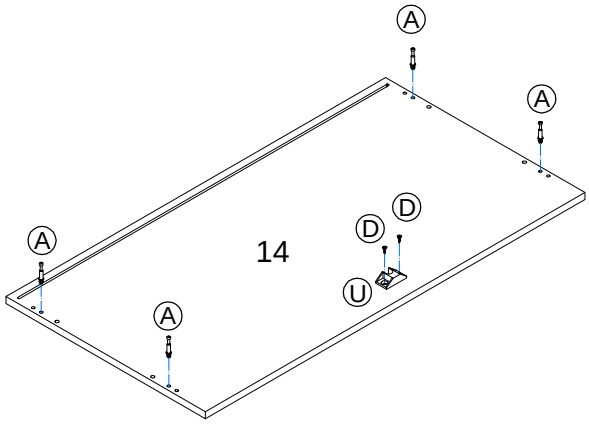
STEP10



Ⓑ	x8
Ⓚ Ø6x30mm	x8

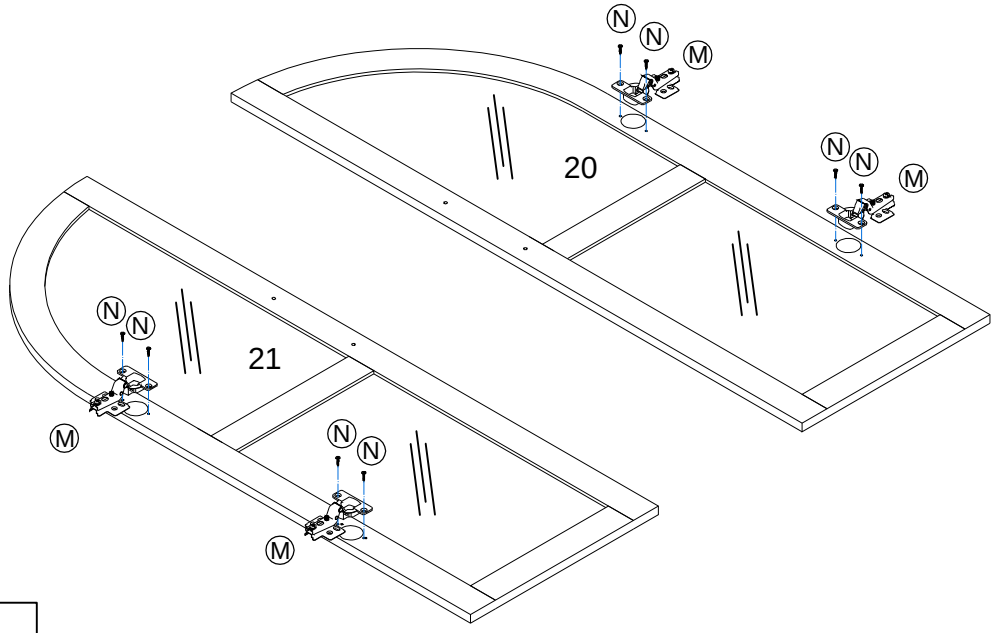
STEP11





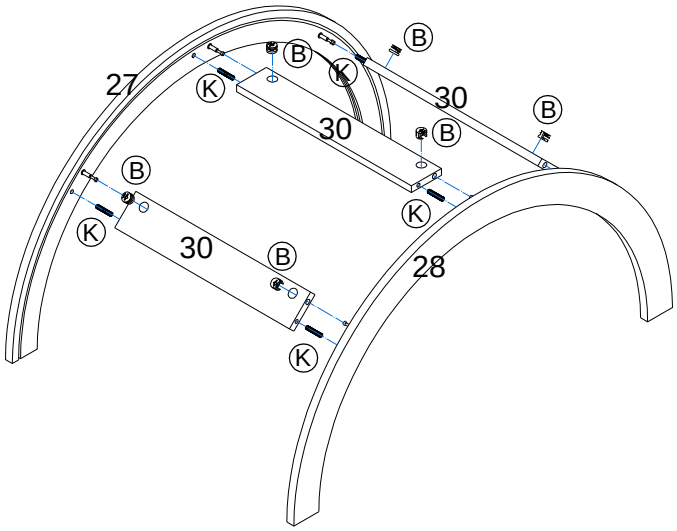
Ⓐ	x10
Ⓓ Ø3x12mm	x2
Ⓤ	x1

STEP12



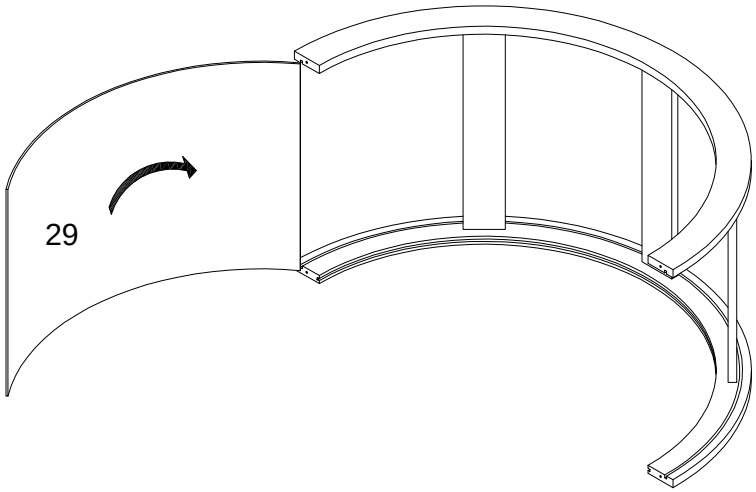
N  Ø4x14mm	x8
M 	x4

STEP13

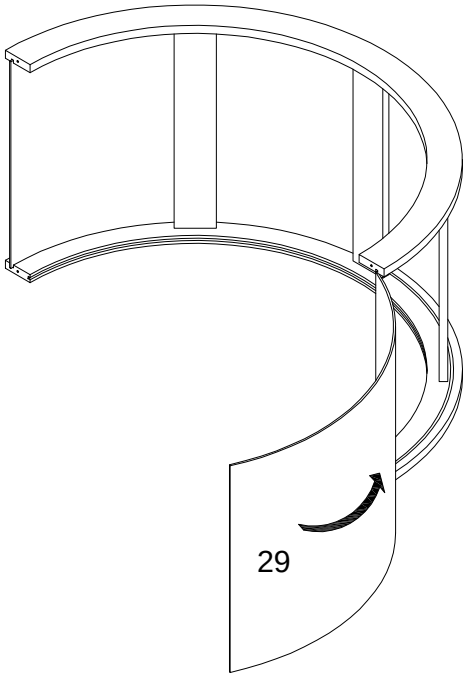


B 	x6
K  Ø6x30mm	x6

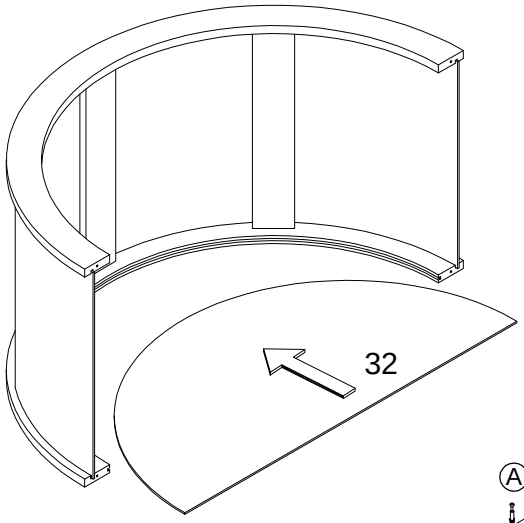
STEP14

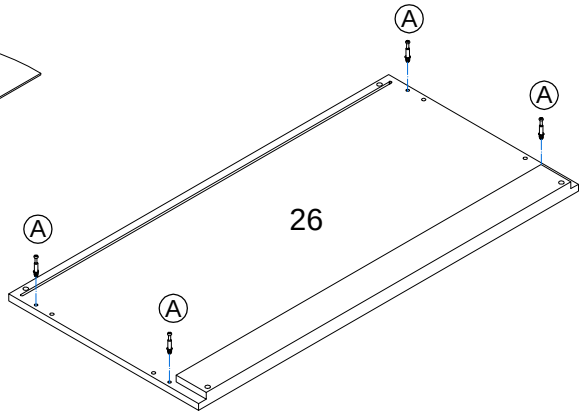



STEP15



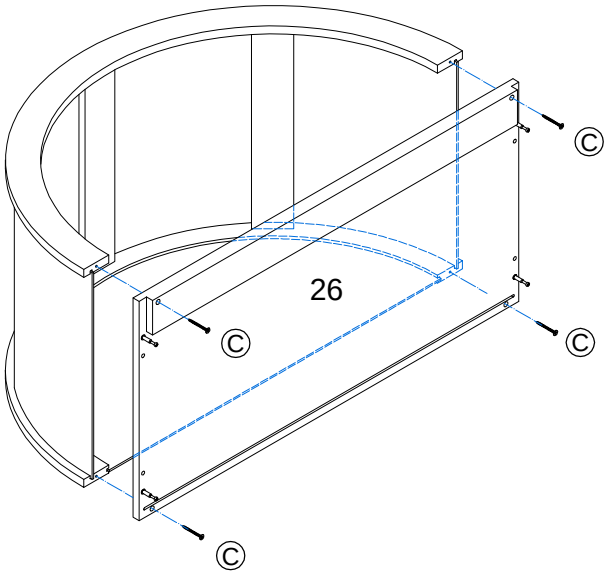
STEP16






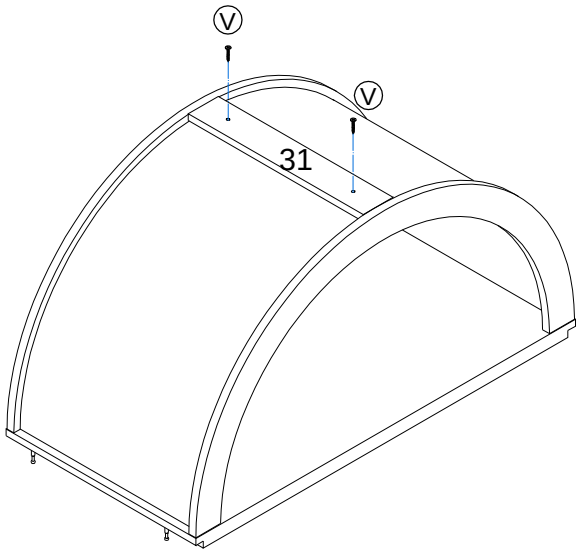


STEP17



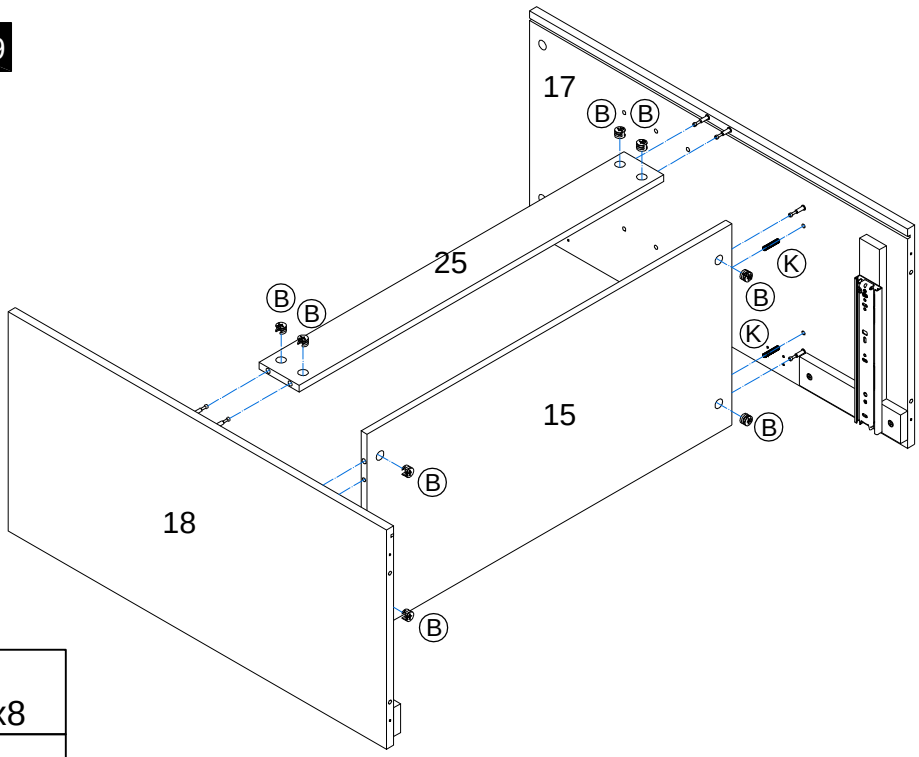


STEP18



Ⓥ Ø4x28mm x2

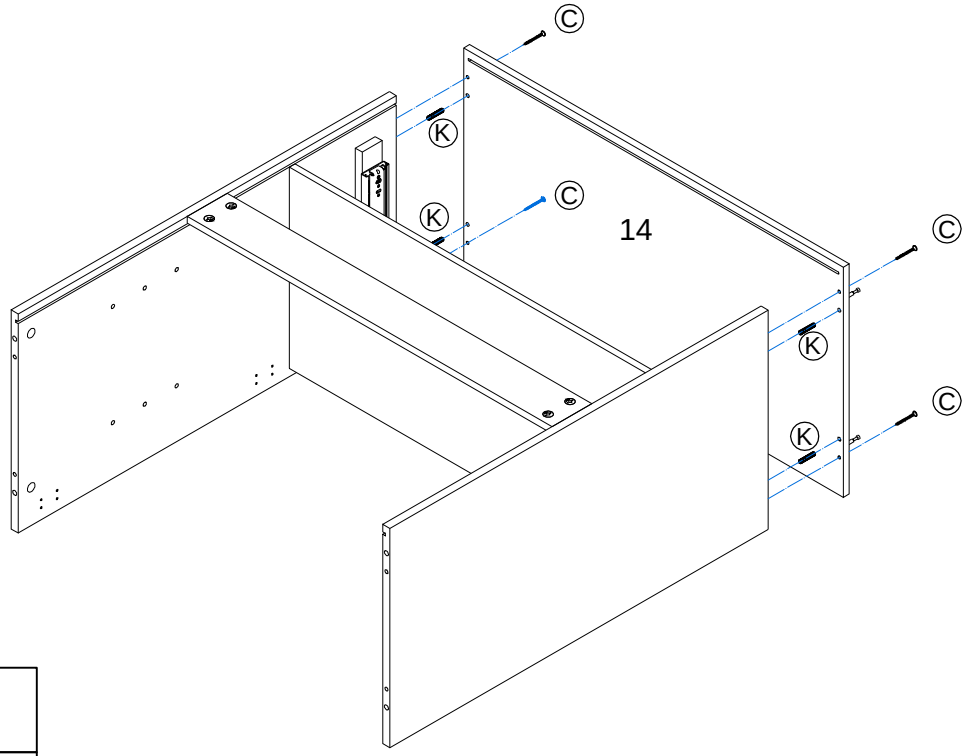
STEP19



Ⓑ x8

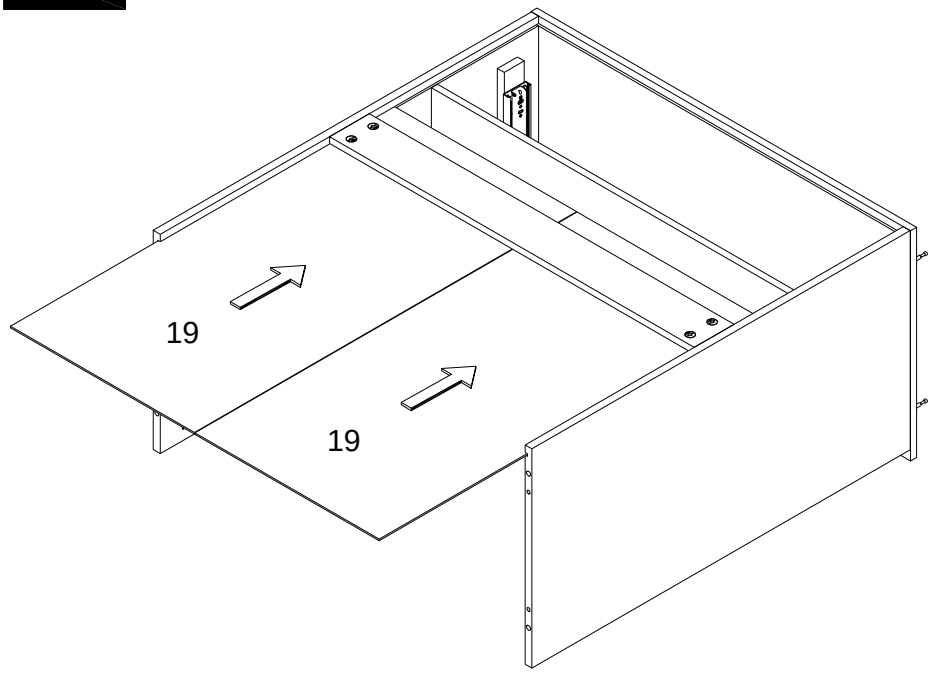
Ⓚ Ø6x30mm x4

STEP20

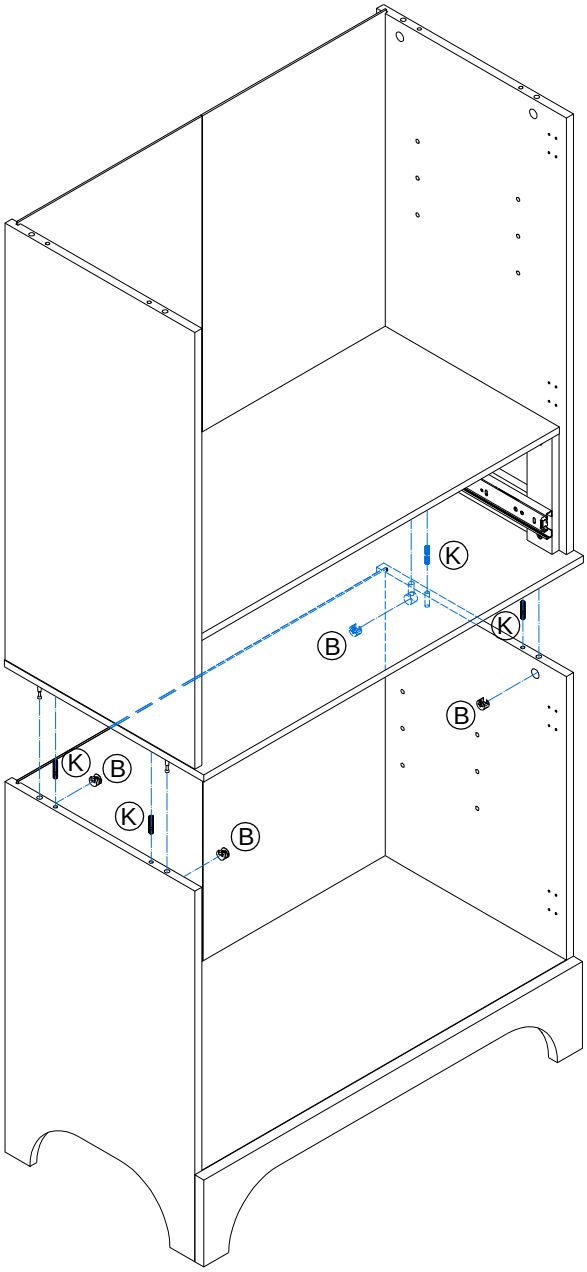


C	Ø4x40mm	x4
K	Ø6x30mm	x4

STEP21

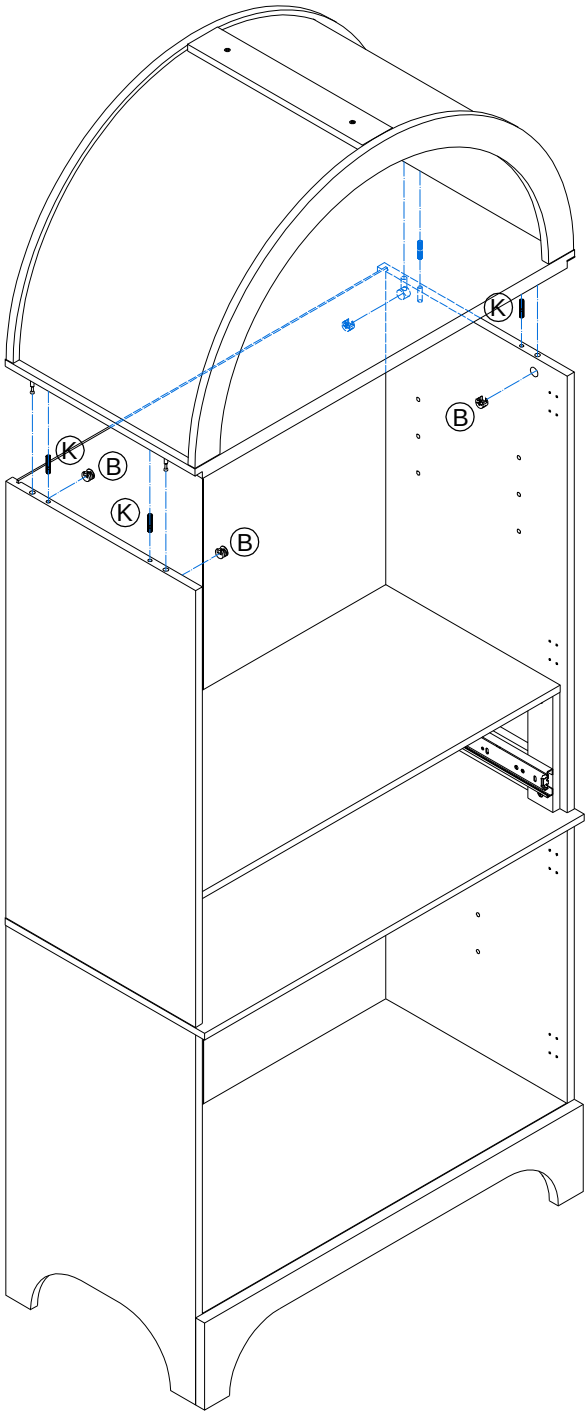


STEP22



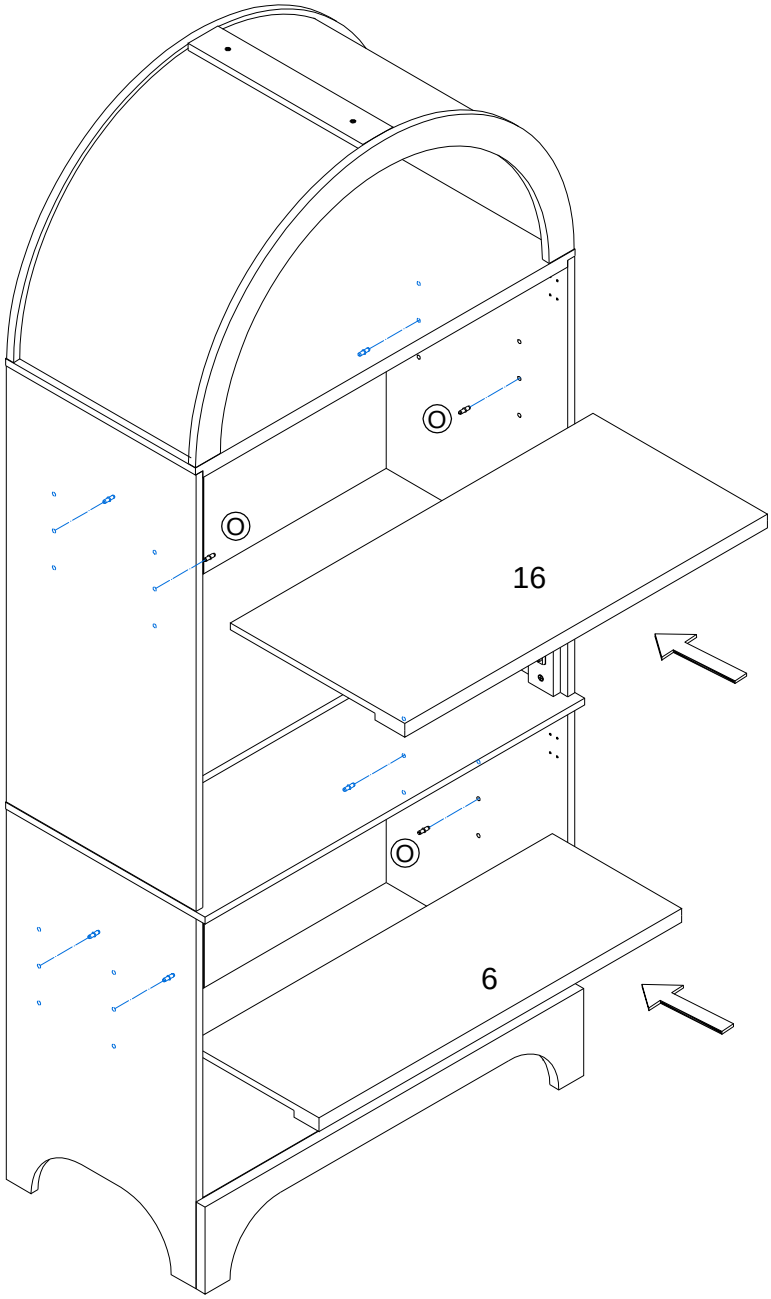
B 	x4
K  Ø6x30mm	x4


STEP23



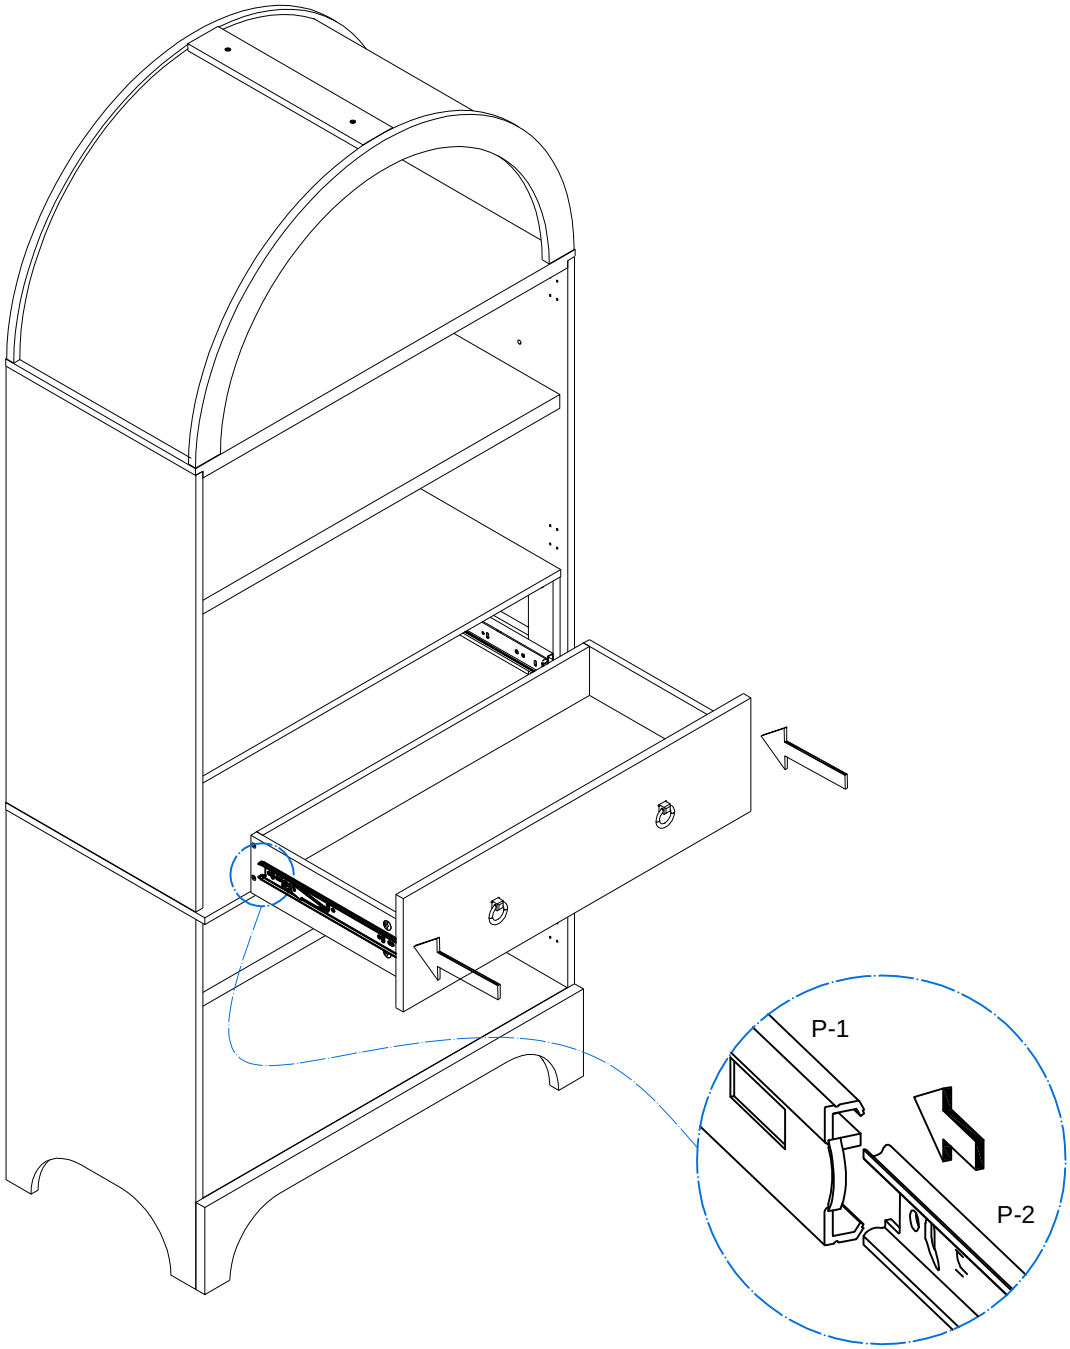
B		x4
K	 Ø6x30mm	x4

STEP24

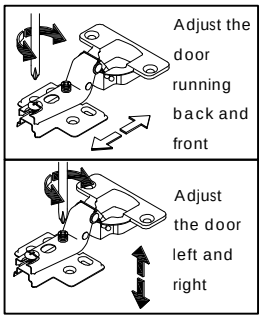




STEP25

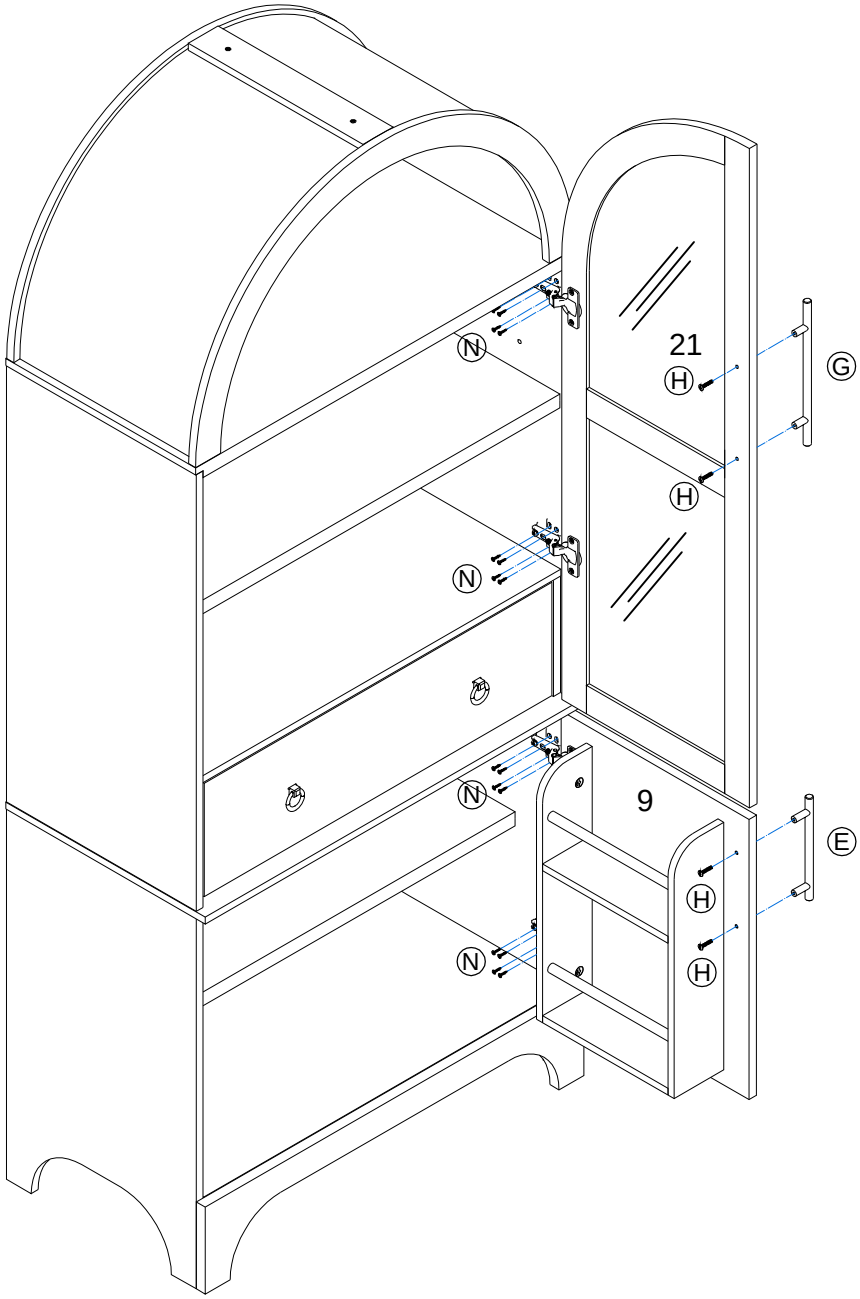


STEP26



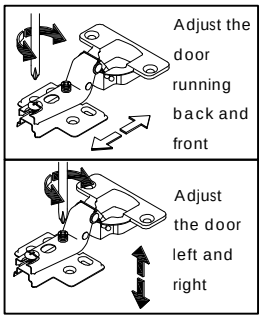
Adjust the door running back and front

Adjust the door left and right



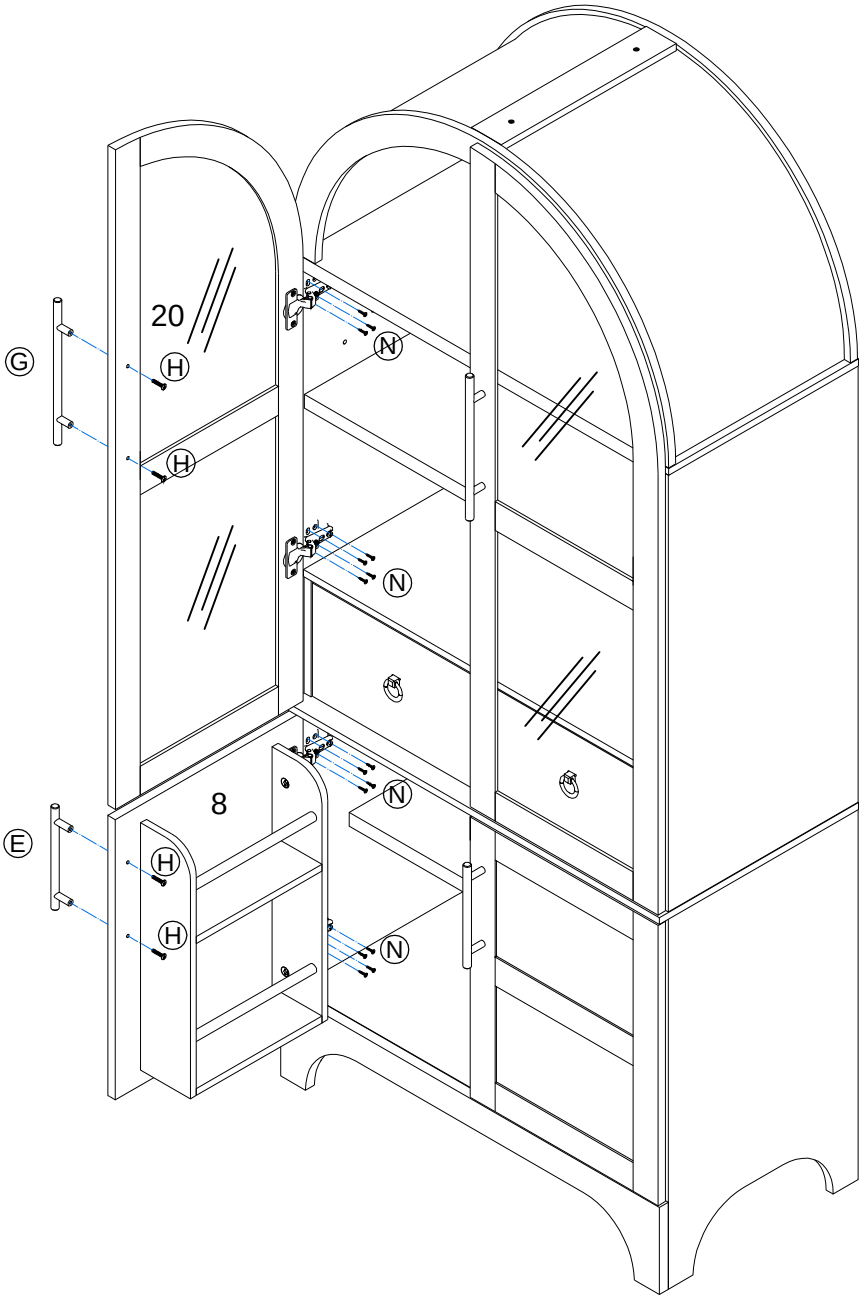
E	150mm	x1
G	250mm	x1
H	Ø4x22mm	x4
N	Ø4x14mm	x16

STEP27



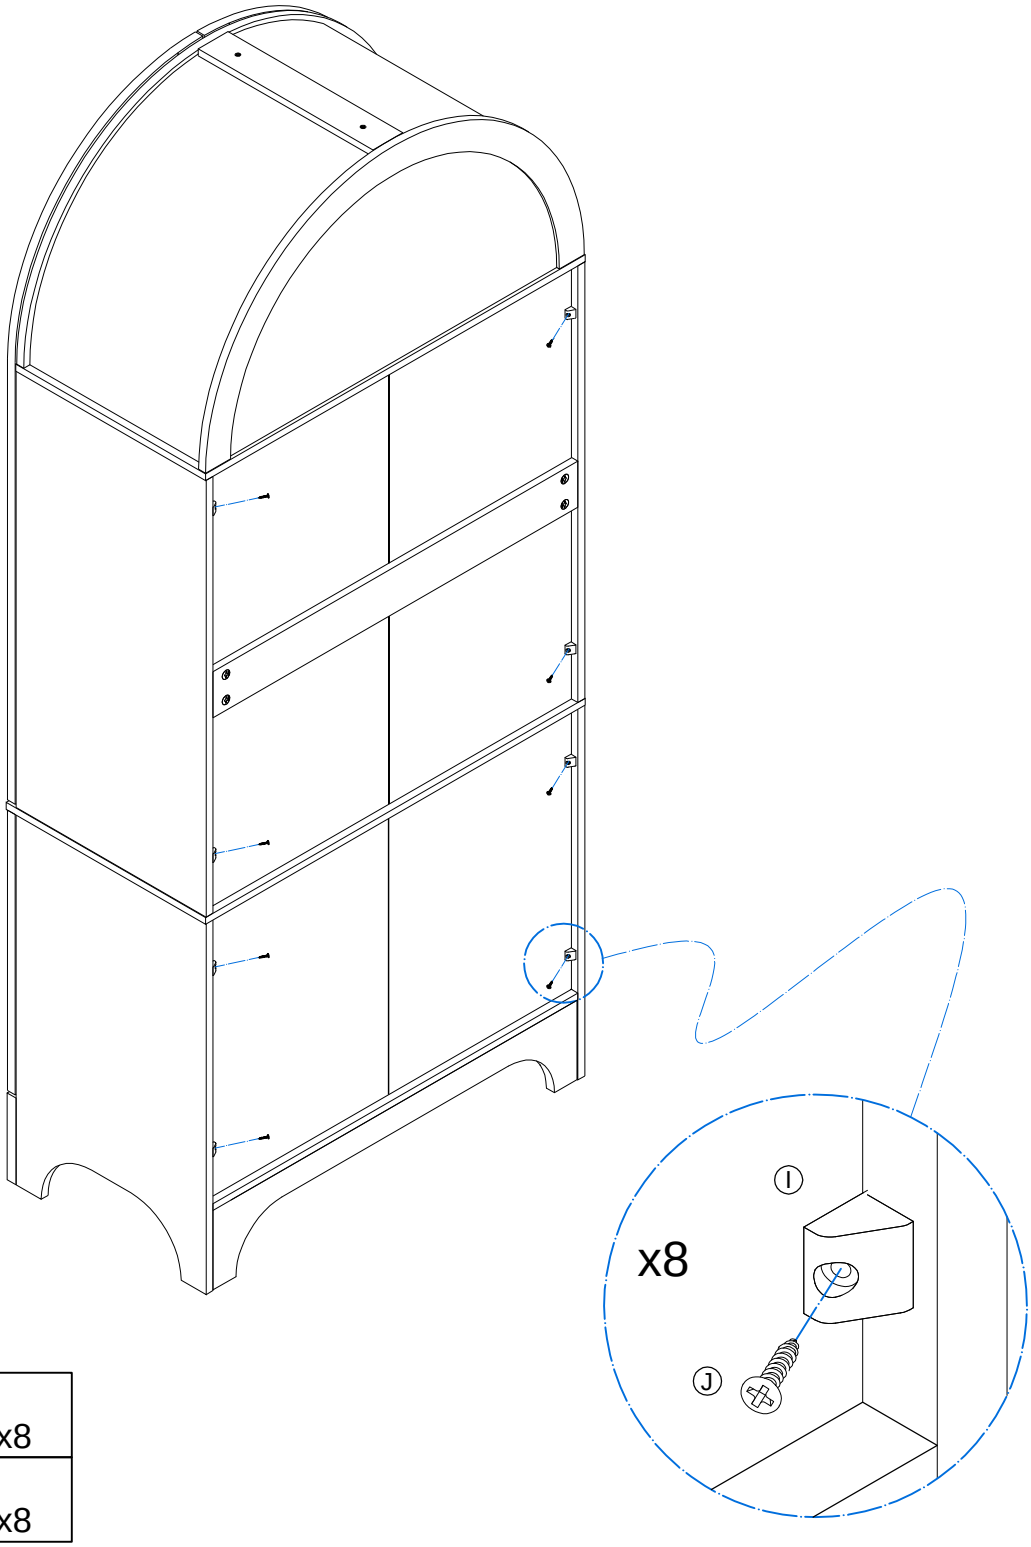
Adjust the door running back and front

Adjust the door left and right



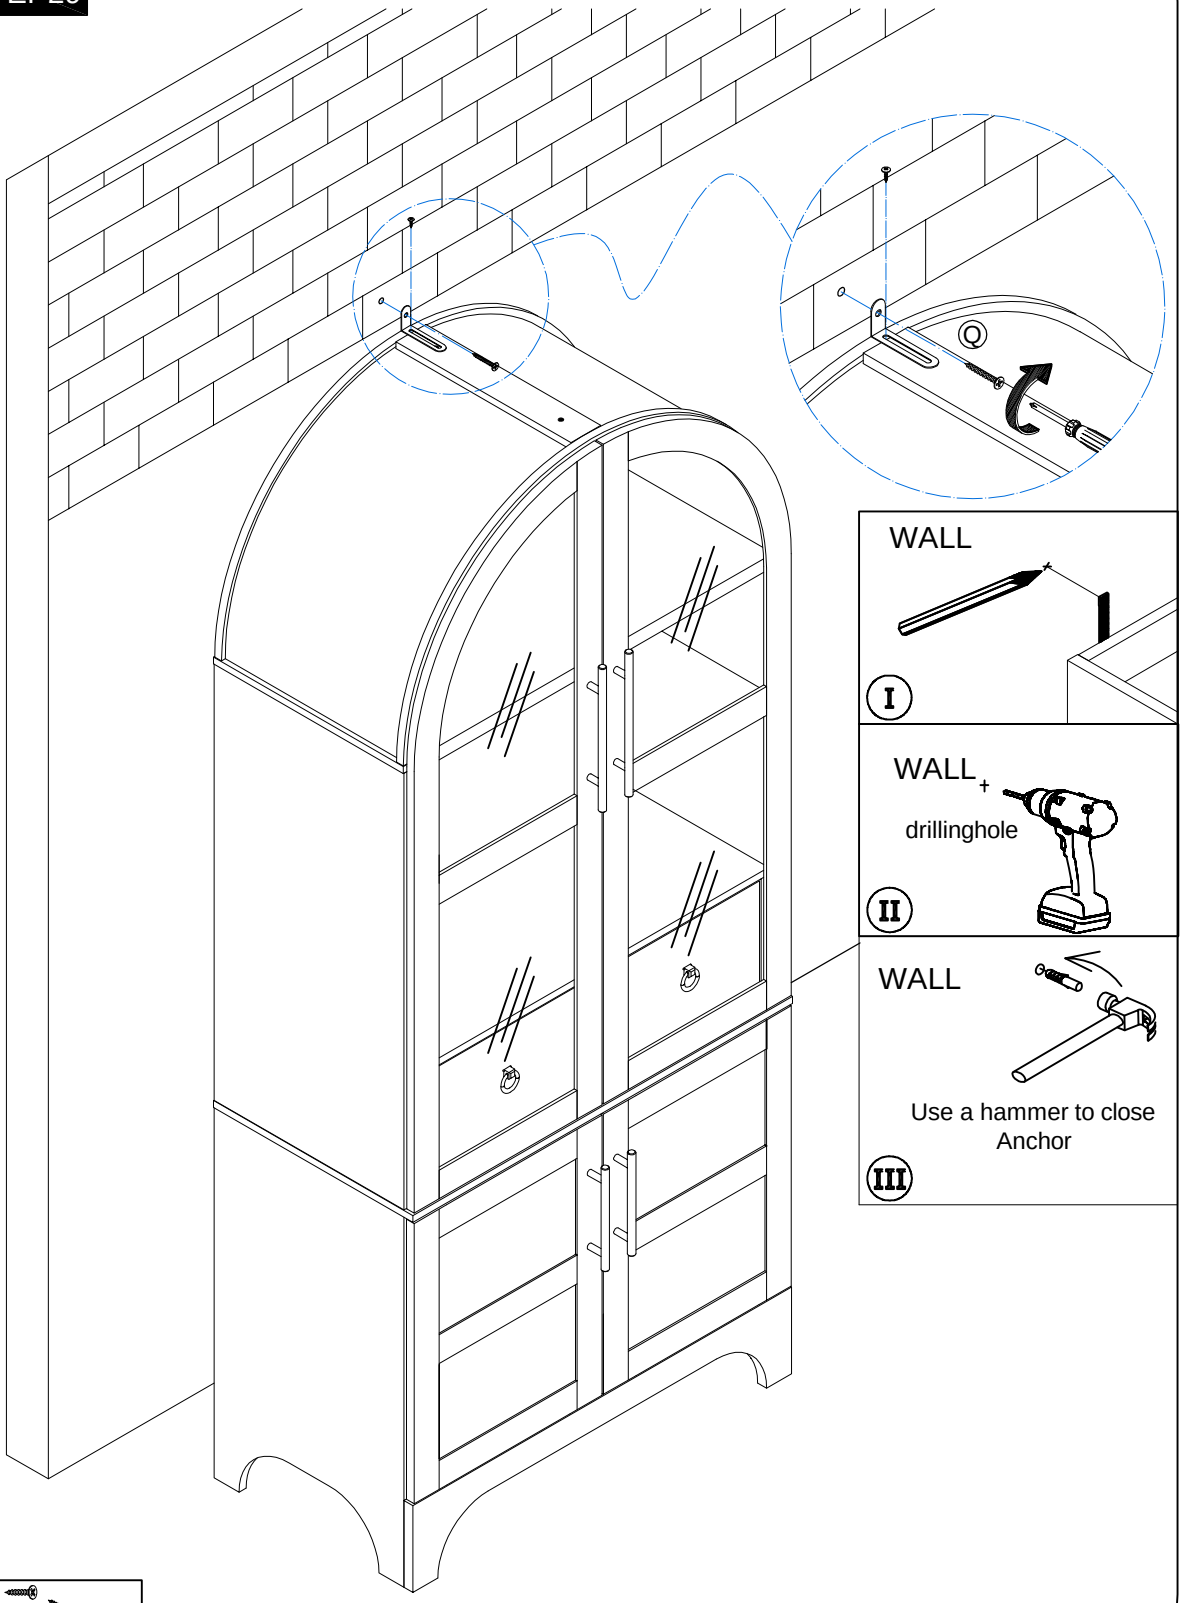
E	150mm	x1
G	250mm	x1
H	Ø4x22mm	x4
N	Ø4x14mm	x16


STEP28



I		x8
J	Ø3x16mm	x8

STEP29


Q
WALL
I
WALL
+
drillinghole
II
WALL
Use a hammer to close
Anchor
III


Q
x1