Installation Instructions

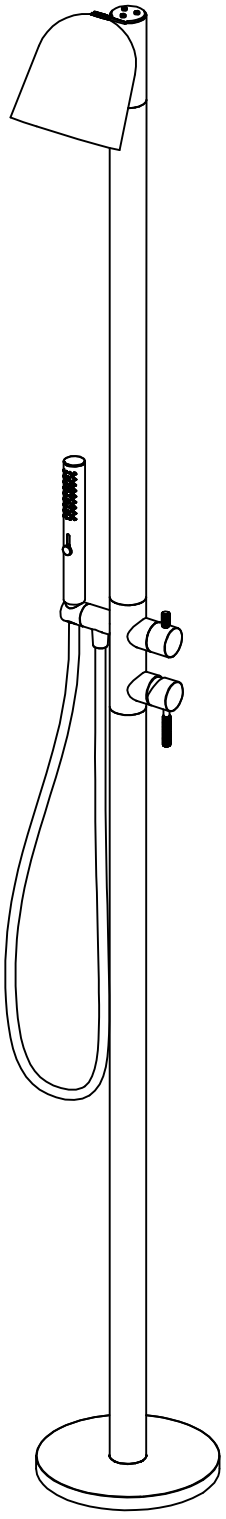

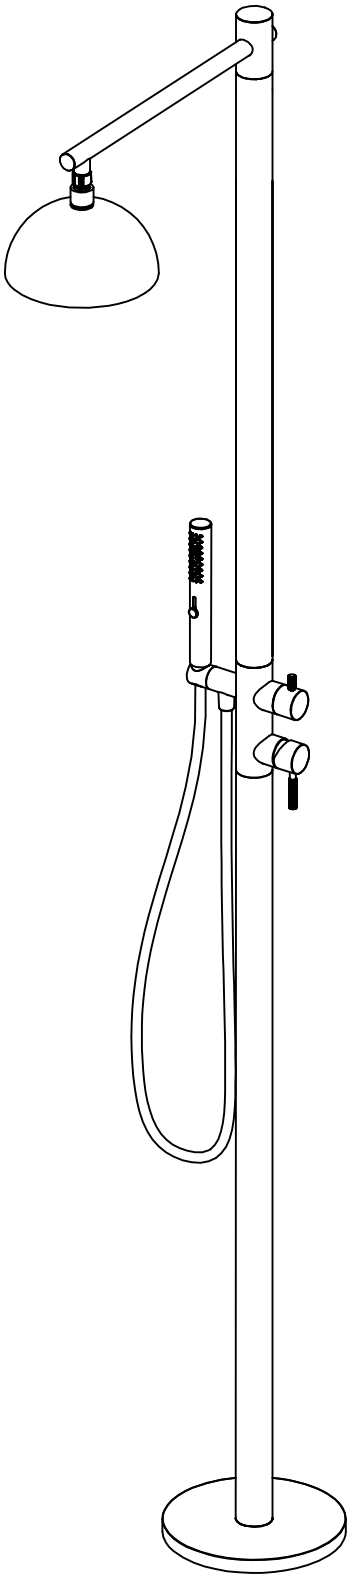

Accessories List		
S/N	ITEM	QTY.
1	Top Shower	1
2	Upper Short Tube	1
3	Lower Long Tube	1
4	Body	1
5	Inlet Hoses	2
6	Decorative Cover	1
7	Fixed Base	1
8	Handheld Shower	1
9	Shower Hose	1
10	Screw Accessory	1

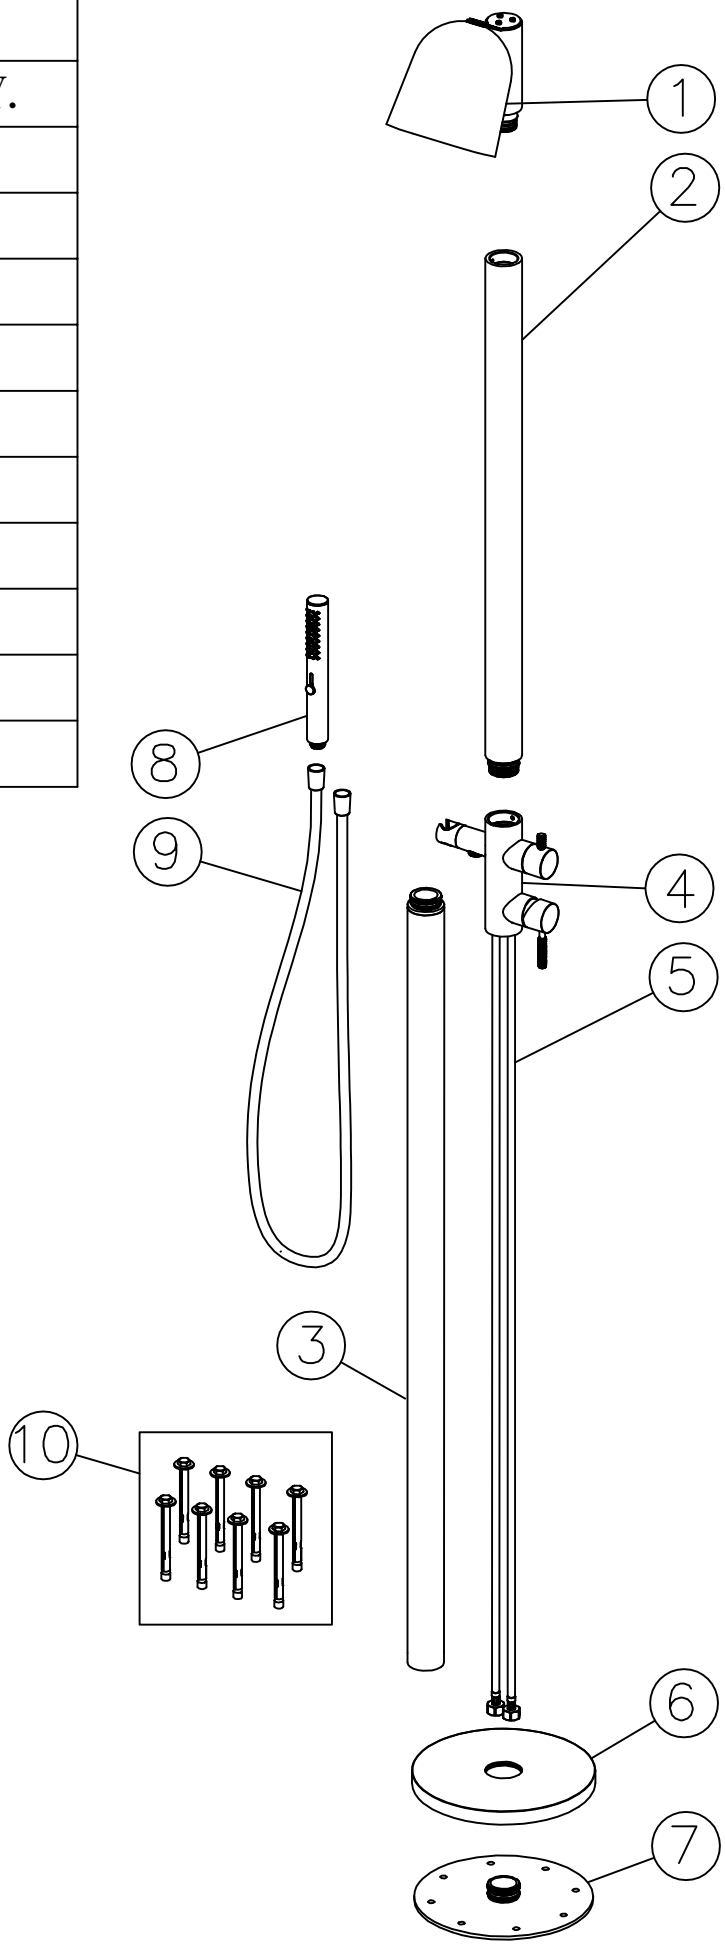

2.1. Screw the long tube ③ and the short tube ② onto the upper and lower ends of the main body ④ respectively, with the long tube ③ at the bottom and the short tube ② at the top, and tighten the screws with a hex wrench.
2.2. Insert the Top shower ① into the short tube ②, adjust the direction, and then tighten the screws with a hex wrench.
2.3. The long lower tube ③ passes through the decorative cover. ⑥
2.4. Screw the fixed base ⑦ into the long tube ③ and tighten the screws with a hex wrench.

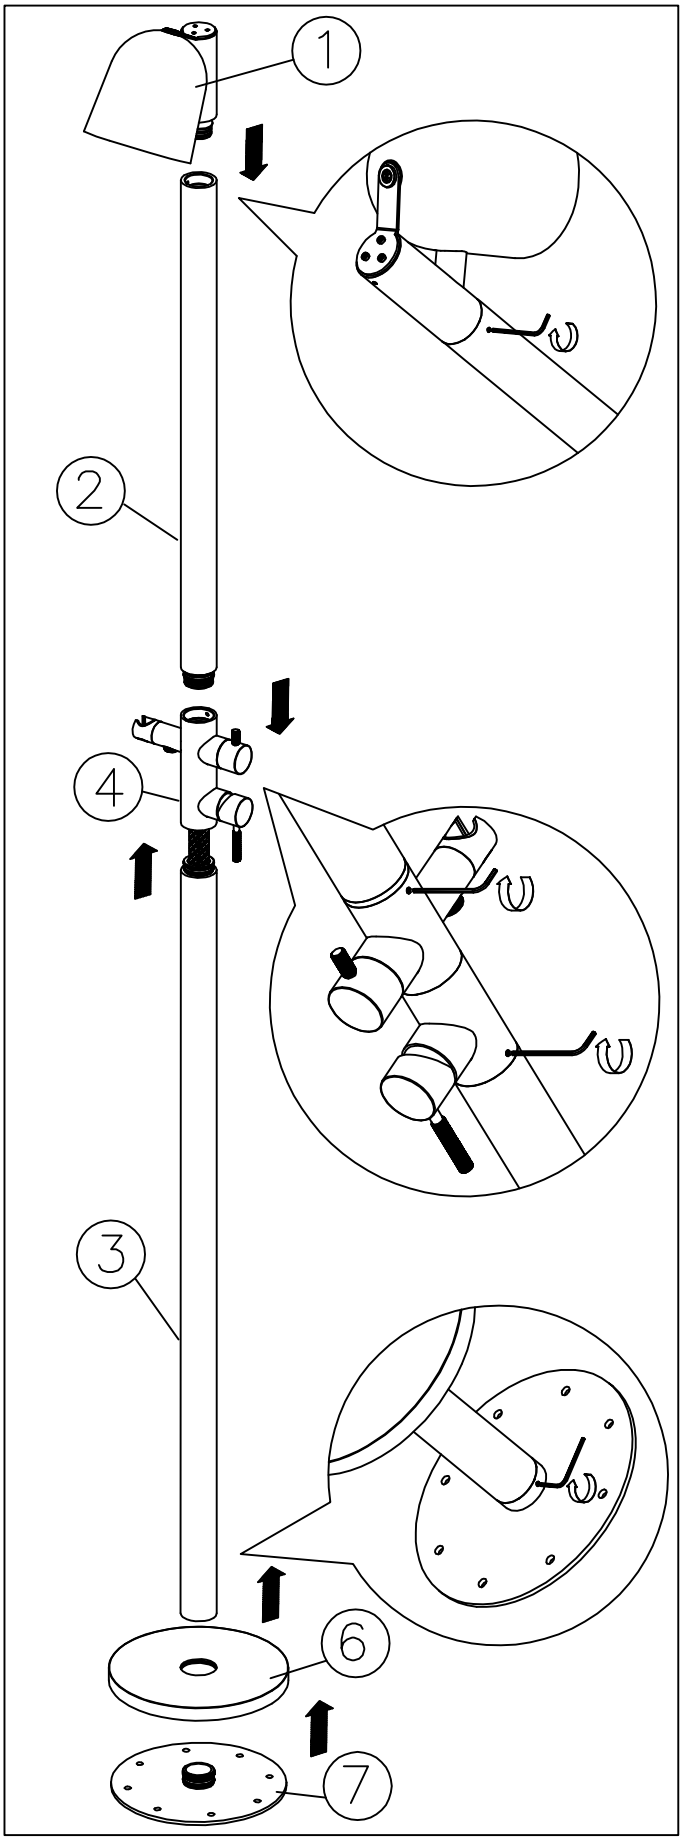

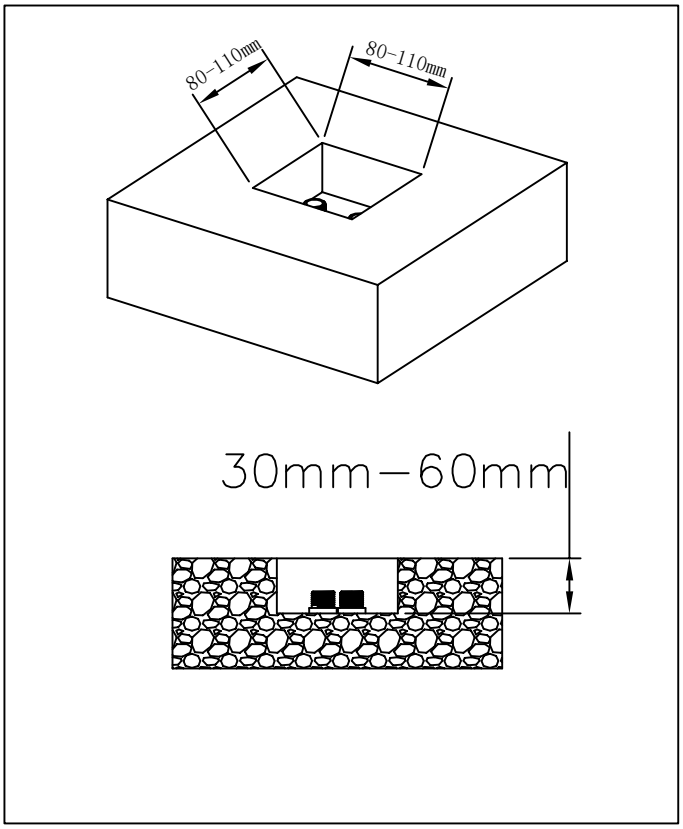

Clean the mud and sand in the pipeline before installation.

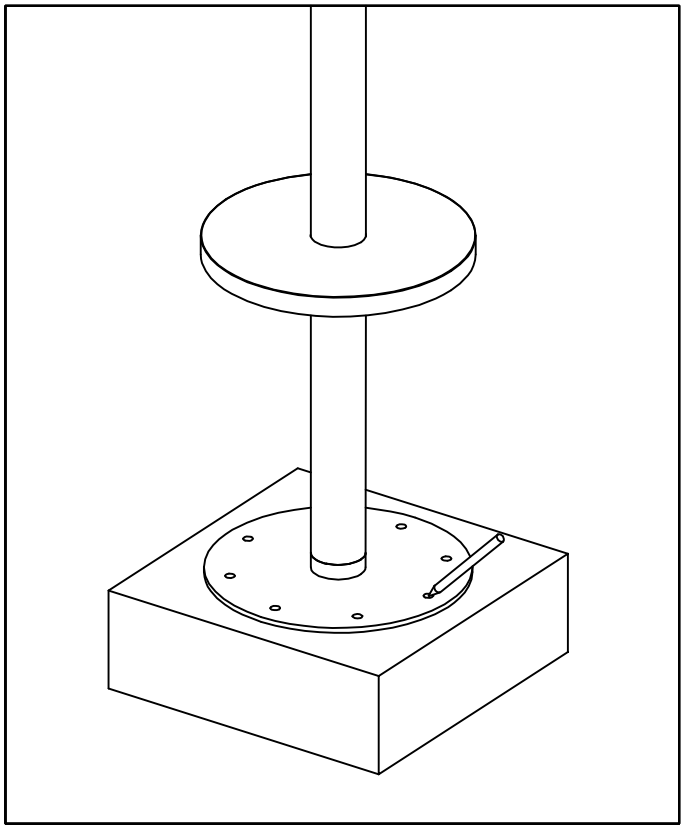

3. Set the outdoor shower upright at the installation position. After the direction is correct, make marks at the hole positions of the fixed base.

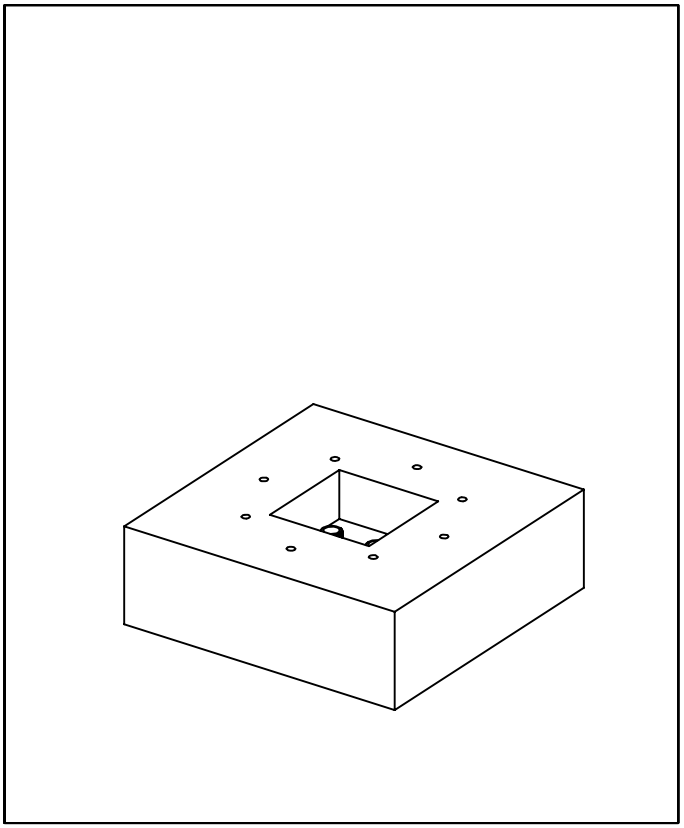

4. Drill eight ∅8 holes with a depth of 100mm at the marked locations.

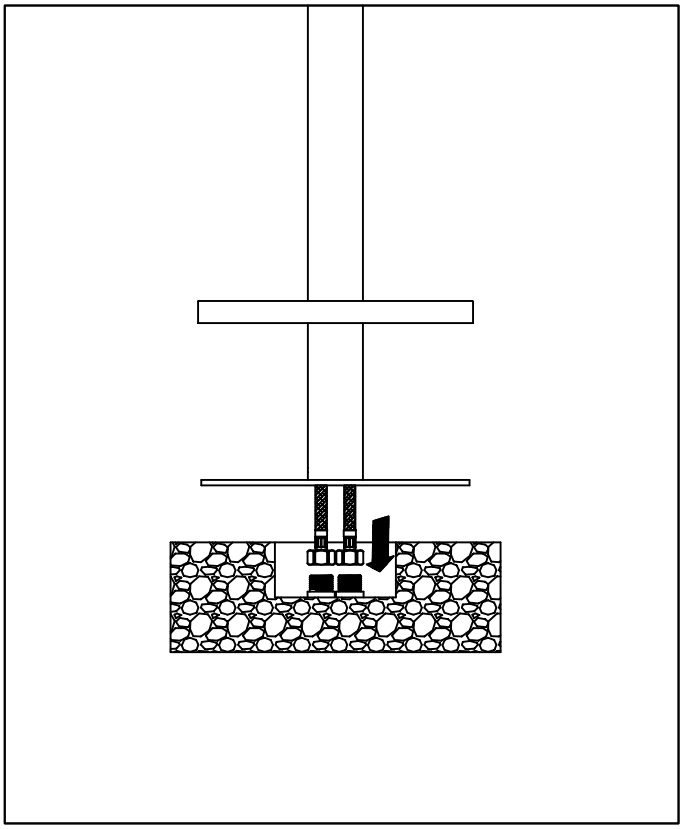

5.Connect the hot and cold water inlet hoses with the cold and hot water pipes of the tap water respectively.

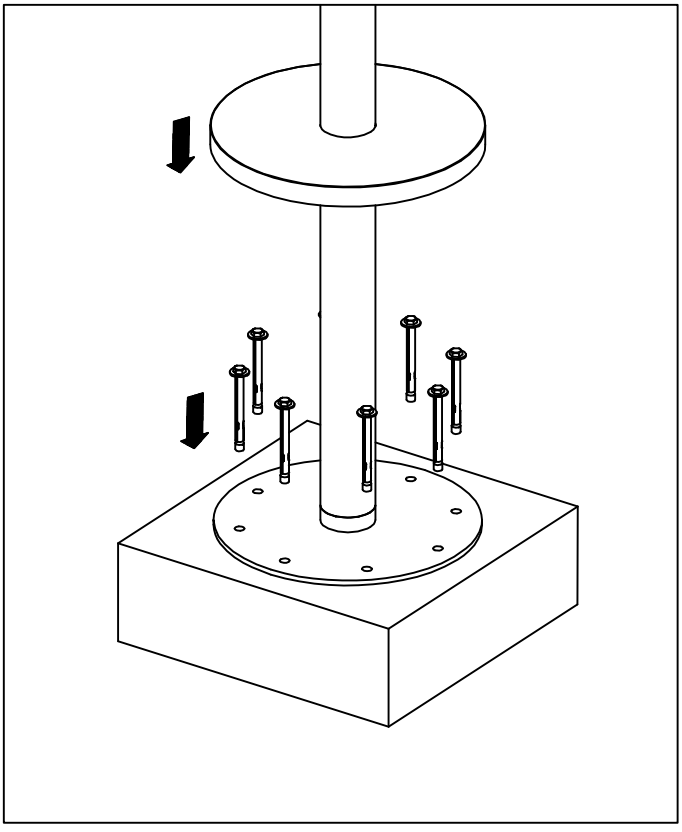

6.1. Install the expansion screws and tighten them with a wrench.
6.2. Move the decorative cover to the ground surface.

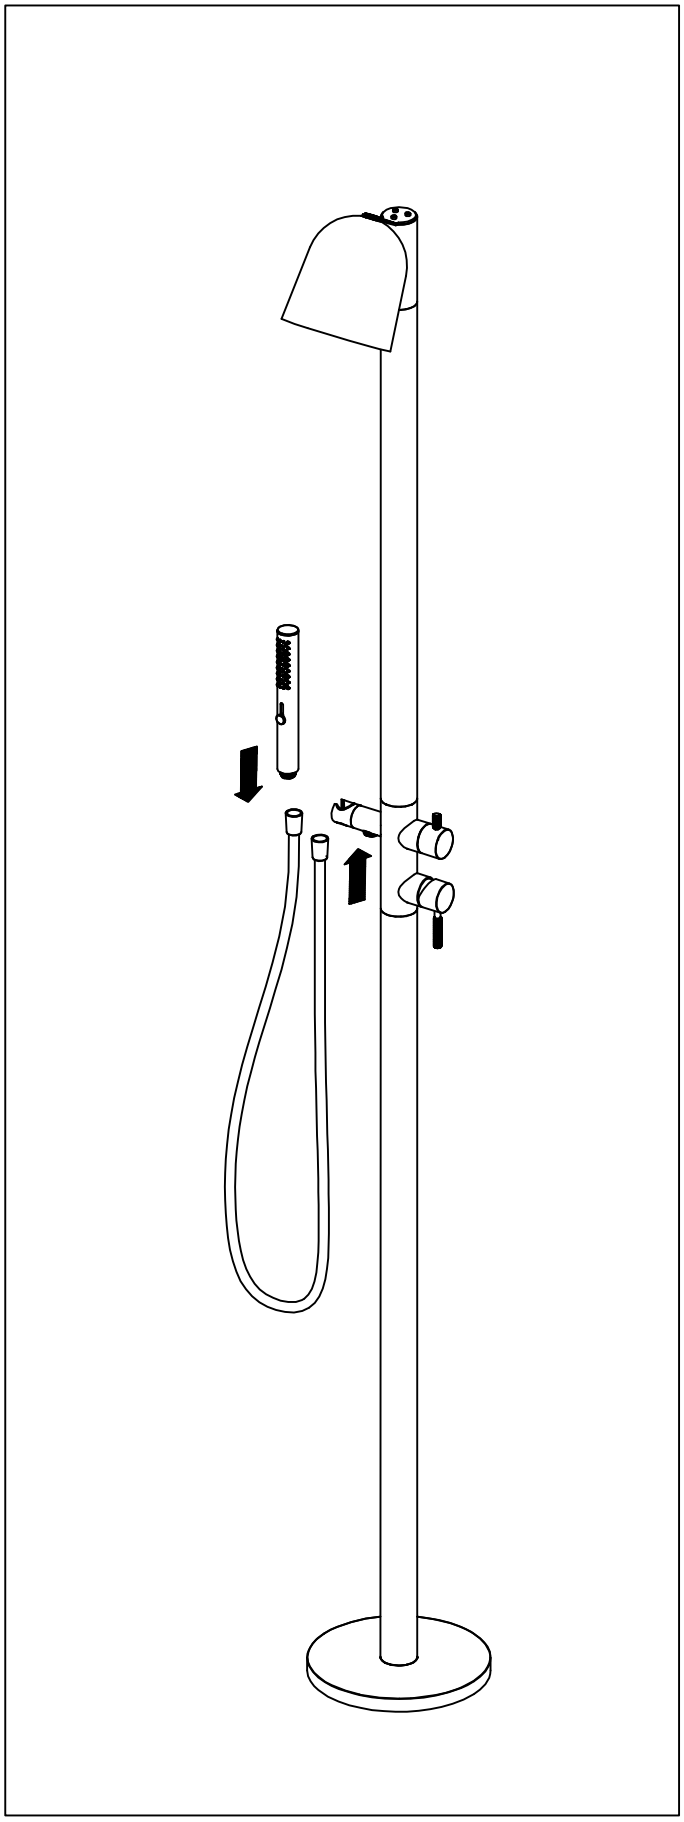

7. Connect the handheld shower

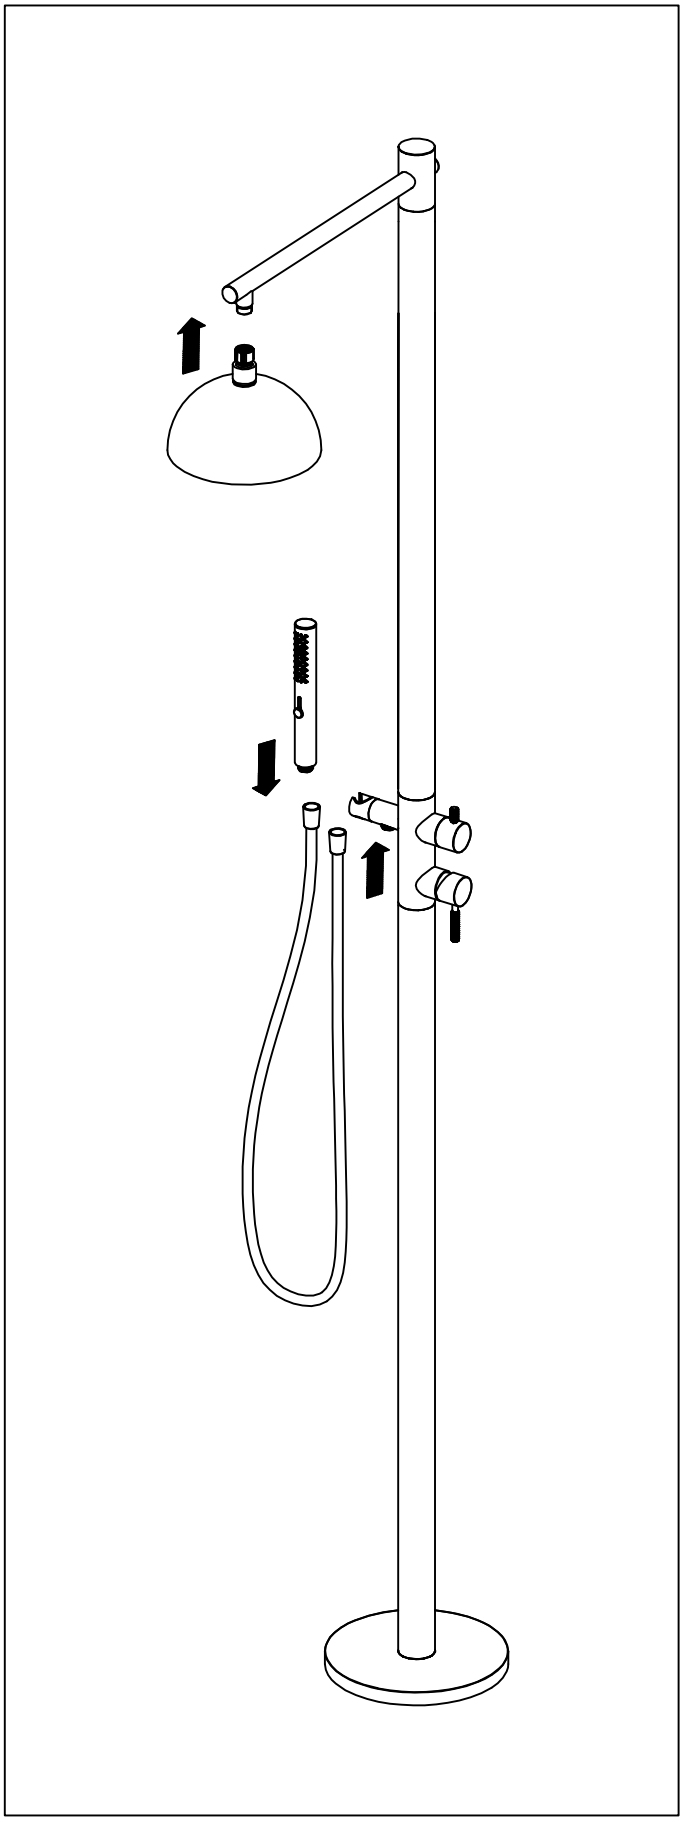

7. Connect the handheld shower and the top shower.