
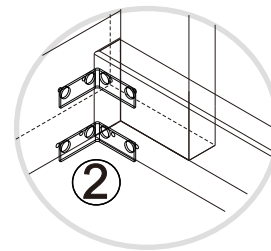


②

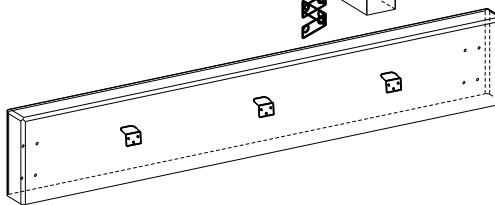

ACCESS CODE	QUANTITIES	ACCESSORY
A	8 Pcs	L-shaped bracket
C	12 Pcs	Small square spacer
M	32 Pcs	30*8MM
N	36 Pcs	40*5MM
	1 Pcs	Hex key
X	12 Pcs	black cotton pad diameter 28MM
Y	2 Pcs	Stand leg Height 22CM
Z	4 Pcs	X2 X2 Leg Installed

STEPS	PLEASE REFER TO THE PICTURES FOR SPECIAL OPERATIONS
①	Install Type C angle irons on the headboard, side rails and footrest, and then paste Type X.
②	Use Type A angle irons to connect the headboard and side rails.
③	Use Type A angle irons to connect the side rails and footrest.
④	Install the stand Y to the folding slat. The stand Y can be adjusted according to the slat.

Note: the 32 pcs Type M bolts are not in the hardware kit. They are already pre-installed in the holes of the frame.

