



ASSEMBLY INSTRUCTIONS

PARTS:

(2) Top/Bottom Piece

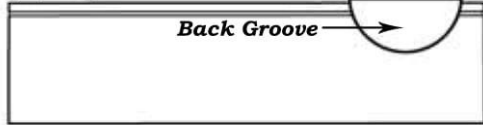

(2) Side Piece

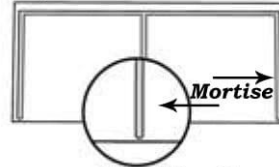

Shelf Piece (Back grooves on both sides)




(2) Back Piece




(12) Hex Screws (1) Allen Wrench




Notice - KEEP BACK GROOVES ALIGNED

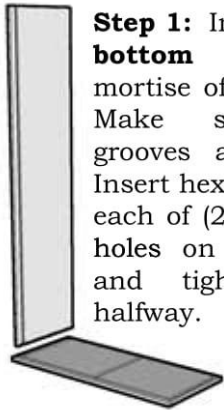


Step 1: Insert edge of **bottom** piece into mortise of **side** piece. Make sure back grooves are aligned. Insert hex screws into each of (2) pre-drilled holes on side **piece** and tighten down halfway.

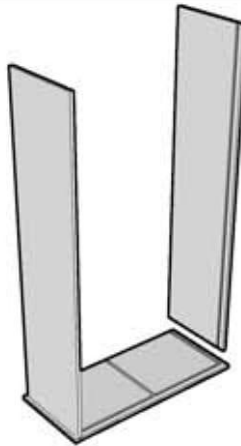


Step 2: Insert edge of **top** piece into opposite mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

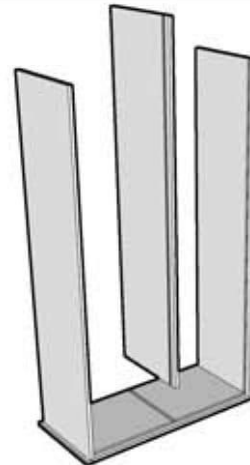


Step 3: Insert edge of **shelf** piece into remaining mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes on **side** piece and tighten down halfway.

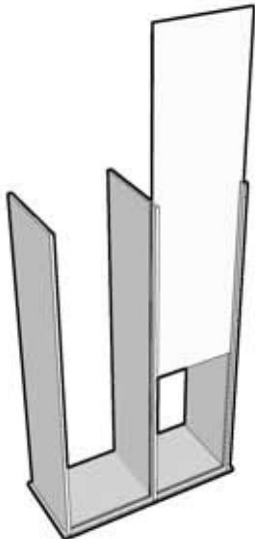


Step 4: Insert sides of **back** piece into back grooves of **shelf** and **top** piece. Slide down until edge rests firmly in back groove of **side** piece.

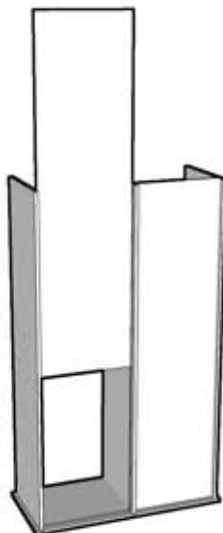

Step 5: Insert sides of remaining **back** piece into back grooves of **shelf** and **bottom** piece. Slide down until edge rests firmly in back groove of **side** piece.

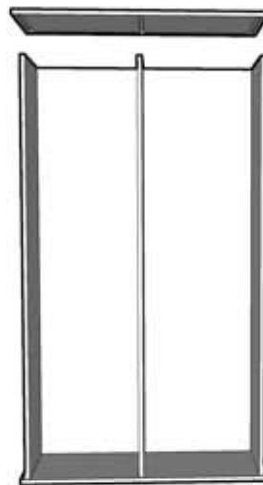

Step 6: Insert edges of assembled pieces into mortises and back grooves of remaining **side** piece. Insert hex screws into each of (6) pre-drilled holes on **side** piece and tighten down halfway.

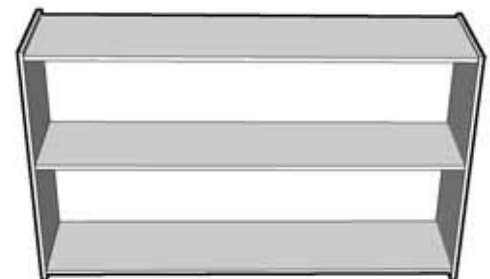

Step 7: Tighten down all screws snugly. DO NOT OVER TIGHTEN. DO NOT DRILL. Rotate unit so that it rests on **bottom** piece and edges of **side** pieces. Assembly is now complete.