

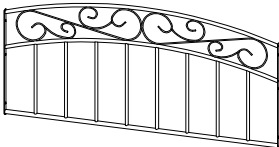




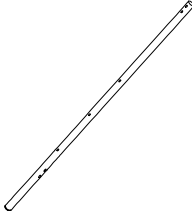
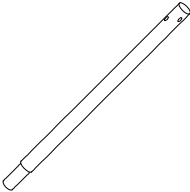
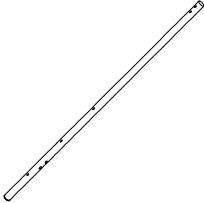

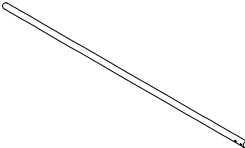

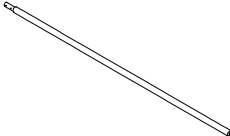




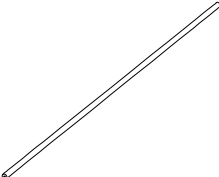



A		G		aa			M8x55	4	
 2PCS		 1PC		bb			M6x55	11	
				cc			M6x35	4	
				dd			M6x30	6	
				ee			M6x12	24	
B		N		ff				16	
 2PCS		 4PCS		gg				4	
				hh				2	
C		O							
 2PCS		 4PCS							
D		P		ii				1	
 2PCS		 2PCS							
E		Q		SPARE		aa			1
 10PCS		 2PCS				bb			1
						cc			1
F		R				dd			1
 3PCS		 2PCS				ee			1
						ff			1
						gg			1
				2/7					


ee		M6x12	12
hh			1

Step 1

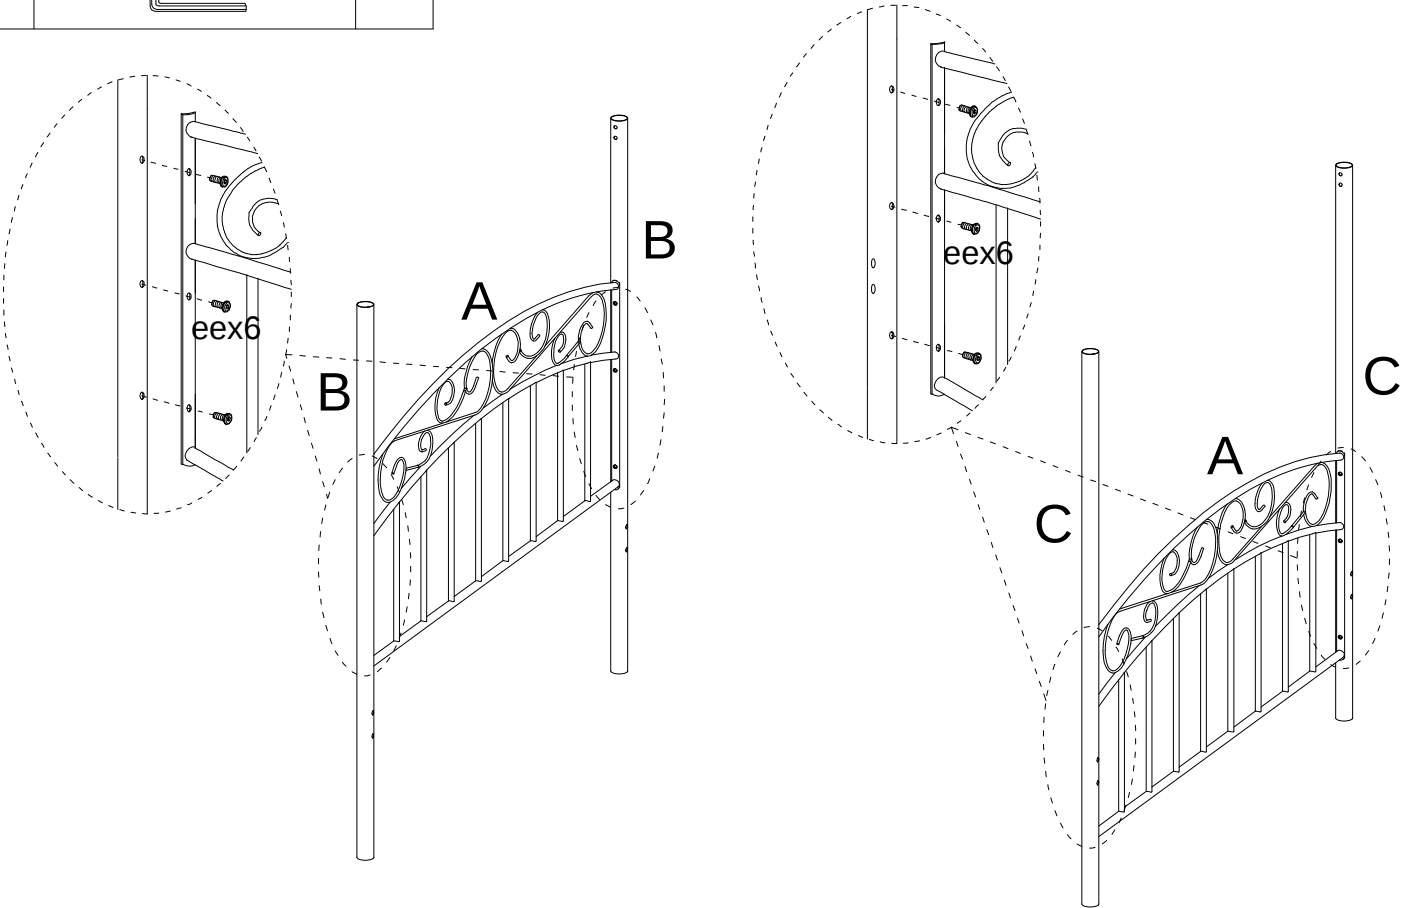


Step 2

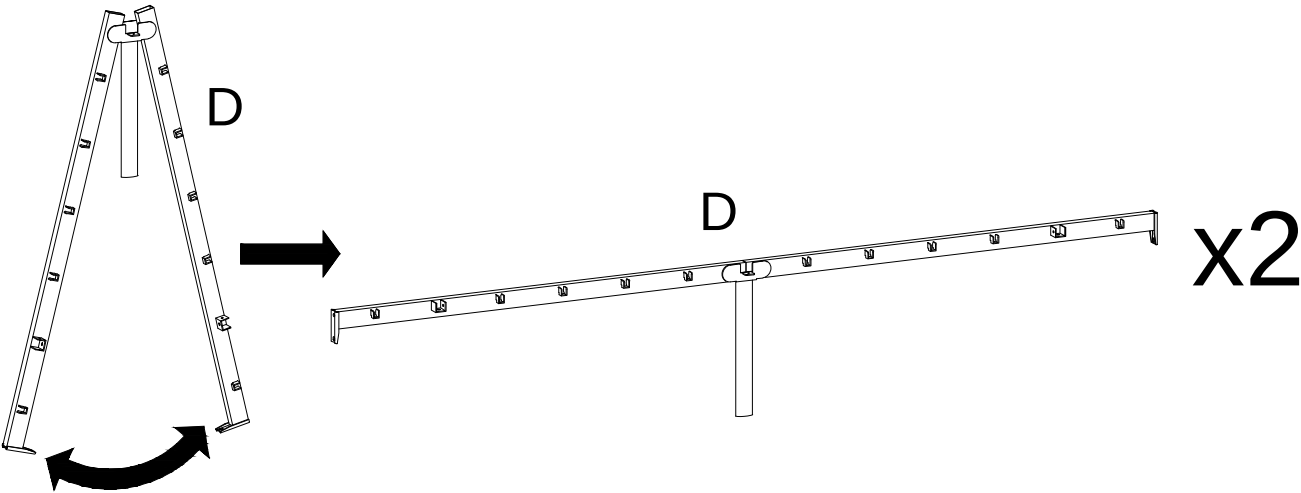

aa		M8x55	4	hh		2
----	--	-------	---	----	--	---


Step 3


cc		M6x35	4
ff			8
gg			4

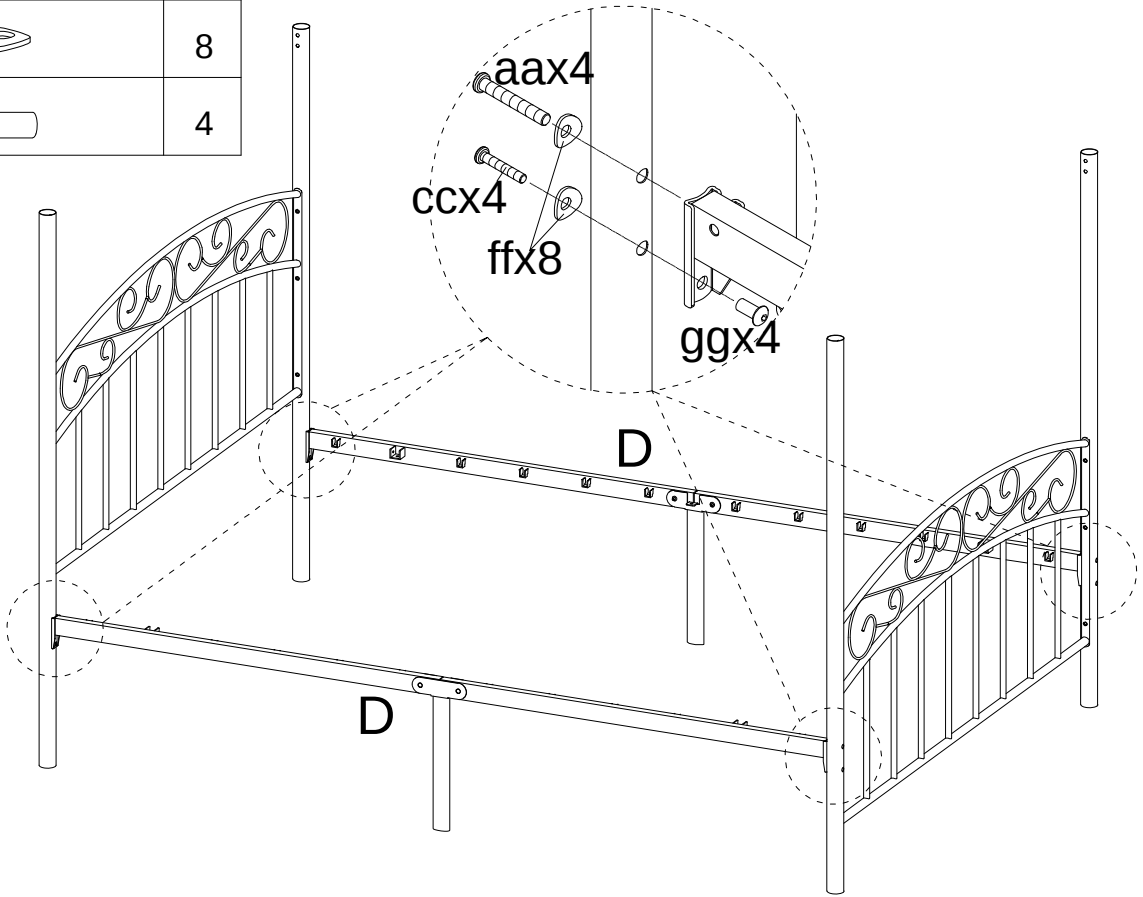



dd		M6x30	6
hh			1


Step 4

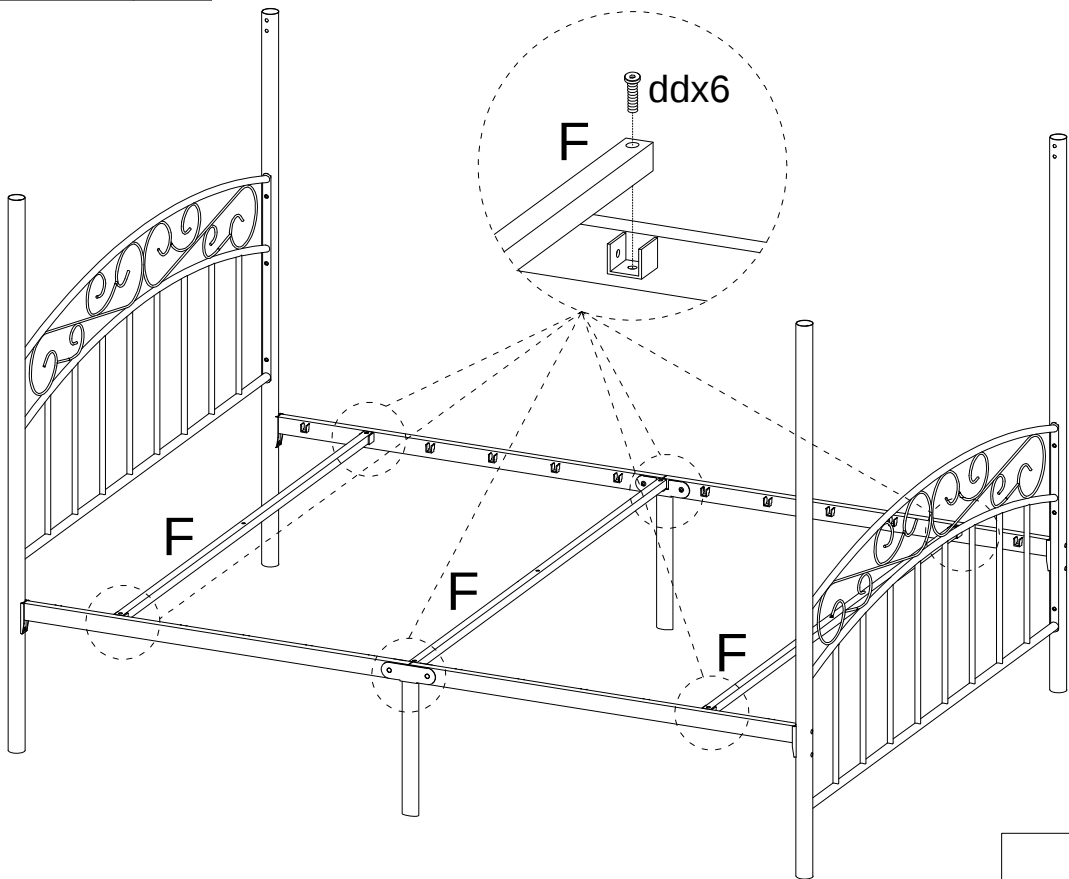

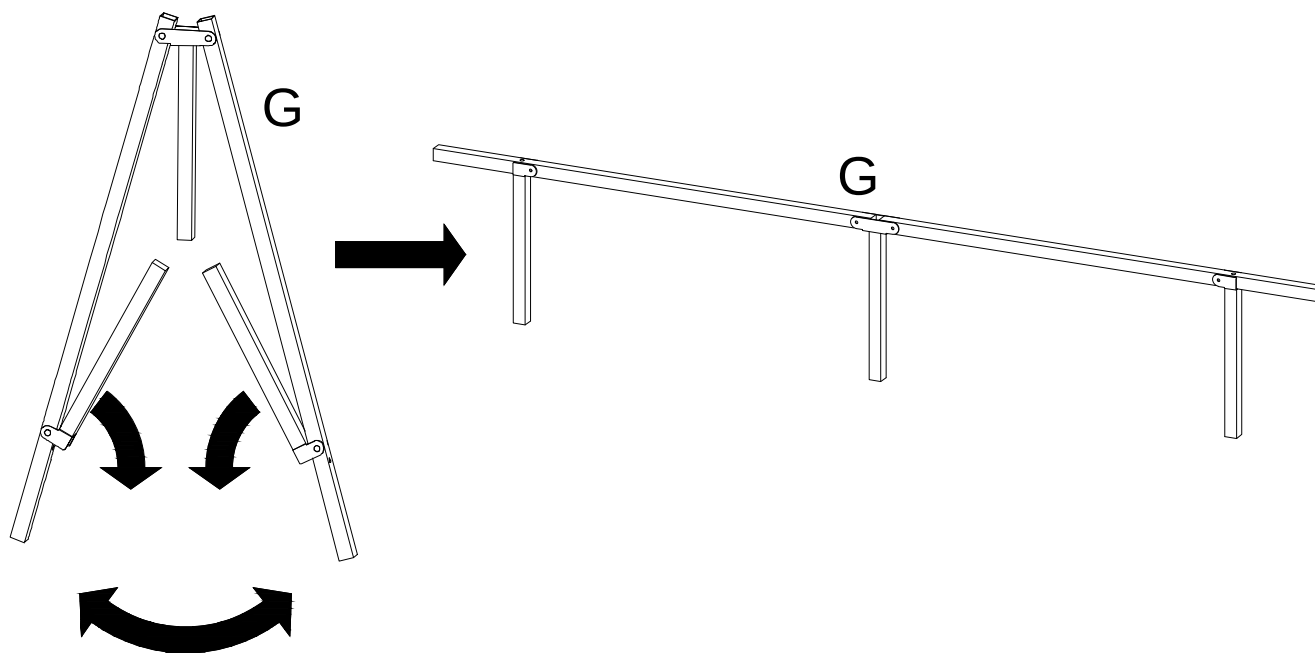



bb		M6x55	3
hh			1
ii			1

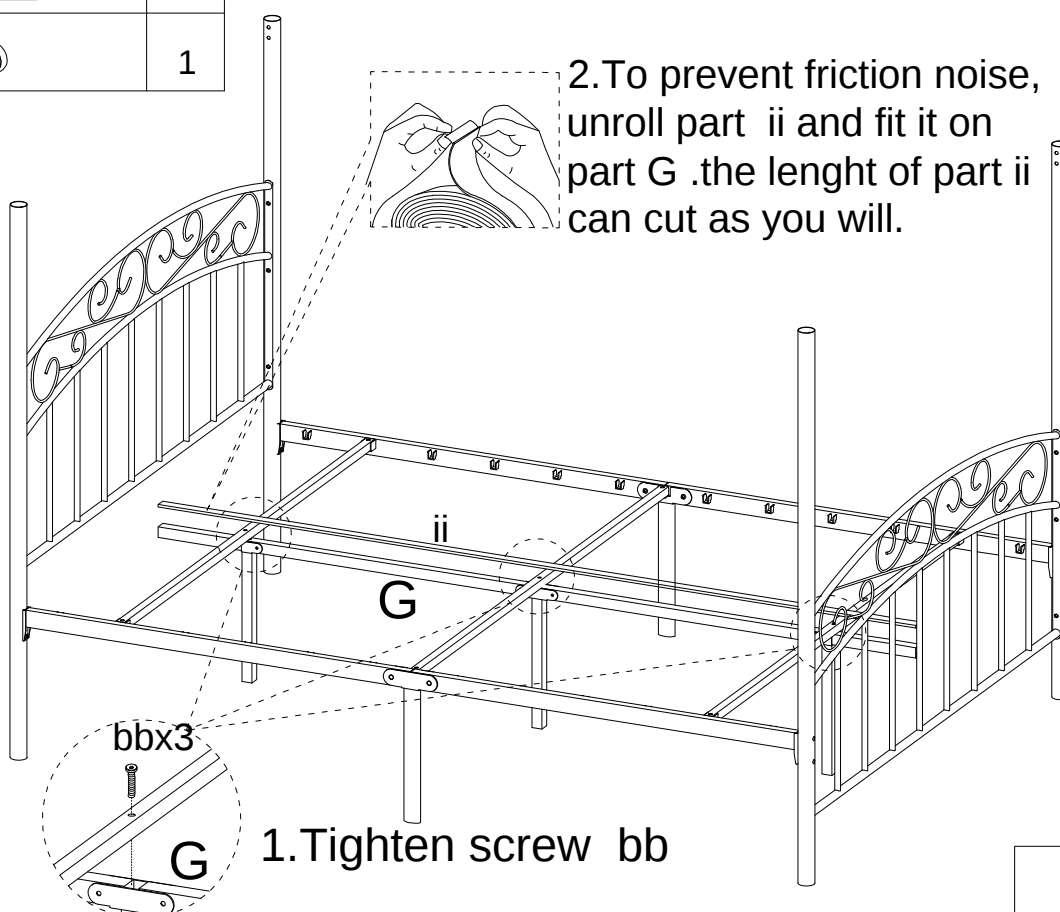

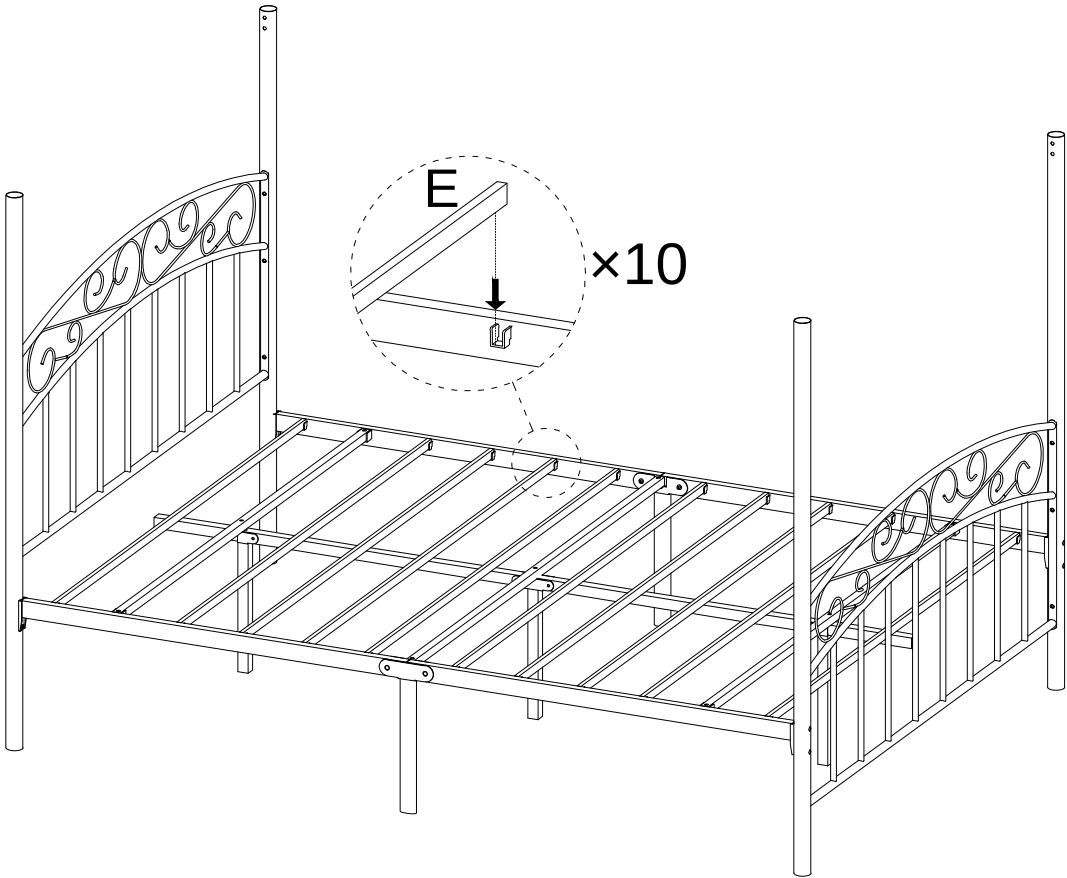

ee		M6x12	8
hh			1

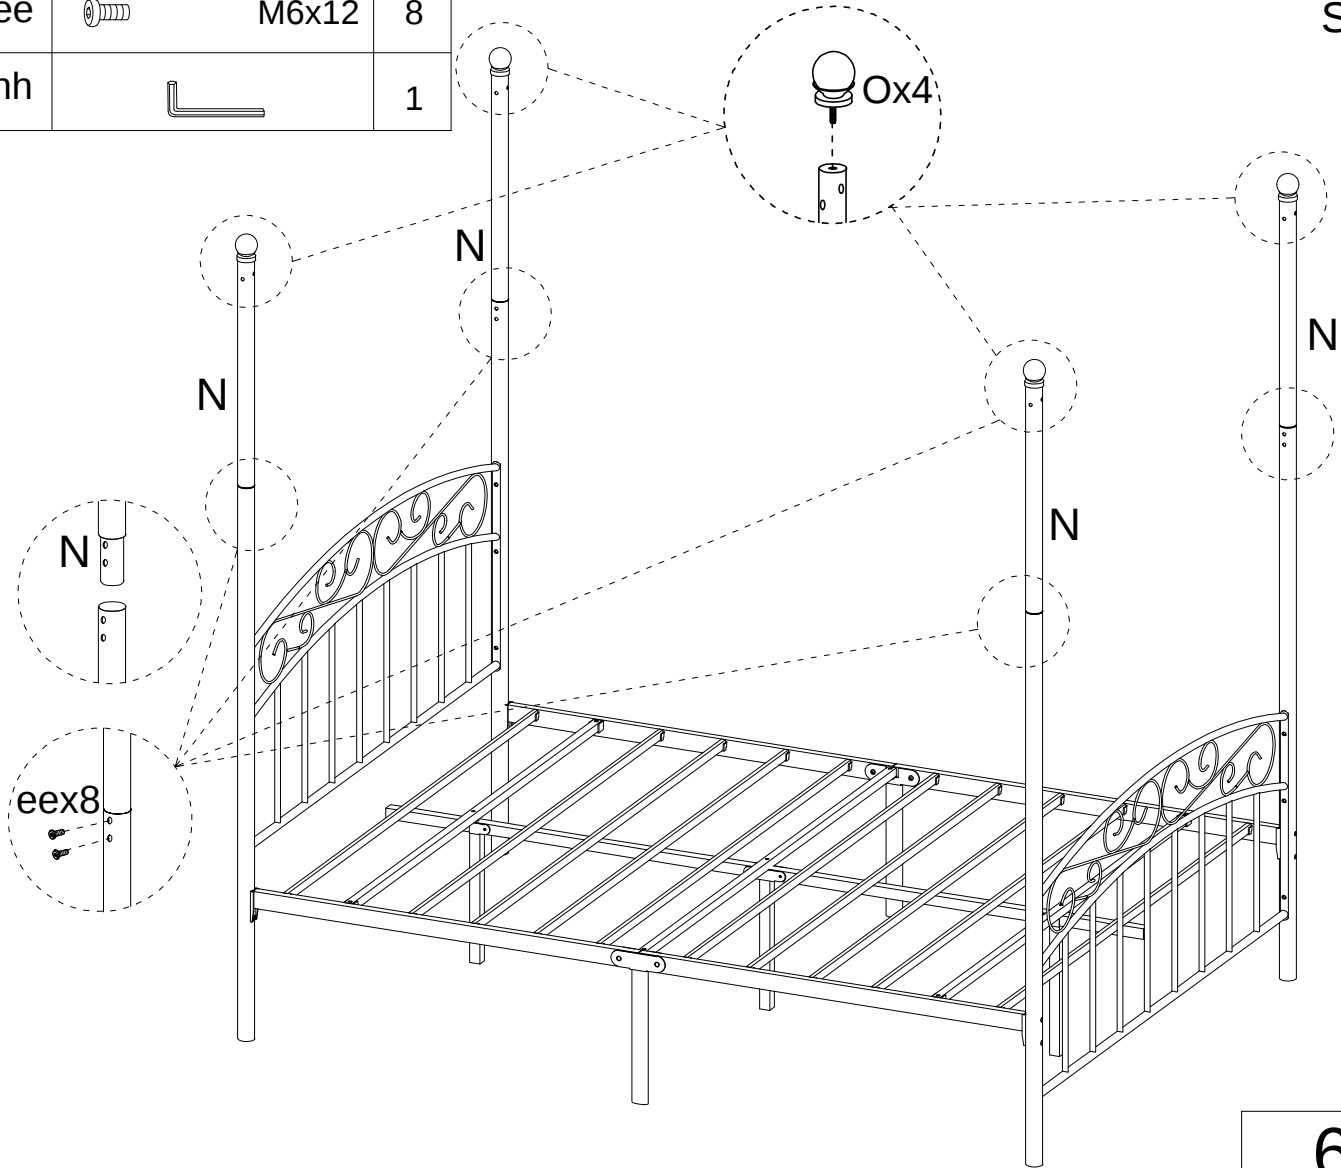

bb		M6x55	8
ee		M6x12	4
hh			1
ff			8

