





# Assembly Instructions


## Storage Cabinets

| A                                                                                 | B1                                                                                | B2                                                                                | F1                                                                                | F2                                                                                | F3                                                                                |  |  |  |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--|--|--|
|  |  |  |  |  |  |  |  |  |
| x1                                                                                | x4                                                                                | x2                                                                                | x6                                                                                | x10                                                                               | x4                                                                                |  |  |  |



note that some of the panels are interlocked in pairs and needs to be separated before installation


| D1                                                                                | D2                                                                                | E1                                                                                | E2                                                                                | T                                                                                 | We                                                                                | Lo                                                                                  |  |  |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--|--|
|  |  |  |  |  |  |  |  |  |
| x1                                                                                | x1                                                                                | x1                                                                                | x1                                                                                | x1                                                                                | x2                                                                                | x2                                                                                  |  |  |

| G                                                                                   | H                                                                                   | I                                                                                   | J                                                                                   | M                                                                                   |  |  |  |  |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--|--|--|--|
|  |  |  |  |  |  |  |  |  |
| x12                                                                                 | x40                                                                                 | x1                                                                                  | x1                                                                                  | x4                                                                                  |  |  |  |  |

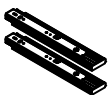
| ①                                                                                   | ②                                                                                   | ③                                                                                   | ④                                                                                   |  |  |  |  |  |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--|--|--|--|--|
|  |  |  |  |  |  |  |  |  |
| x8                                                                                  | x8                                                                                  | x2                                                                                  | x1                                                                                  |  |  |  |  |  |

| ⑩                                                                                   | ⑪                                                                                   | ⑫                                                                                   |  |  |  |  |  |  |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--|--|--|--|--|--|
|  |  |  |  |  |  |  |  |  |
| M4*14<br>x14                                                                        | M3*25<br>x2                                                                         | M4*4<br>x16                                                                         |  |  |  |  |  |  |


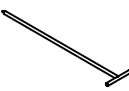
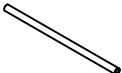
| N1                                                                                  | N2                                                                                  | N3                                                                                  | N4                                                                                  | N5                                                                                  |  |  |  |  |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--|--|--|--|
|  |  |  |  |  |  |  |  |  |
| extension rod<br>x1                                                                 | wrench H5<br>x1                                                                     | wrench H4<br>x2                                                                     | screwdriver<br>x1                                                                   | assist rod<br>x1                                                                    |  |  |  |  |

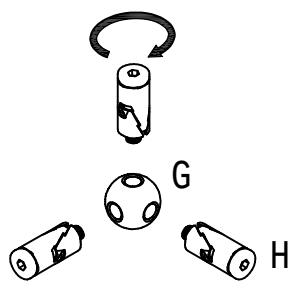

Connector in clockwise, do not tighten the connector to the sphere nut for now. If the connector swells and becomes unable to be inserted into the pole.

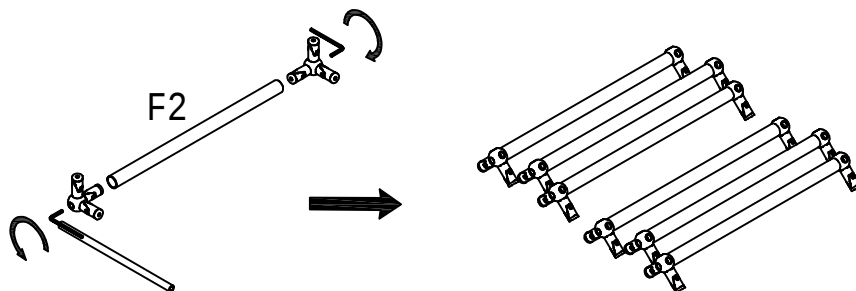


Install poles to 3-way connector using N3 and N4. The gap between the pole and the ball head should be seamless. Repeat 6 times.

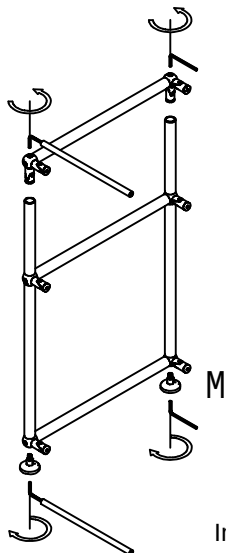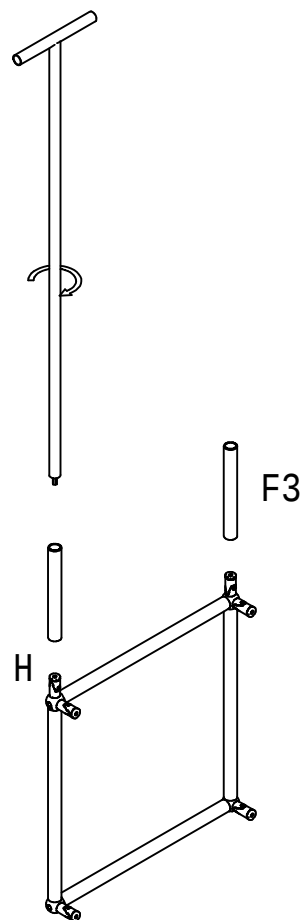
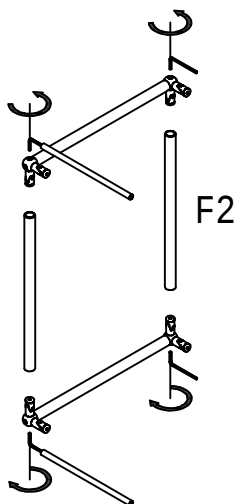


Install feet pad to the sphere using N3.


Add the connector to the sphere and insert the pole, then install pole to connector using N1.

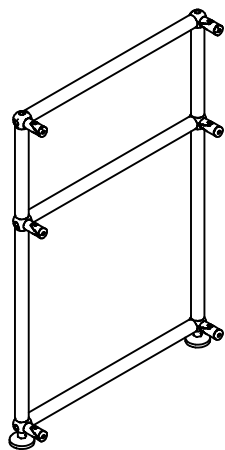


Then we got the frame.

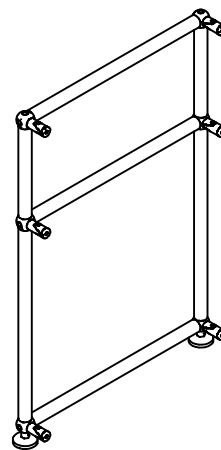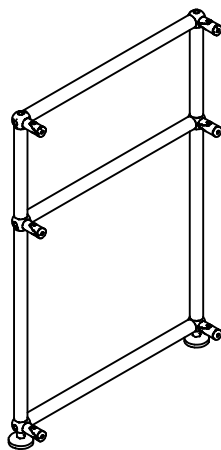


Repeat step 3-5, then we got 2 frame.

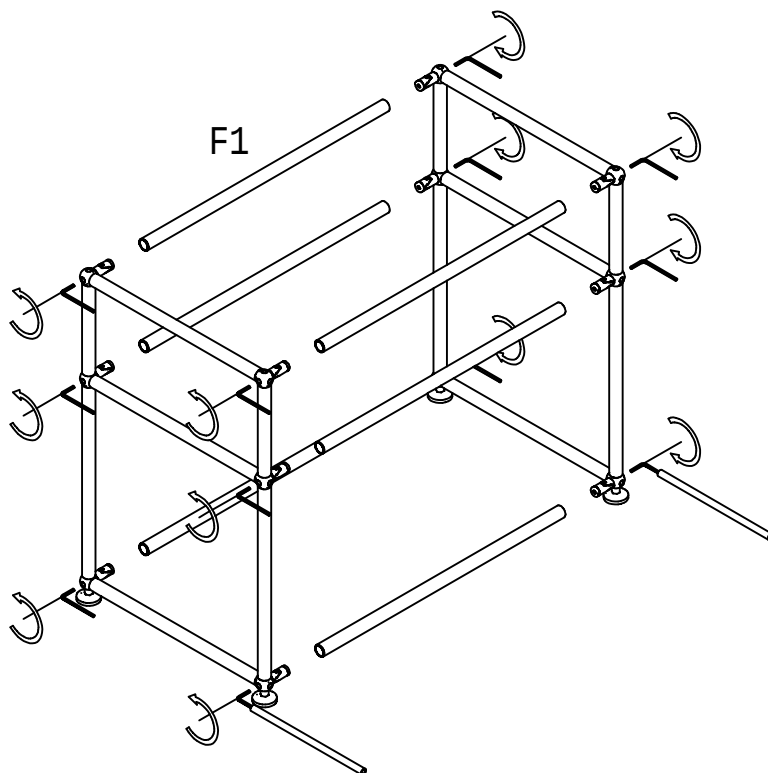

Insert the poles to the connector and install it using N3 & N5. Check the entire frame to ensure it is square and level.

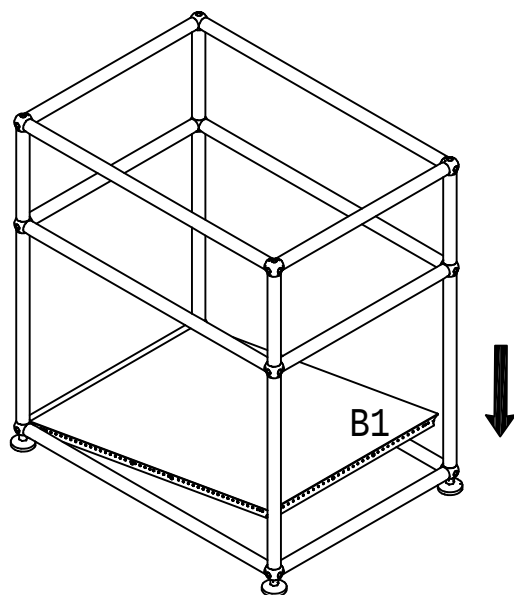


Hold the panel horizontally and align it with the vacant space.  
Then gently push 2 adjacent corners down, once done,  
do the same on the other 2 corner.


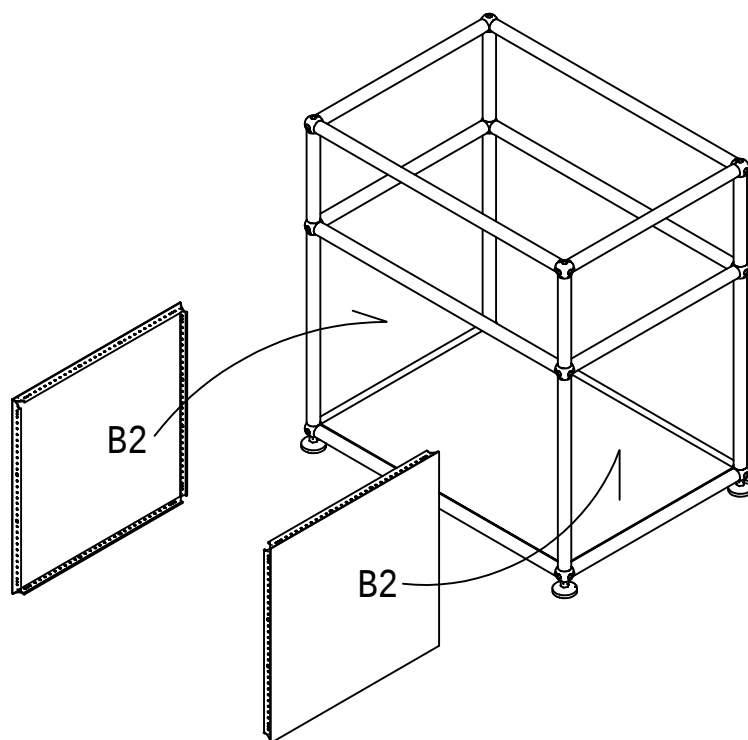


Hold the panel horizontally and align it with the vacant space.  
Then gently push 2 adjacent corners down, once done,  
do the same on the other 2 corner.

Note that this step does not require removing the panel from the farm.


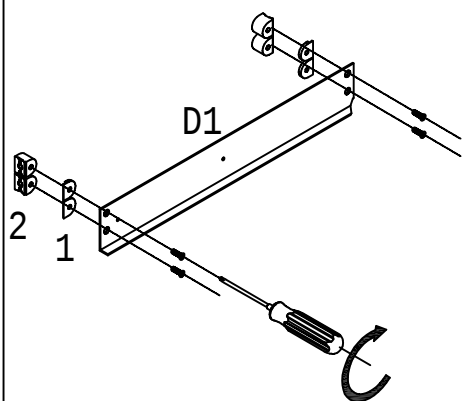


Fix with the screw M4\*14.do not tighten.

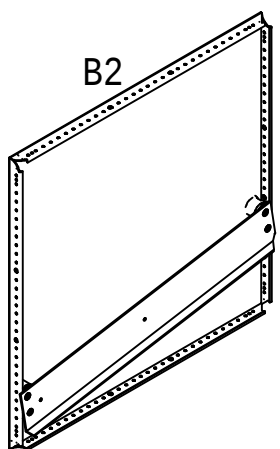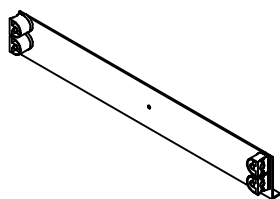


B2

Assemble parts in order within the bend.

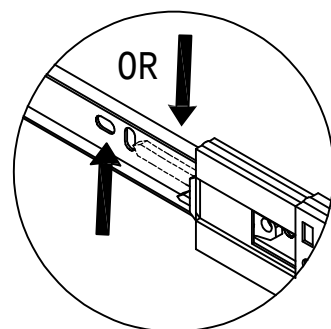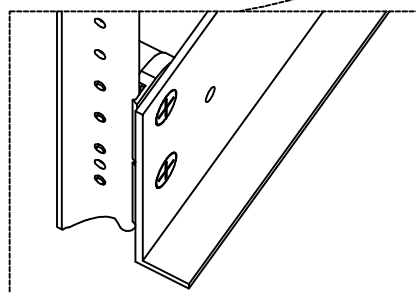


4



Fix with the screw M4\*4.

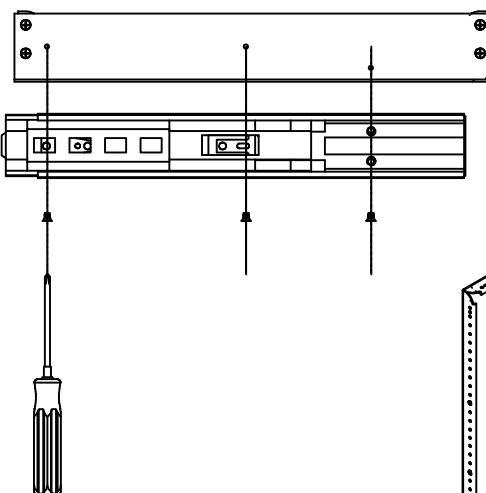



The protrusion on the Half circle metal pillar should be inserted into the hole on the panel.

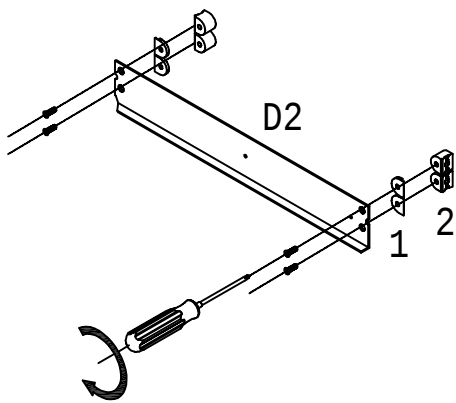



Fix with the screw M4\*14.do not tighten.

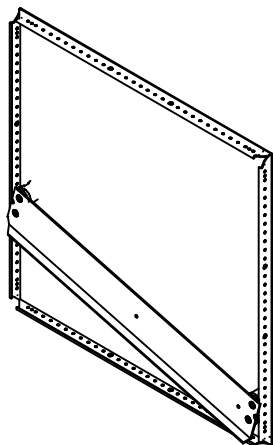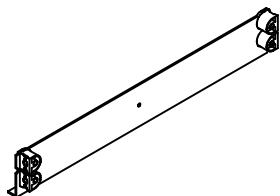




Assemble parts in order within the bend.

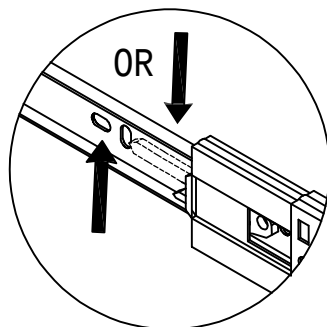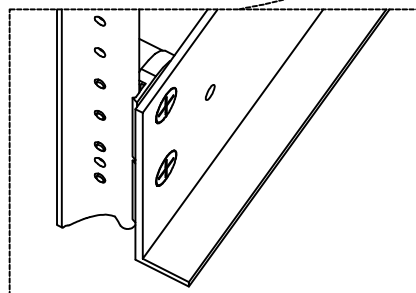


Fix with the screw M4\*4.

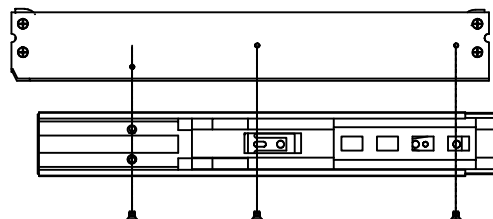
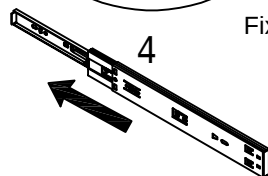


The protrusion on the Half circle metal pillar should be inserted into the hole on the panel.

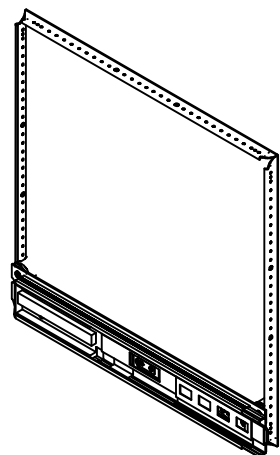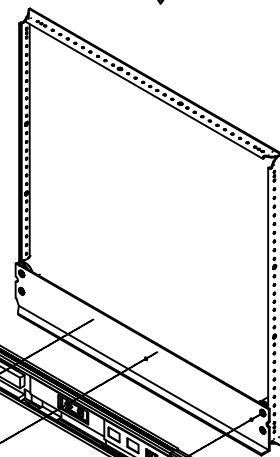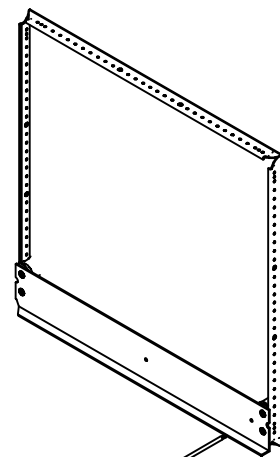


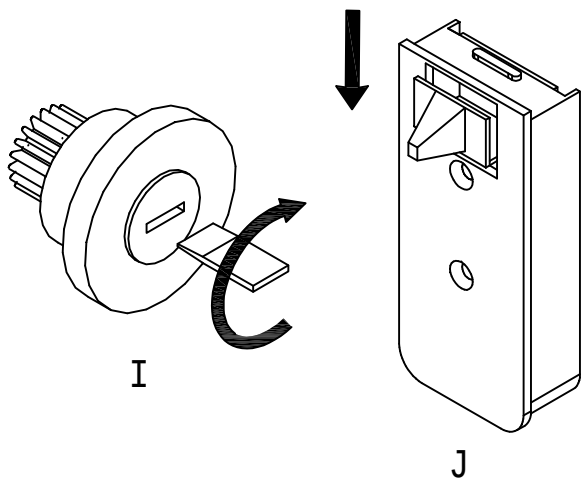


Insert something thin like a coin into the lock hole and turn it to the end right.

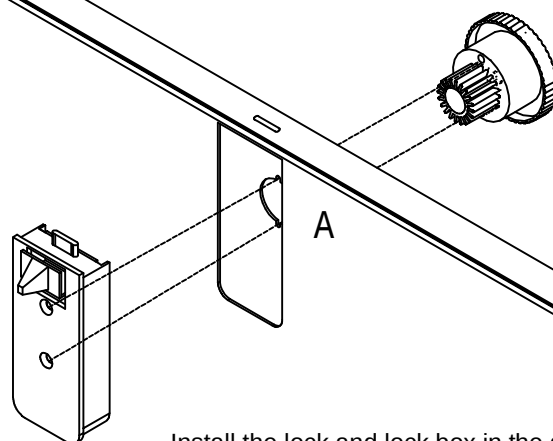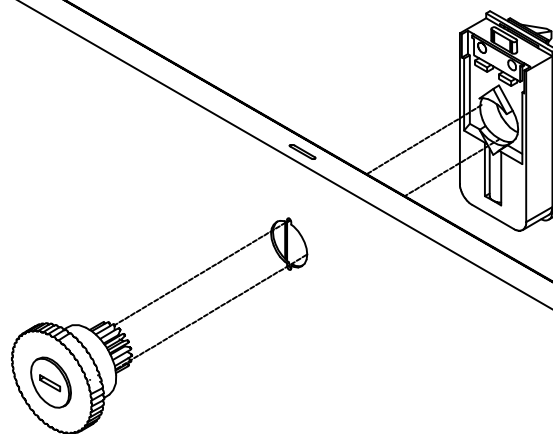


Install the lock and lock box in the door.

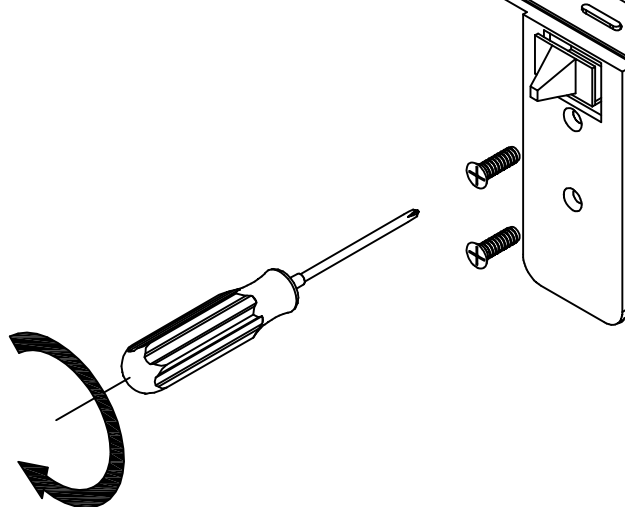


Align the holes as shown fix with the screw M3\*25. Repeat all the doors.

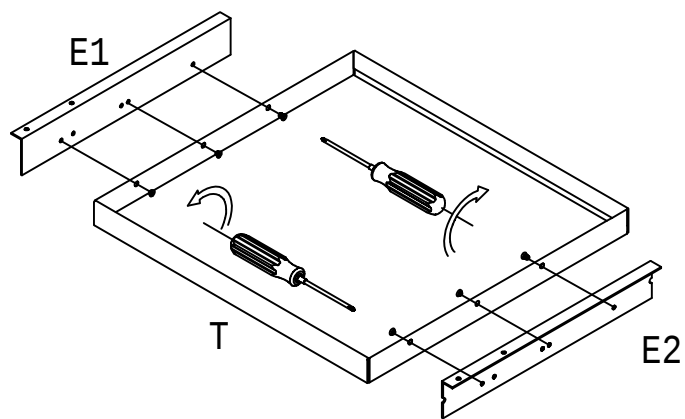

Fix with the screw M4\*4.

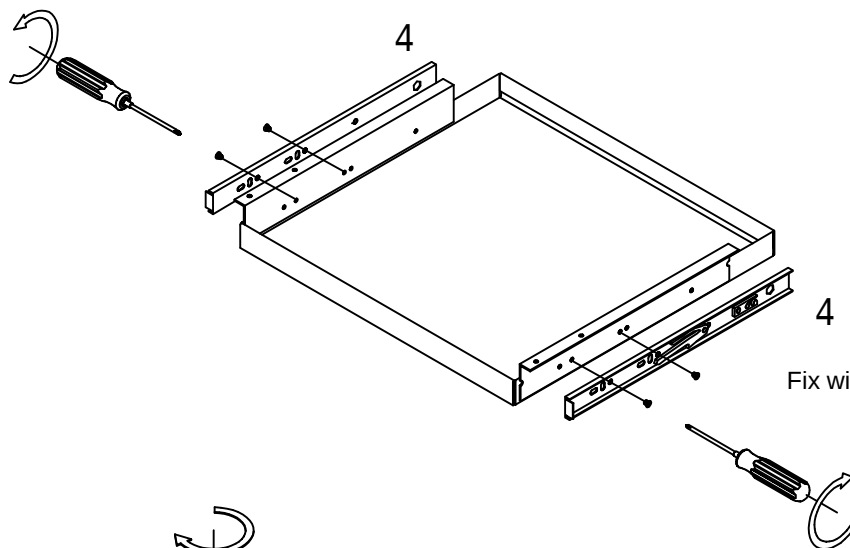


Fix with the screw M4\*4.

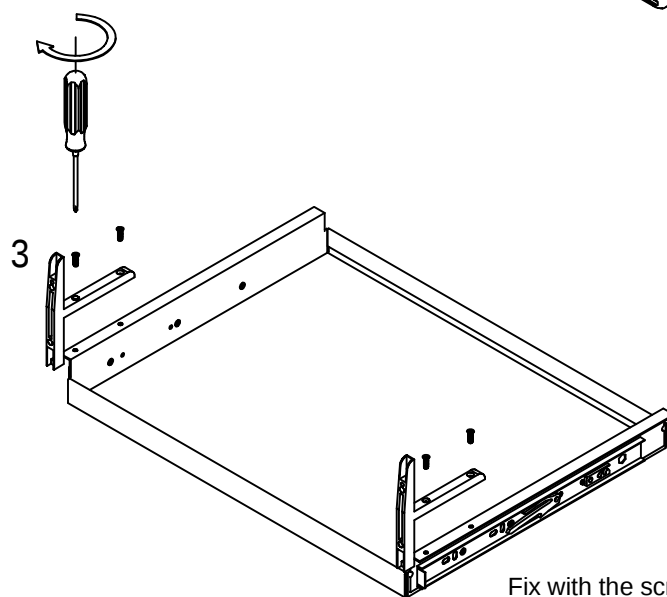




Fix with the screw M4\*14.

A

Align the slot of the door panel and insert it.


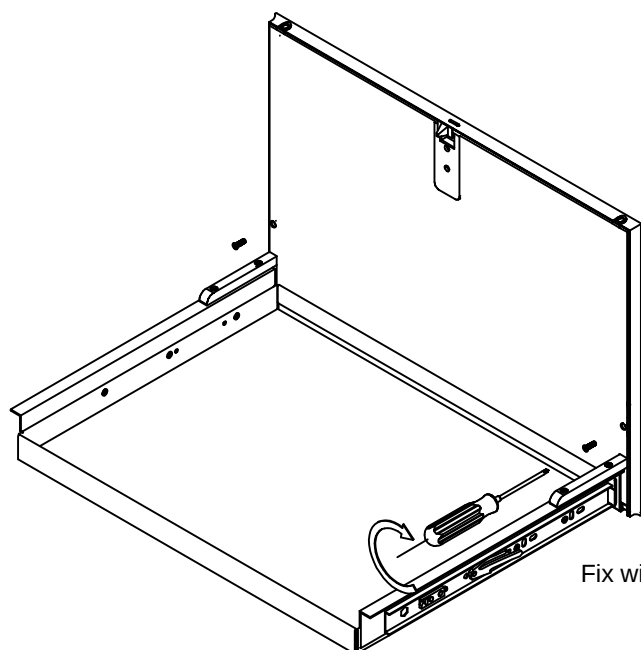


Fix with the screw M4\*14.

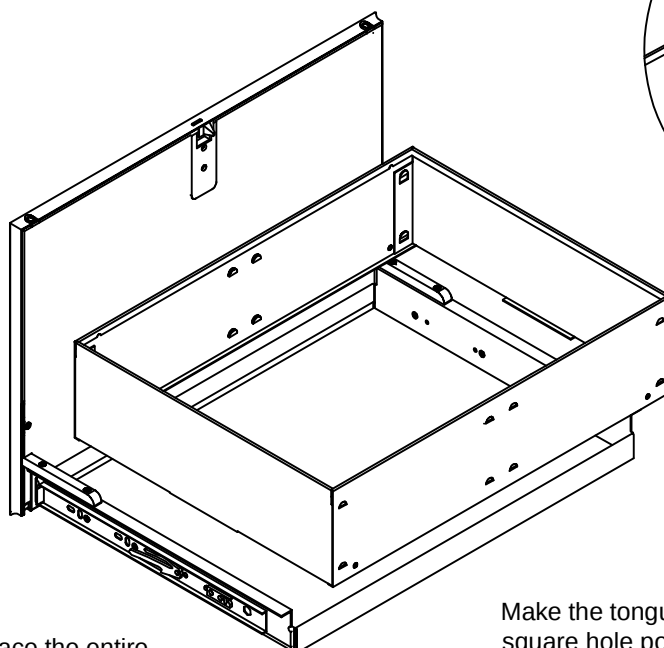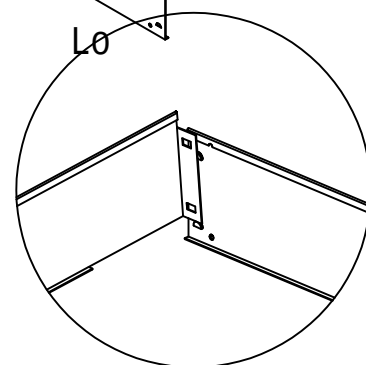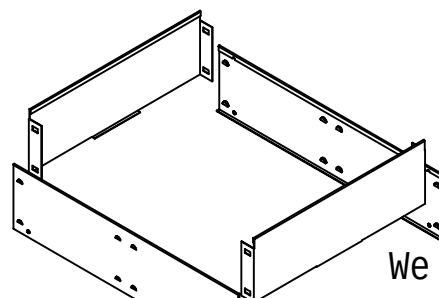


Carefully lift the long piece and place the entire tailboard into the tray to clamp it in place.


Make the tongue mold grip the corresponding square hole position. As shown on the right.

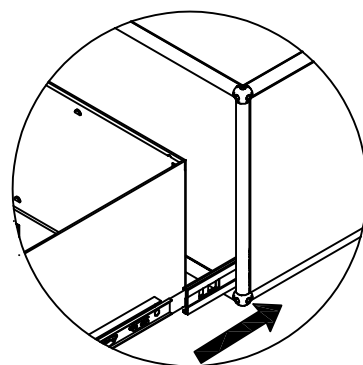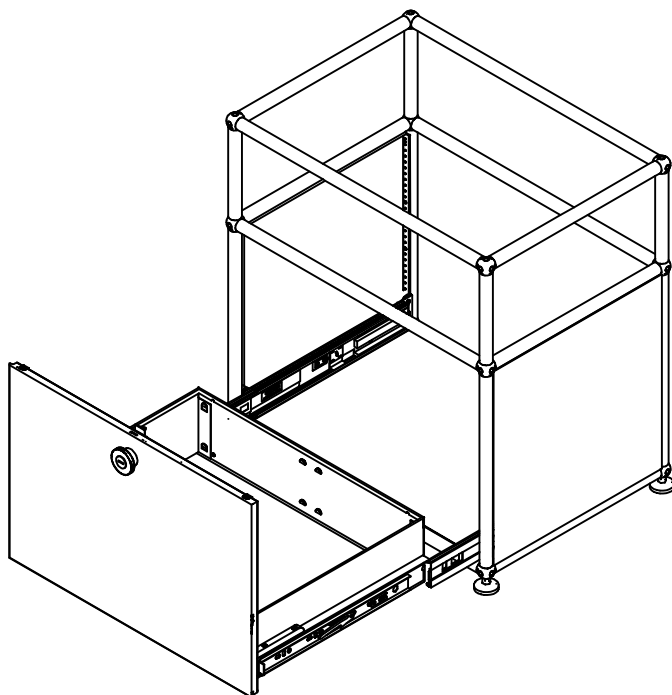


Push the drawer.  
The key point is to ensure that the slide rail slot is aligned and pushed in.  
If it gets stuck push it back and forth a few times.

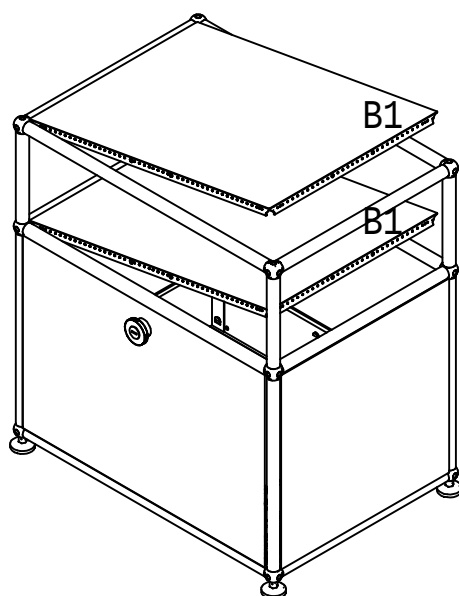

Hold the panel horizontally and align it with the vacant space.  
Then gently push 2 adjacent corners down, once done,  
do the same on the other 2 corner.

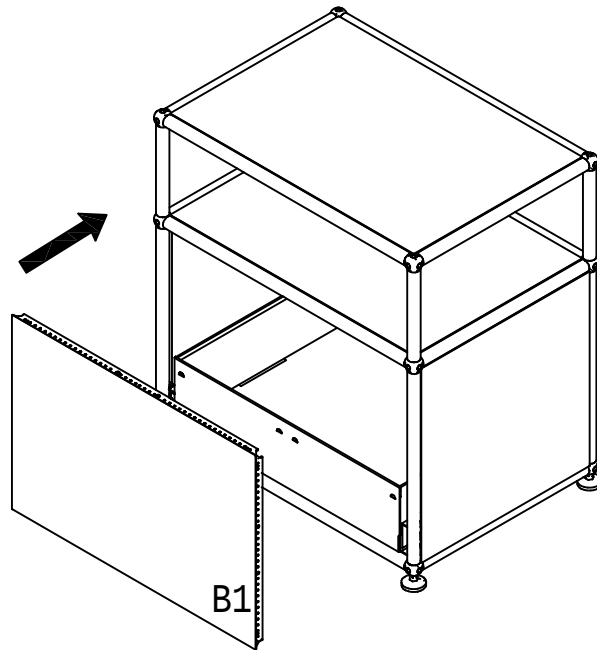

Hold the panel horizontally and align it with the vacant space.  
Then gently push 2 adjacent corners down, once done,  
do the same on the other 2 corner.

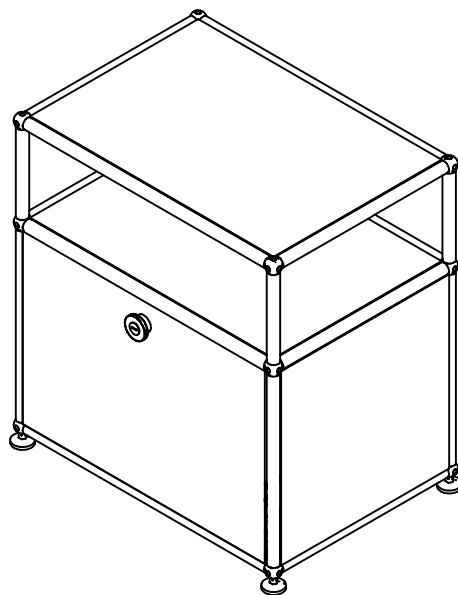

Congratulations to you.  
The cabinet installation completed.  
Thank you for your purchase.

by JIAJUN