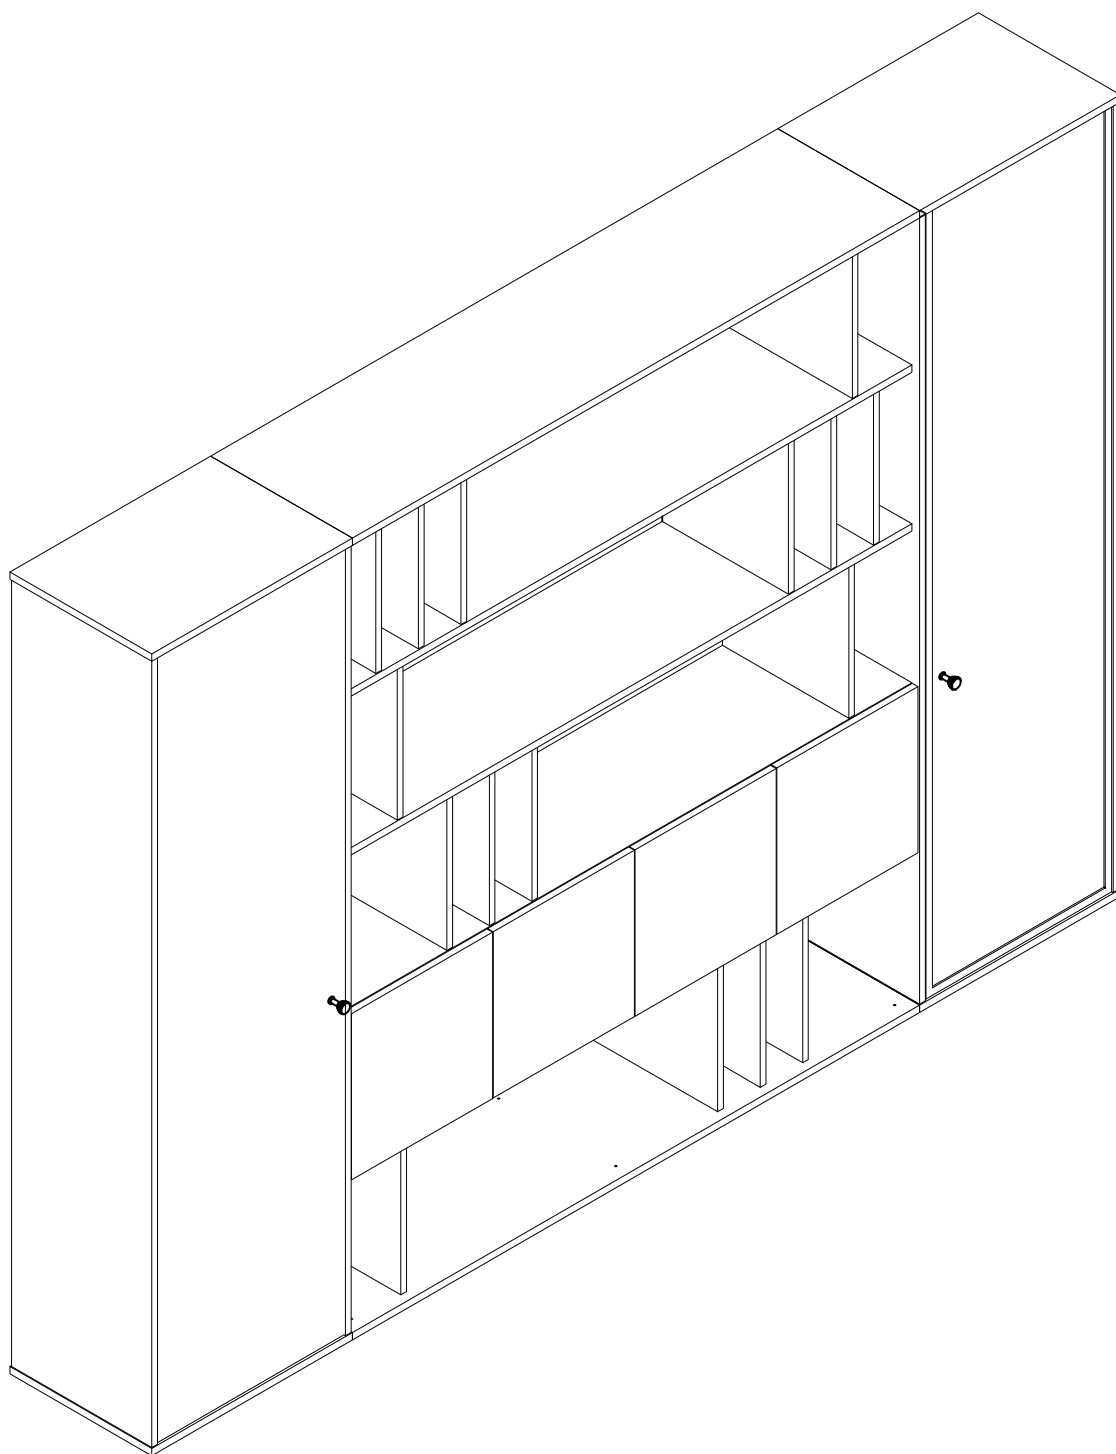




ASSEMBLY INSTRUCTIONS

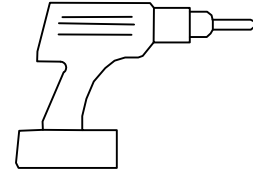
INSTALLATION TIPS



- Please read the instructions carefully before installation.
- After reading, keep them properly for future use.



Please prepare the following tools

- 1.Electric drill (optional, improves efficiency)
- 2.Please use power tools reasonably to avoid injuries.




Assembly Recommendations:

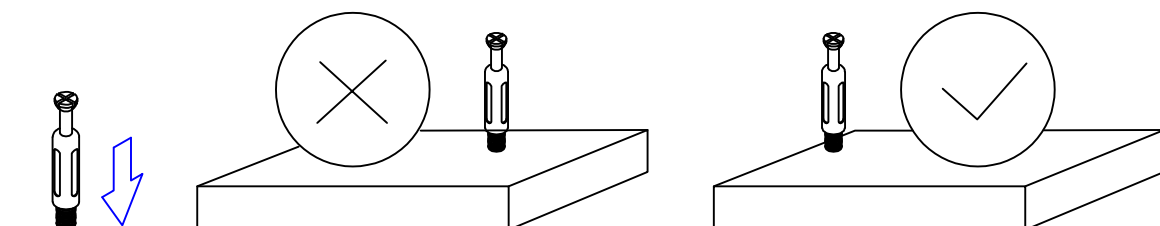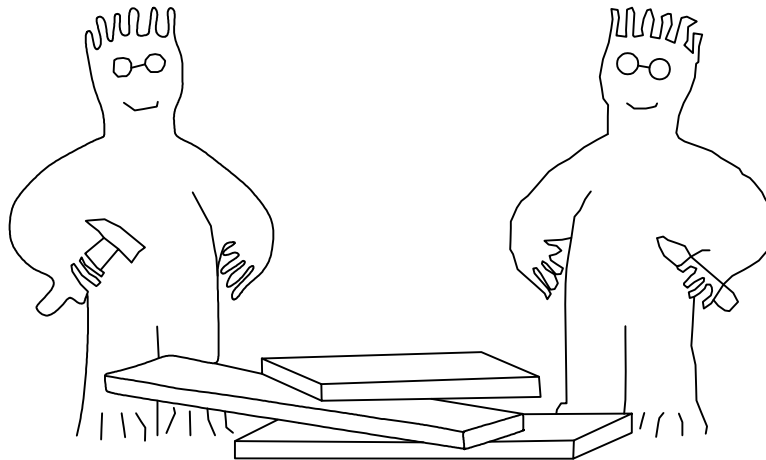- 1.It is recommended that two people work together to install for higher installation efficiency.
- 2.Improve the safety of the assembly process and better complete the alignment and lifting operations.



INSTALLATION INSTRUCTIONS

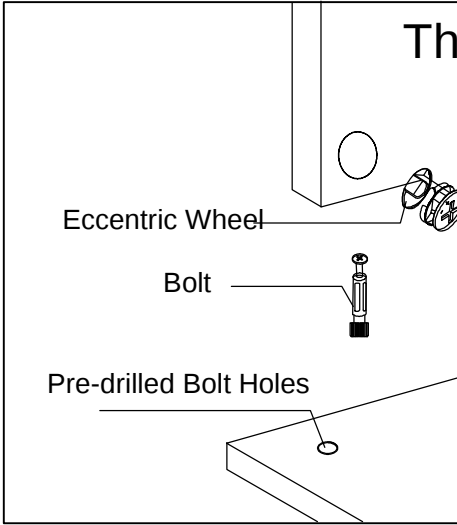

Eccentric Wheel

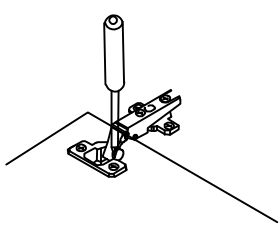
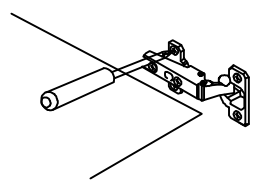
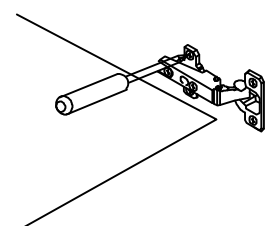
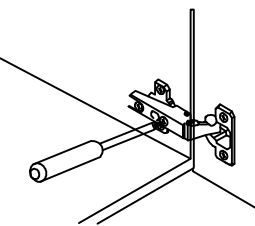
Bolt

Pre-drilled Bolt Holes



Three-in-One Connector Instructions:

1. Use a screwdriver or a power tool to install screws (at least 10mm deep) at the indicated positions and panels.
2. Screw the bolts into the pre-installed inserts.
3. Insert the assembled bolts into the corresponding holes on the other panel, then press the eccentric wheel into the 15mm diameter hole on the side with the hole alignment.
4. Use a Phillips screwdriver to tighten the eccentric wheel clockwise.













Hinge Installation & Adjustment Instructions:

 Attach the Hinge to the Cabinet	 Install the Hinge on the Door
 Adjust the Door Height	 Adjust the Door Gap Alignment








ACCESSORIES LIST

① X1 	② X2 	③ X1 
---	---	---

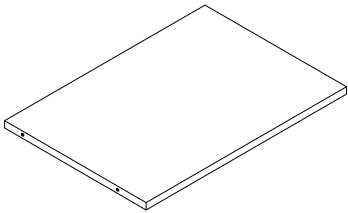
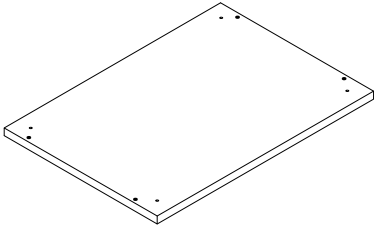
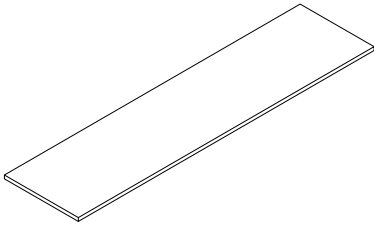
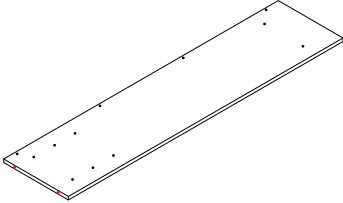
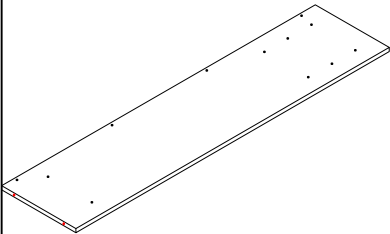
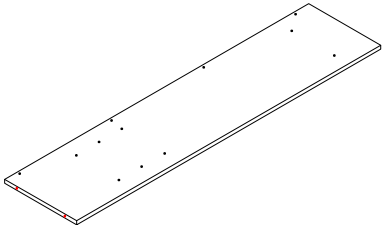
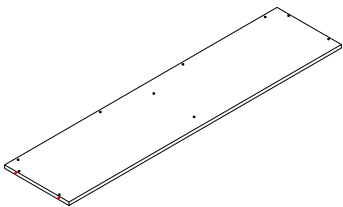
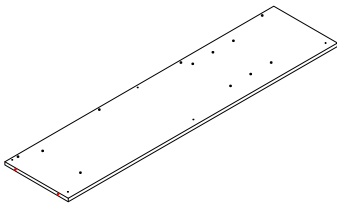
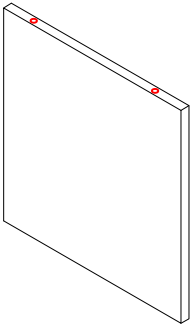
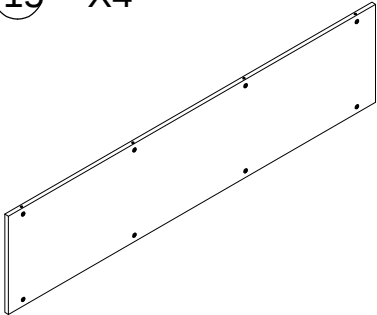
ACCESSORIES LIST

④ X1 	⑤ X1 	⑥ X2 
⑦ X2 	⑧ X1 	⑨ X1 
⑩ X1 	⑪ X1 	⑫ X1 
⑬ X1 	⑭ X16 	⑮ X4 

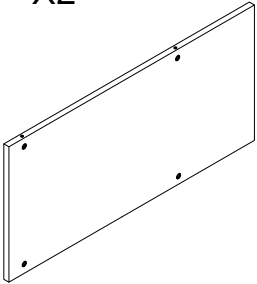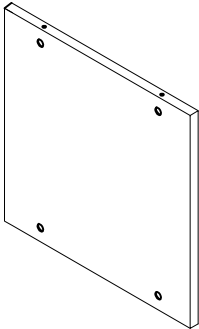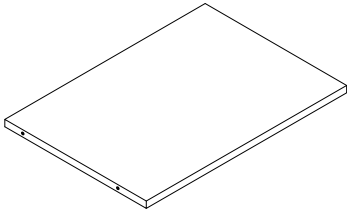

ACCESSORIES LIST

16 X2 	17 X3 	18 X5 
19 X1 	20 X2 	21 X2 
22 X1 		

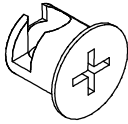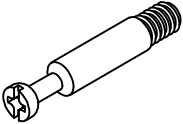ACCESSORIES LIST



Ⓐ X92 	Ⓑ X92 	Ⓒ X20 
Ⓓ X20 	Ⓔ X14 	Ⓕ X1 
Ⓖ X4 	Ⓗ X4 	Ⓘ X20 
Ⓙ X64 	Ⓚ X1 	Ⓛ X3 

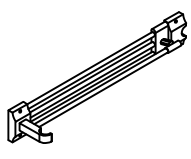
ACCESSORIES LIST

(M) X3 	(N) X4 
---	---

INSTALLATION STEPS

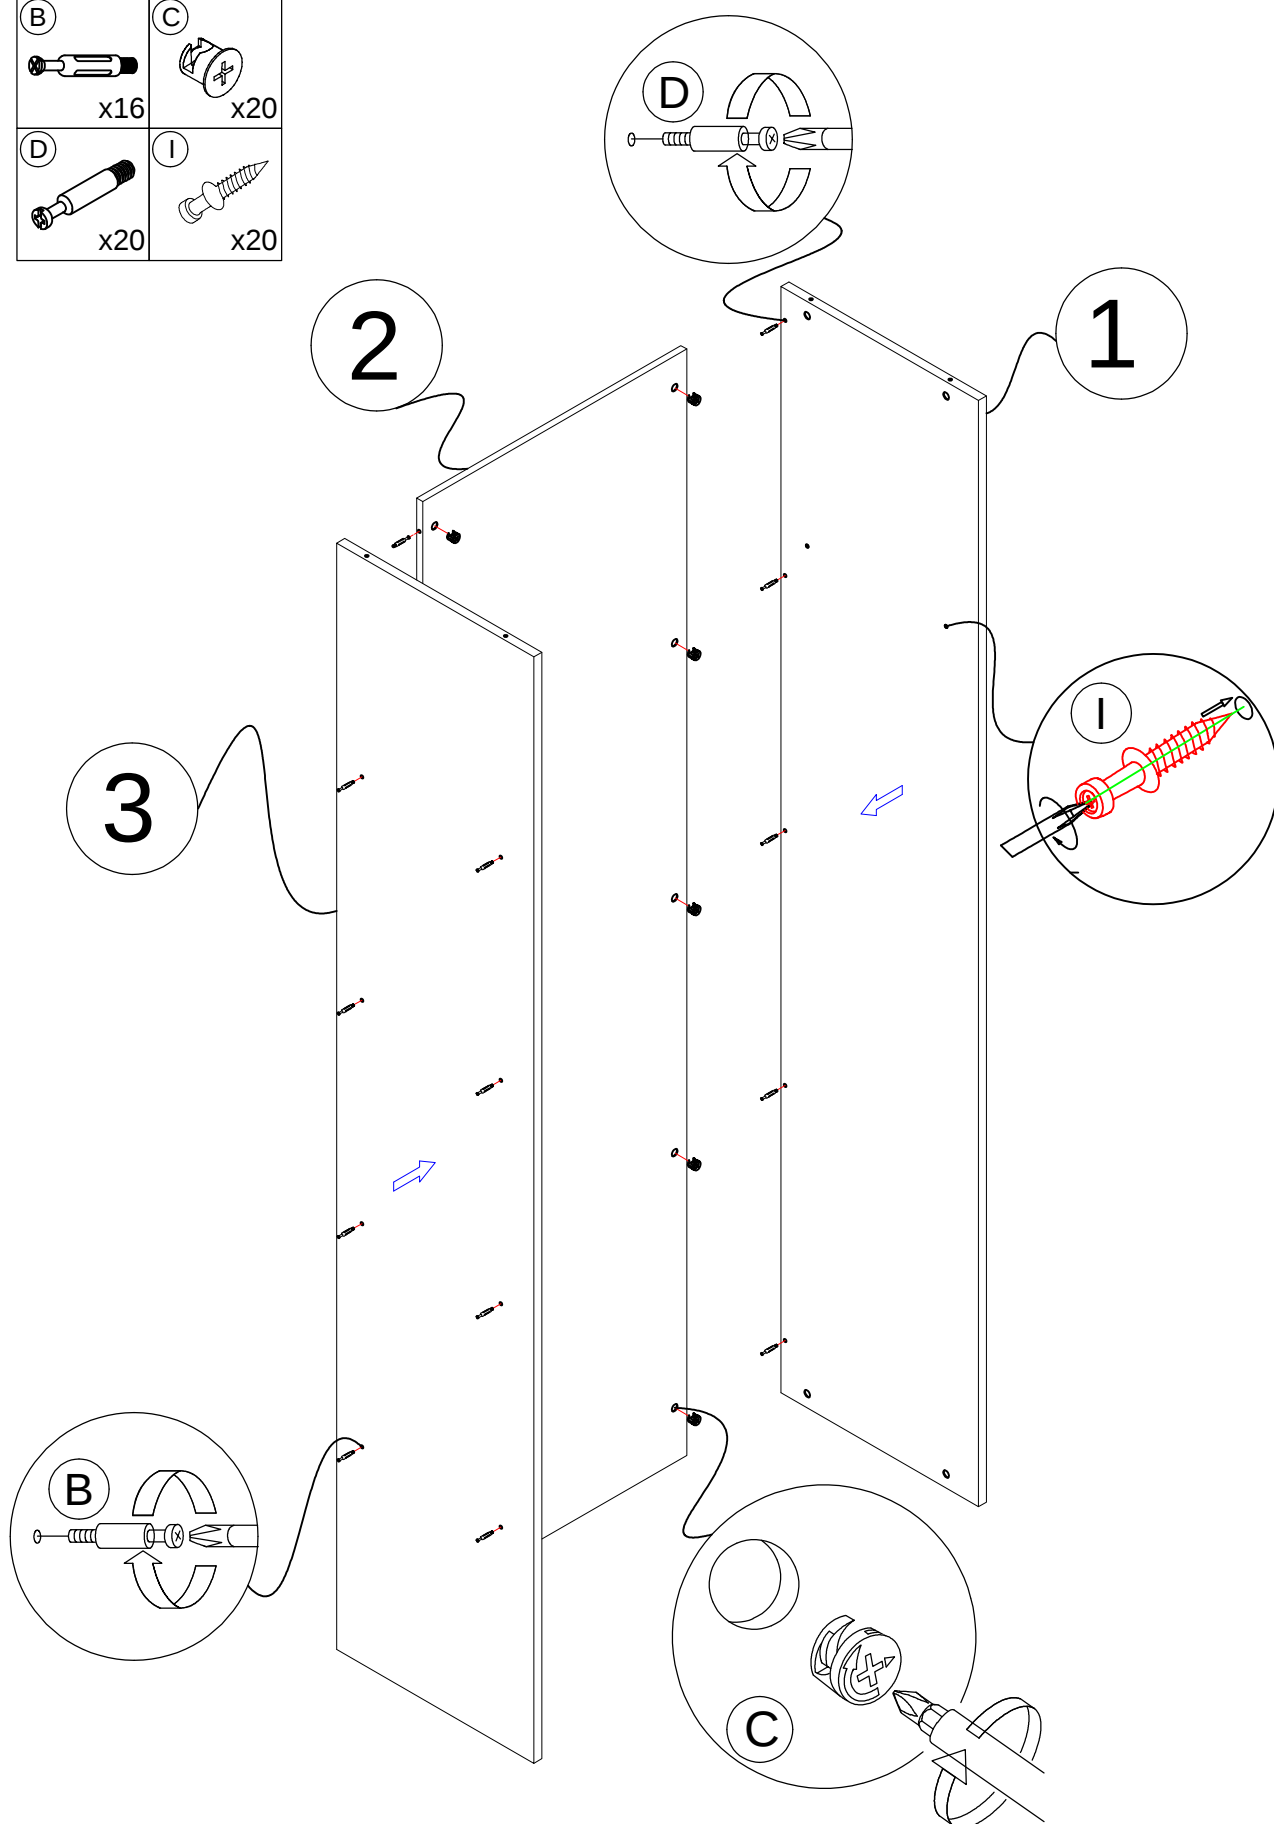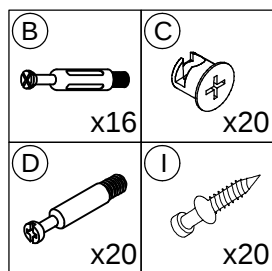
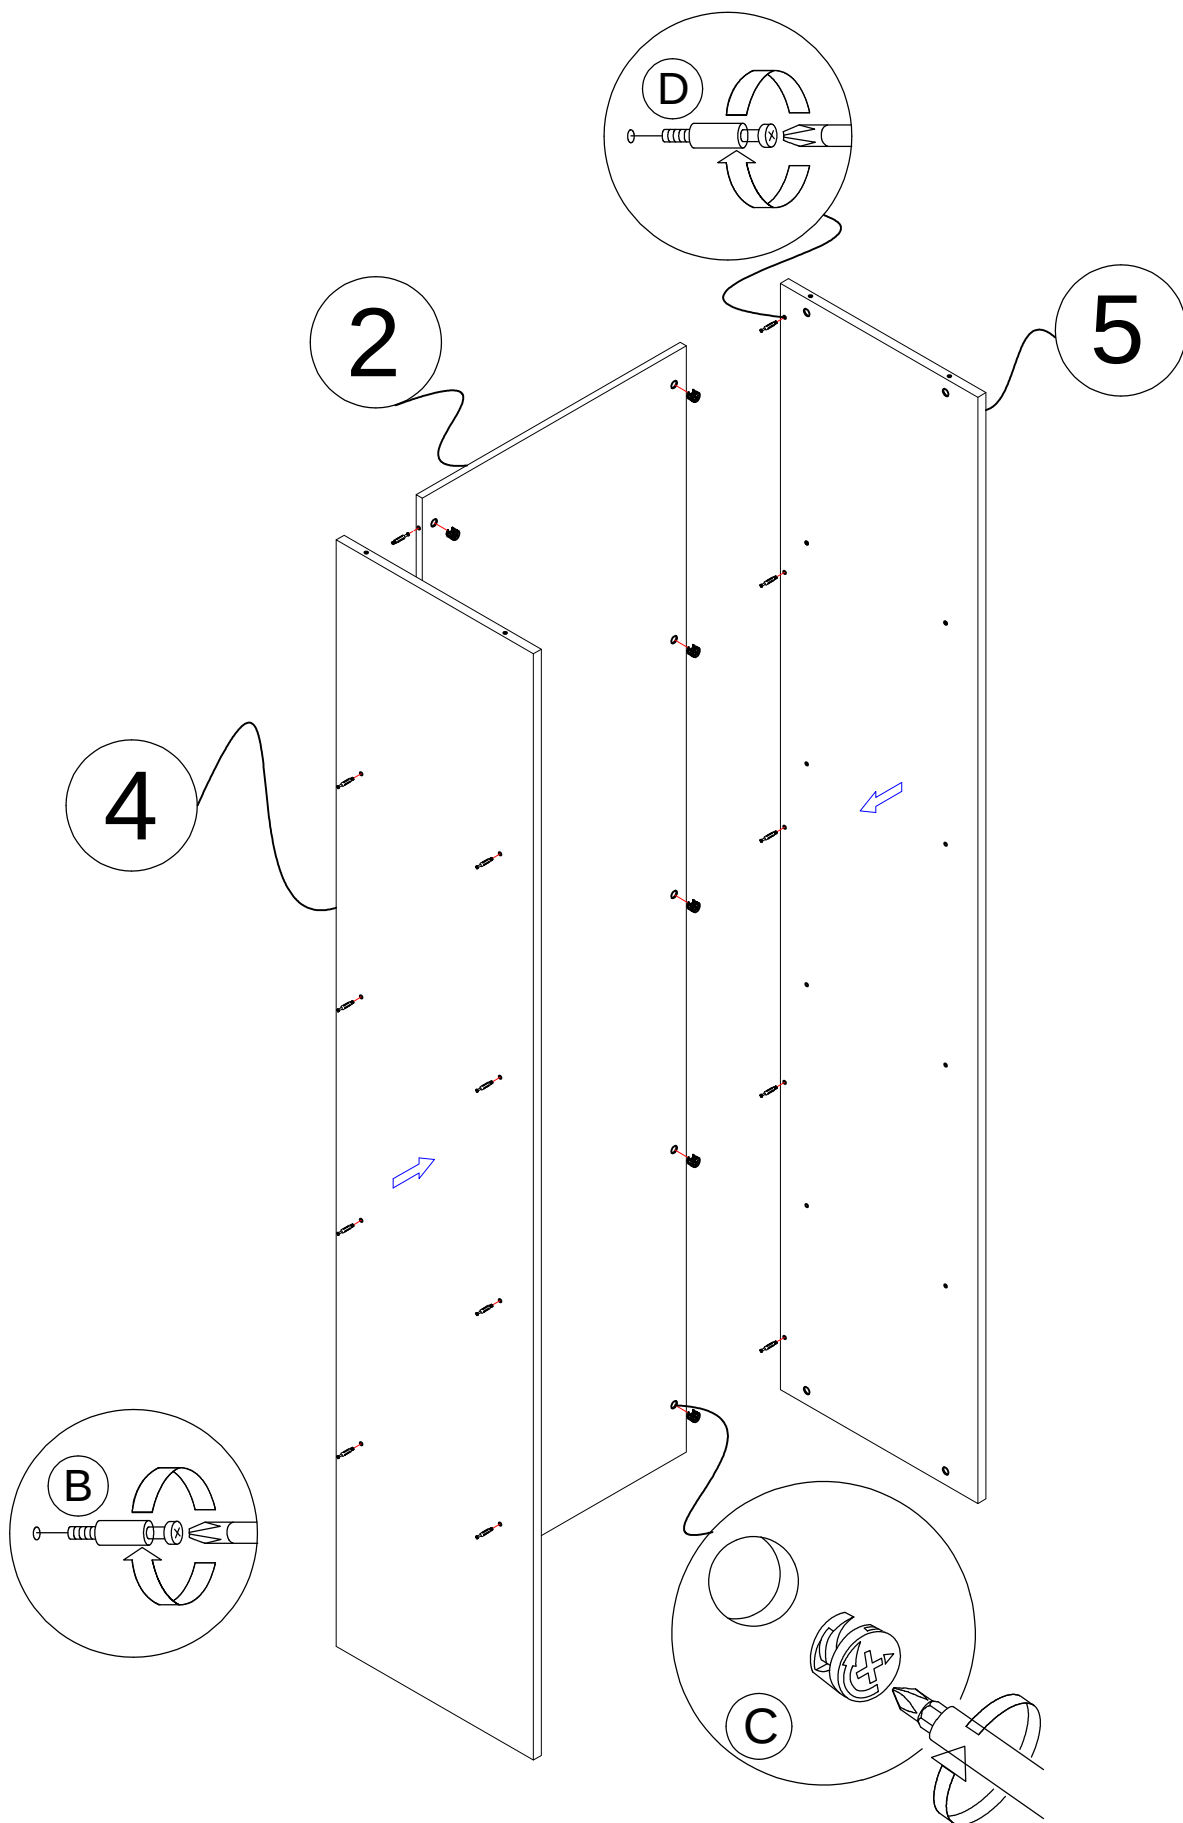
1 Combine (1) (2) (3) (4) (5) and B C D I together






INSTALLATION STEPS

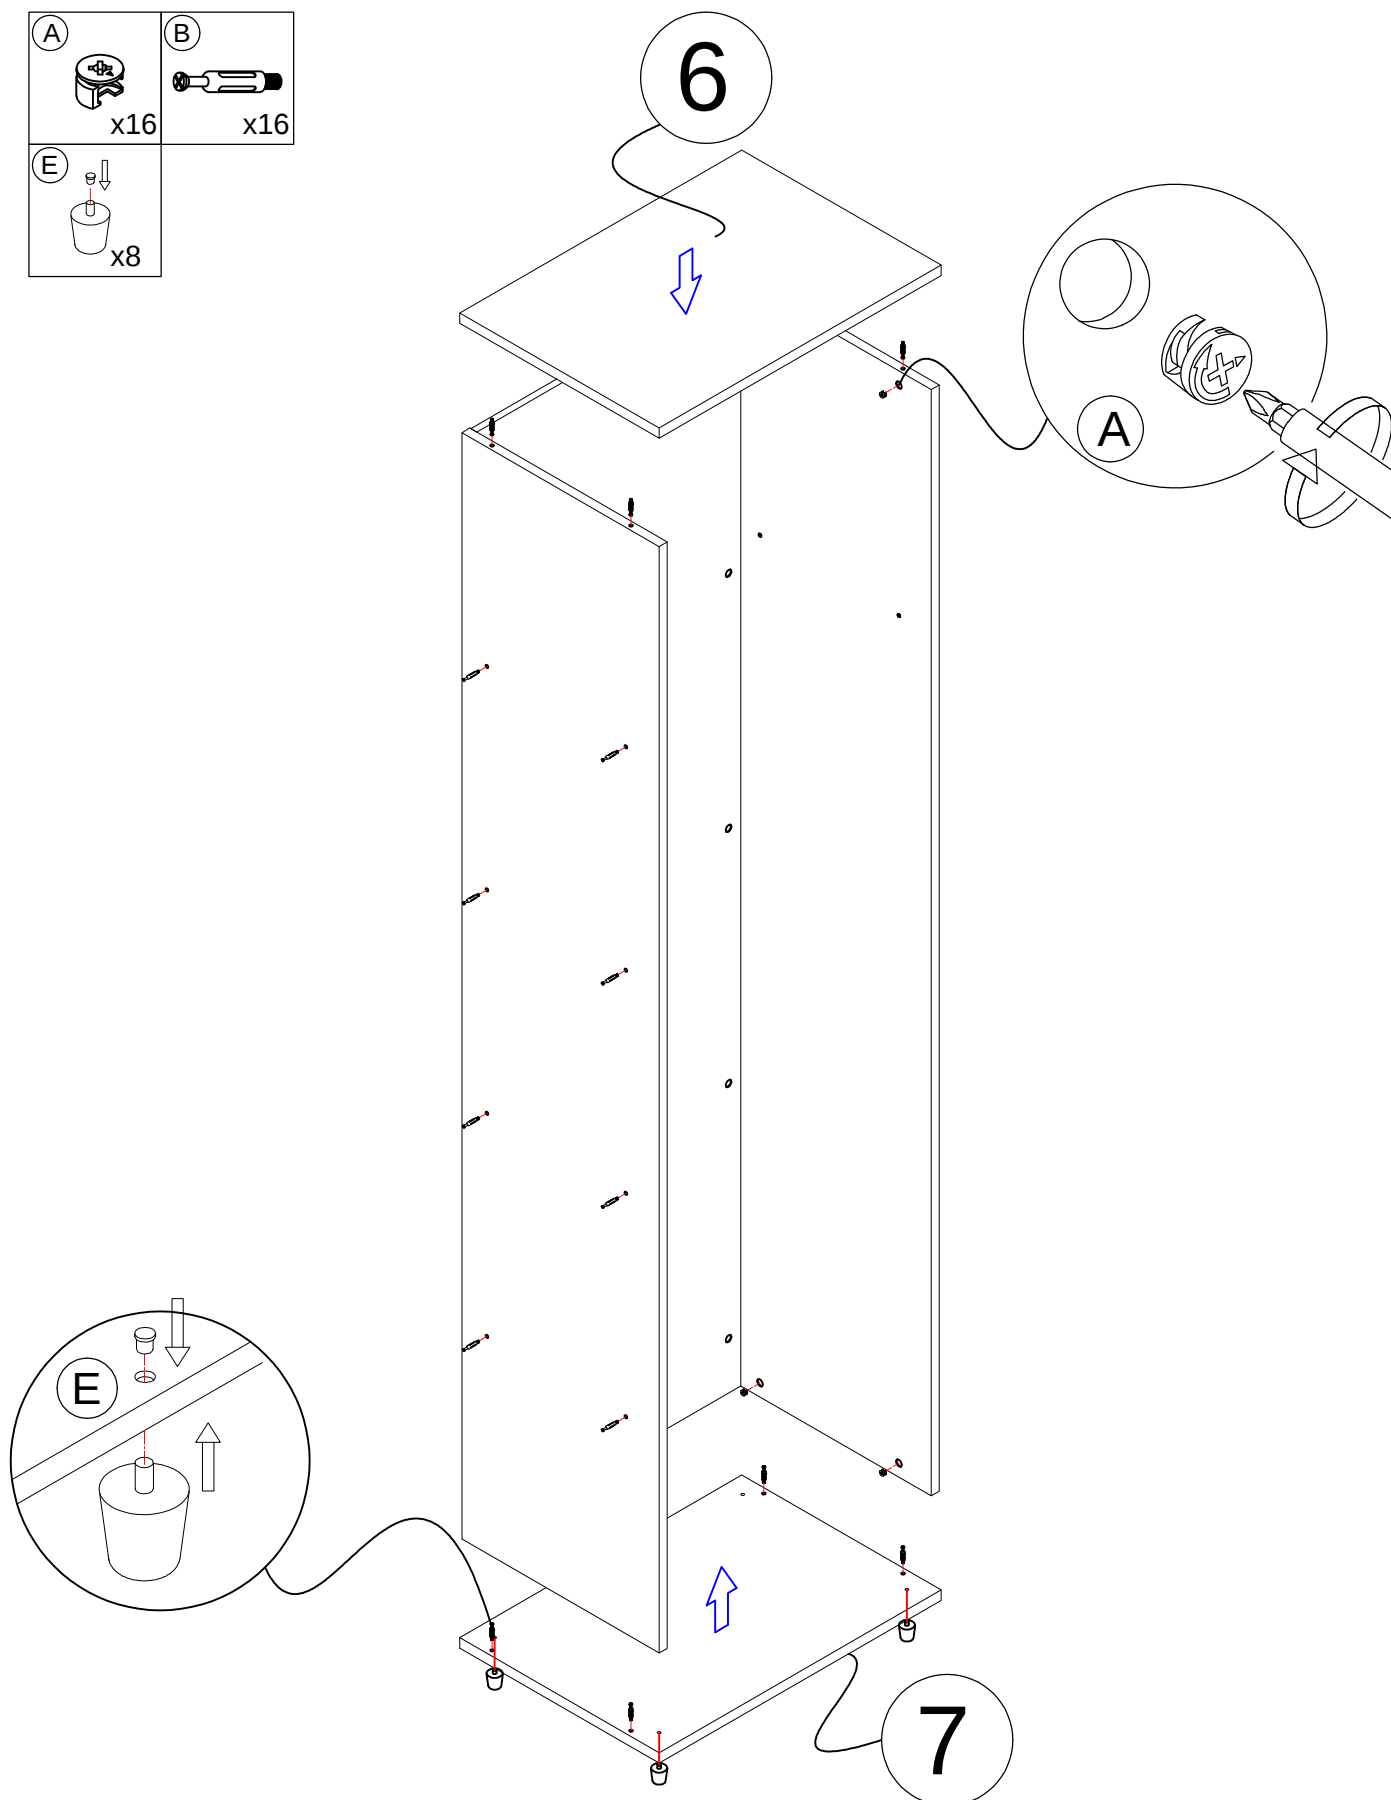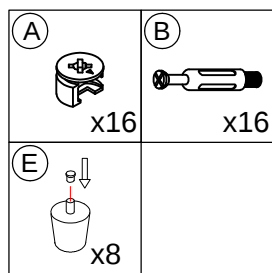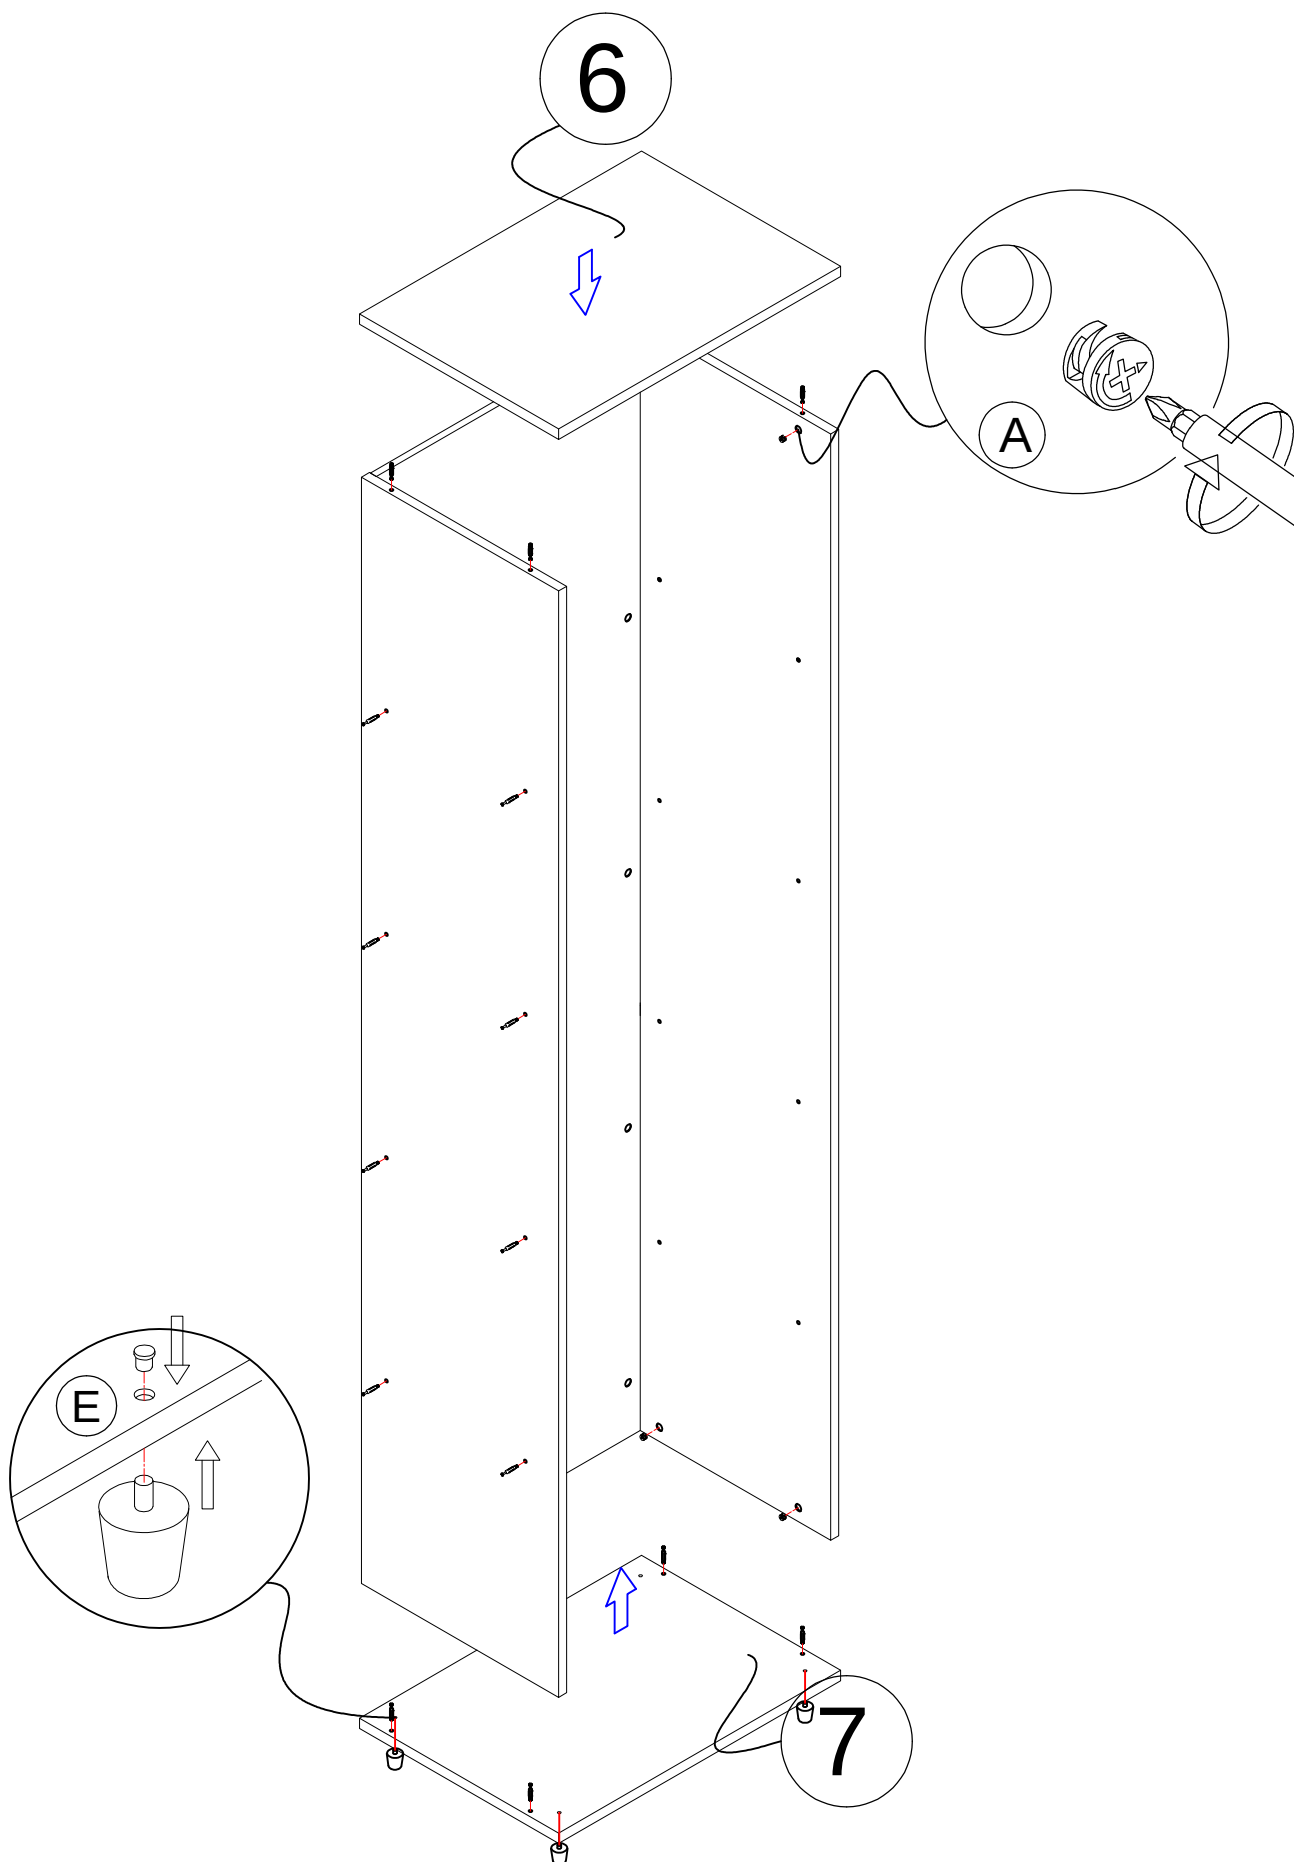
2 Combine (6) (7) step1 and A E together







INSTALLATION STEPS

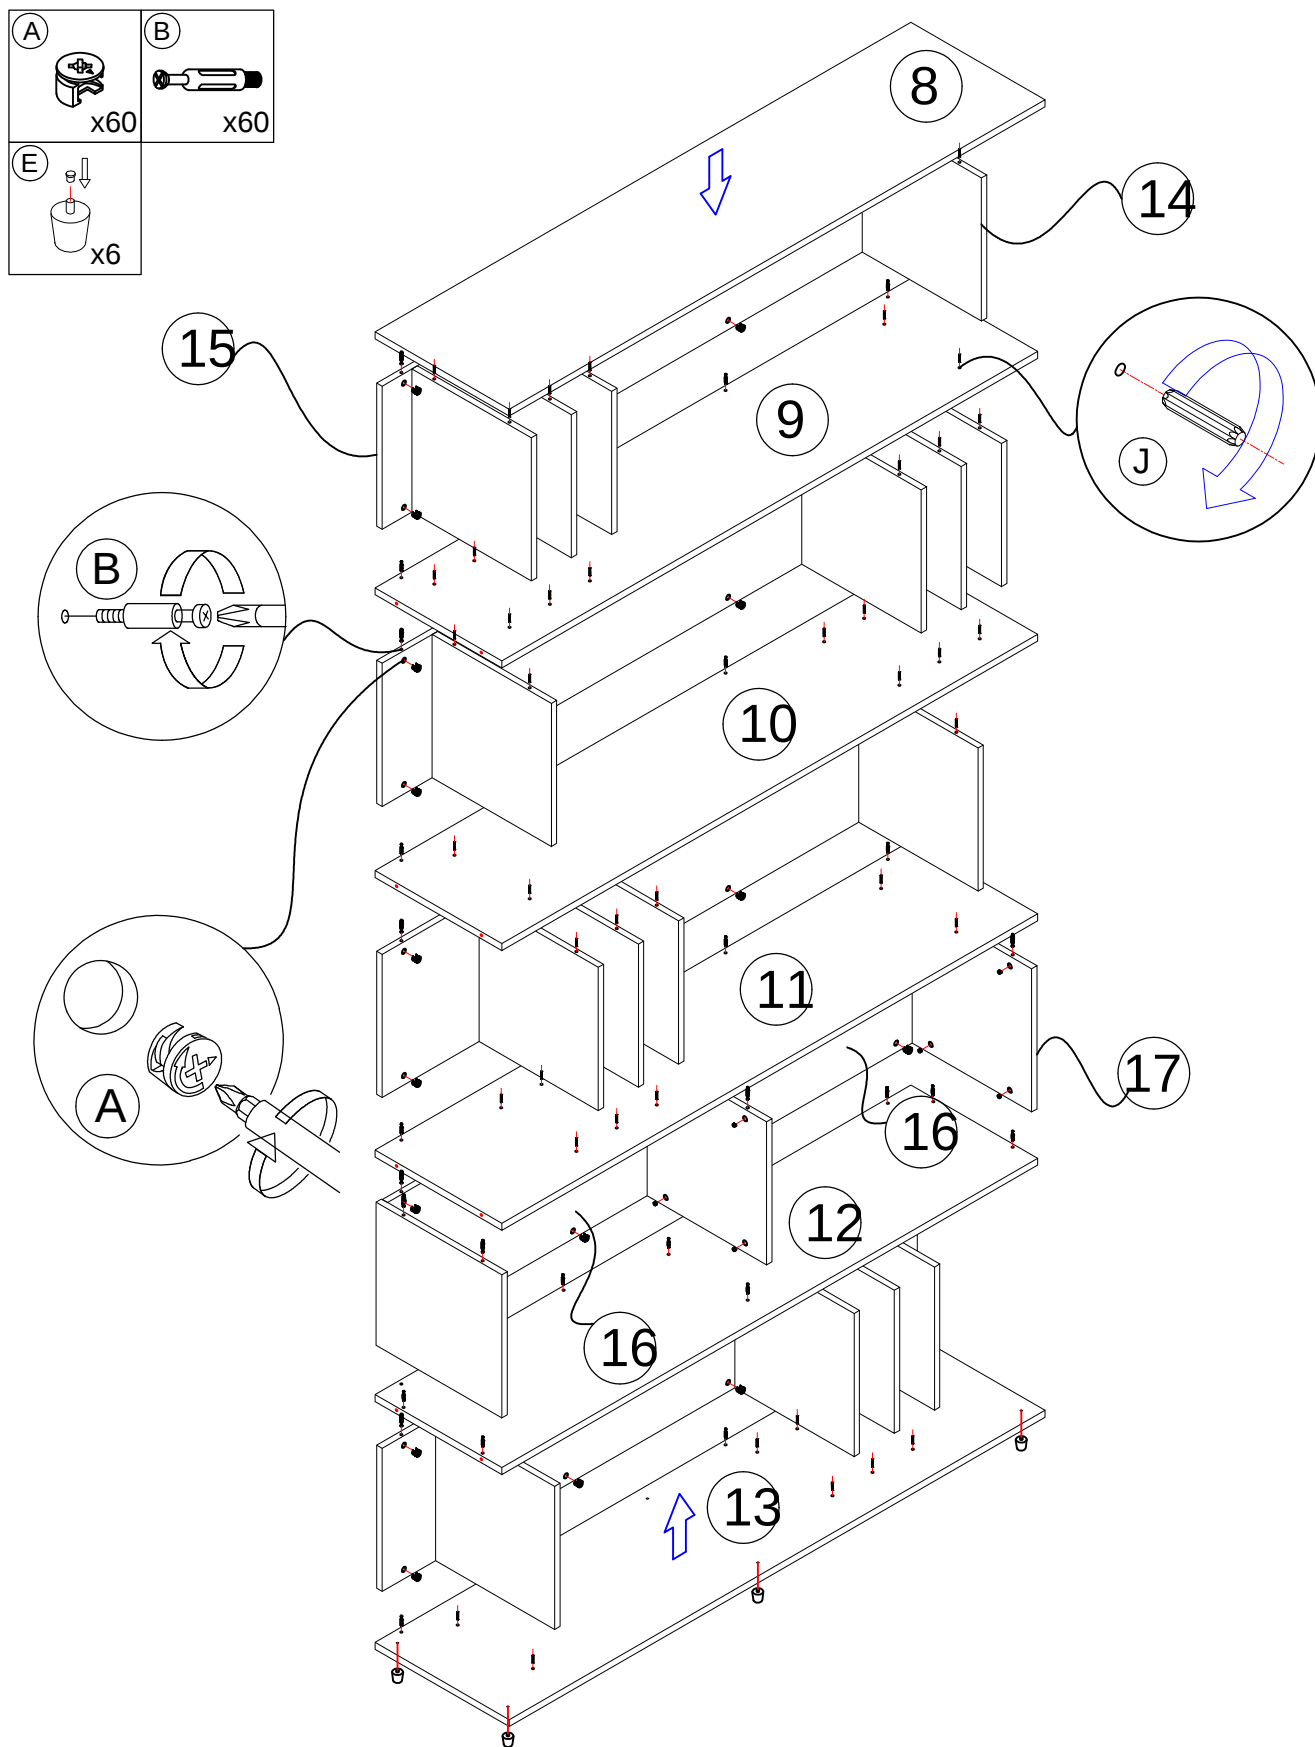3 Combine (8) (9) (10) (11) (12) (13) (14) (15) (16)
(17) and A B J together





INSTALLATION STEPS

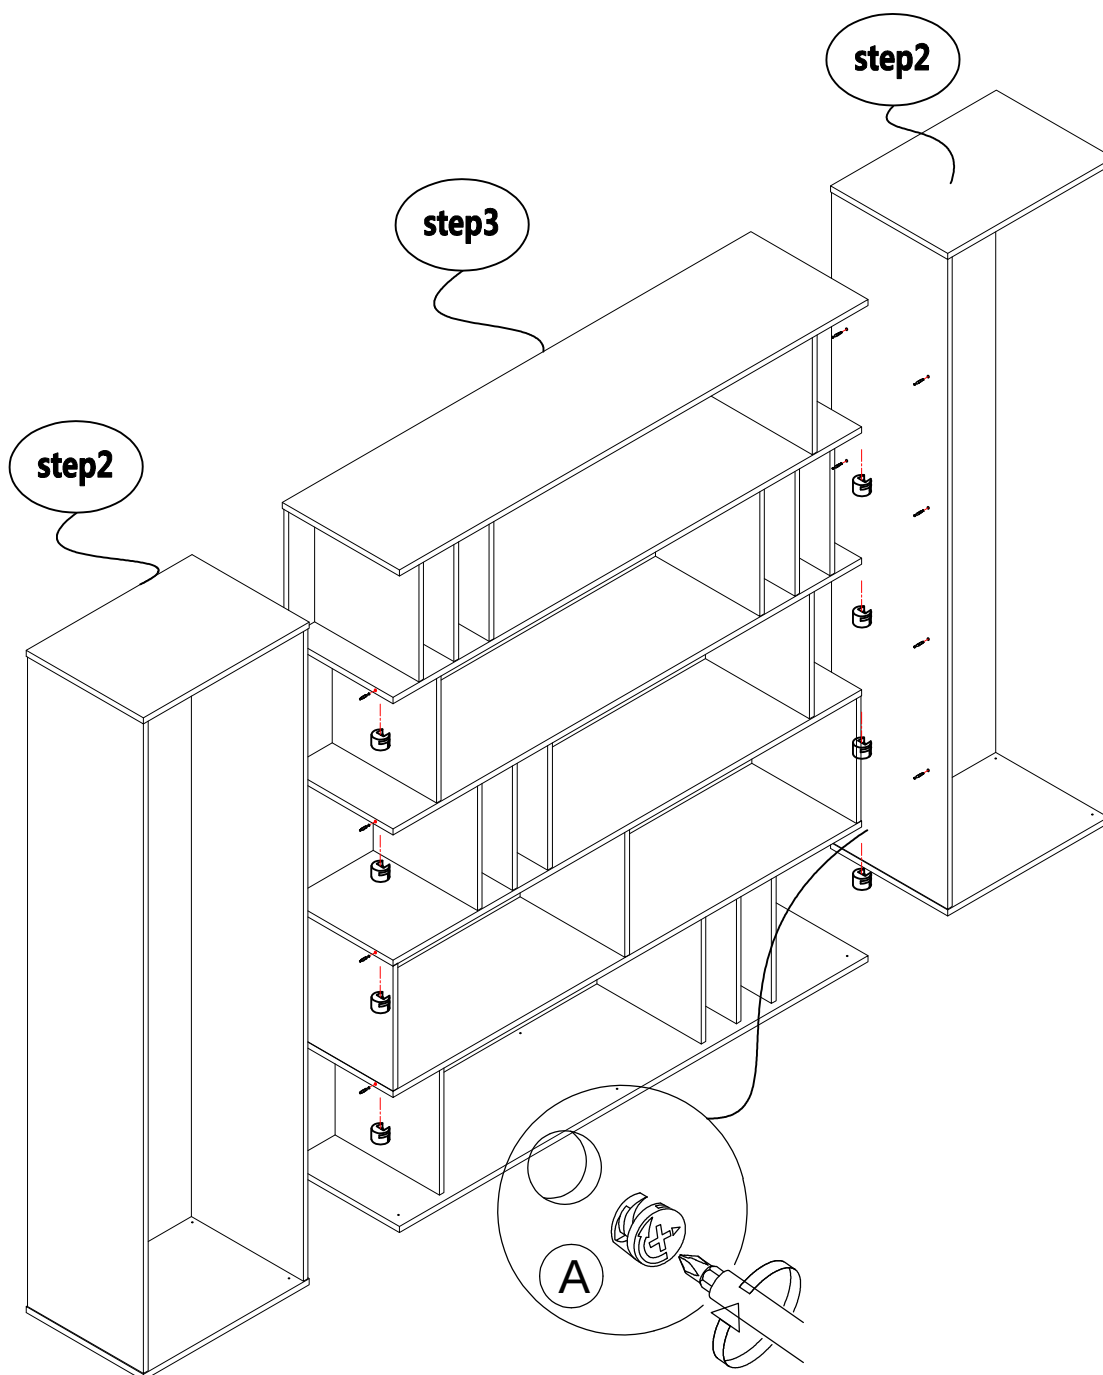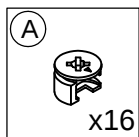4 Combine step2 step3 and A together







INSTALLATION STEPS

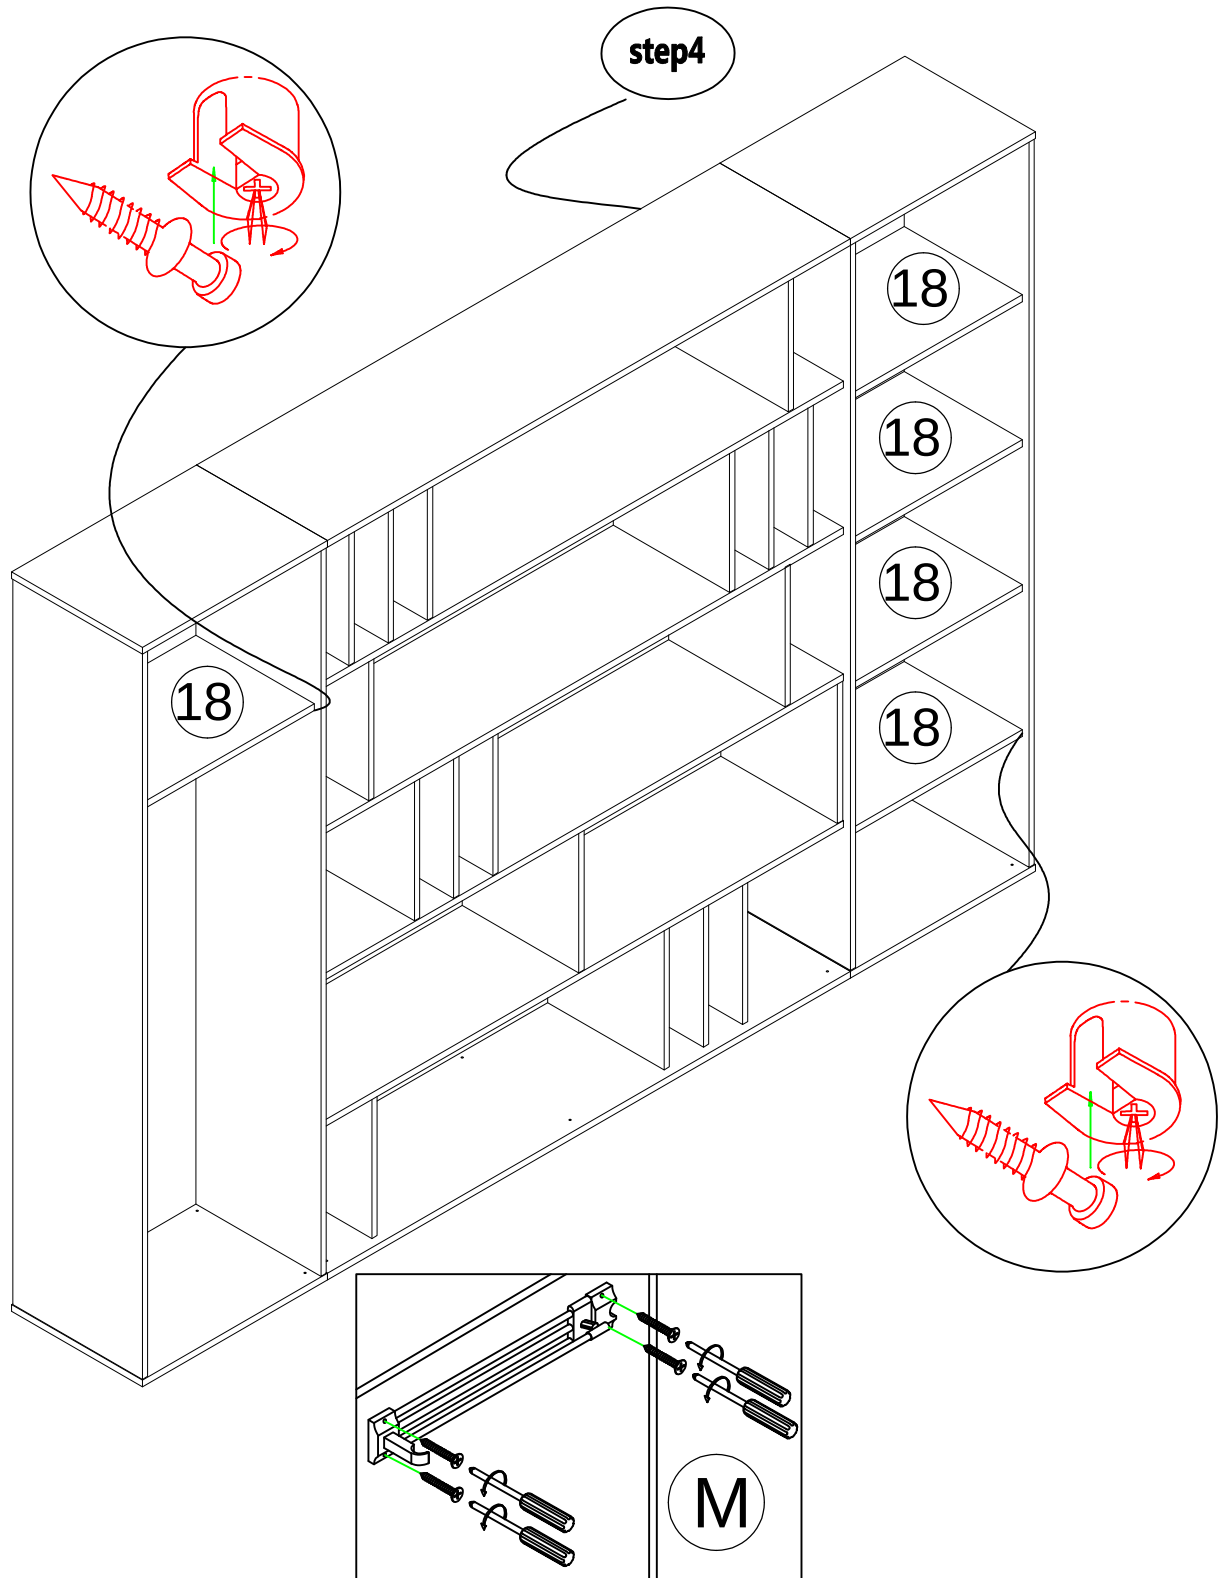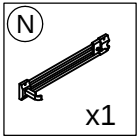5 Combine (18) Step4 and N together



INSTALLATION STEPS

6 Combine (19) (20) (21) (22) Step5
and G H L M F K together

(G)  x4	(H)  x4	(F)  x1
(L)  x4	(M)  x4	(K)  x1

