



Customer Service: contactus24service@gmail.com

Phone: (951) 213-4742

12x20FT Cedar Framed Hardtop Gazebo

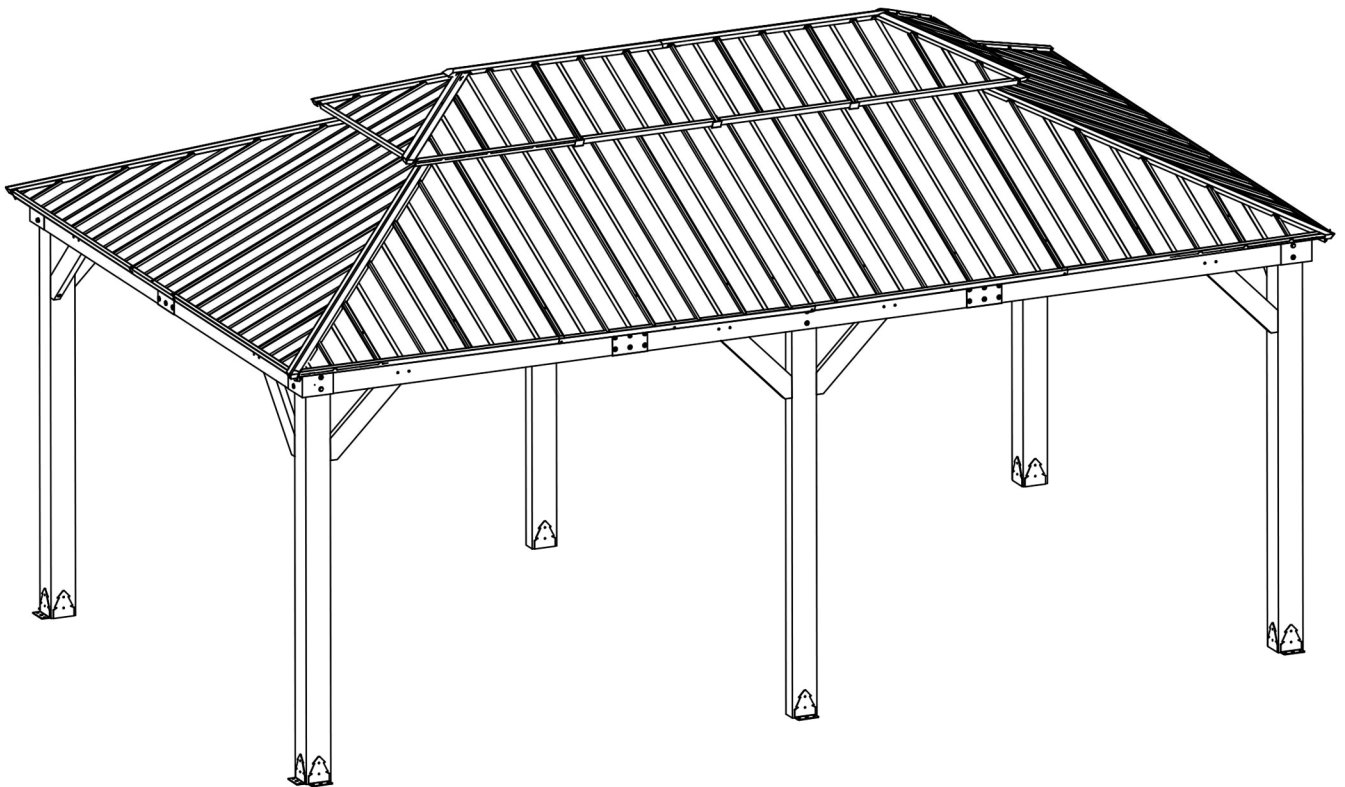


OD06KTSC20SN Assembly Instruction

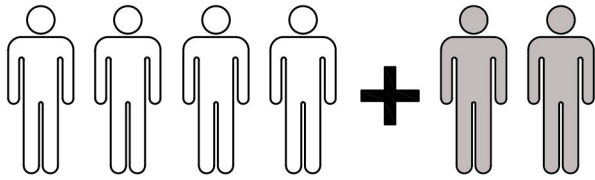

Four or more people are required for assembly

The following tools are not included and needed for assembly

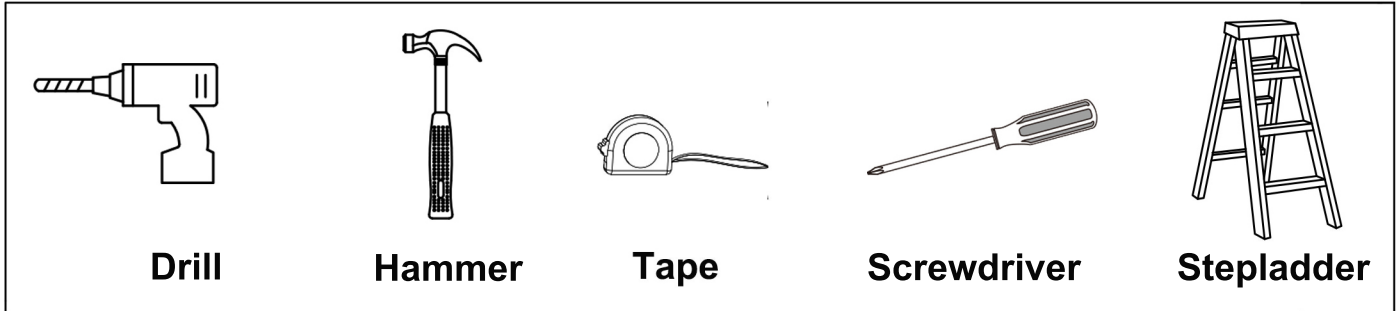

Note:







- 1. The gazebo come with 7 carton boxes.**
- 2. Wearing protective gloves is recommended.**
- 3. Do not fully tighten screws prior to complete assembly.**



















Before You Start







-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.









PARTS LIST

01	4	 116*36*1874mm	1/7 BOX 2/7 BOX
02	2	 116*36*2100mm	3/7 BOX
03	4	 116*36*1751mm	3/7 BOX
05	12		3/7 BOX 6/7 BOX
06	4		1/7 BOX 2/7 BOX
07	2		3/7 BOX

A1	4		4/7 BOX 5/7 BOX
B1	2		
B2	12		
C3	2		
C4	1		
C5	2		
D1	2		
D2	2		
D3	2		
E1	2		
E2	2		
E3	2		
E4	2		
E5	4		
F1	4		
F2	4		
G1	2		





H1	4	 F	4/7 BOX 5/7 BOX
H2	4	 F	
H3	2	 F	
H4	2	 F	
H5	2	 F	
I1	2		
I2	2		
I3	2		
I4	4		
K1	4		
K2	4		
K3	4		
K4	4		
K5	4		

		4/7 BOX		5/7 BOX	
K26	8				
K31	8				
S1	2				
S2	2				
S3	4				
S4	2				
L1	2				
L2	1				
M2	4		N1	4	
Z1	12		Z2	4	
Z3	2		Z4	10	
Z5	4		Z6	2	
X1	10		X2	10	
X3	12		Q1	20	
Q2	2				

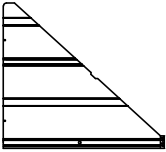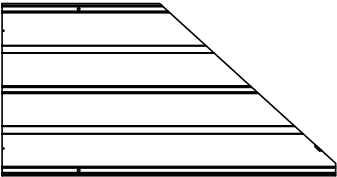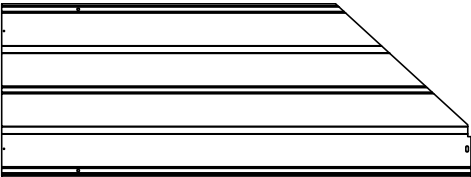
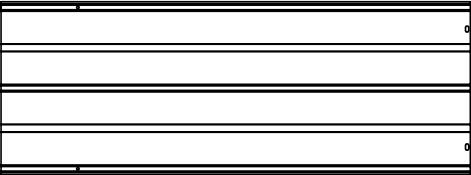

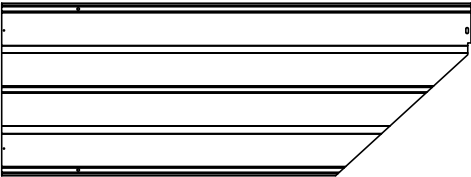
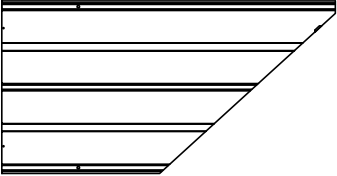
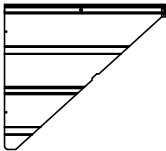
T12	4		6/7 BOX 7/7 BOX
T13	4		
T42	4		
T43	10		
T44	6		
T45	4		
T17	4		
T18	4		














6/7 BOX




7/7 BOX

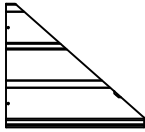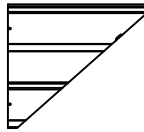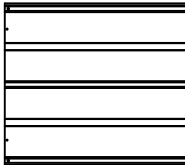T33	4		T36	4	
T34	2		T37	2	
T35	2		T38	6	



4/7 BOX
5/7 BOX

AA	8	M8*165	
BB	68+4	M5*30	
CC	8	M10*80	
DD	12	M6*70	
EE	12+2	M5*40	
FF	36+2	M8*25	


GG	16+2	M6		4/7 BOX 5/7 BOX
HH	24+1	M8*60		
II	4	M6*70		
KK	14+1	M6*55		
LL	28+2	M6*45		
MM	40+1			
NN	12+1	M6*25		
OO	16+1	M6*45		
PP	2	M6*35		
QQ	4	M8*105		
TT	280+15	M6*15		
UU	20	Φ6x200		
Y1	1	M6		
Y2	1	M6		
Y3	2	M10		
Y4	2	M8		
Y5	2	M8		
Y6	2	M6		
Y7	1	M6		
Y8	1	M8		

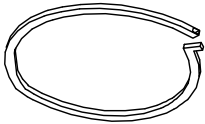VV	1		7/7 BOX
WW	1		5/7 BOX
SS	152+6		5/7 BOX

STEP. 1

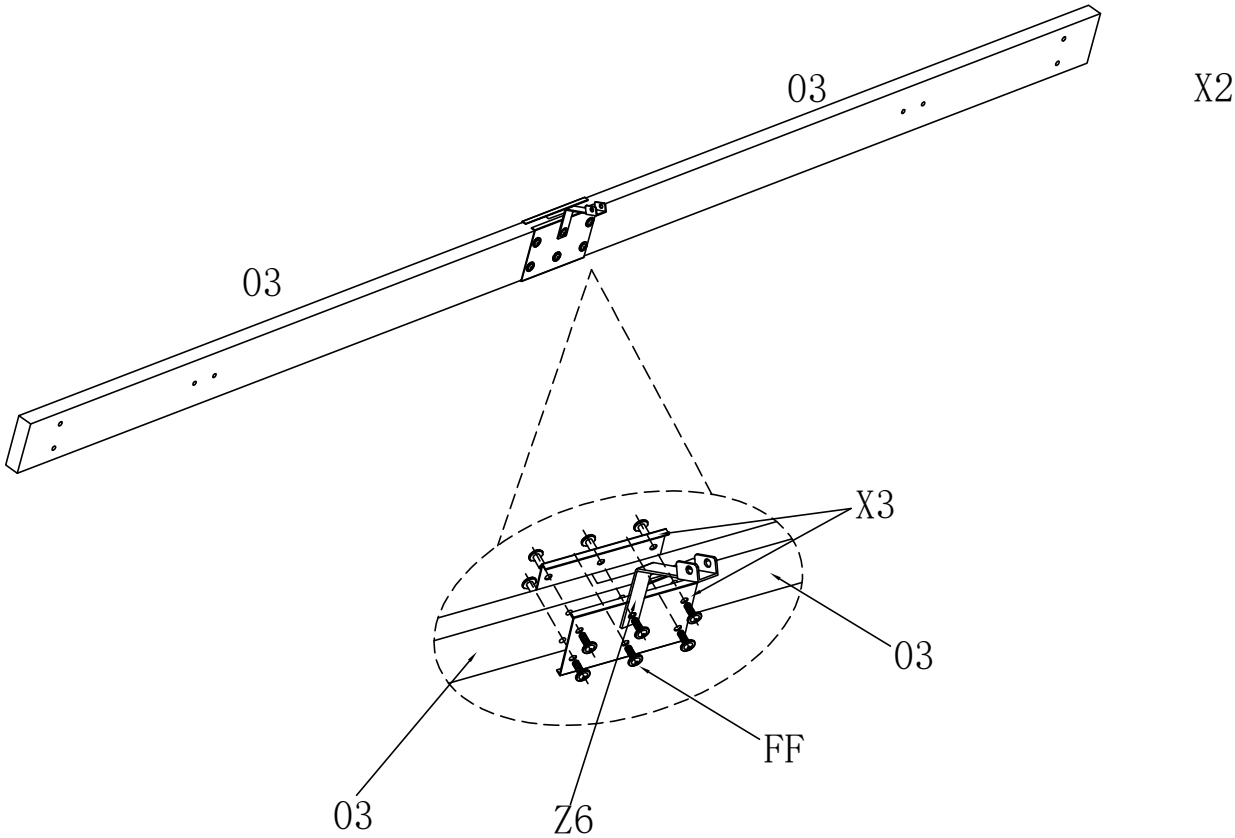

⓪3 4X



⓪3 4X





⓪6 2X




M8*25

⓪F 12X


STEP. 2

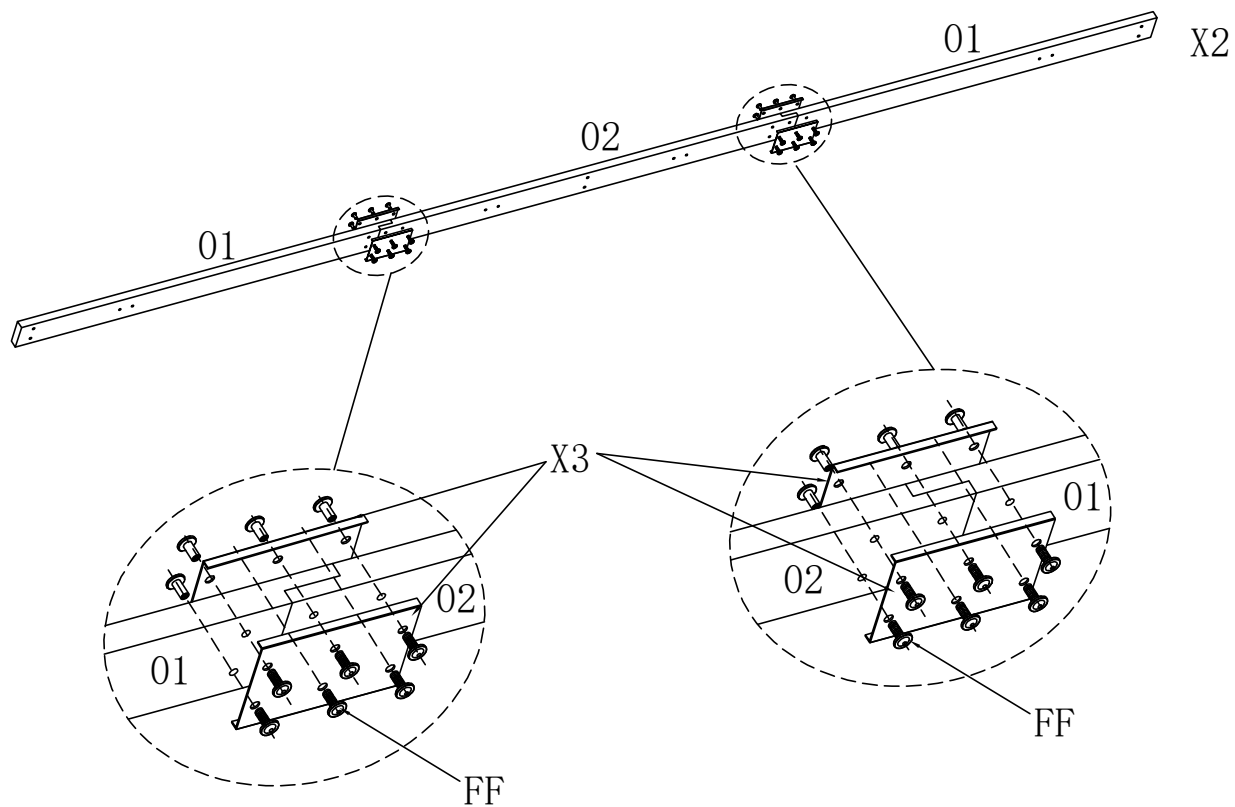

① 4X



② 2X






③ 8X




M8*25

ⓕ 24X

STEP. 3

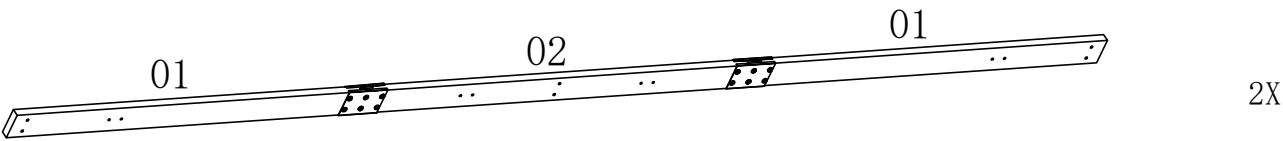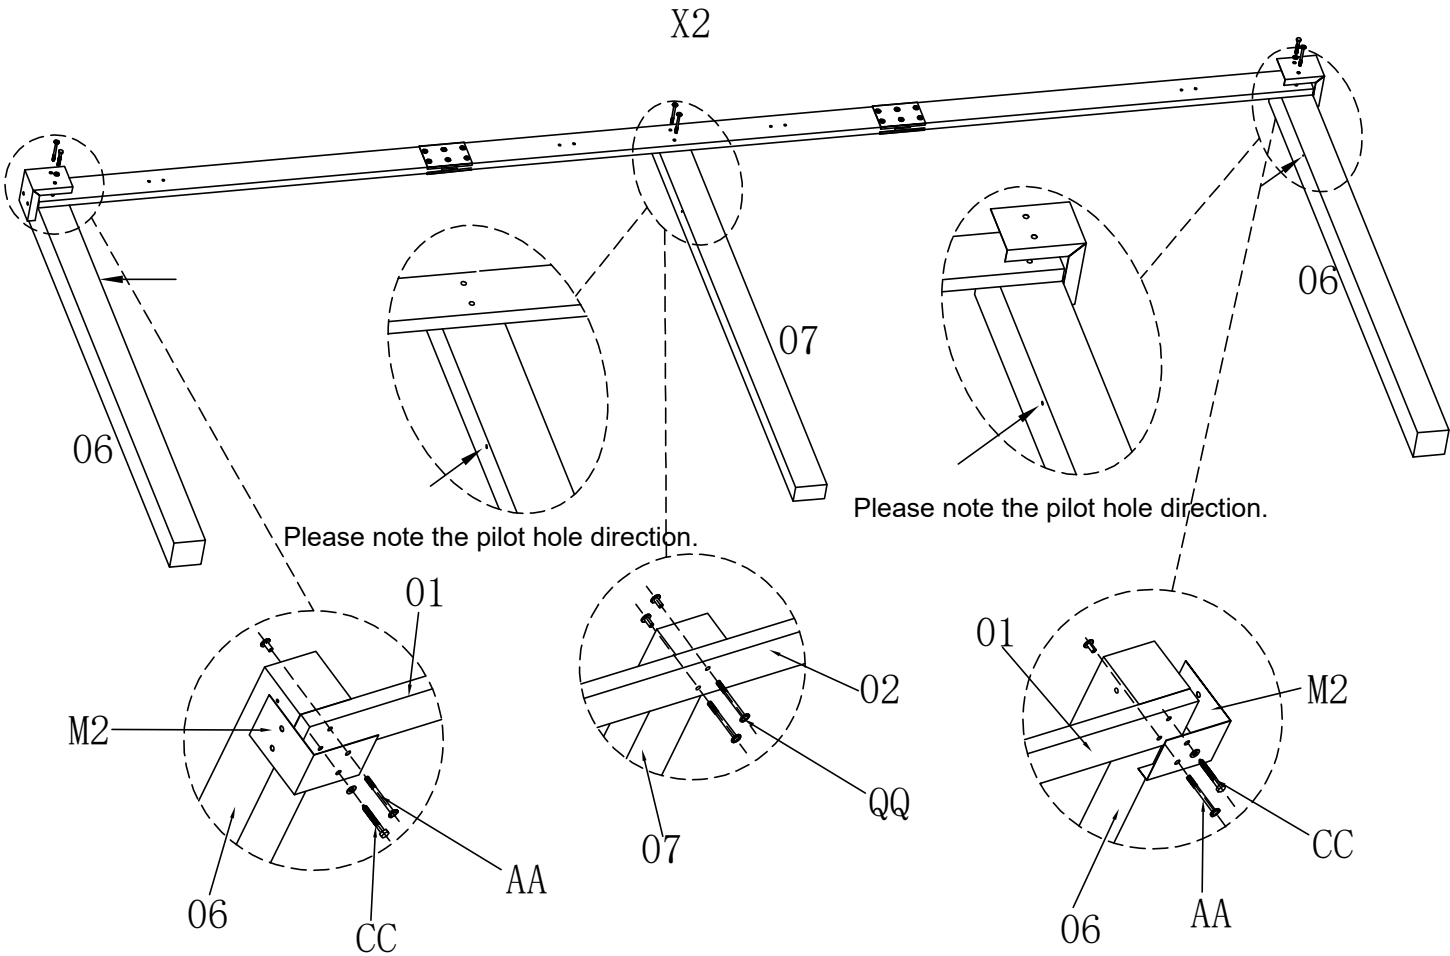

06 4X



07 2X




M8X165

AA 4X




M8X105

QQ 4X






M10*80

CC 4X


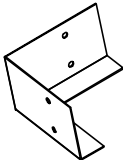


M2 4X


STEP. 4

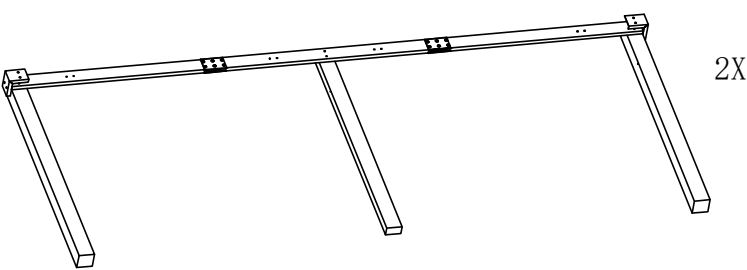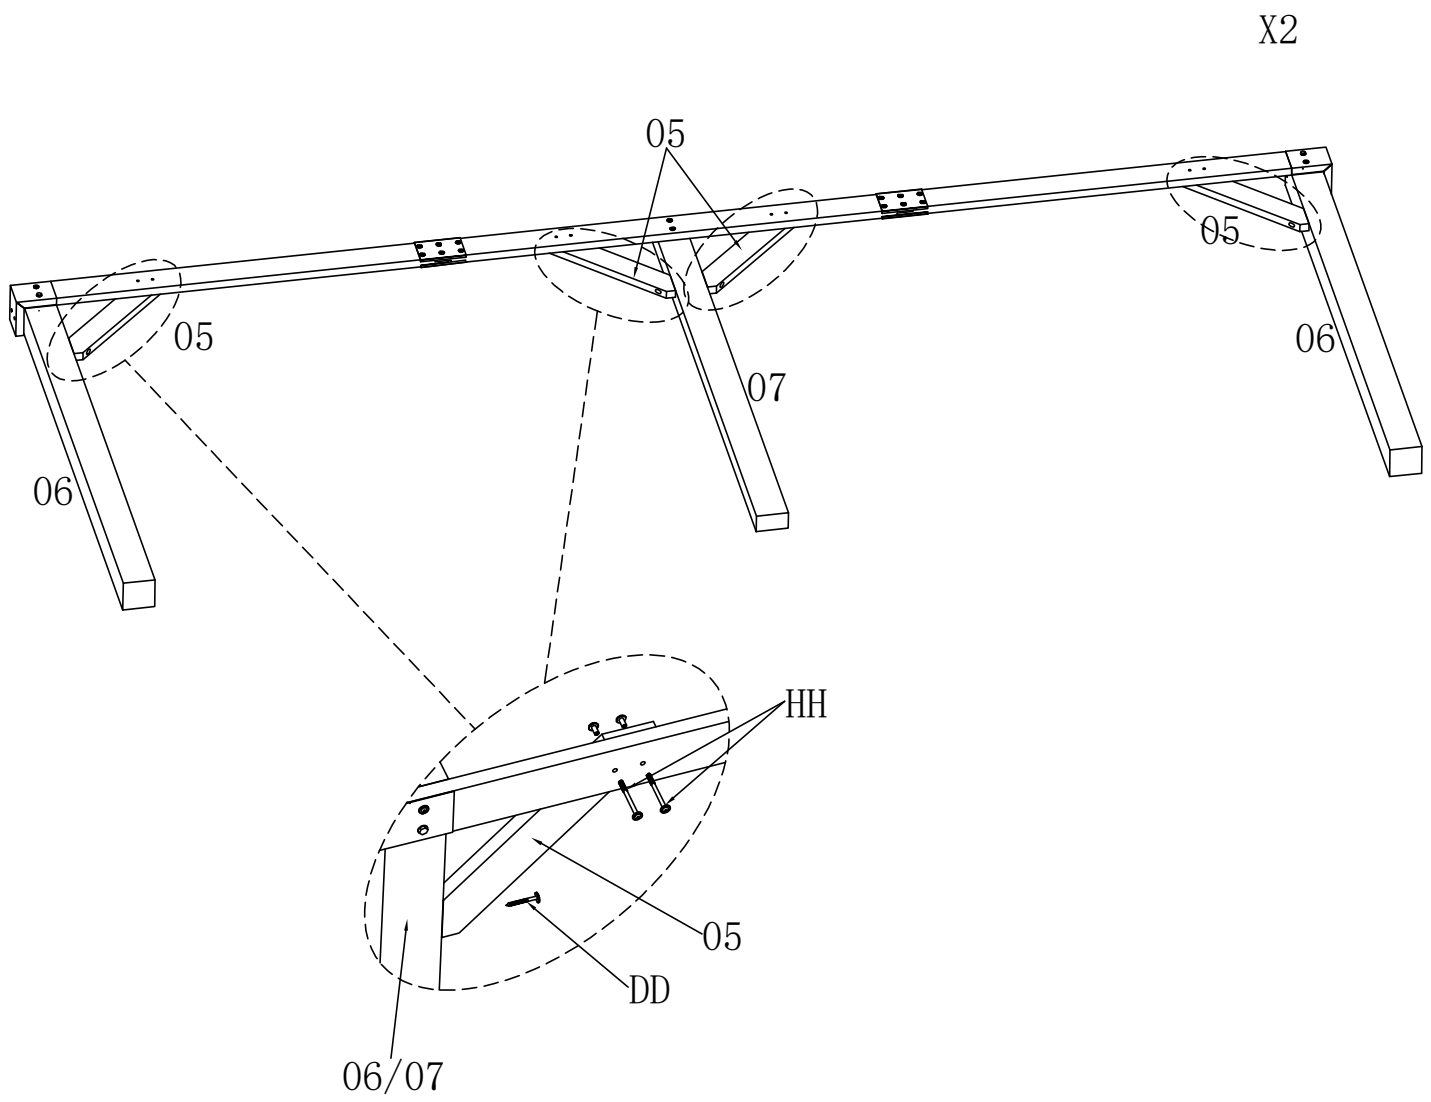

STEP. 5

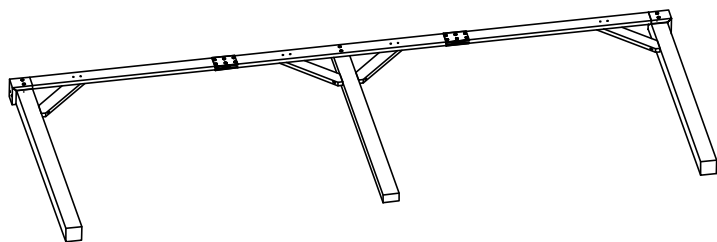
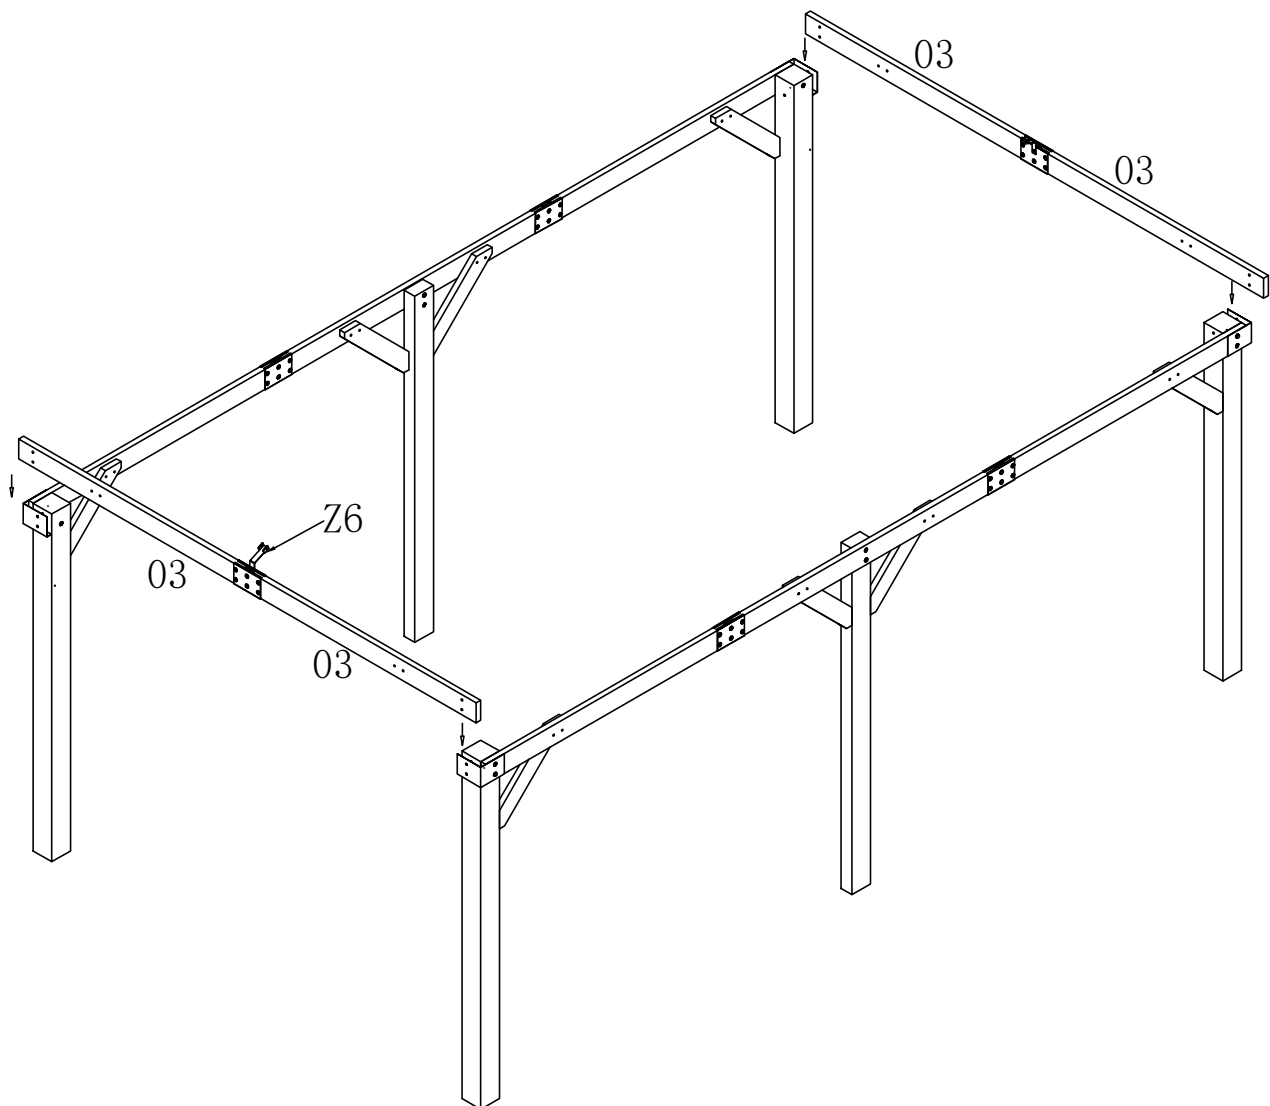


2X

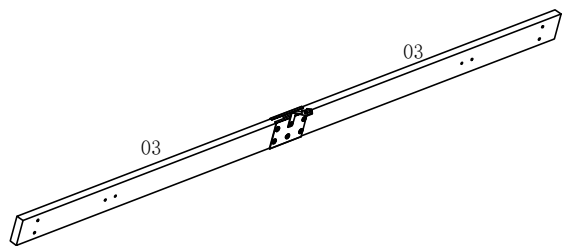


2X

STEP. 6

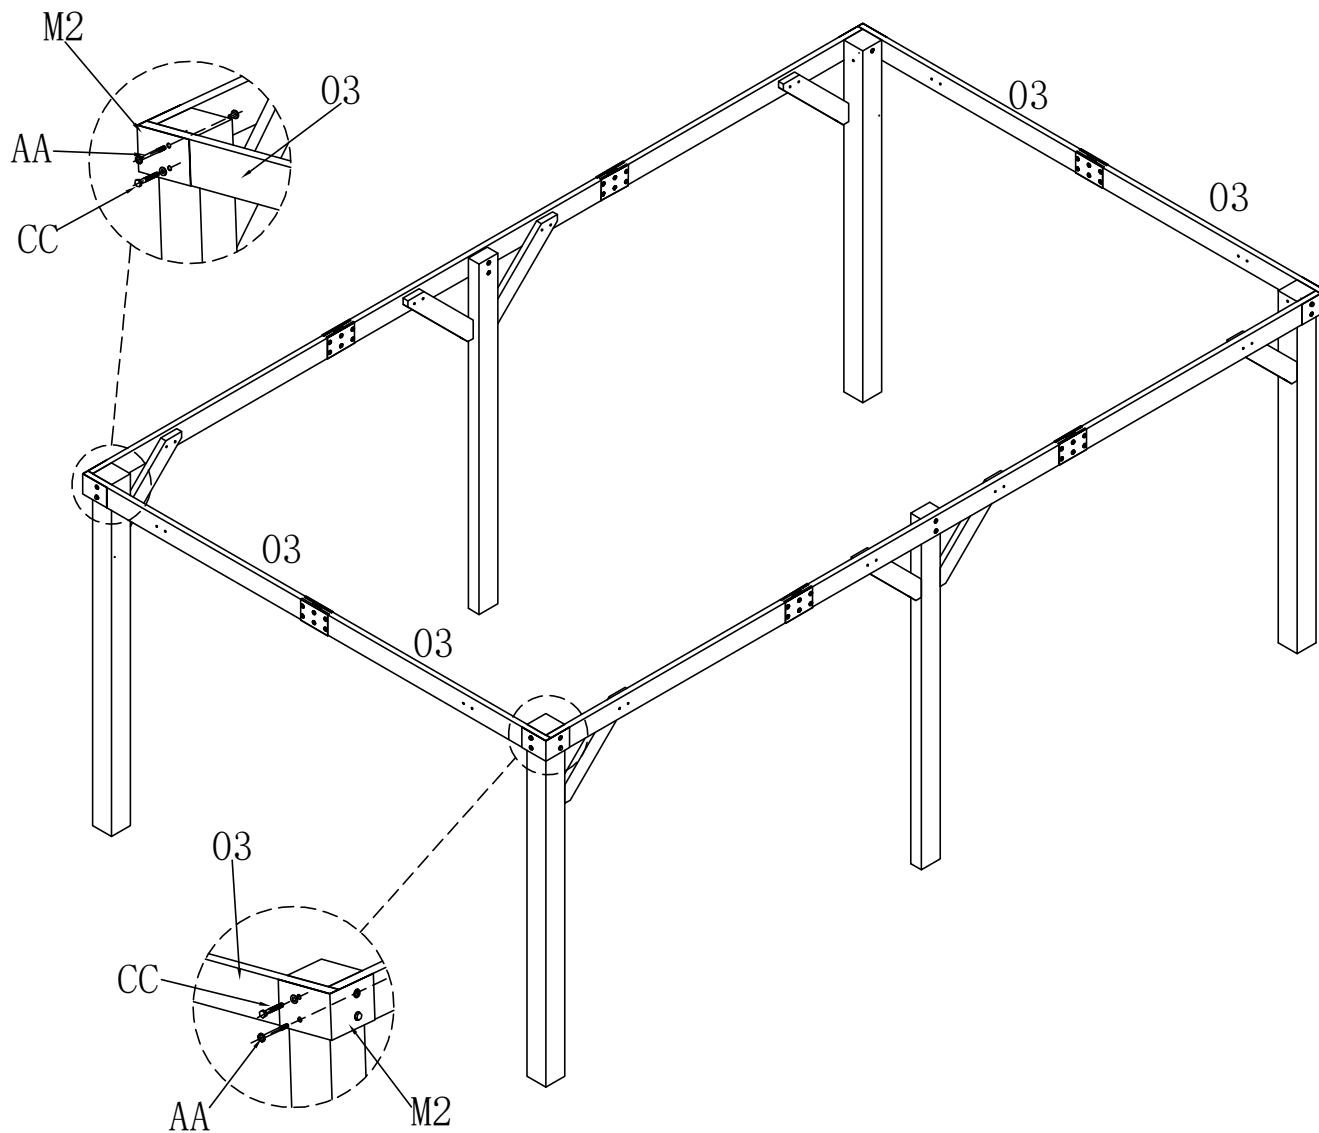

M8X165



Ⓐ 4X




M10*80

Ⓑ 4X


STEP. 7

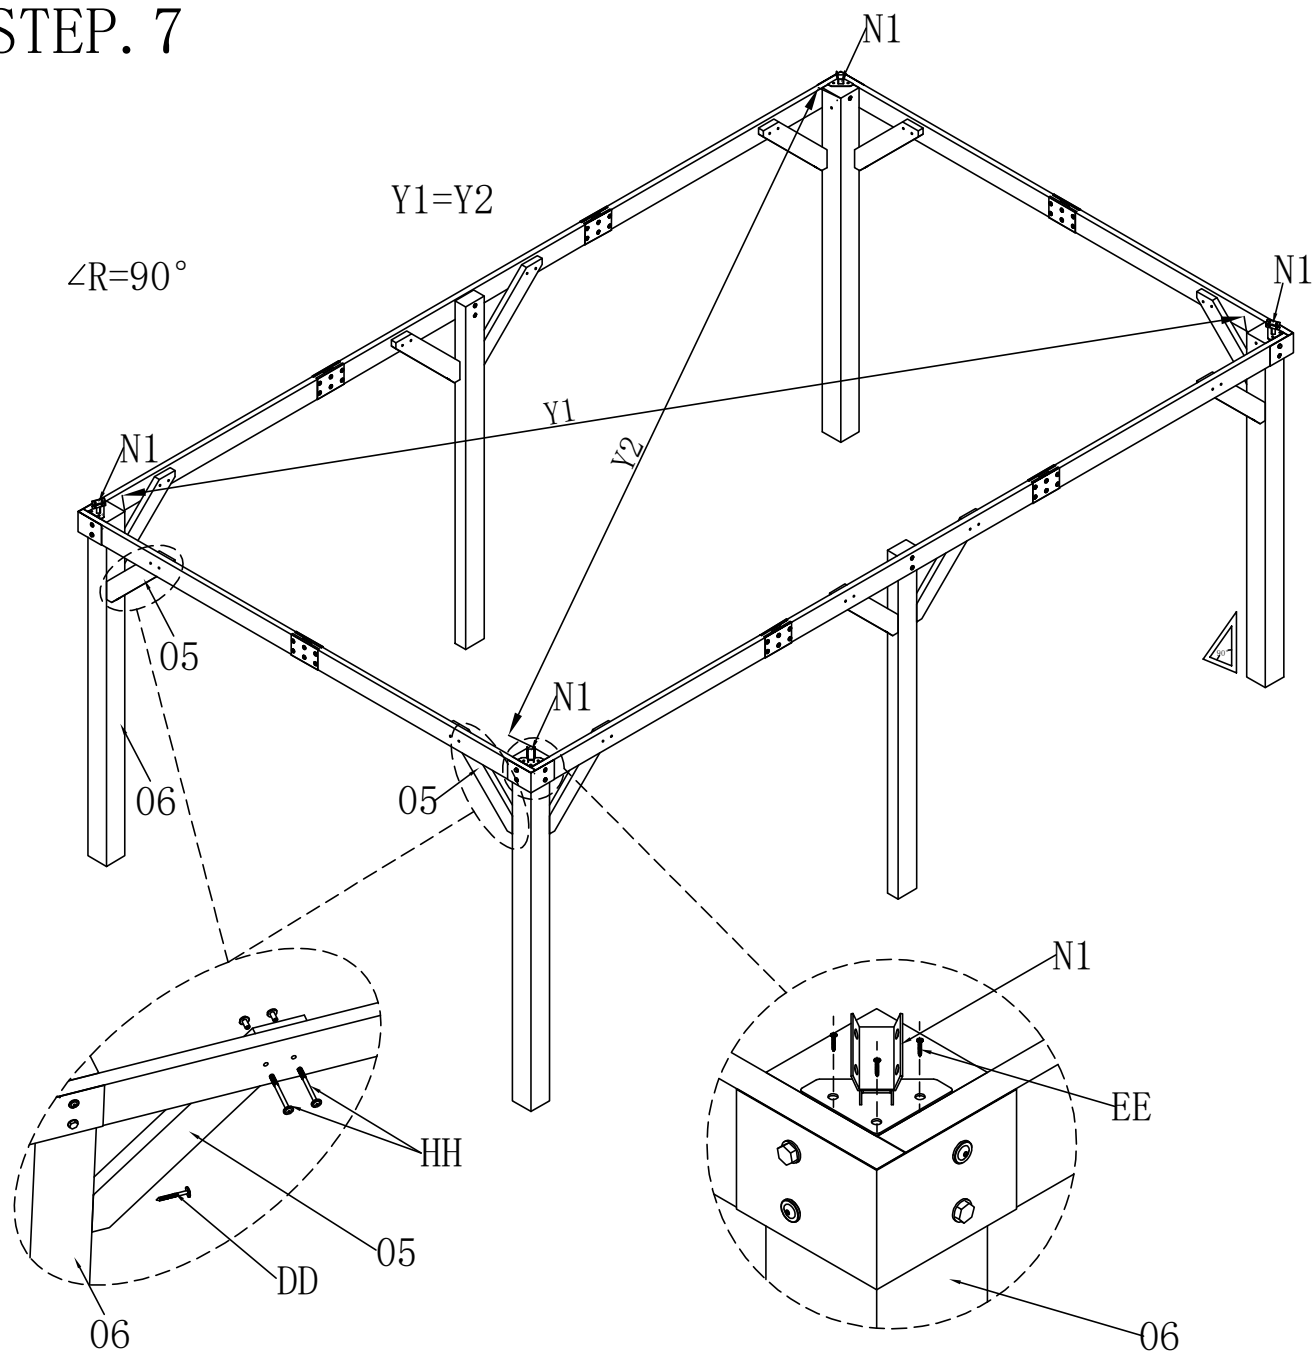

⑤ 4X



① 4X



M6*70 ④ 4X




M8X60 ⑧ 8X




M5*40 ⑫ 12X

STEP. 8

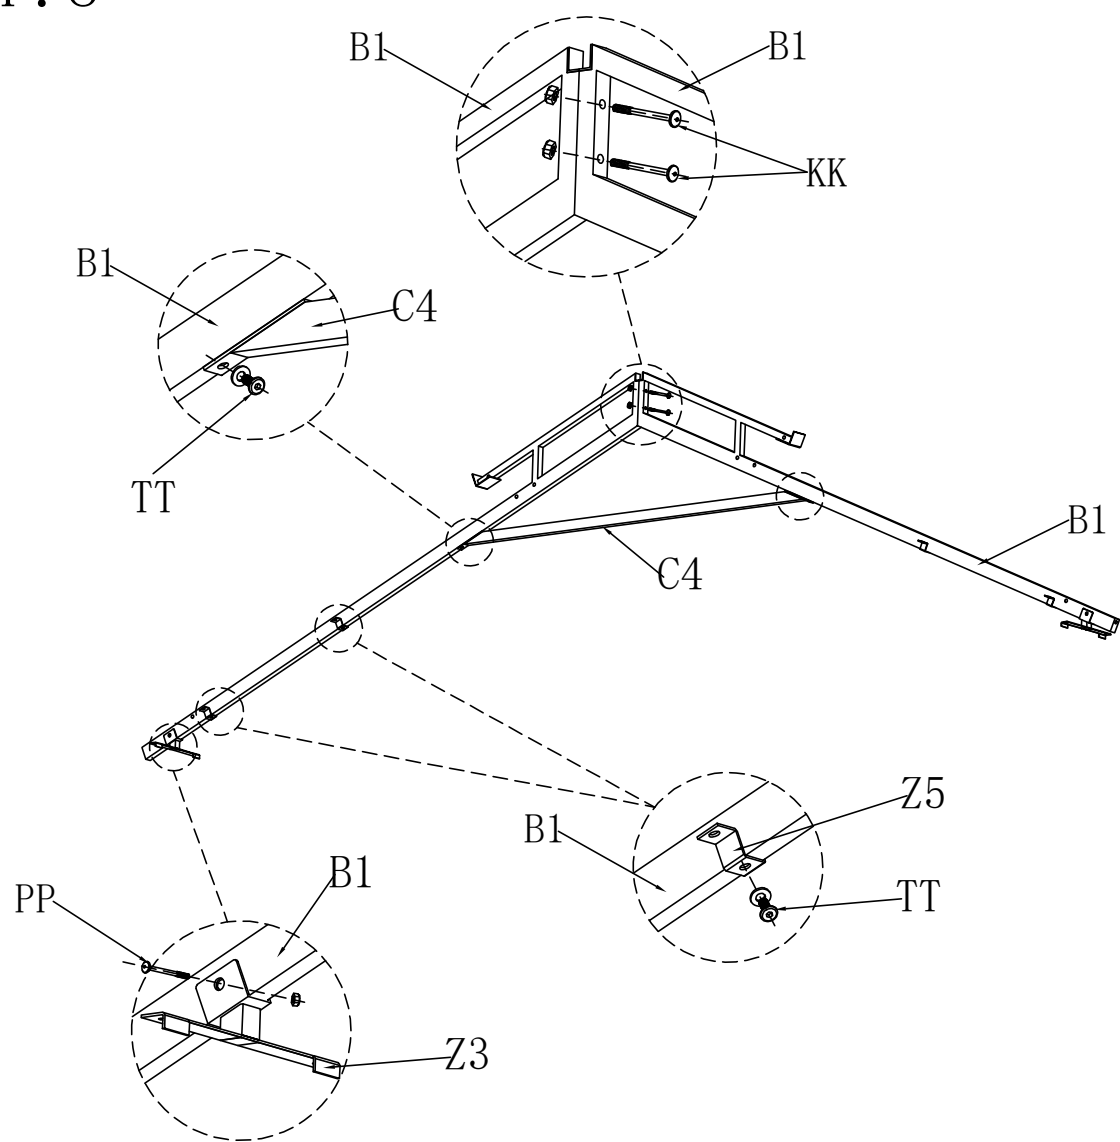

Ⓑ1 2X



Ⓒ4 1X



Ⓐ5 4X



Ⓐ3 2X



ⓀⓀ 2X

M6*55



ⓅⓅ 2X



M6*35



ⓉⓉ 6X

M6X15

STEP. 9

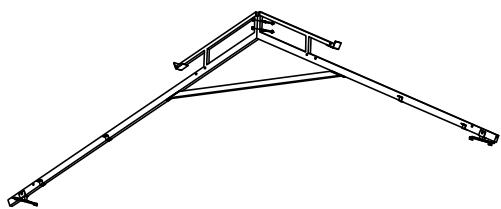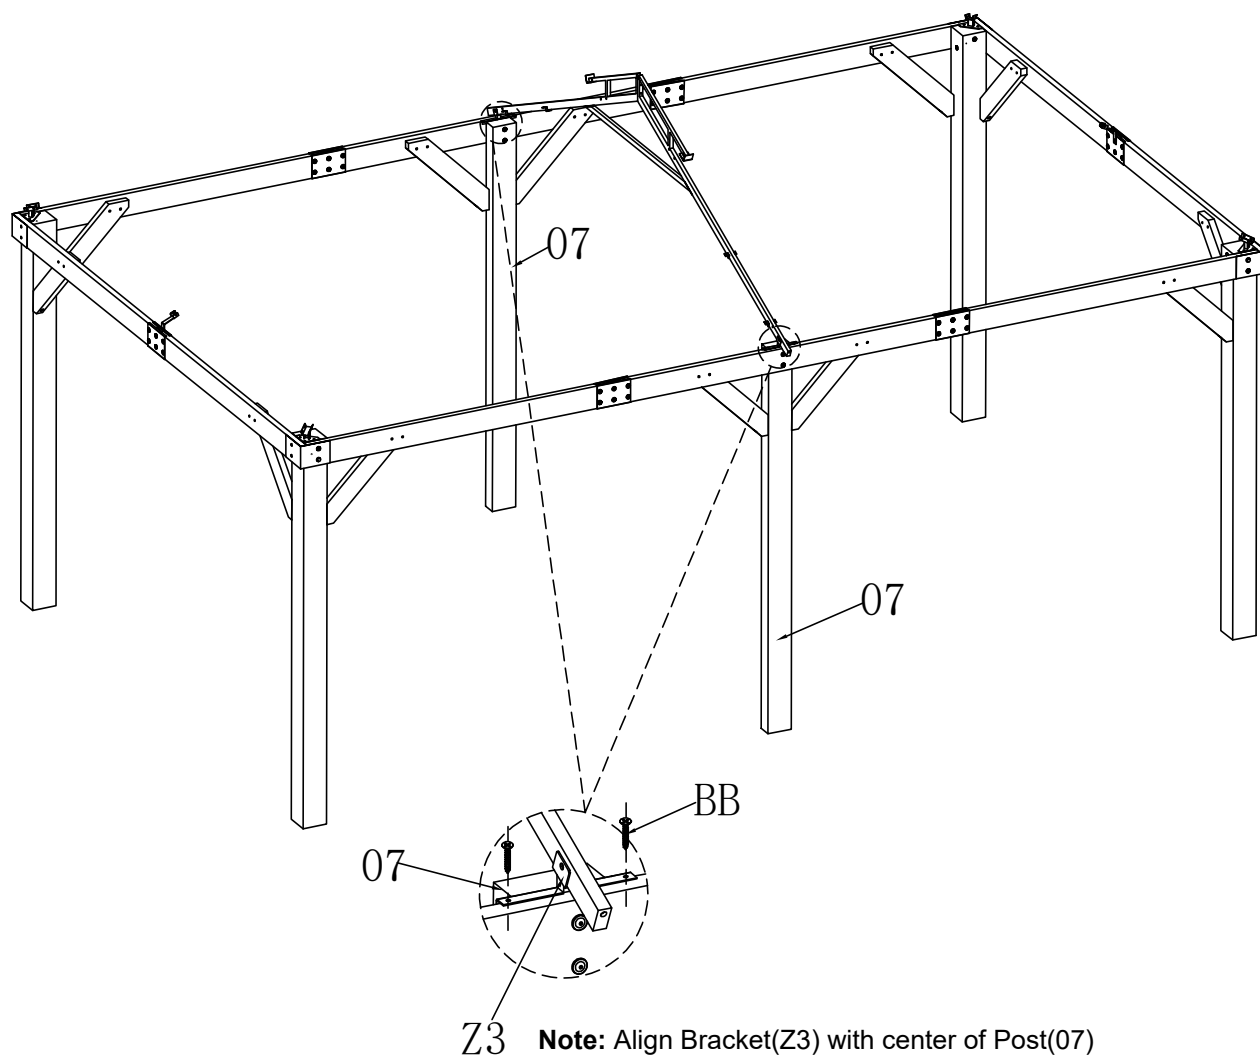


M5X30




4X


STEP. 10

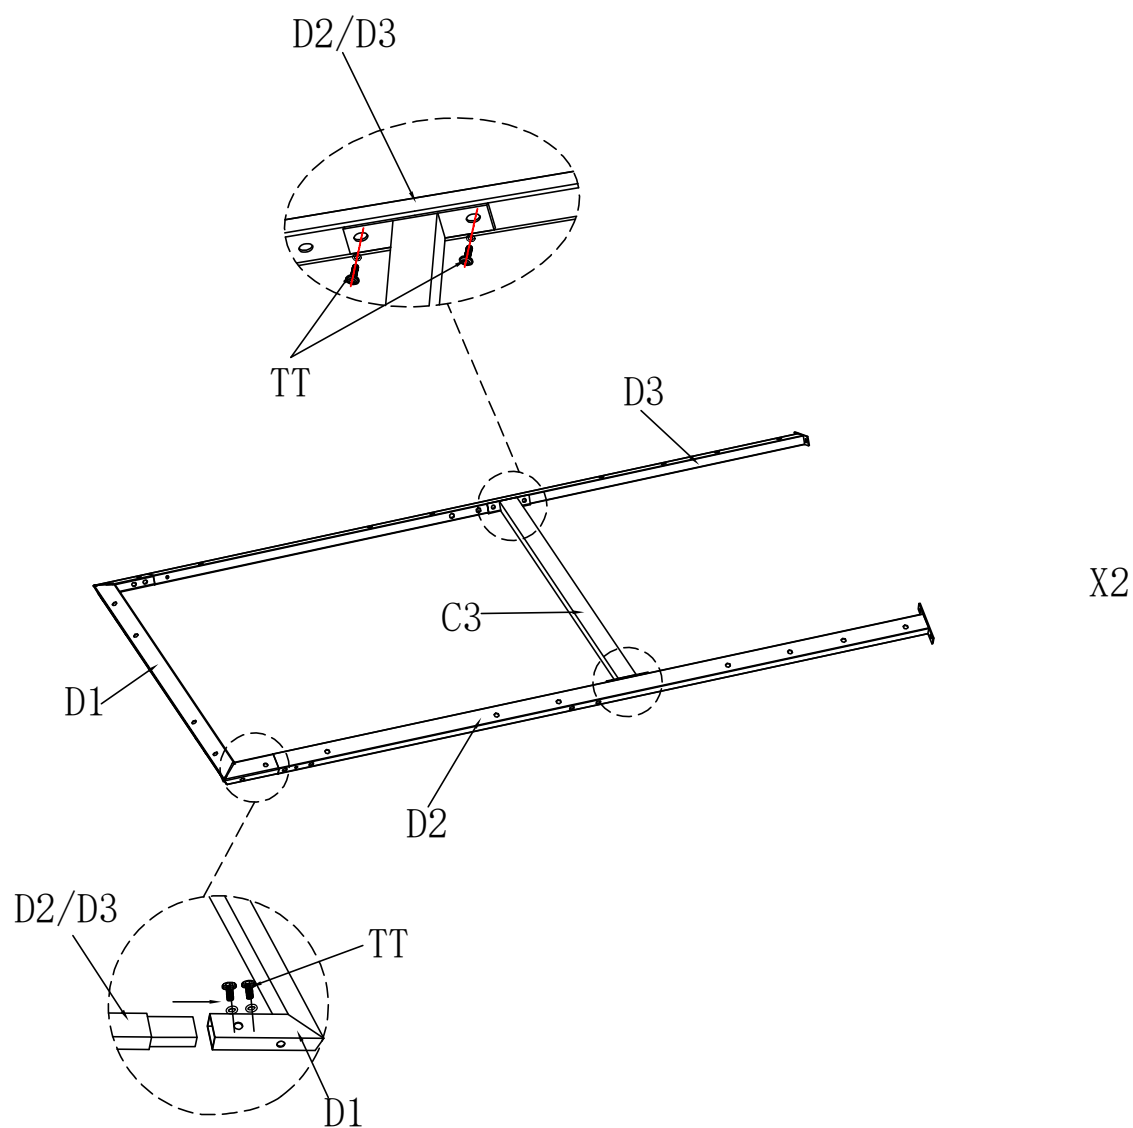

Ⓓ1 2X



Ⓓ2 2X



Ⓓ3 2X





Ⓒ3 2X



Ⓙ1 16X

M6X15

STEP. 11

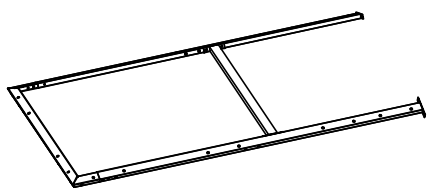
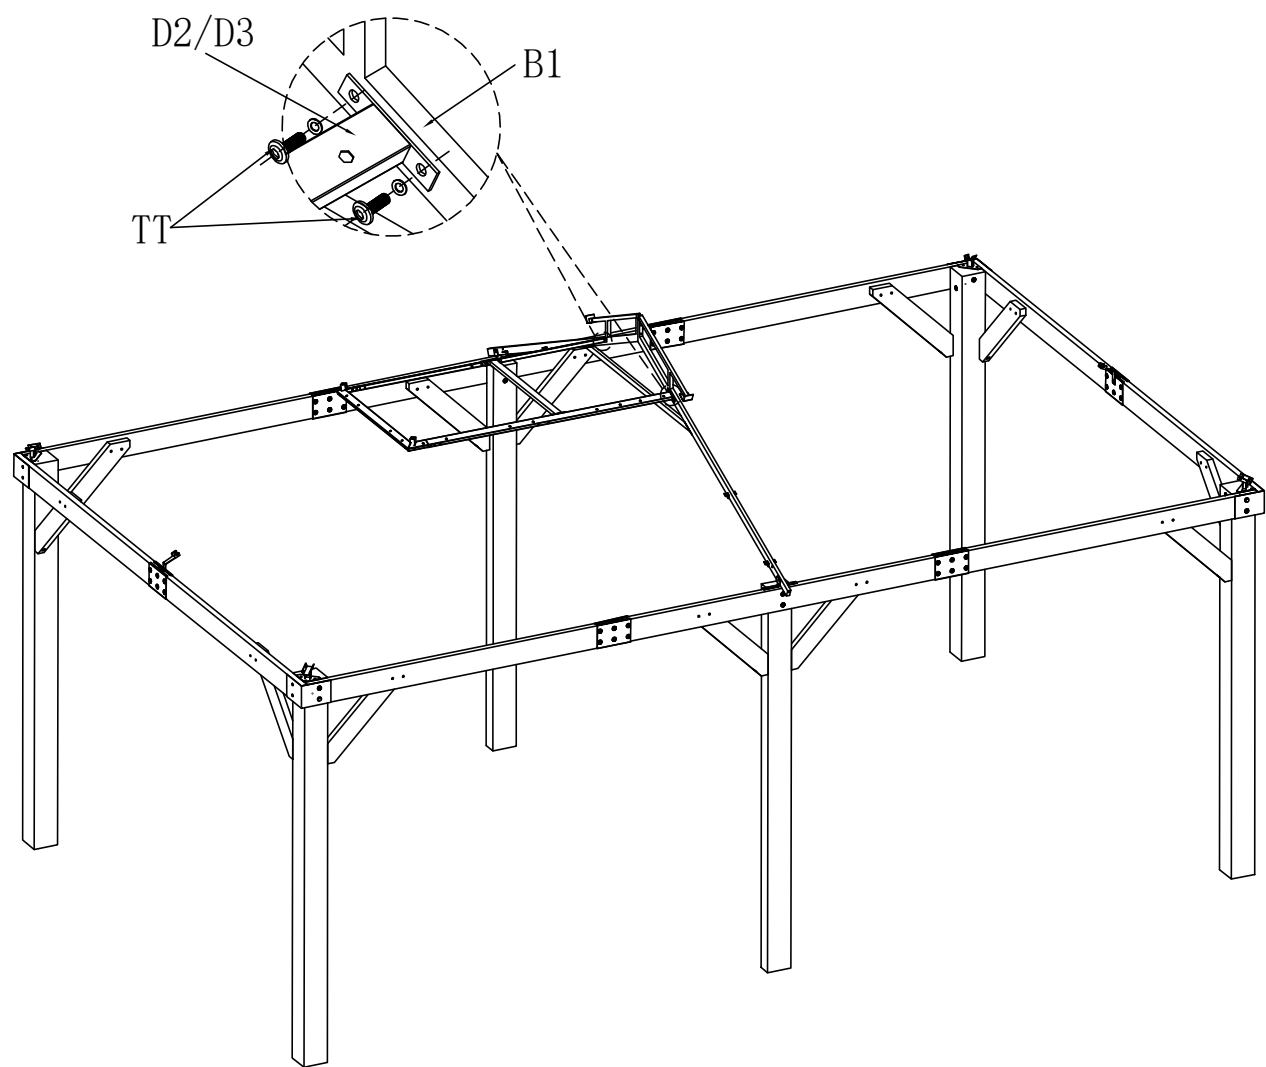


1X



 4X

STEP. 12

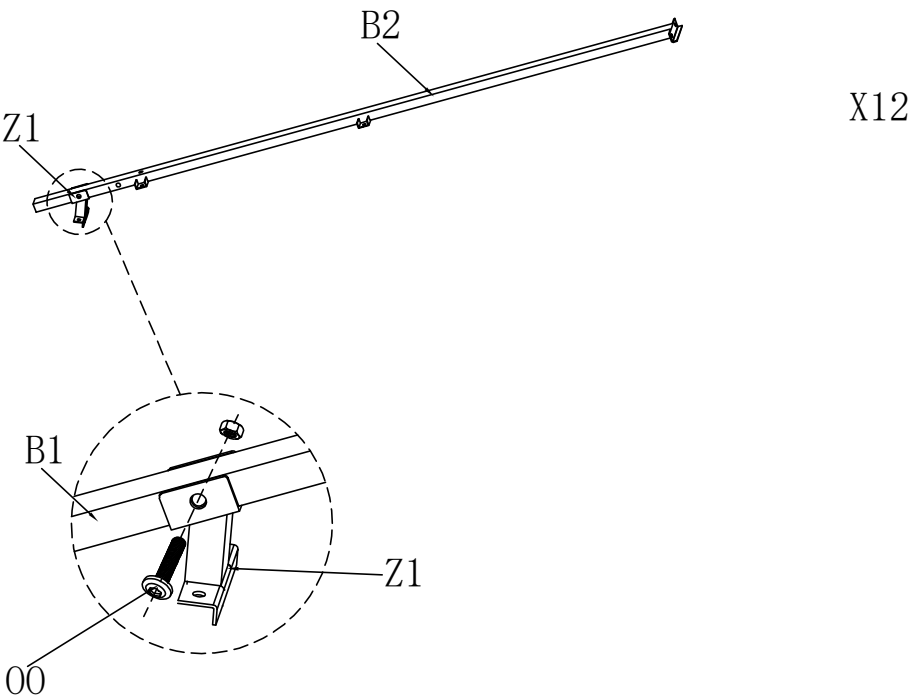

Ⓟ2 12X






Ⓟ1 12X





Ⓟ0 12X

M6*45

STEP. 13

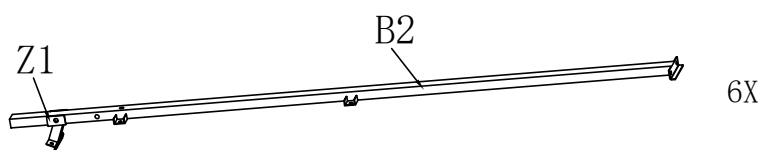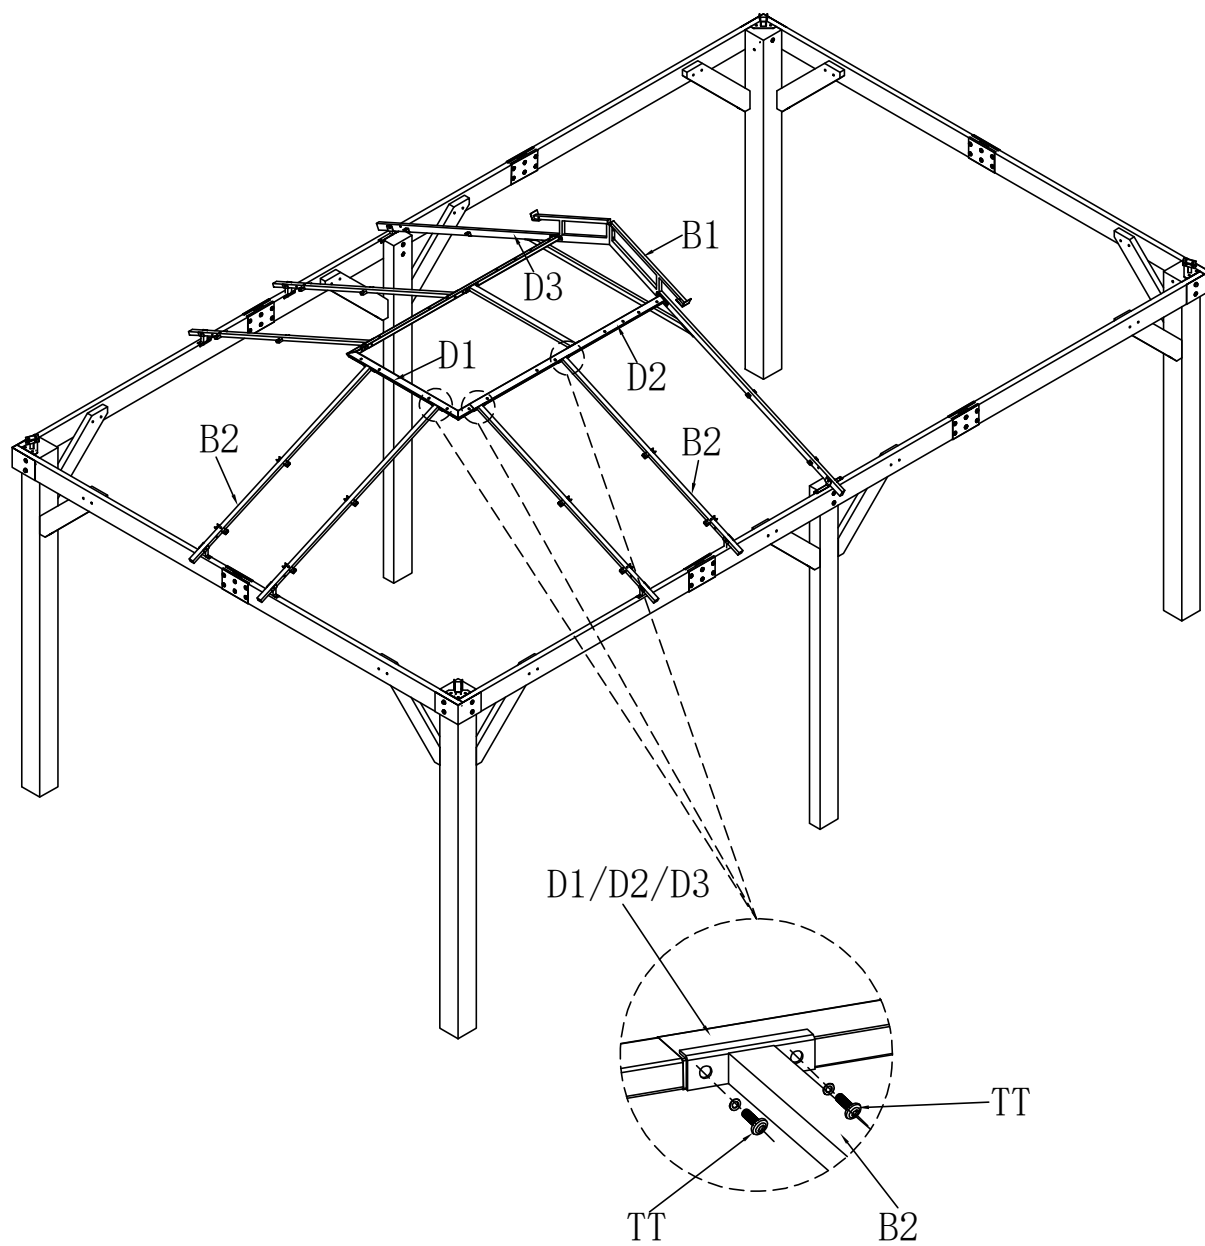

STEP. 14


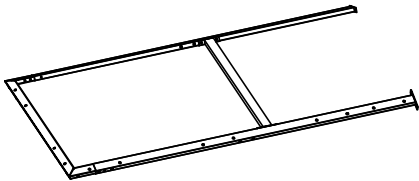
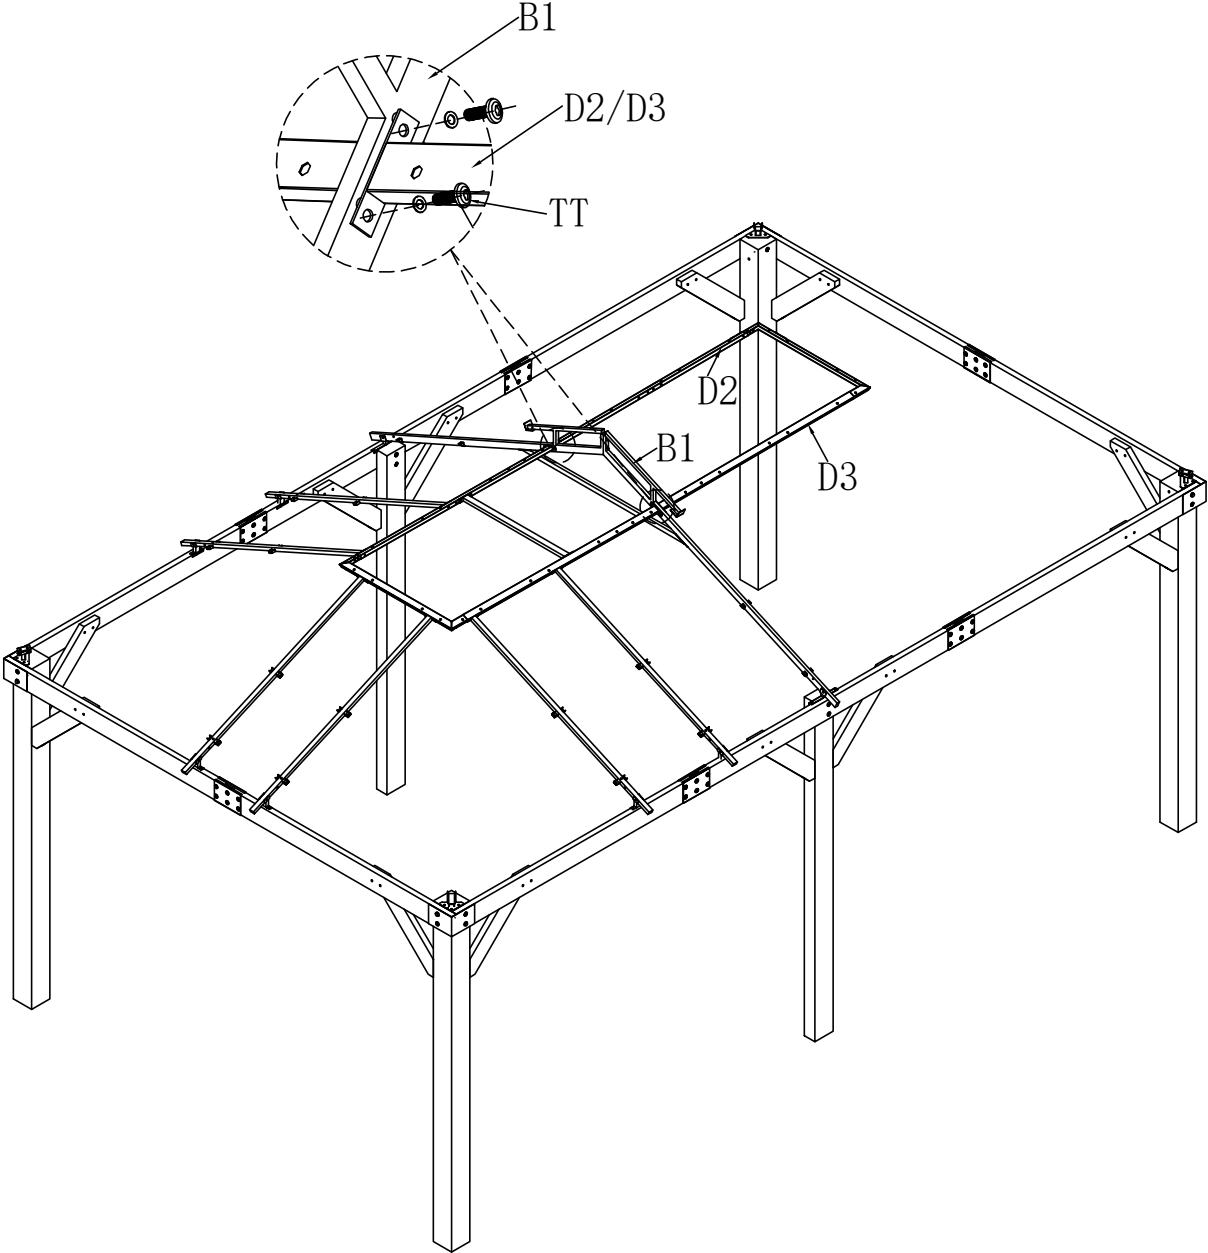


1X




TT 4X

STEP. 15

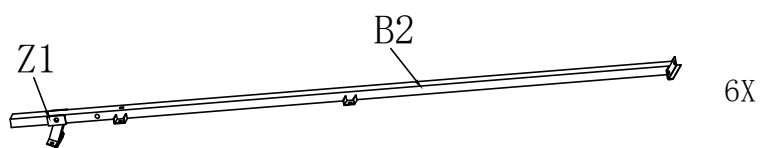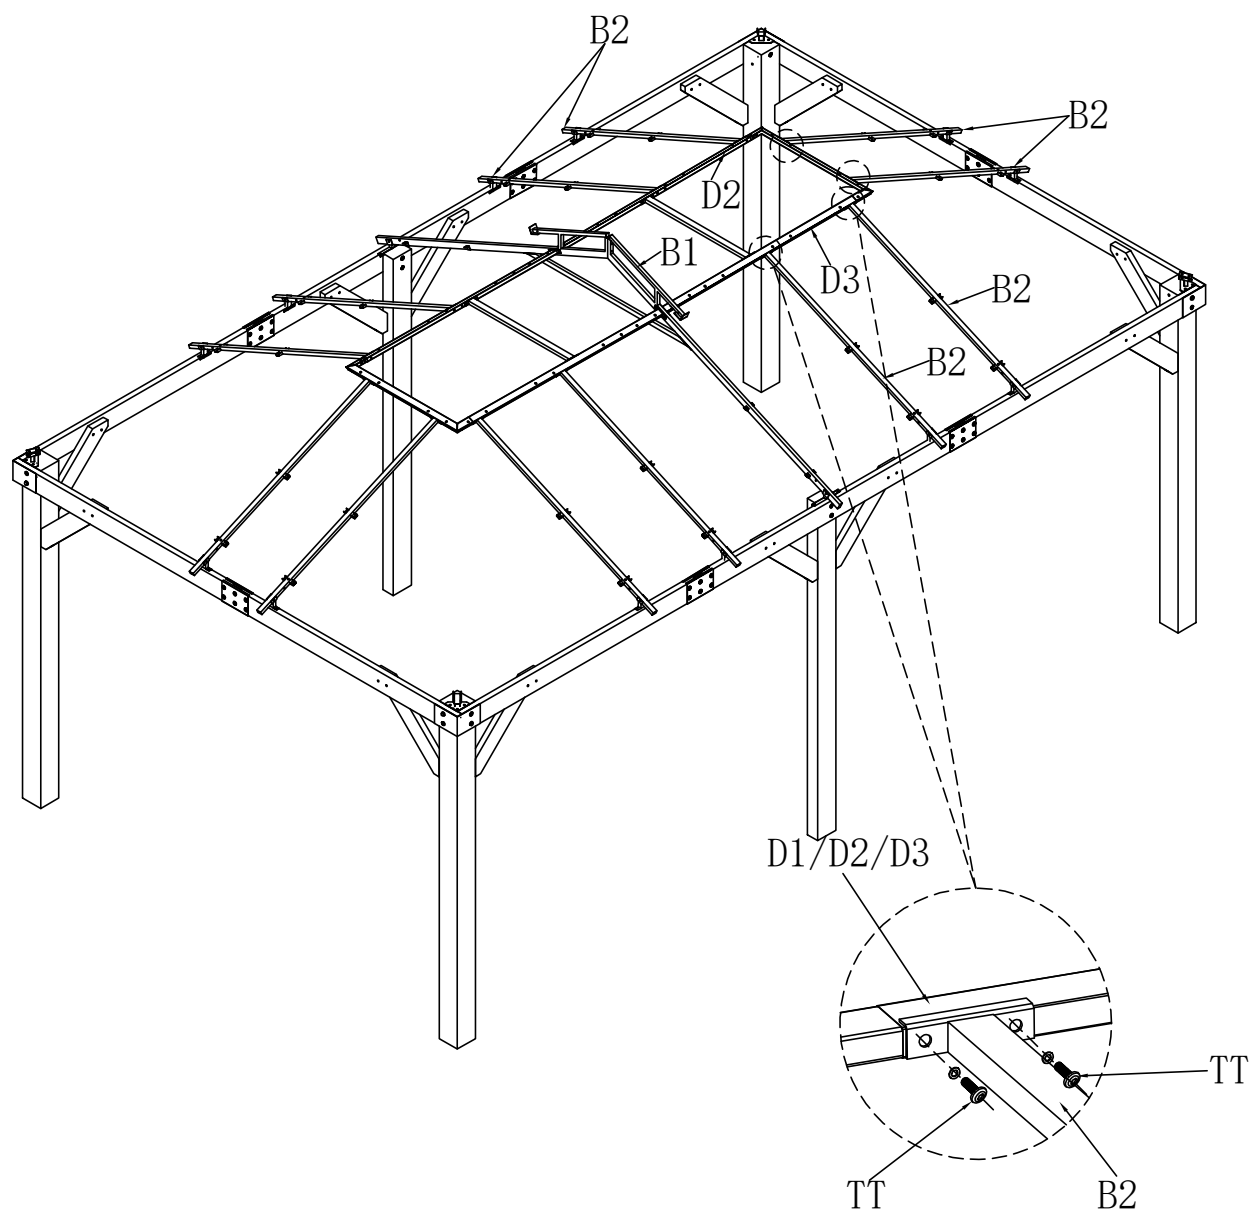

STEP. 16

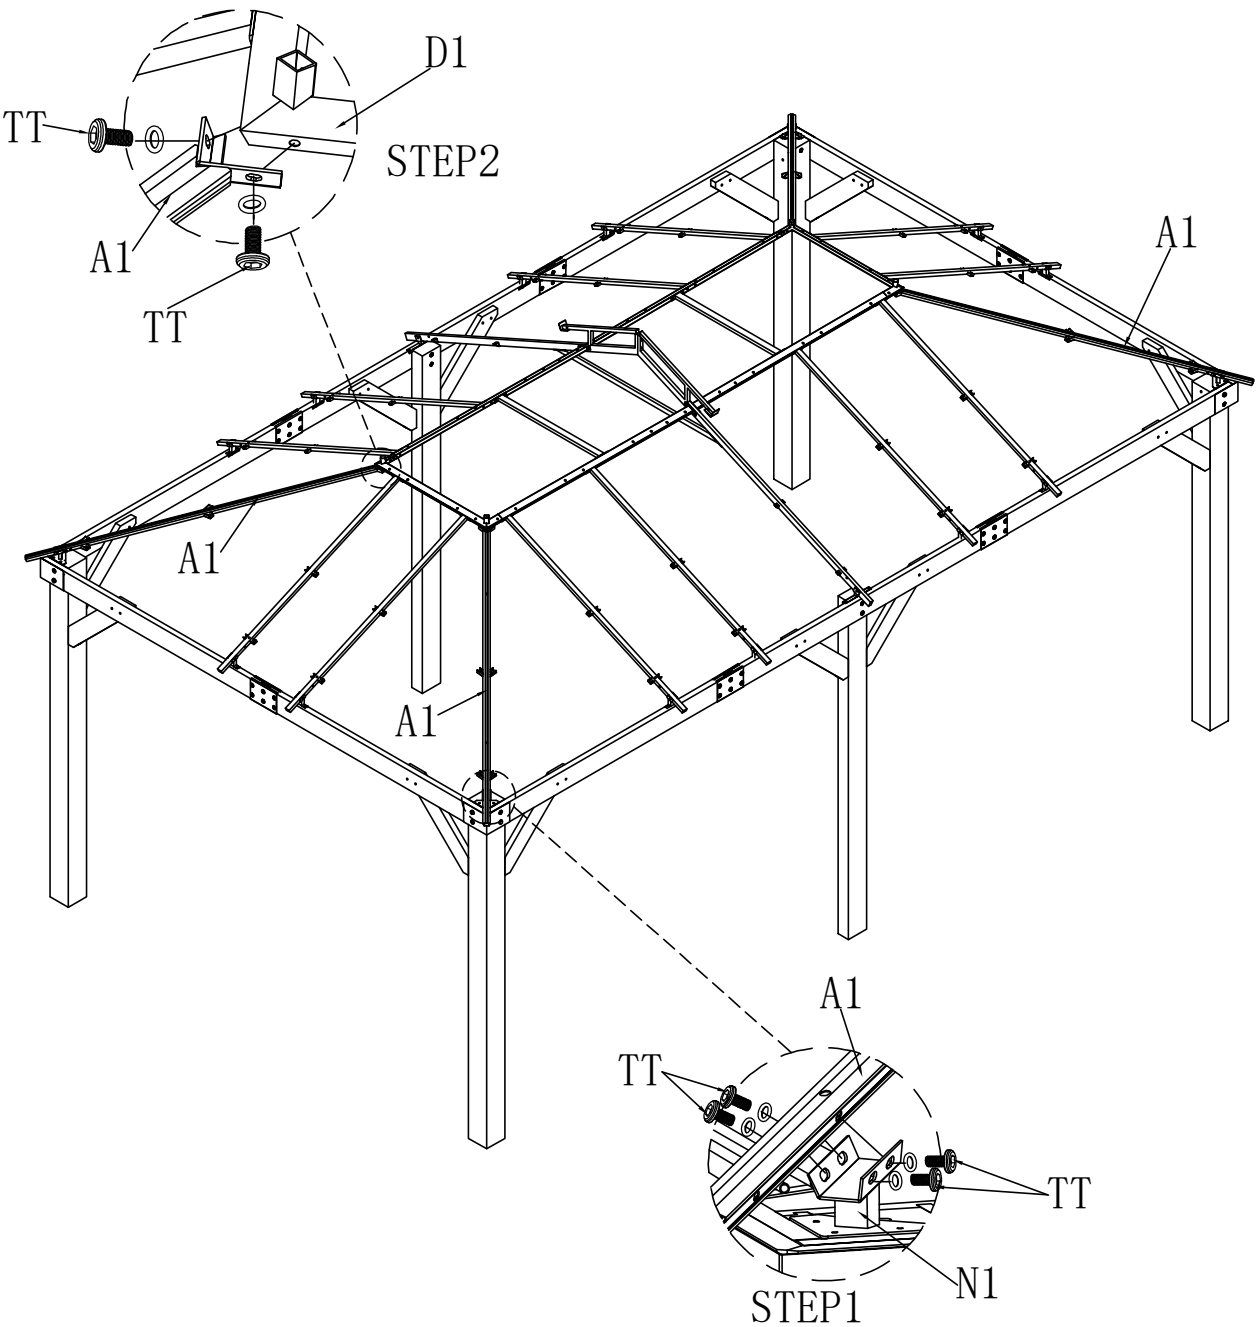



Ⓐ 4X



M6X15

Ⓣ 24X

STEP. 17

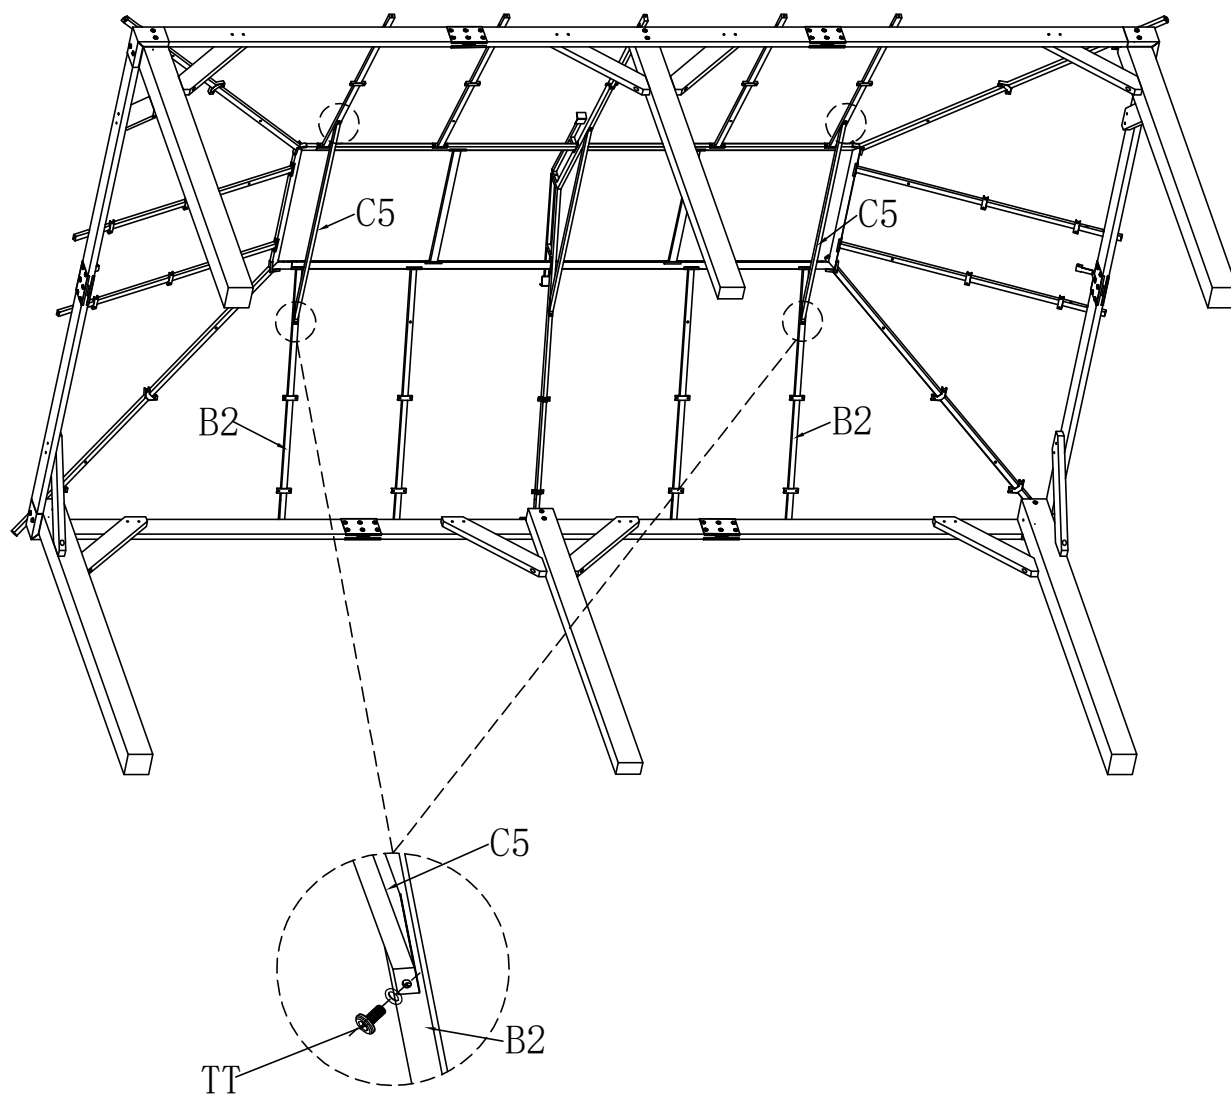



Ⓒ5 2X




M6X15

Ⓙ1 4X


STEP. 18

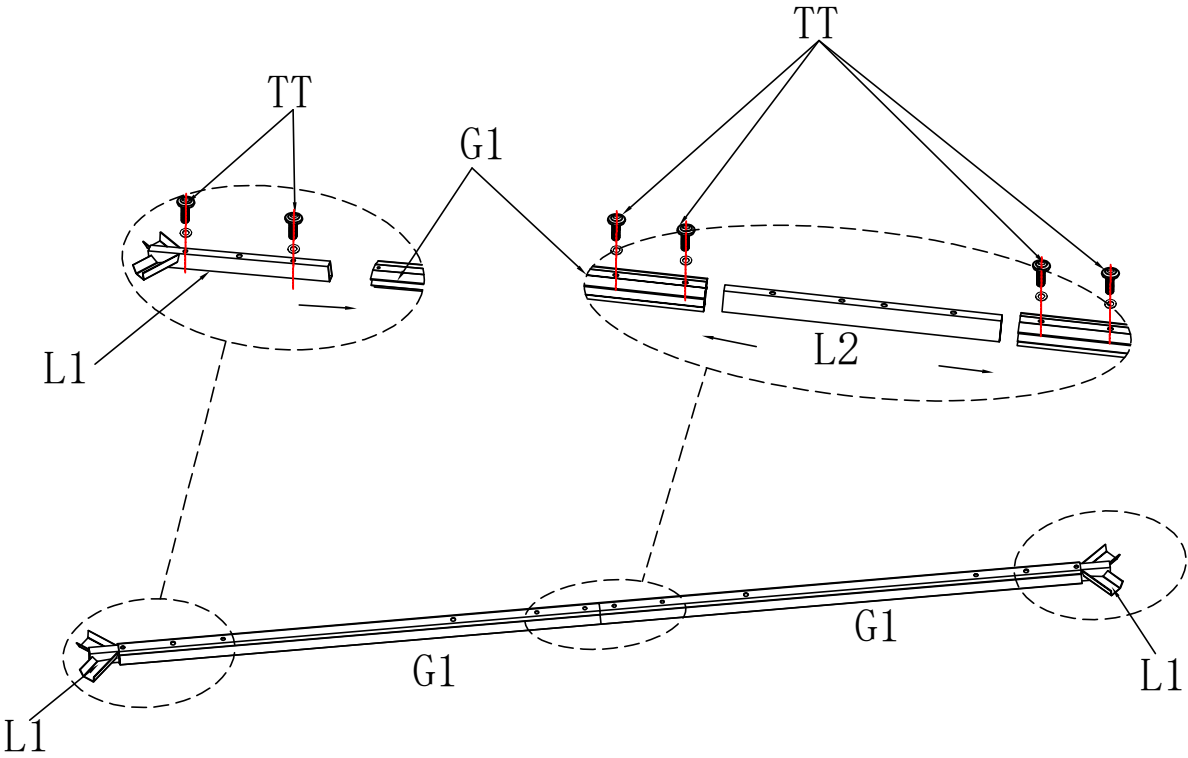

Ⓒ 2X



Ⓒ 2X




Ⓒ 1X



M6X15

Ⓒ 8X

STEP. 19

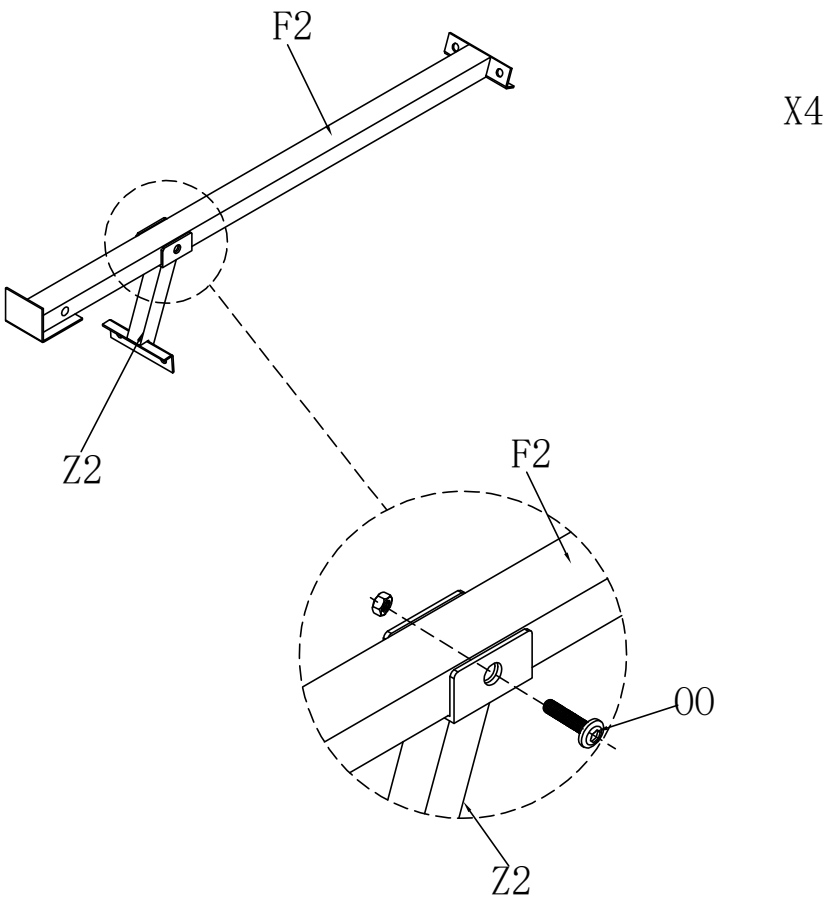

F2 4X





Z2 4X




00 4X

M6X45

STEP. 20

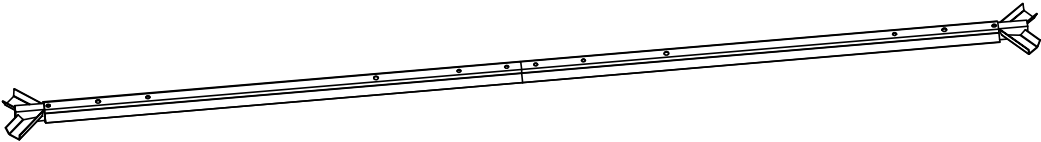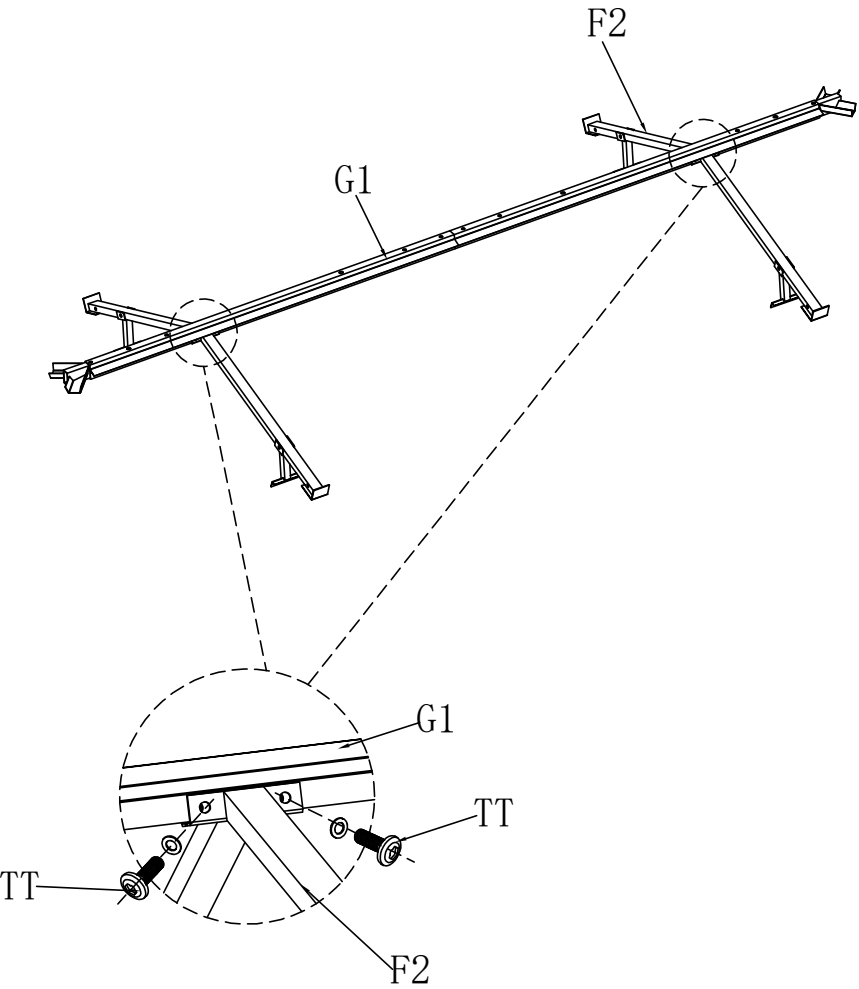

1X

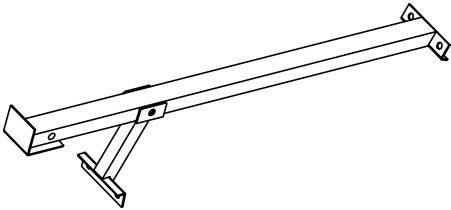



4X



M6X15

TT 8X

STEP. 21

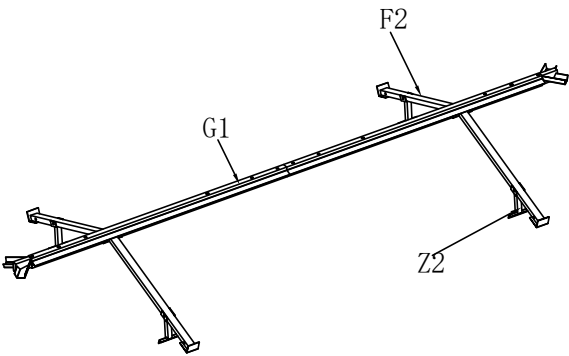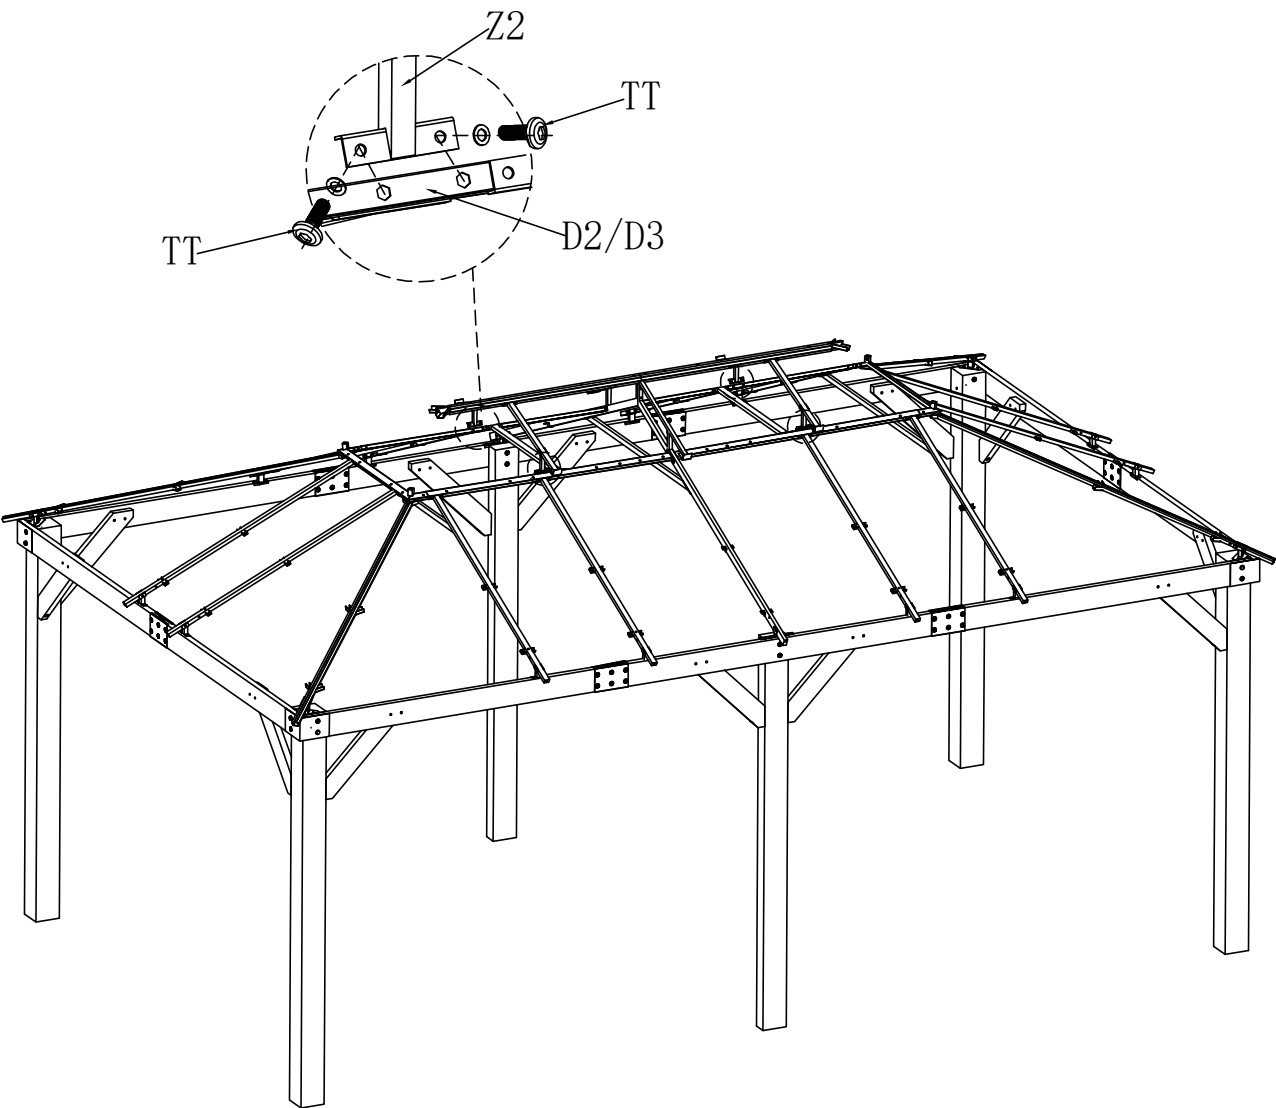


M6X15



TT 8X

STEP. 22

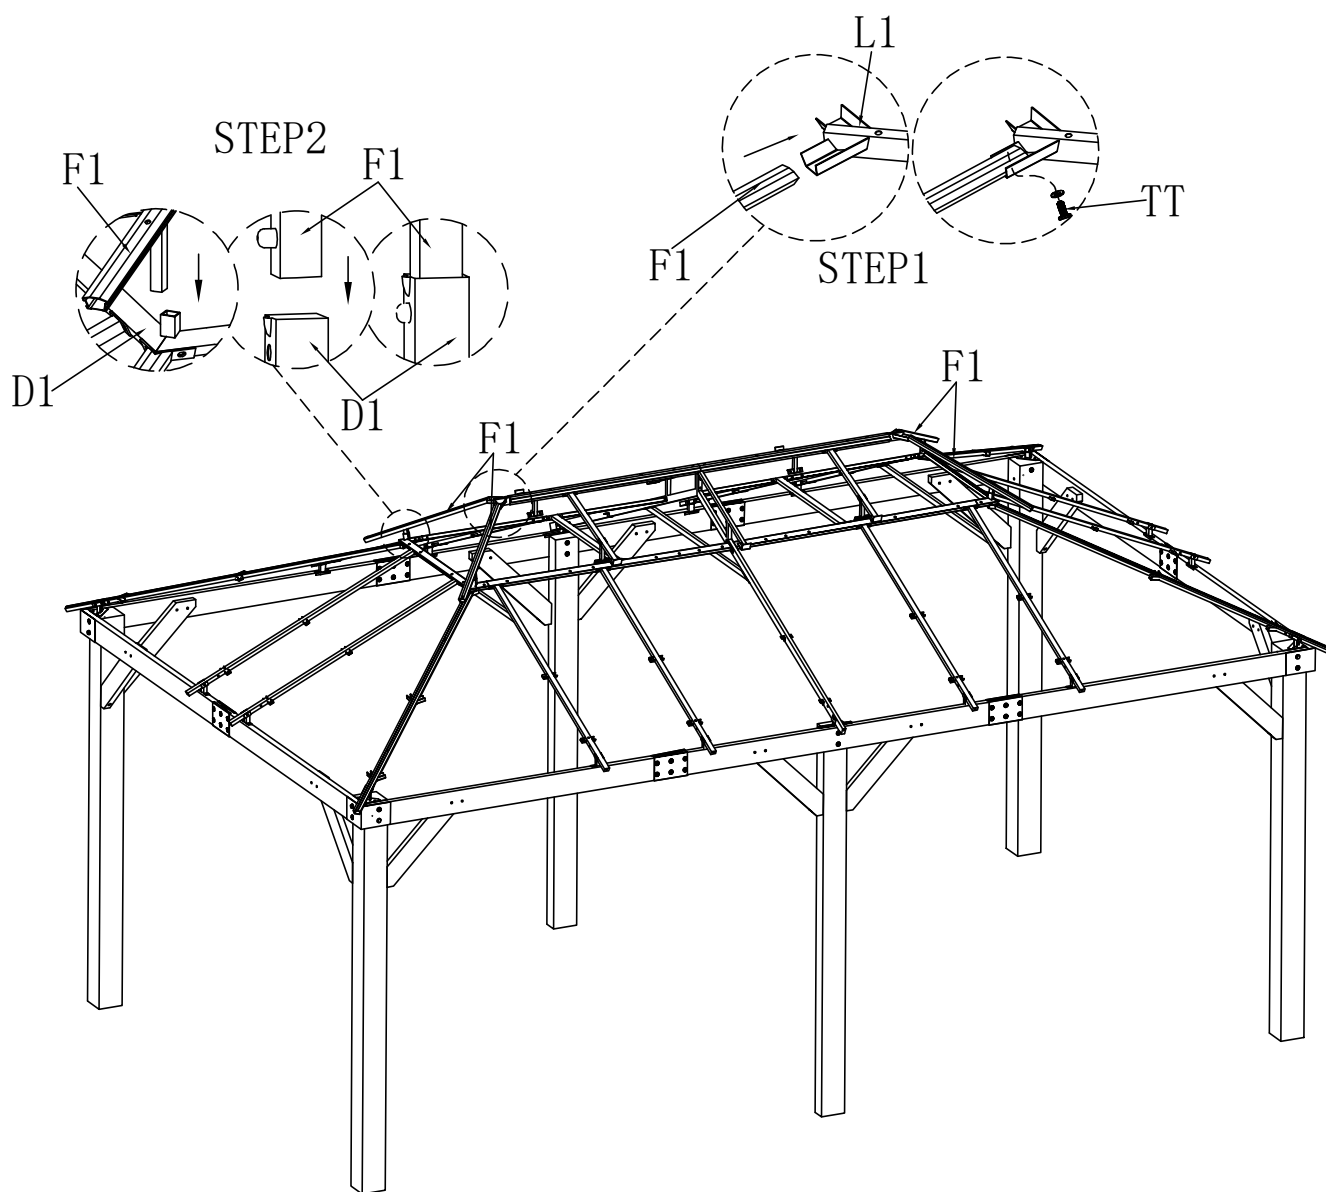



(F1) 4X



(TT) 4X

M6X15

STEP. 23

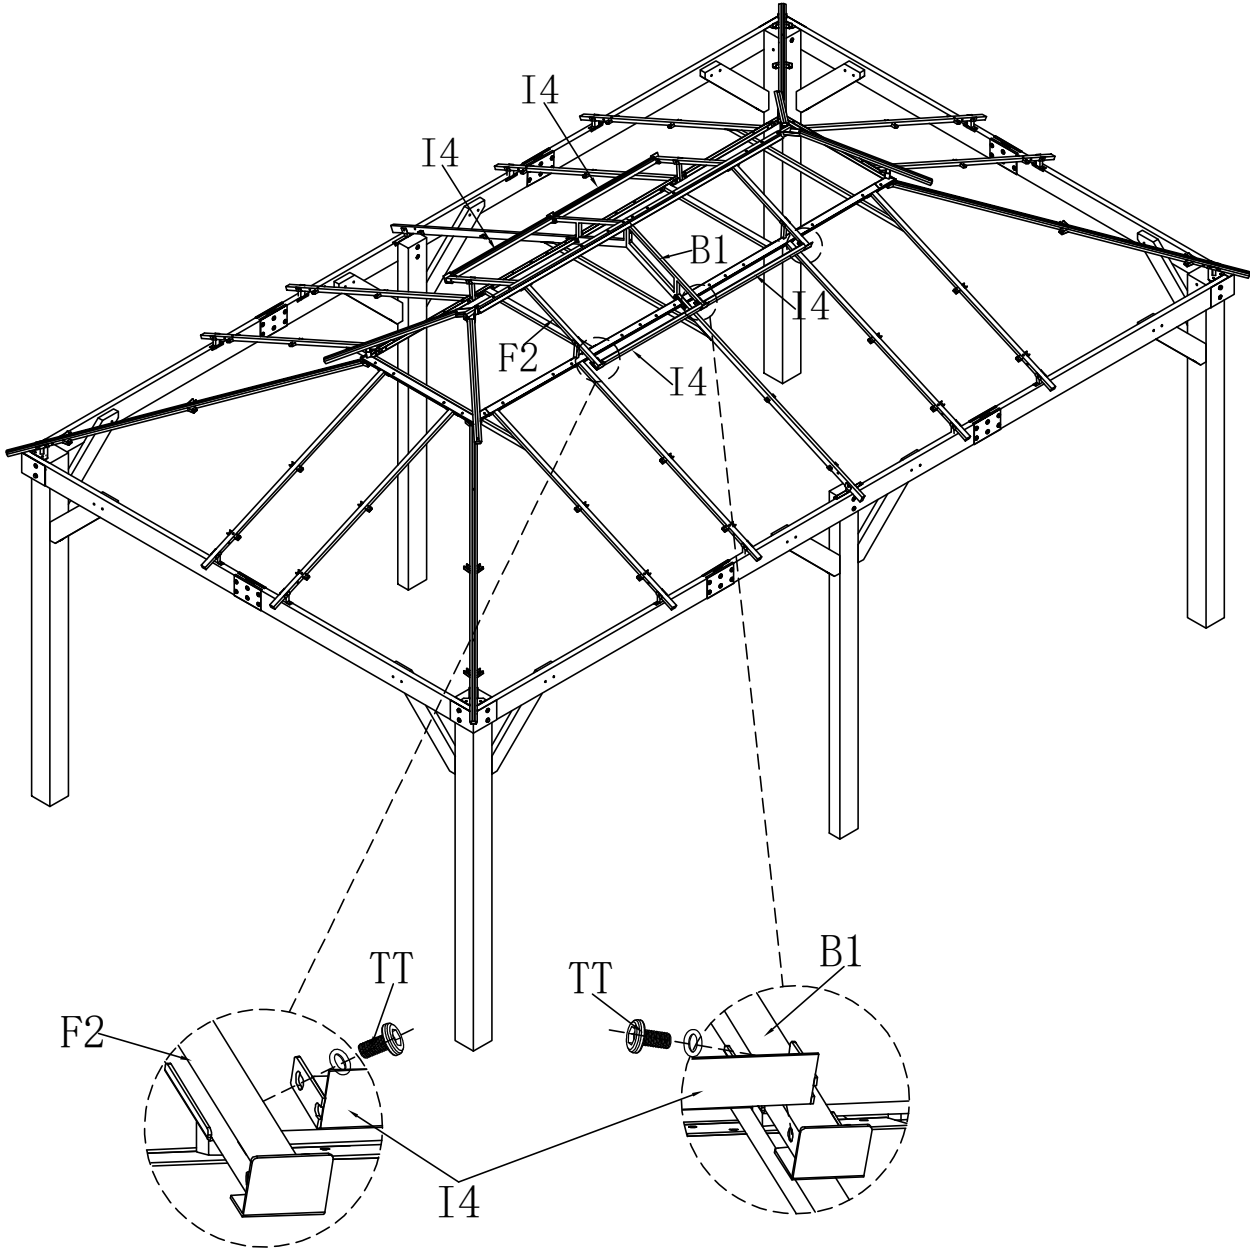


I4 4X



M6X15

TT 8X

STEP. 24

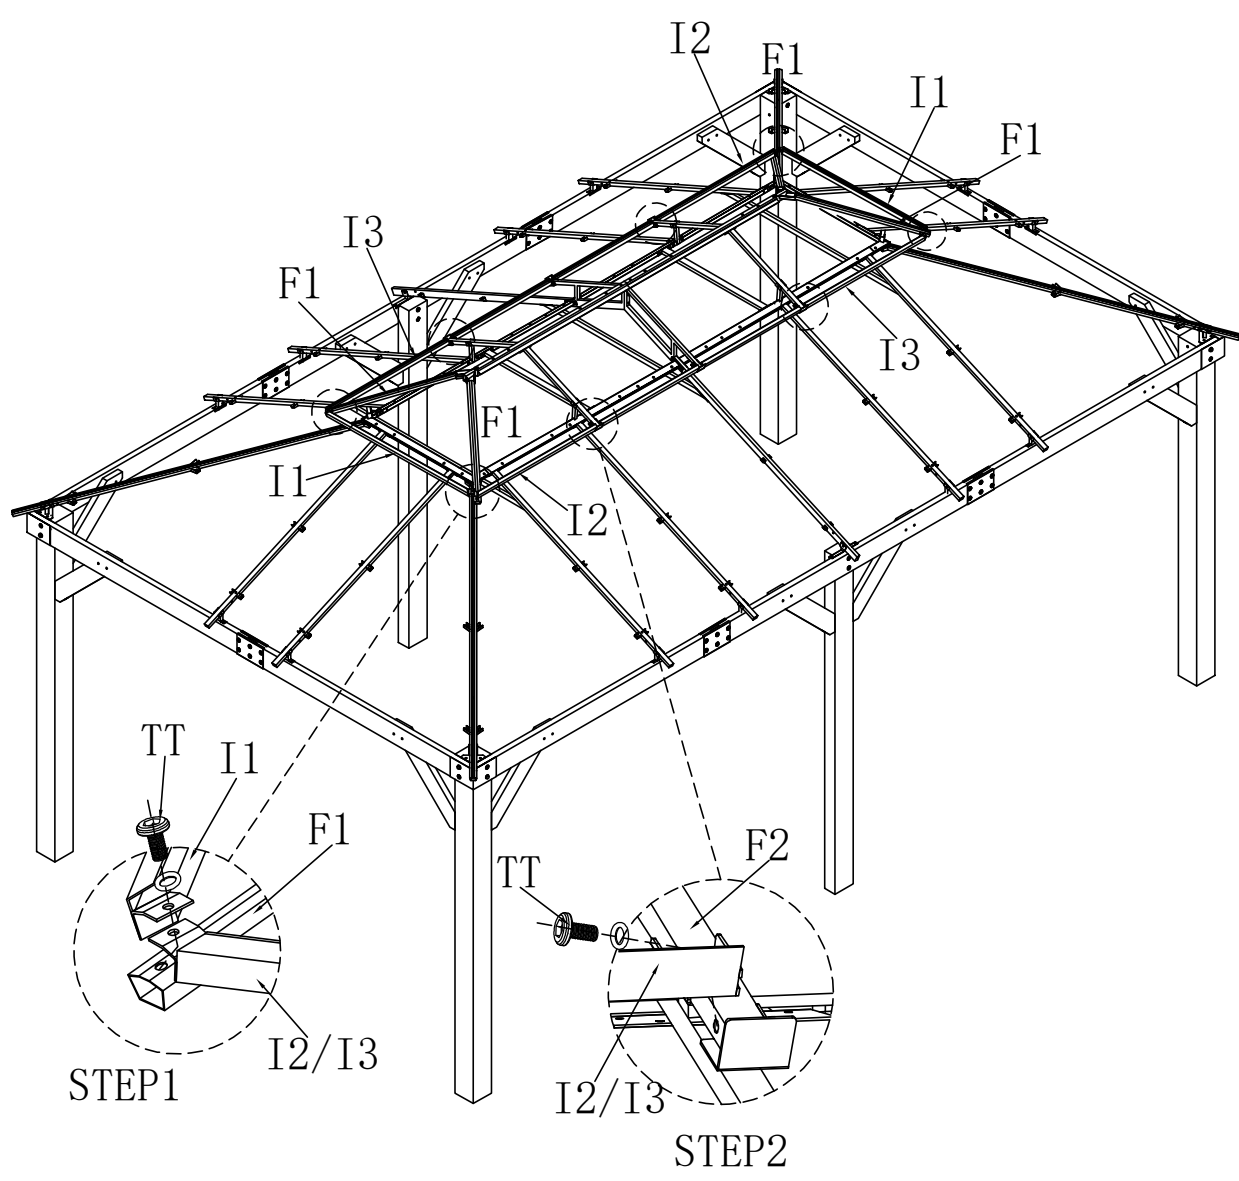

① 2X



② 2X




③ 2X





M6X15

⑦ 8X


STEP. 25

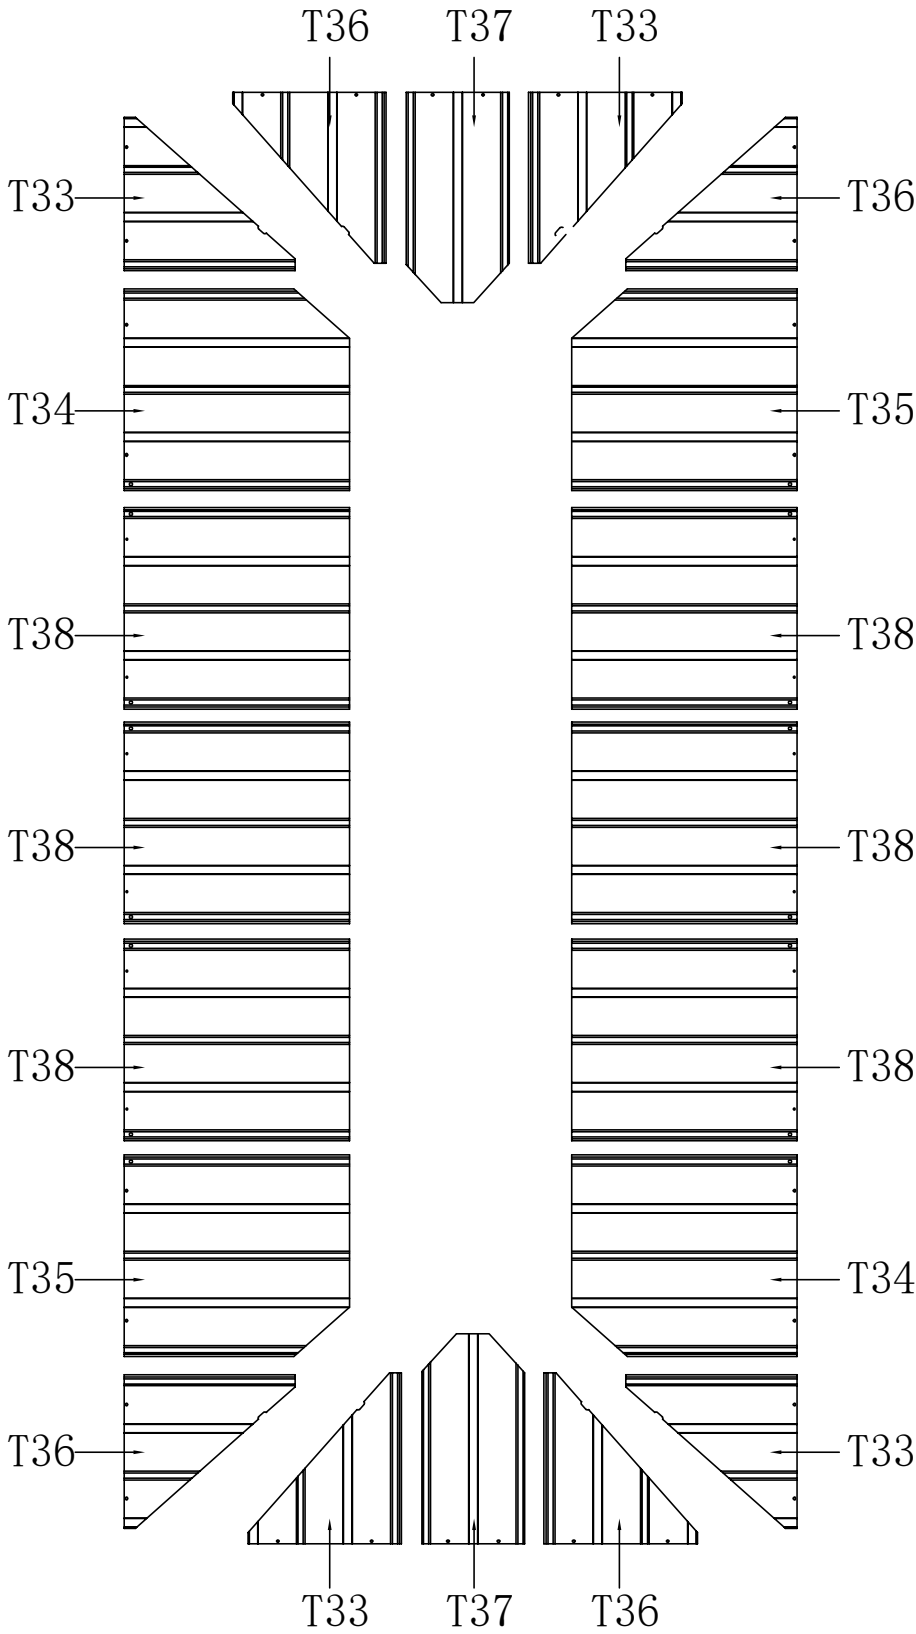


STEP. 26

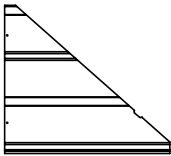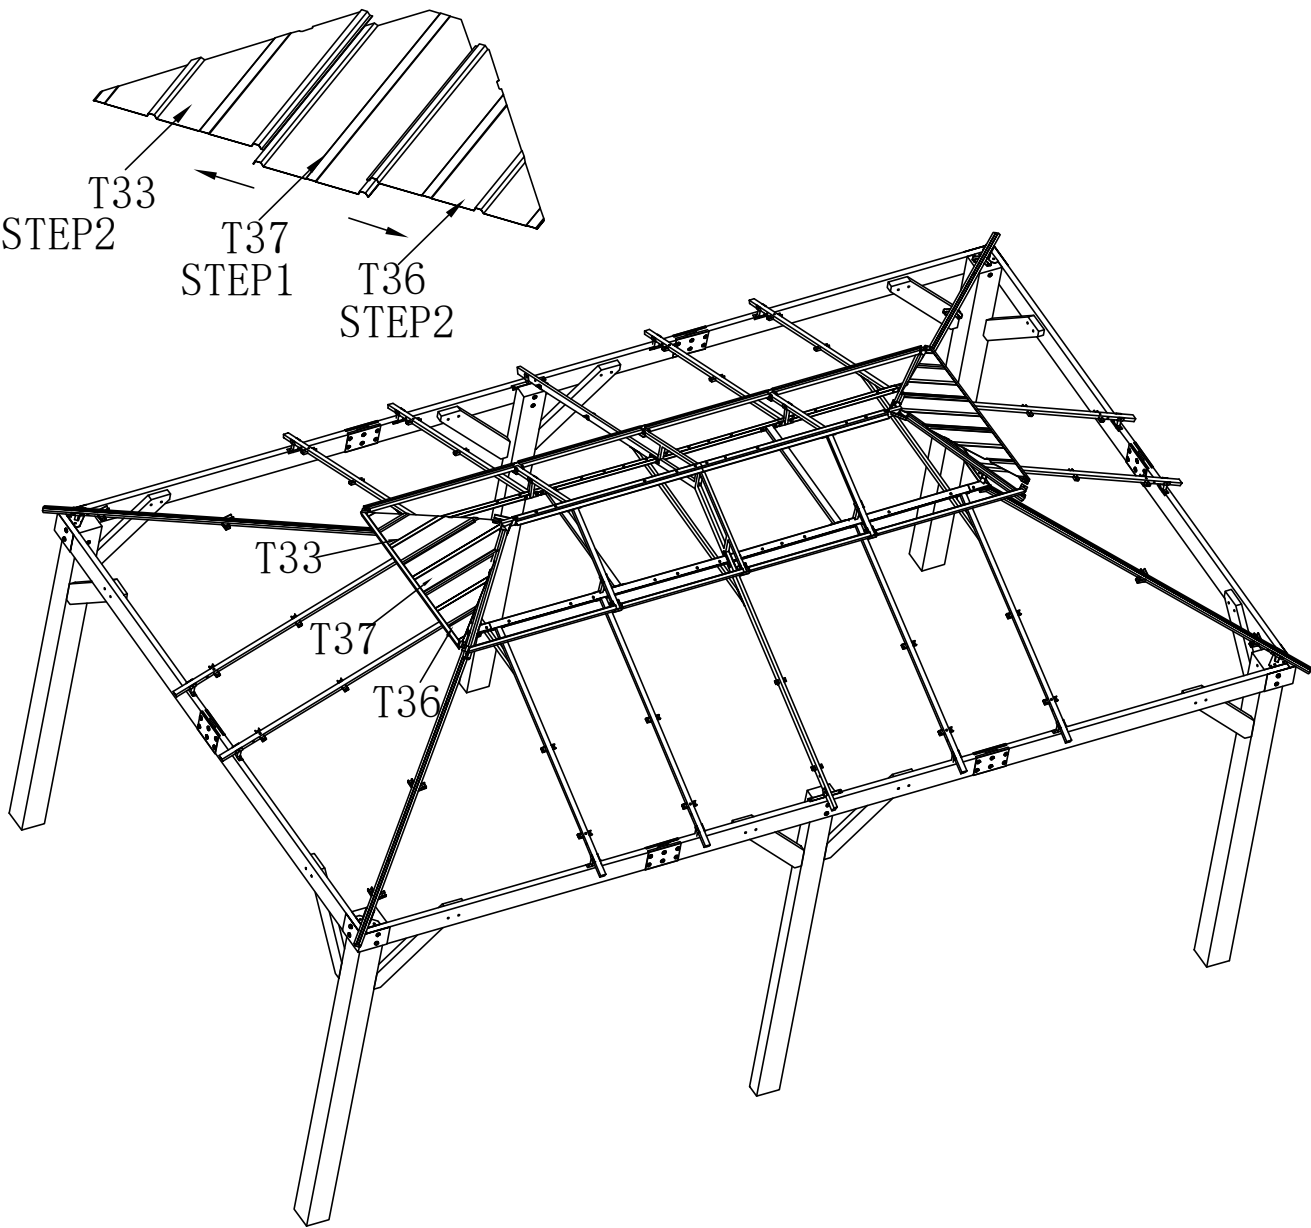

T33 2X






T37 2X

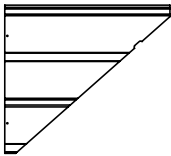


T36 2X


STEP. 27

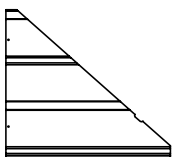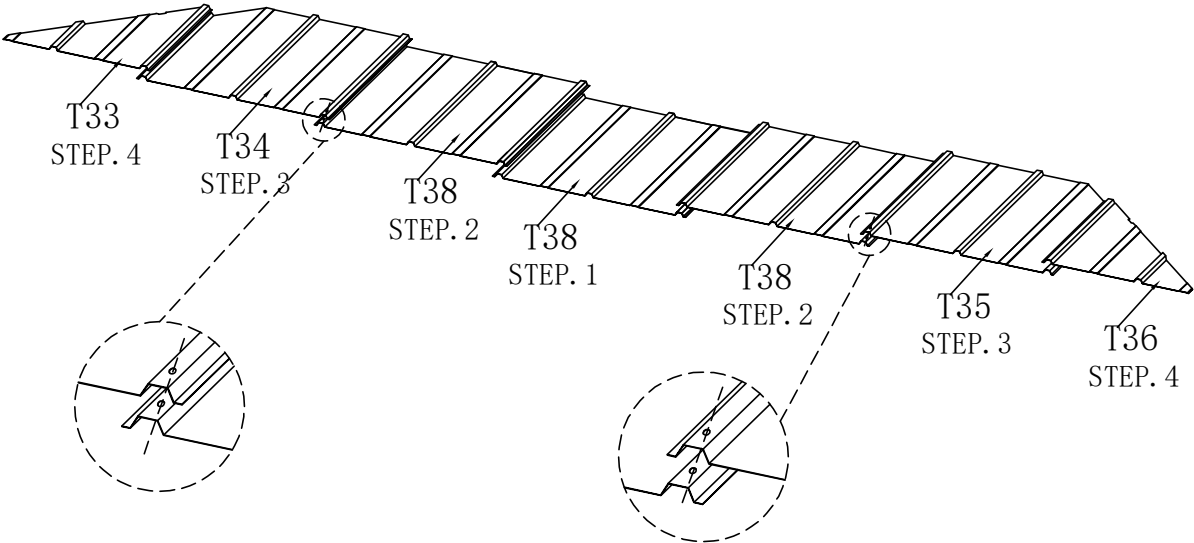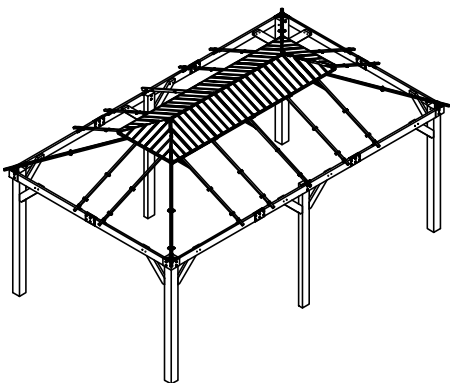


T33 2X

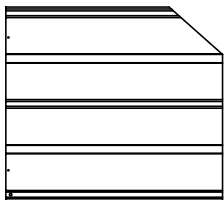


T34 2X

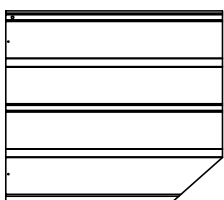

T35 2X

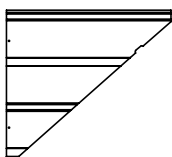


T36 2X

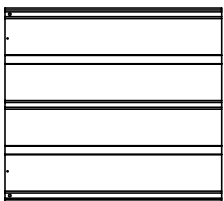

T38 6X

STEP. 28


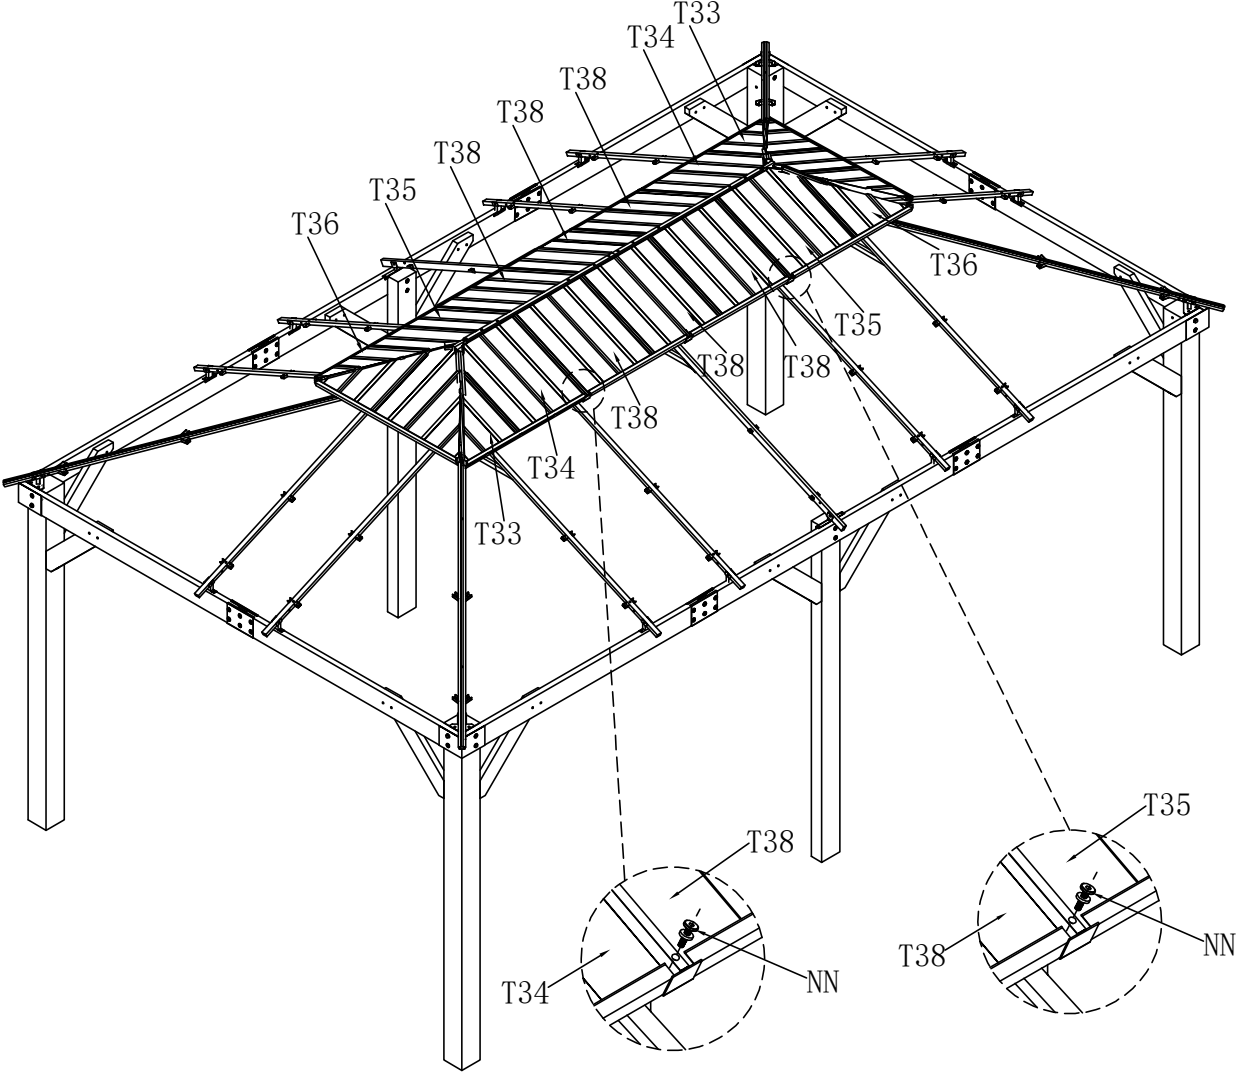


M6X25


4X

STEP. 29


PRE-ASSEMBLE **BOLT & NUT (II)** TO **TOP BAR COVER (S4)**,
PRE-ASSEMBLE **BOLT & NUT (KK)** TO **SLANT BAR COVER (S1)/(S2)/(S3)**.

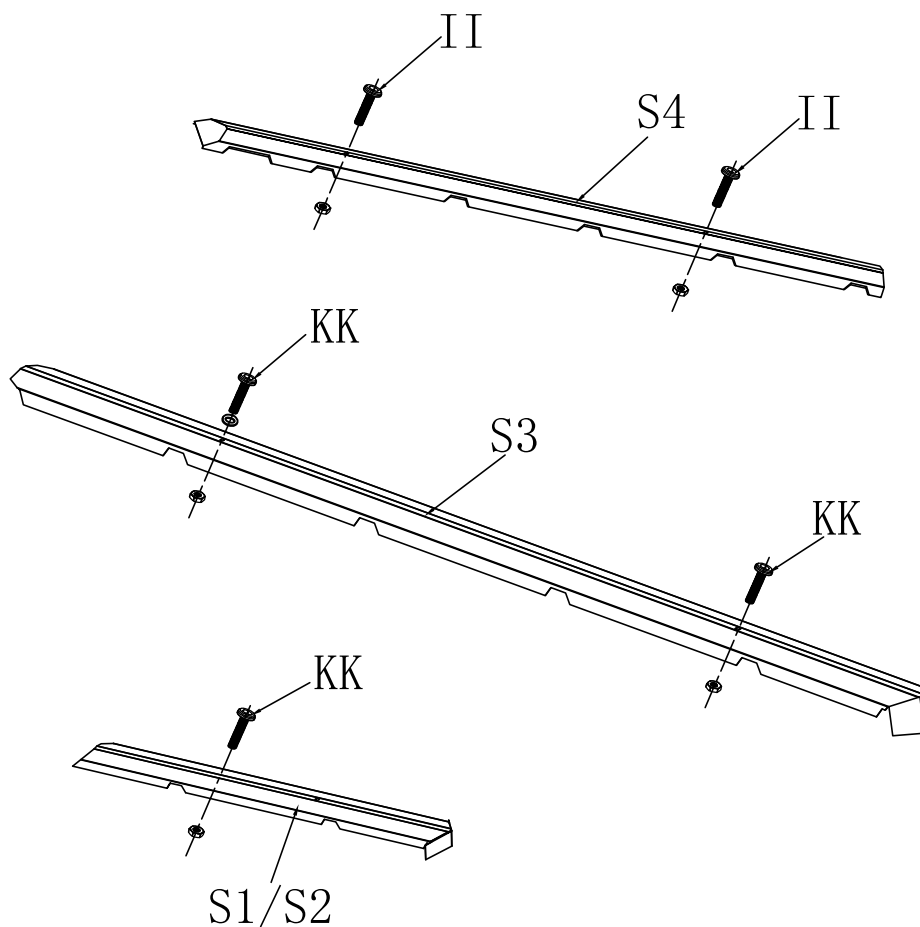

Ⓔ S1 2X



Ⓔ S2 2X




Ⓔ S3 4X



Ⓔ II 4X

M6X70





Ⓔ S4 2X




Ⓔ KK 12X

M6X55

STEP. 30

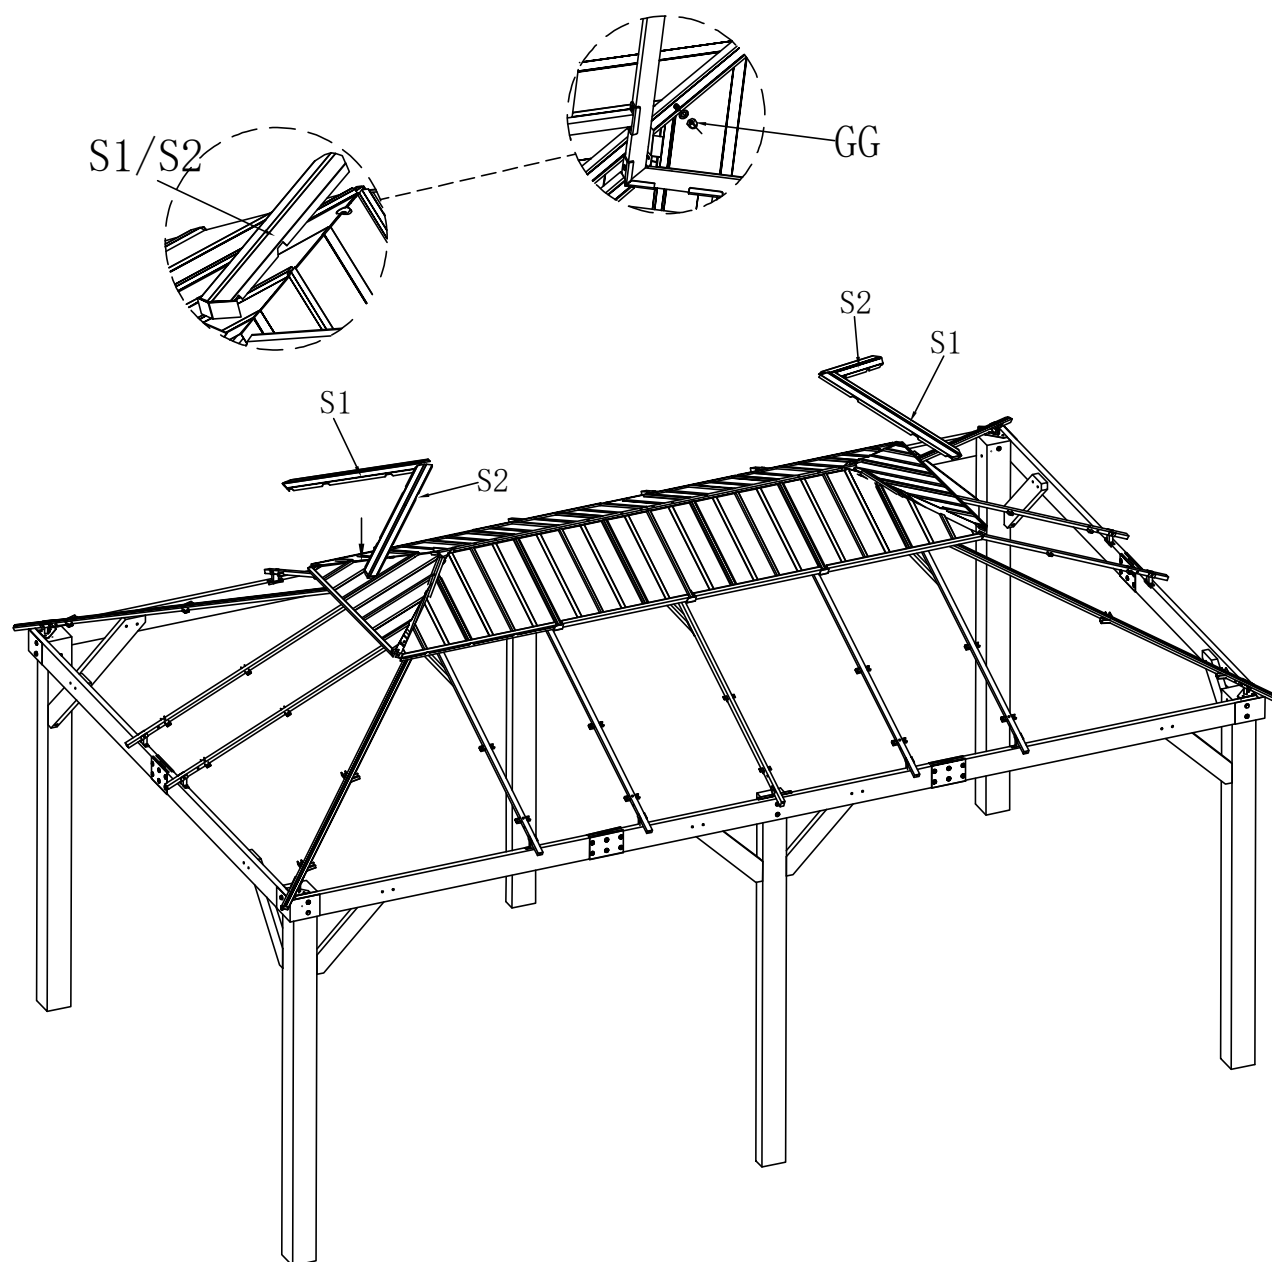

Ⓢ1 2X





Ⓢ2 2X



4X


STEP. 31

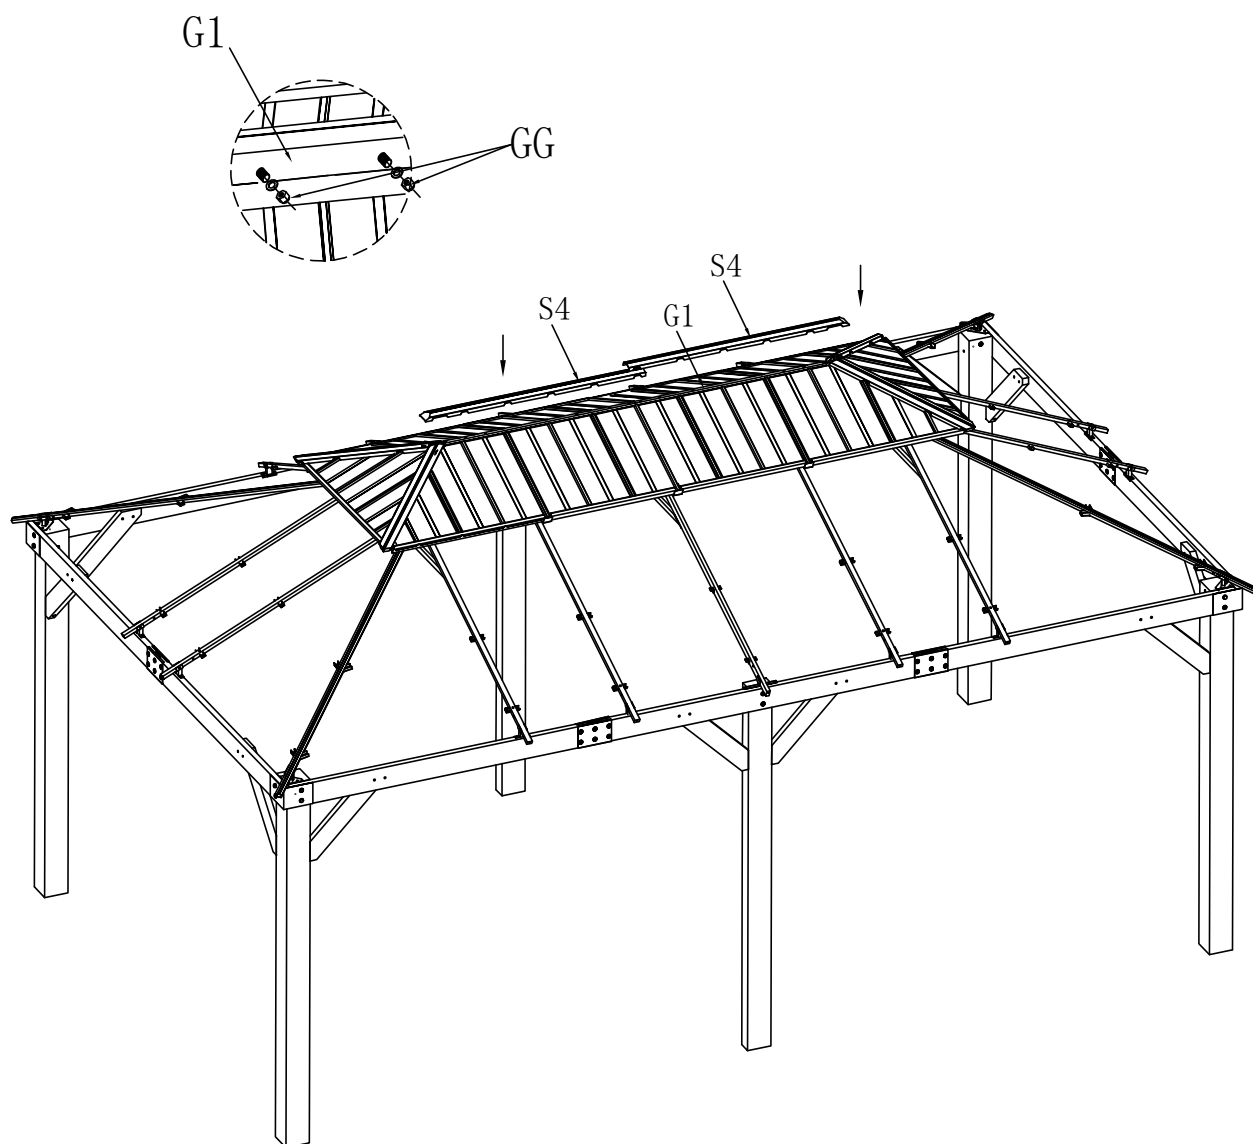


S4 2X

○ ⊞ ⊗ 4X


STEP. 32

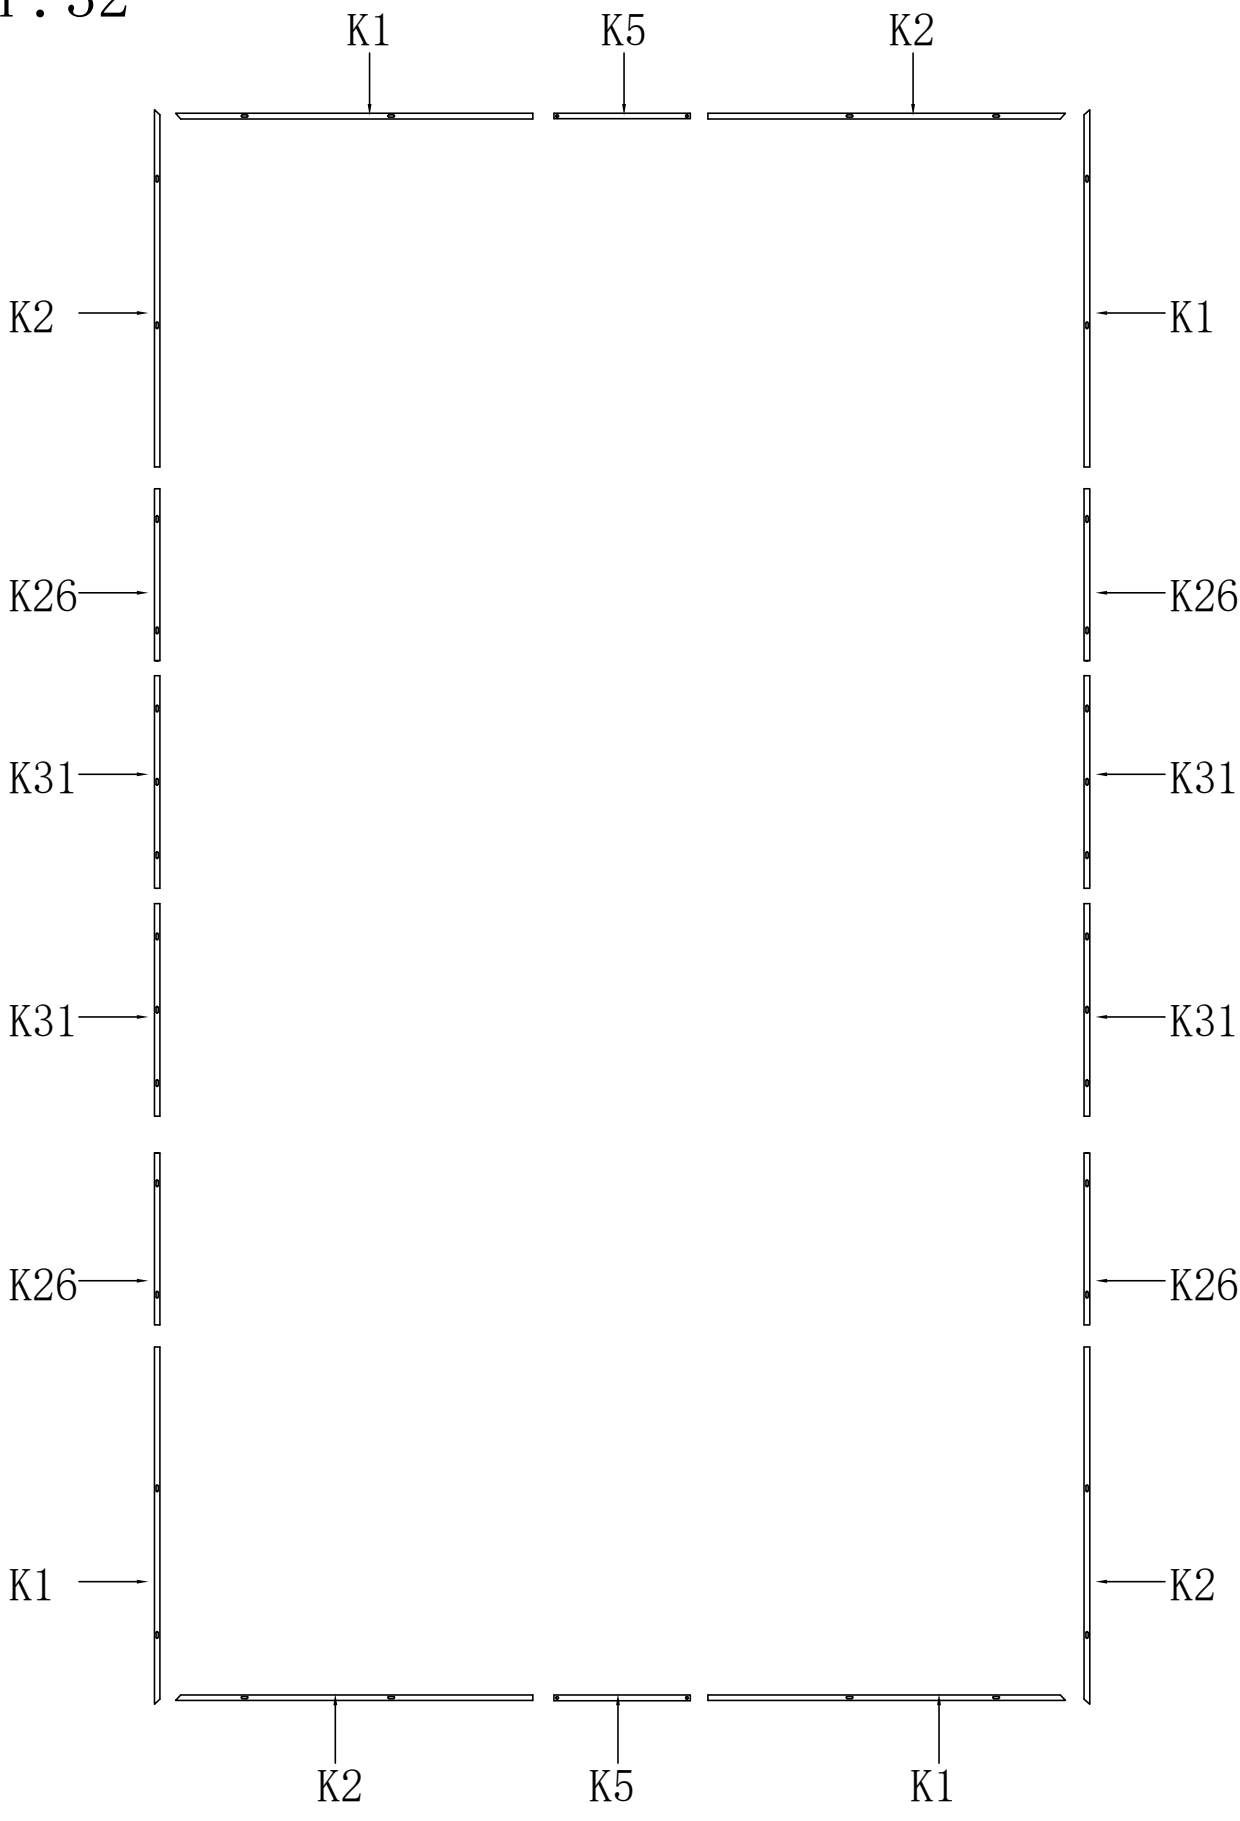


STEP. 33

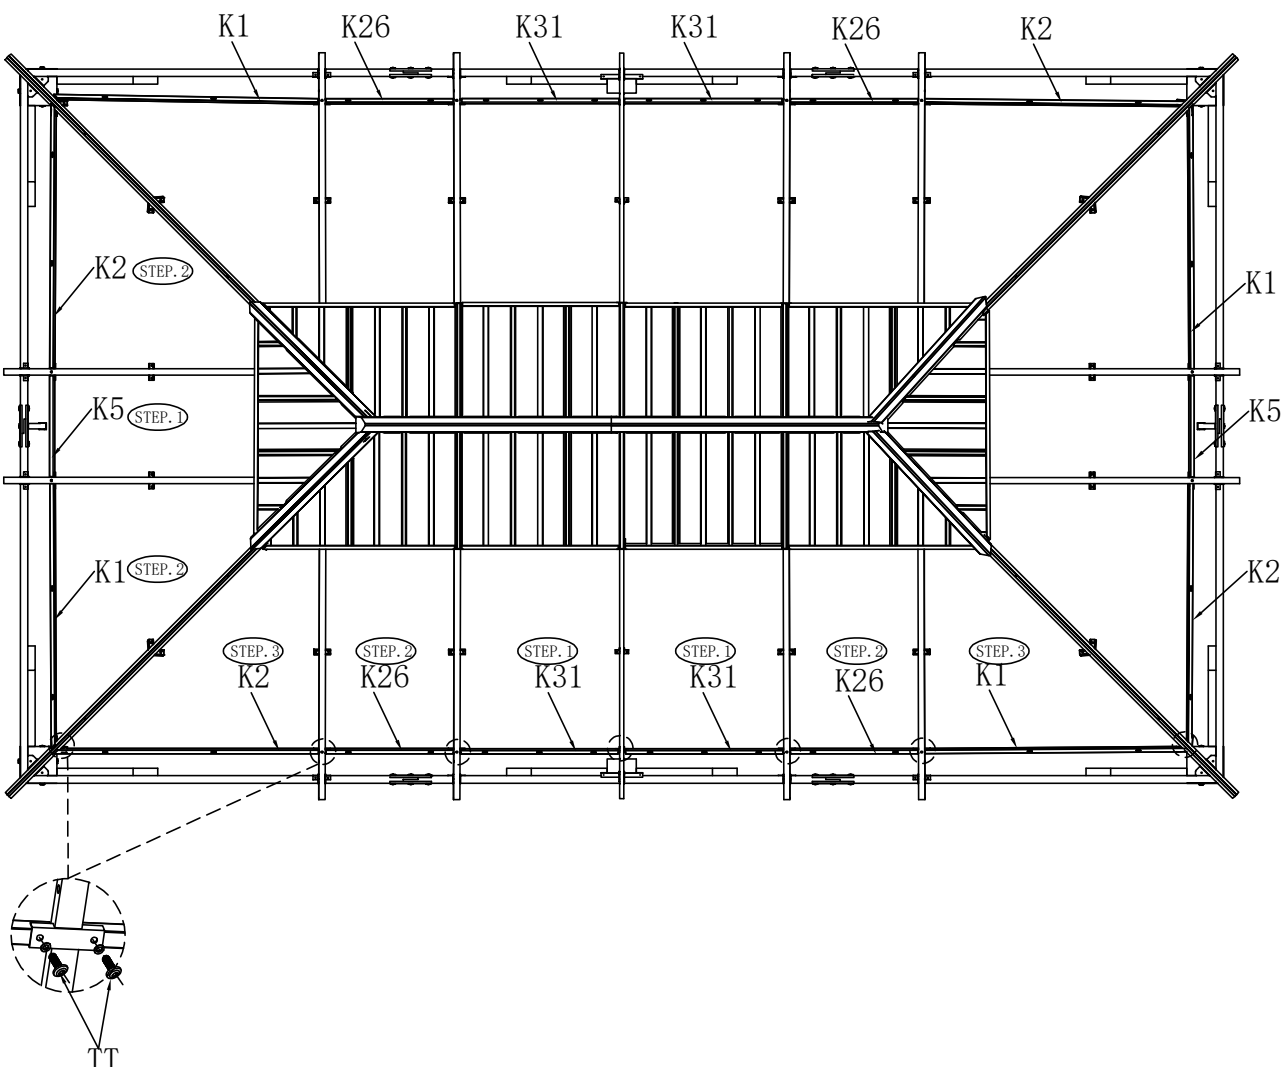


(K1) 4X



(K2) 4X



(K5) 2X



(K26) 4X




(K31) 4X





(TT) 36X

M6X15

STEP. 34

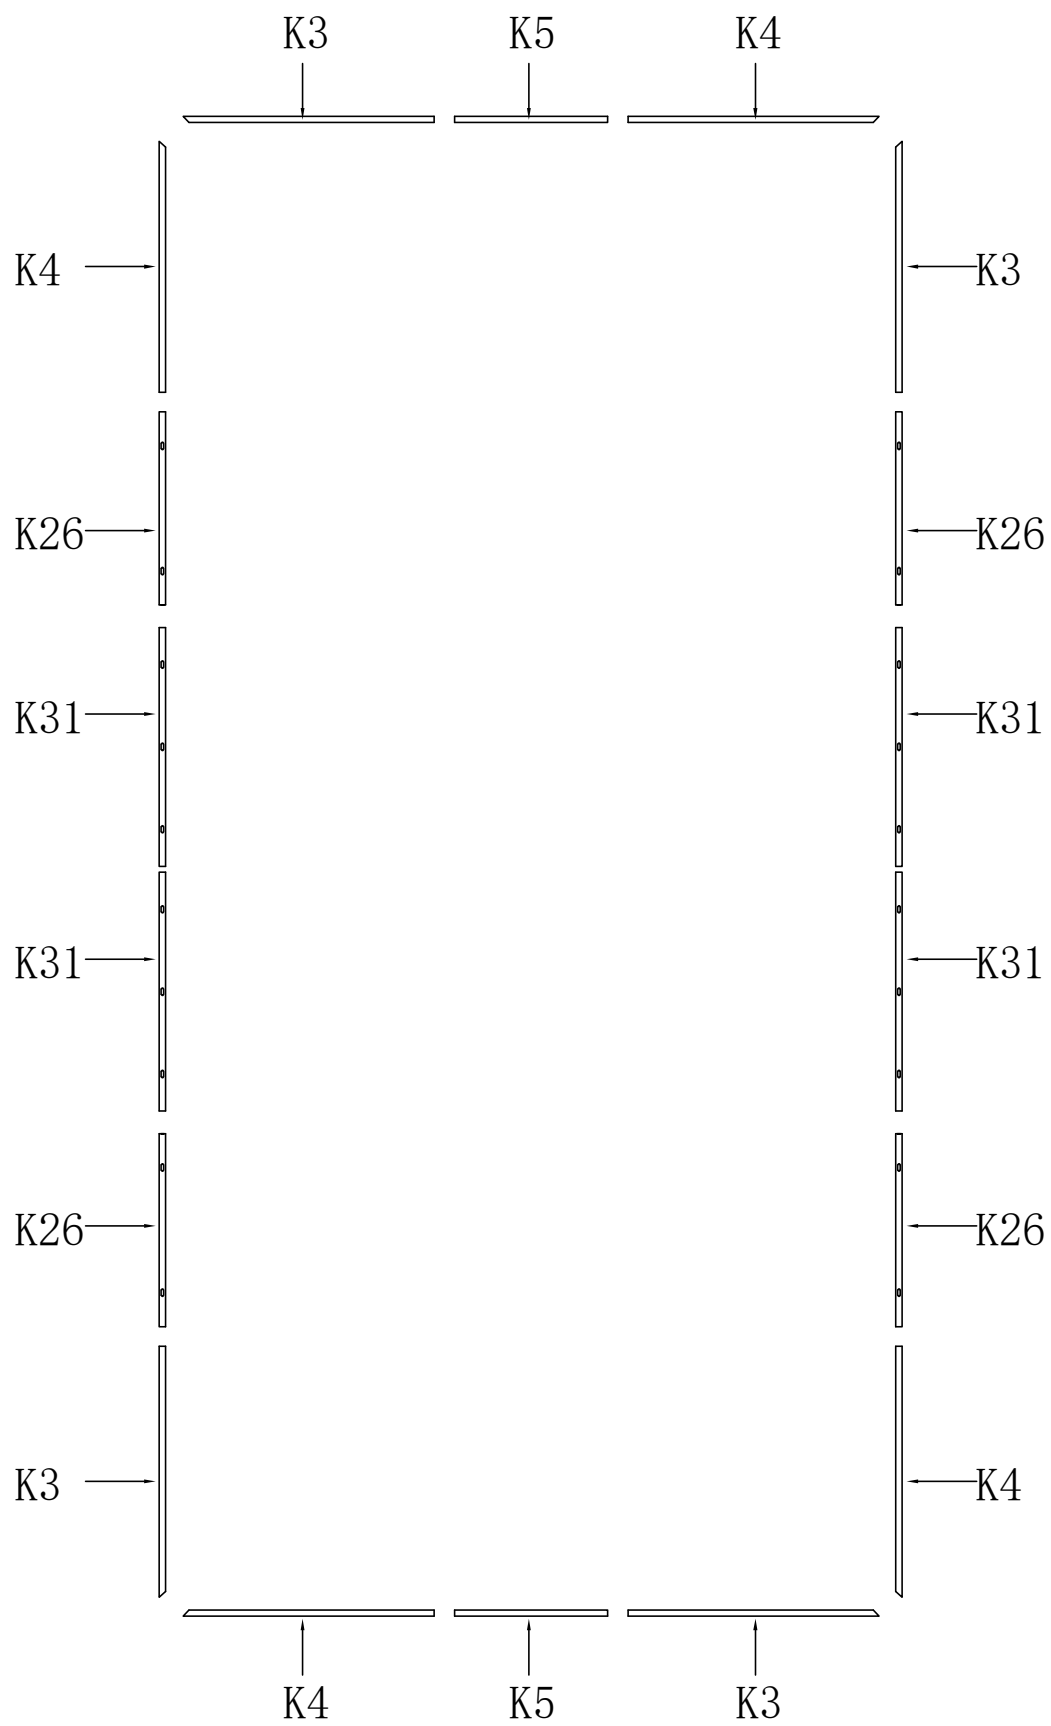


STEP. 35

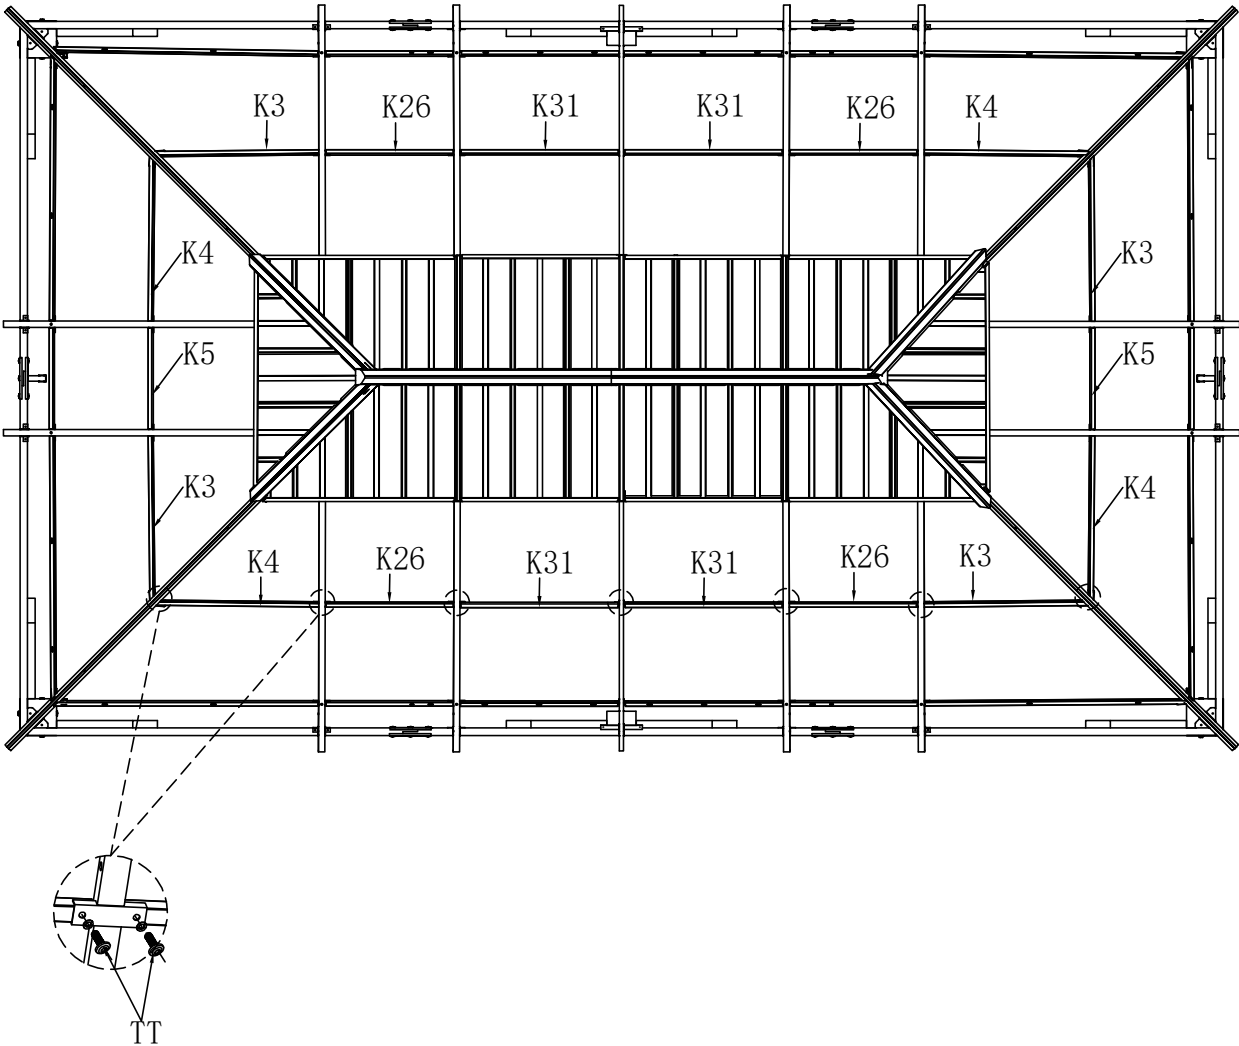


Ⓚ3 4X



Ⓚ4 4X



Ⓚ5 2X



Ⓚ26 4X




Ⓚ31 4X





ⓉⓉ 36X

M6X15


STEP. 36

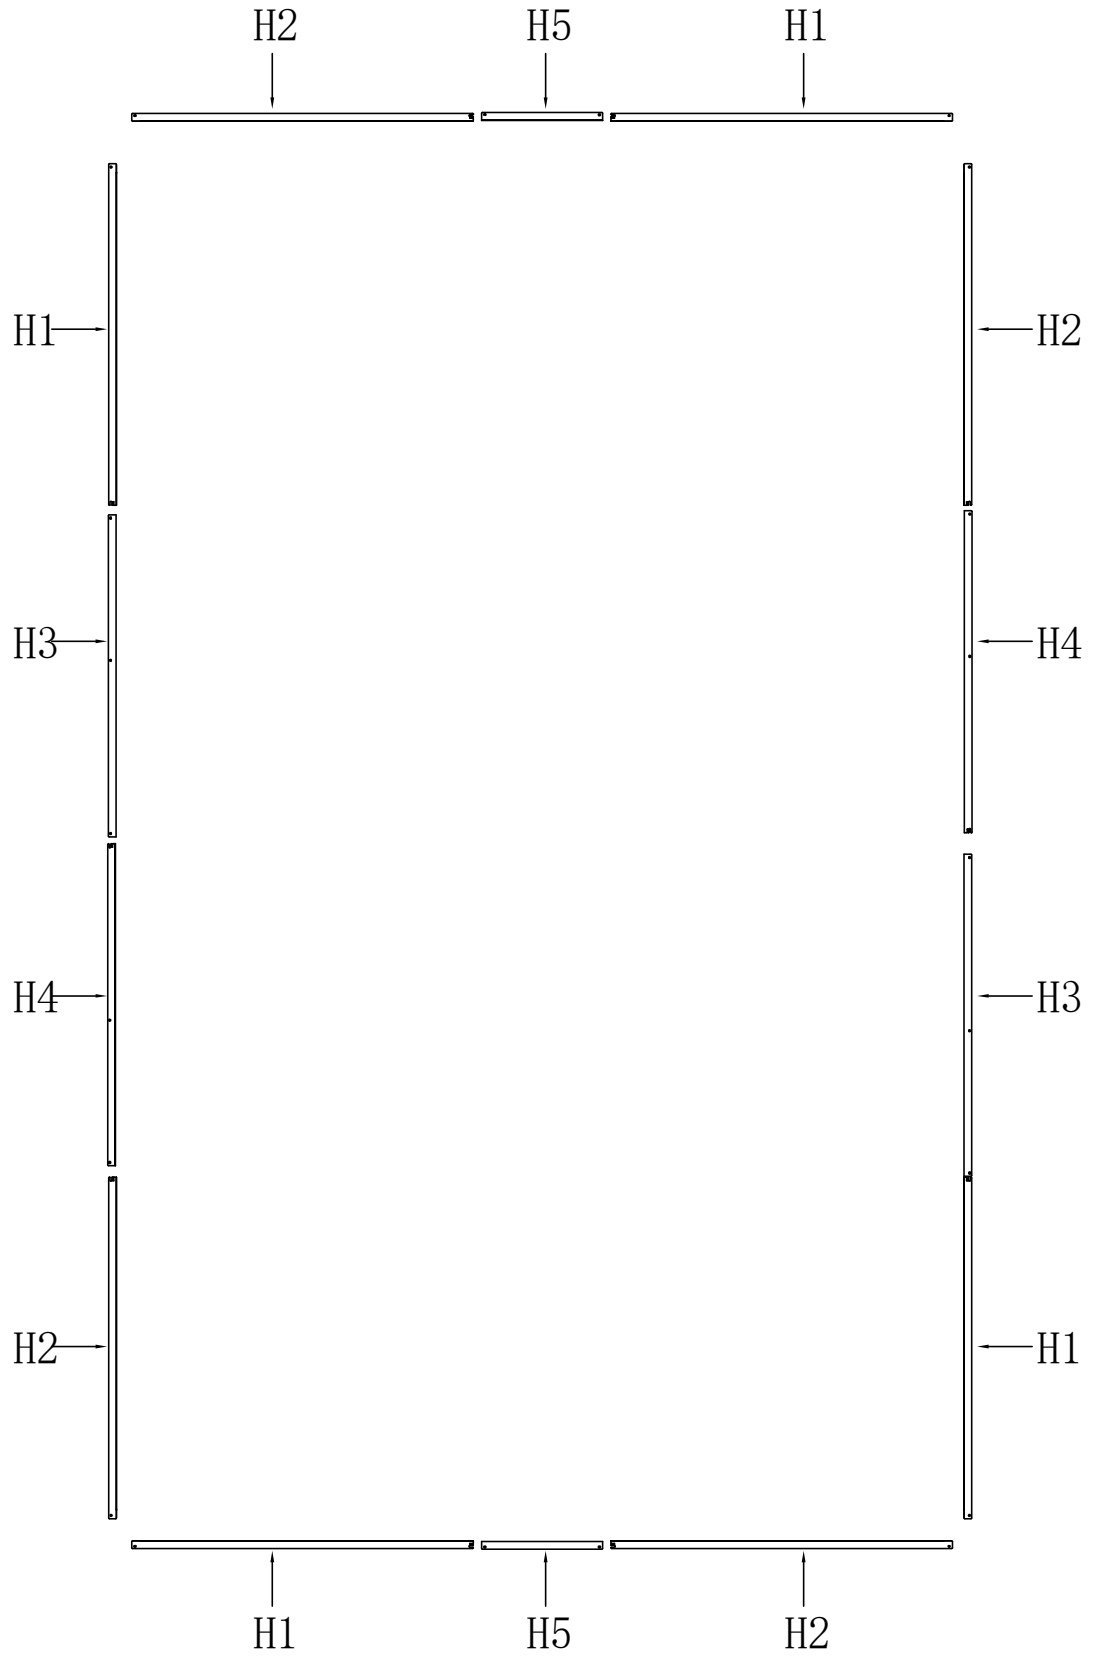

STEP. 37

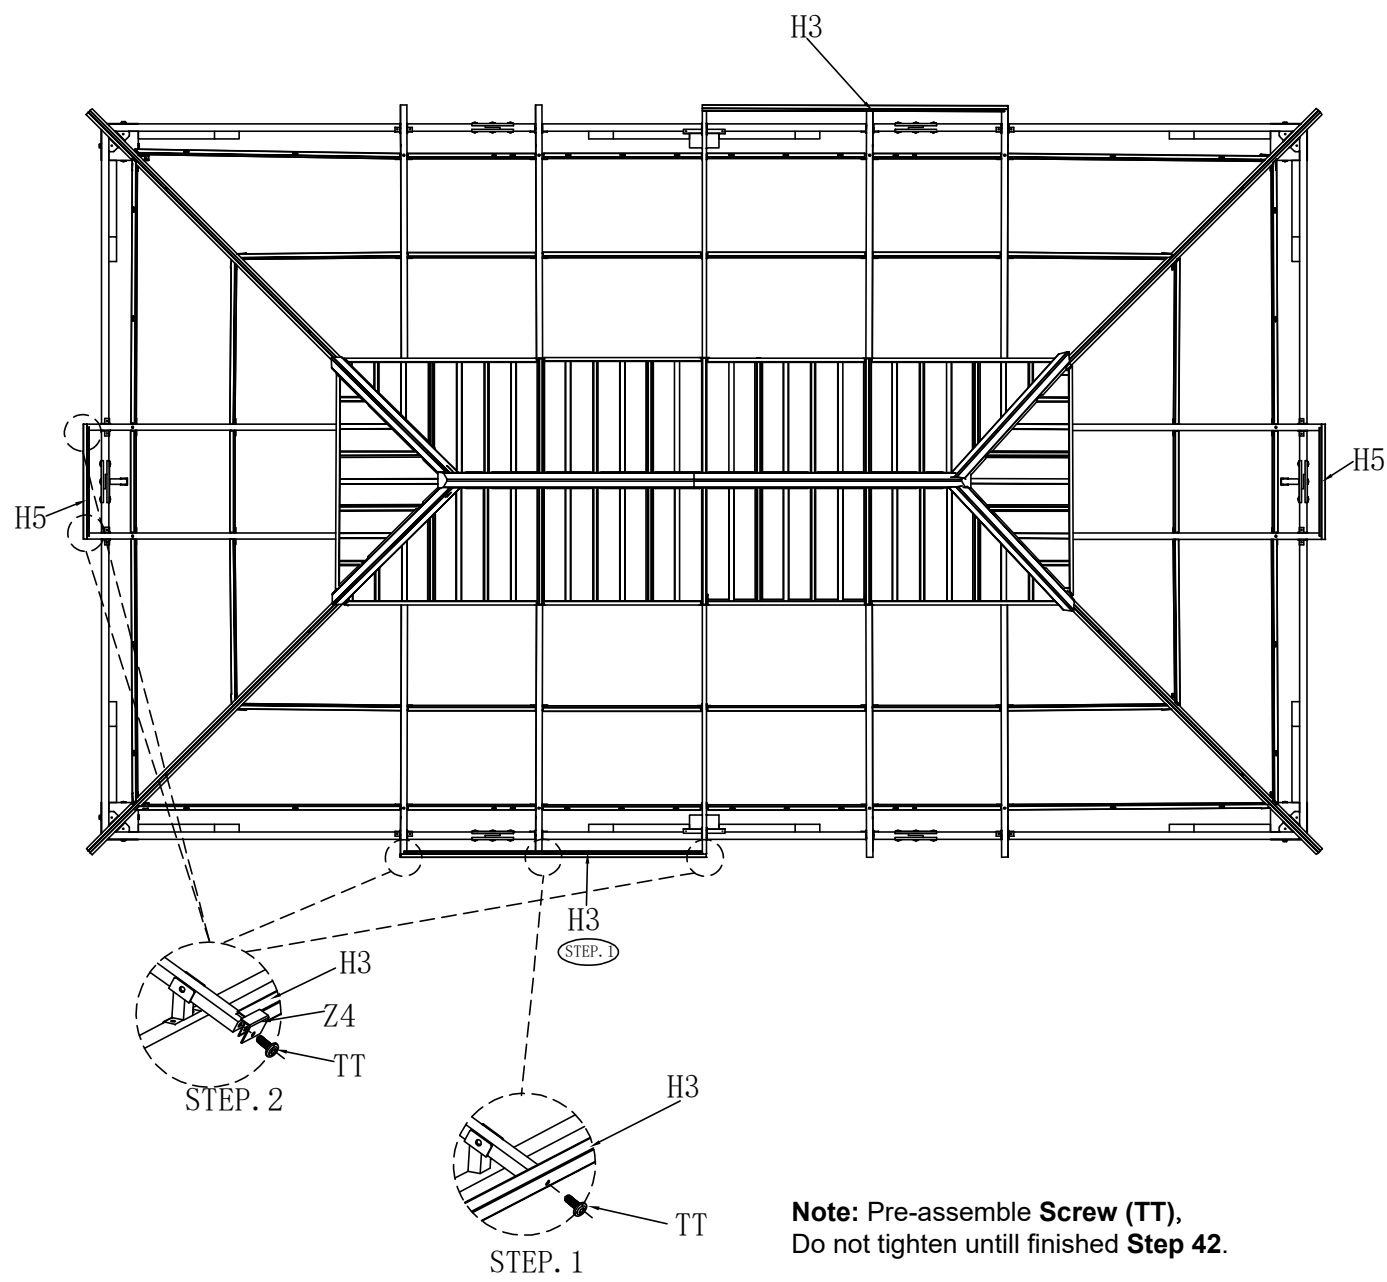

Ⓜ3 2X



Ⓜ5 2X





Ⓜ4 8X



Ⓜ1 10X

M6X15

STEP. 38

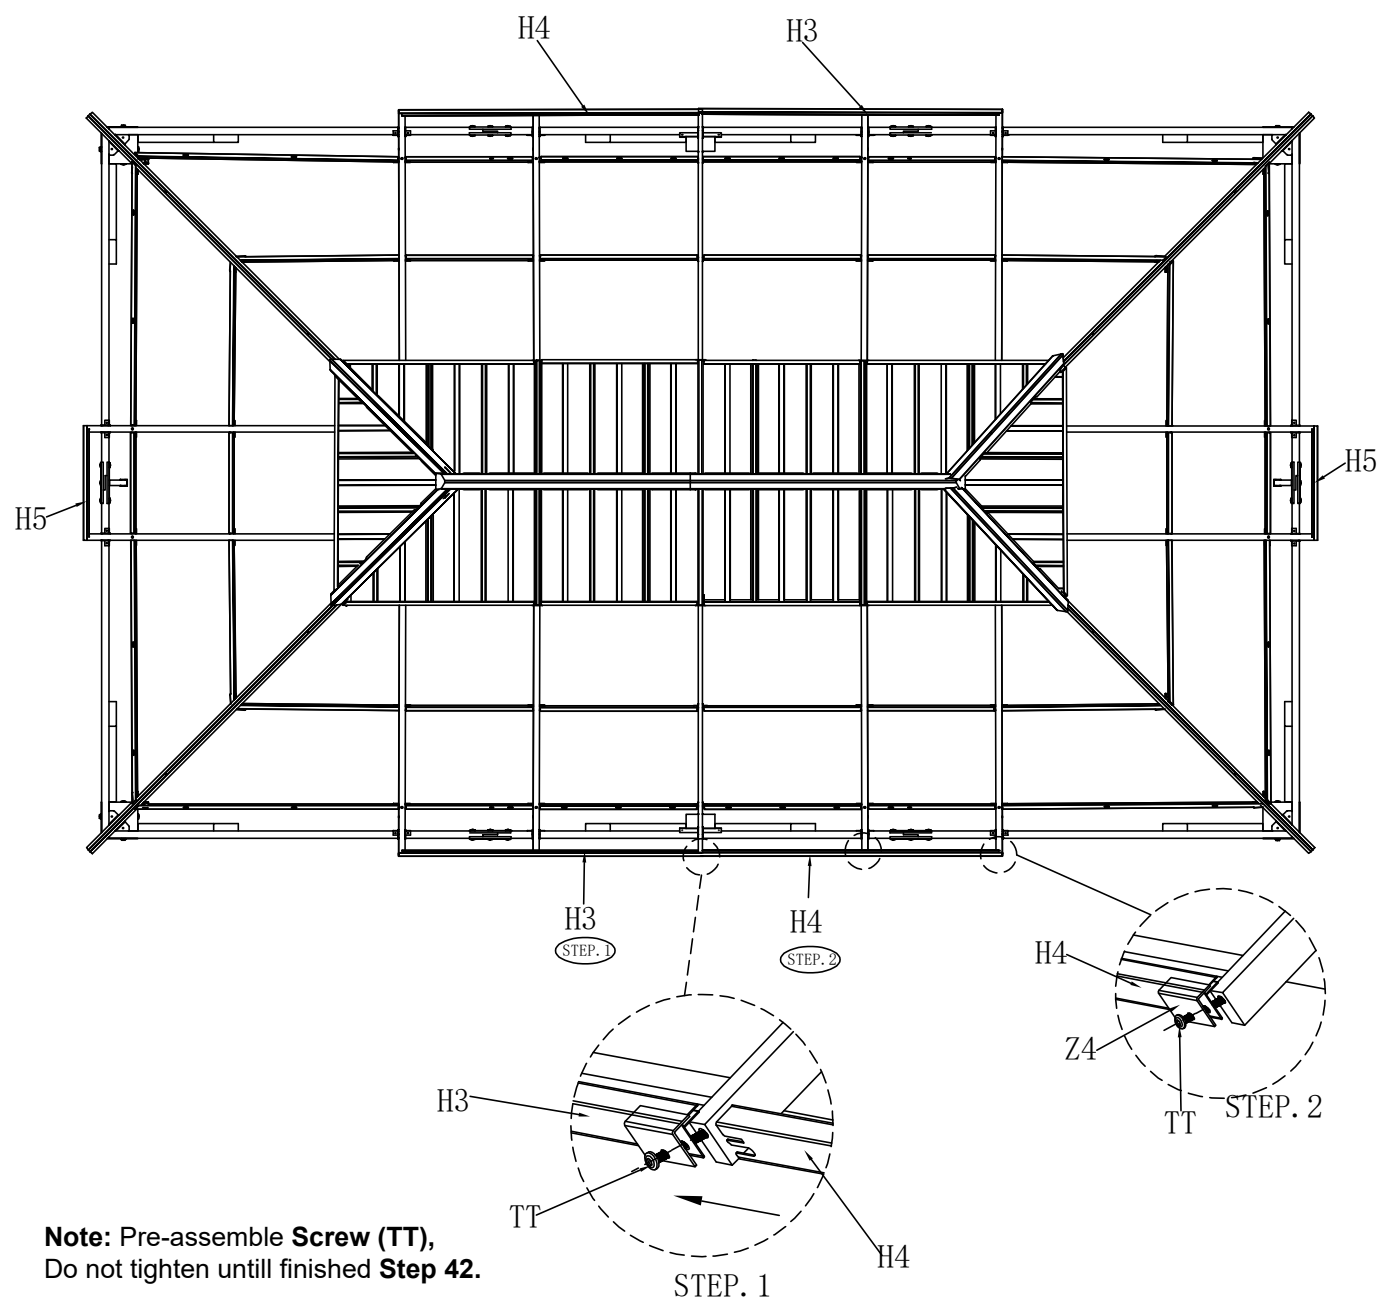

(H4) 2X




(Z4) 2X





(TT) 4X

M6X15



STEP. 39

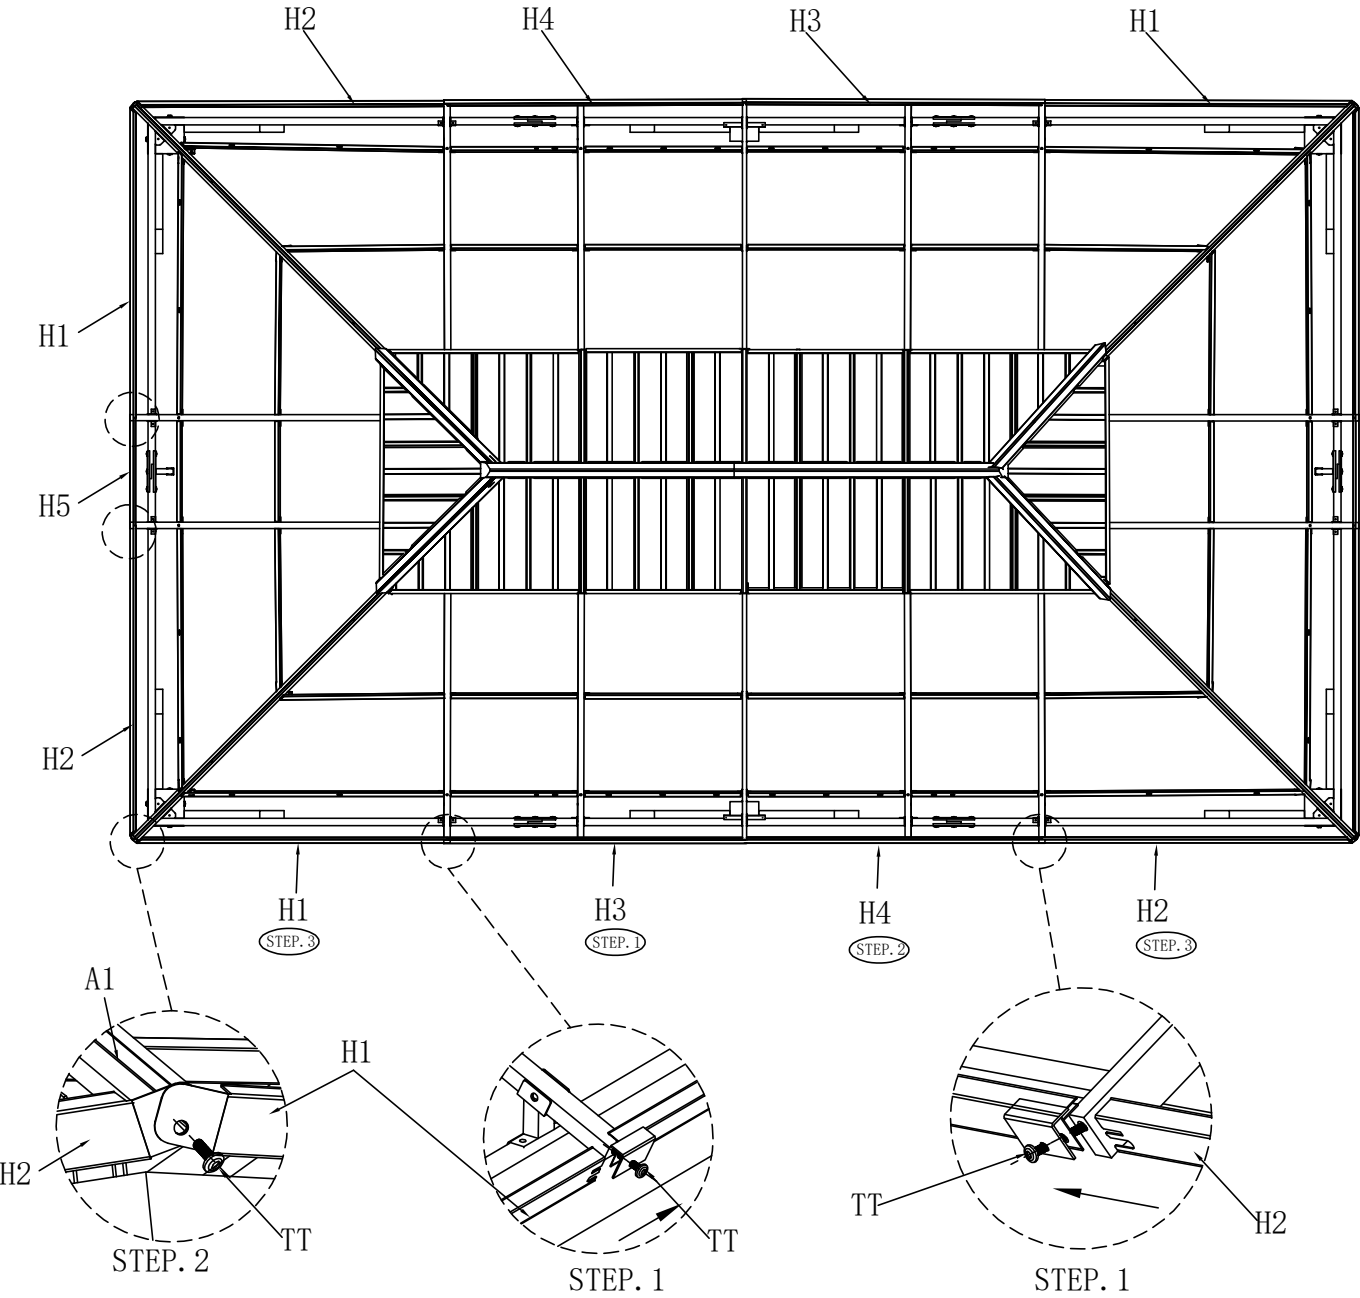


Note: Pre-assemble **Screw (TT)**, Do not tighten until finished **Step 42**.

 Ⓜ1 4X	 Ⓜ2 4X
 M6X15 Ⓜ1 4X	

STEP. 40

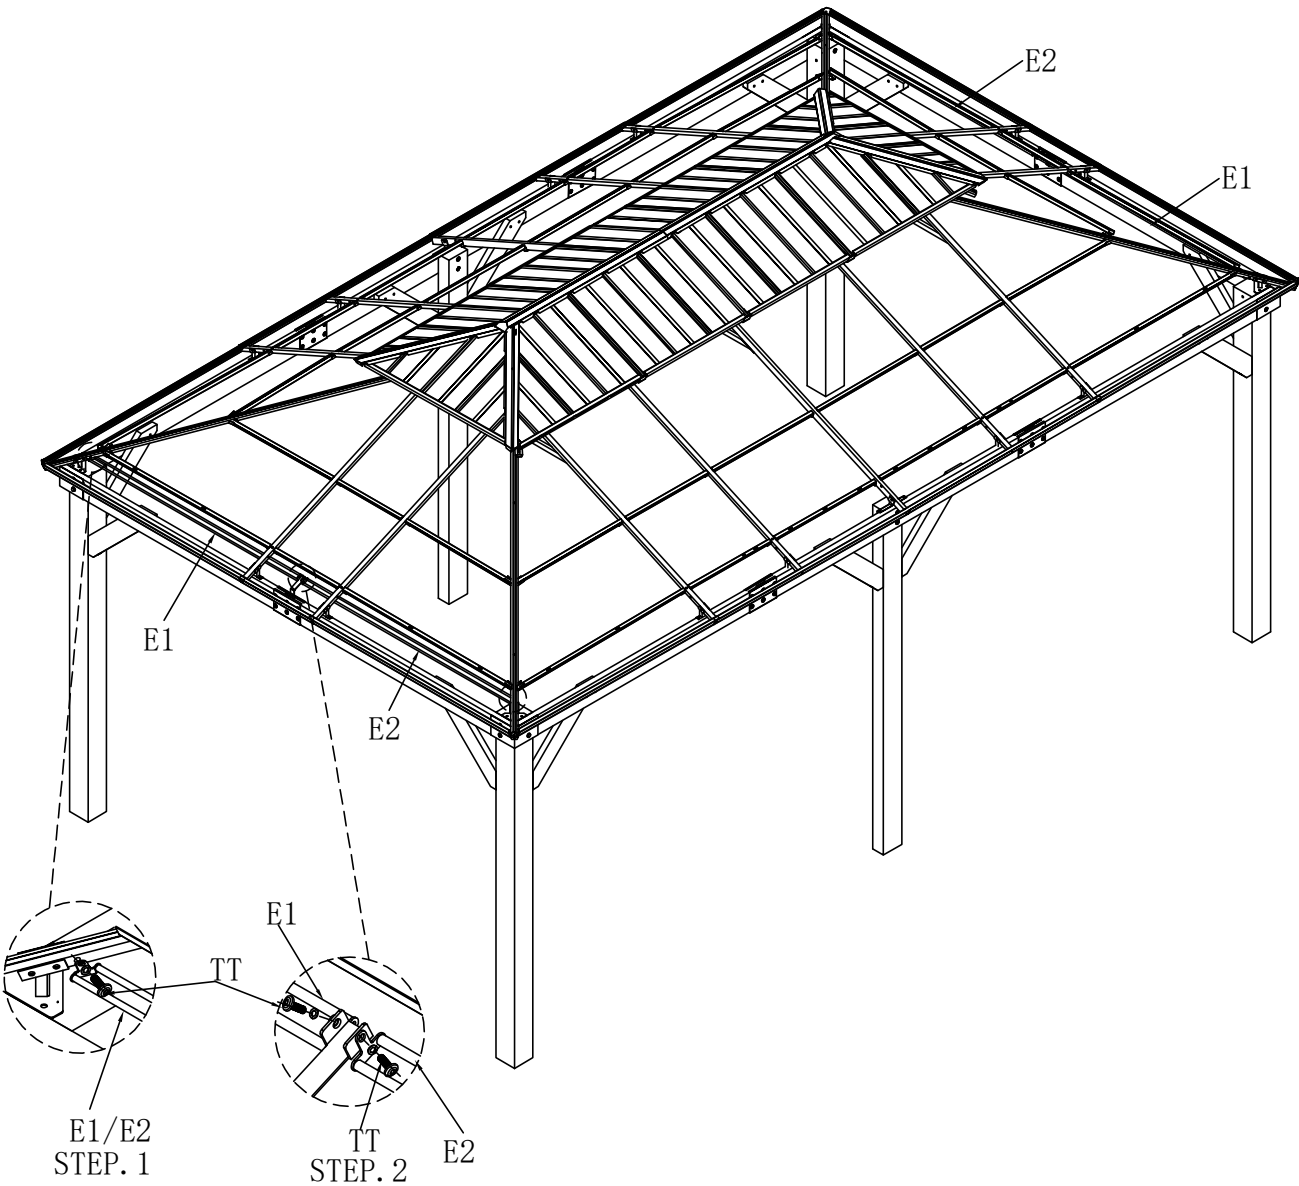

Ⓔ 2X





Ⓔ 2X



Ⓣ 8X

M6X15

STEP. 41

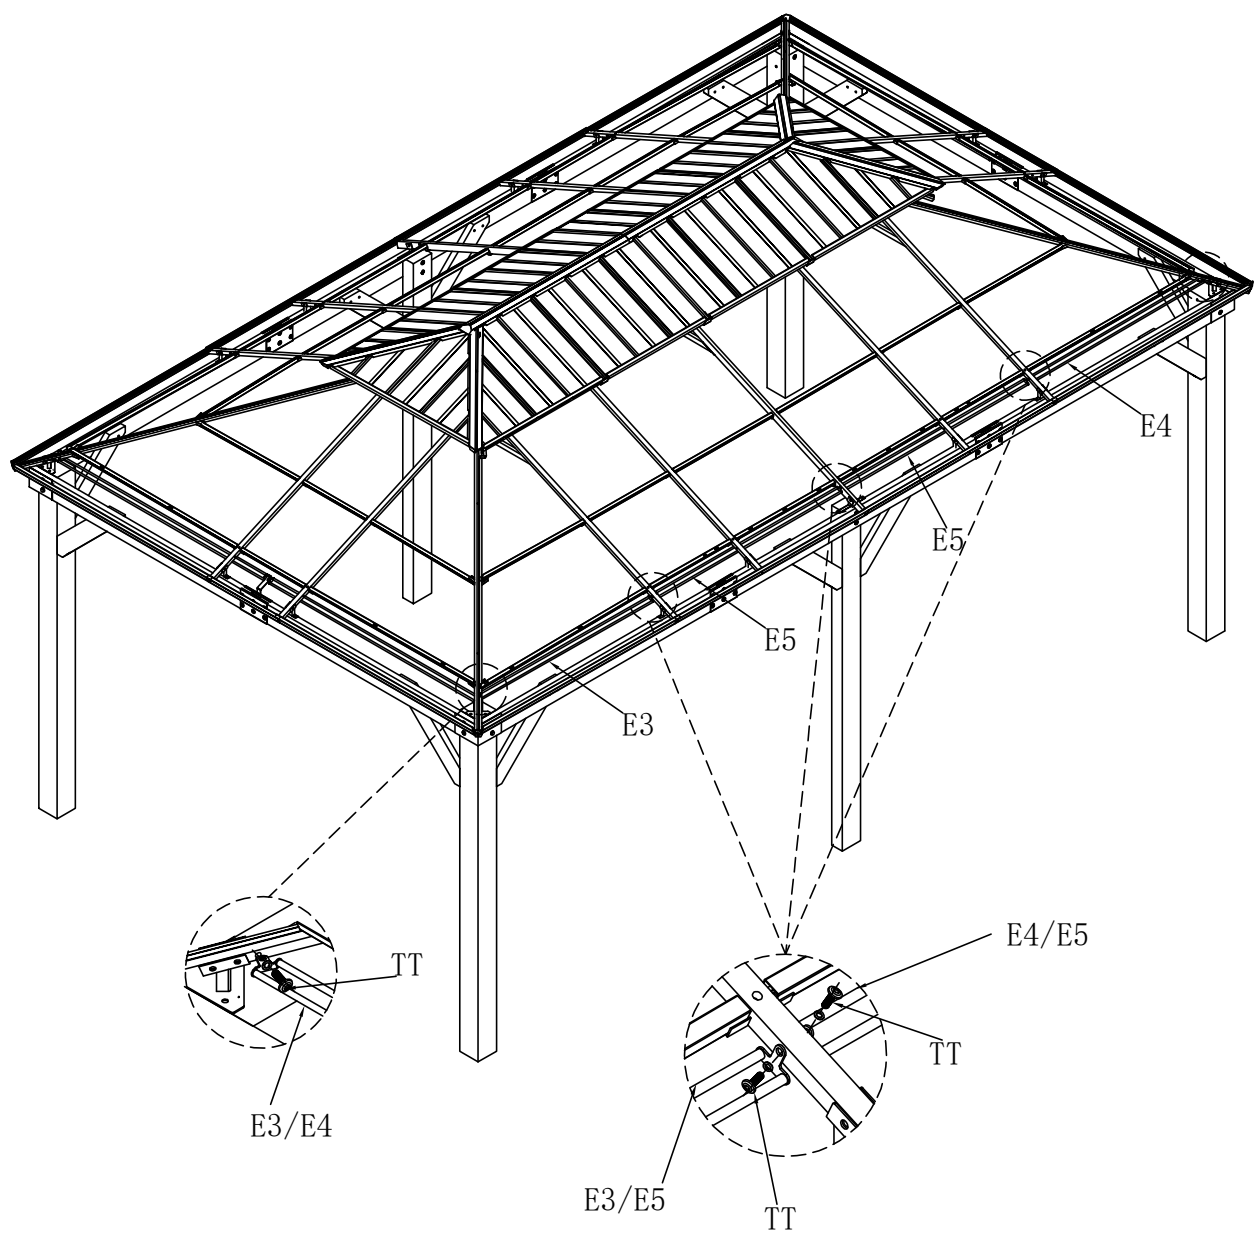

Ⓔ3 2X



Ⓔ4 2X




Ⓔ5 4X



M6X15

Ⓔ7 16X

STEP. 42

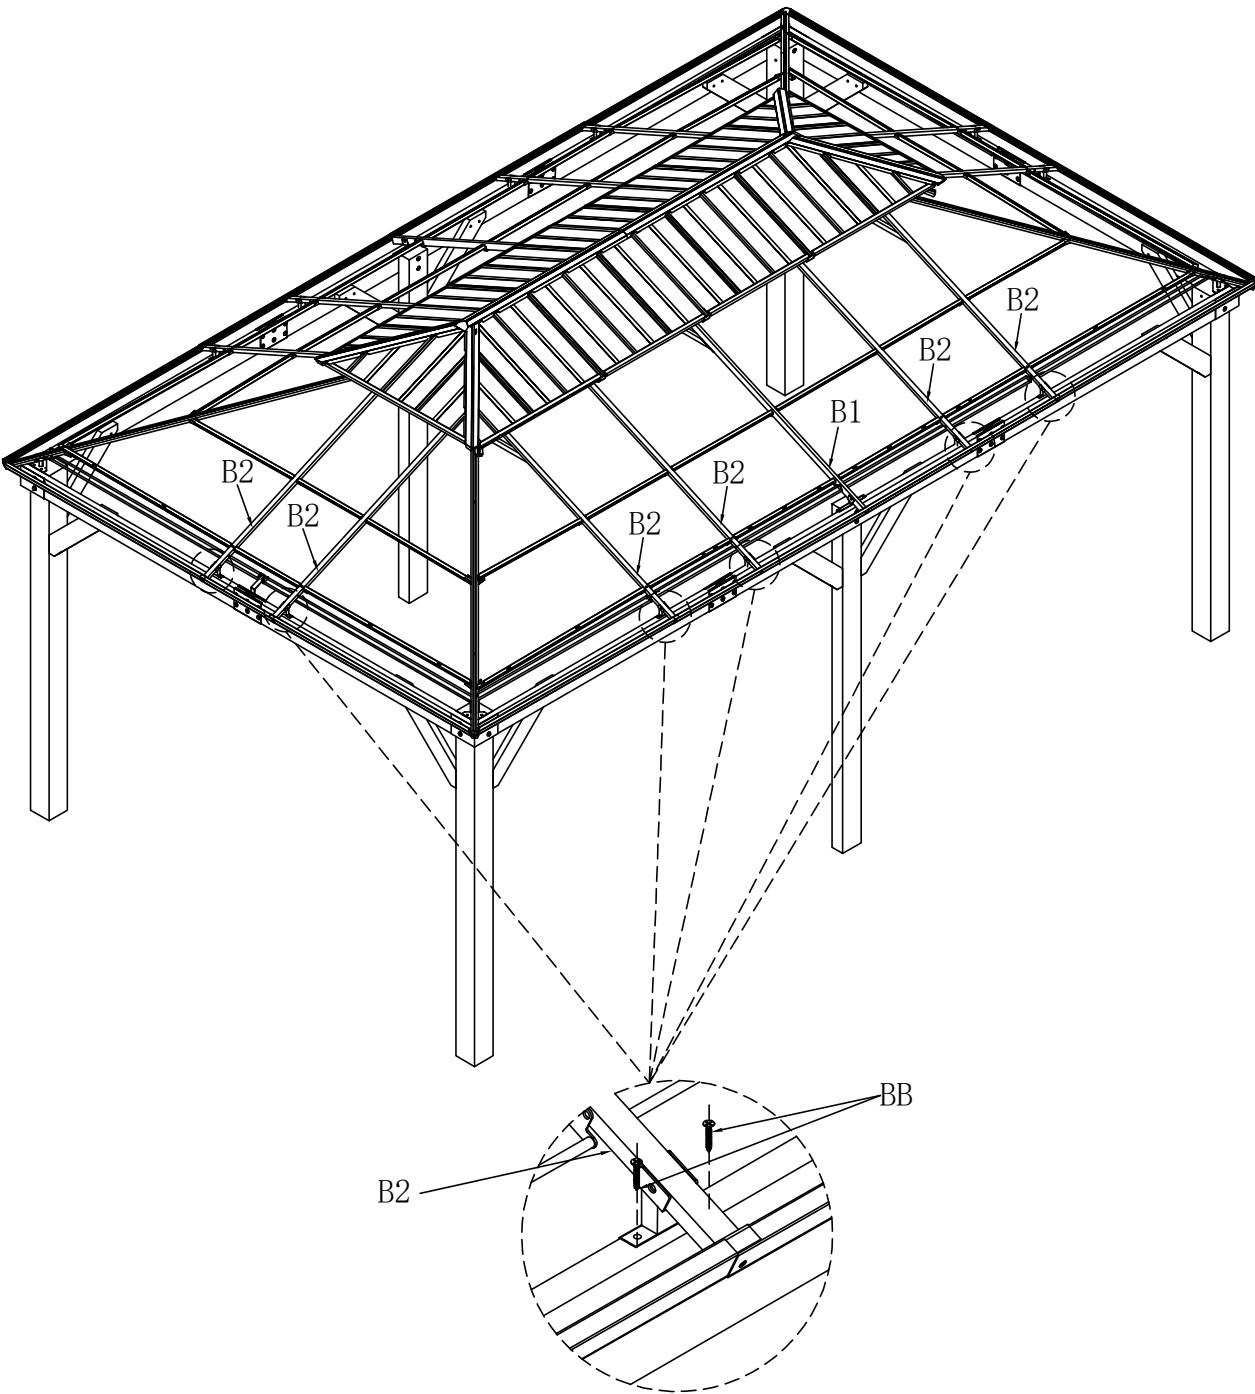


TIGHTEN ALL PRE-ASSEMBLED SCREWS ON BLOCKING BAR, FIX ALL **SLANT BAR (B2)** BY USING **SCREWS (BB)**.




M5X30

Ⓟ 24X


STEP. 43

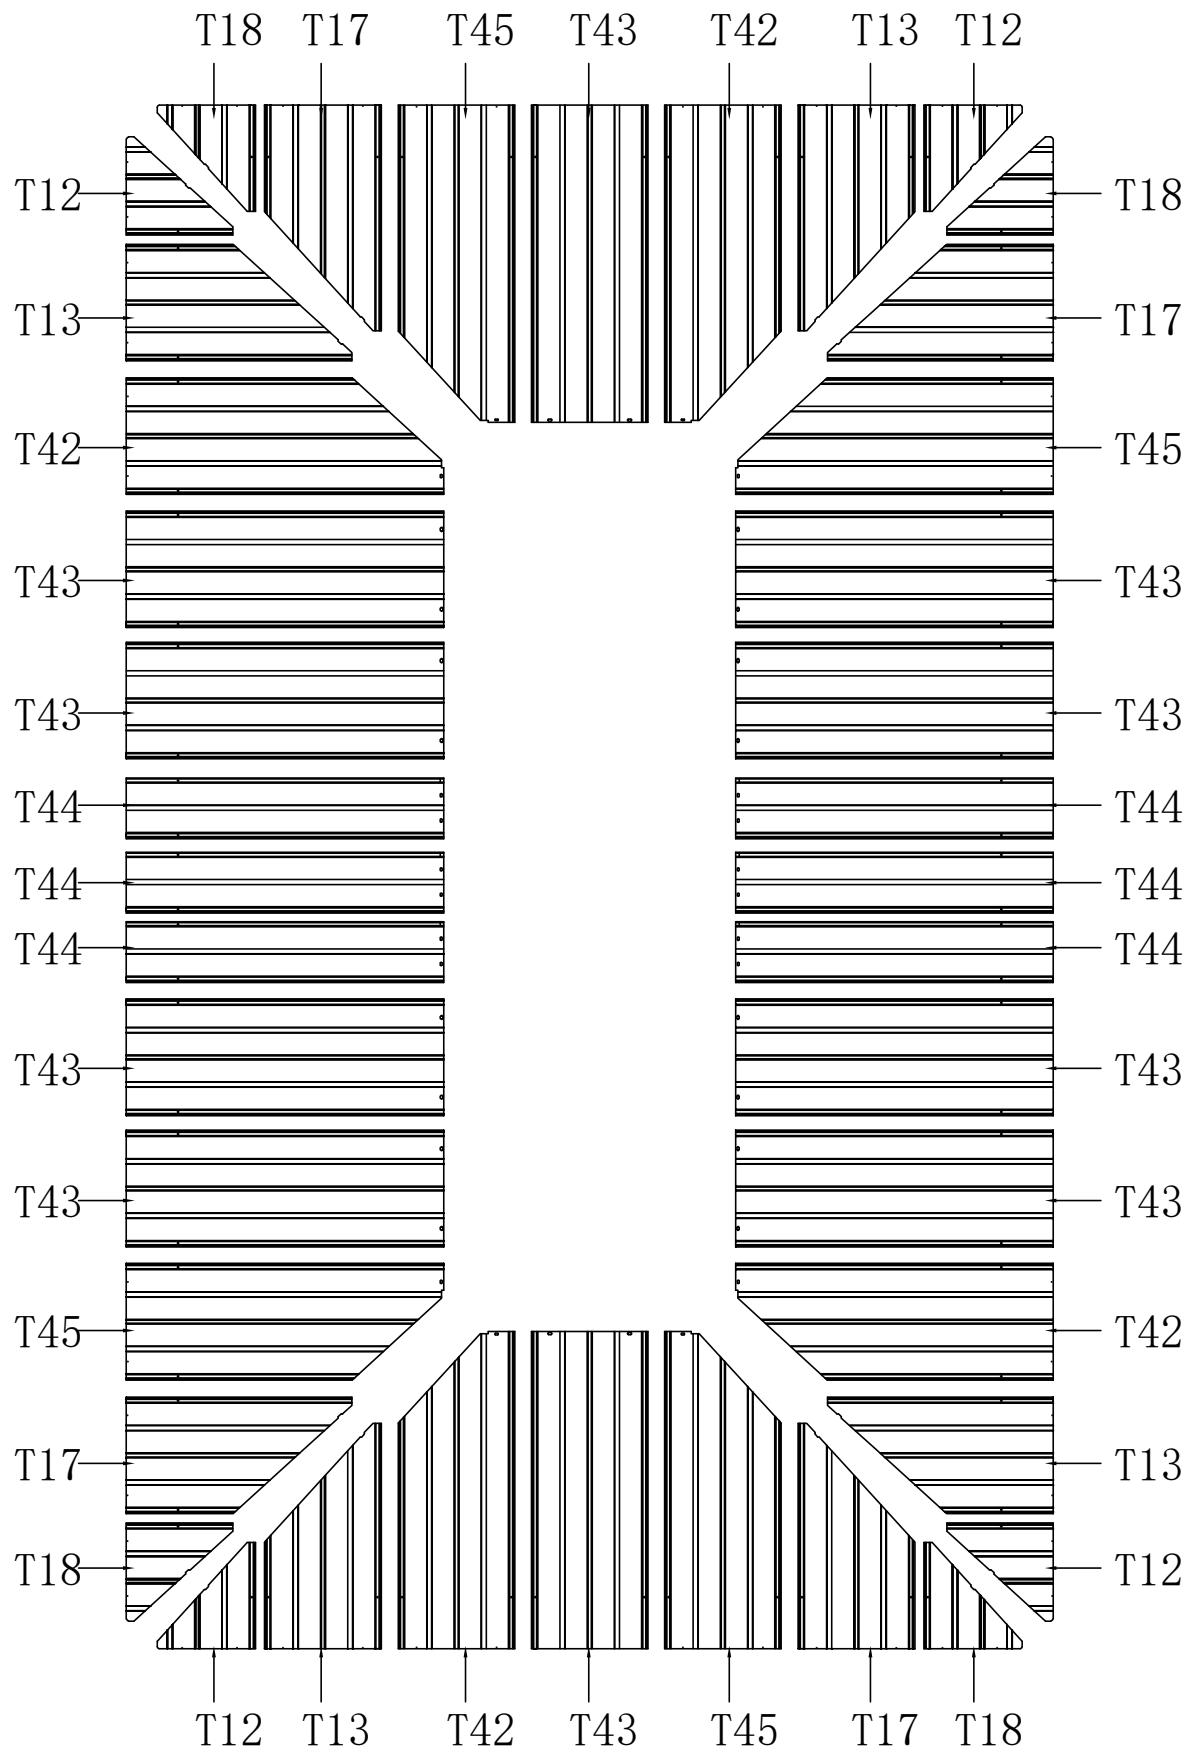

STEP. 44

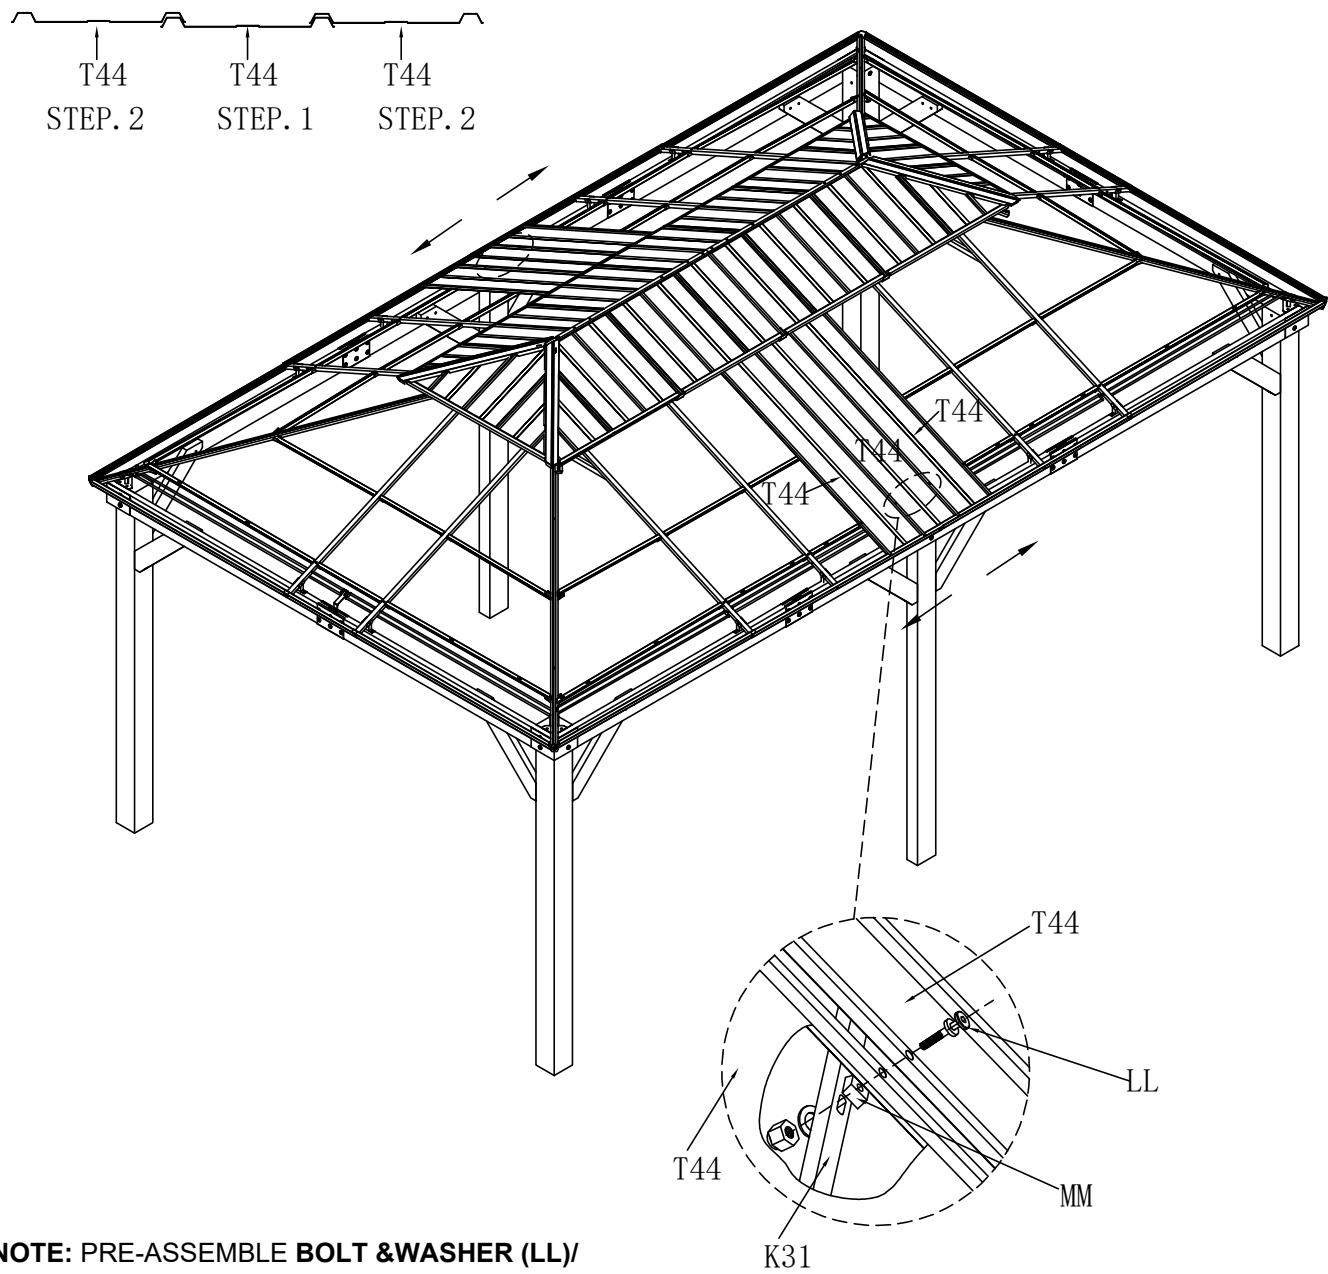


NOTE: PRE-ASSEMBLE BOLT & WASHER (LL)/ SPACER(MM), DO NOT TIGHTEN THIS STEP.



T44 6X




M6X45 LL 4X




MM 4X


STEP. 45

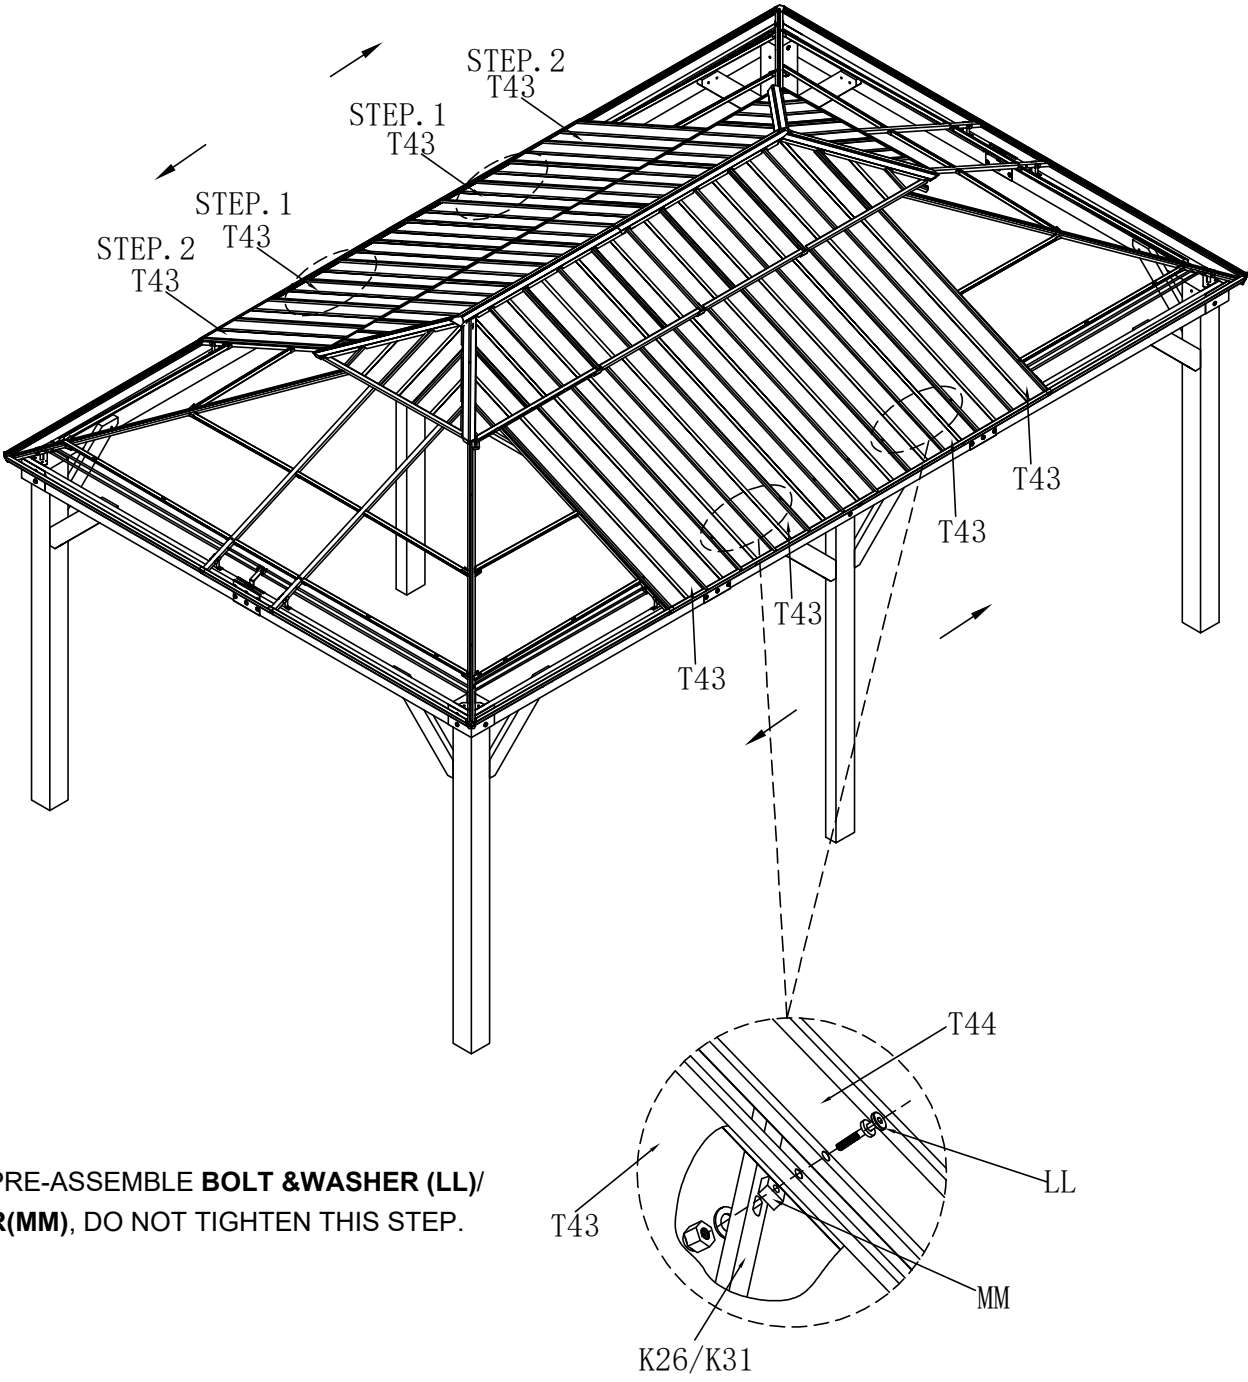

NOTE: PRE-ASSEMBLE **BOLT &WASHER (LL)/ SPACER(MM)**, DO NOT TIGHTEN THIS STEP.

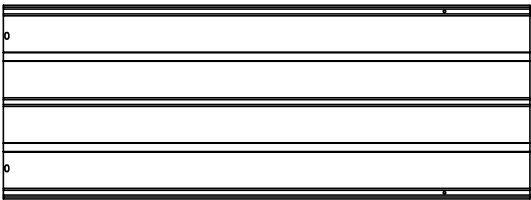

(T43) 8X

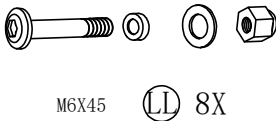








M6X45 (LL) 8X






(MM) 8X

STEP. 46

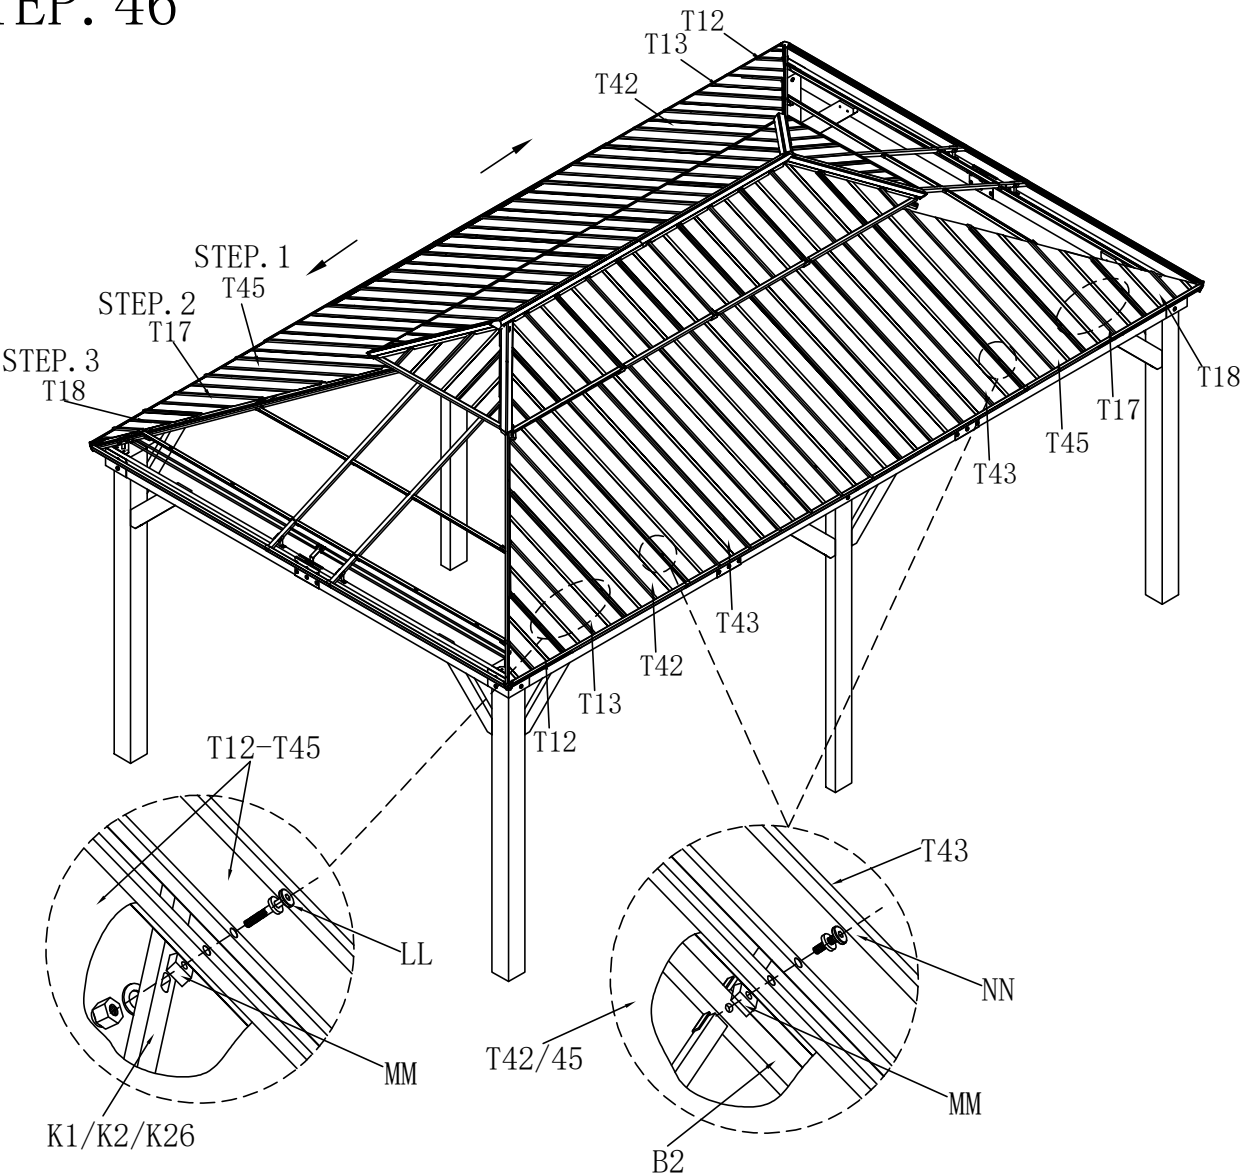


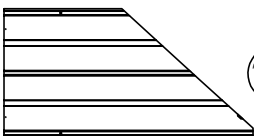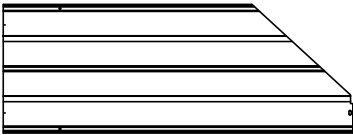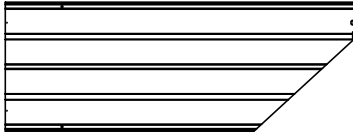 (T12) 2X	 (T13) 2X	 M6X45 (L) 8X	
 (T42) 2X		 (T45) 2X	
 (T17) 2X	 (T18) 2X	 M6X25 (NN) 4X	 (MM) 12X


STEP. 47

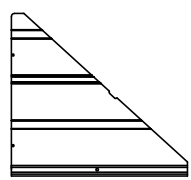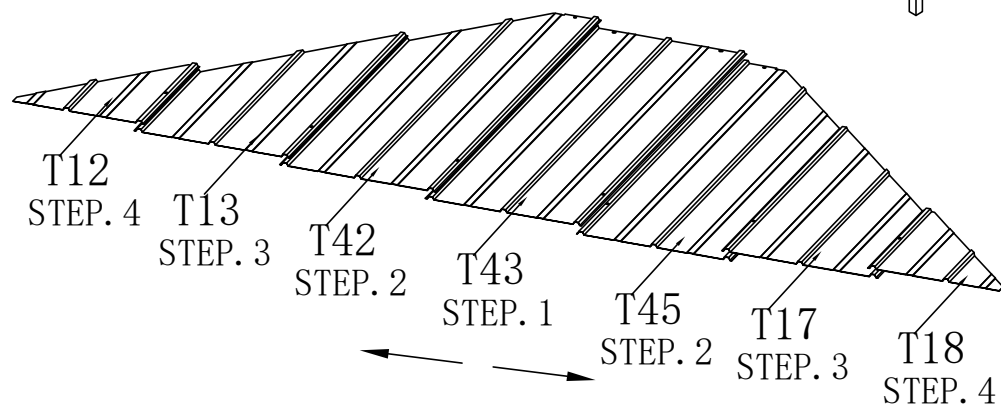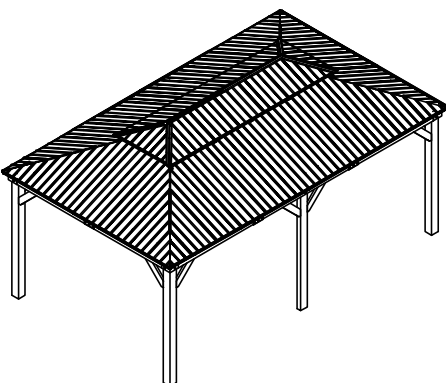


(T12) 2X

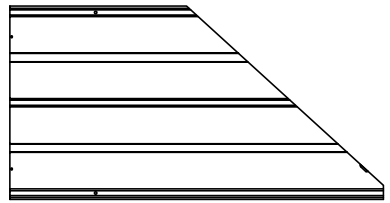


(T13) 2X

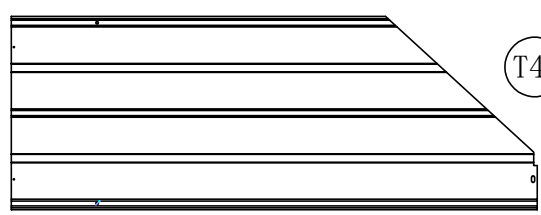


(T42) 2X

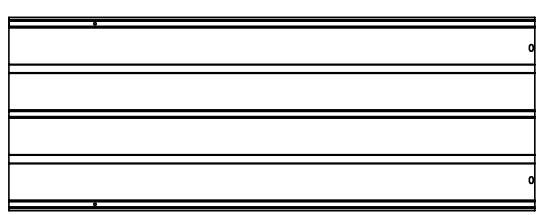


(T43) 2X

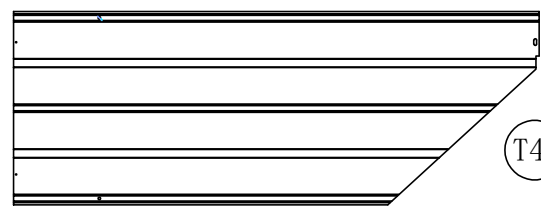

(T45) 2X



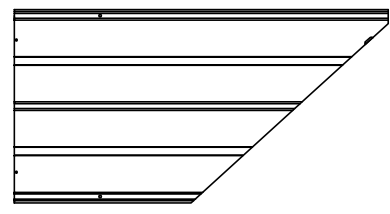


(T17) 2X

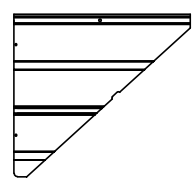


(T18) 2X

STEP. 48

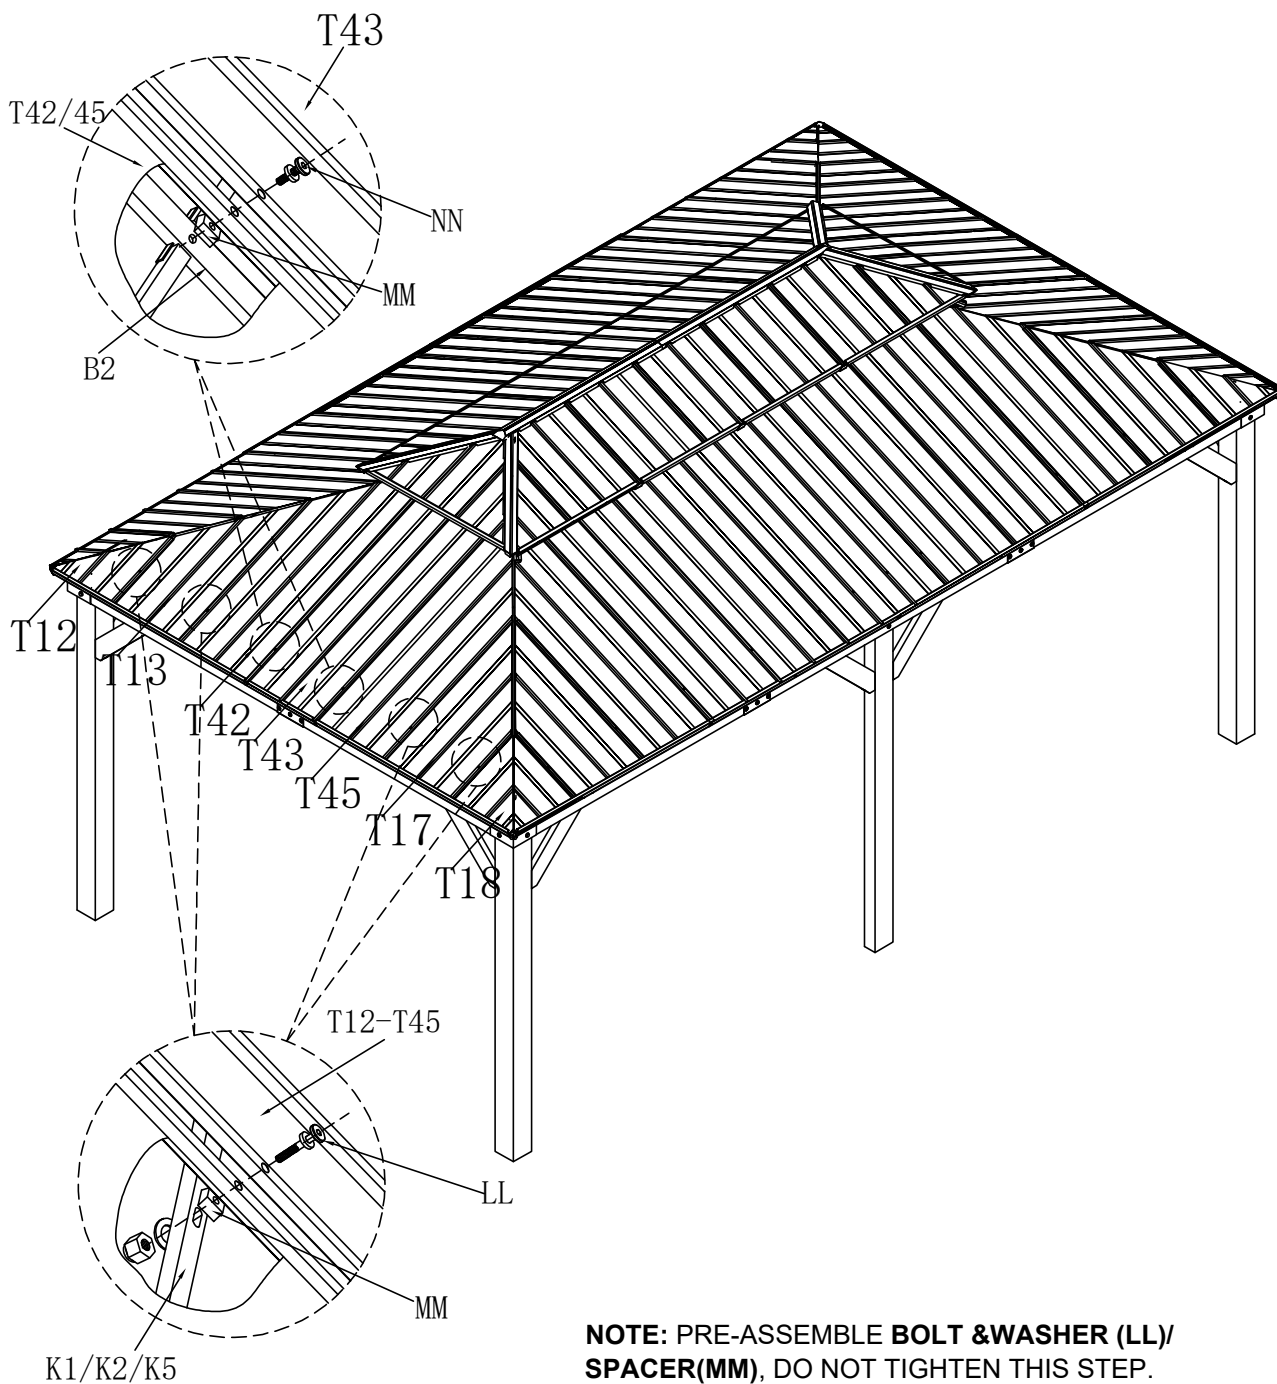

STEP. 49

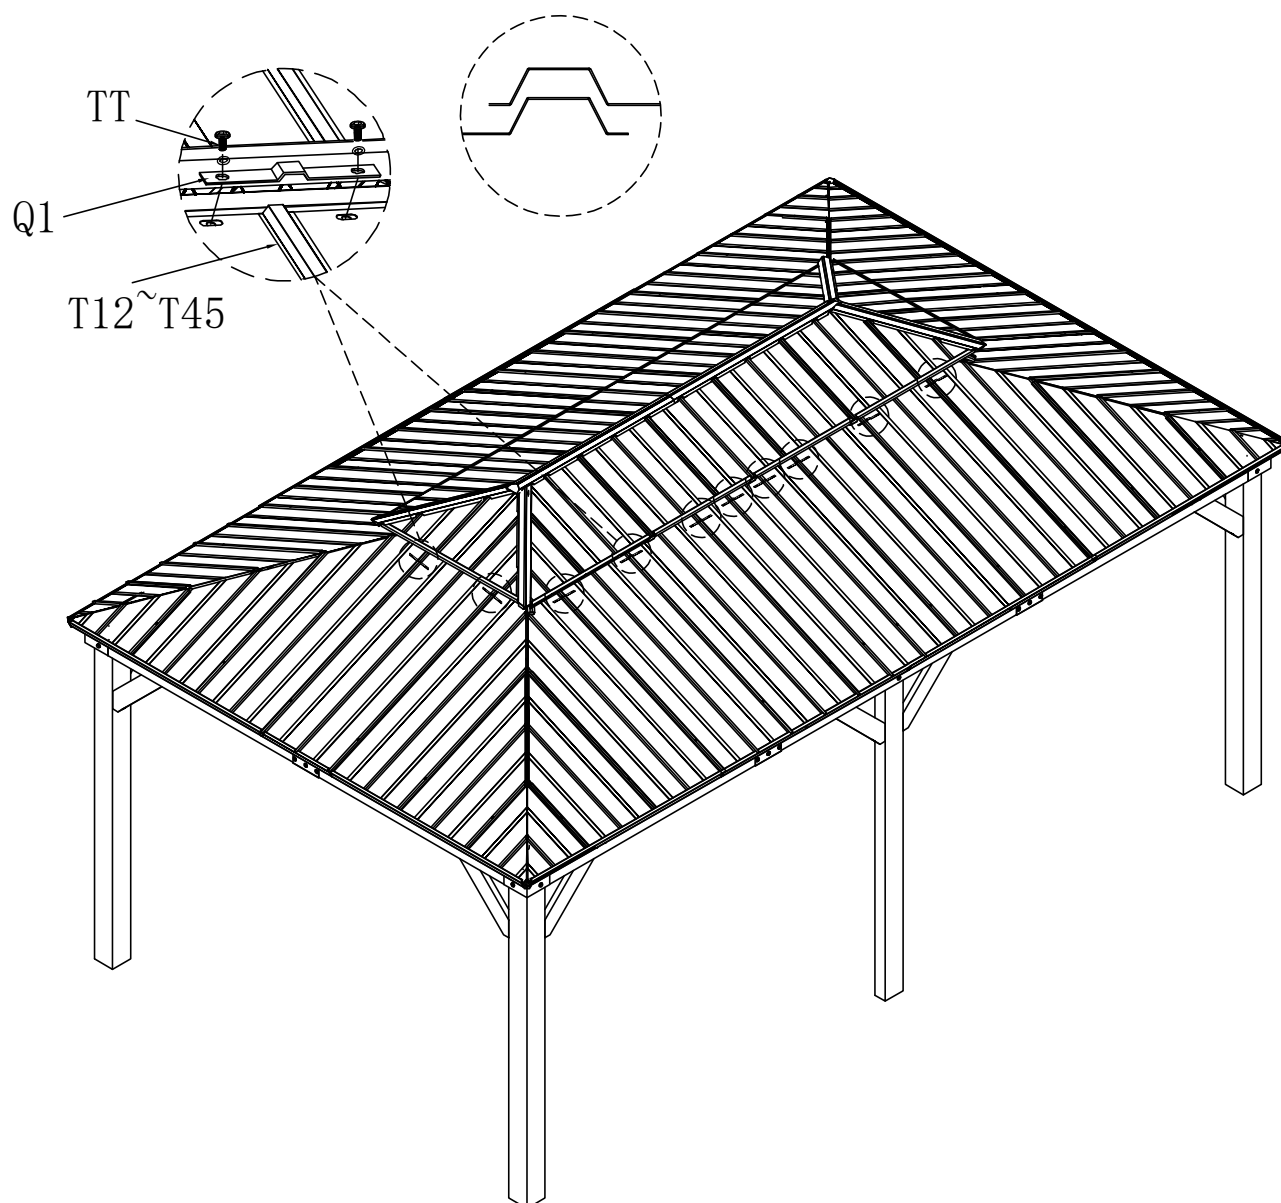

NOTE: TIGHTEN ALL PRE-ASSEMBLED BOLTS ON BOTTOM OF PANELS.




Q1 20X



TT 40X

M6X15

STEP. 50

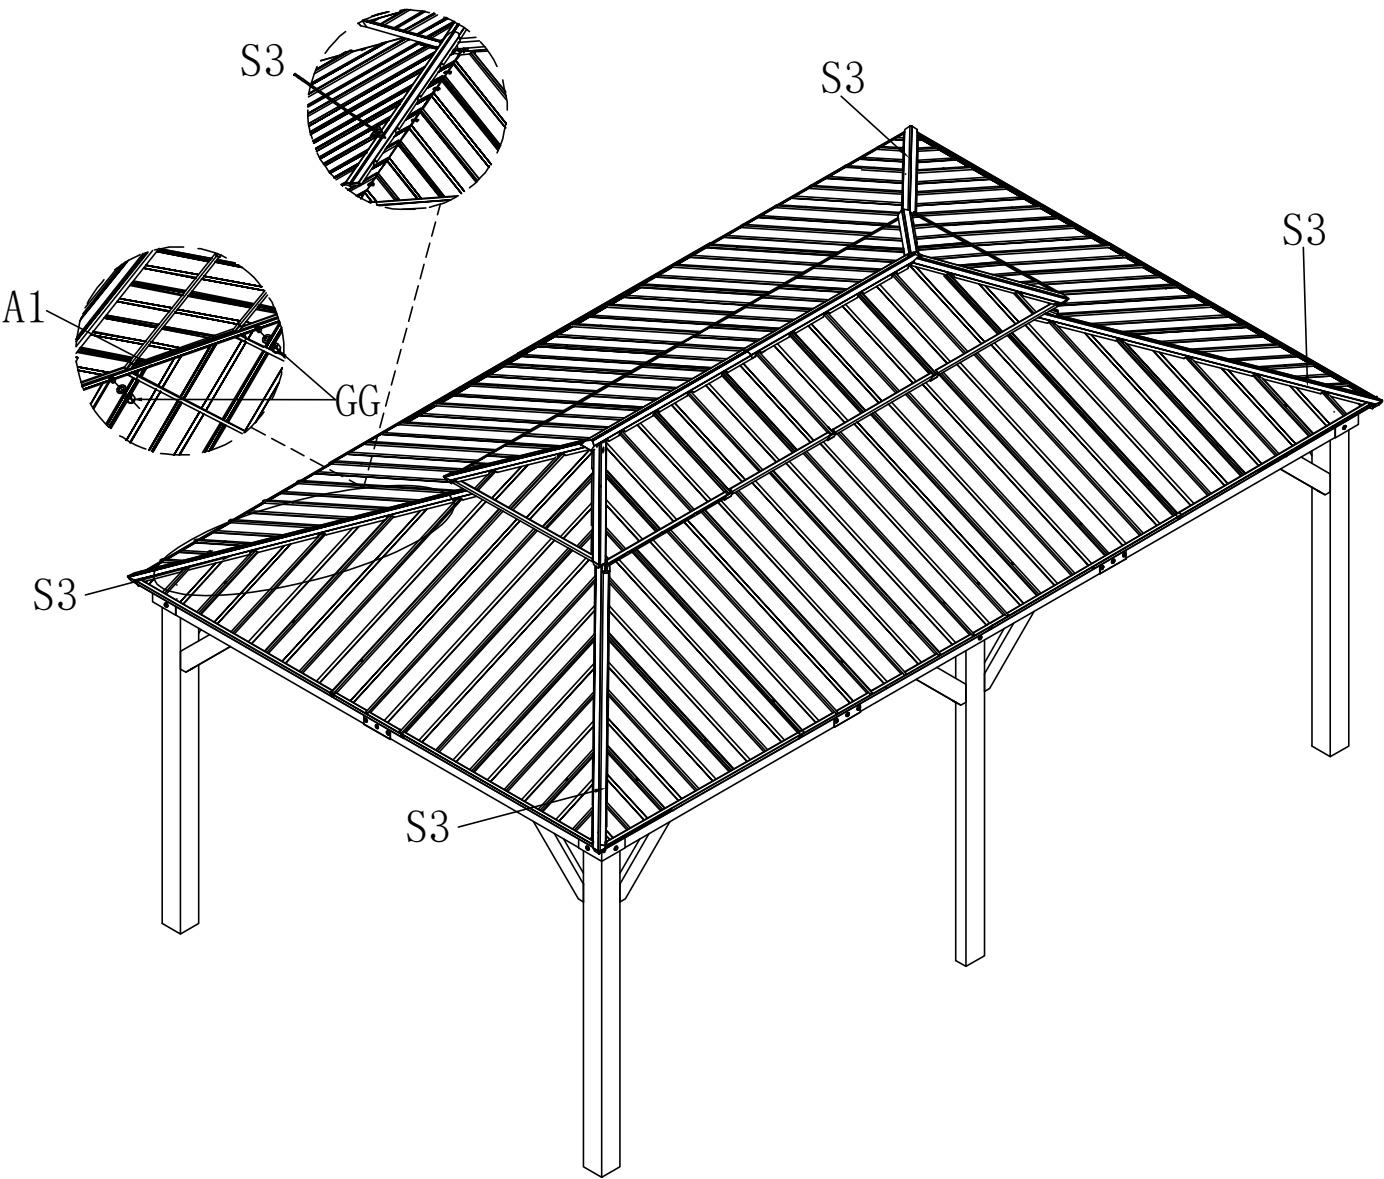


Ⓢ3 4X



Ⓢ3 8X


STEP. 51

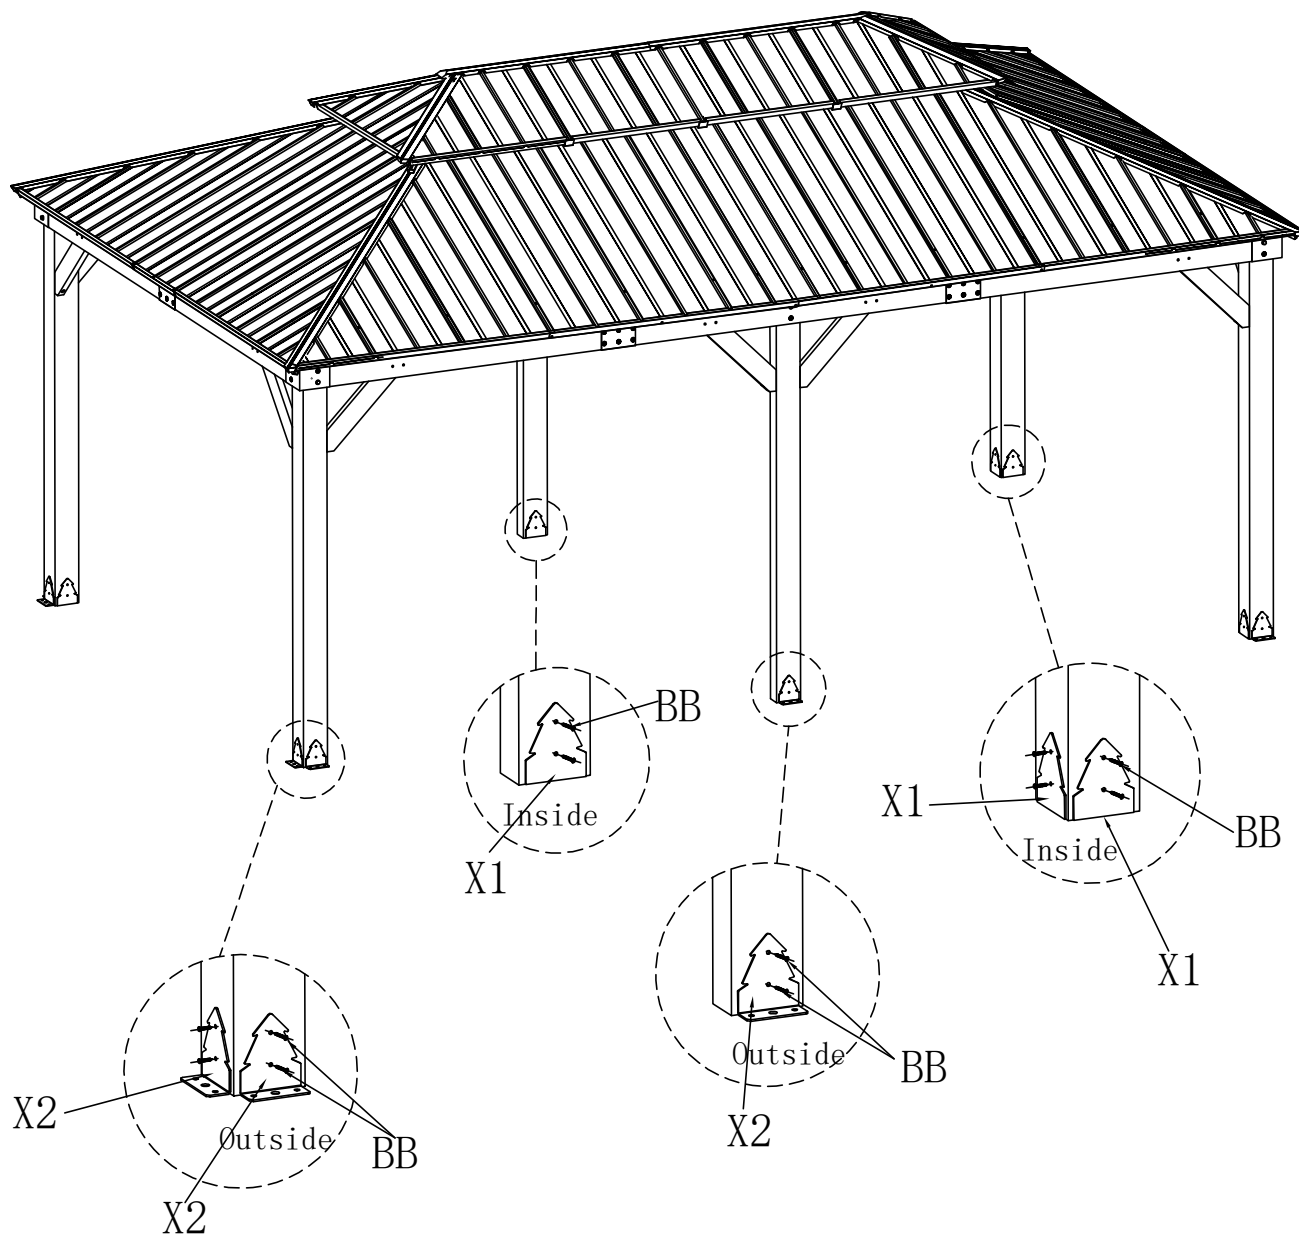

ⓧ1 10X





ⓧ2 10X



M5X30



ⓑⓑ 40X

STEP. 52

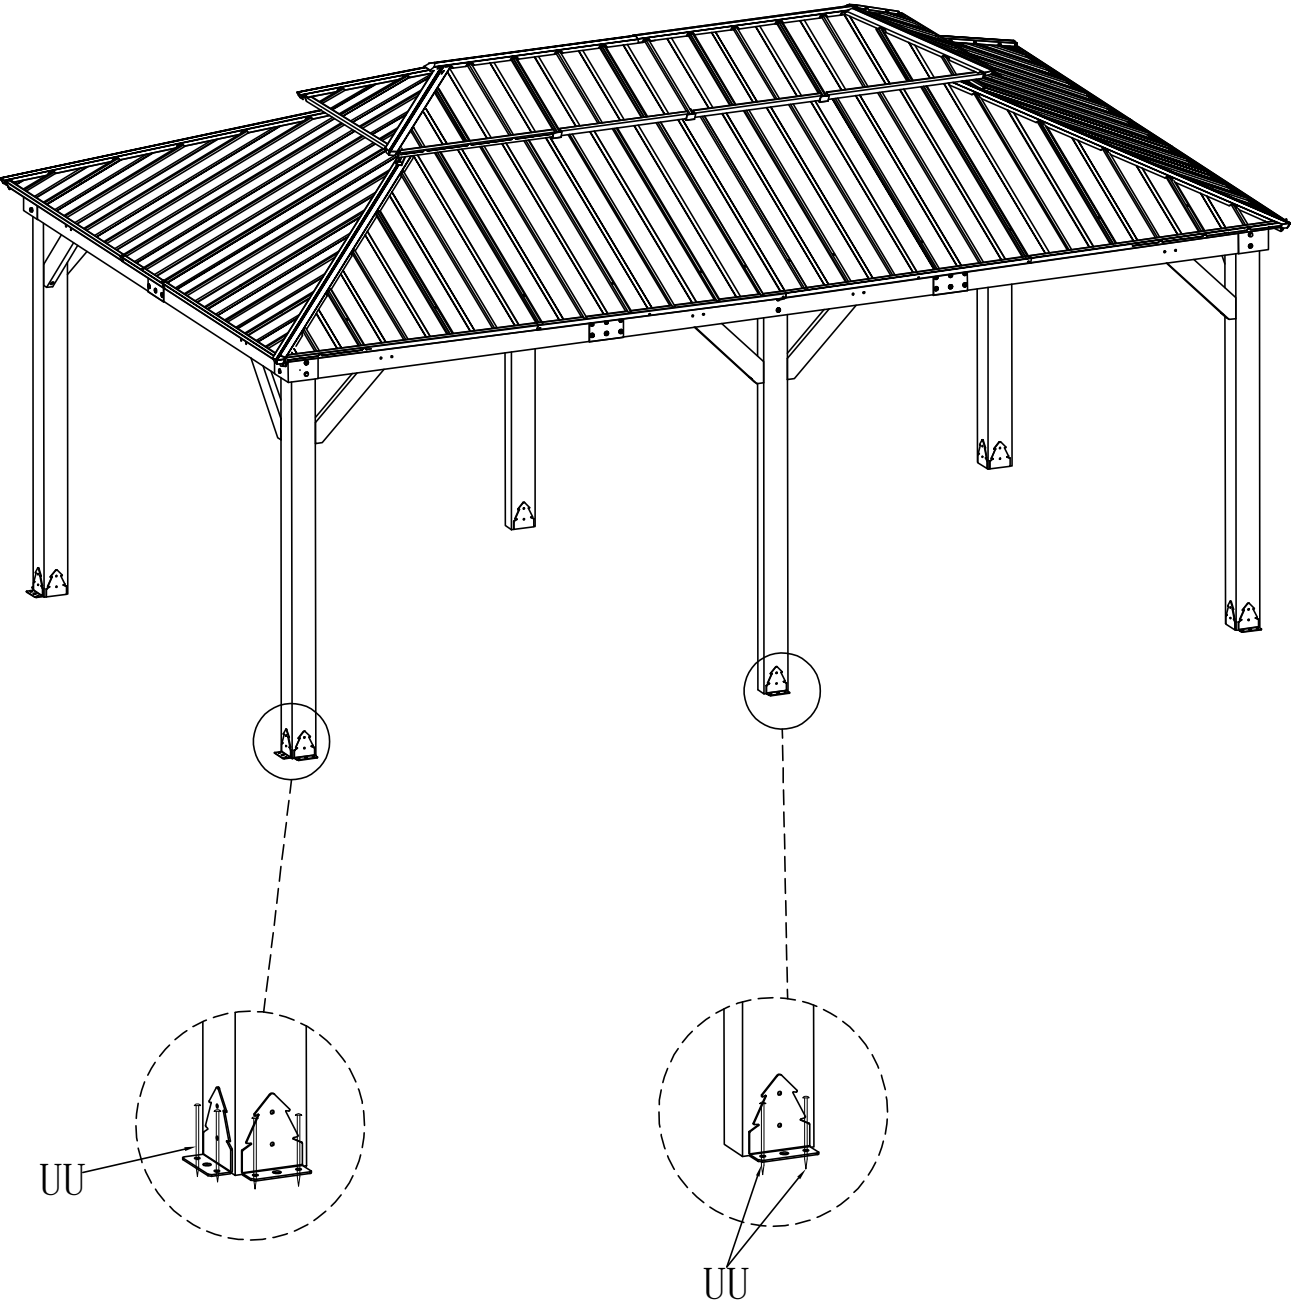





20X

STEP. 53

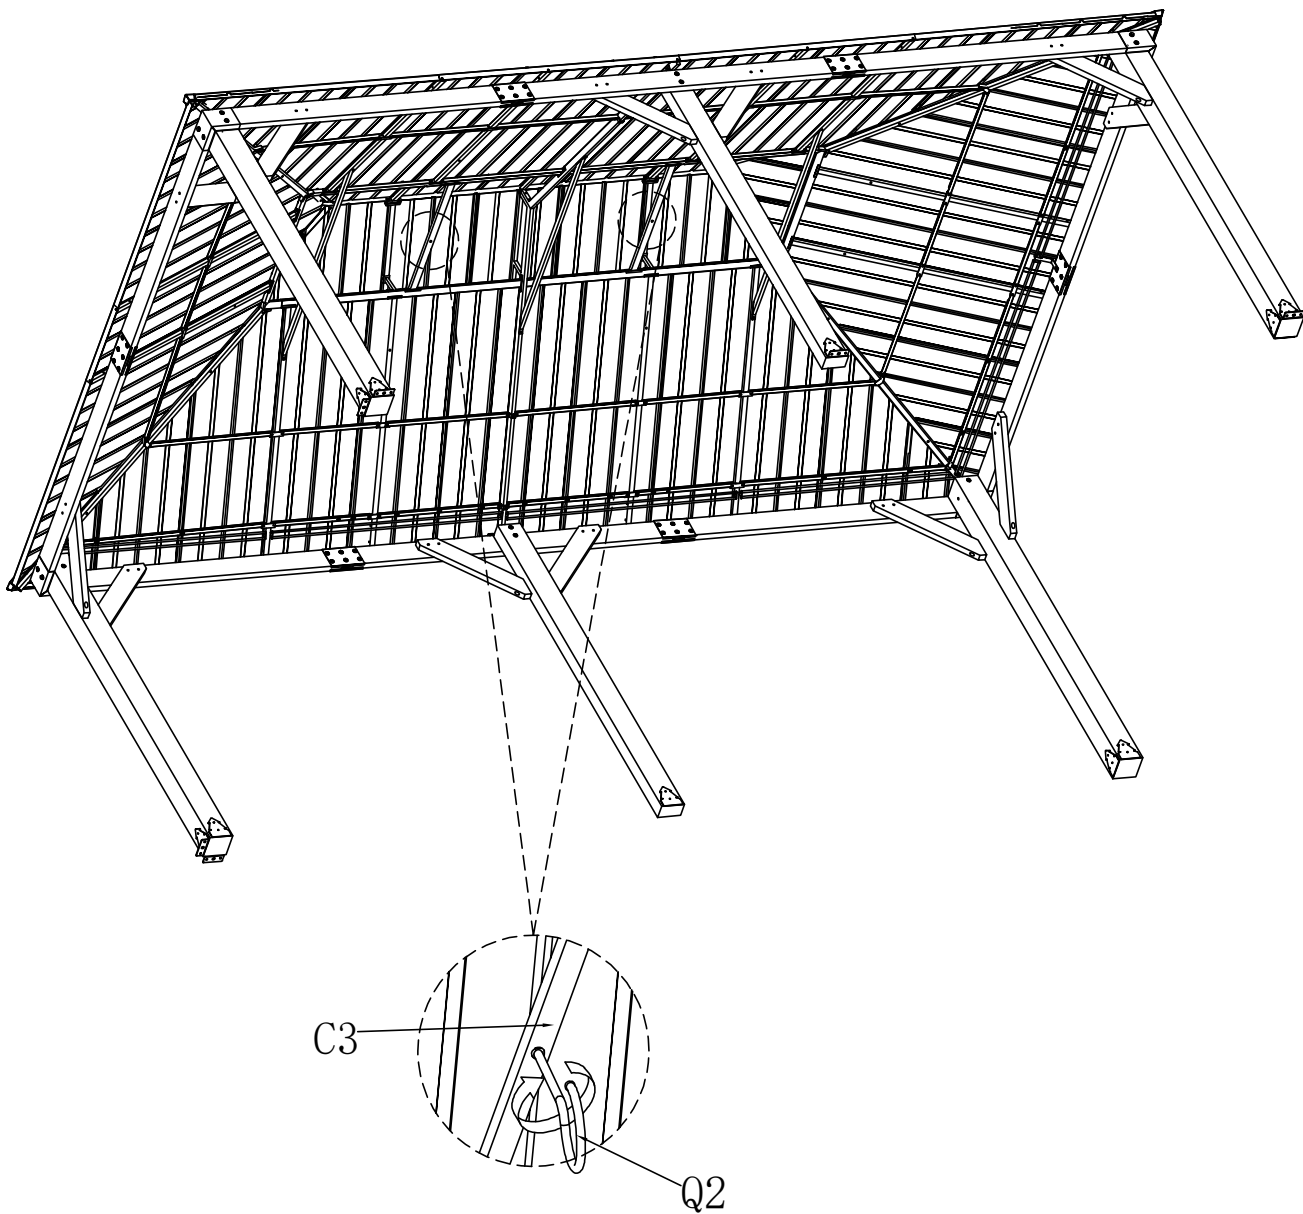


Q2 2X

STEP. 54


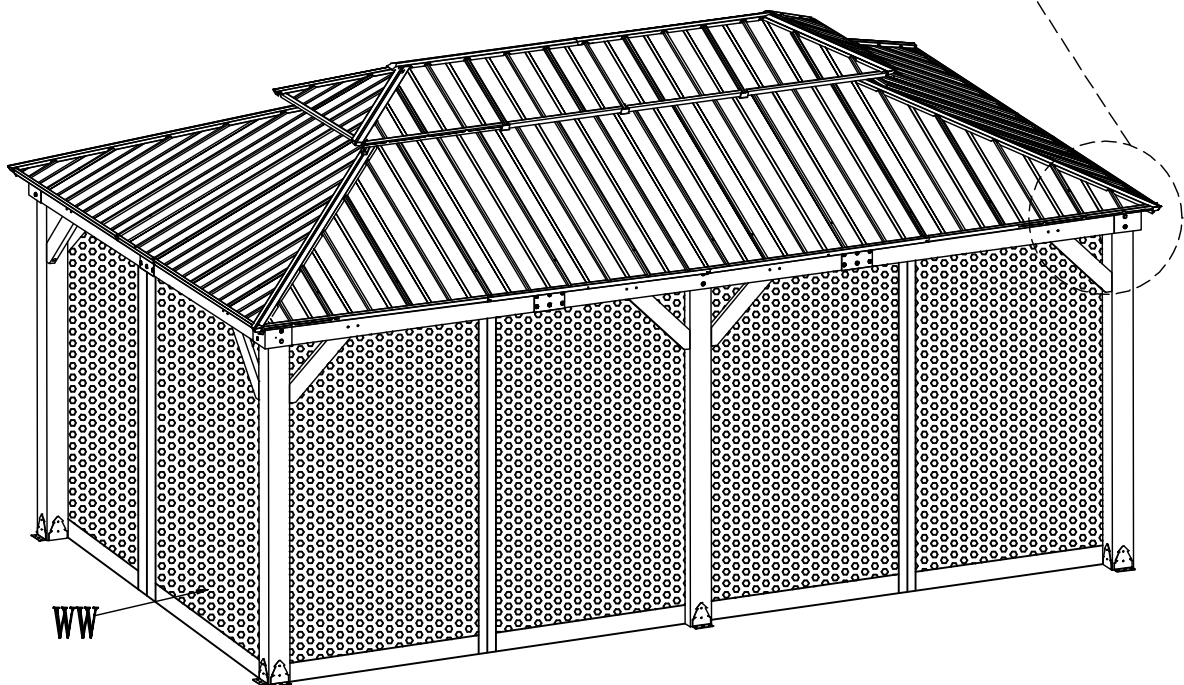
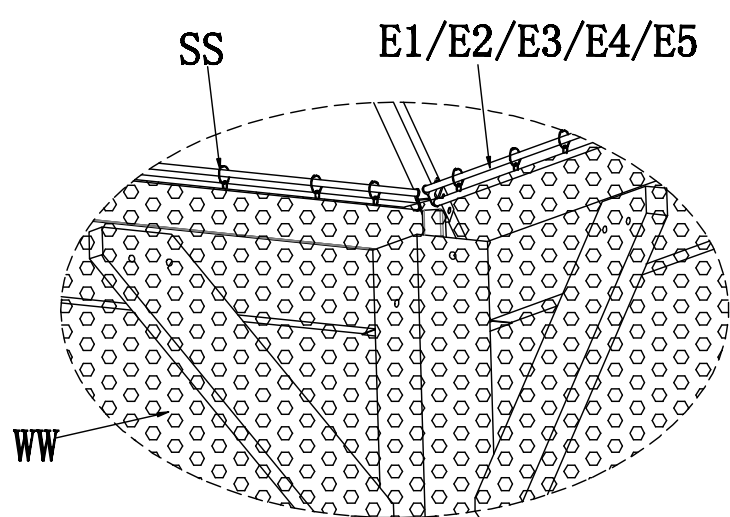
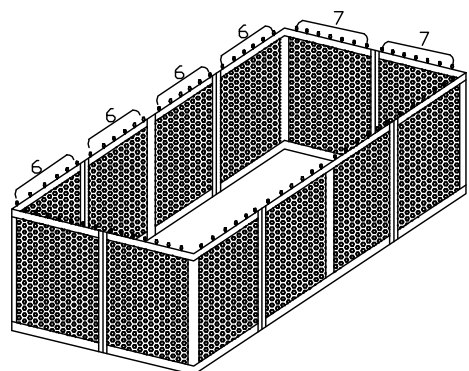


WW 1X

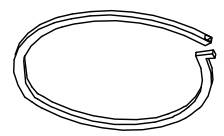


SS 76X

STEP. 55

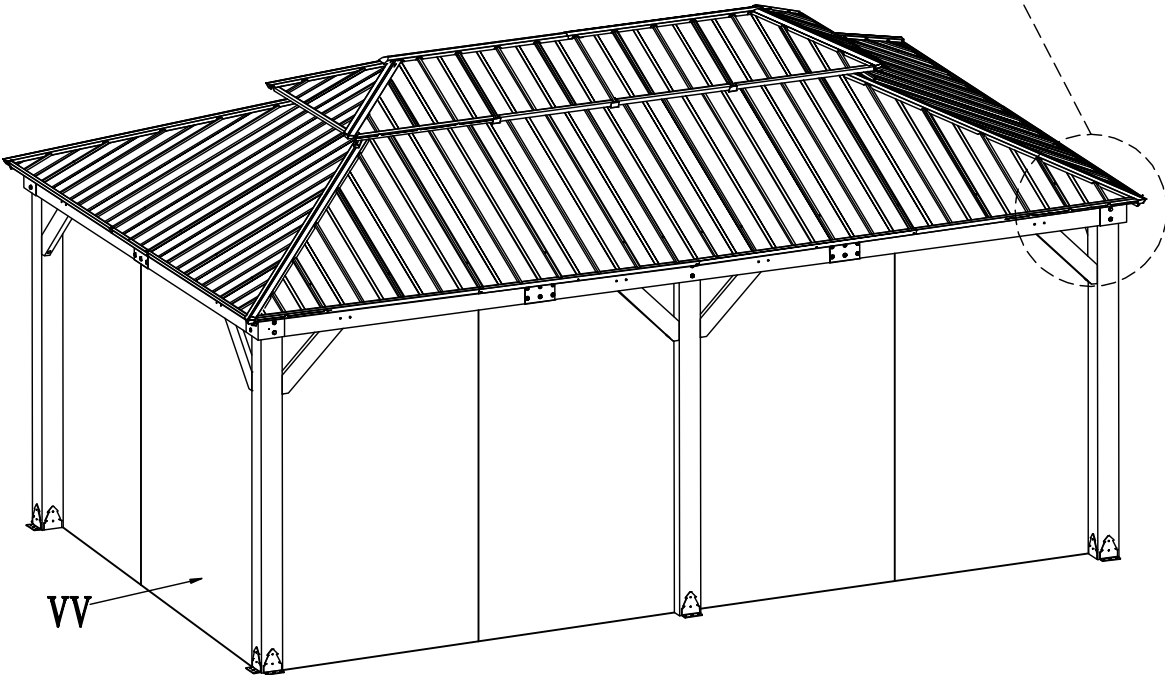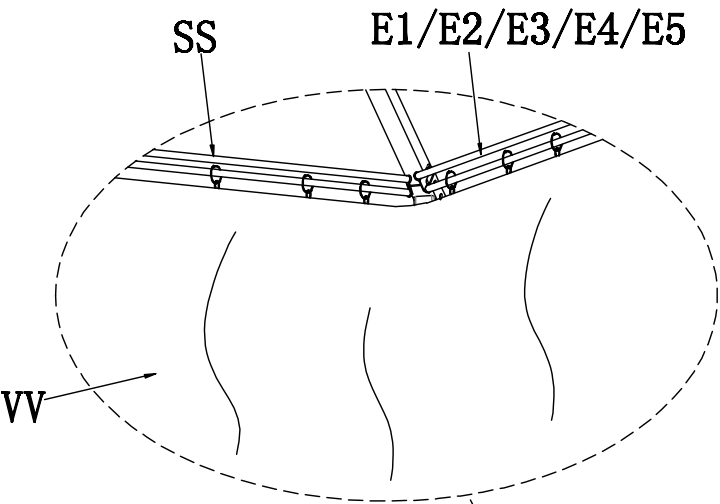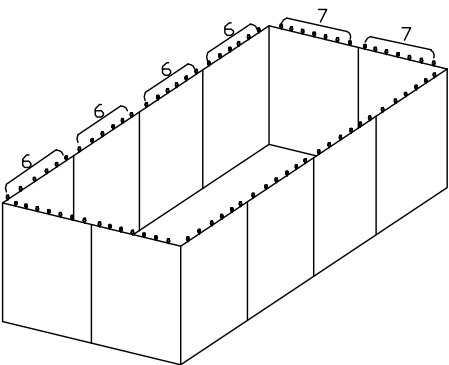

Ⓟ 1X

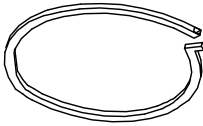

Ⓢ 76X



Call us First !
DO NOT RETURN TO STORE

For immediate help with assembly or product information

call our number:

(951) 213-4742

Or E-mail:

Contactus24service@gmail.com

Our staff is ready to provide assistance

M-F 9:00 AM to 5:00 PM EST



Call us First !
DO NOT RETURN TO STORE

For immediate help with assembly or product information

call our number:

(951) 213-4742

Or E-mail:

Contactus24service@gmail.com

Our staff is ready to provide assistance

M-F 9:00 AM to 5:00 PM EST