

Instruction Manual










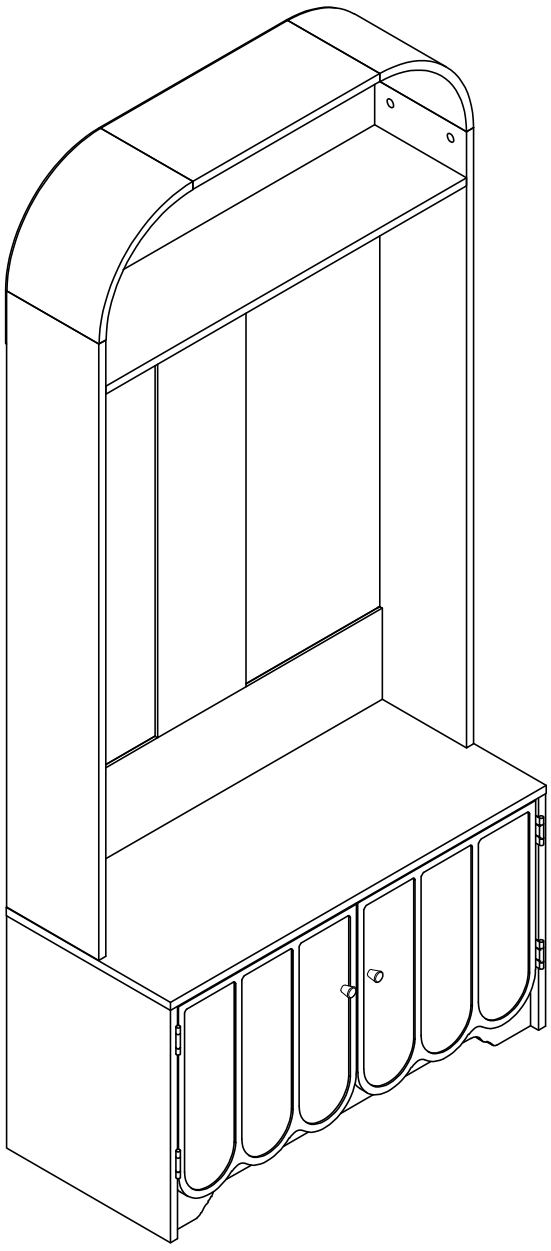


Made In China










Parts List(EN) / Teile Liste(DE)

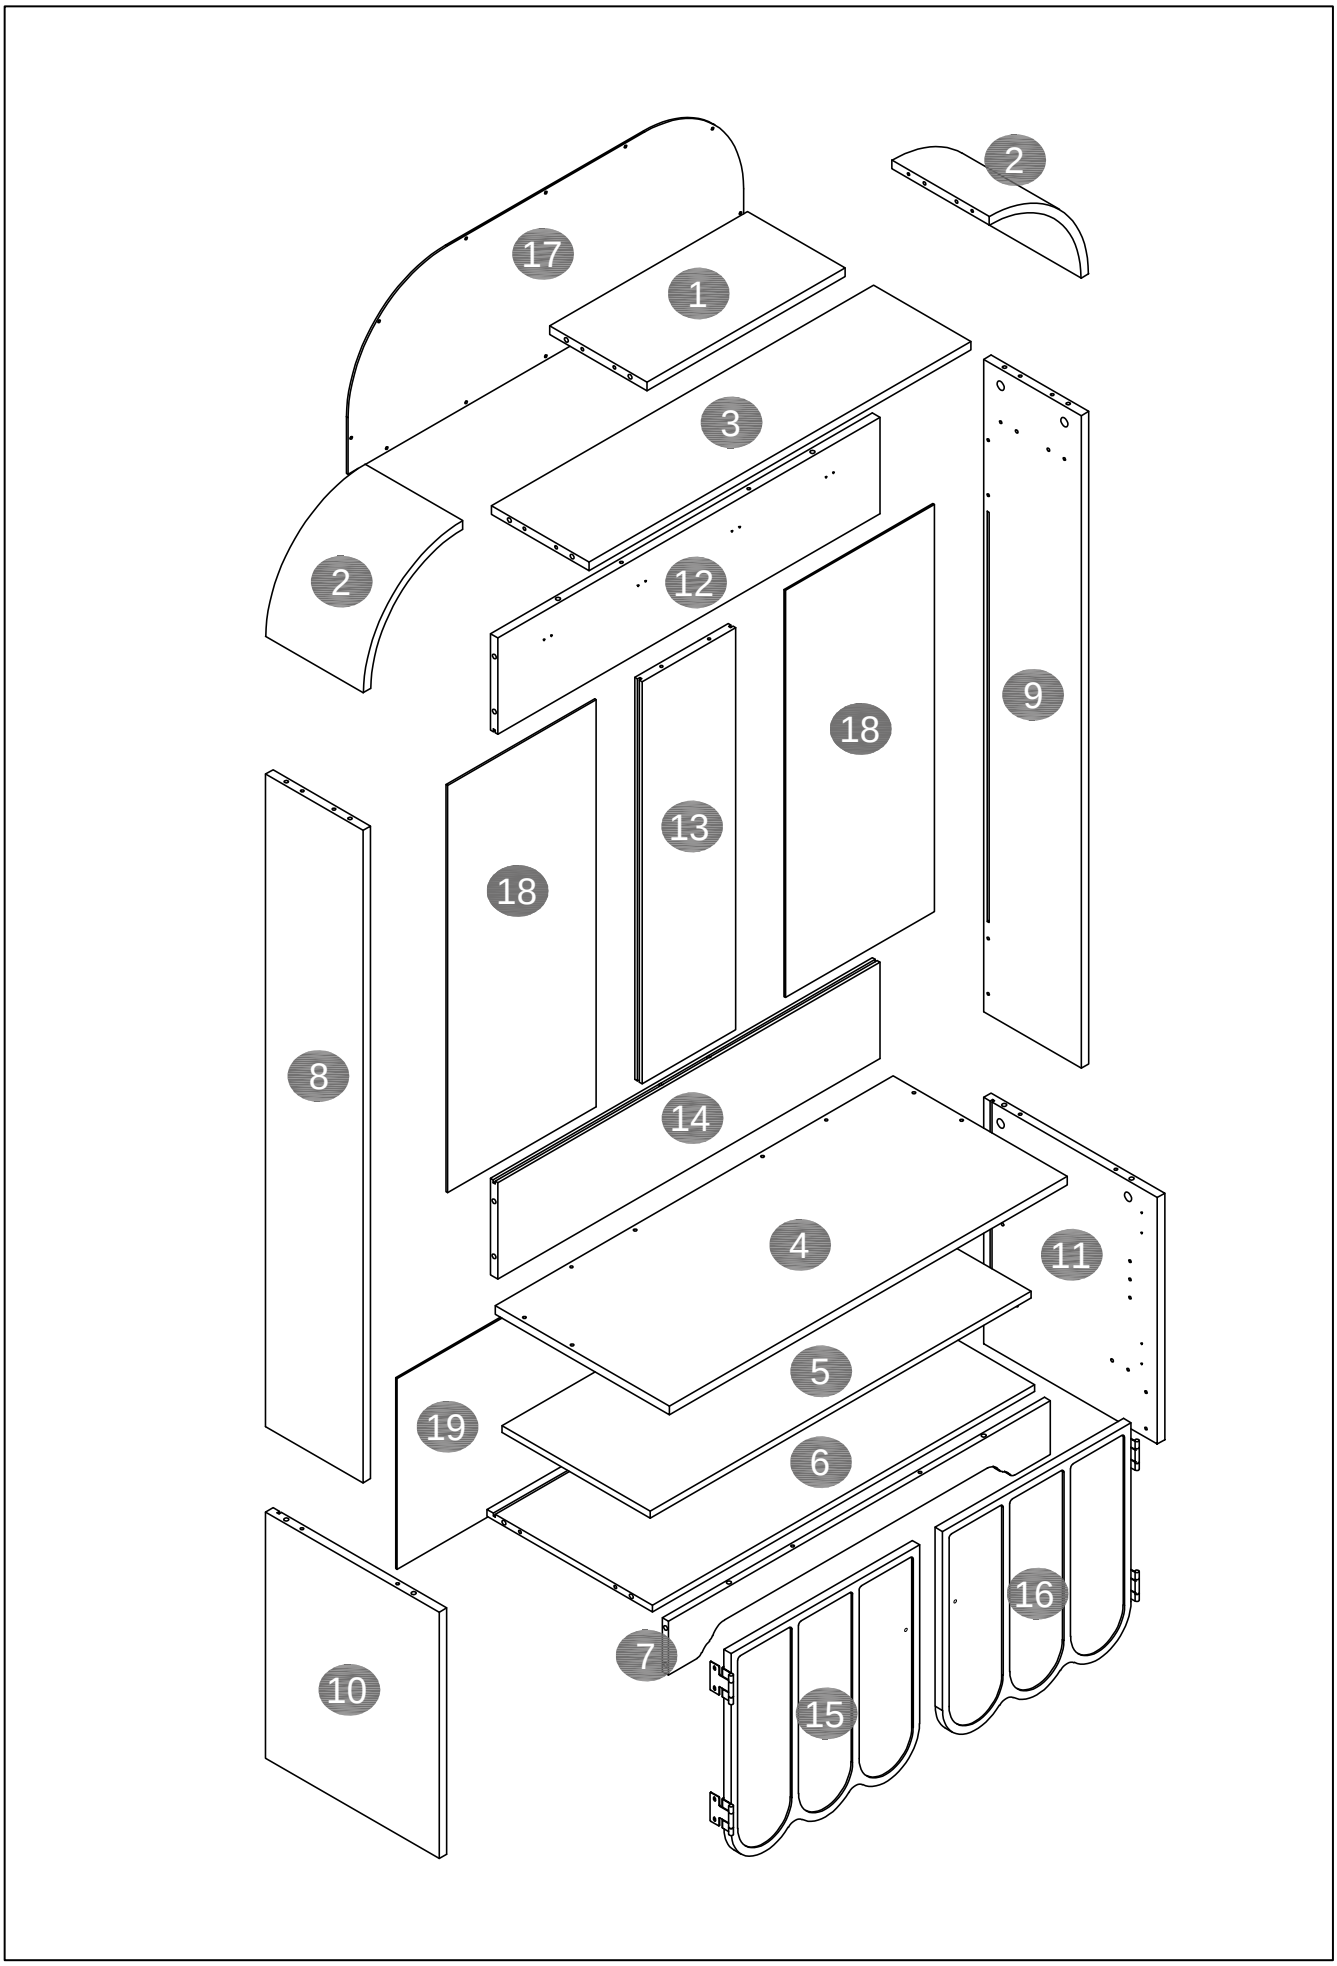












Parts List(EN) / Teile Liste(DE)

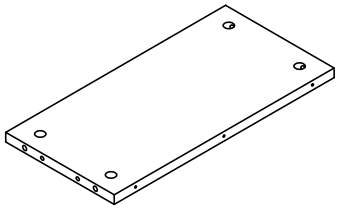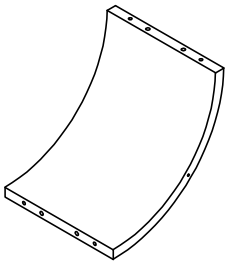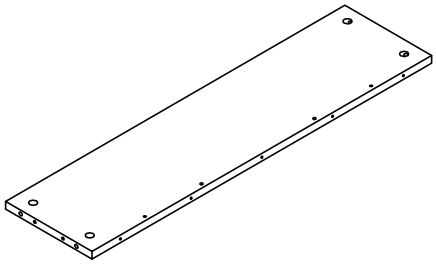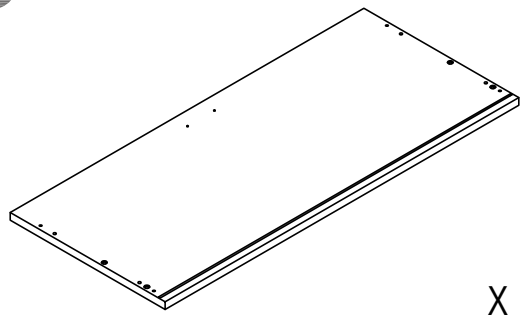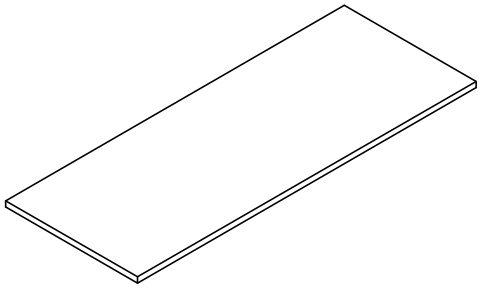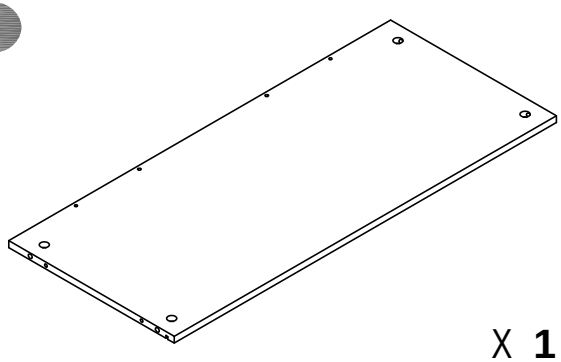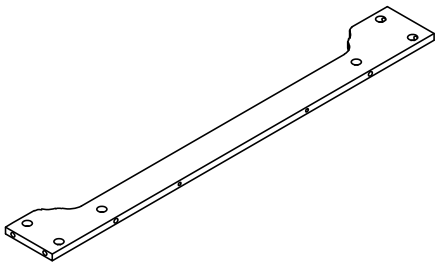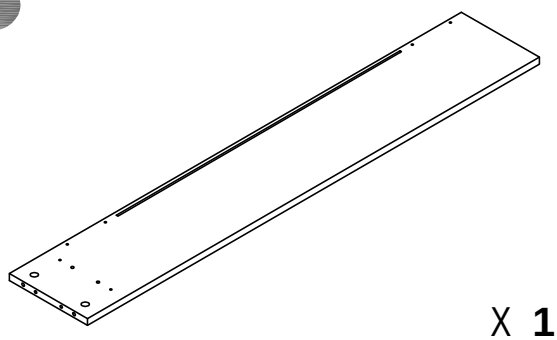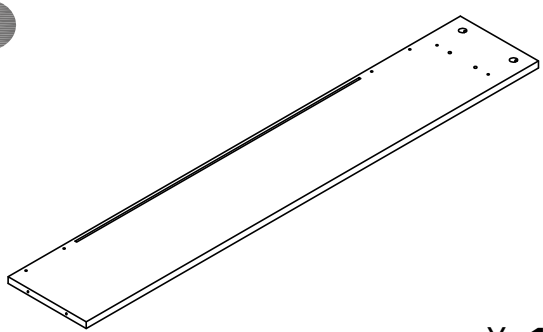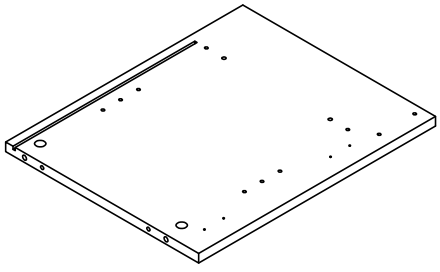1  X **1**	2  X **2**
3  X **1**	4  X **1**
5  X **1**	6  X **1**
7  X **1**	8  X **1**
9  X **1**	10  X **1**





Parts List(EN) / Teile Liste(DE)

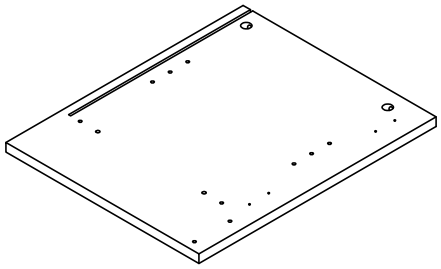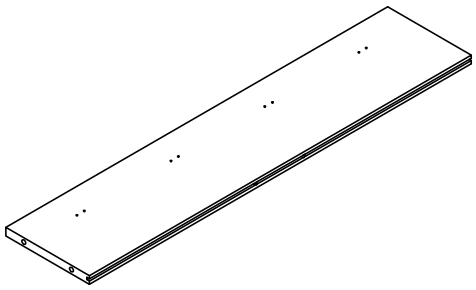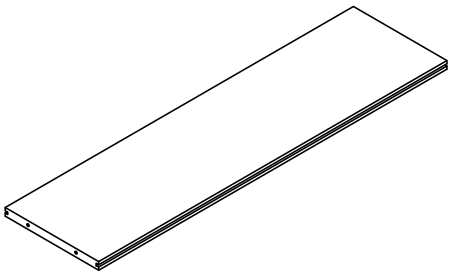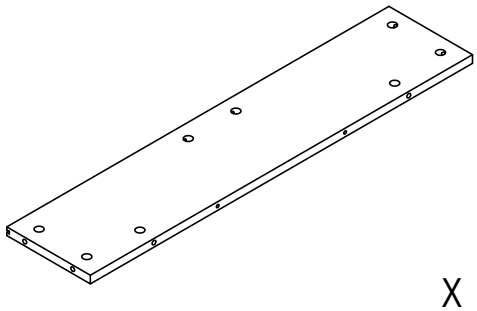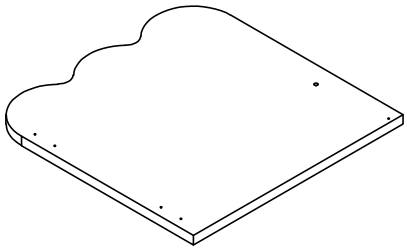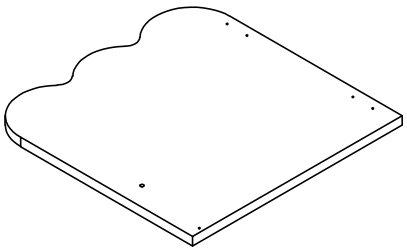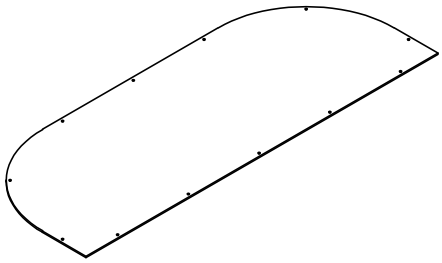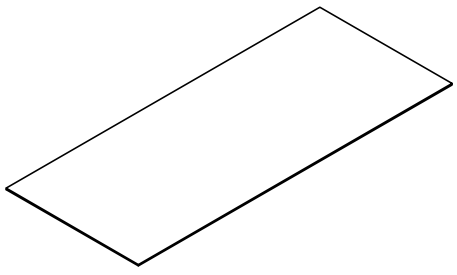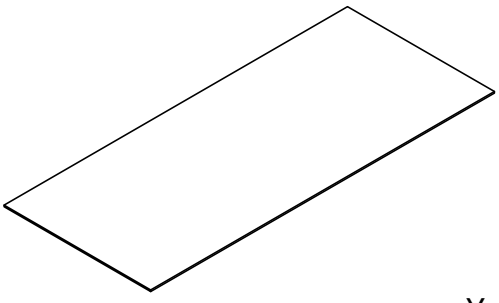11  X **1**	12  X **1**
13  X **1**	14  X **1**
15  X **1**	16  X **1**
17  X **1**	18  X **2**
19  X **1**	


Hardware List(EN) / Teile Liste(DE)

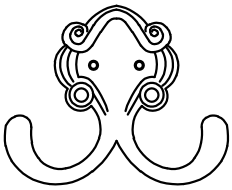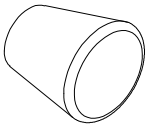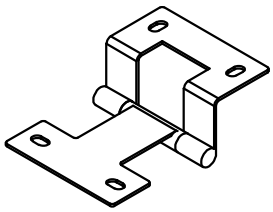A  ϕ6*36mm 42+2PCS	B  ϕ15*10mm 42+2PCS	C  ϕ6*30mm 26+2PCS
D  M5*45mm 4+1PCS	E  4PCS	F  74*25*16mm 1PC
G  34*12*1mm 2+1PCS	H  Ø19*22 2PCS	I  13*13*11 18+2PCS
J  53*15*2.0mm 4PCS	K  17*12*13 4+1PCS	L  M3*16mm 38+2PCS
M  M3*16mm 2+1PCS	N  M3.5*12mm 18+2PCS	O  35*12mm 4+2PCS

Hardware List(EN) / Teile Liste(DE)


P  M4*35mm 1PC	Q  M8*37mm 1PC	R  205*25mm 1PC
S  ϕ21mm 16+2PCS	T  M4*16mm 2+1PCS	 M4 1PC

STEP1

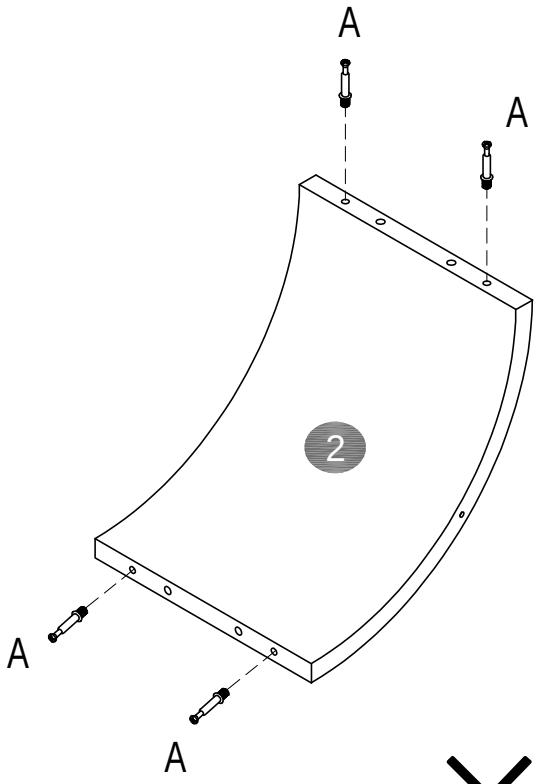


X2


A X 8

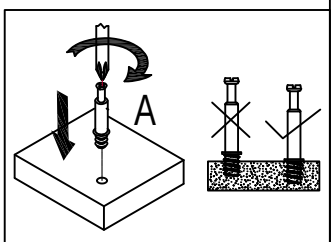


STEP2

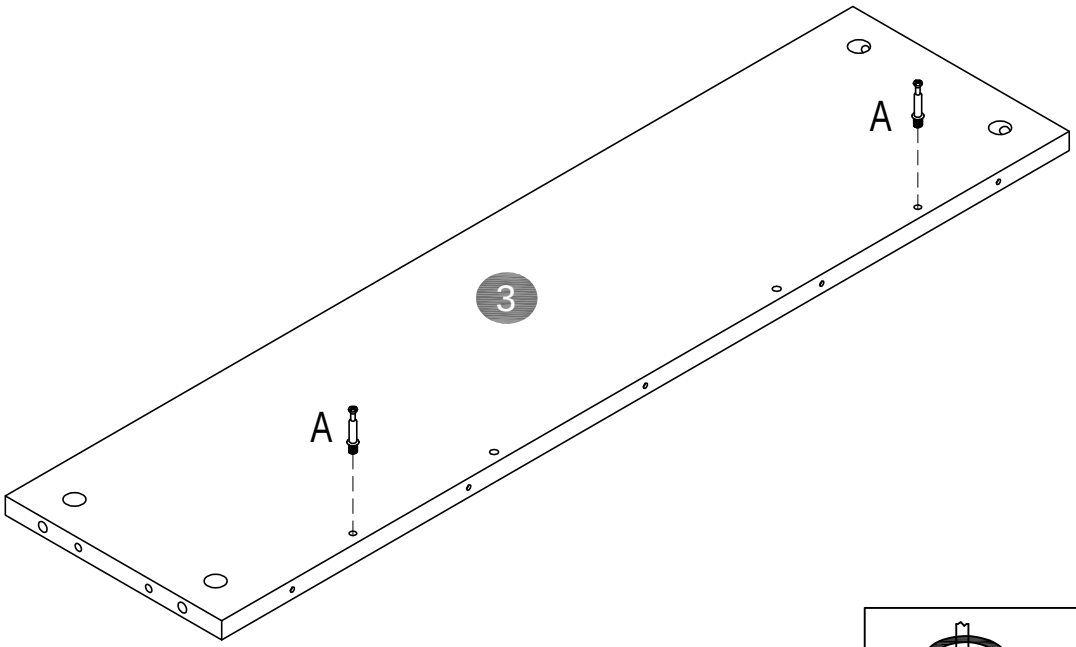



A X 2

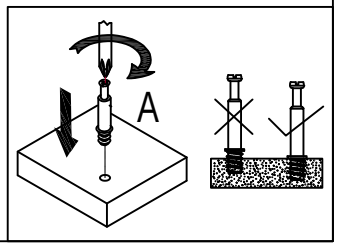


STEP3

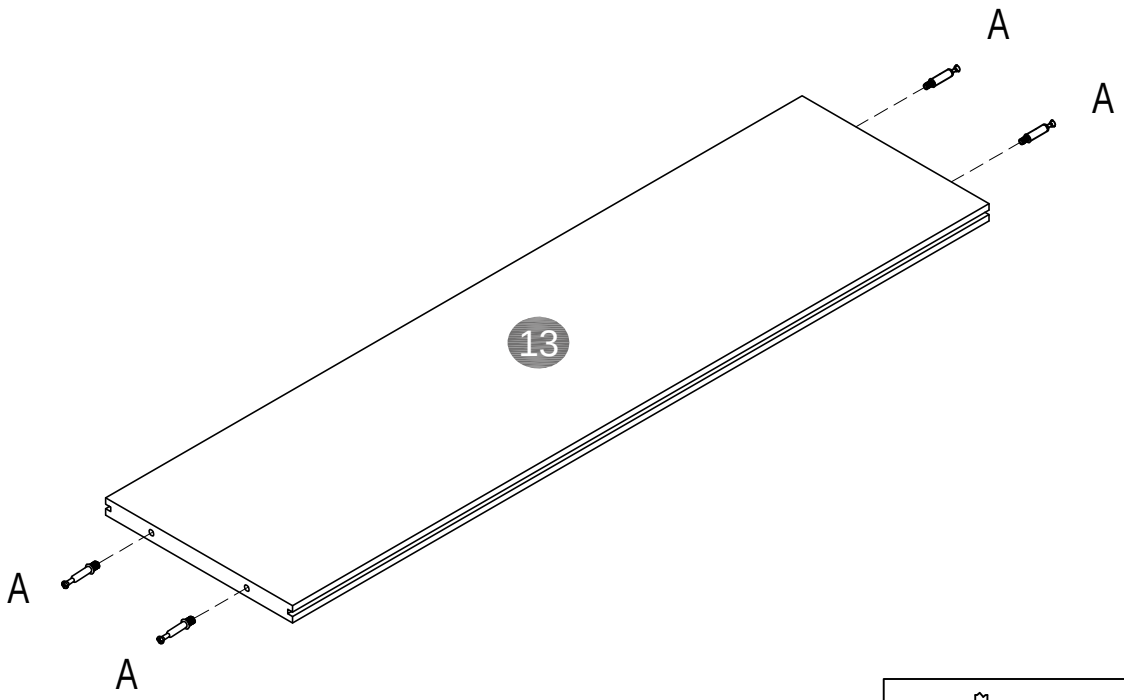


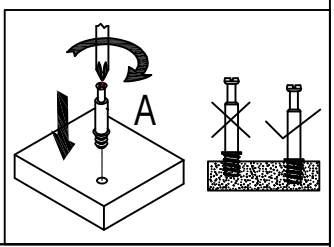


A  X 4


STEP4

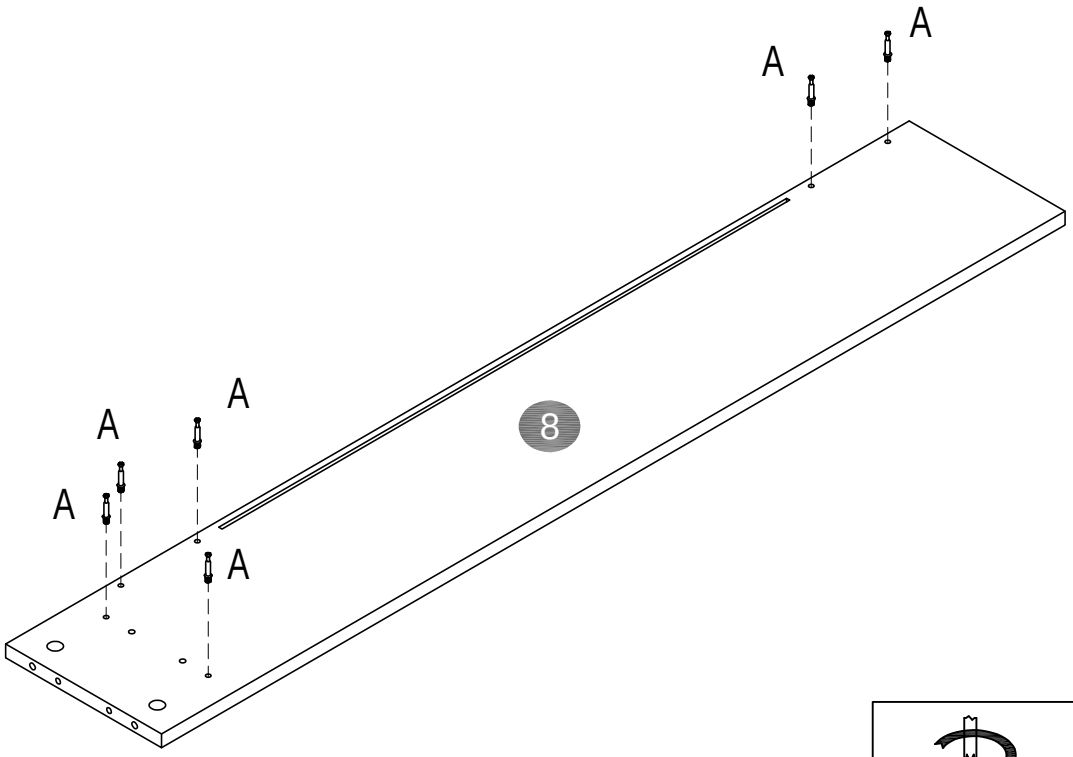


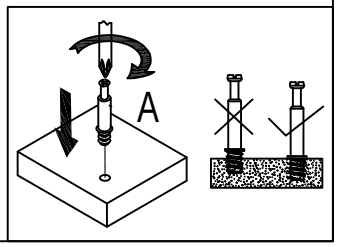


A  X 6


STEP5

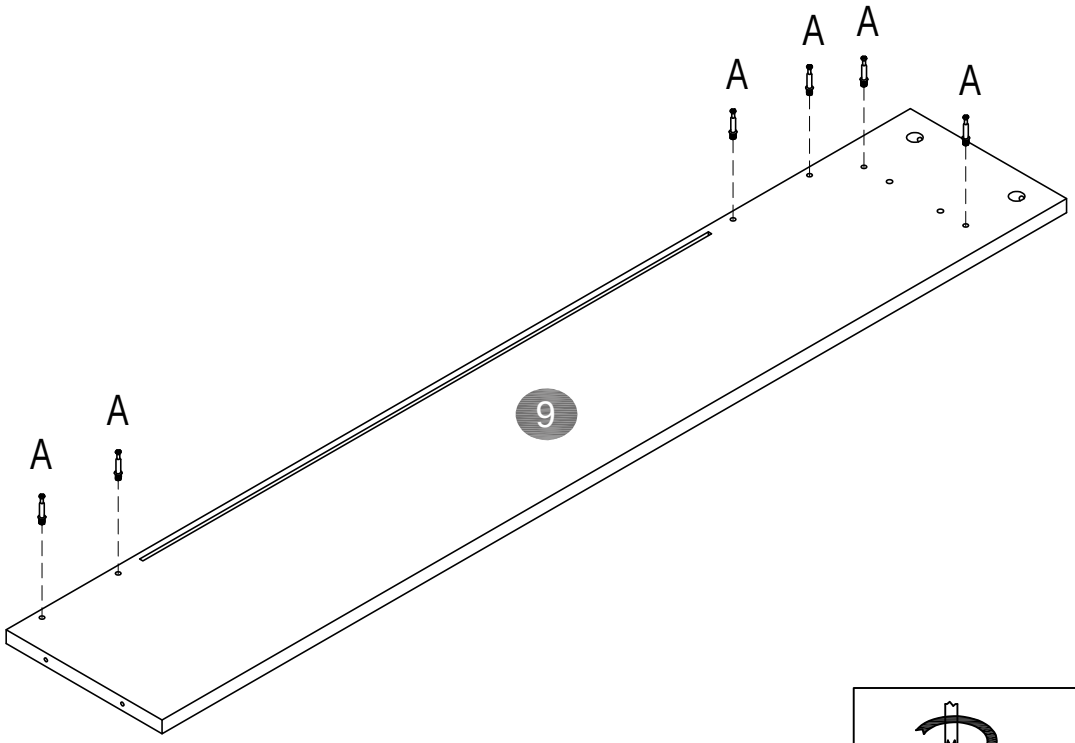

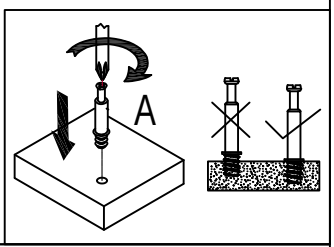

A  X 6


STEP6

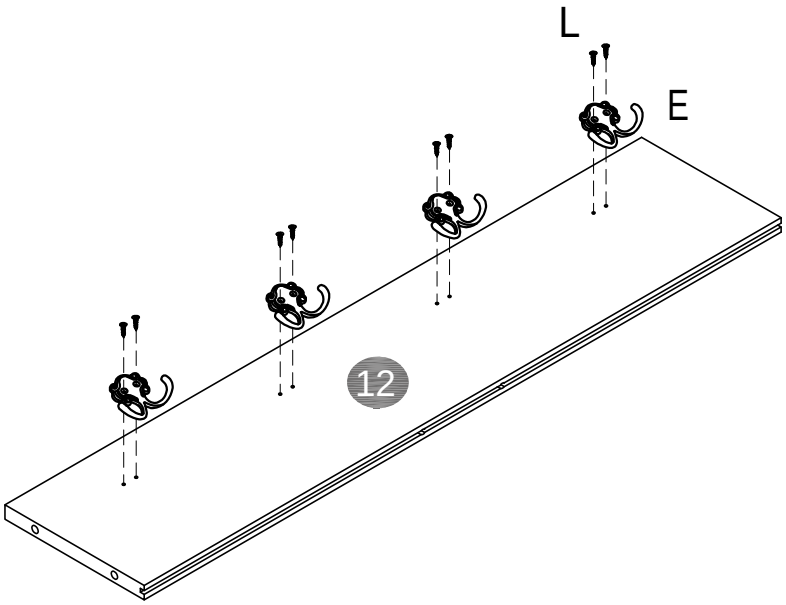


E  X 4

L  X 8


STEP7

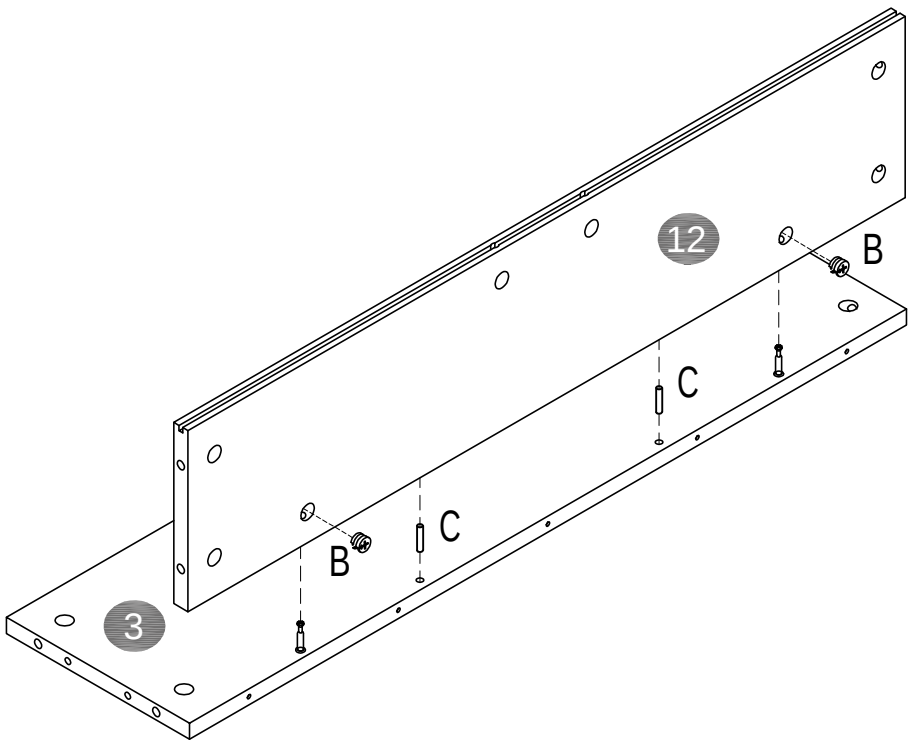

B		X 2
C		X 2

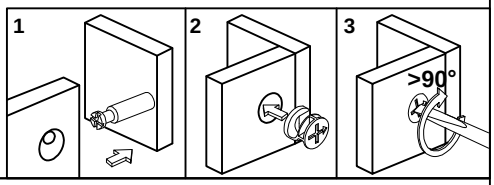


STEP8

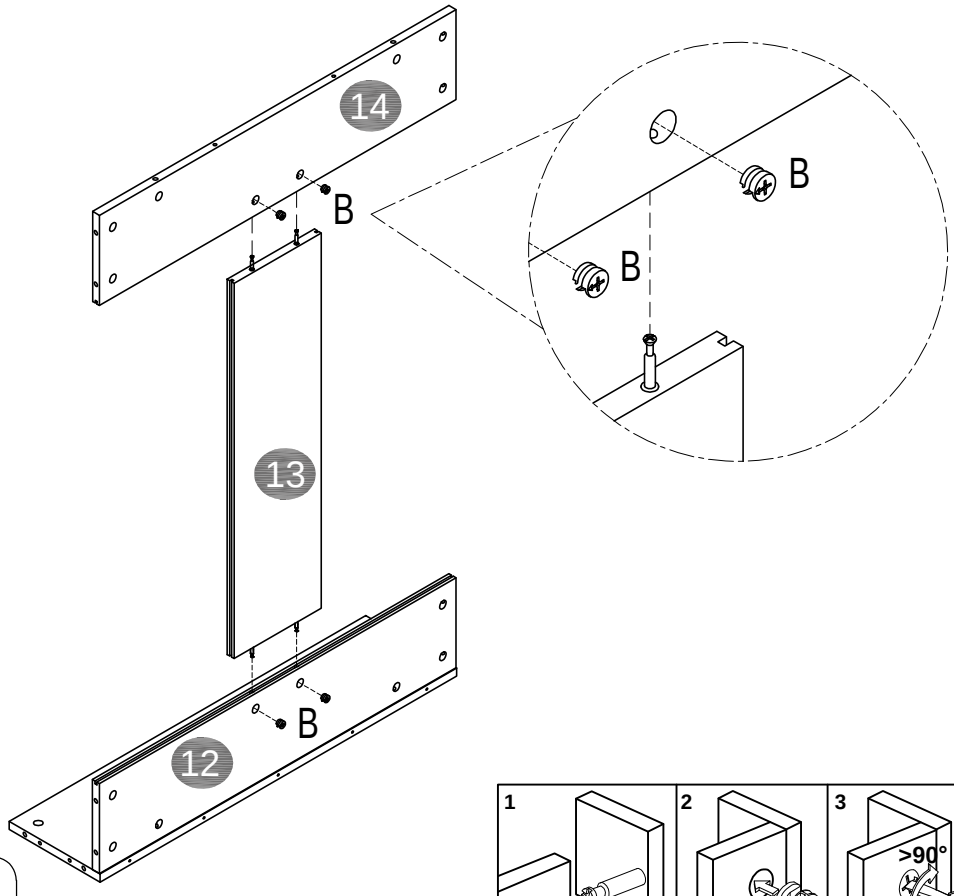


B		X 4


STEP9

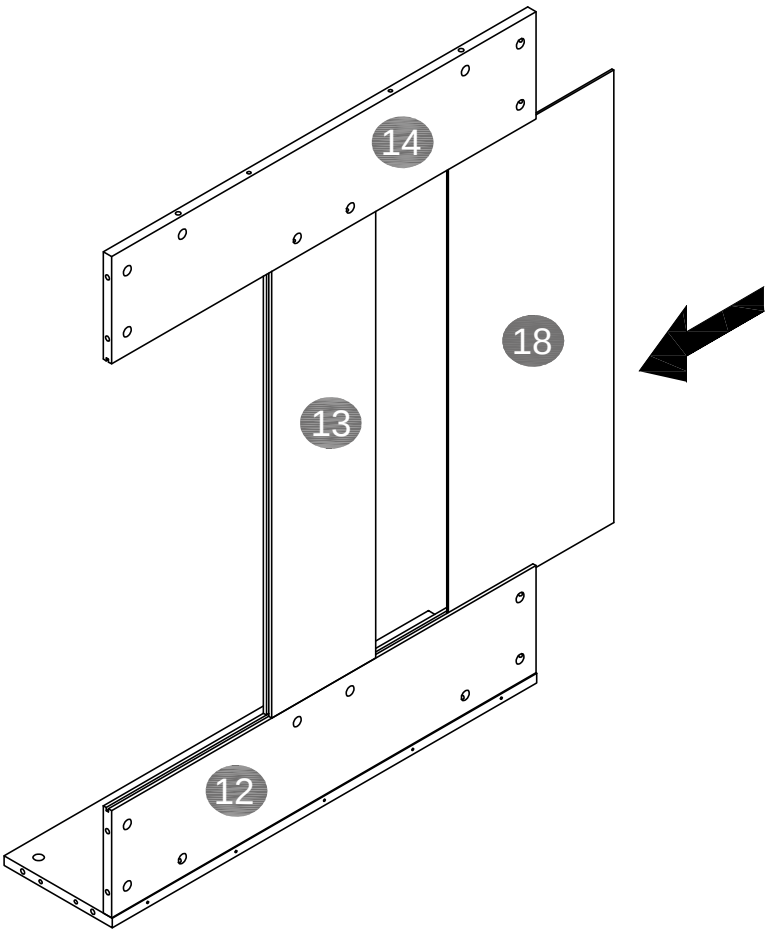


STEP10

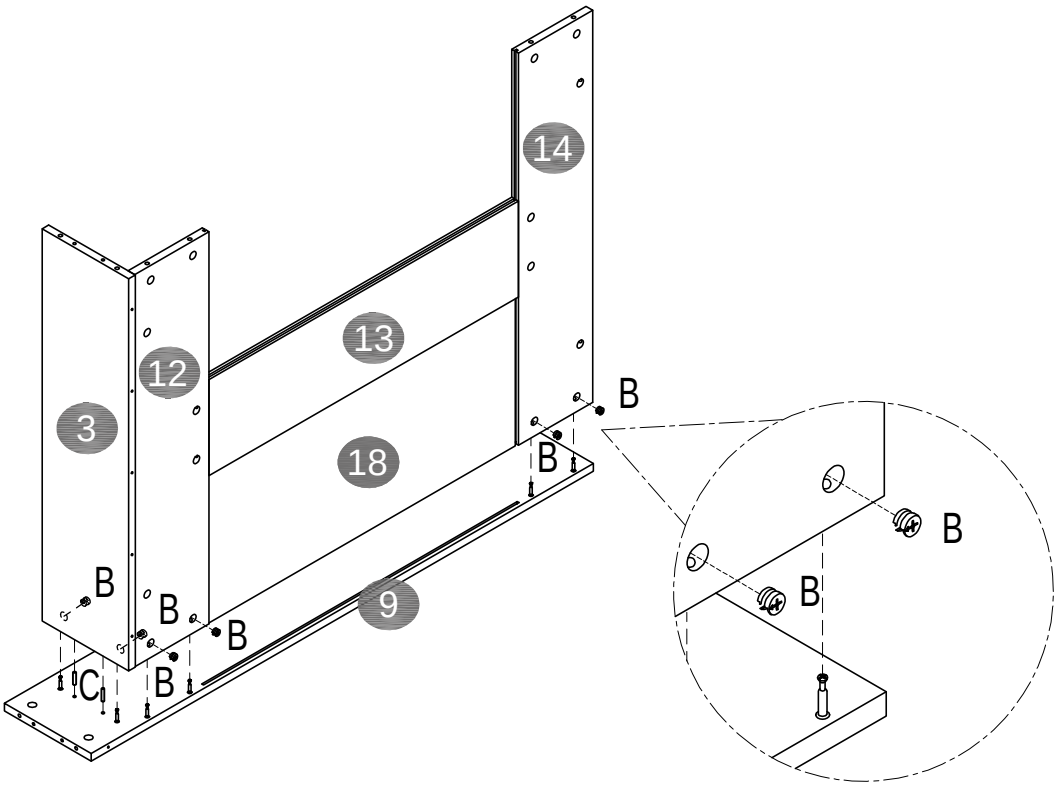


B		X 6
C		X 2

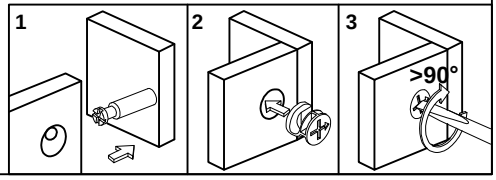


STEP11

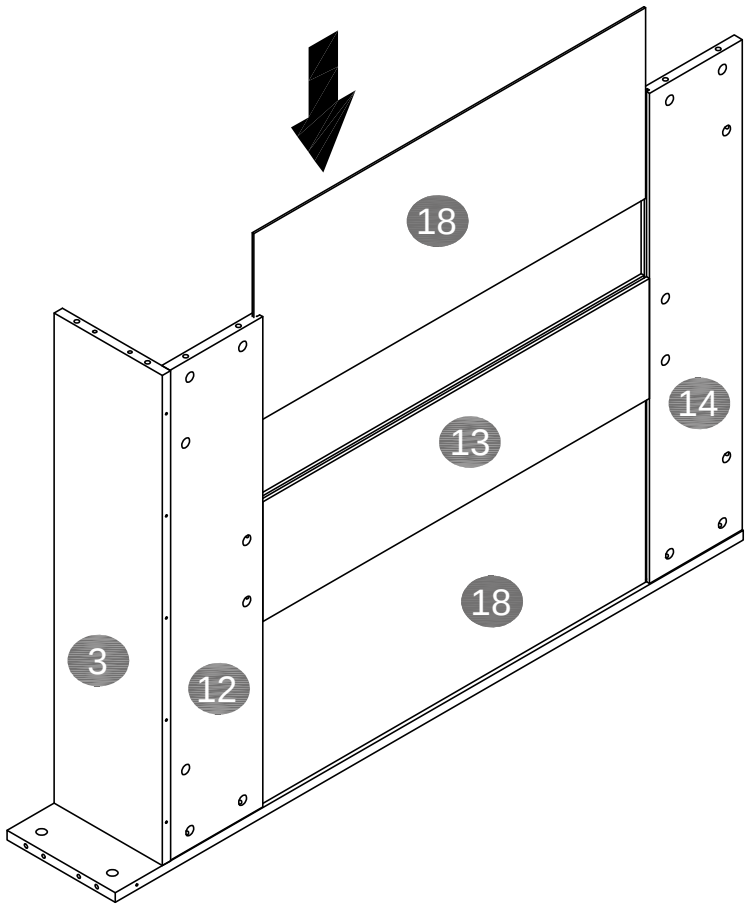


STEP12

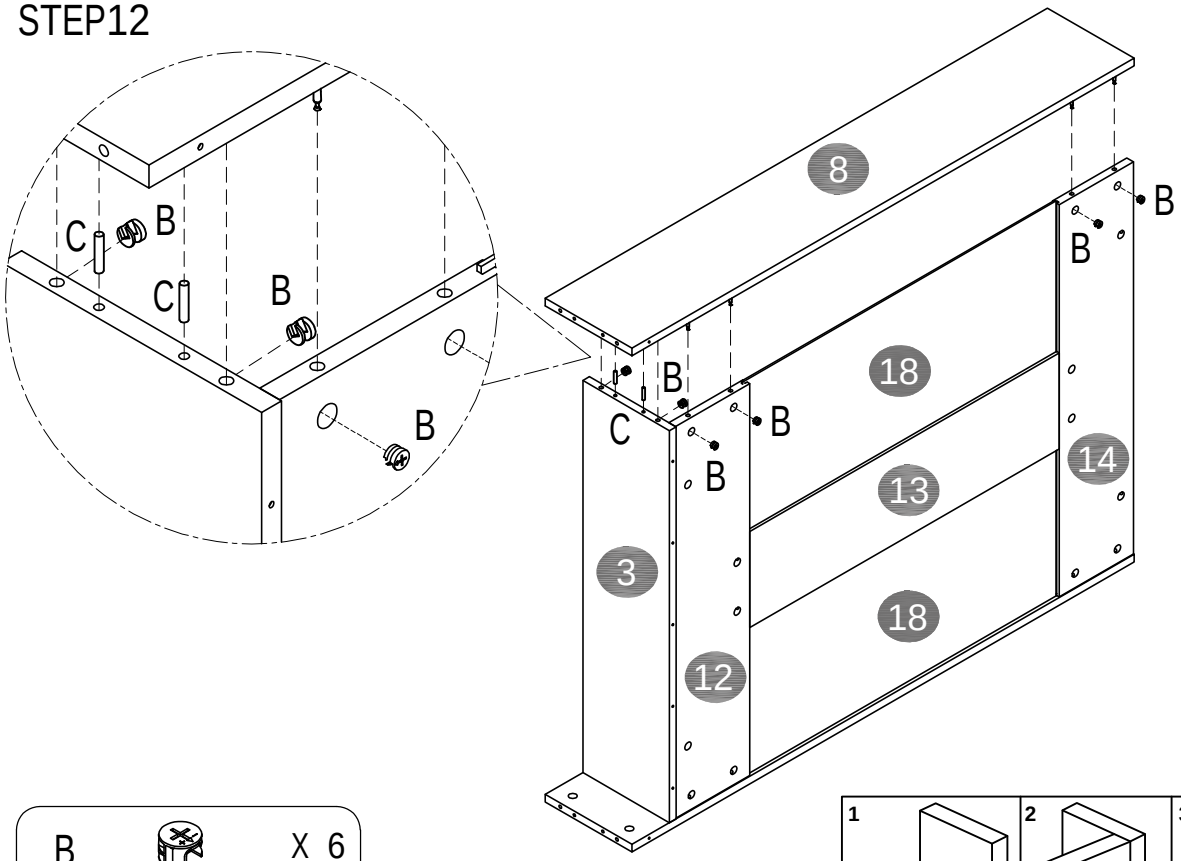


B		X 6
C		X 2

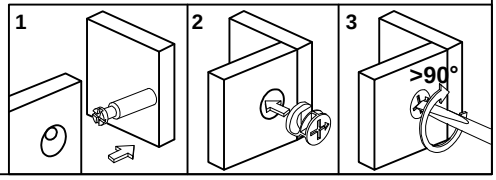


STEP13

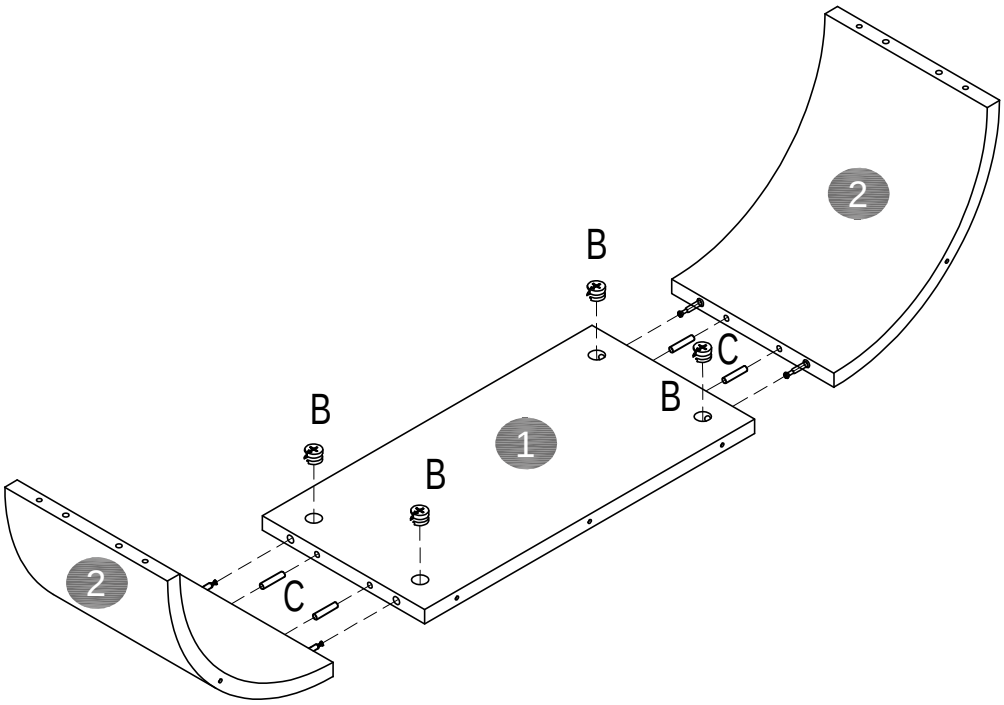


B		X 4
C		X 4

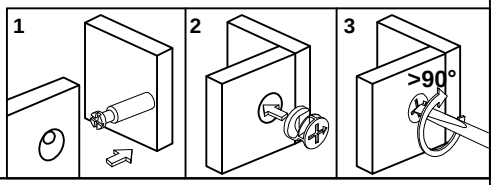


STEP14

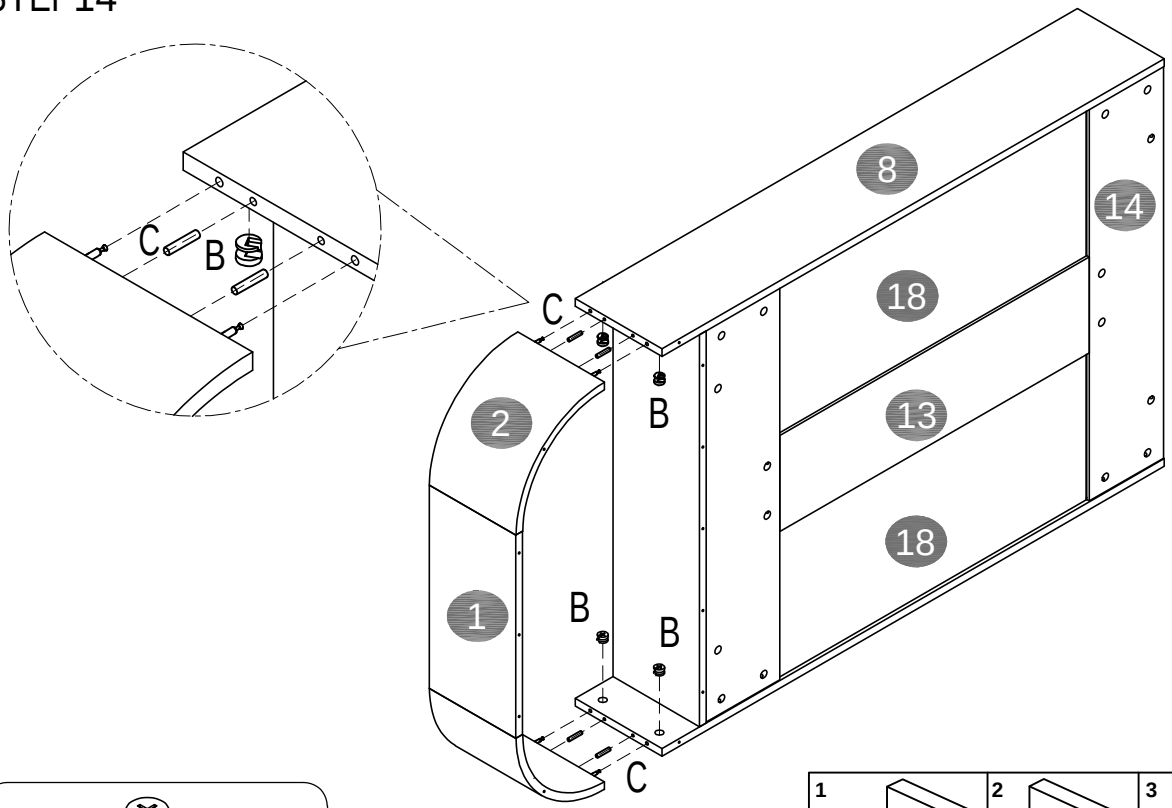

B		X 4
C		X 4

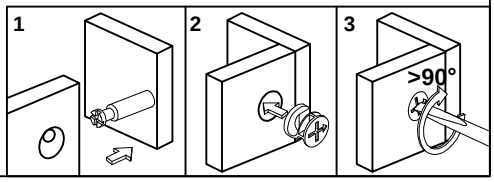



STEP15

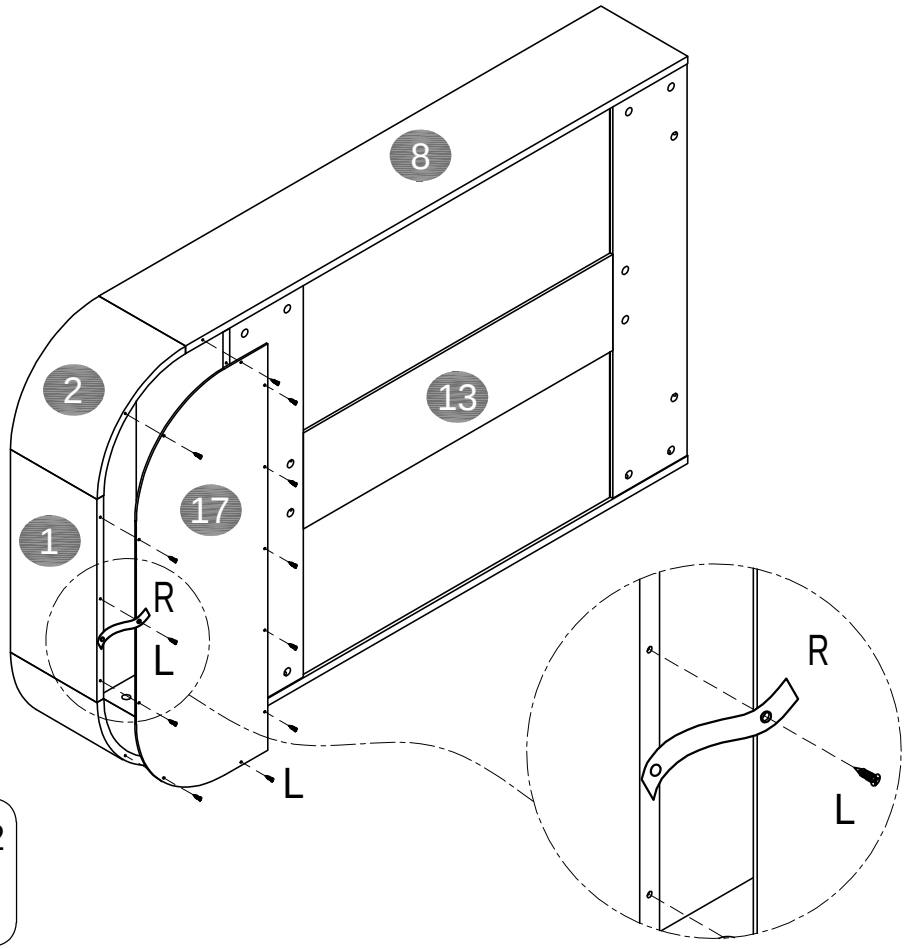


L		X 12
R		X 1


STEP16

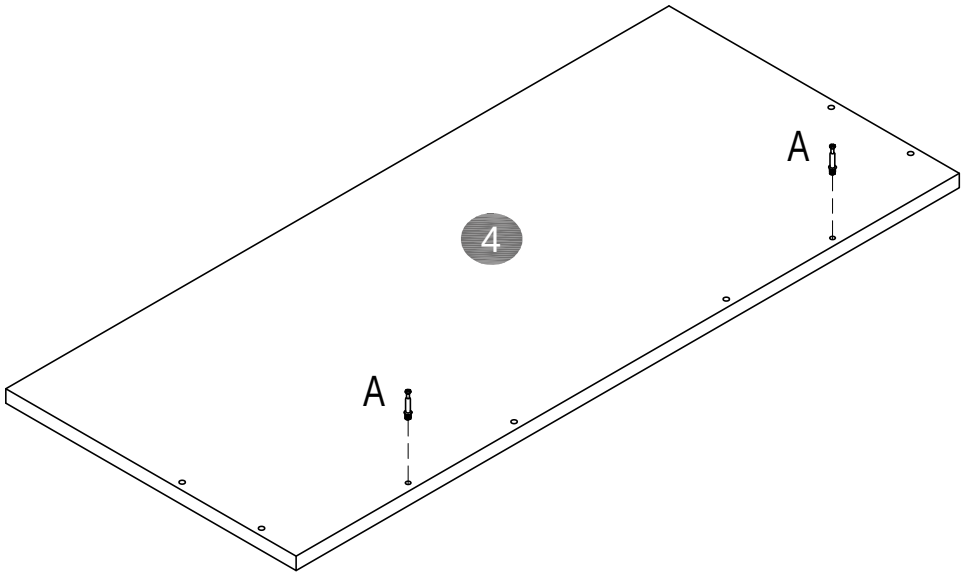

A		X 2

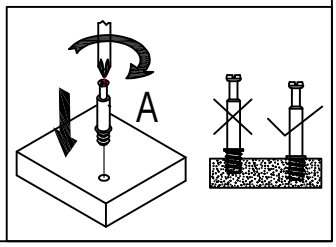


STEP17

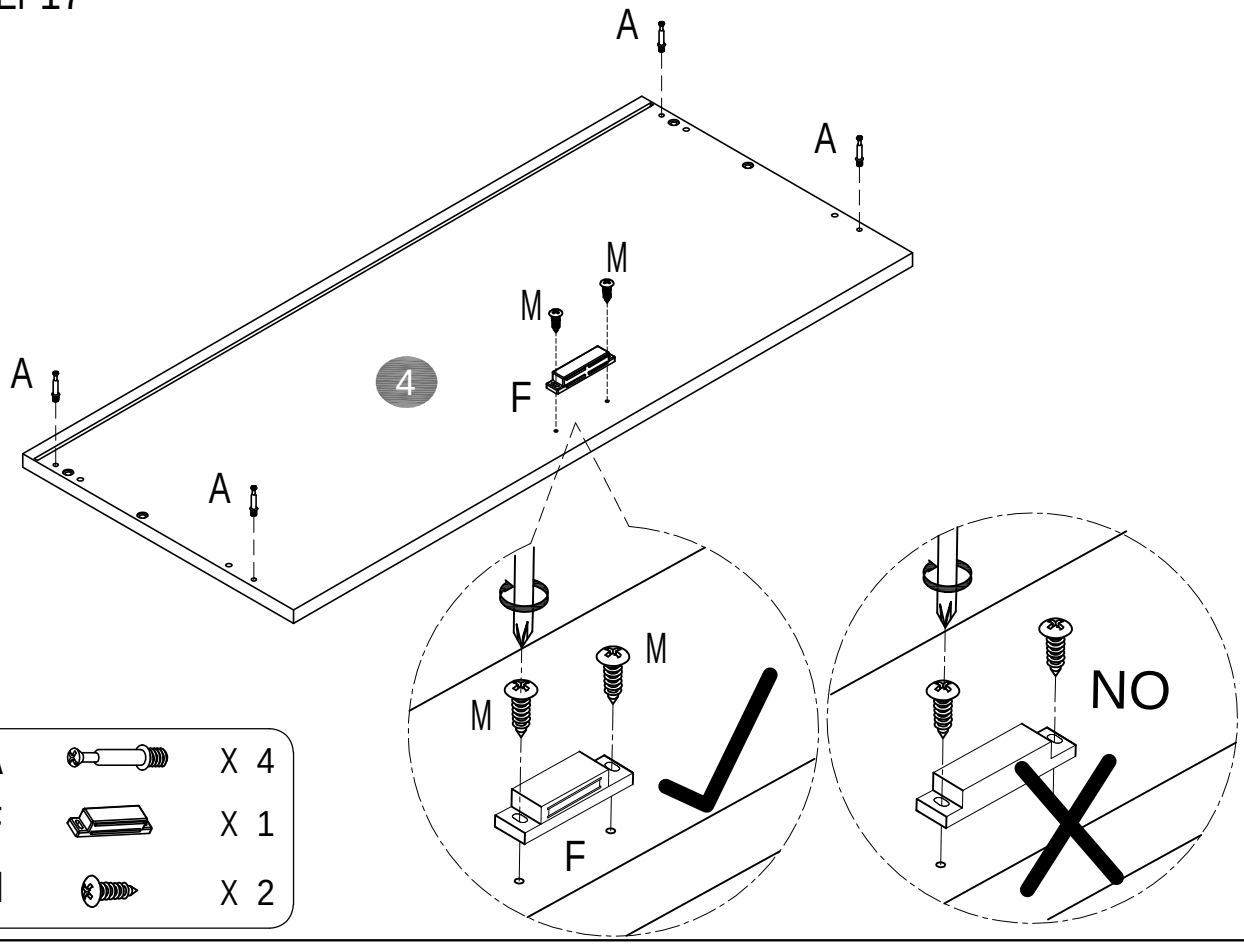


A		X 4
F		X 1
M		X 2

STEP18

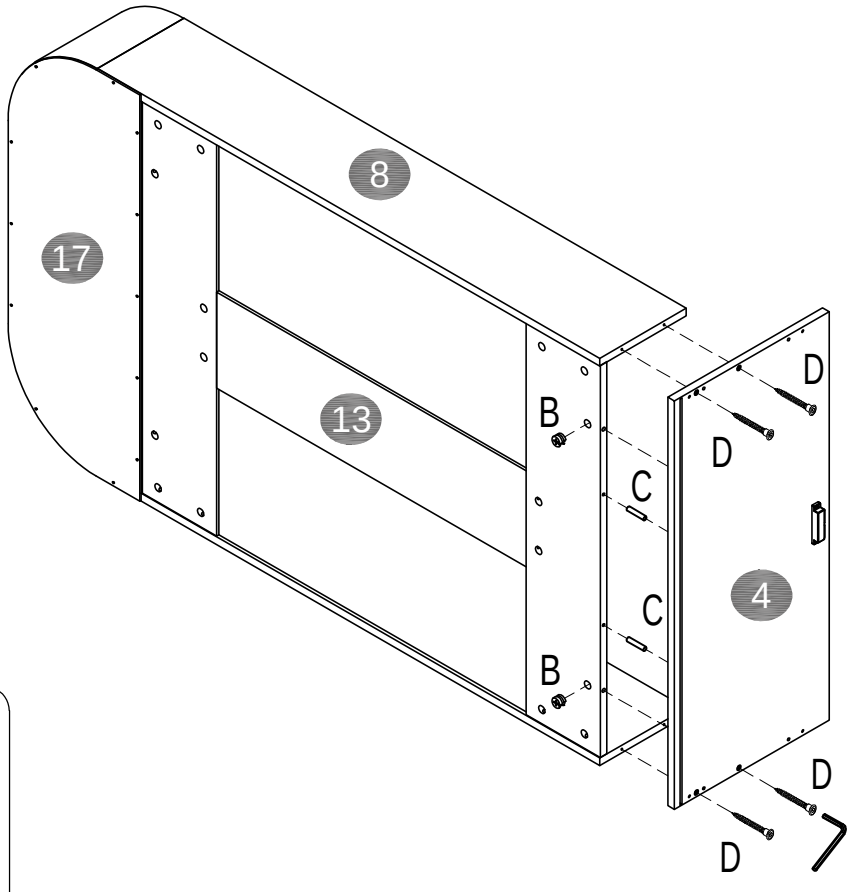


B		X 2
C		X 2
D		X 4
		X 1


STEP19

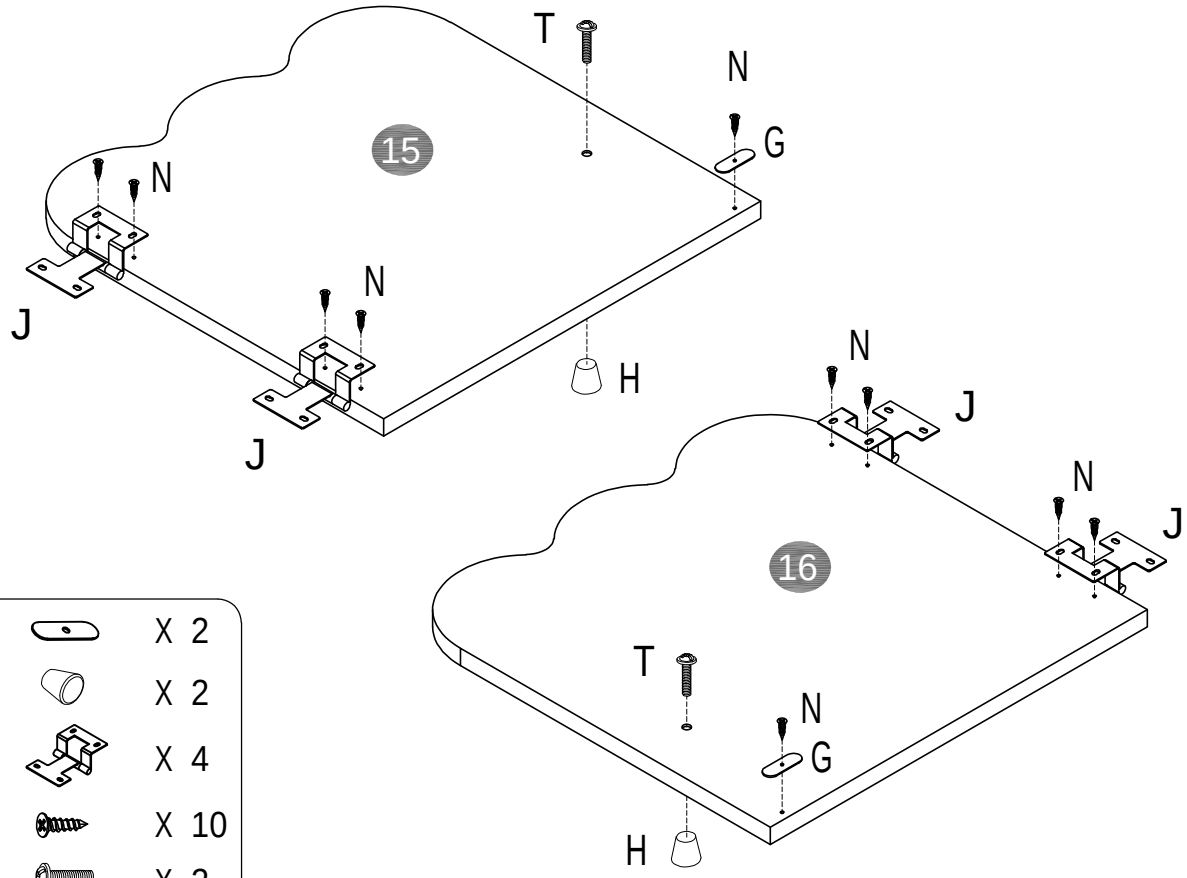

G		X 2
H		X 2
J		X 4
N		X 10
T		X 2


STEP20

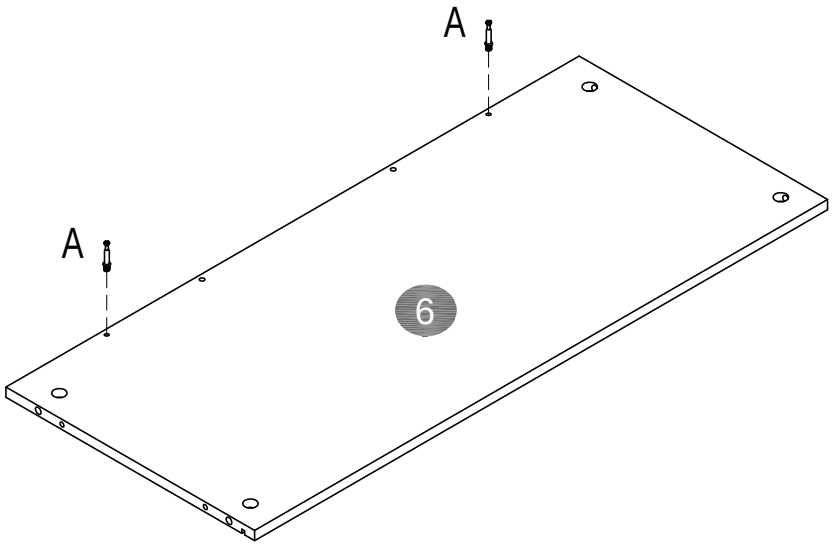

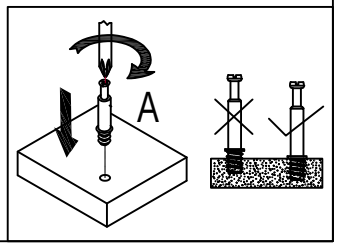


A		X 2


STEP21

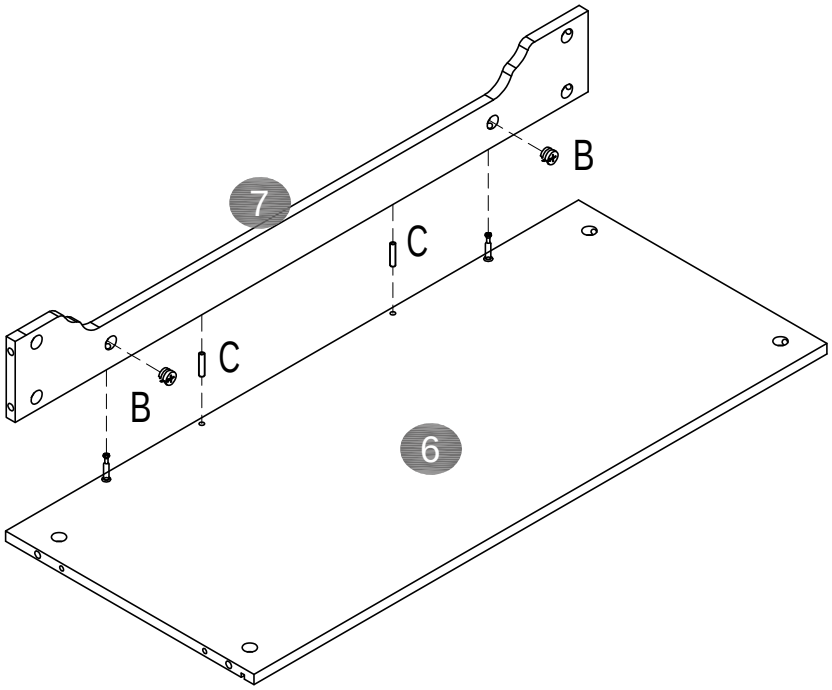



B		X 2
C		X 2

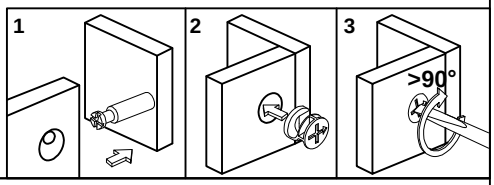


STEP22

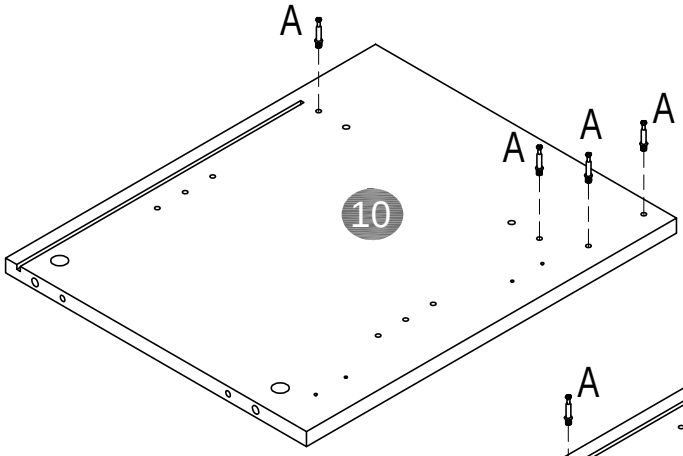


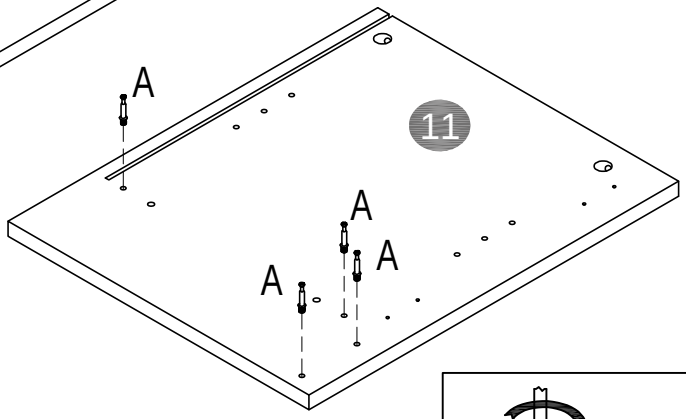

A		X 8

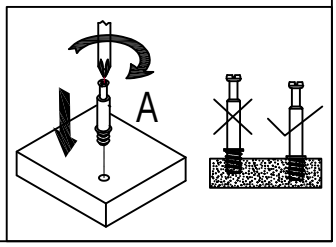


STEP23

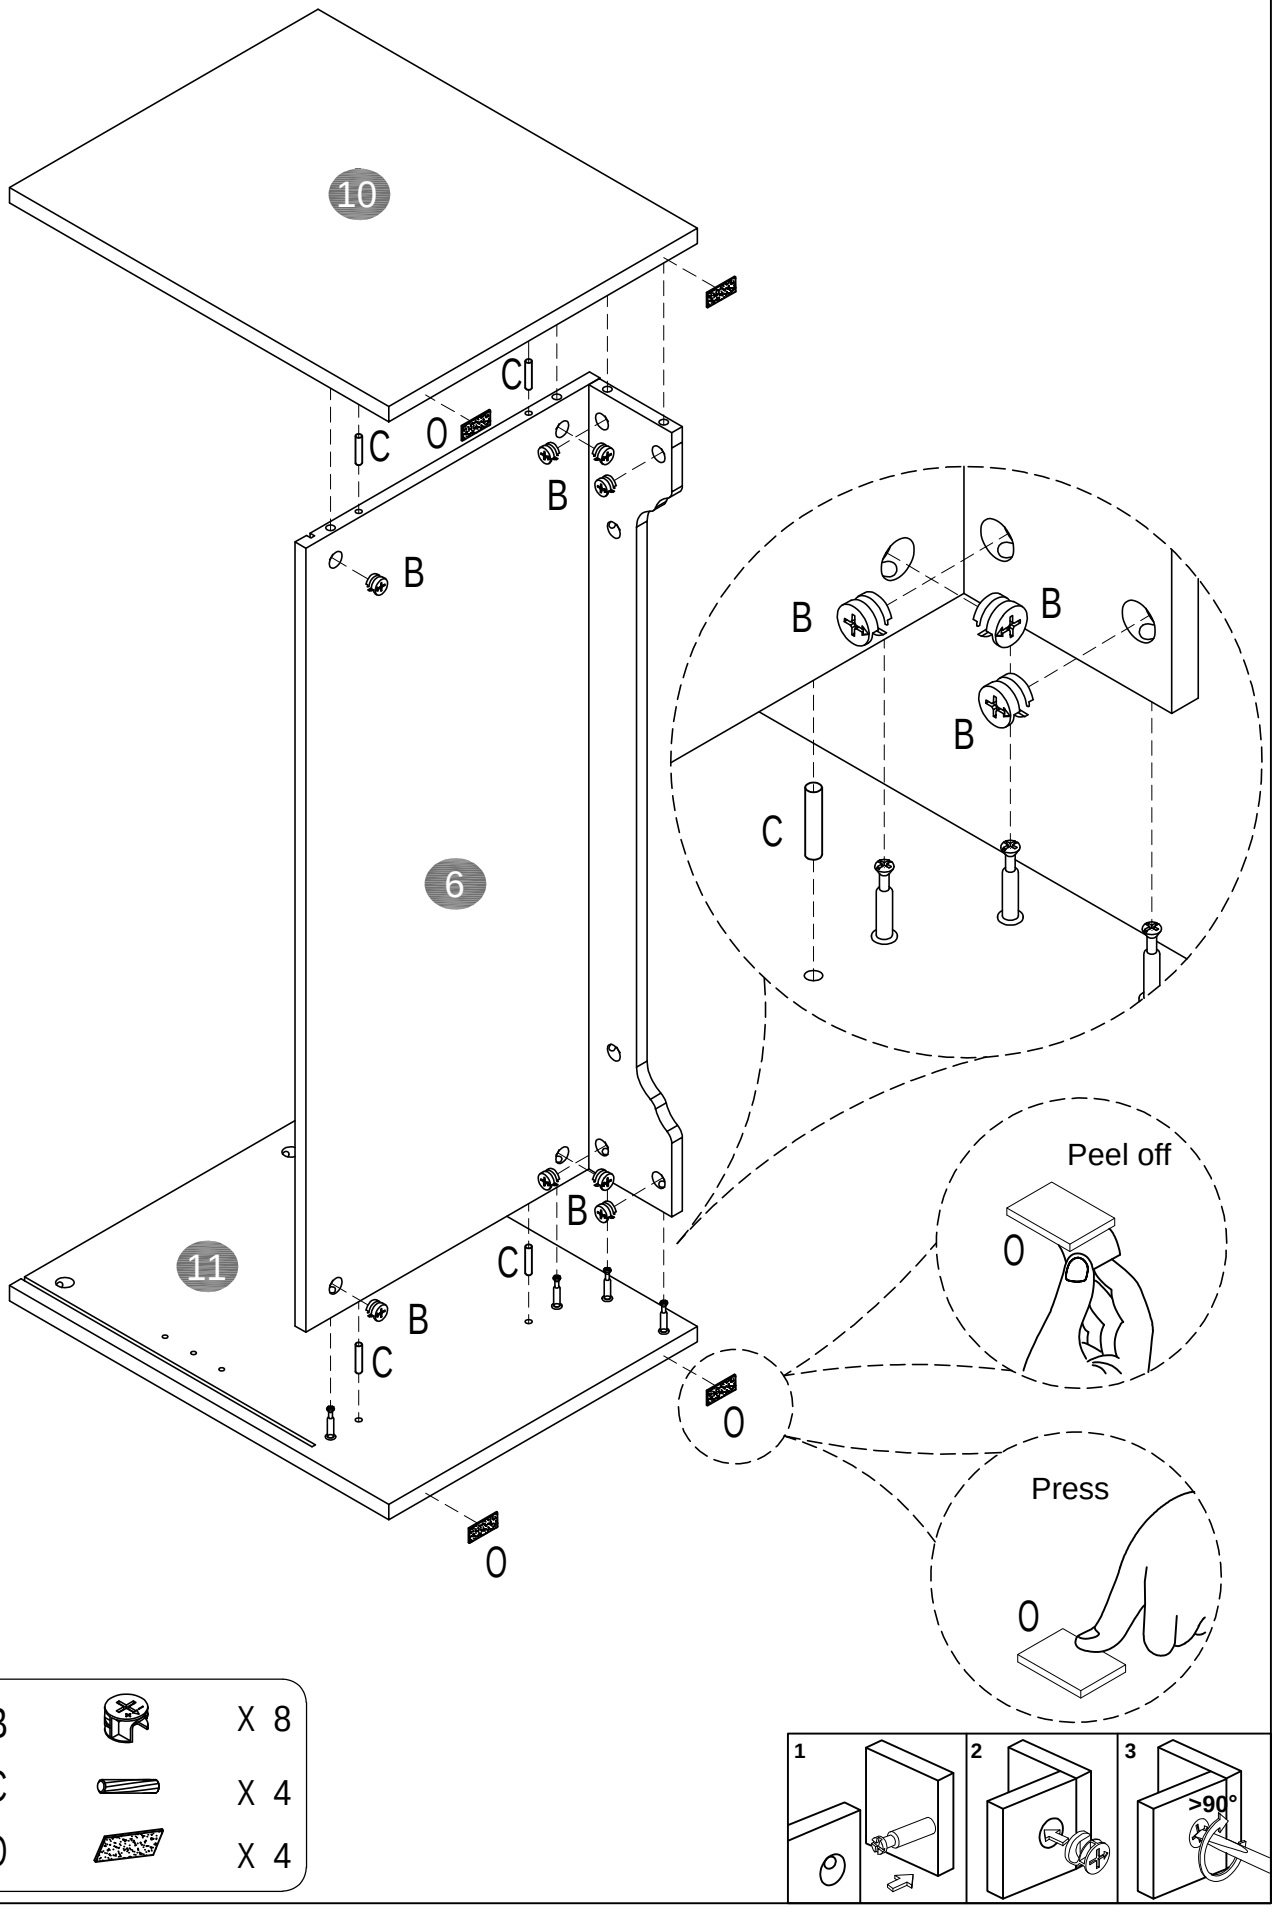


B		X 8
C		X 4
O		X 4


STEP24

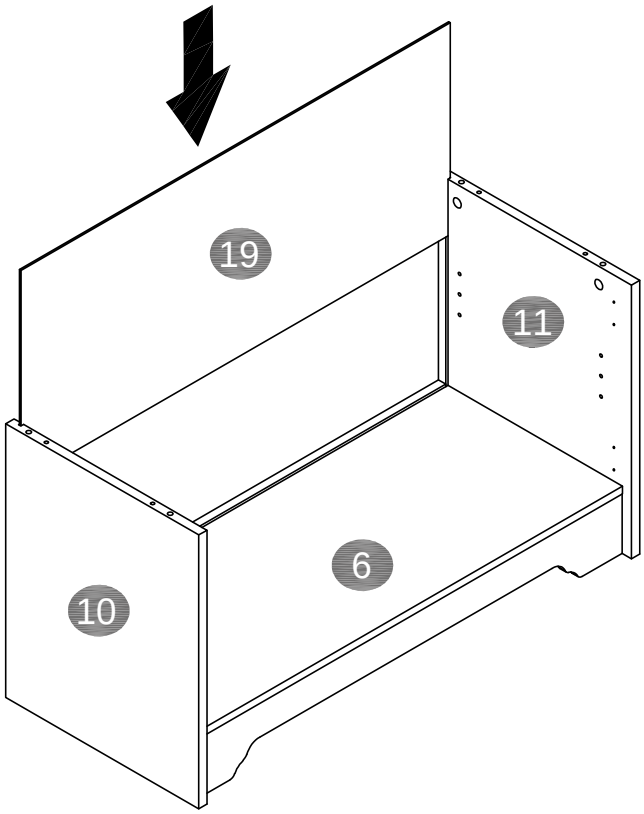


STEP25

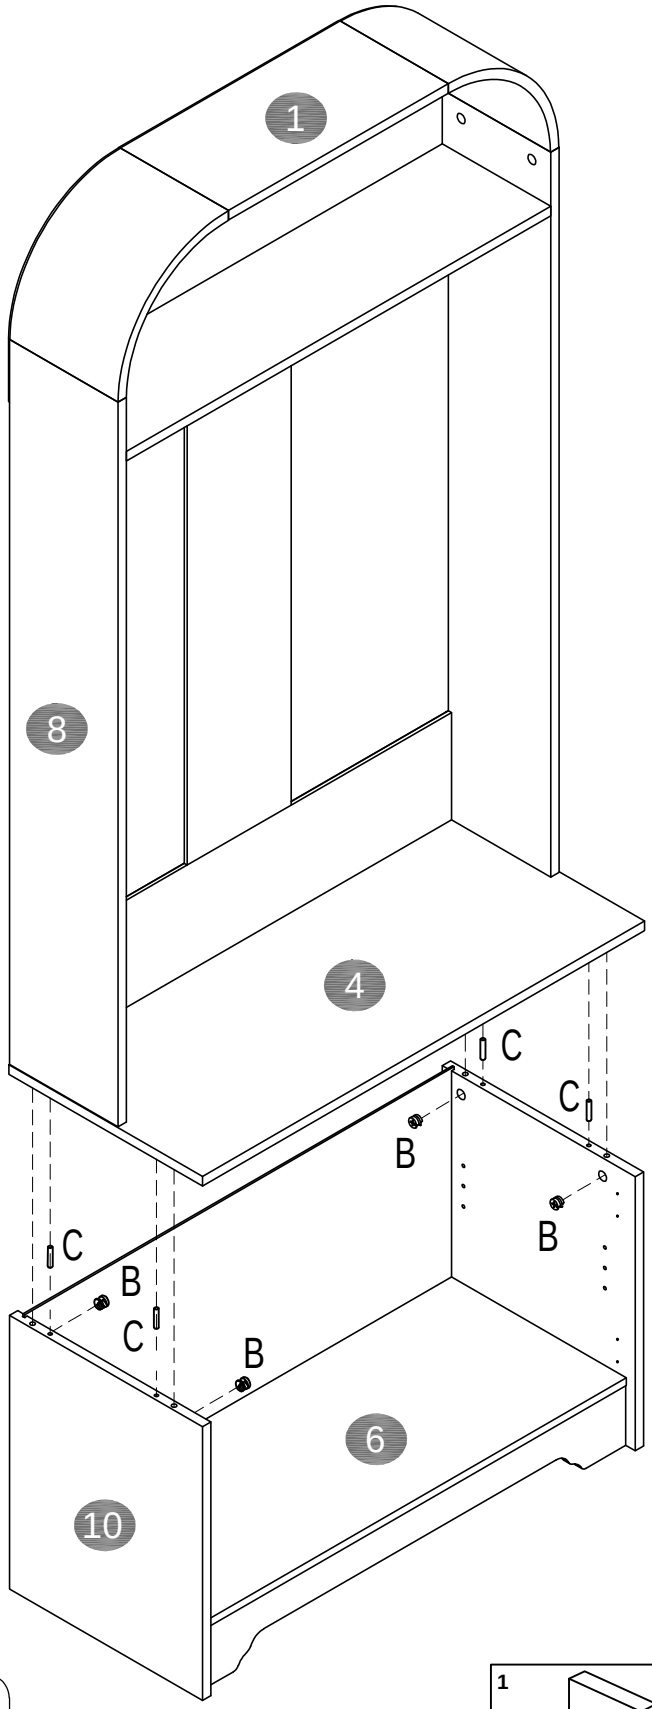

B		X 4
C		X 4

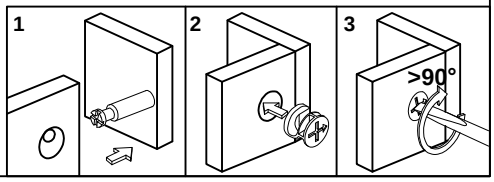

STEP26

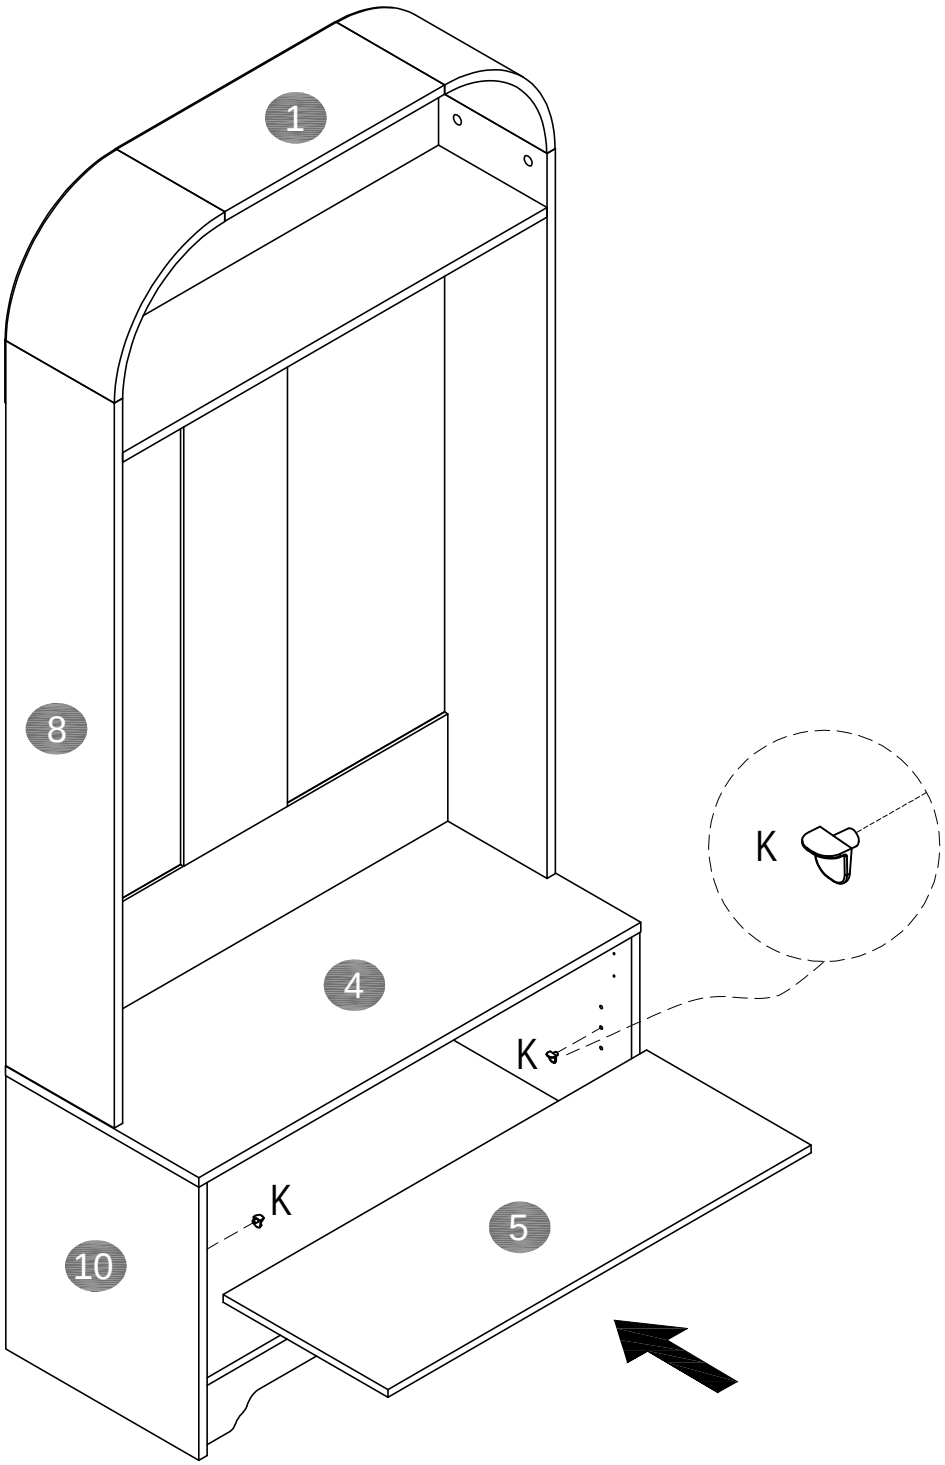

K X 4

STEP27


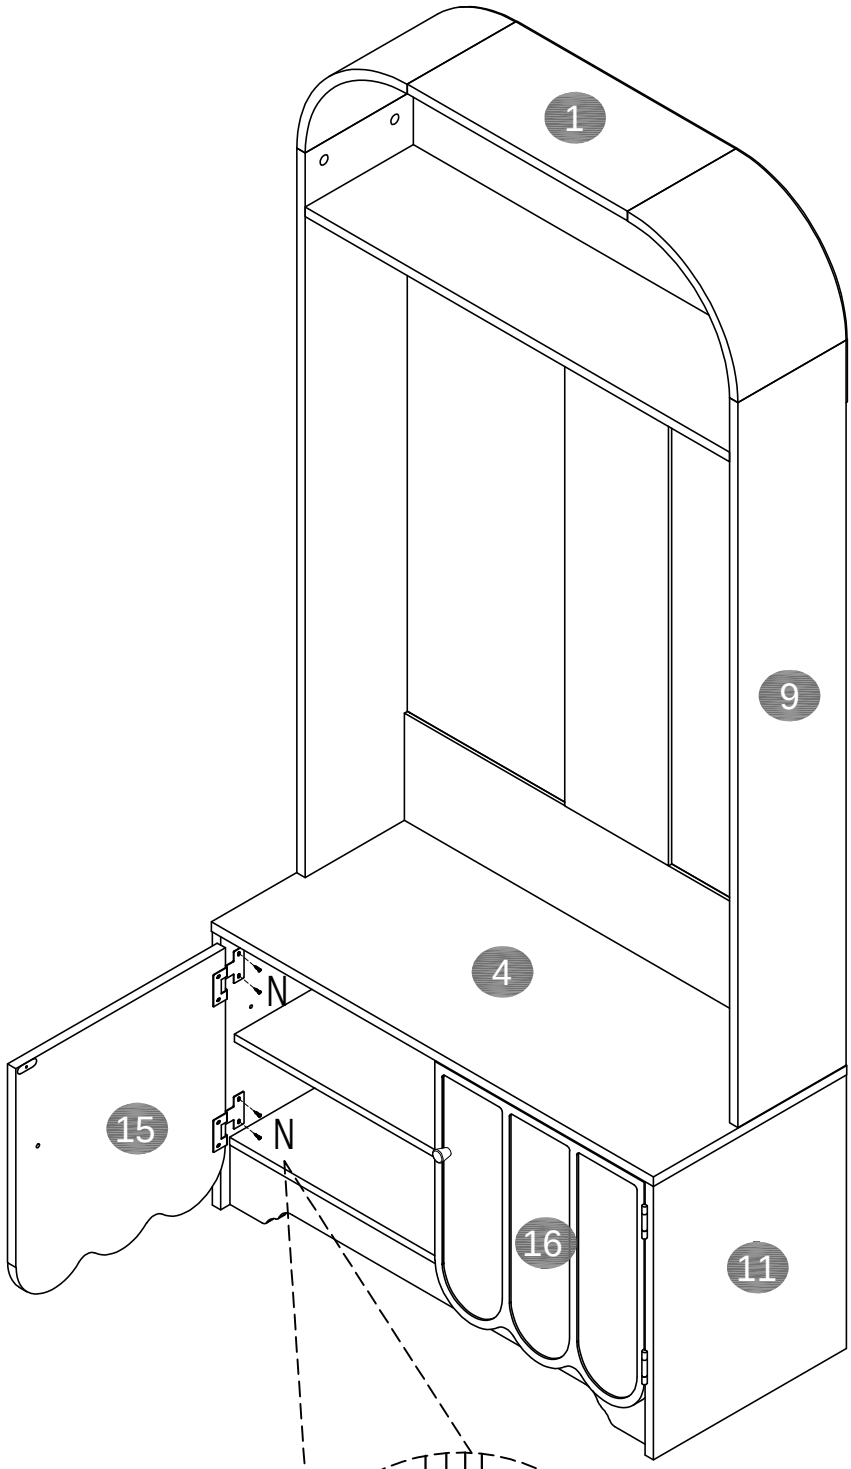


Diagram of door gap adjustment

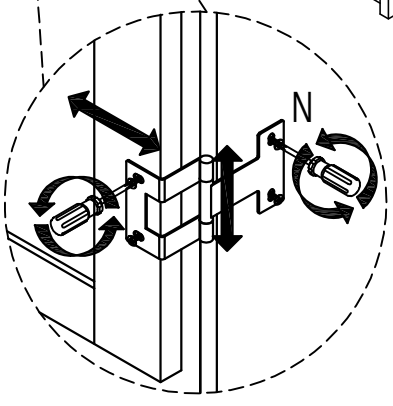


Adjustment of left and right door gaps

Adjustment of upper and lower door seams

N X 8

STEP28

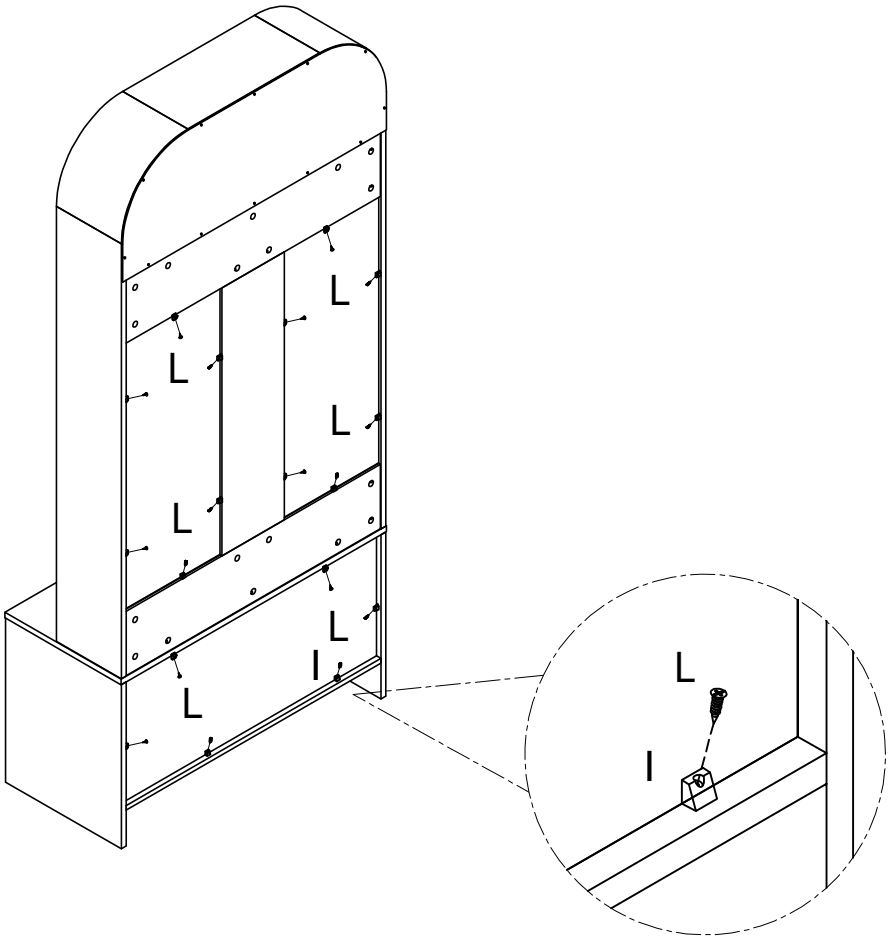


I		X 18
L		X 18


STEP29

Method 1：For solid or concrete wall. Q


① 1.Choose your desired location on the wall. Have your friend hold the product in place and use a pencil to mark where the anchor will go.

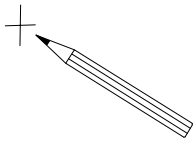


② 2.Pre-drill holes on the wall with a drill bit that is larger than the diameter of the wall anchors.

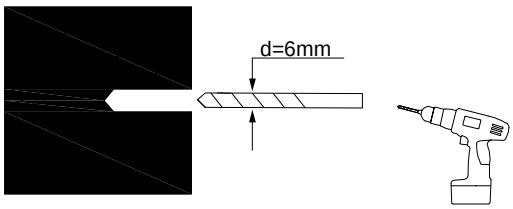

③ 3.Gently insert the wall anchor into the pre-drilled hole.

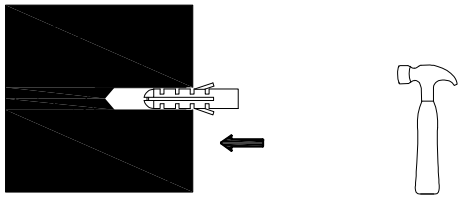


④ 4.Insert the screws into the wall anchor with a screwdriver to complete the installation.

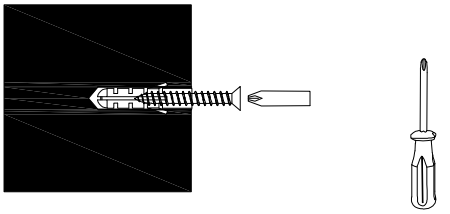

STEP30

WALL

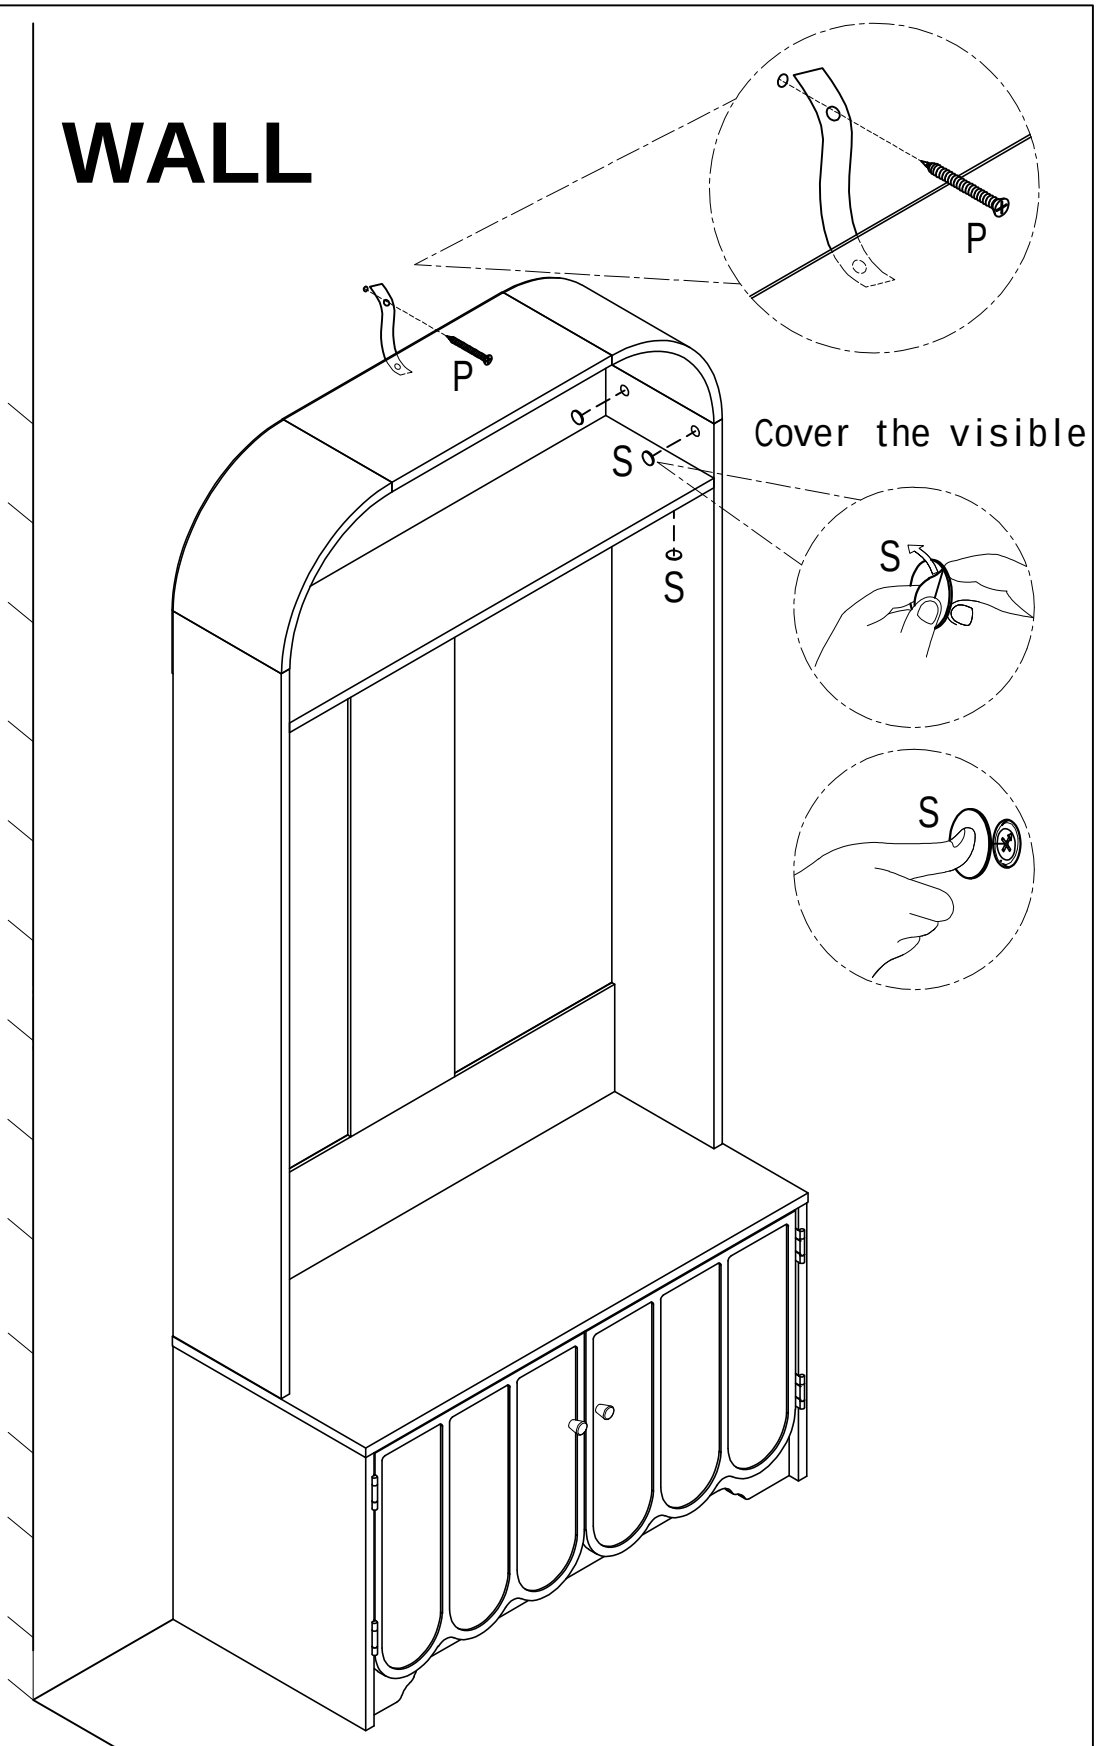

P		X 1
S		X 16

FINISH