
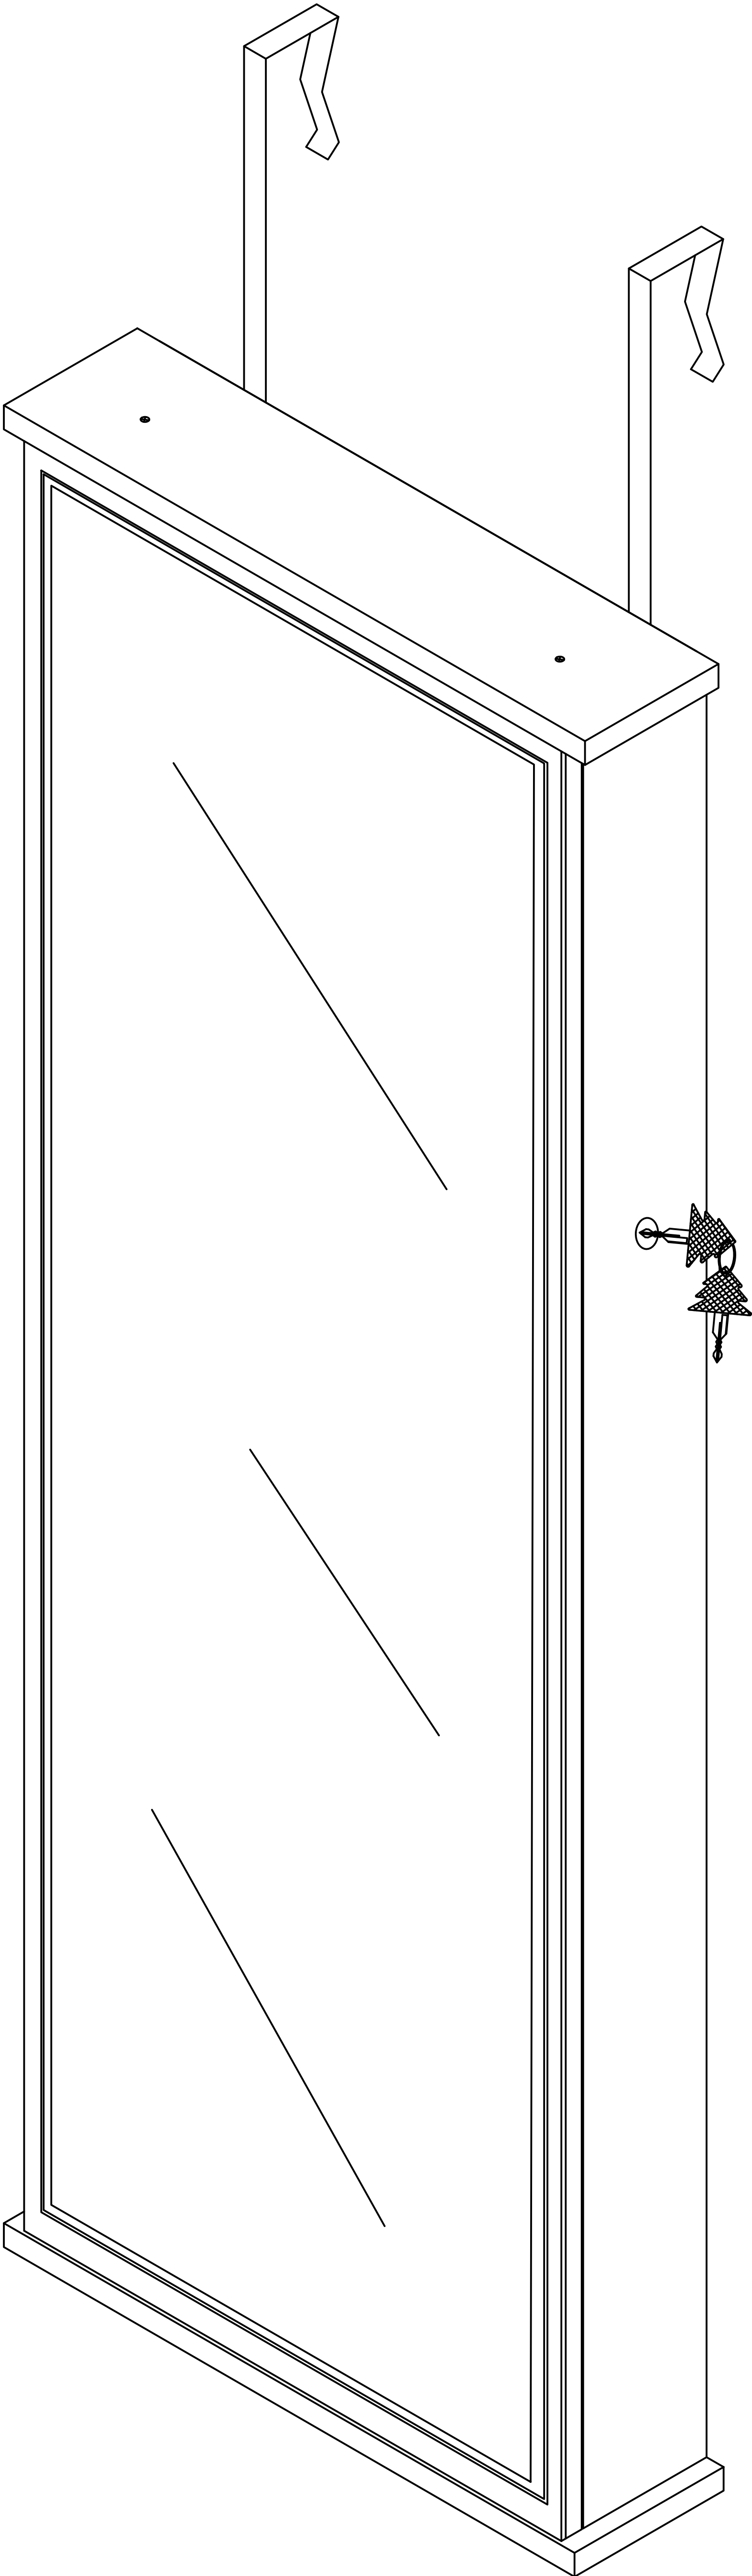
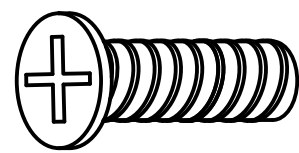
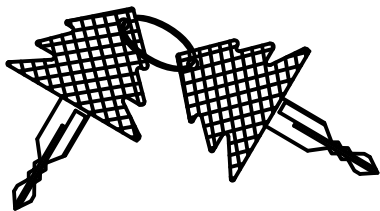
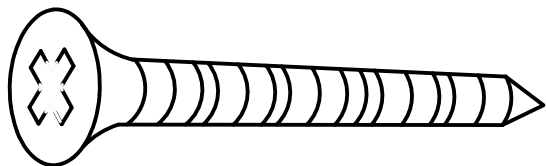
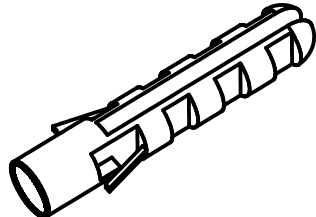
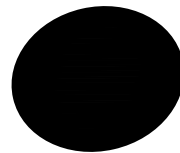
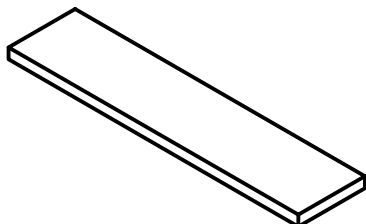
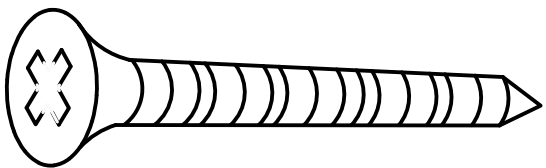
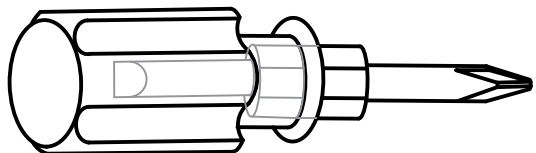




MIRROR JEWELLERY CABINET


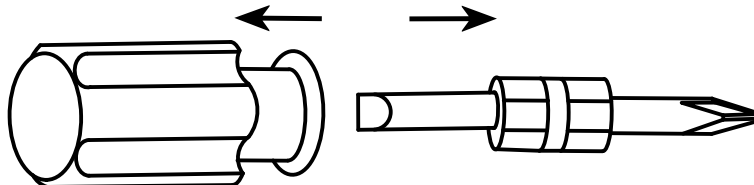



A		screw(6*16mm)	4 Pcs
B		The key	1 Pcs
C		Hook	2 Pcs
D		Self tapping wire(4x45mm)	2 Pcs
E		Colloidal granules	2 Pcs
F		Sponge gasket	4 Pcs
G		Adhesive Velcro	1 Pcs
H		board	2 Pcs
I		Self tapping screw(3.5x20mm)	4 Pcs
		 Double-head screwdriver, use as required	1 Pcs

Battery installation




(Tip: use 3 AA Batteries)

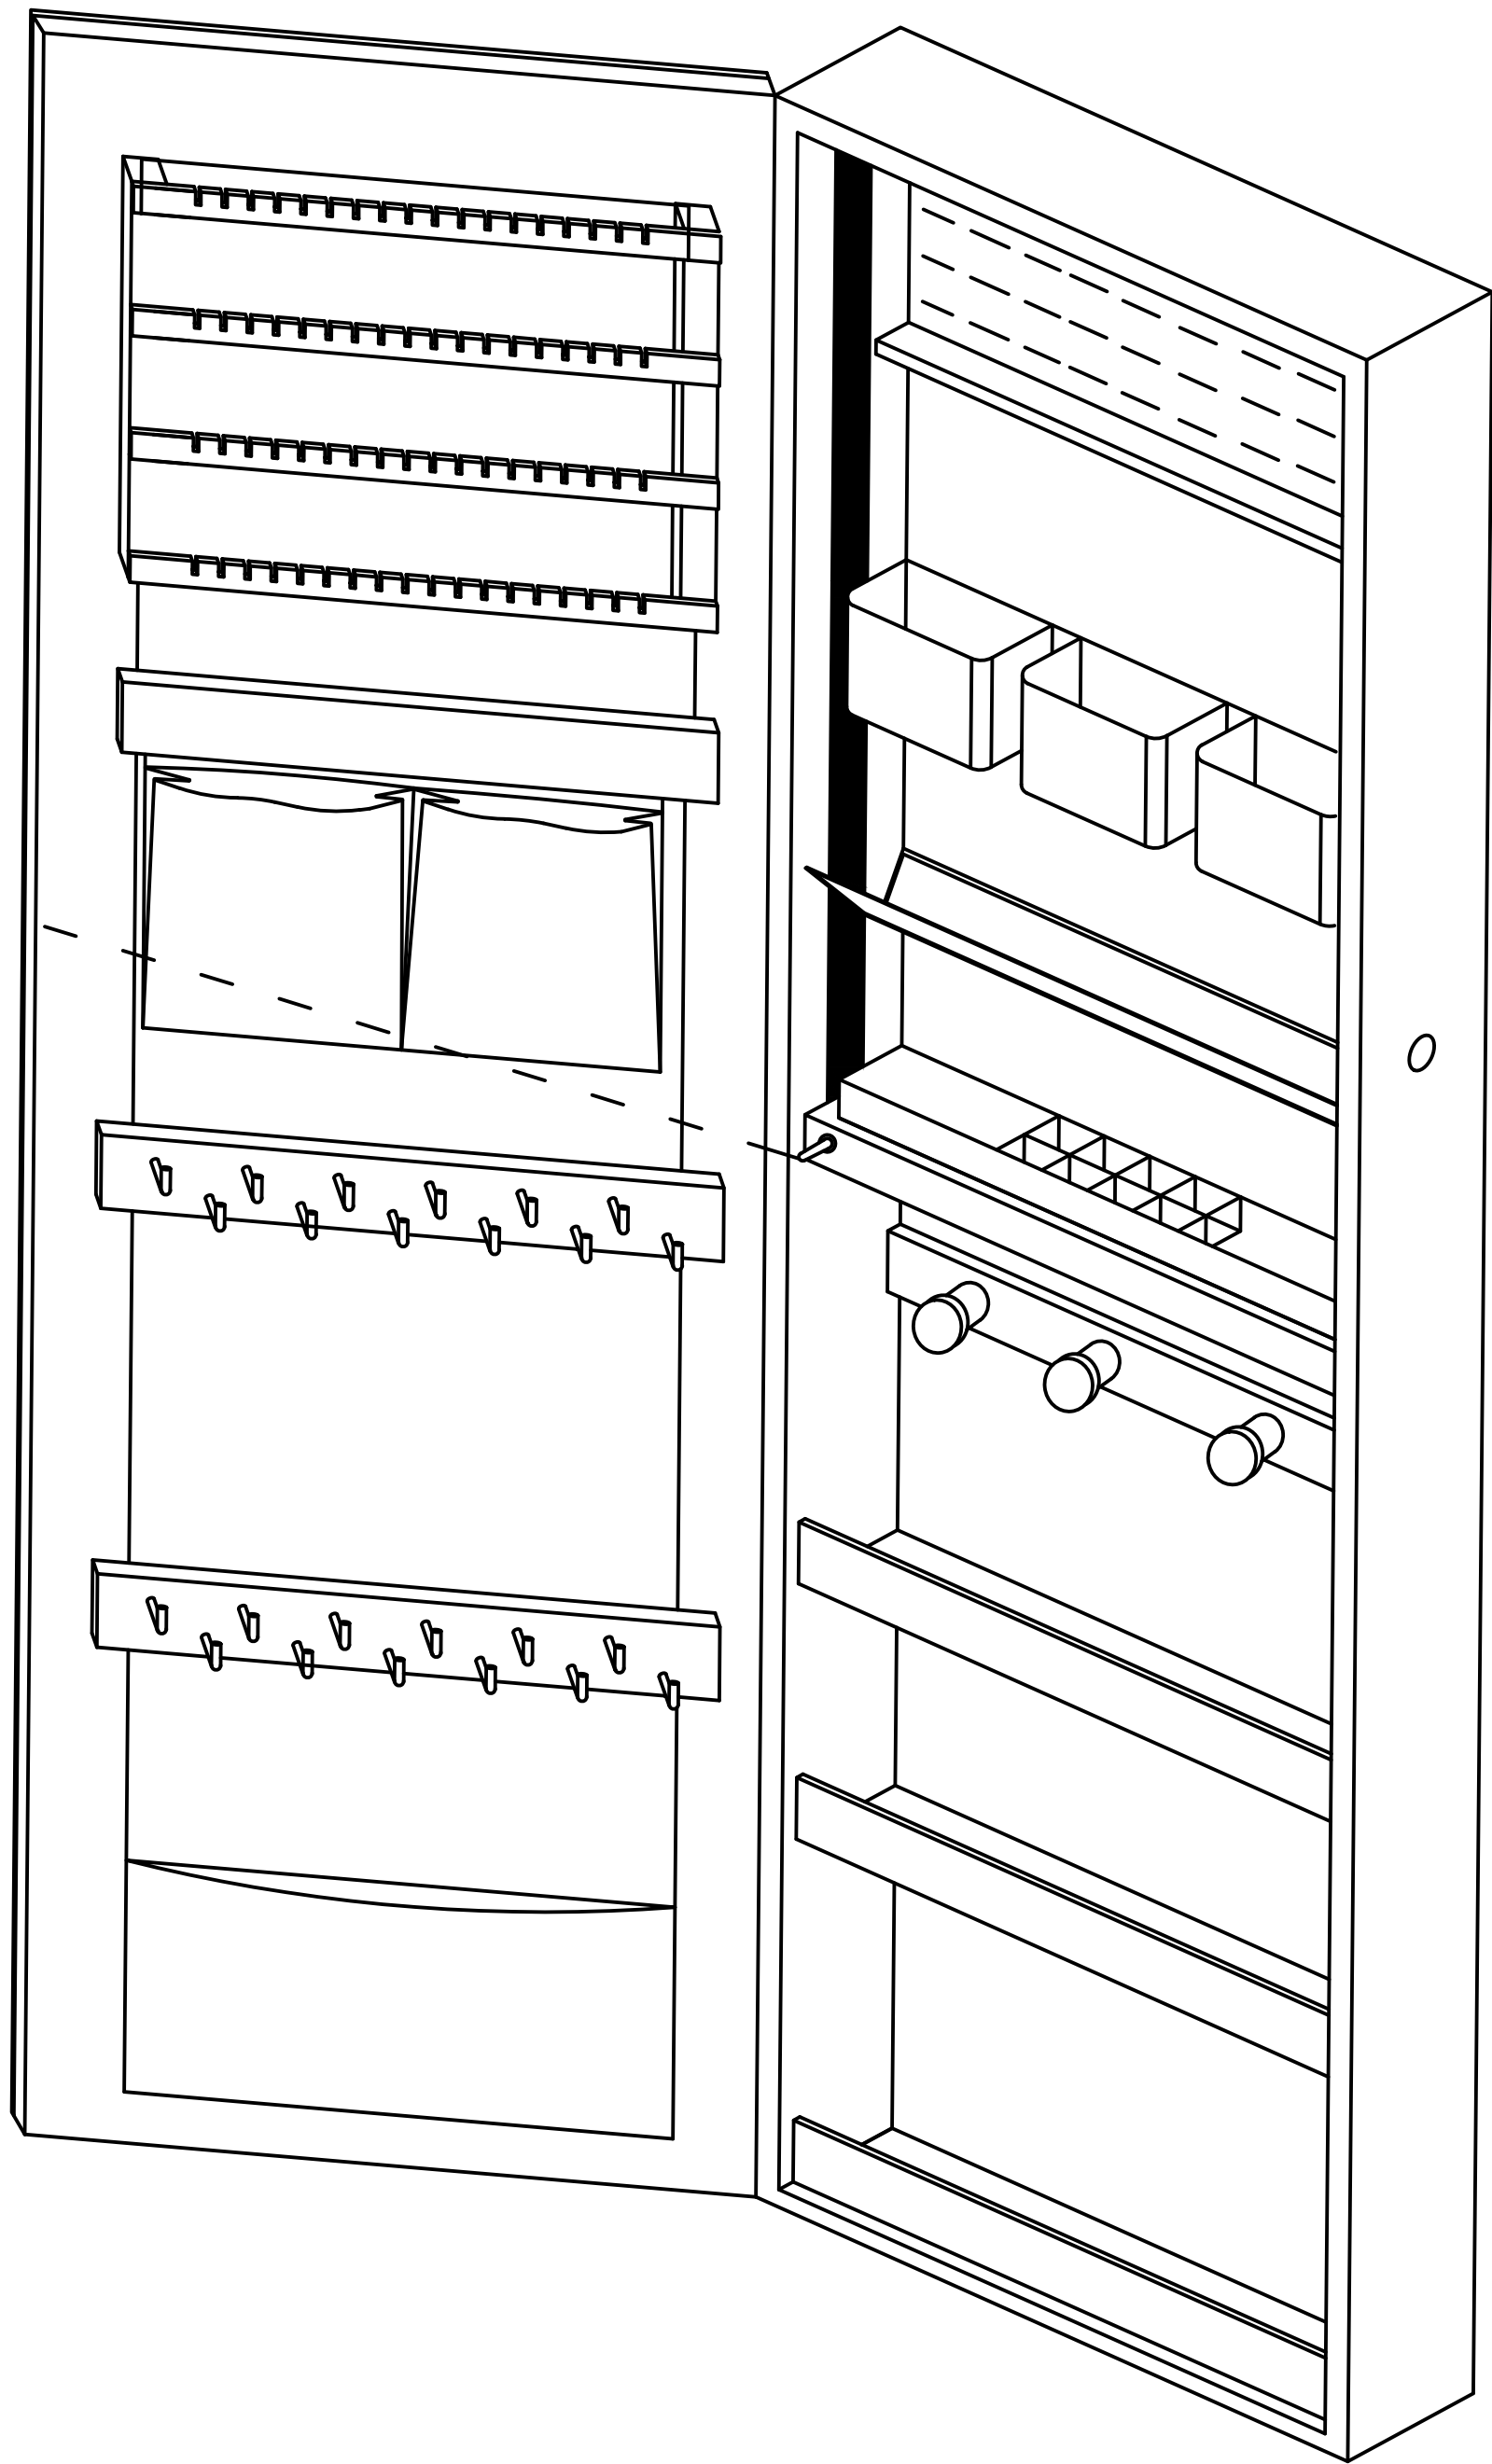
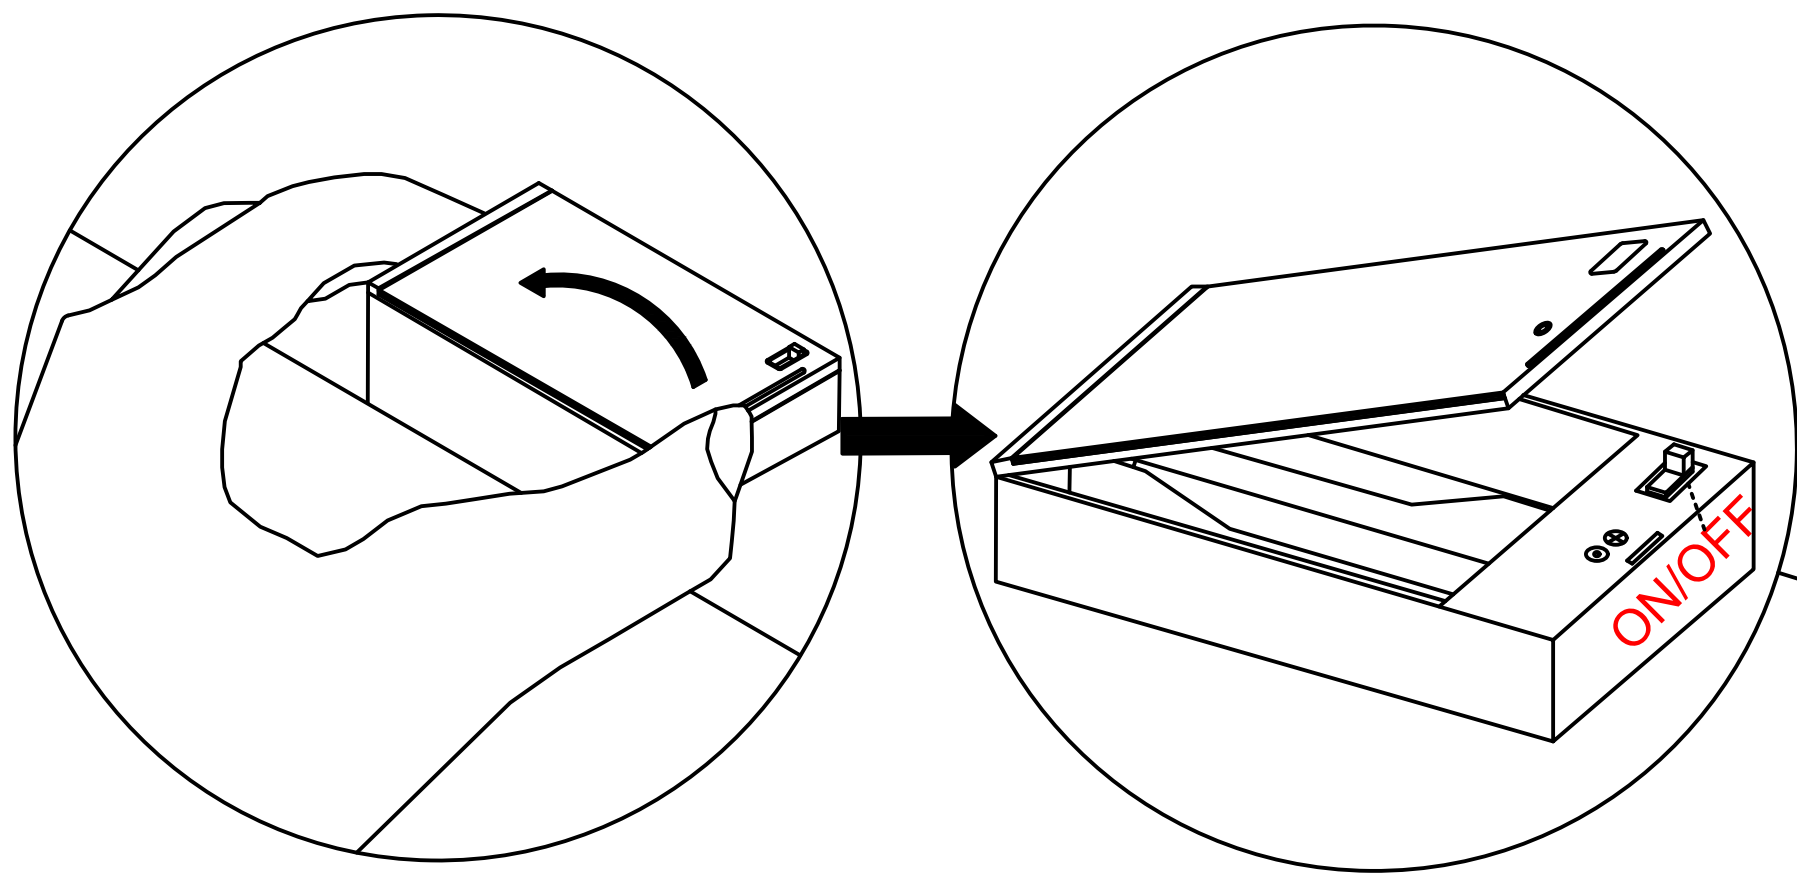


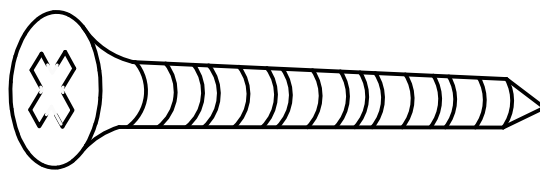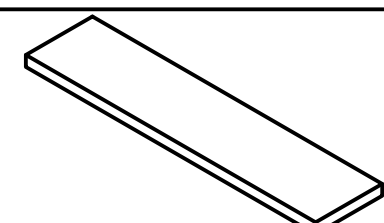I		x 4
H		x 2

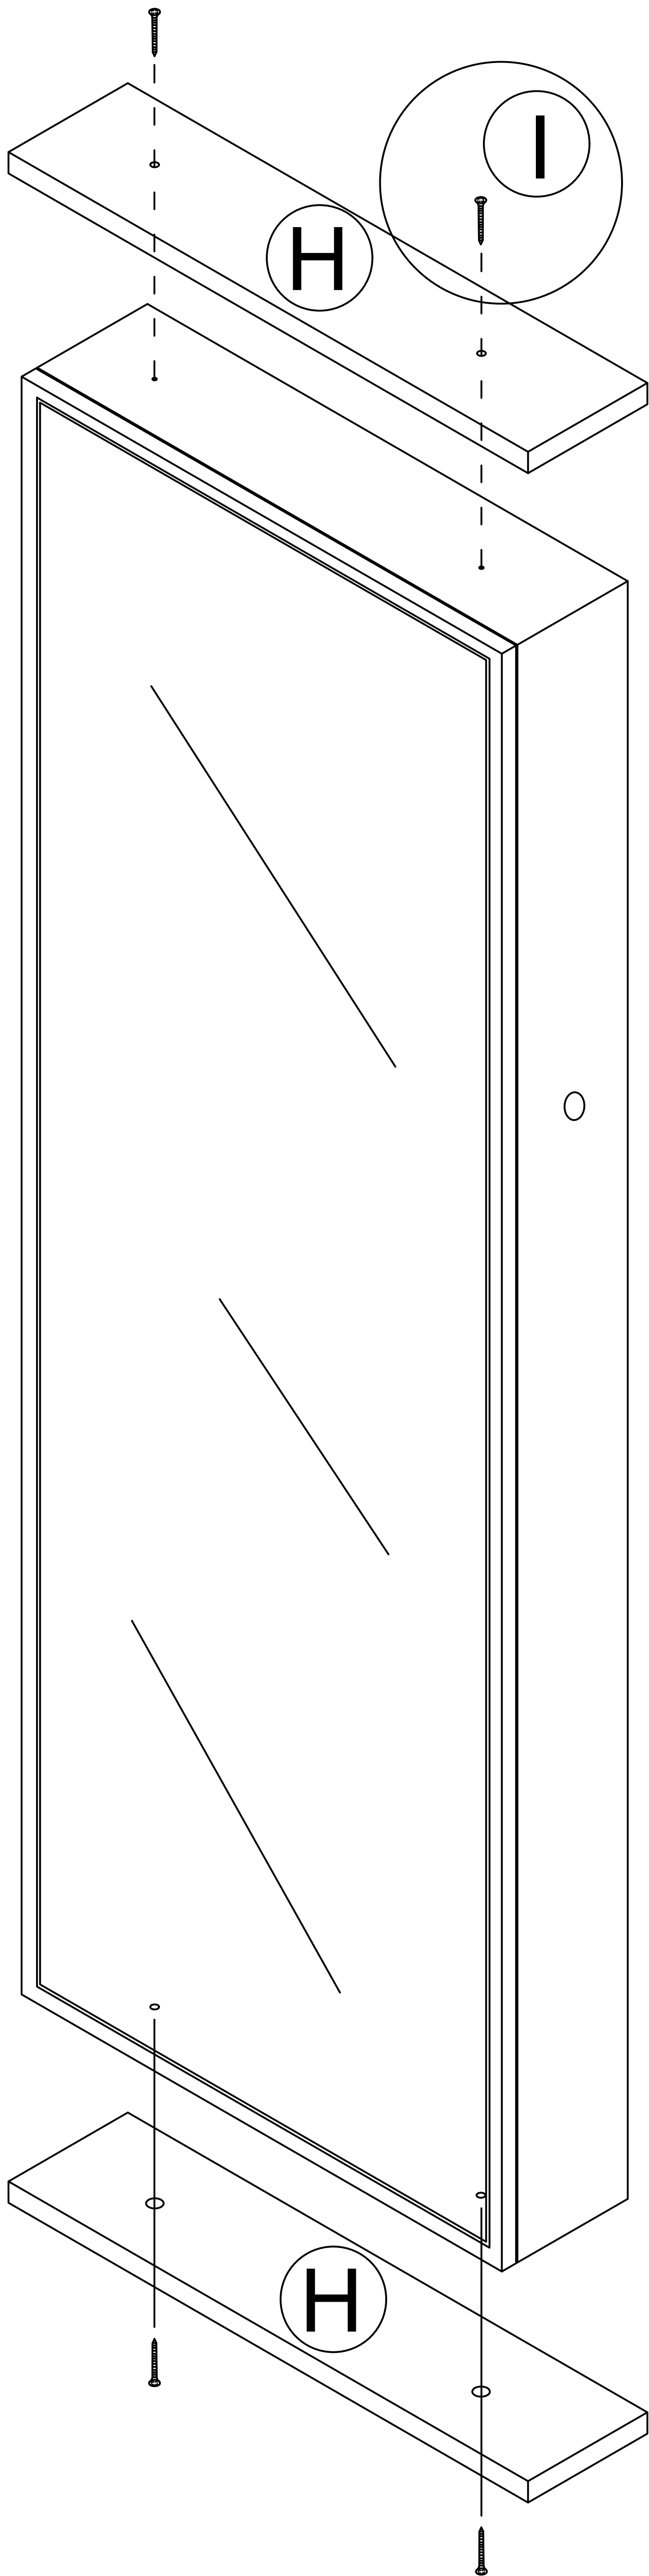



Over The Door

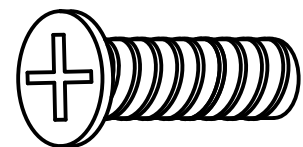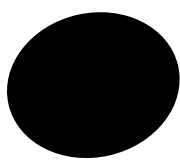A		x 4
C		x 2
F		x 4
G		x 1

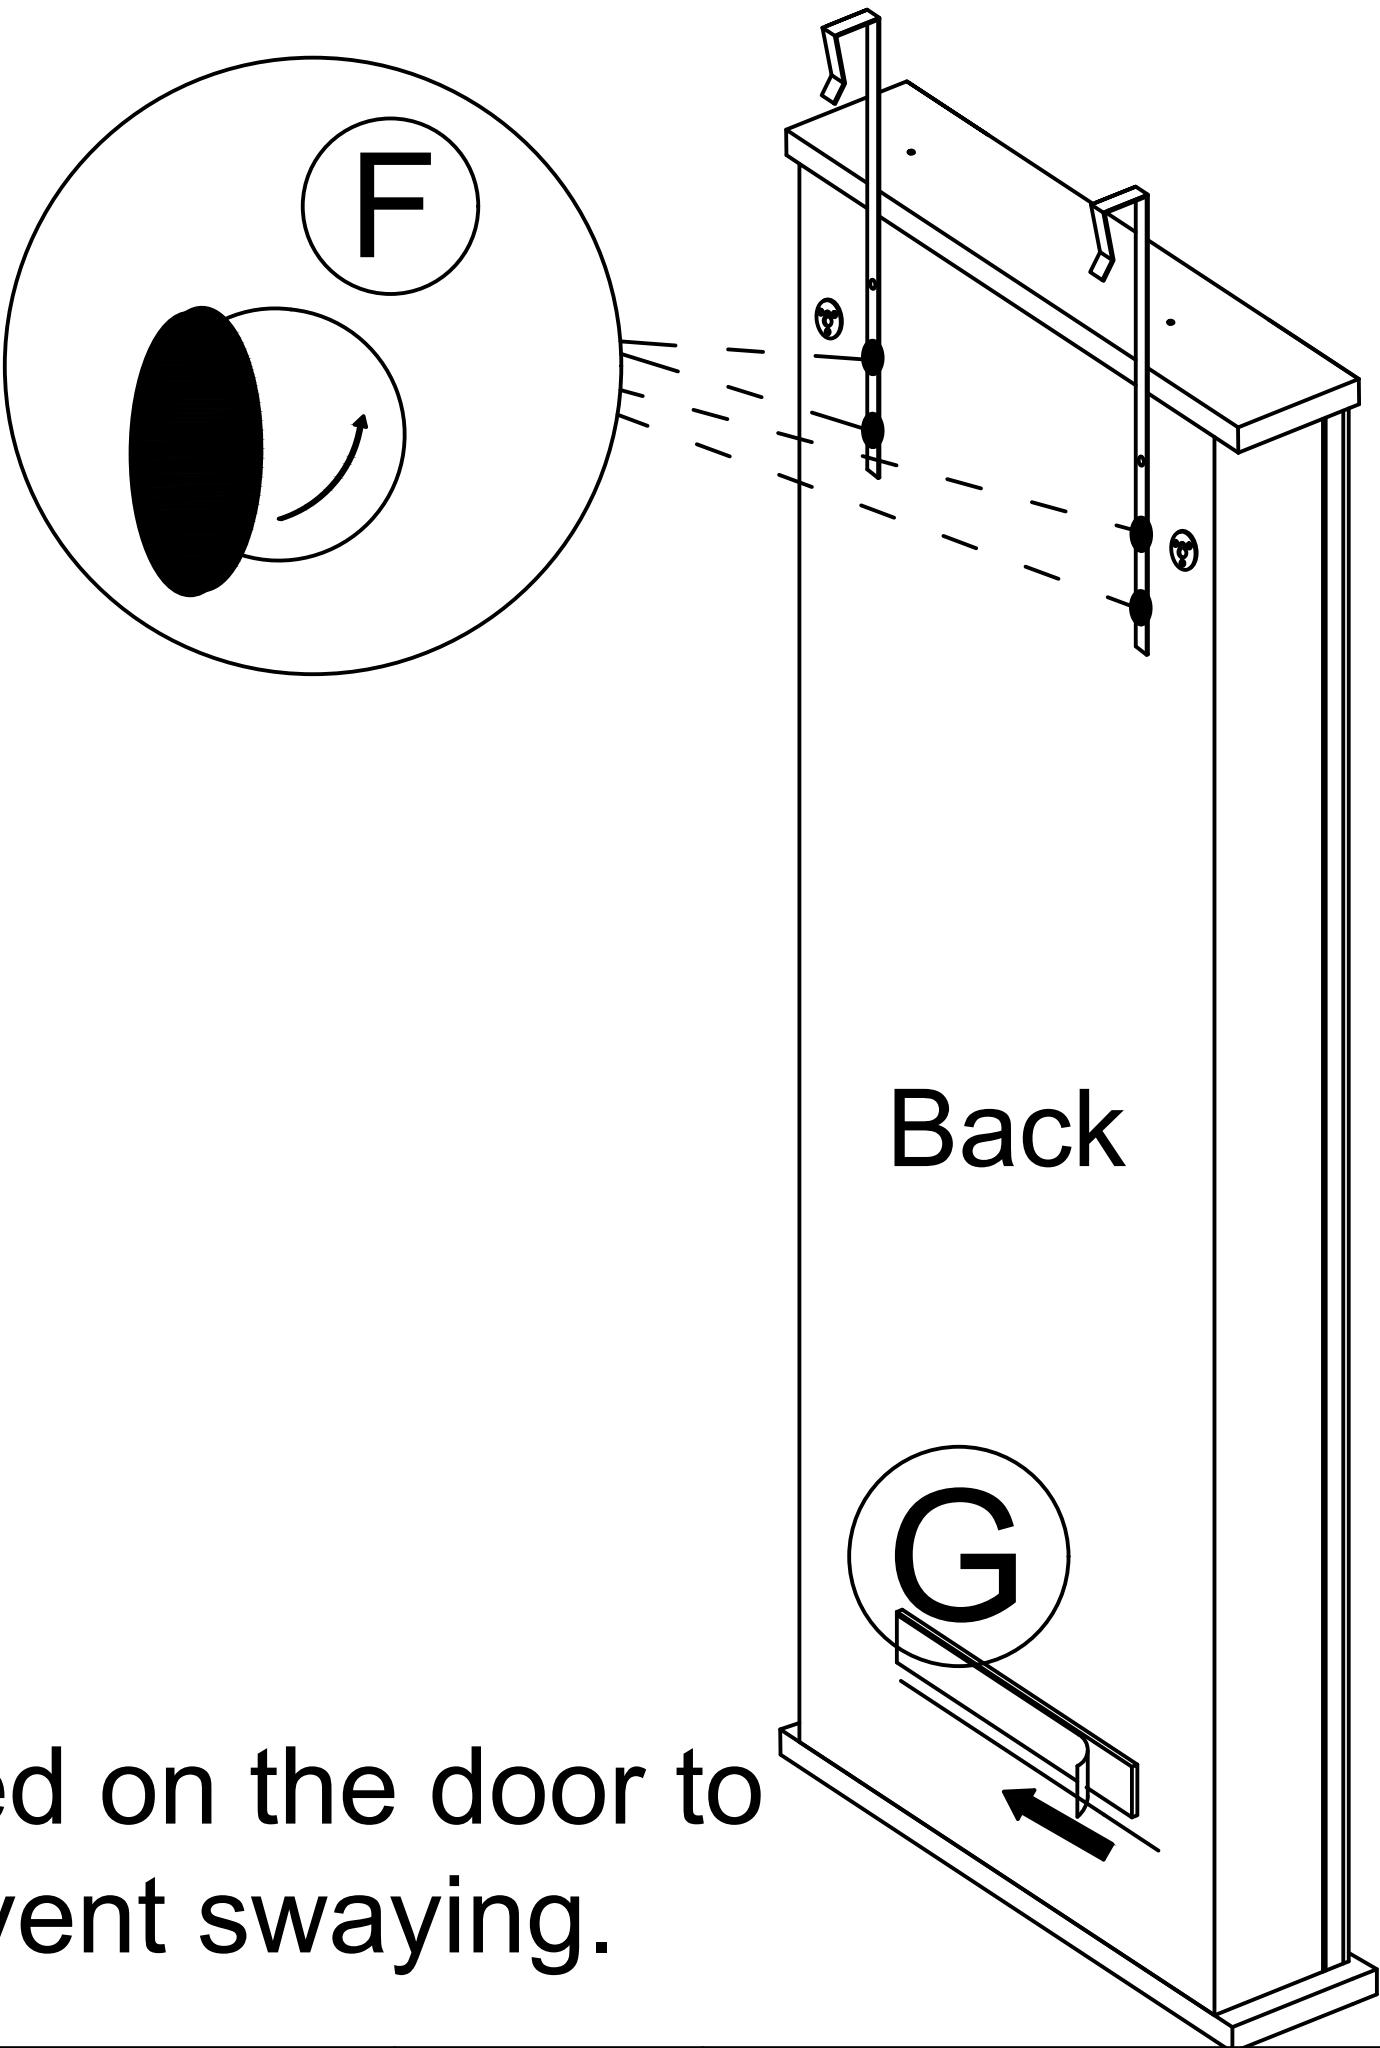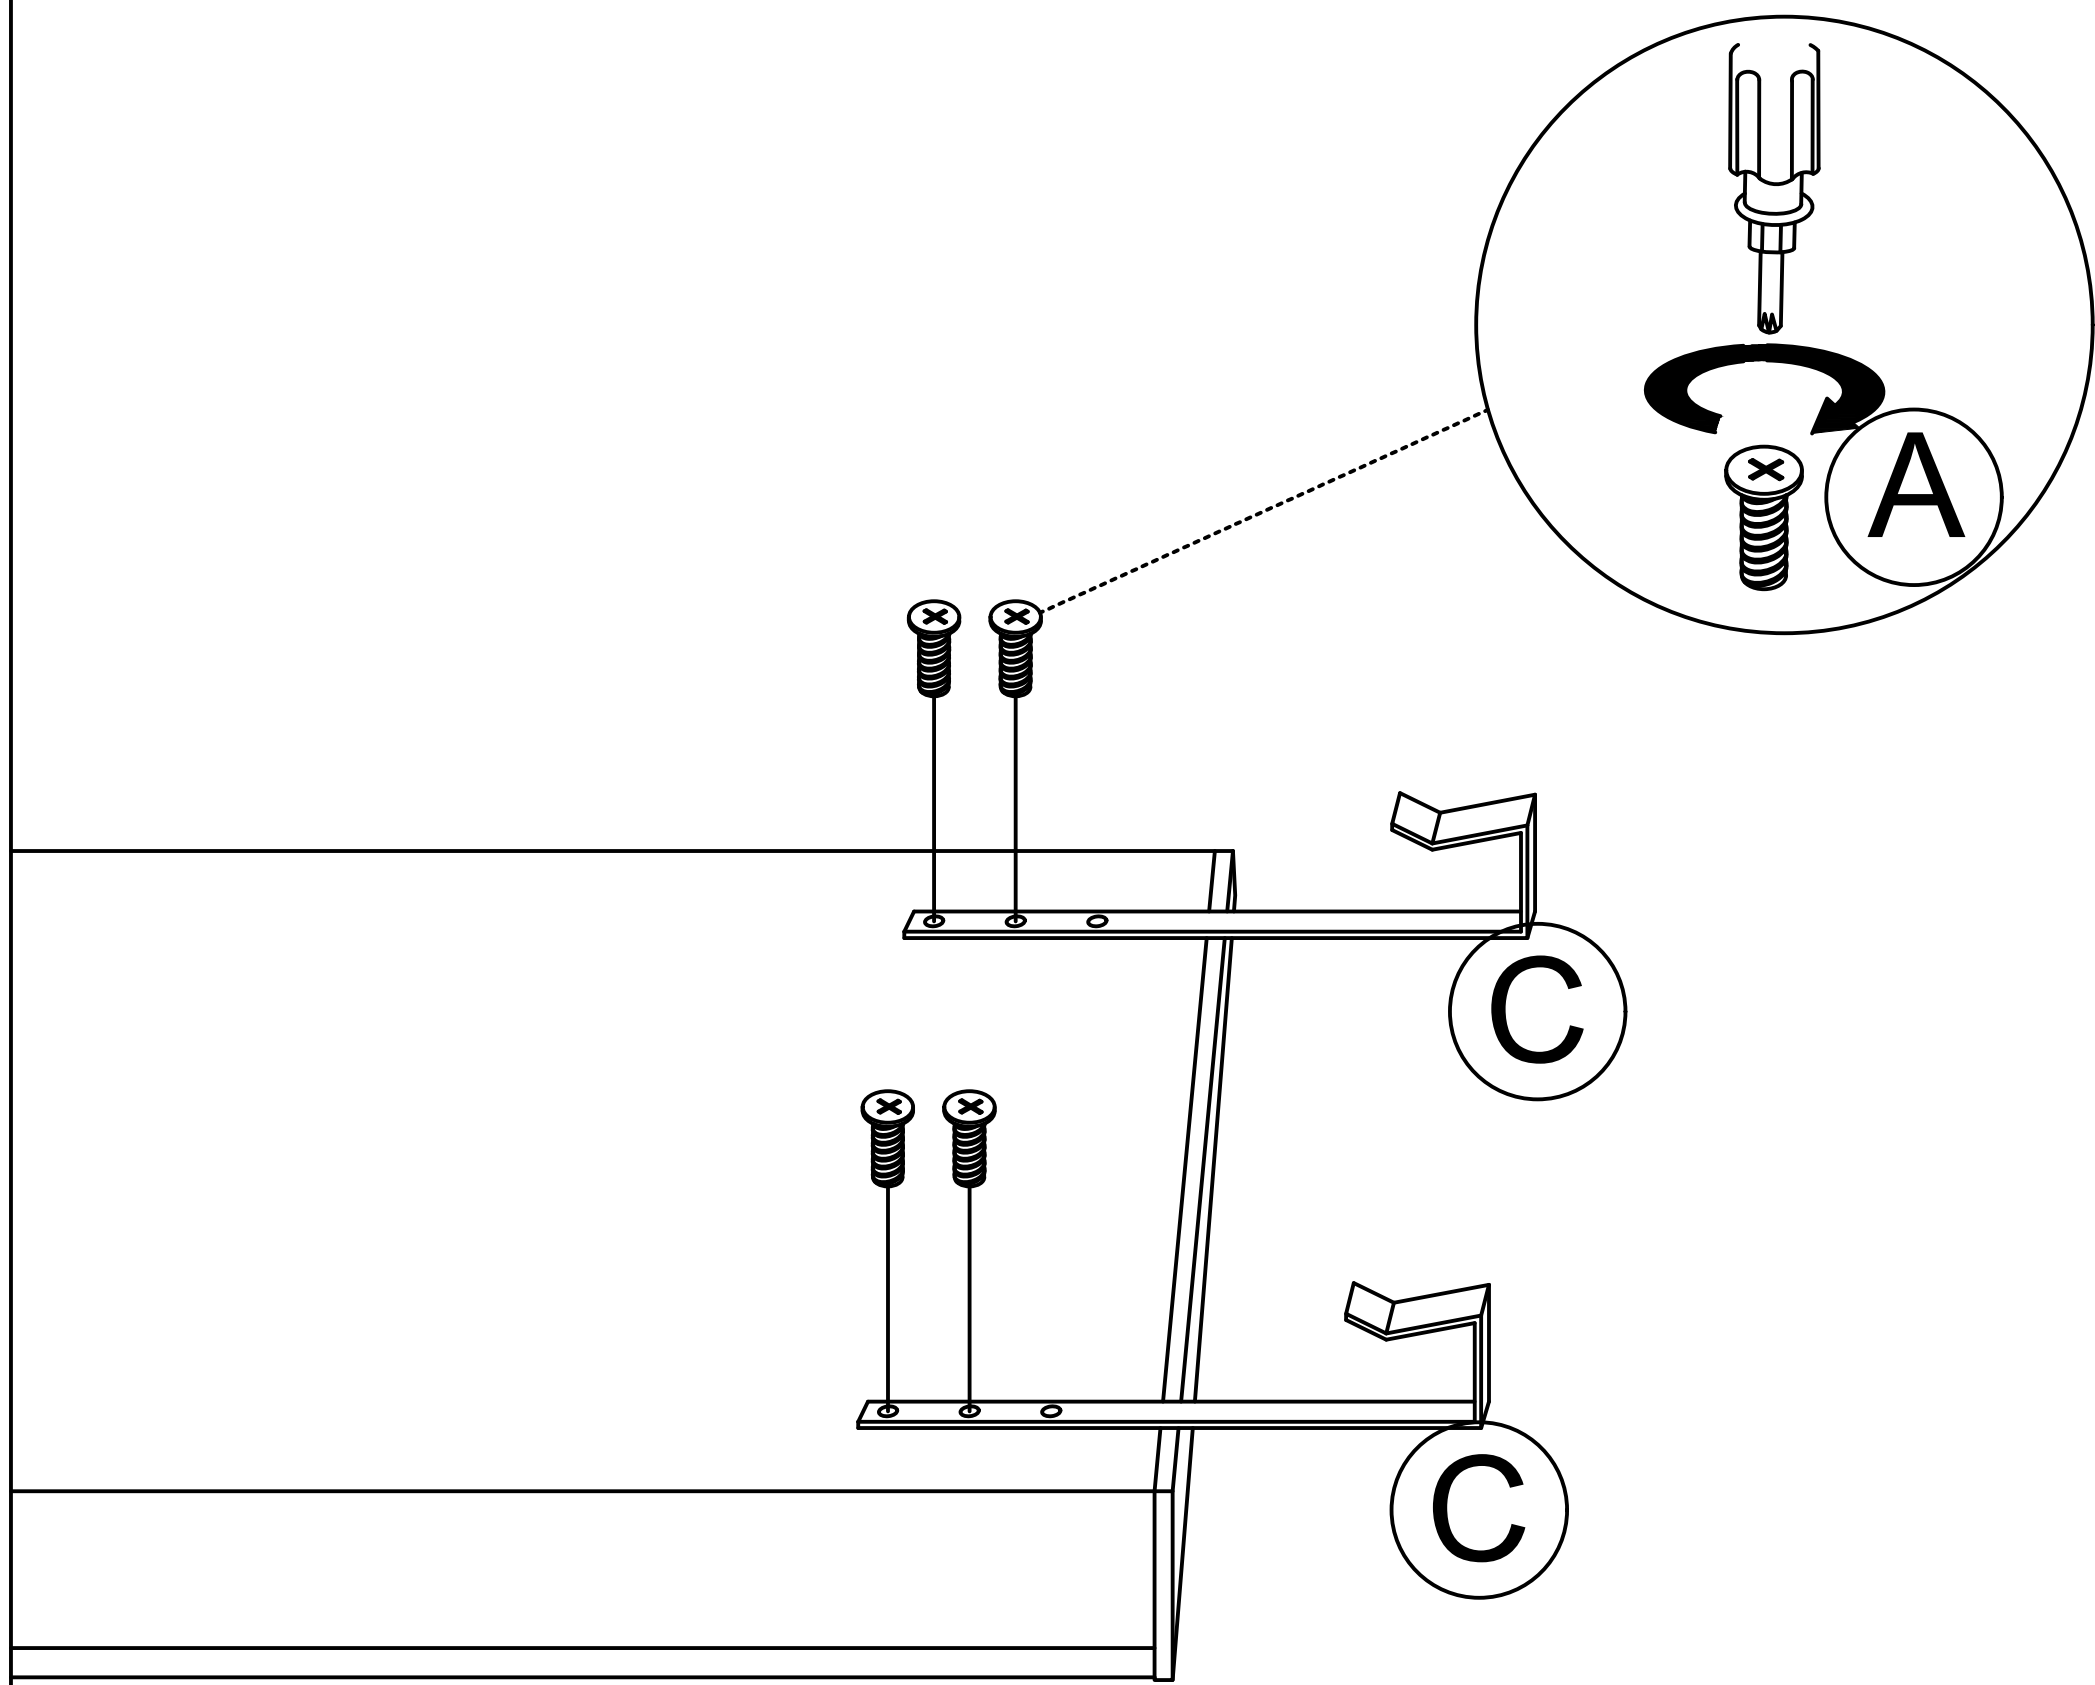


Fixed on the door to prevent swaying.

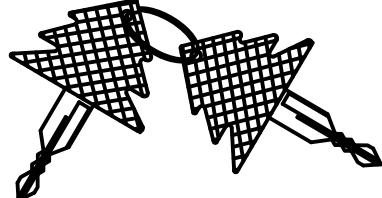B		x 1
---	---	-----


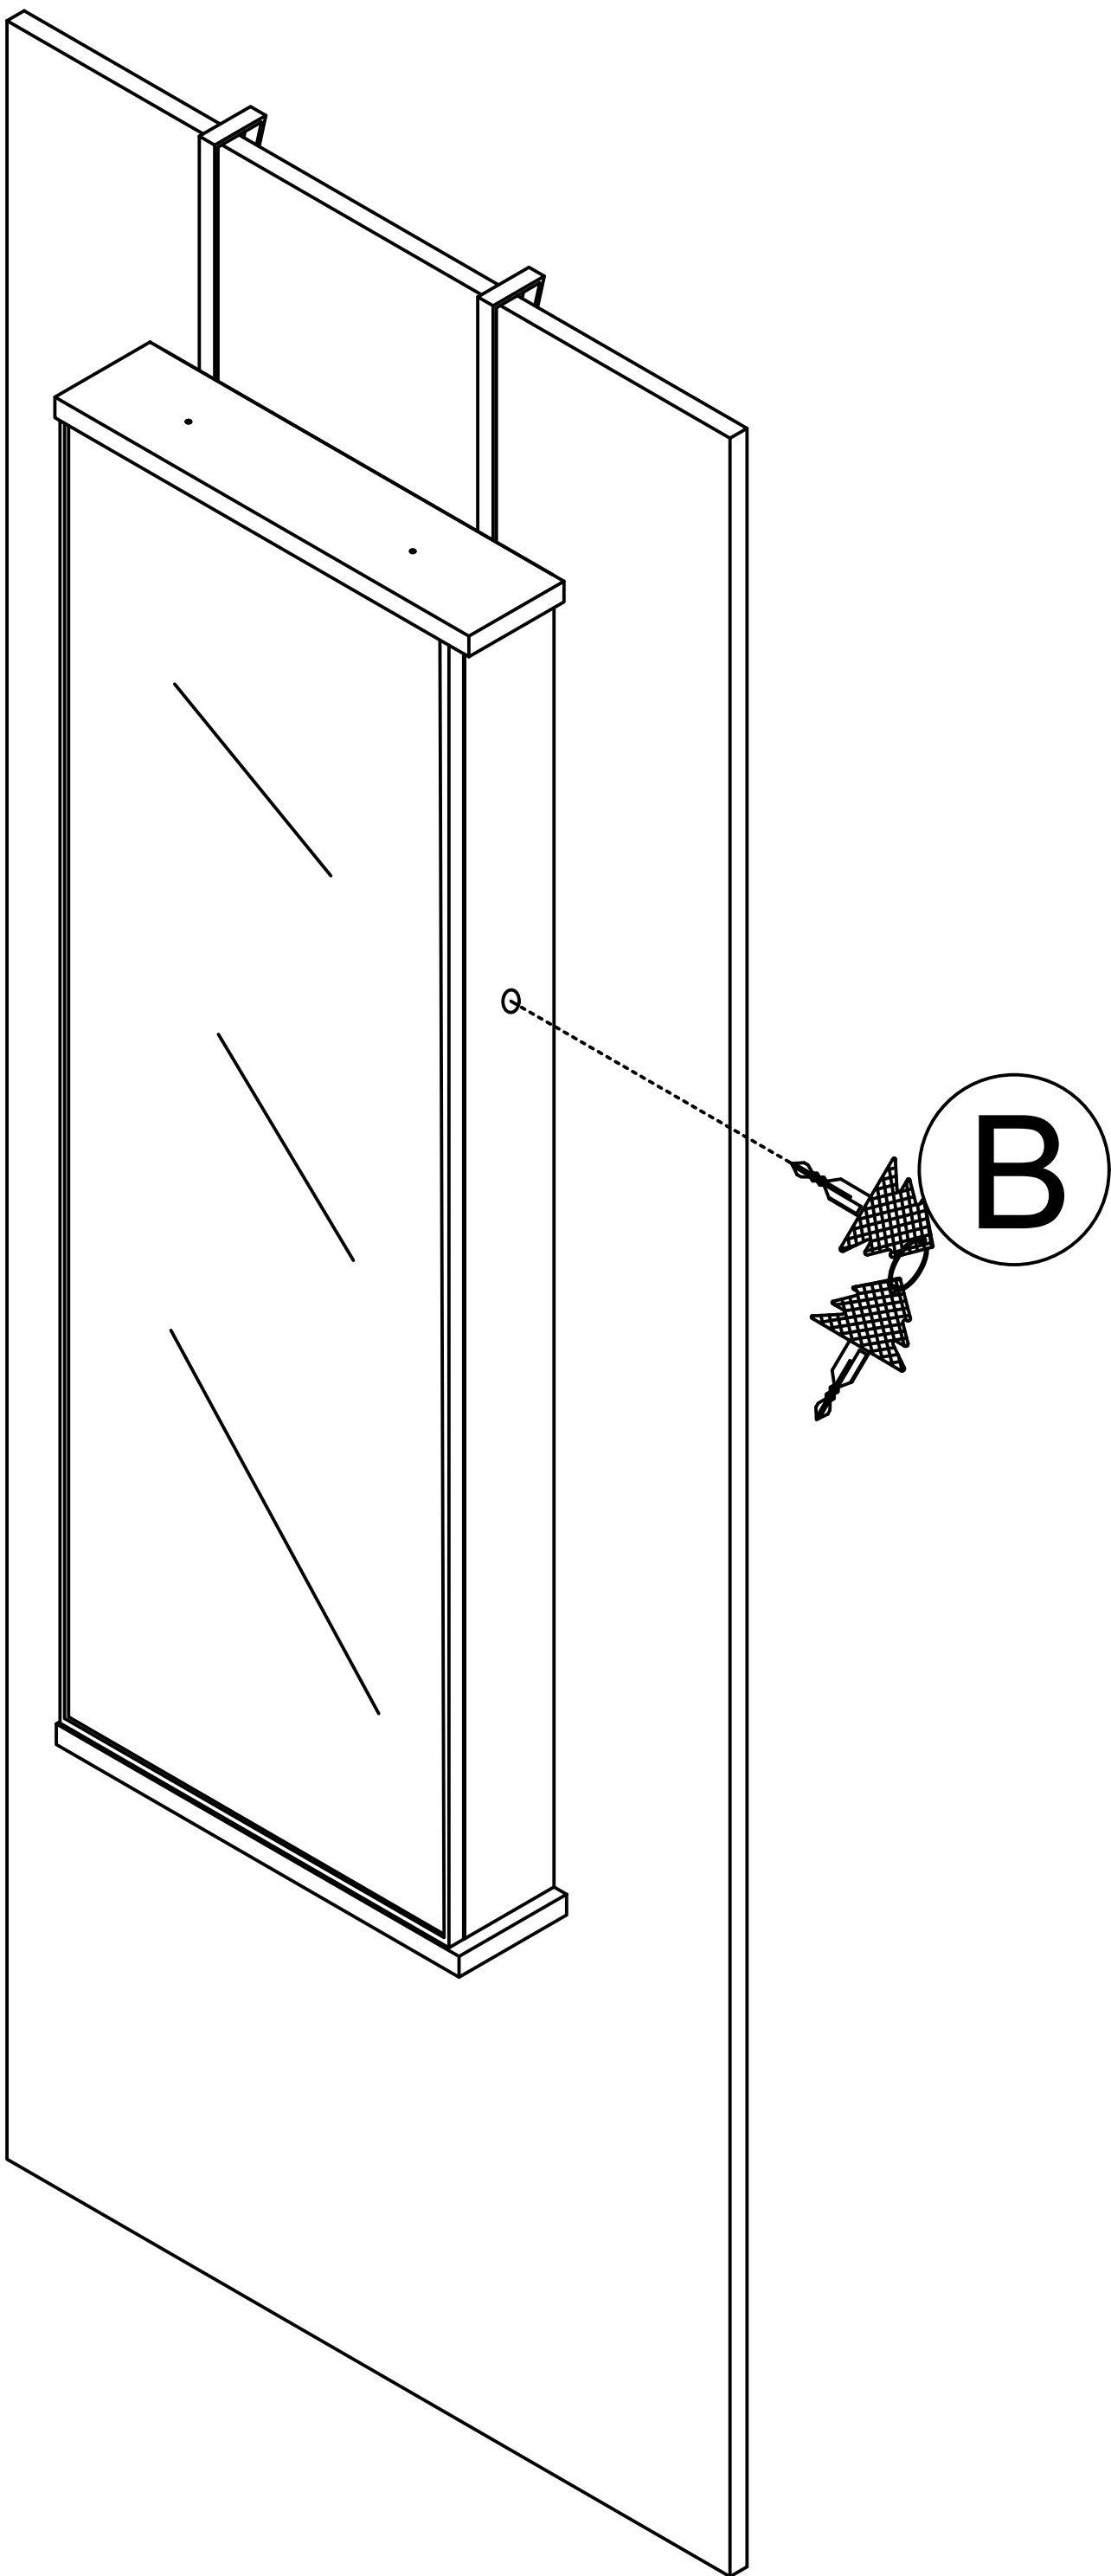


Wall Mount



(Tip: Please use your own tools)

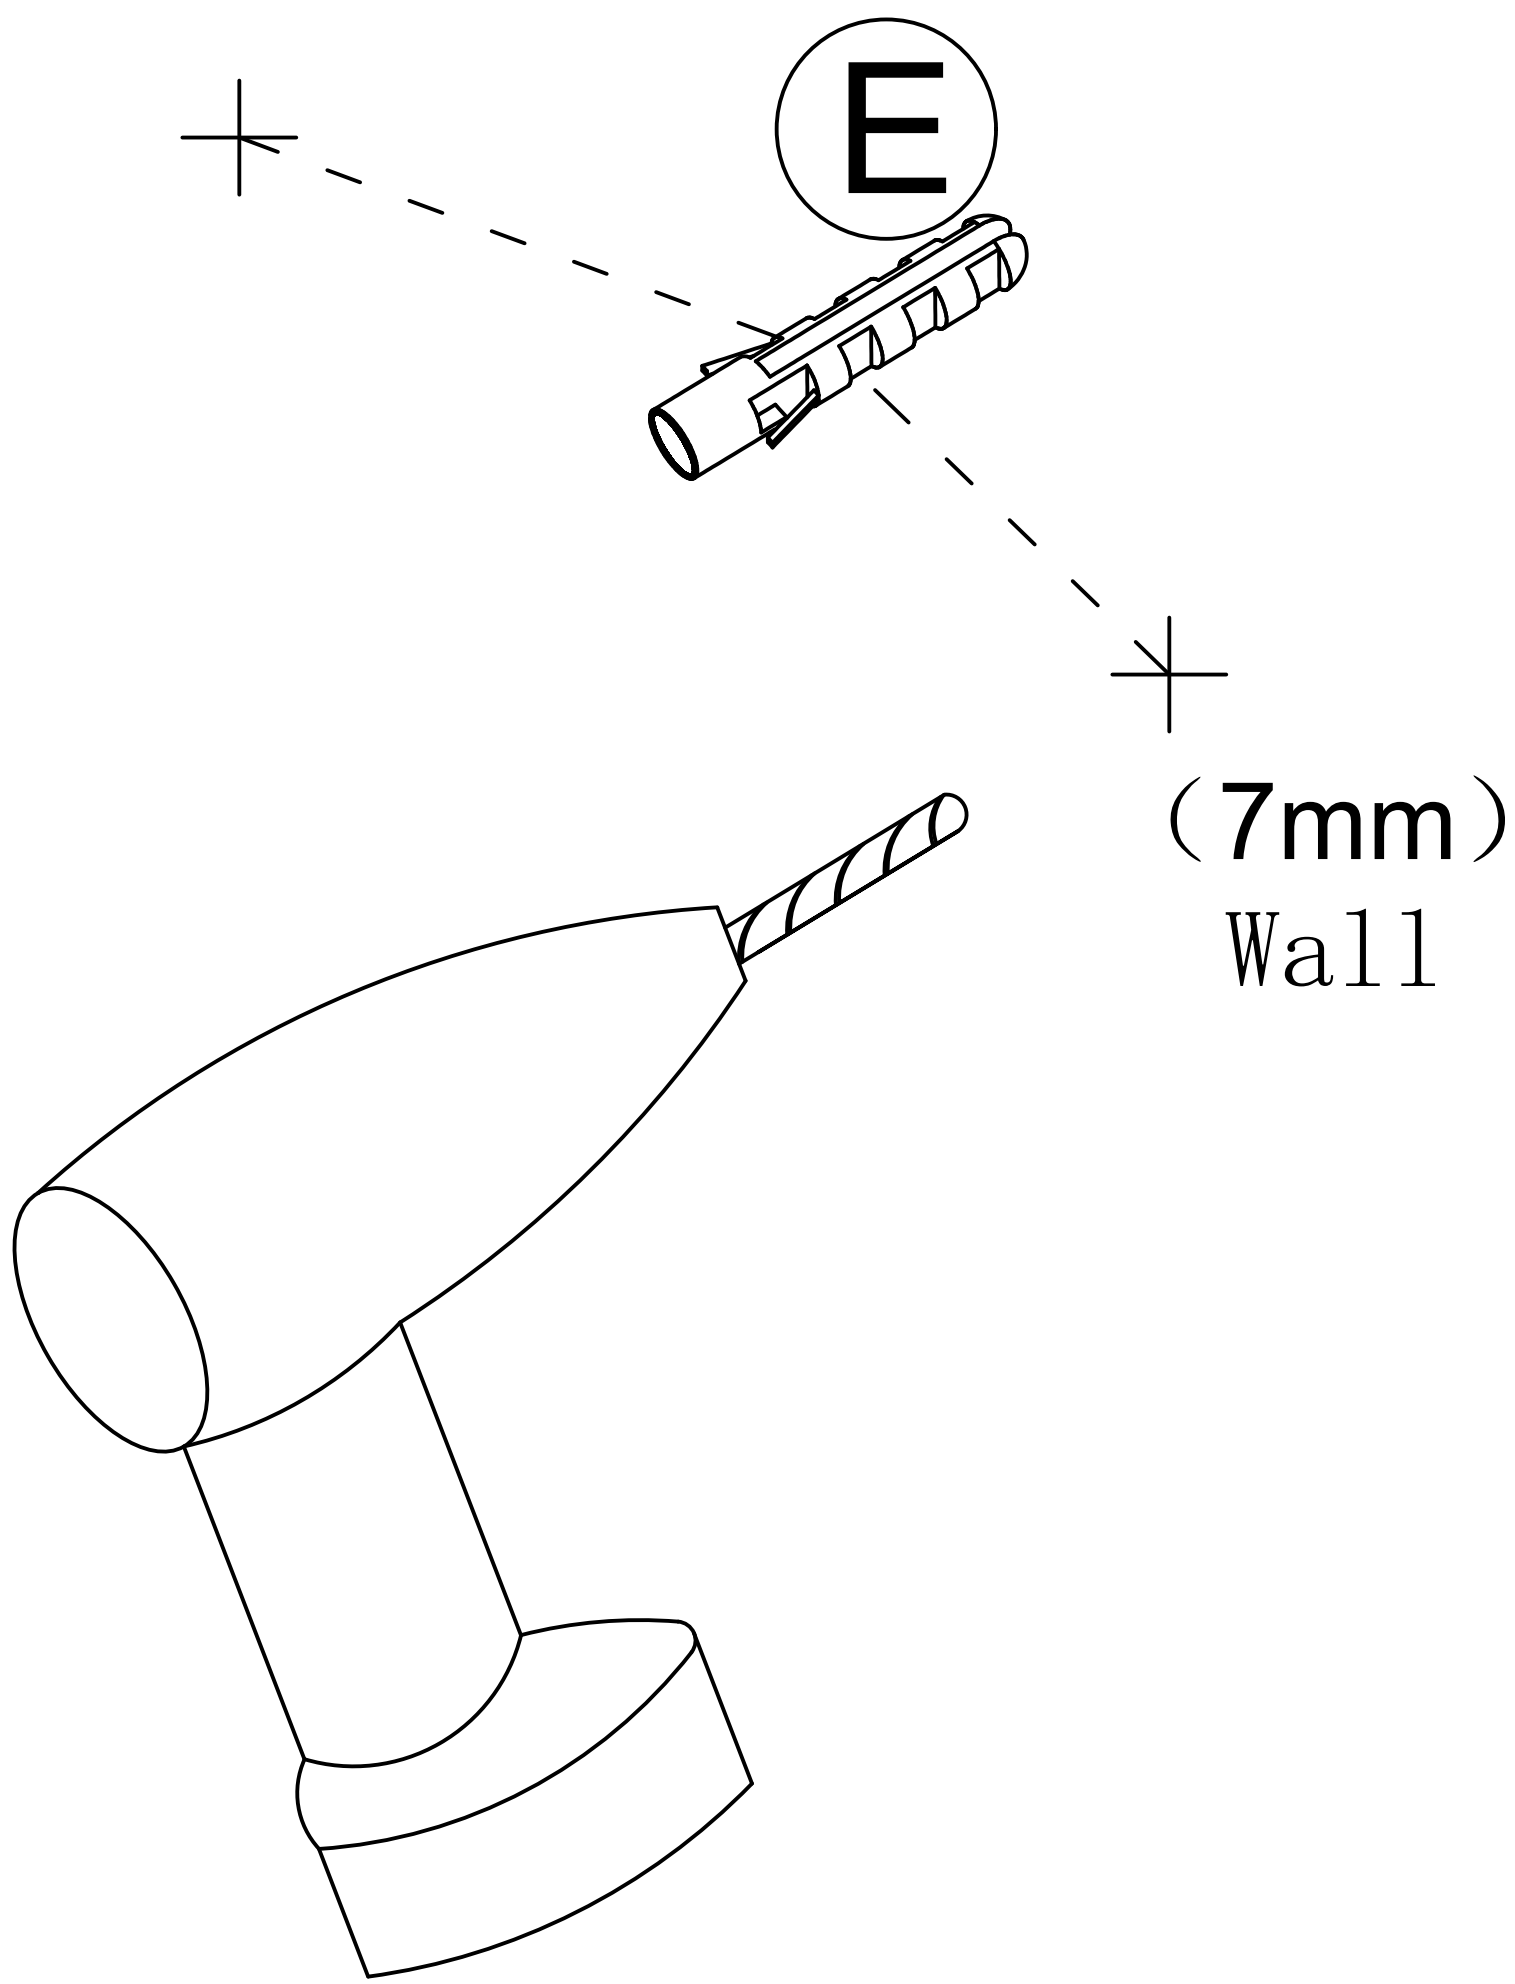

E		x 2
D		x 2

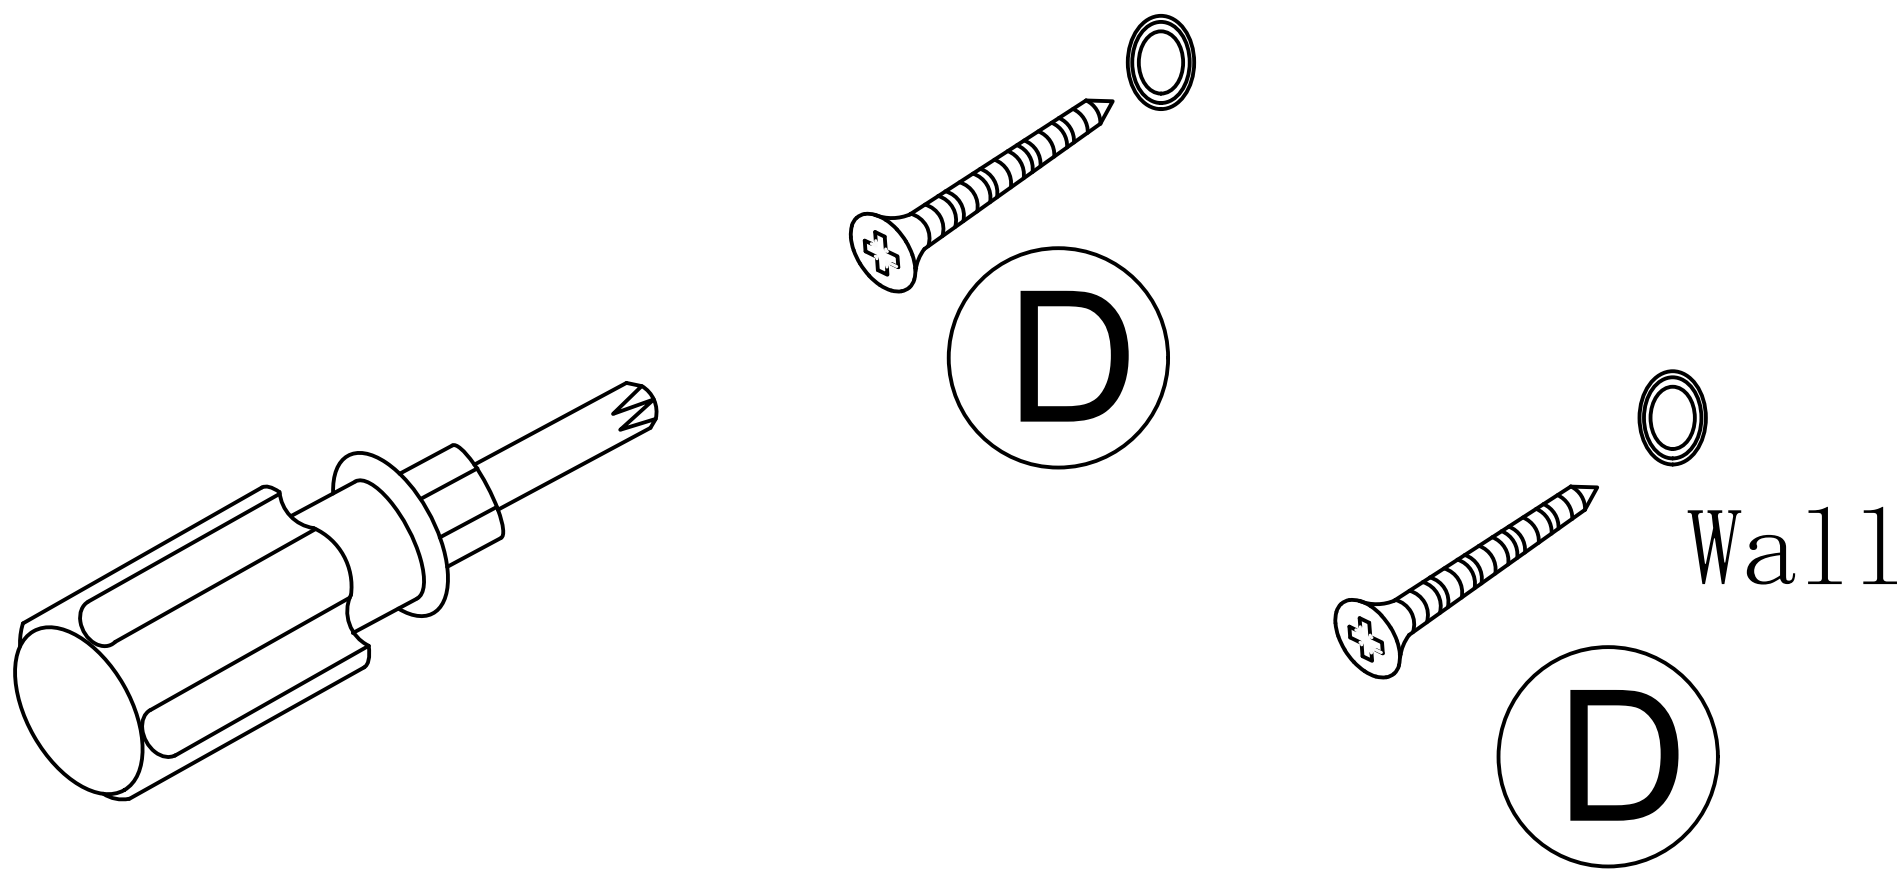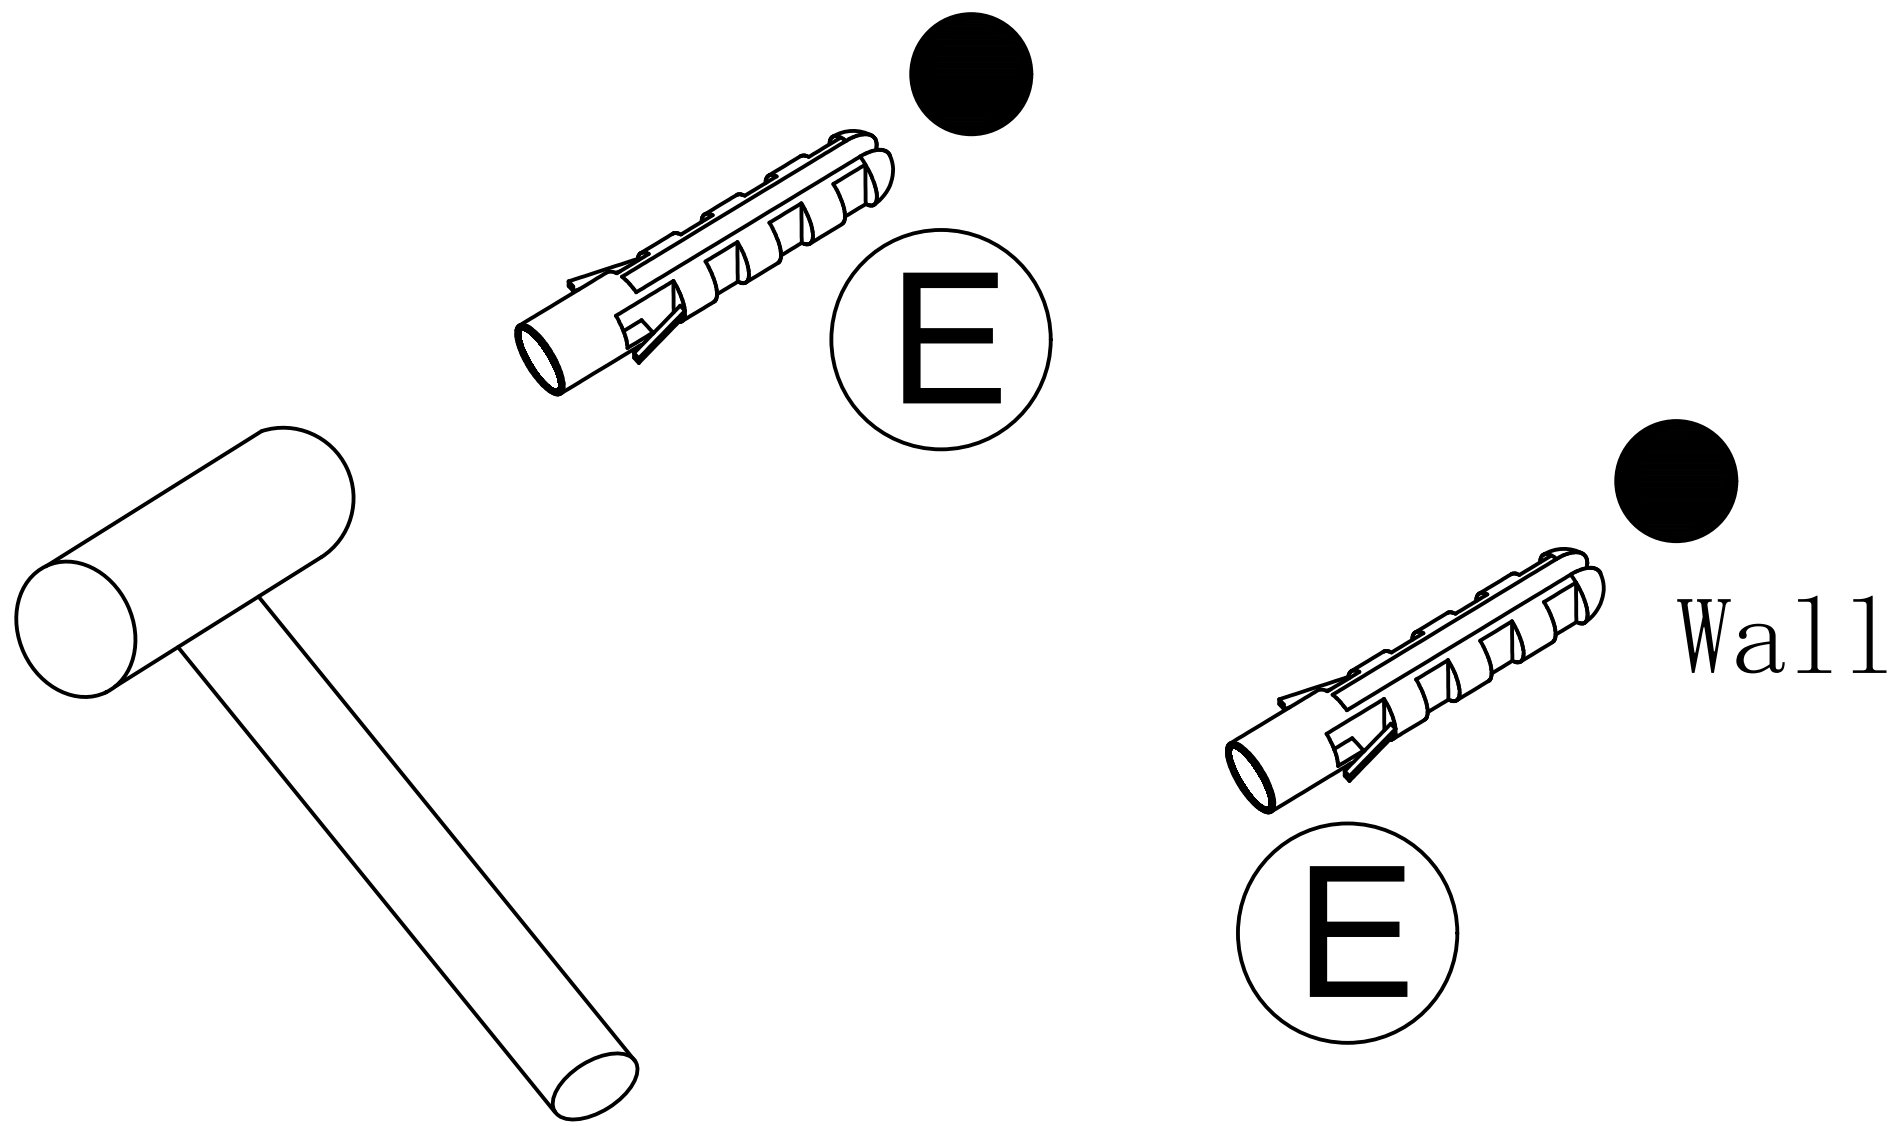

B		x 1
G		x 1

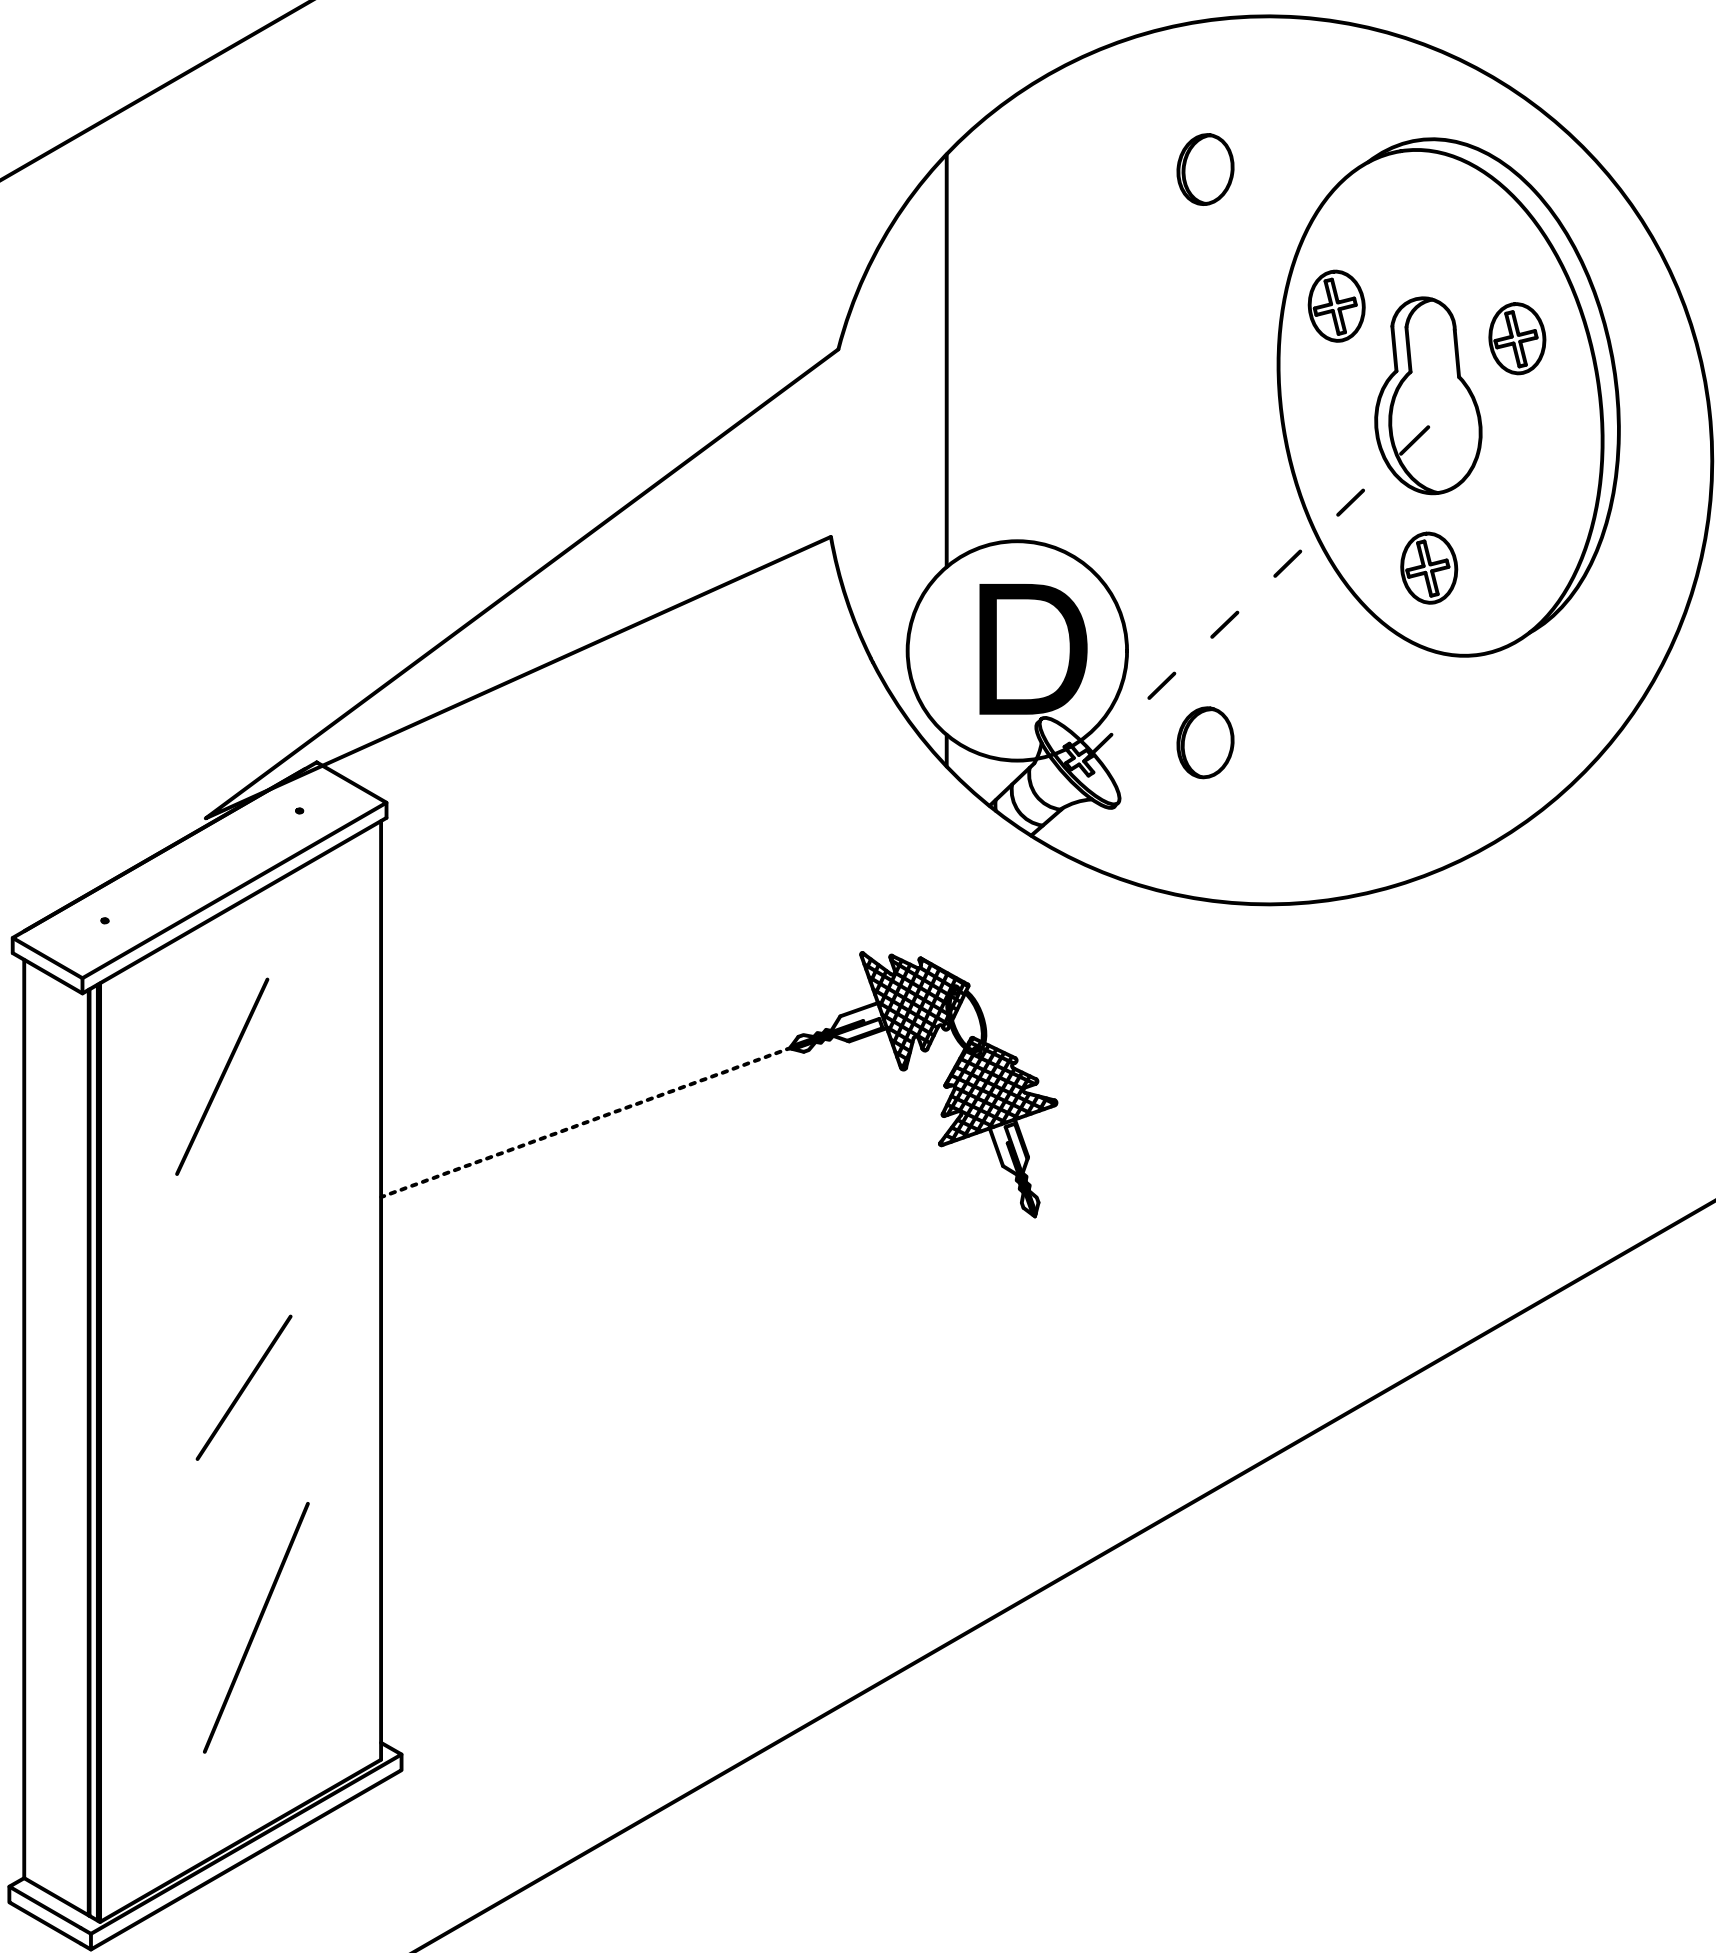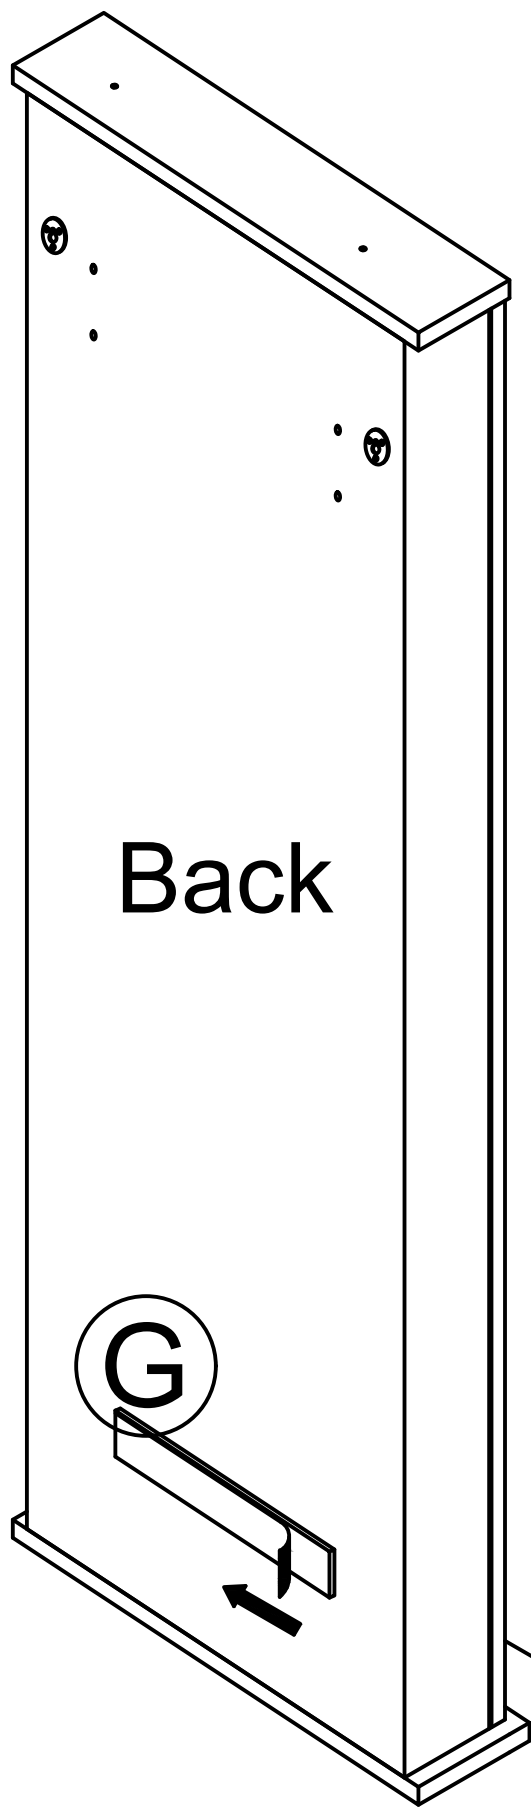

Fixed on the door to prevent swaying.