





**CLEARTEX®** Revolutionmat  
a floortex brand




### Unpacking guide: For Cleartex Polypropylene Chair Mats

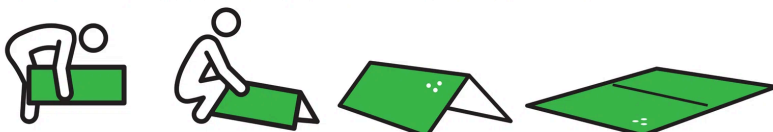

Unfold your mat and place it flat on the floor with the lightly textured surface facing upwards. In most cases your mat will be instantly flat and ready for use.

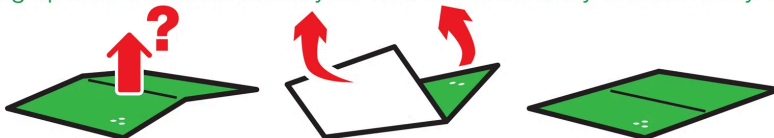

However, if your mat does not go instantly flat, re-fold it once along the crease - in the opposite direction - and re-lay it in the unfolded flat position on the floor.

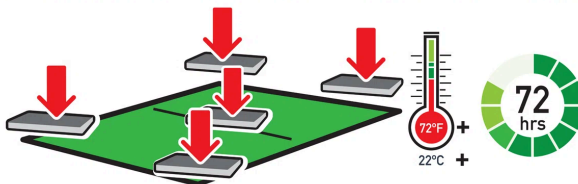

In some environments the mat may take a short period of time to totally flatten depending on the room temperature. This should not take more than a few hours. Placing weighted objects on top of the mat will speed up any flattening that is required.



We recommend wearing gloves when unpacking your polypropylene chair mat. To avoid a trip hazard, we recommend not putting your chair mat into full application until the mat is completely flat



**FLOORTEX®**  
solutions