


# Assembly Instructions

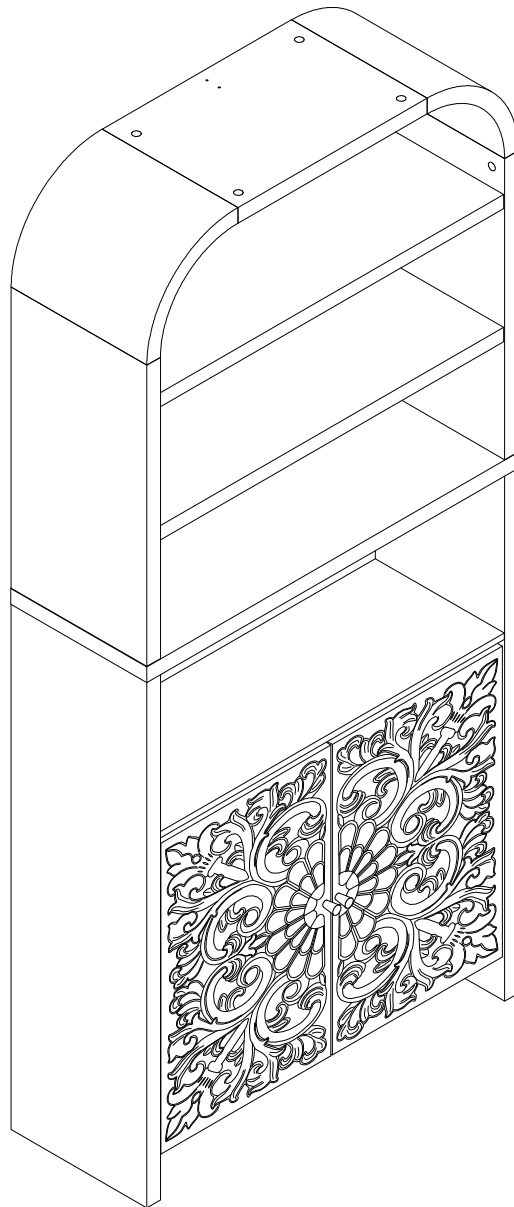

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


## Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

### Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

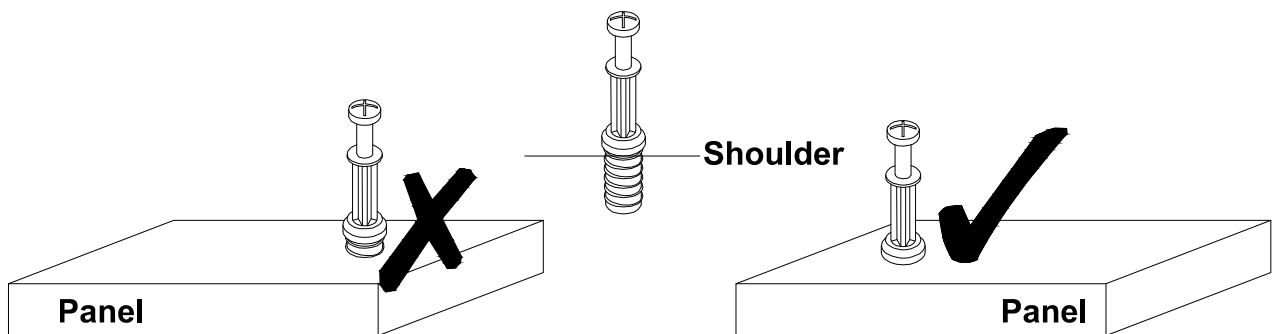


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

## CAM LOCK

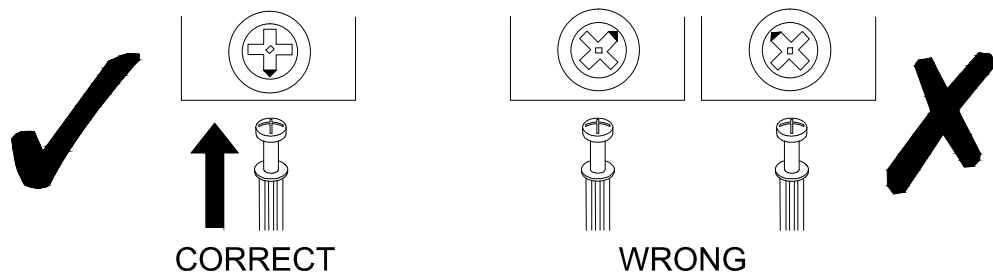


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

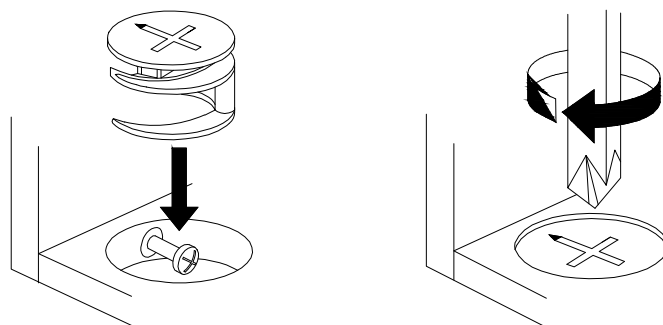

Turn cam lock clockwise to tighten.

# Product structure

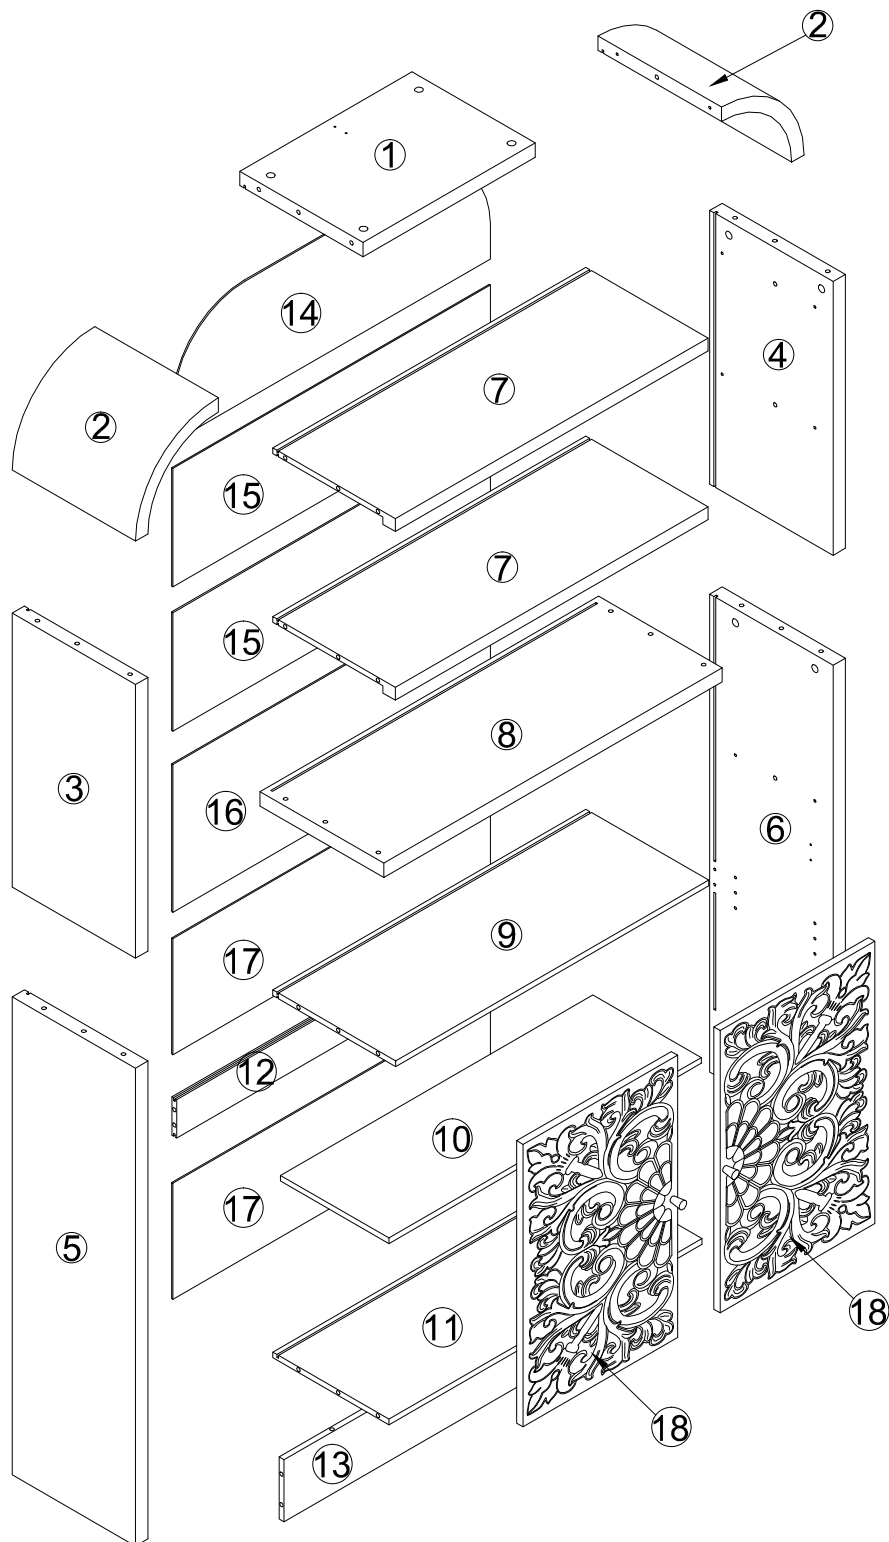

“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


# Part List



“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

## No. A

Quantity: 39 Pcs  
Cam Lock Dowel  
8\*28mm



## No. B

Quantity: 39 Pcs  
Cam  
φ15




## No. C

Quantity: 39 Pcs  
Sticker  
Ø20




## No. D

Quantity: 16 Pcs  
Dowel  
8\*30mm




## No. E

Quantity: 4 Pcs  
Large curved door hinge




## No. F

Quantity: 24 Pcs  
Screw  
M3.5\*12mm



## No. G

Quantity: 4 Pcs  
Shelf Support  
M5\*15mm



## No. H

Quantity: 2 Pcs  
Handle  
Ø20\*23mm



## No. I

Quantity: 4 Pcs  
Foot Pad  
Ø15




## No. J

Quantity: 4 Pcs  
Screw  
M6\*40mm




## No. K

Quantity: 1 Pc  
Allen Key  
4#




## No. L

Quantity: 22 Sets  
Plastic Wedge



## No. M

Quantity: 1 Sets  
Hardware anti-falling belt




## No. N

Quantity: 2 Pcs  
Screw  
M4\*22mm




## STEP 1

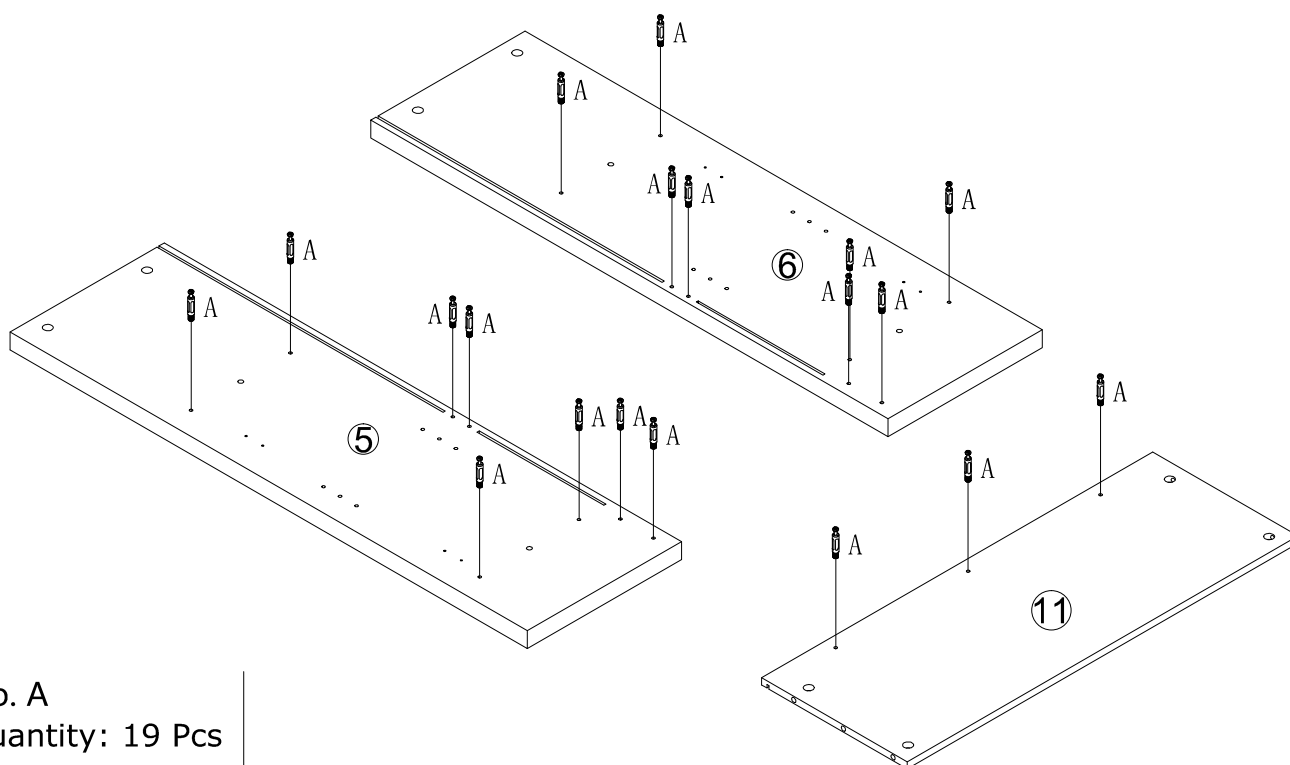

No. A  
Quantity: 19 Pcs  
8\*28 mm



## STEP 2

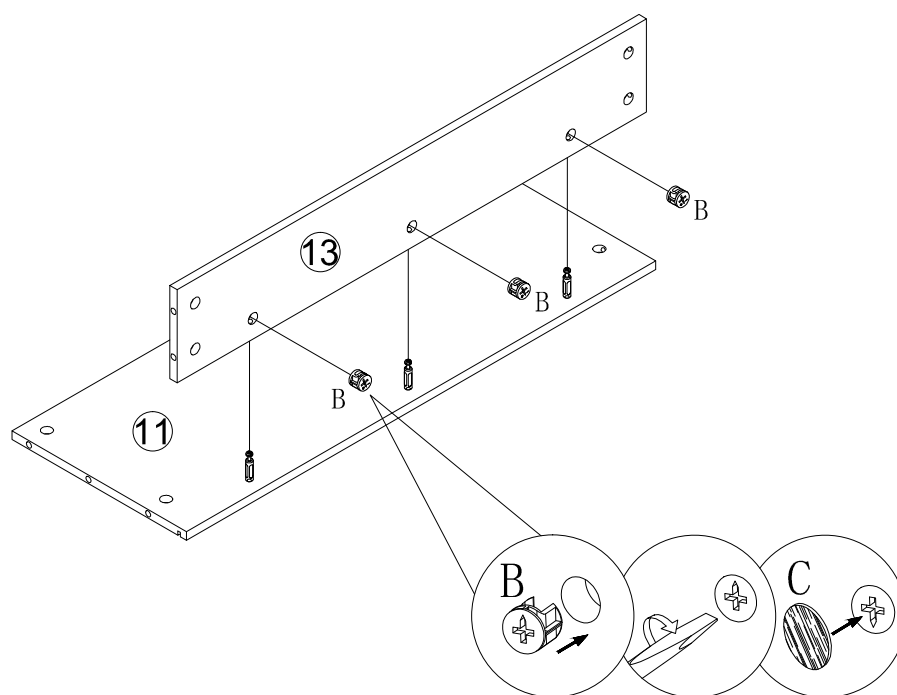

No. B  
Quantity: 3 Pcs  
Ø15



No. C  
Quantity: 3 Pcs  
Ø20



## STEP 3



No. B  
Quantity: 8 Pcs  
Ø15




No. C  
Quantity: 8 Pcs  
Ø20



No. D  
Quantity: 2 Pcs  
8\*30mm

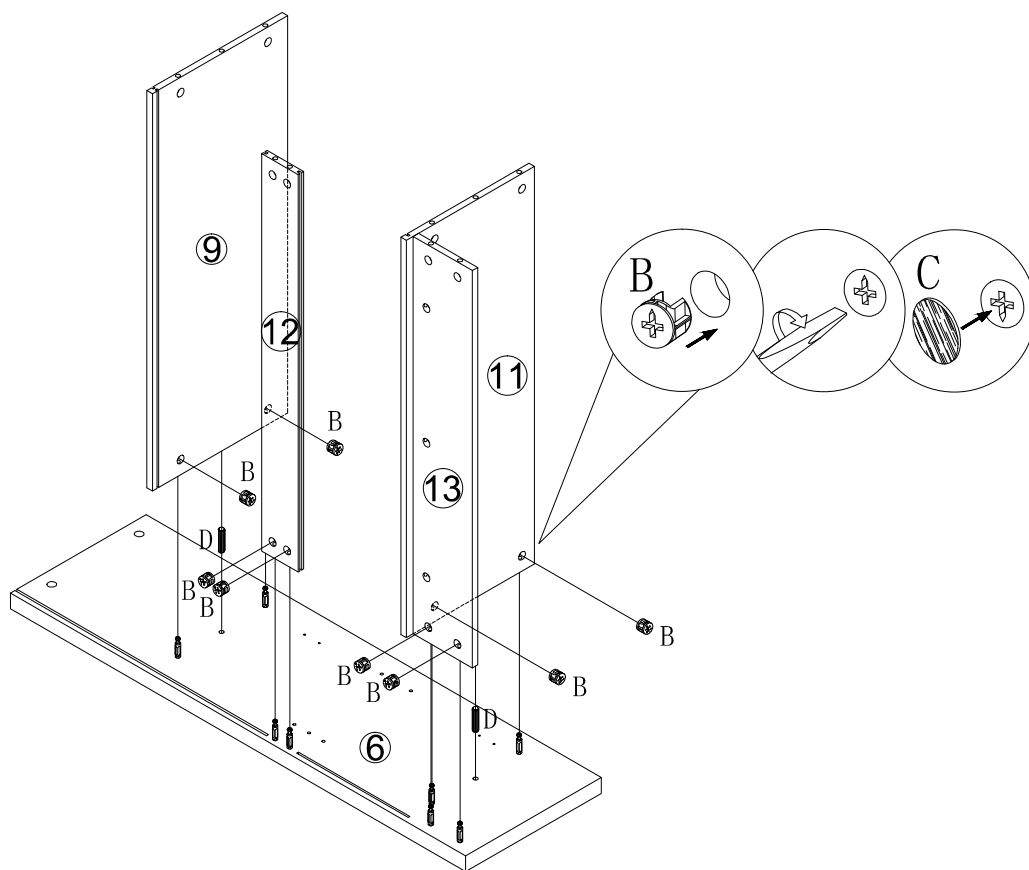

## STEP 4

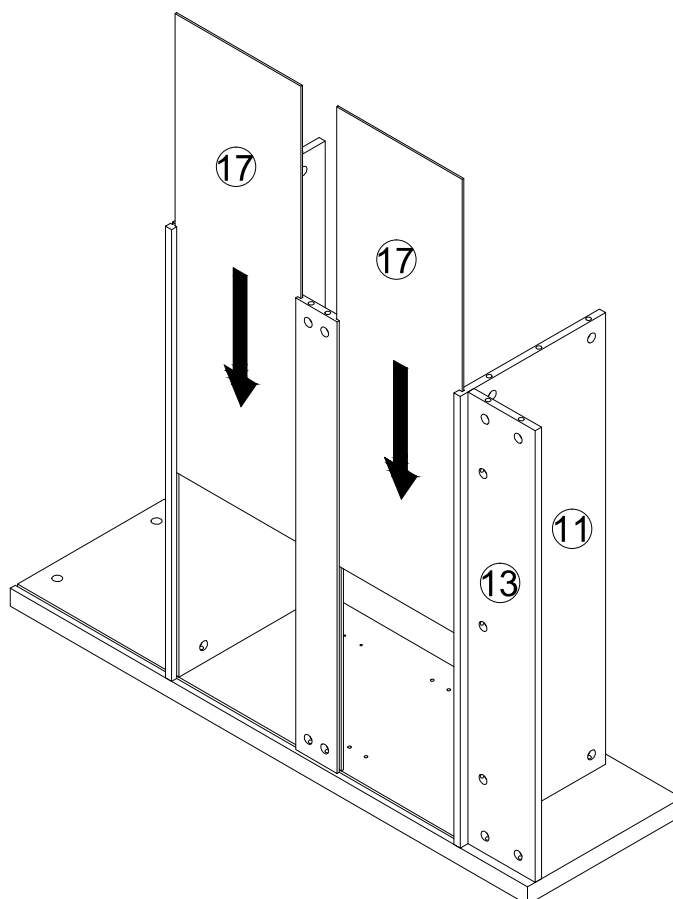

## STEP 5



No. B  
Quantity: 8 Pcs  
Ø15



No. C  
Quantity: 8 Pcs  
Ø20




No. D  
Quantity: 2 Pcs  
8\*30mm

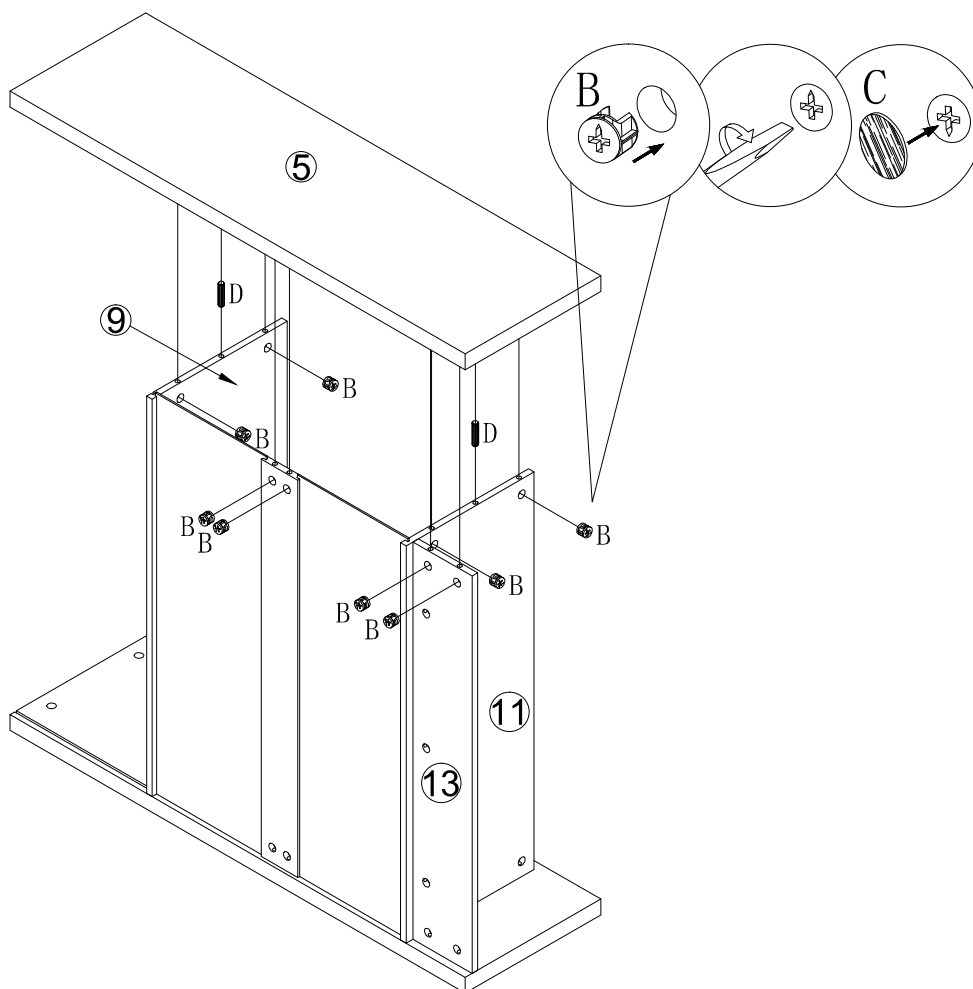


## STEP 6


No. I  
Quantity: 4 Pcs  
Ø15

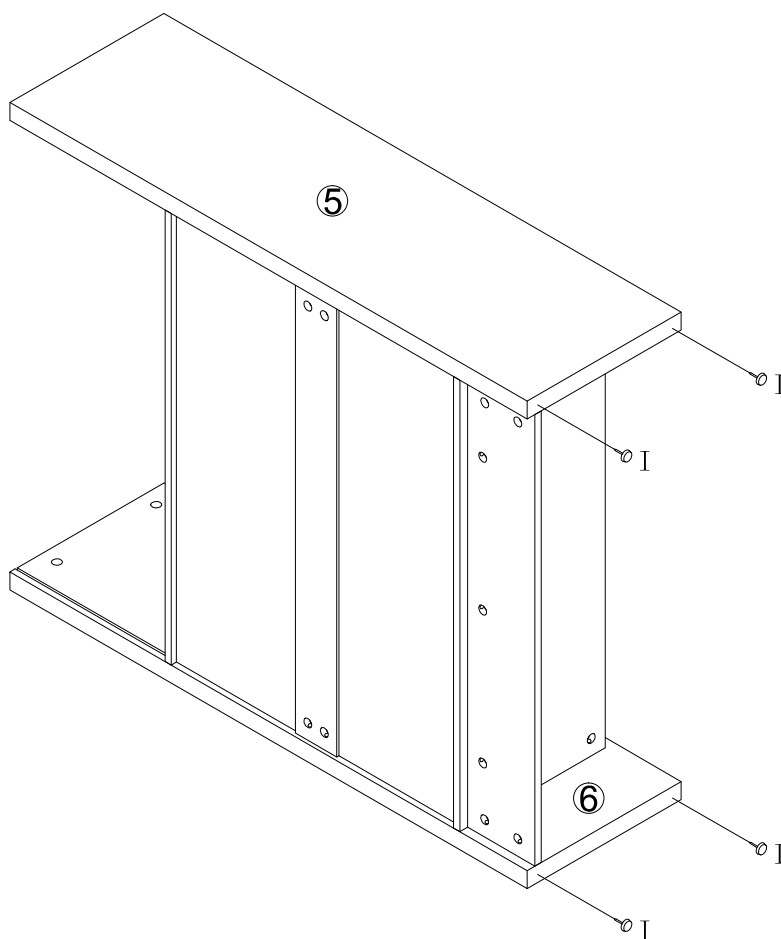

## STEP 7

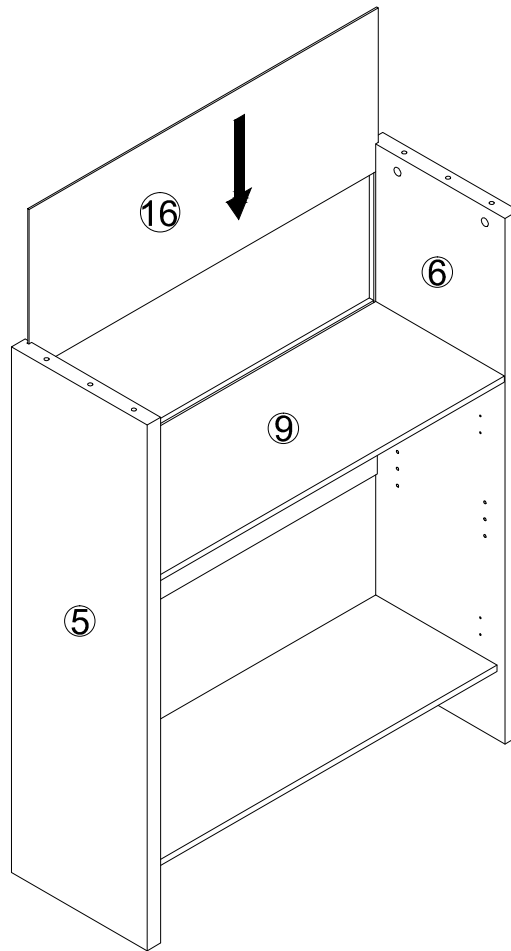

## STEP 8

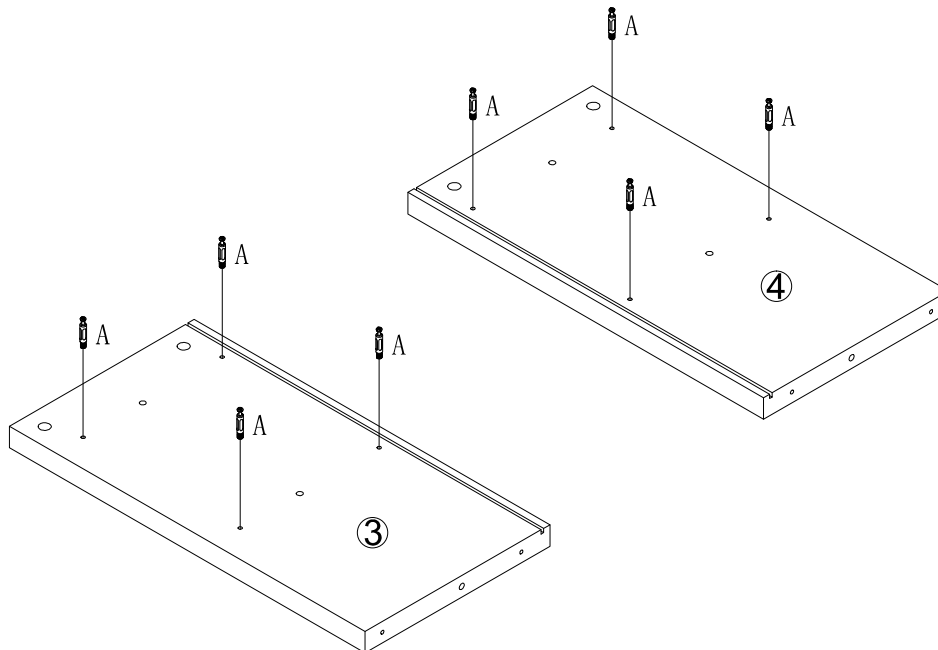

No. A  
Quantity: 8 Pcs  
8\*28 mm



## STEP 9



No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20



No. D  
Quantity: 2 Pcs  
8\*30mm

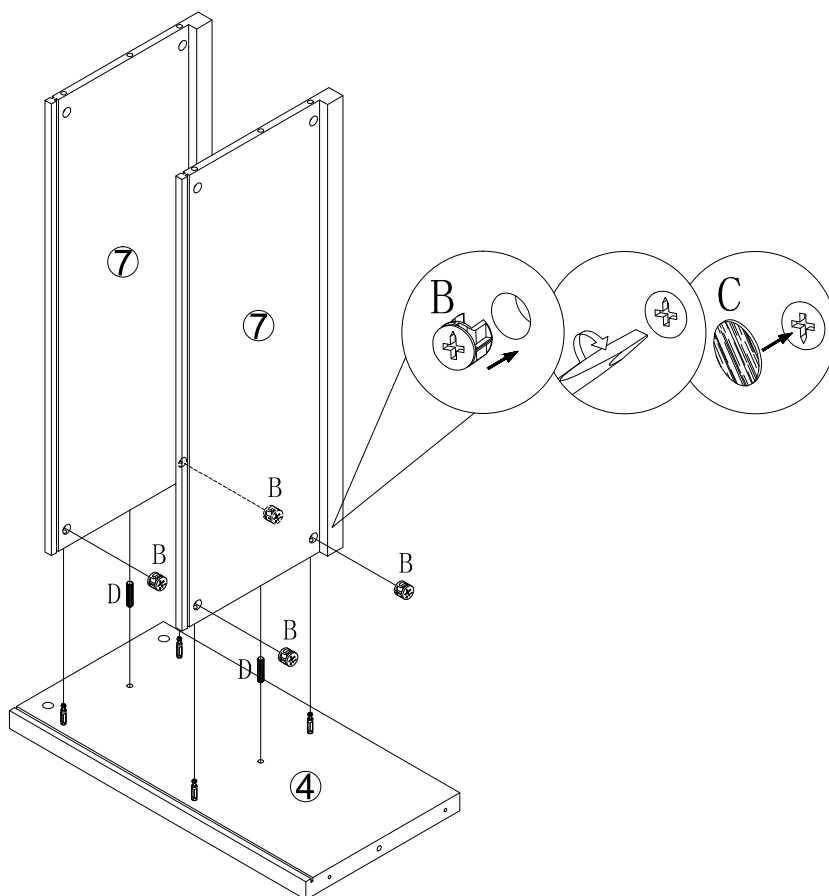

## STEP 10

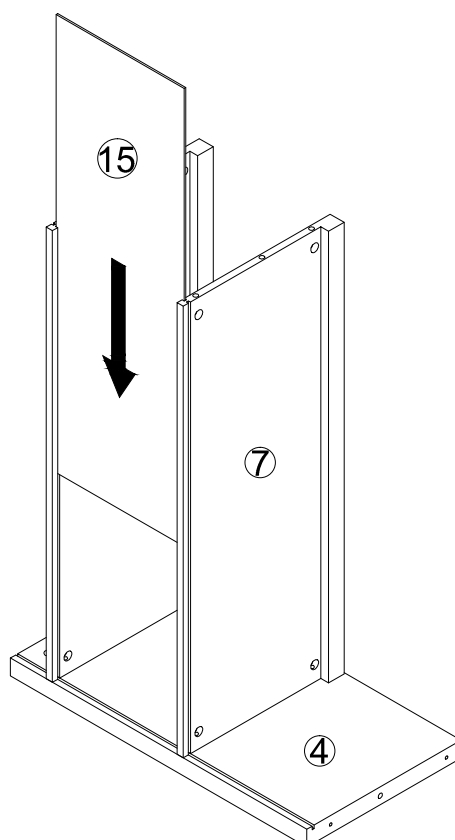

## STEP 11



No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20



No. D  
Quantity: 2 Pcs  
8\*30mm

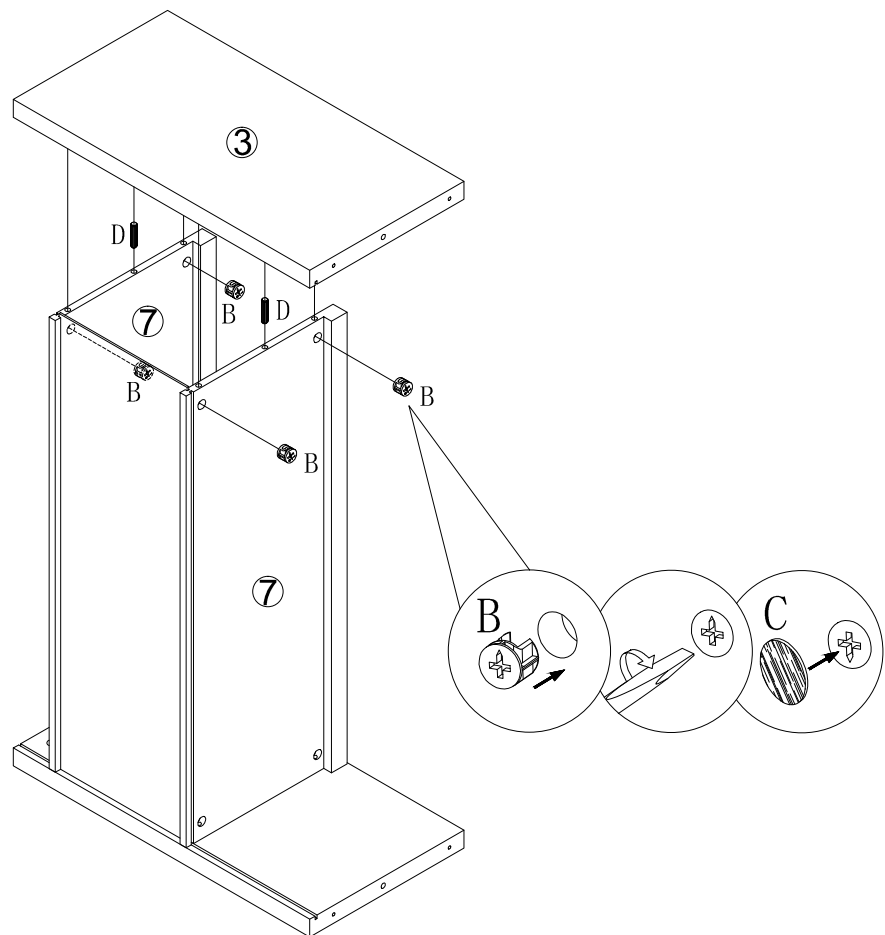


## STEP 12

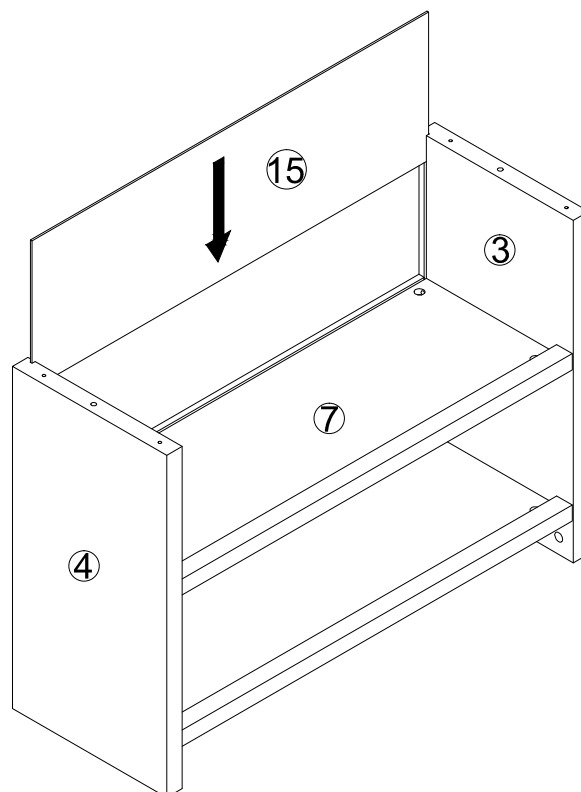

## STEP 13



No. D  
Quantity: 2 Pcs  
8\*30mm



No. J  
Quantity: 4 Pcs  
M6\*40mm





No. K  
Quantity: 1 Pc  
4#

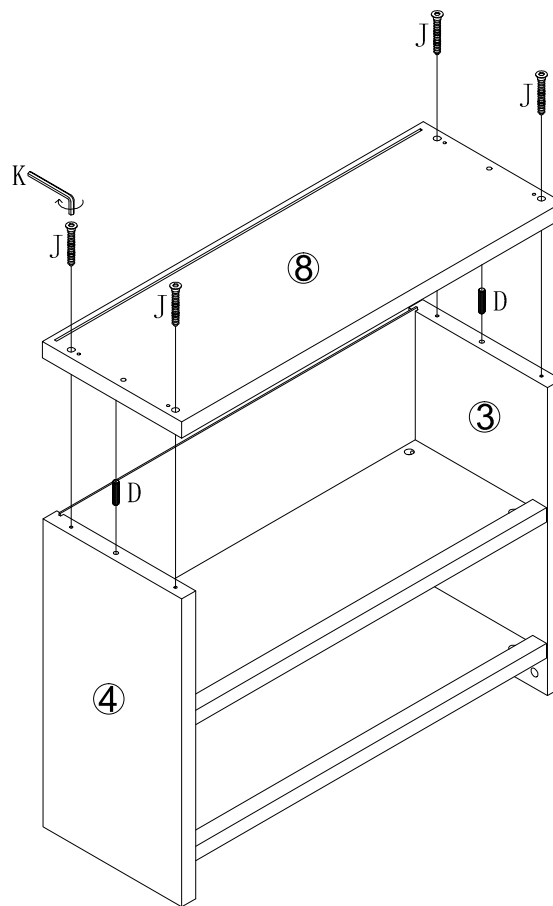

## STEP 14

No. A  
Quantity: 4 Pcs  
8\*28 mm

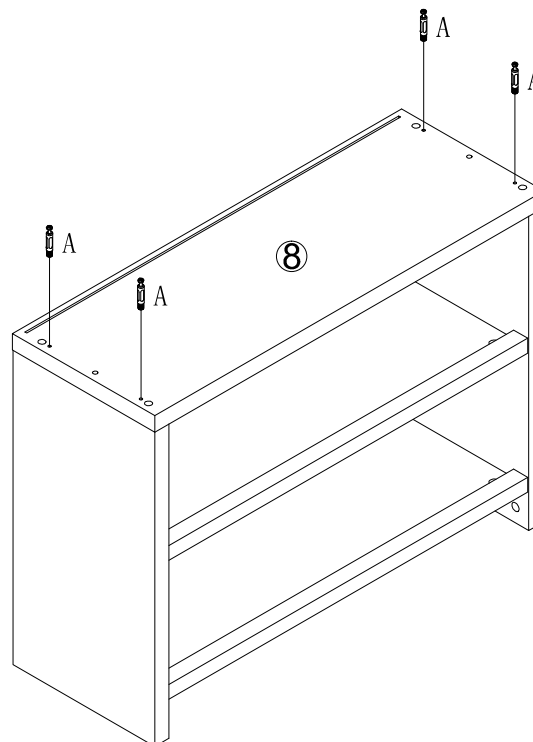

## STEP 15




No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20




No. D  
Quantity: 2 Pcs  
8\*30mm

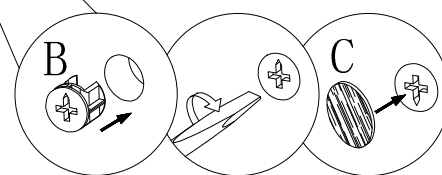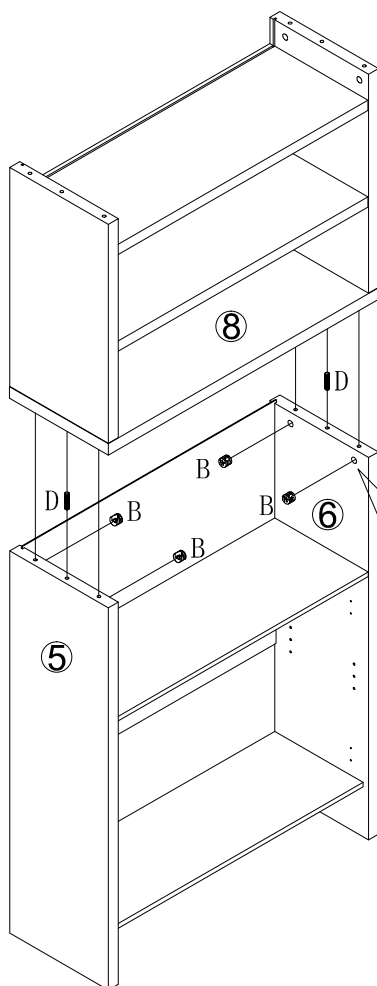

## STEP 16

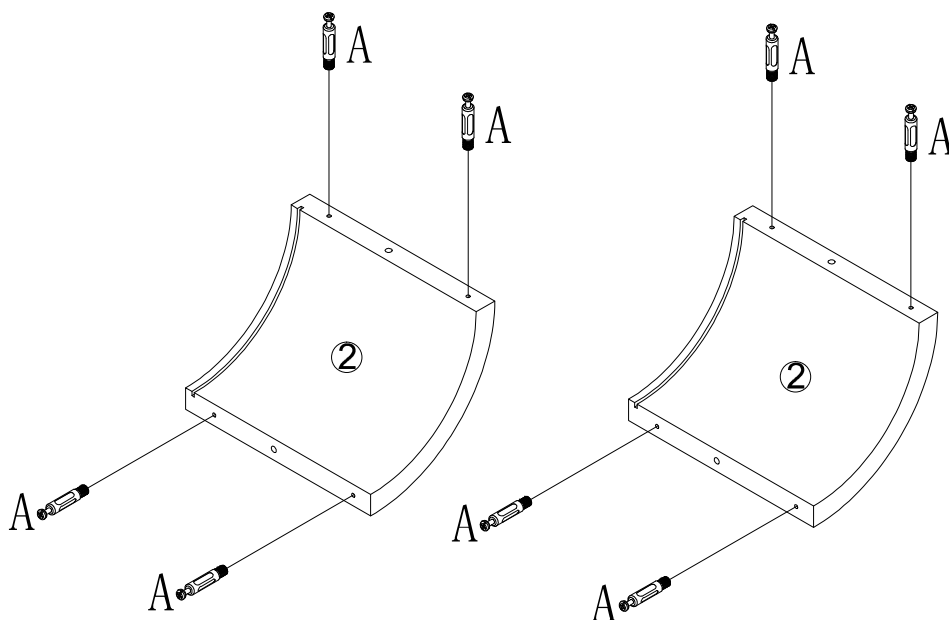

No. A  
Quantity: 8 Pcs  
8\*28 mm



## STEP 17



No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20



No. D  
Quantity: 2 Pcs  
8\*30mm

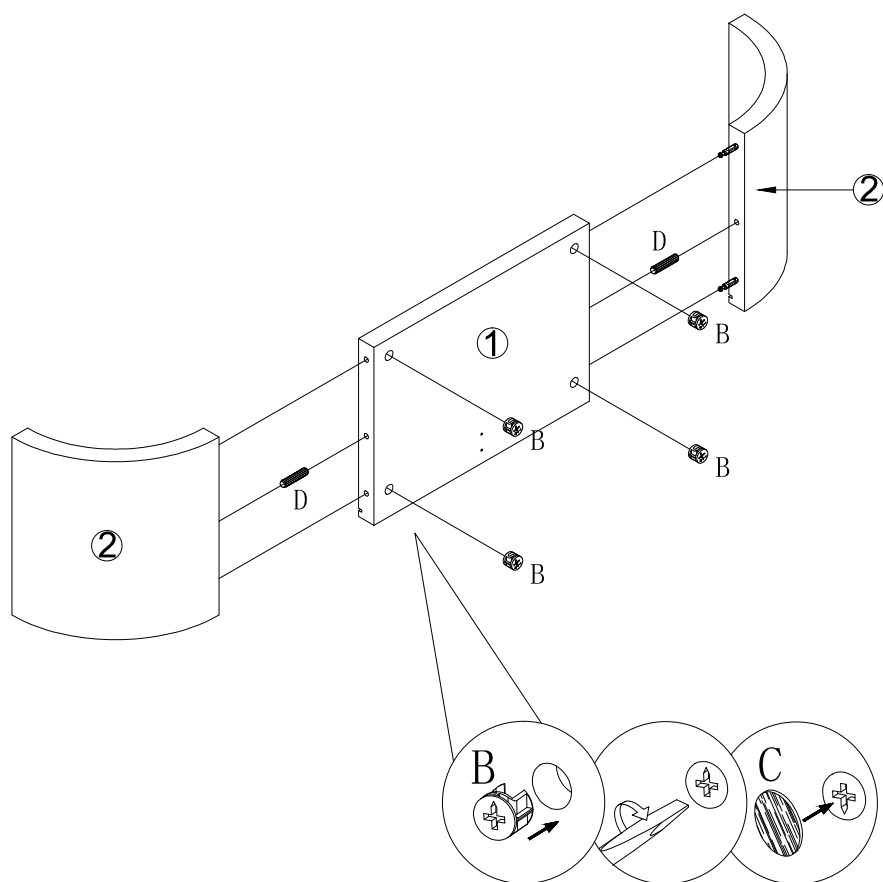

## STEP 18

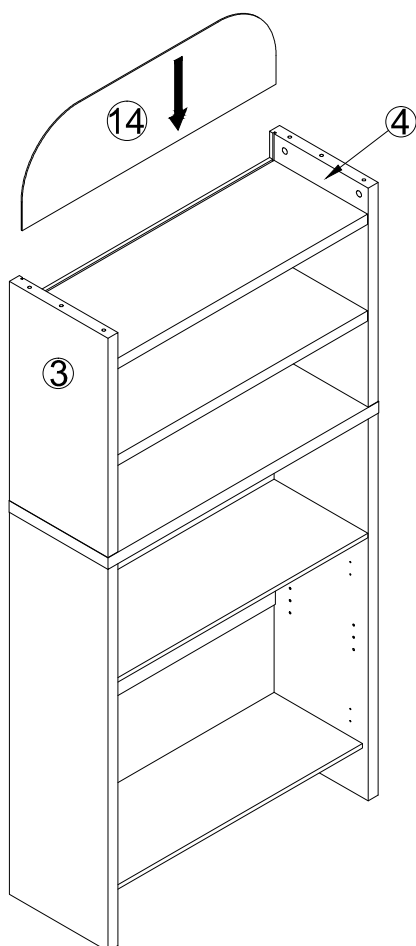

## STEP 19



No. B  
Quantity: 4 Pcs  
Ø15



No. C  
Quantity: 4 Pcs  
Ø20





No. D  
Quantity: 2 Pcs  
8\*30mm

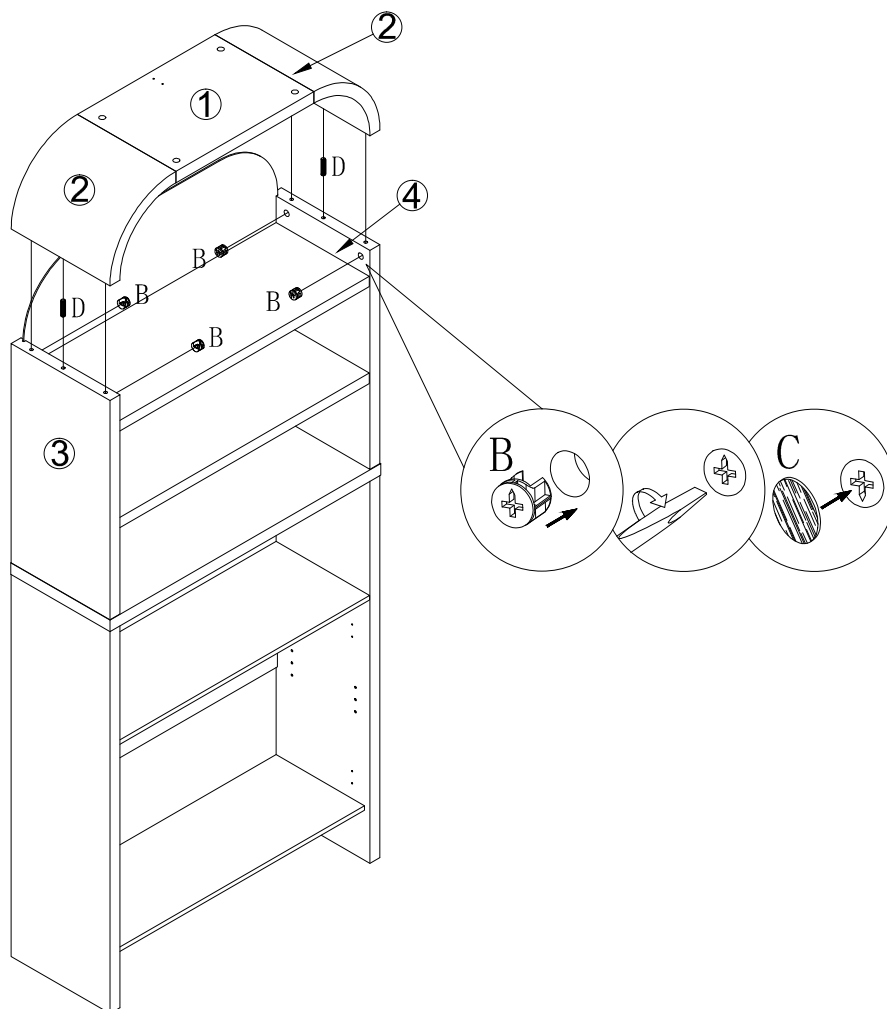


## STEP 20


No. G  
Quantity: 4 Pcs  
M5\*15mm

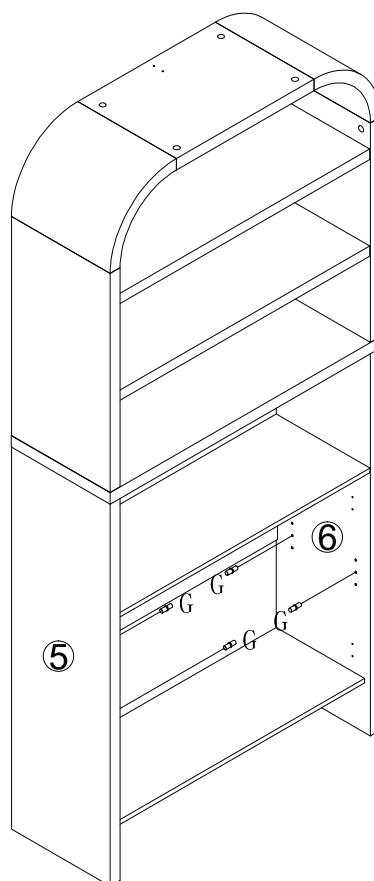


## STEP 21

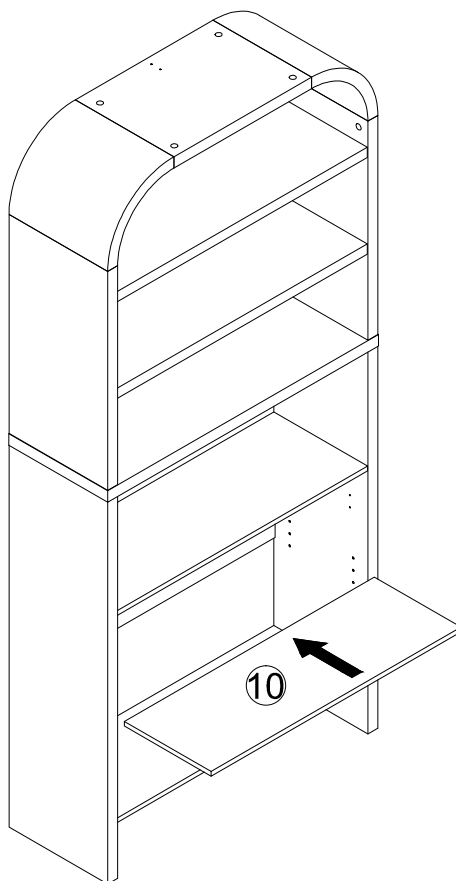

## STEP 22

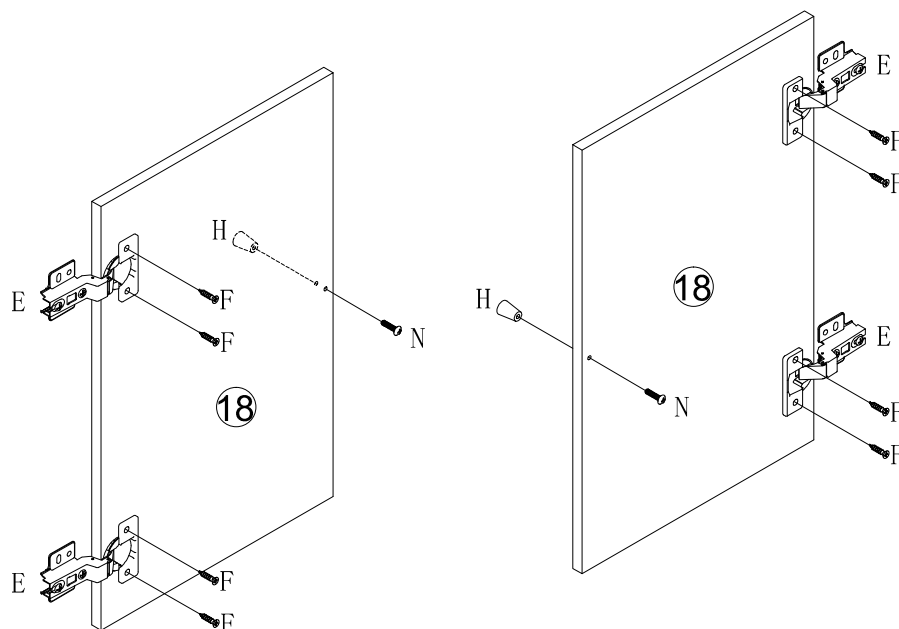

No. E  
Quantity: 4 Pcs



No. F  
Quantity: 8 Pcs  
M3.5\*12mm



No. H  
Quantity: 2 Pcs  
Ø20\*23mm




No. N  
Quantity: 2 Pcs  
M4\*22mm




# The way to adjust the door by hinge.



how to adjust the cabinet hinges


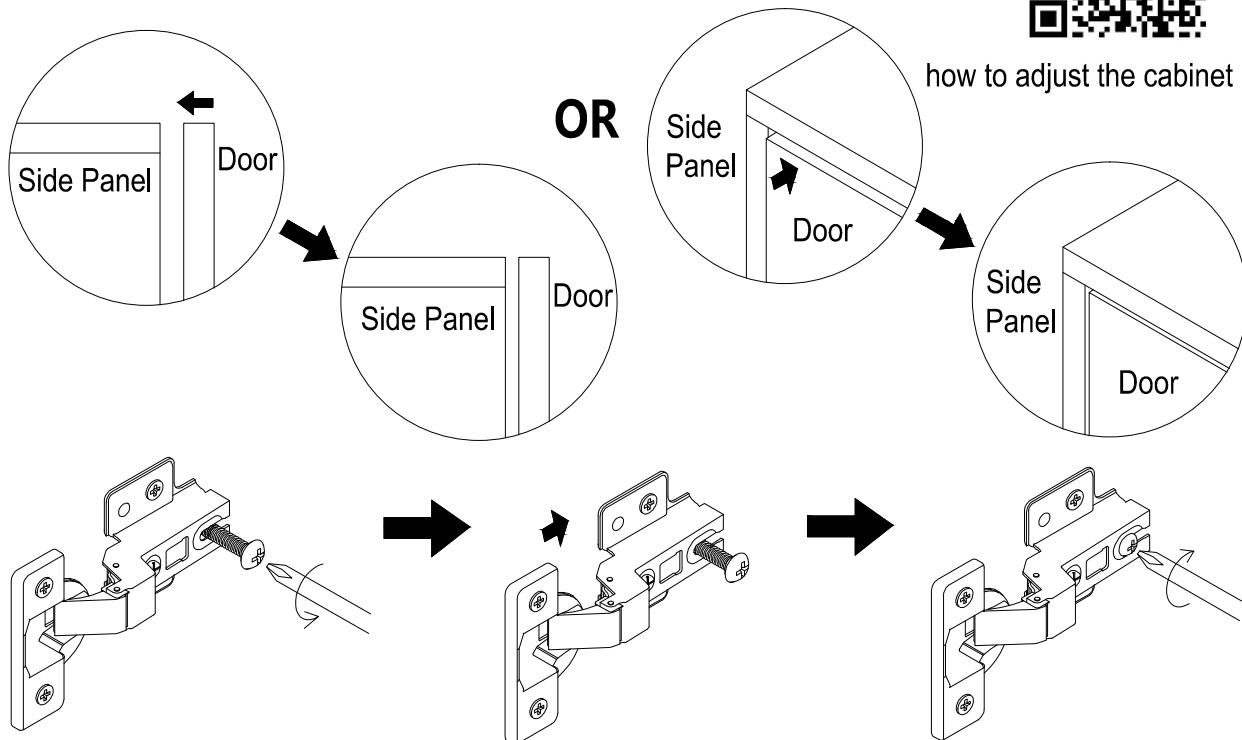


If the gap is too big between side panel and door or the door is over the edge of side panel, loose the back screw as shown, then move in the door with hinge and tighten the back screw as shown when the gap is just well.


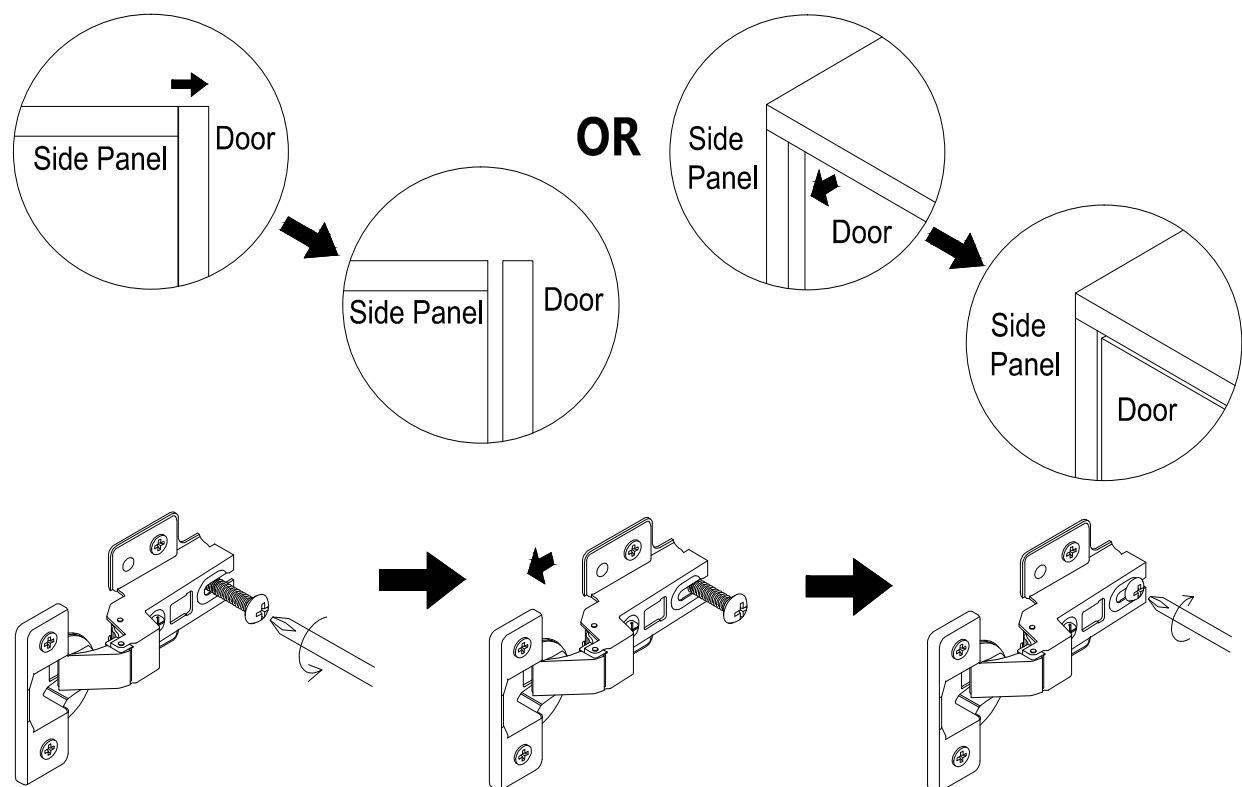


If the gap is too small between side panel and door or the door sank in side panel, loose the back screw as shown, then move out the door with hinge and tighten the back screw as shown when the gap is just well.



**! IMPORTANT:** When making height or depth adjustments, please ensure you adjust **BOTH** the top and bottom hinges of the door simultaneously. Adjusting only one hinge will be ineffective and may cause stress on the hardware.

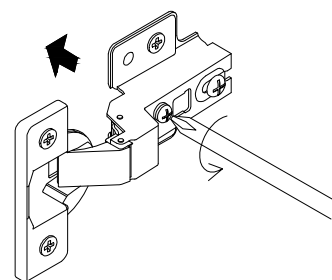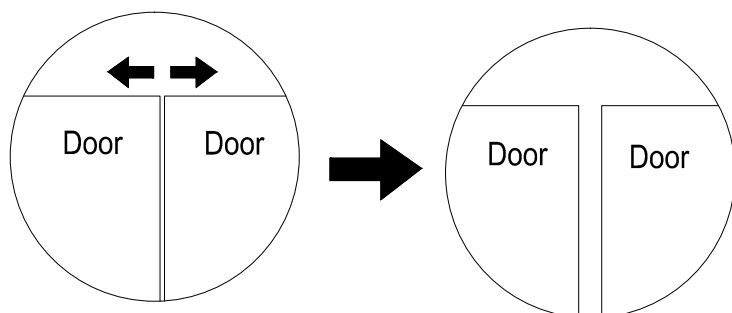




If the gap is too small between two doors, loose the front screw as shown.

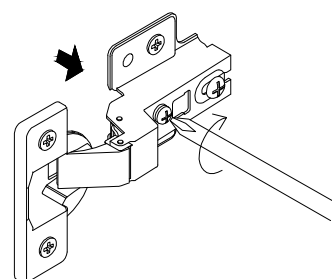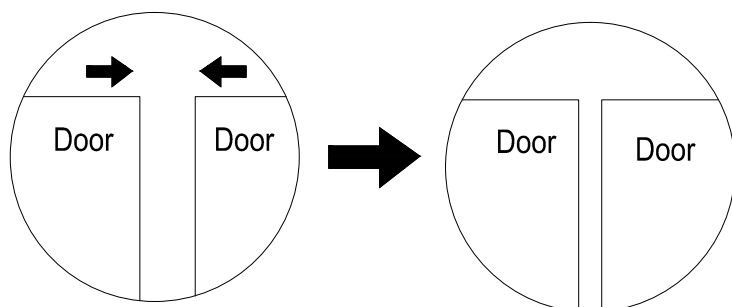

If the gap is too small between two doors, loose the front screw as shown.

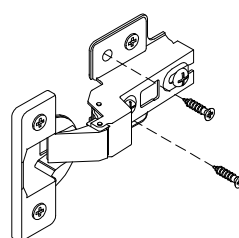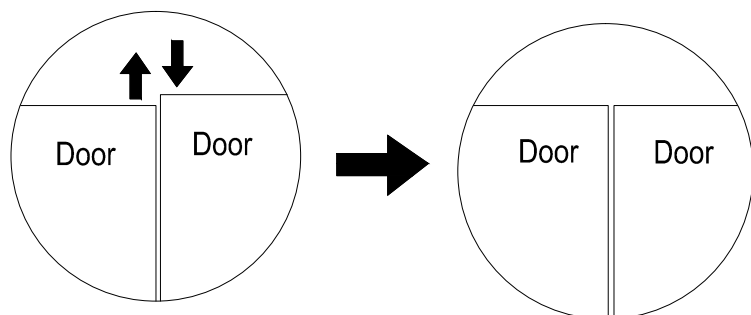


Attention:  
After adjusted Hinges,  
then lock screws.

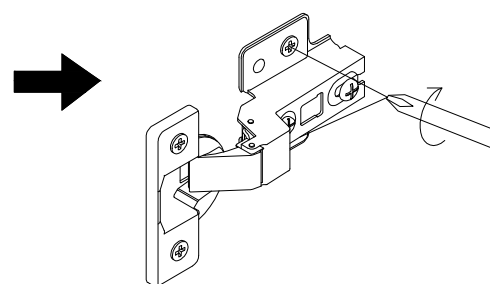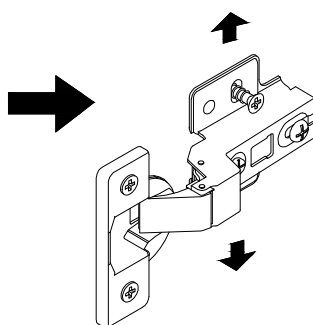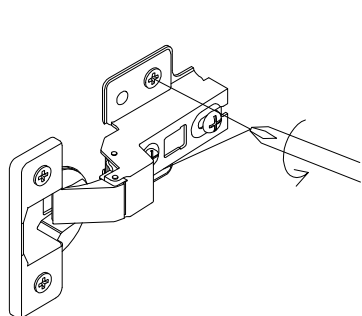

If the doors are not in same level, losse the back screws on wing, then adjust the door up and down, tighten the screws when both doors are in same level.Screw front two screws on wing when all are in place.

## STEP 23

First, use screws to secure the two rear guide holes of the door hinge into the two guide holes of the side panel.

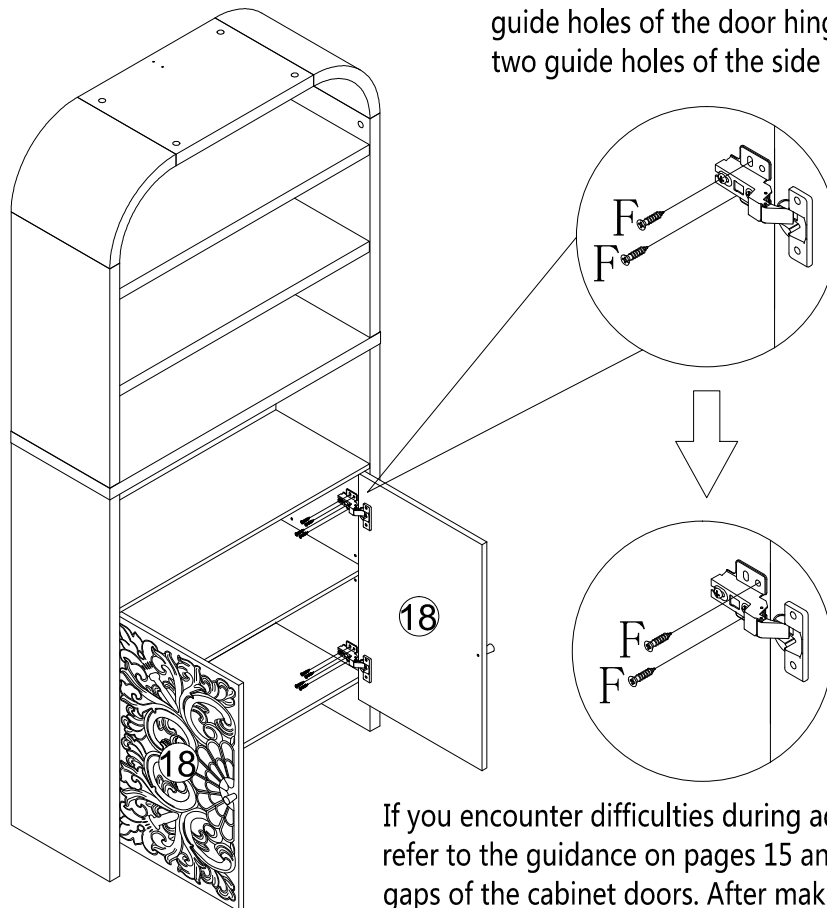

No. F  
Quantity: 16 Pcs  
M3.5\*12mm




If you encounter difficulties during adjustment, please refer to the guidance on pages 15 and 16 to adjust the gaps of the cabinet doors. After making the gaps even, please tighten the two screws on the front side.

## STEP 24



**“DO NOT skip Step 24. The Plastic Wedges (L) are crucial for the stability of the cabinet.”**

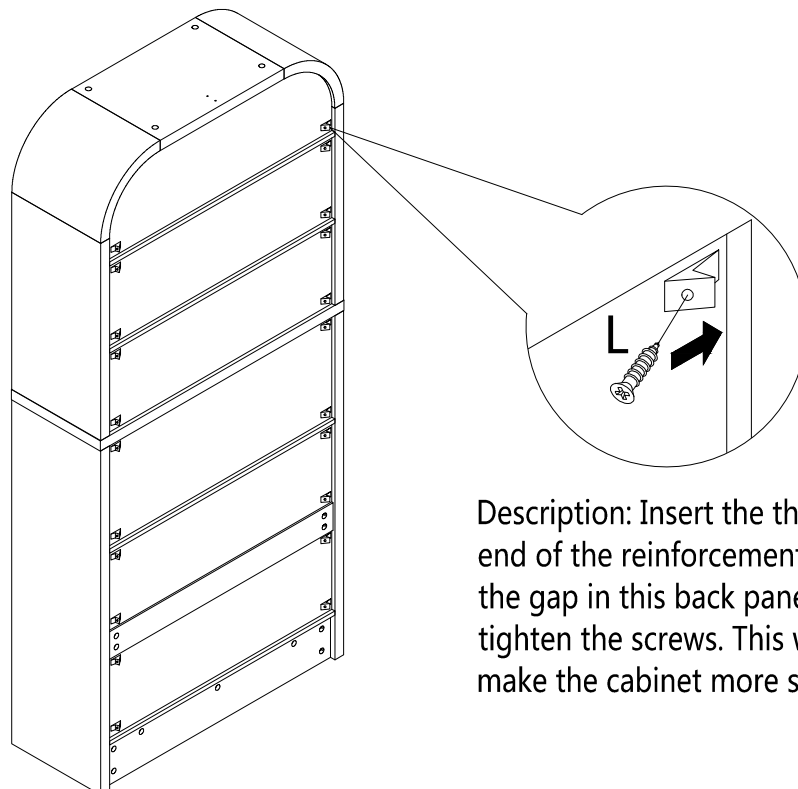

Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.







No. L  
Quantity: 22 Sets




## STEP 25



**WARNING: ALWAYS LIFT** the cabinet when moving it. **NEVER DRAG** it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

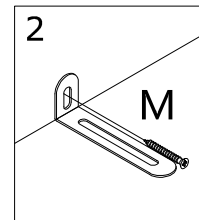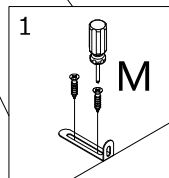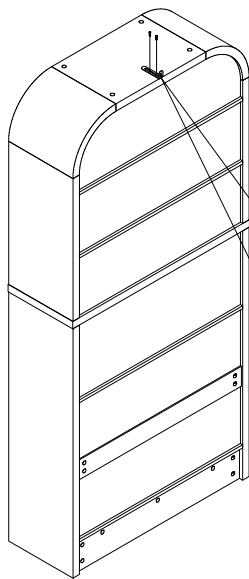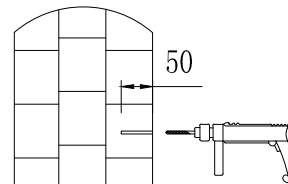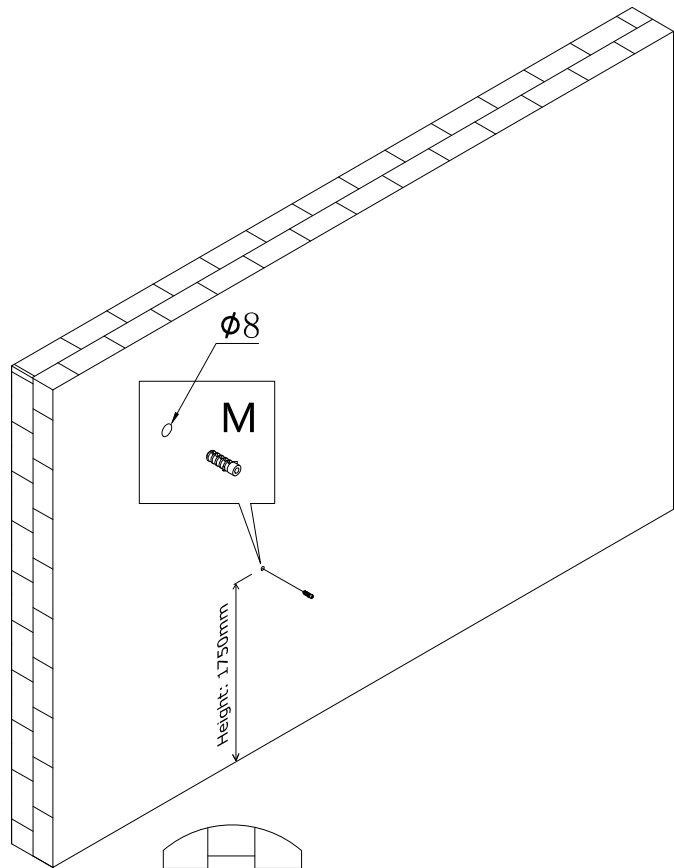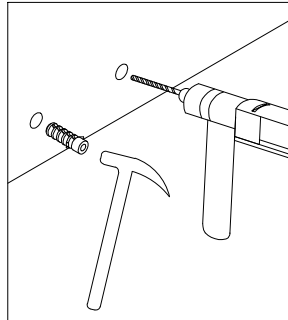

No. M  
Quantity: 1 Sets



**Note:**  
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.