





Floor Bed








Assembly Instruction

Version:1.0



1.Installation precautions

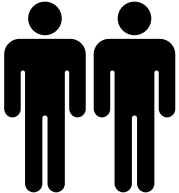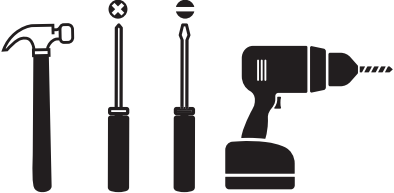
 2 PERS.	 Tools required (not included)
--	--

2.Matters needing attention

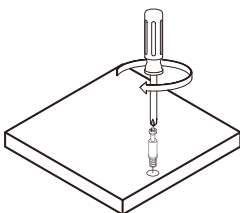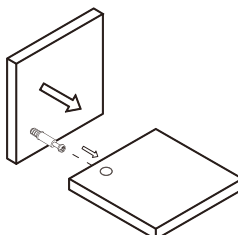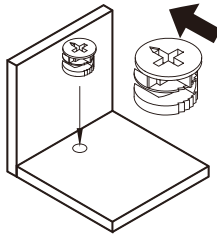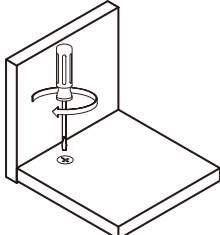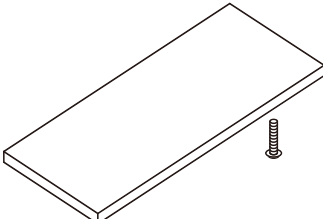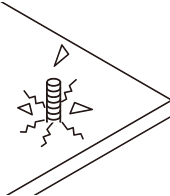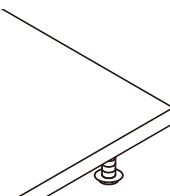
⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: - ALWAYS install Anti-tip device provided. - NEVER put a TV on this product. - NEVER allow children to stand, climb or hang on drawers, doors, or shelves. - NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers.
	This is a permanent label. Do not remove!
Cam Lock Fastening System Insert the cam bolt into the hole first, then insert the cam lock and lock it. 1.  2.  3.  The opening must point toward the edge of the board 4.   Be sure to use the proper screws to avoid damaging the parts.  Wrong screws can cause the plank to crack  The right screw is the right size	

Please check that you have all the parts listed before starting assembly, if you find something missing, please stop the assembly and contact us immediately.

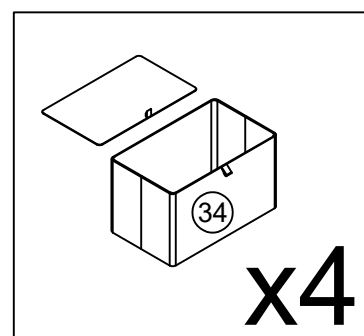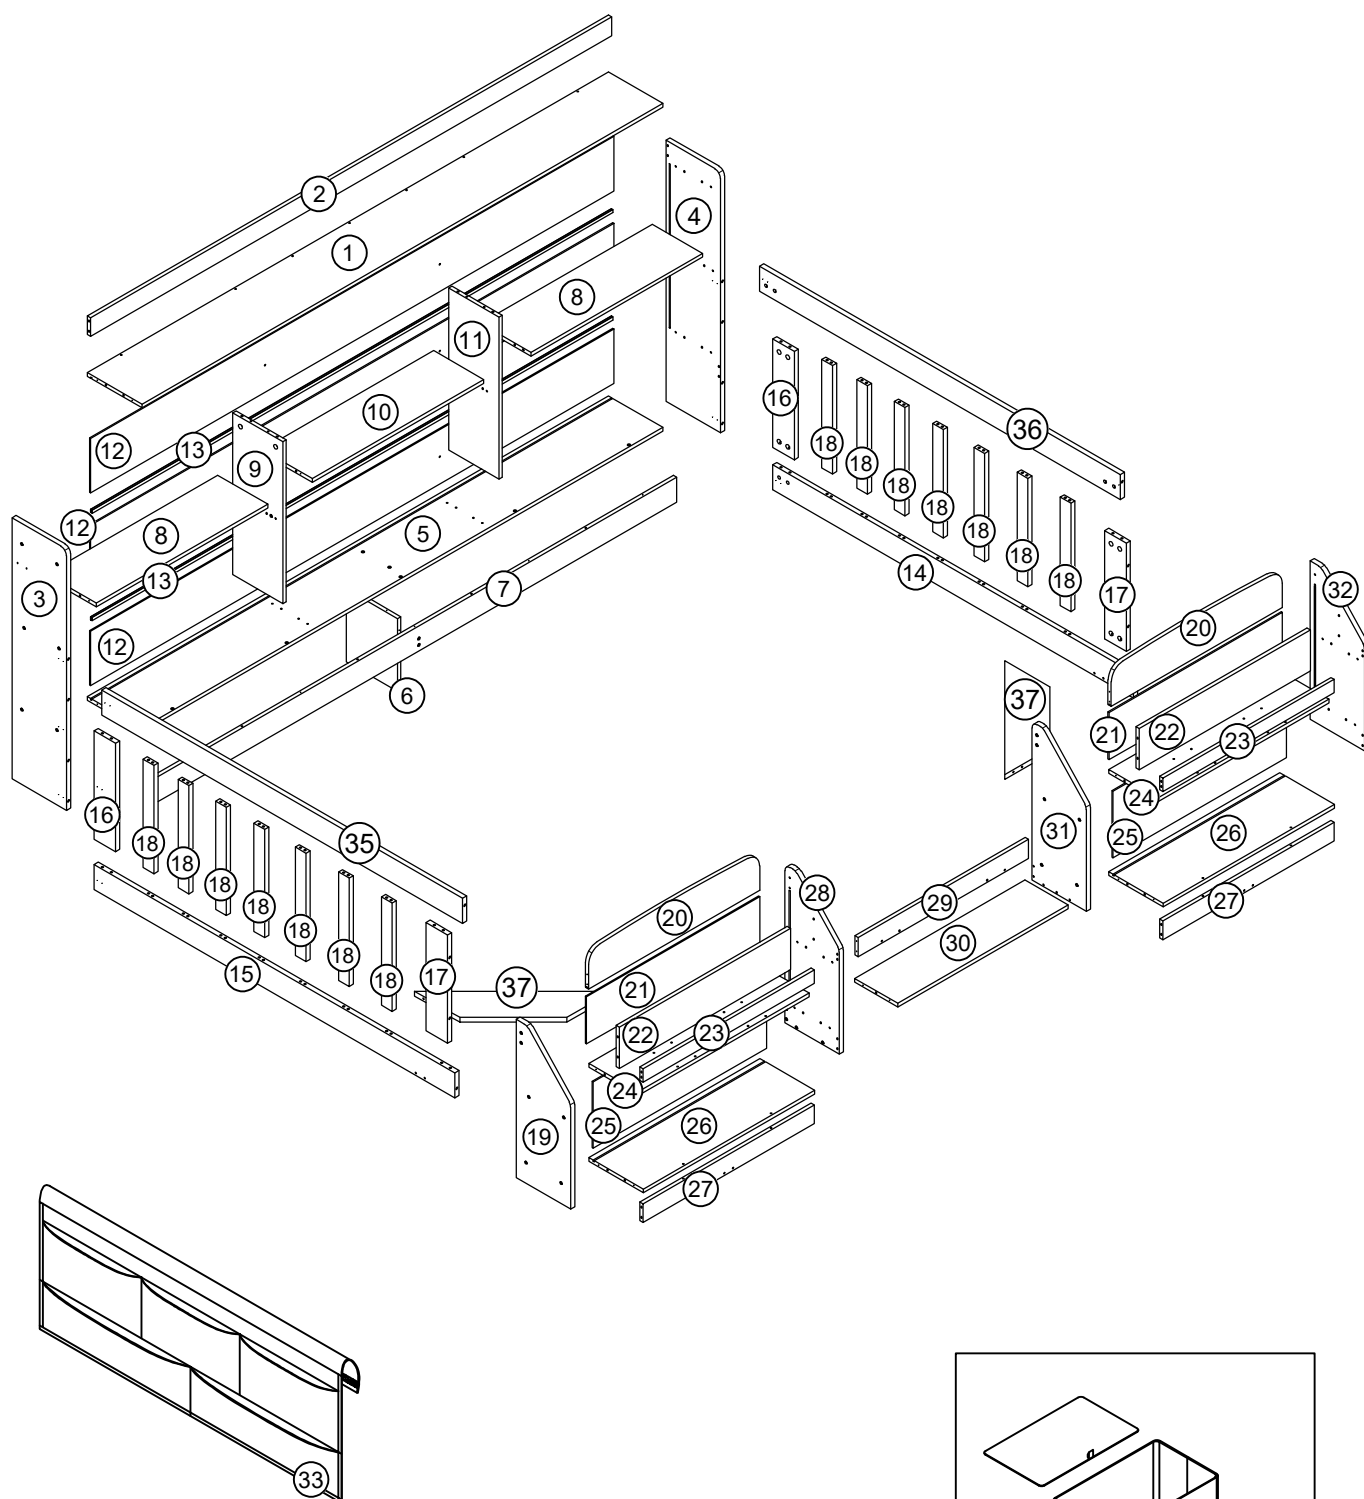

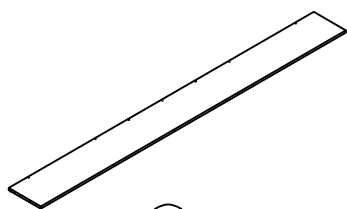

①
x1

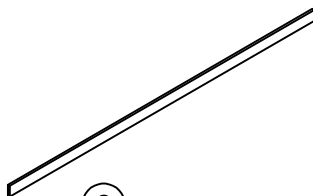


②
x1




③
x1




④
x1

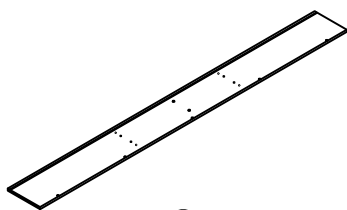


⑤
x1



⑥
x1

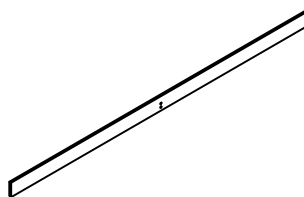


⑦
x1



⑧
x2




⑨
x1

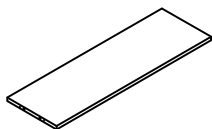


⑩
x1




⑪
x1

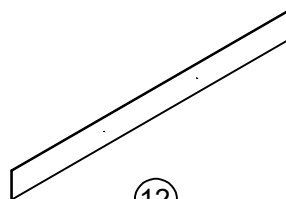


⑫
x3

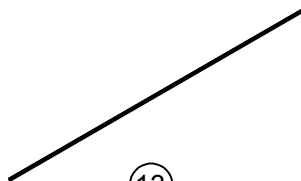


⑬
x2

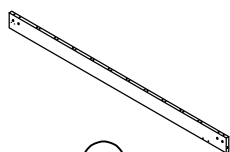

⑭
x1

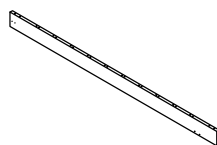


⑮
x1



⑯
x2




⑰
x2




⑱
x14




⑲
x1

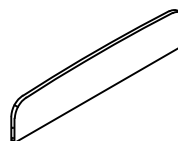


⑳
x2

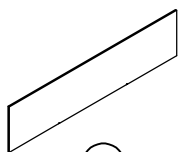


②①
x2

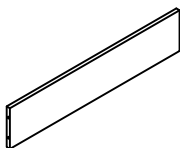


②②
x2

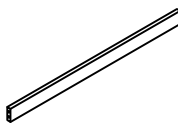


②③
x2

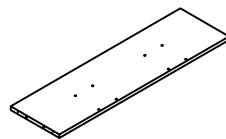


②④
x2

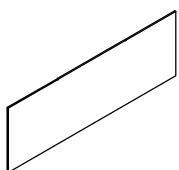

②⑤
x2

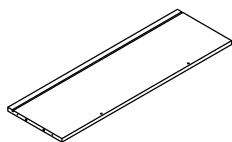


②⑥
x2

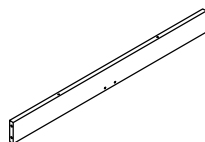


②⑦
x2



②⑧
x1

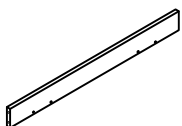

②⑨
x1

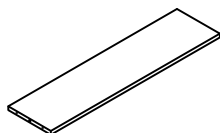


③⑩
x1




③①
x1




③②
x1

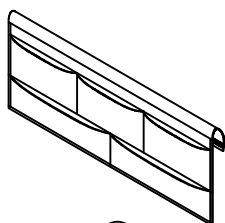


③③
x1

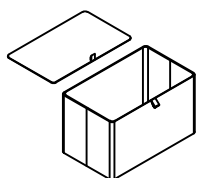


③④
x4

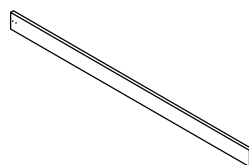

③⑤
x1

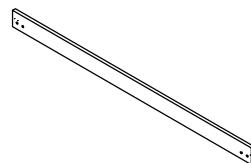

③⑥
x1



③⑦
x2

Installation Parts




A
x8(+2)
6x35mm



B
x24(+2)
15x9mm



C
x88(+9)
6x30mm

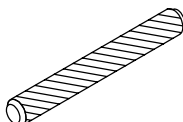

D
x4(+1)
6x50mm




E
x72(+7)
8x30mm




F
x48(+5)
3.5x12mm




G
x65(+6)
20mm



H
x20
30x12mm




I
x4



J
x10



K
x78(+7)
4x40mm




L
x34(+3)




M
x34(+3)
3x14mm



N
x16(+1)




O
x16(+1)



P
x10



Q
x10
3x12mm



R
x12
5x40mm






S
x4
4x12mm






T
x2





U
x2

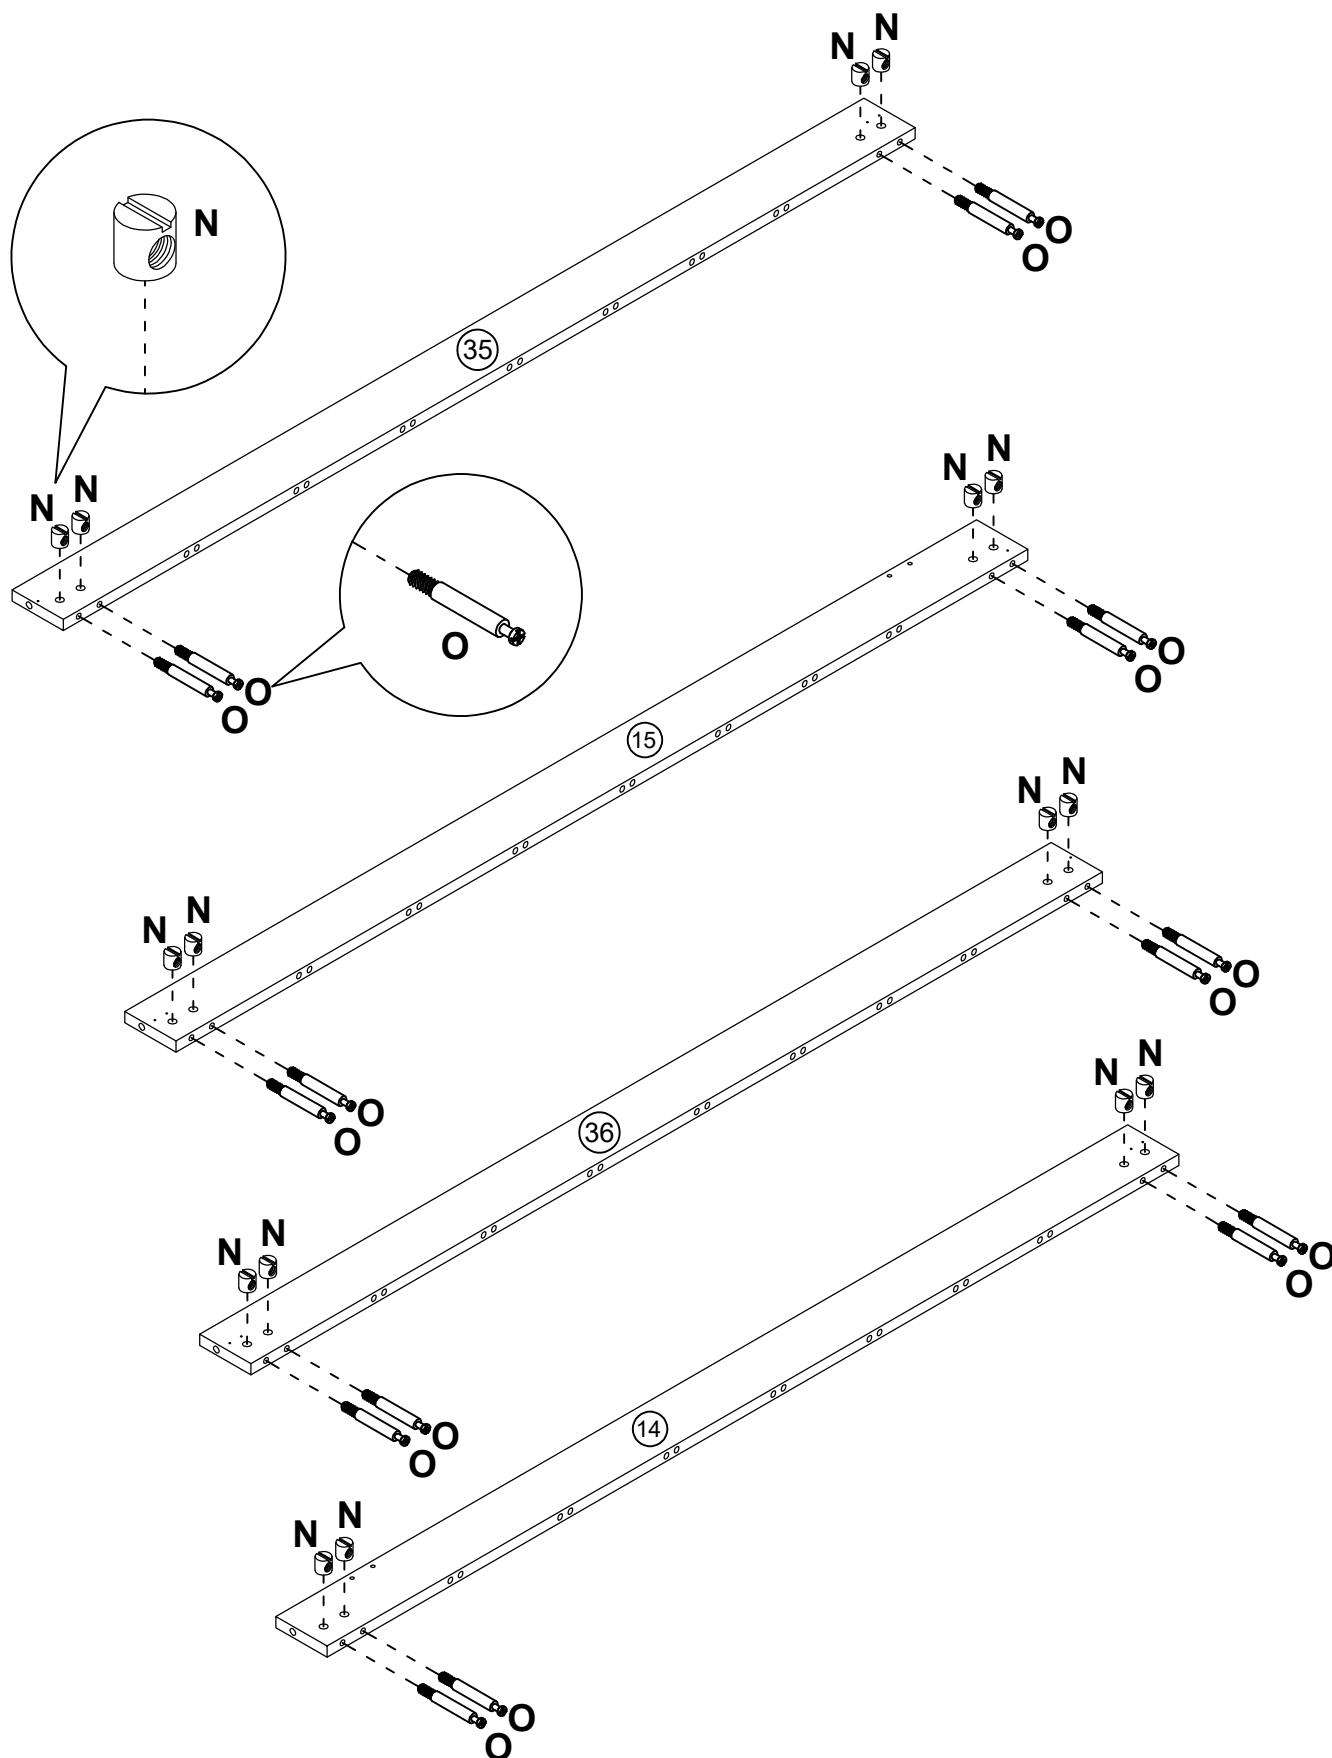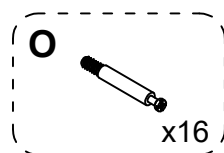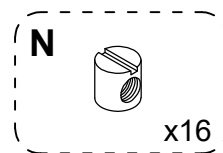

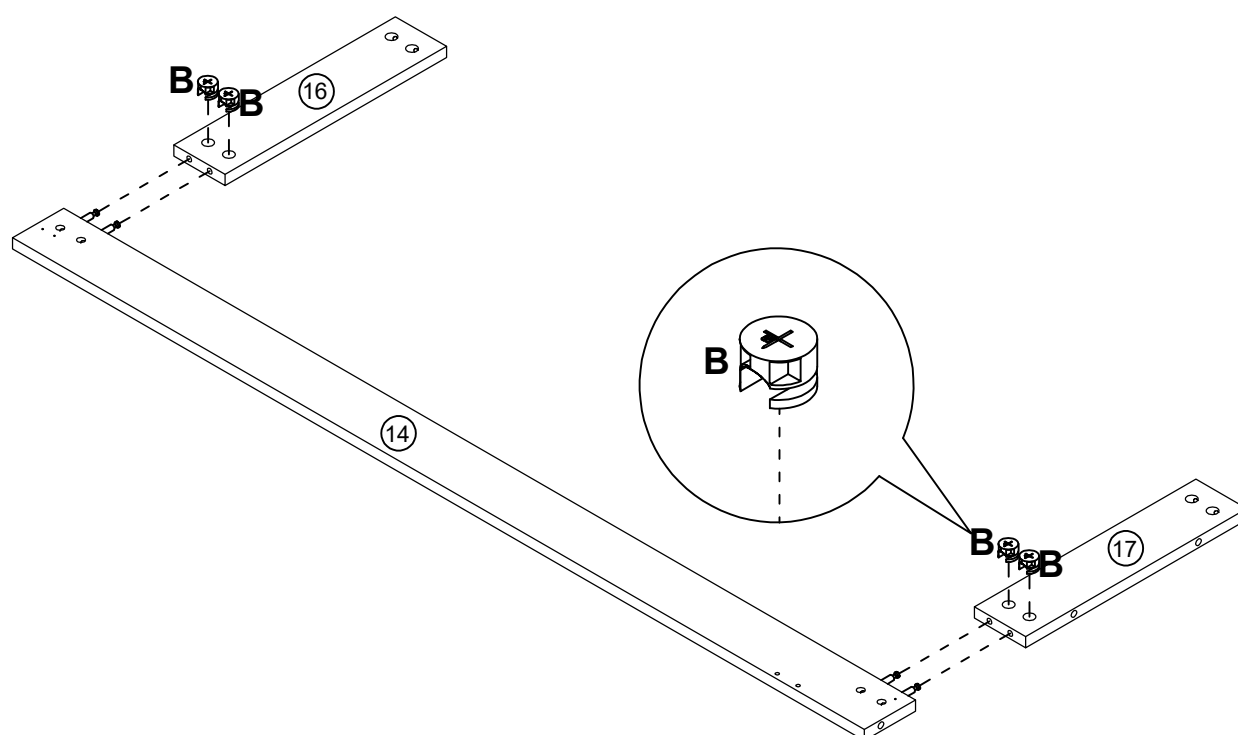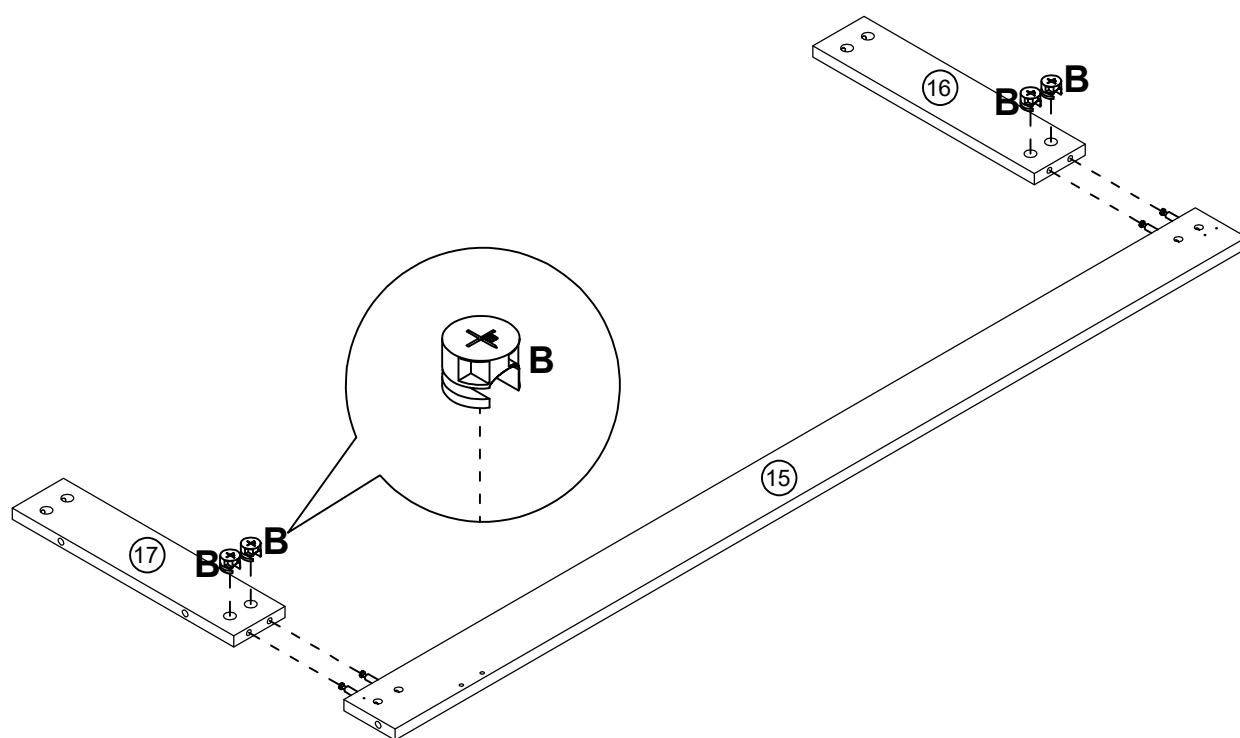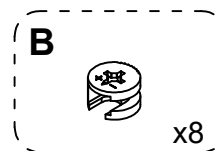



3

Note: In order to make the finished product more stable and solid, the mortise holes at both ends of part #18 will be slightly tighter. When installing, you need to use a tool and apply a certain amount of force to assist in the installation.

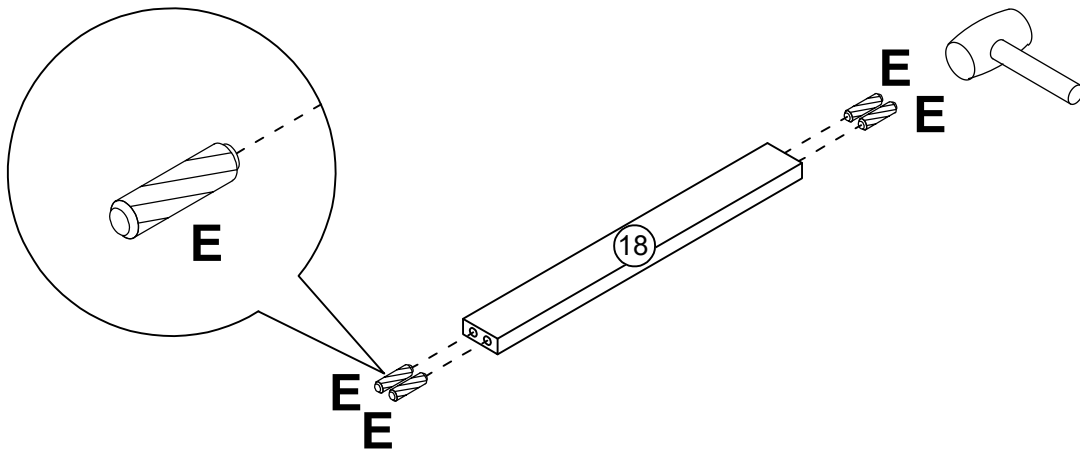
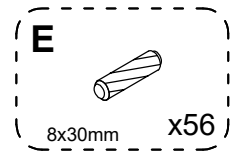




x14




4

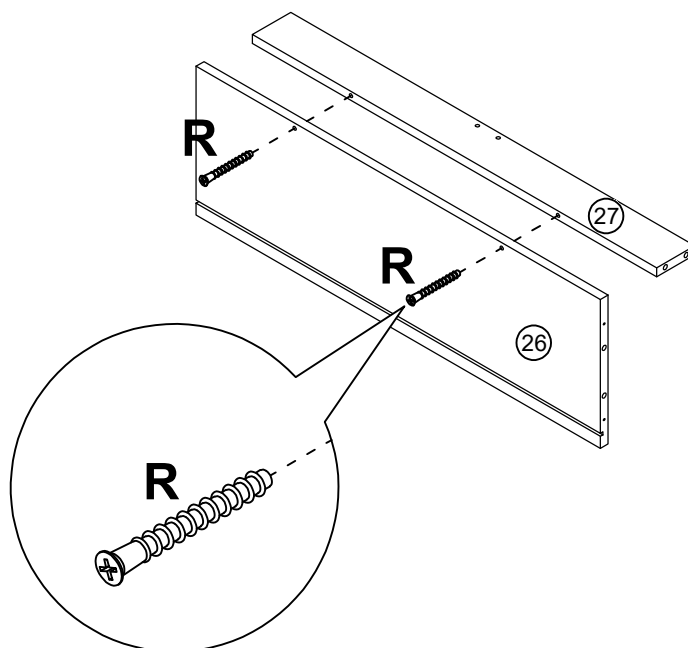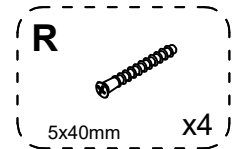



x2

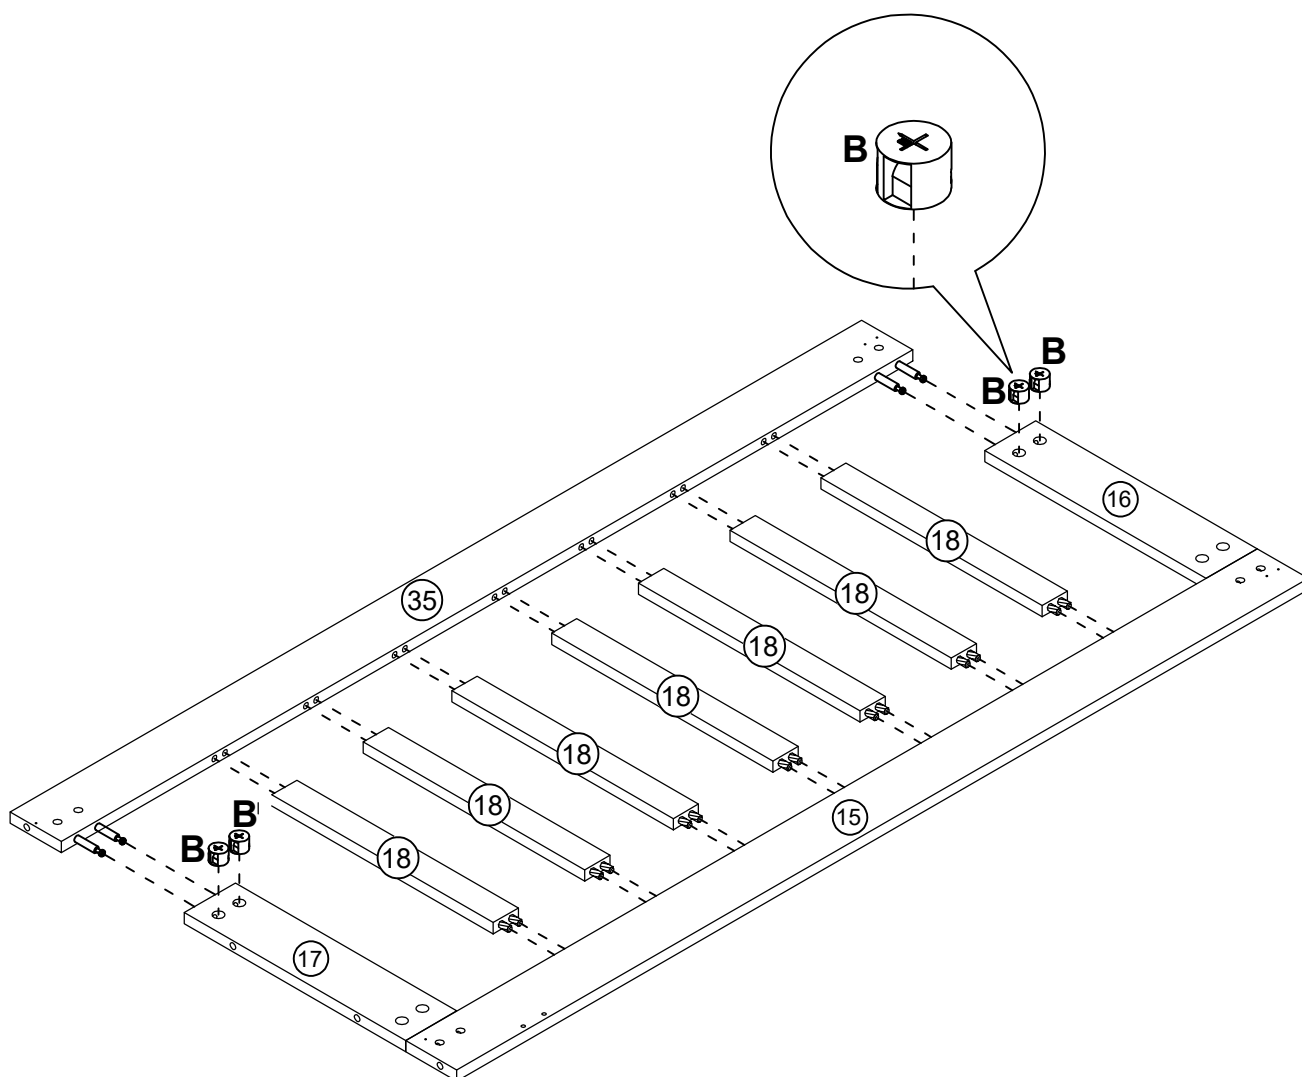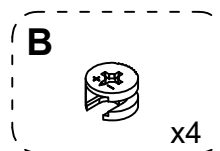

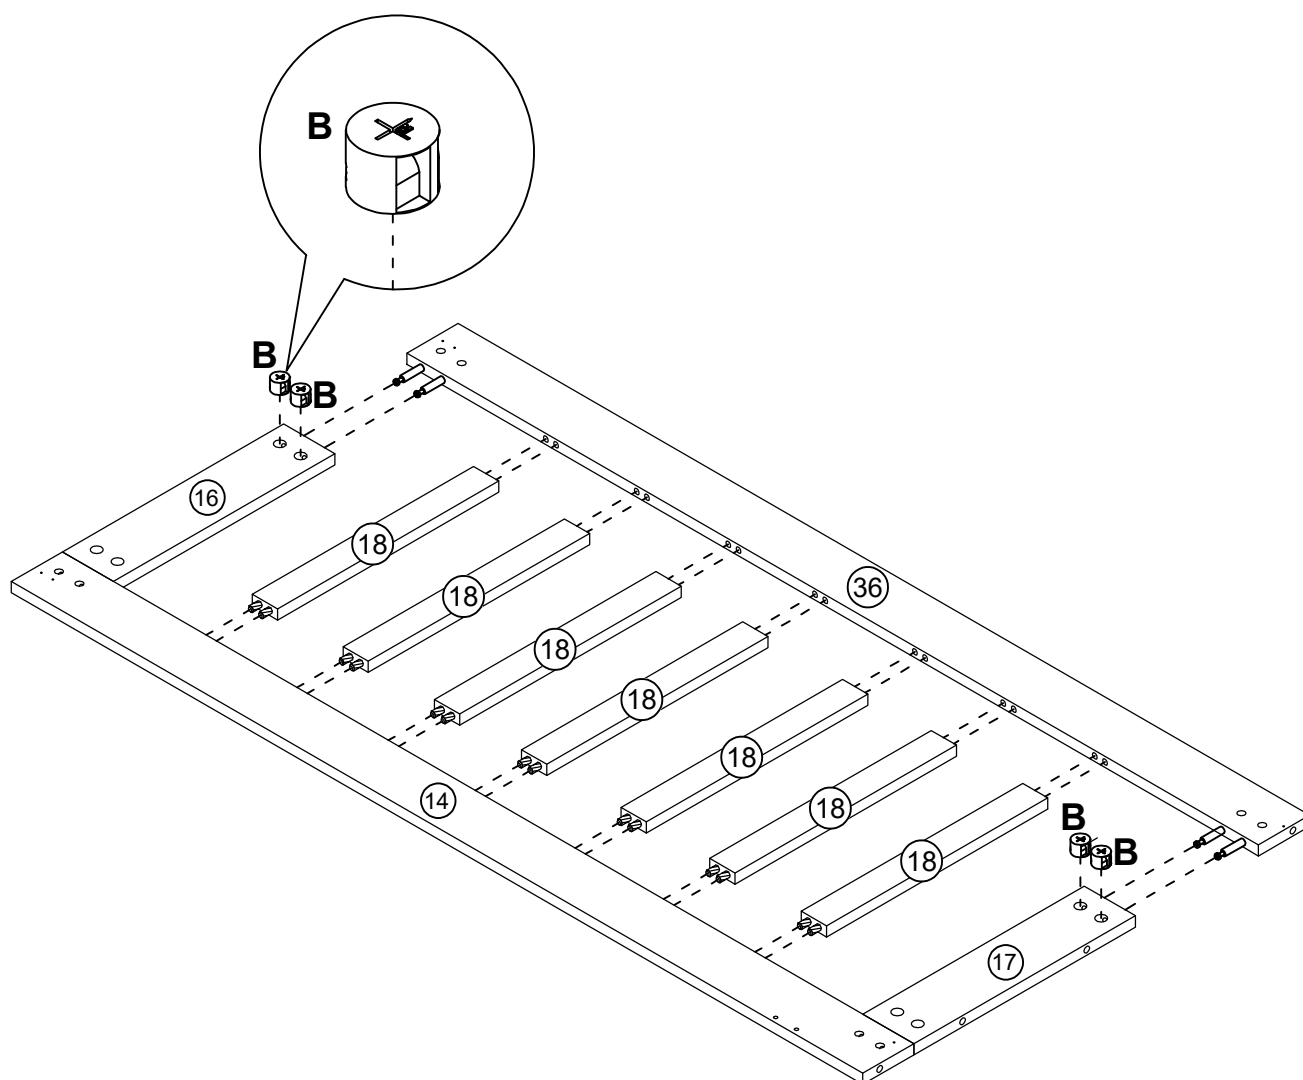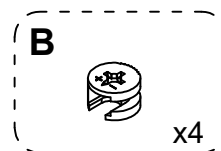


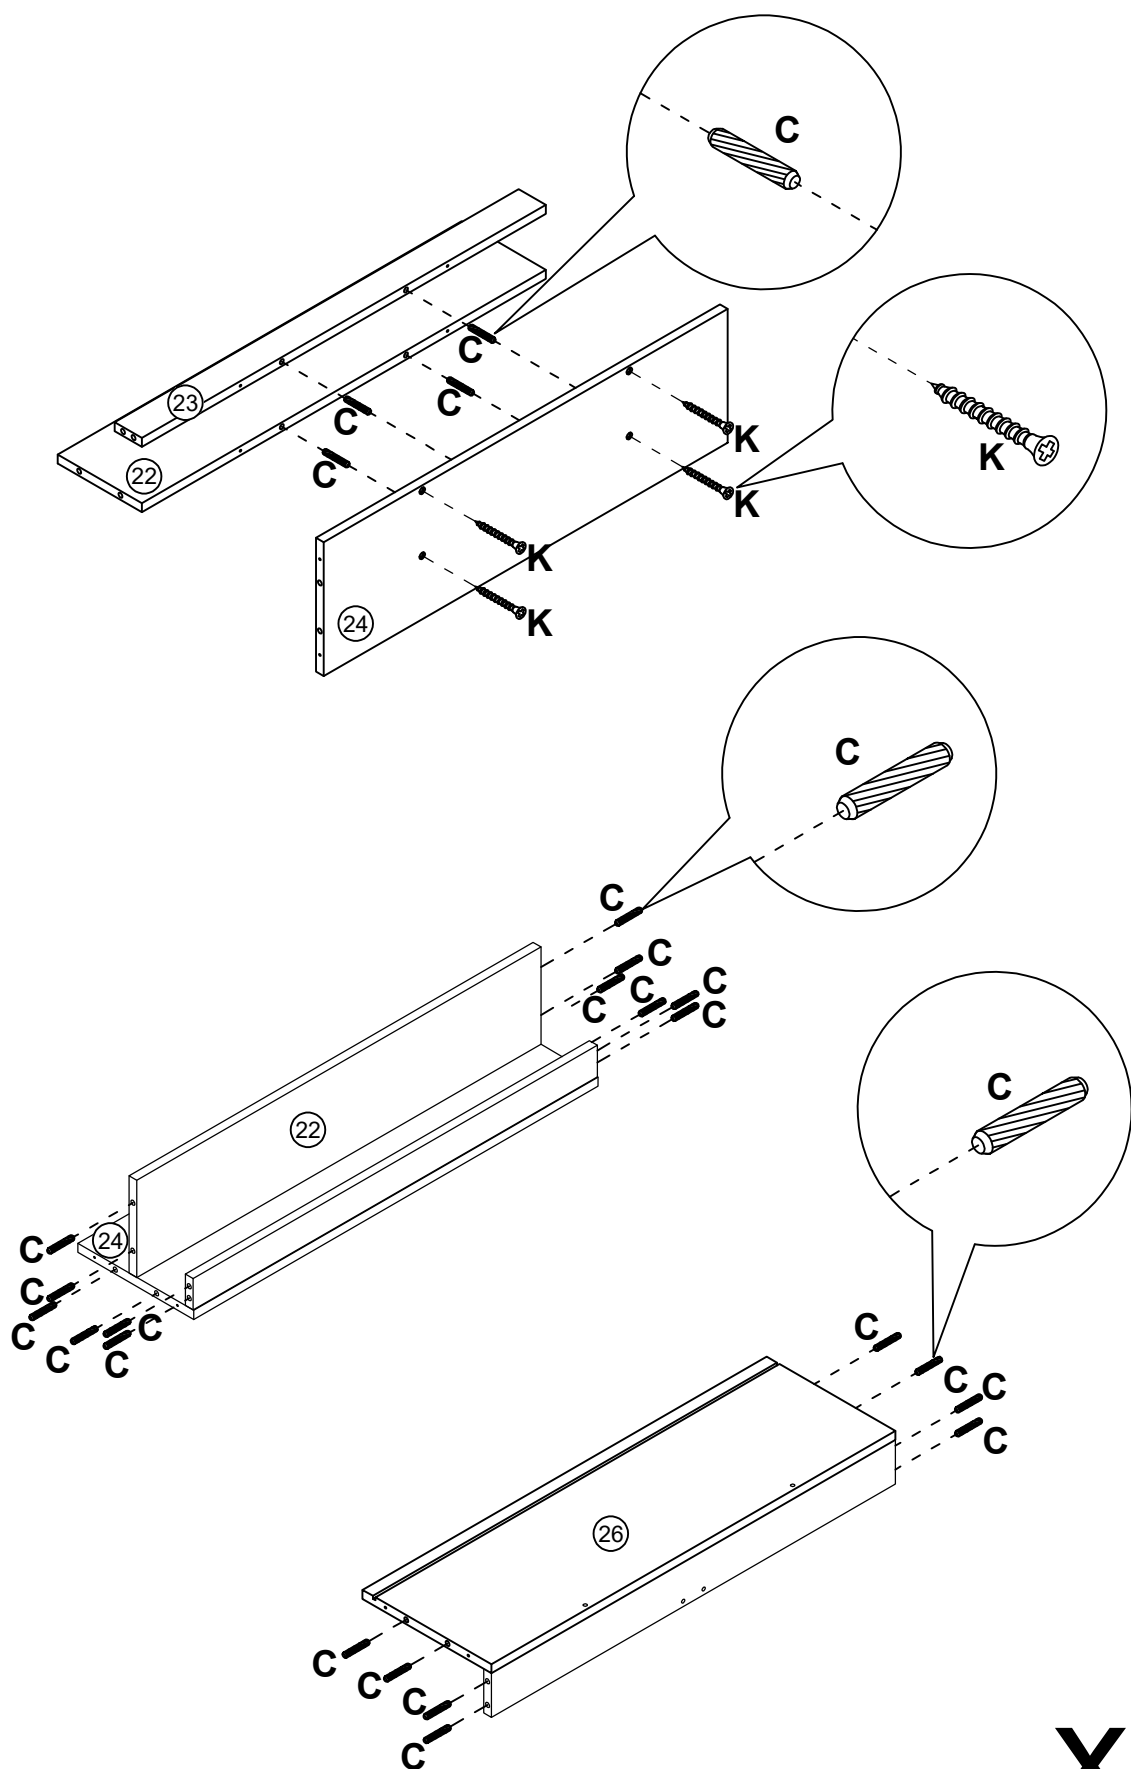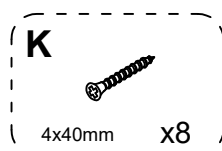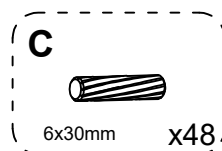




x2


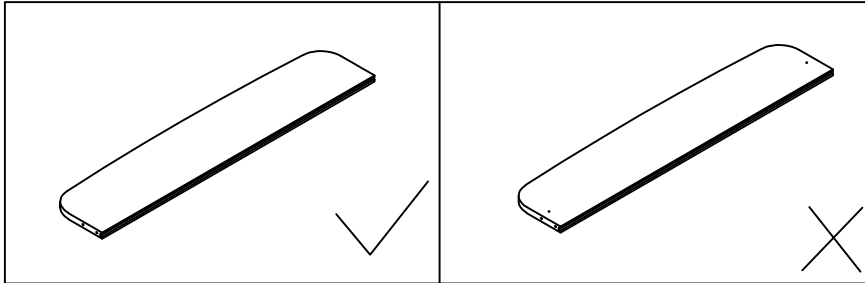
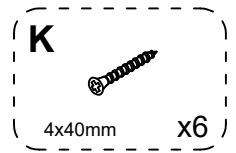




The side without a small lead hole shown in the above figure faces upward.


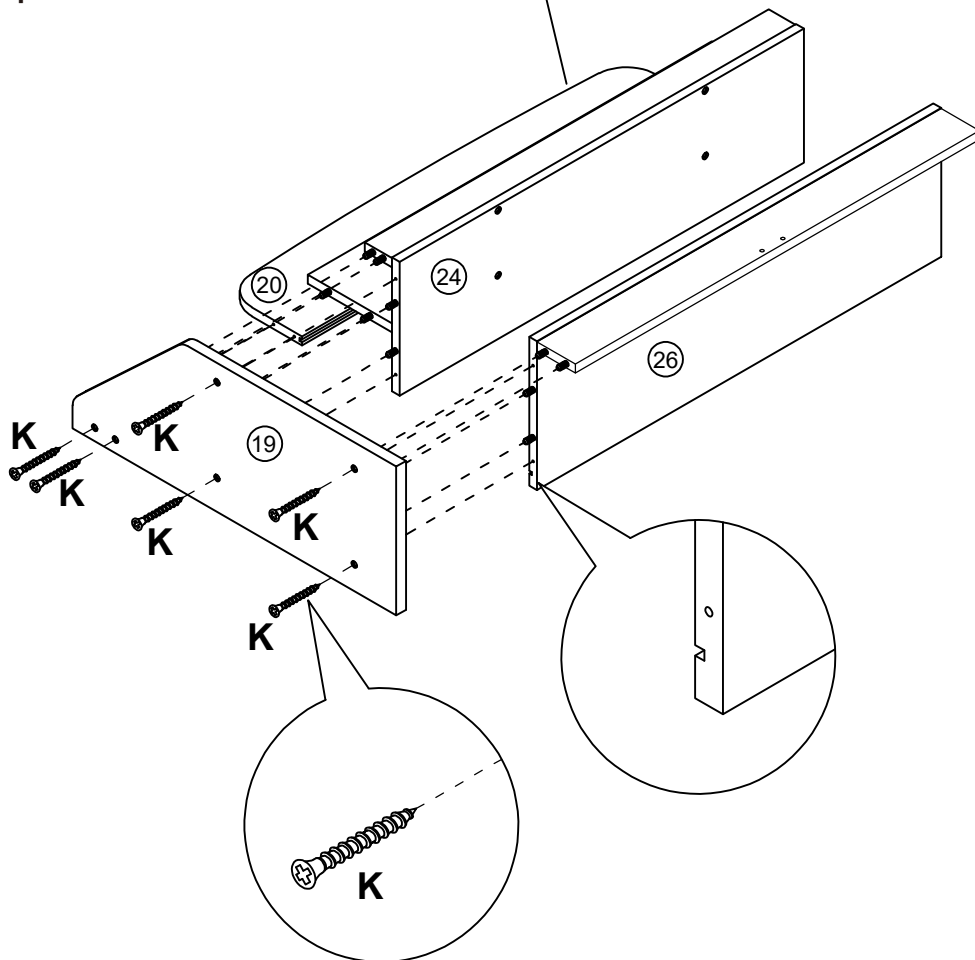




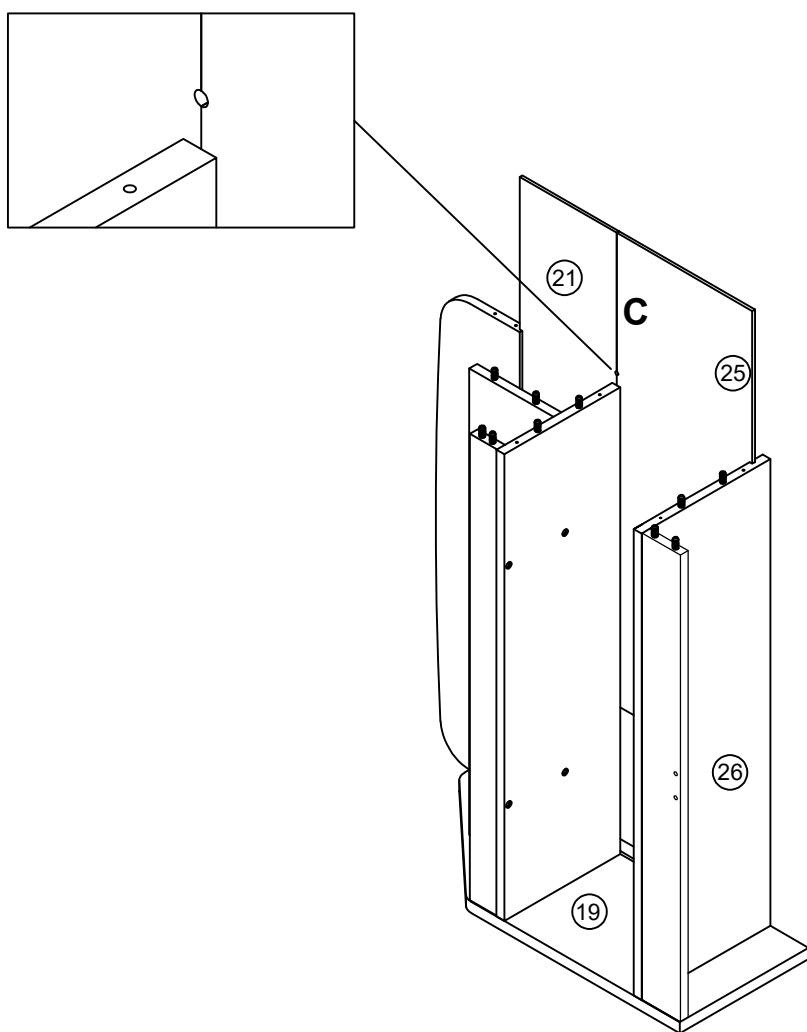



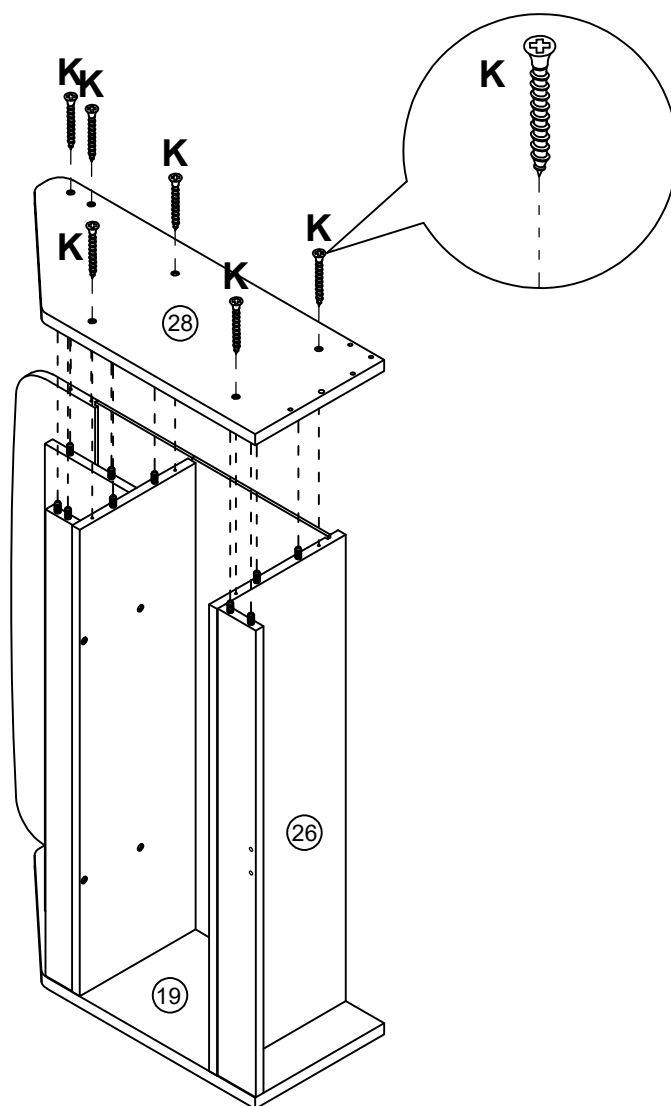
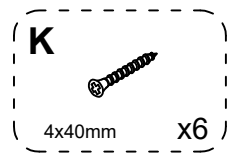


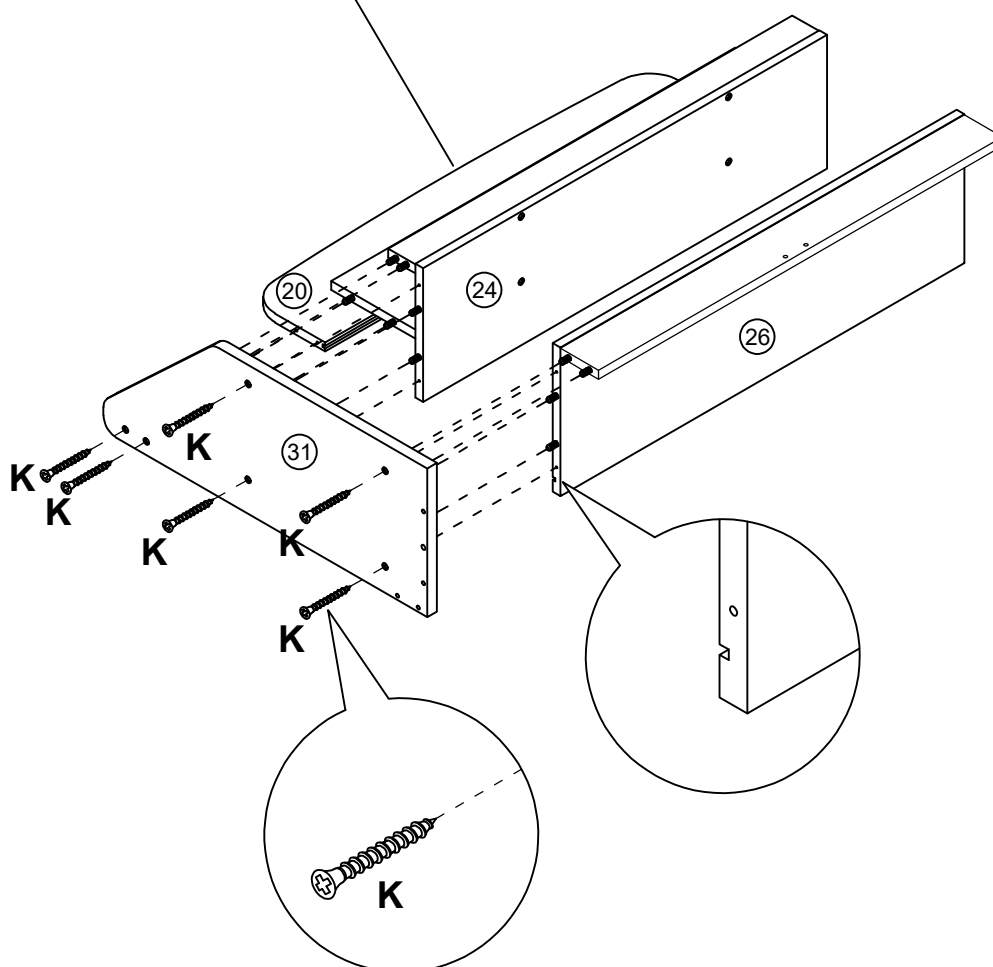
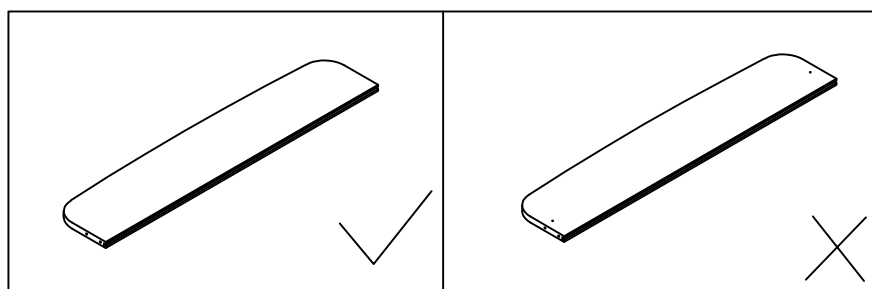
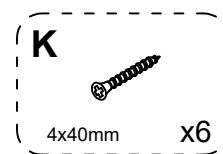



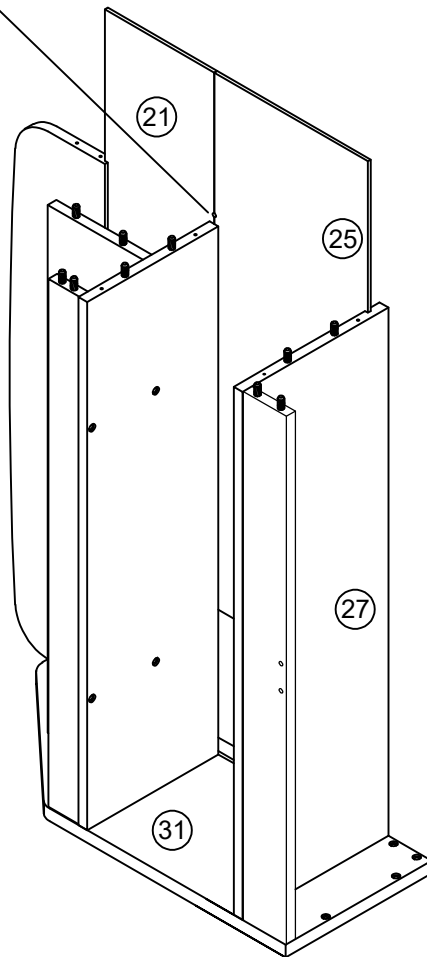
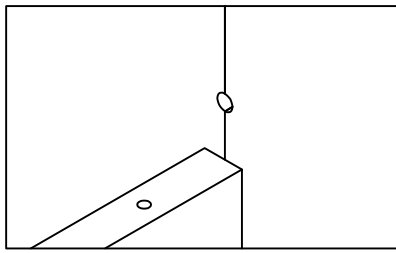


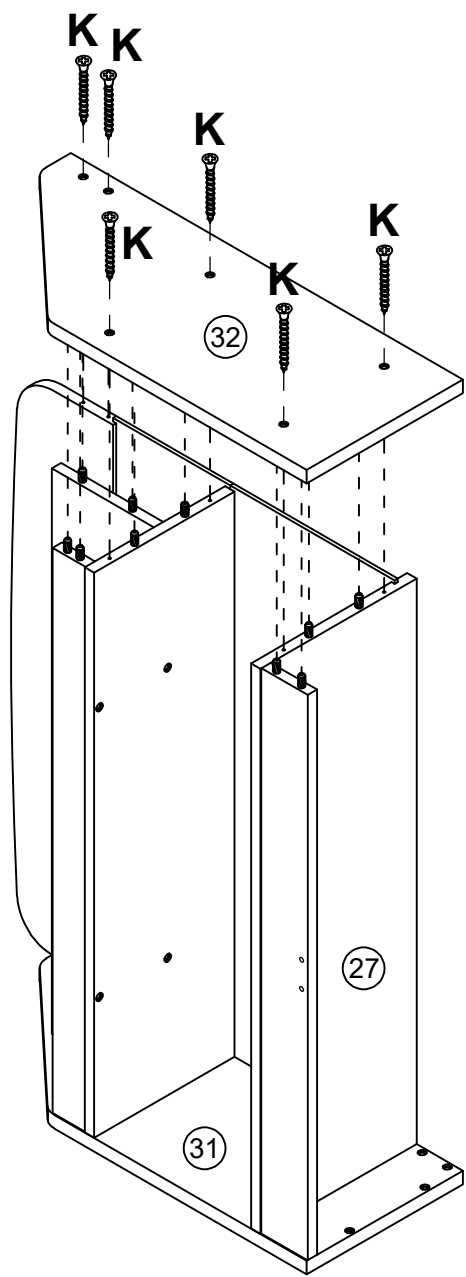
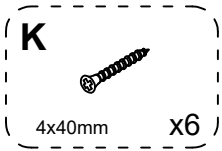


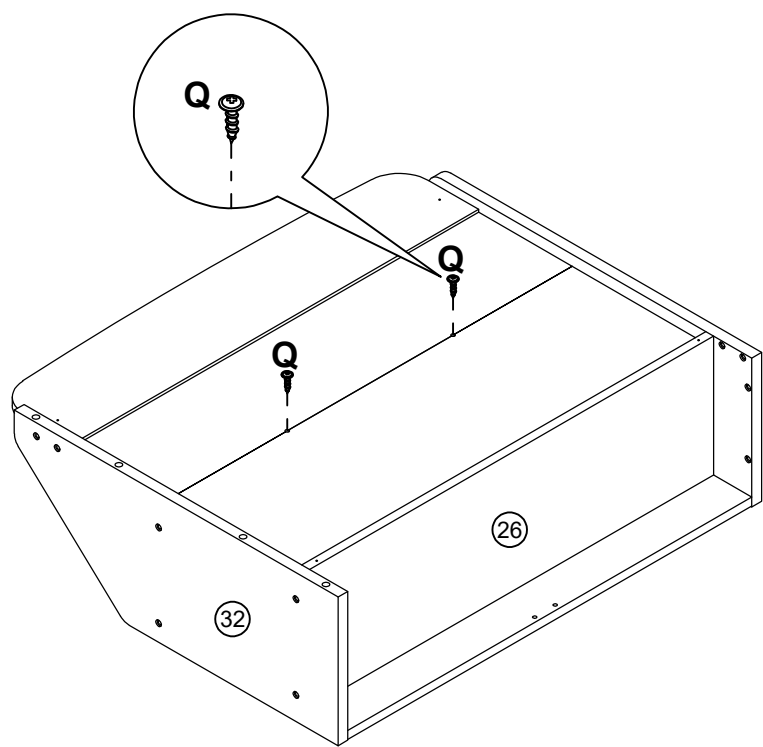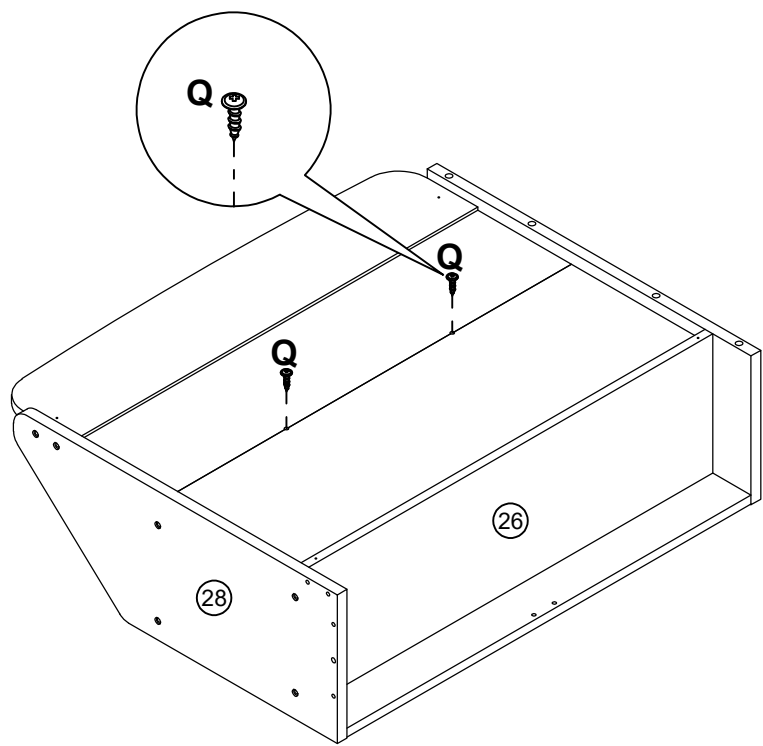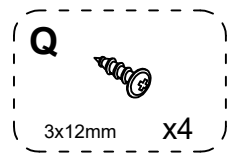

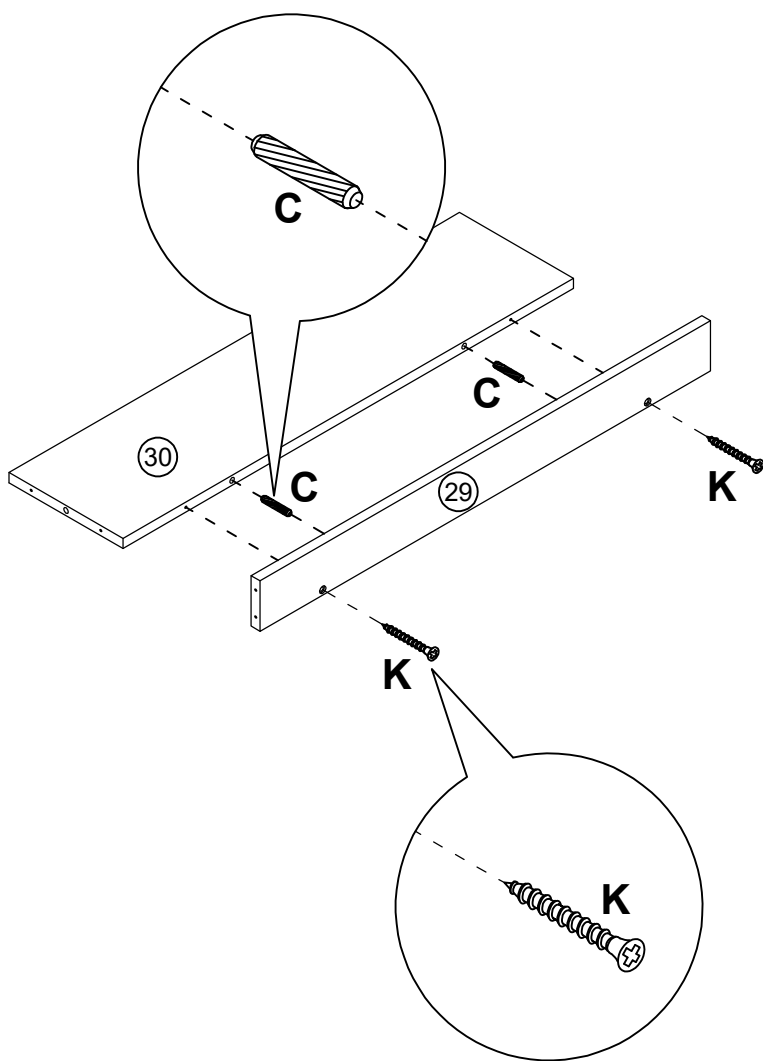
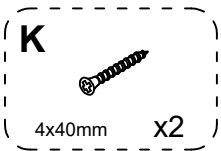
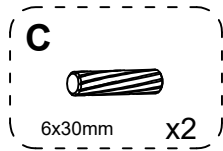


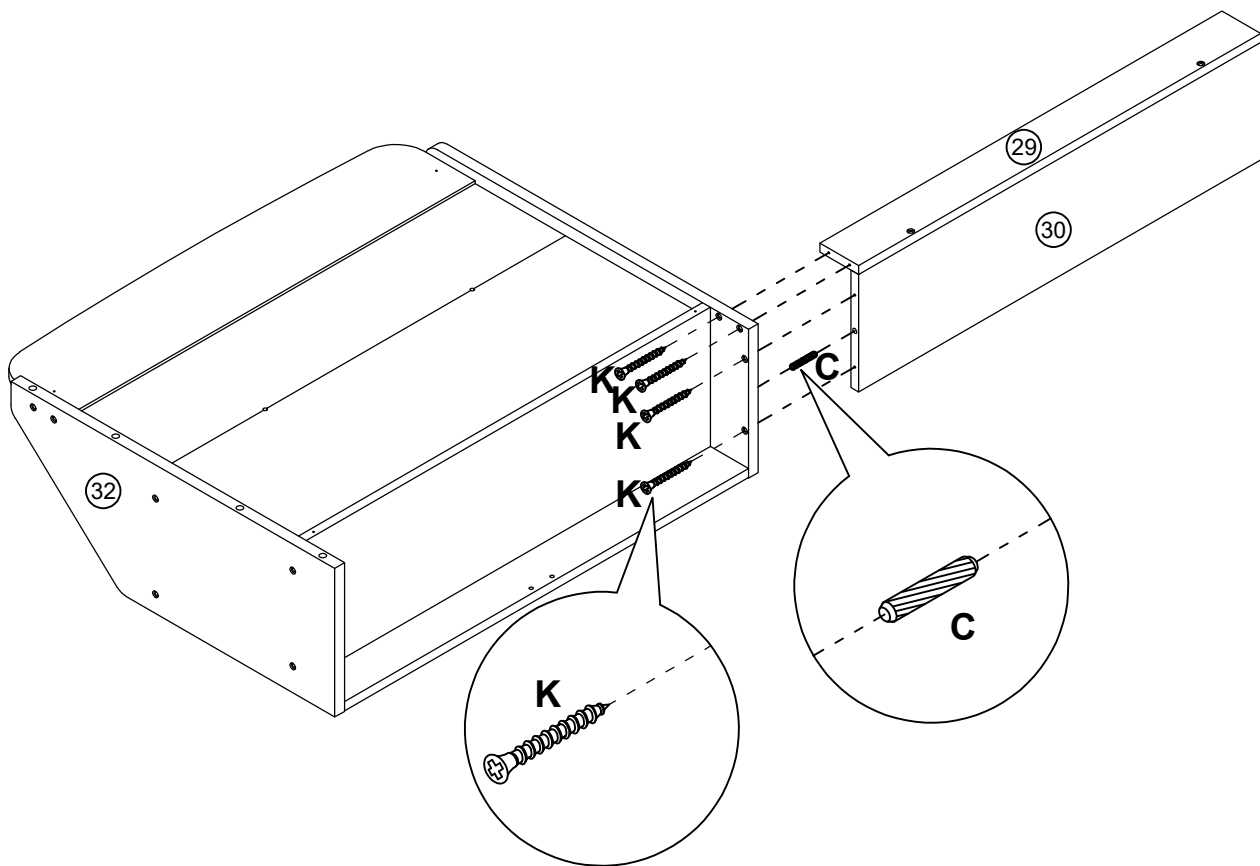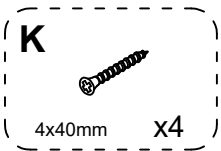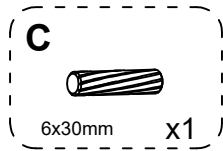

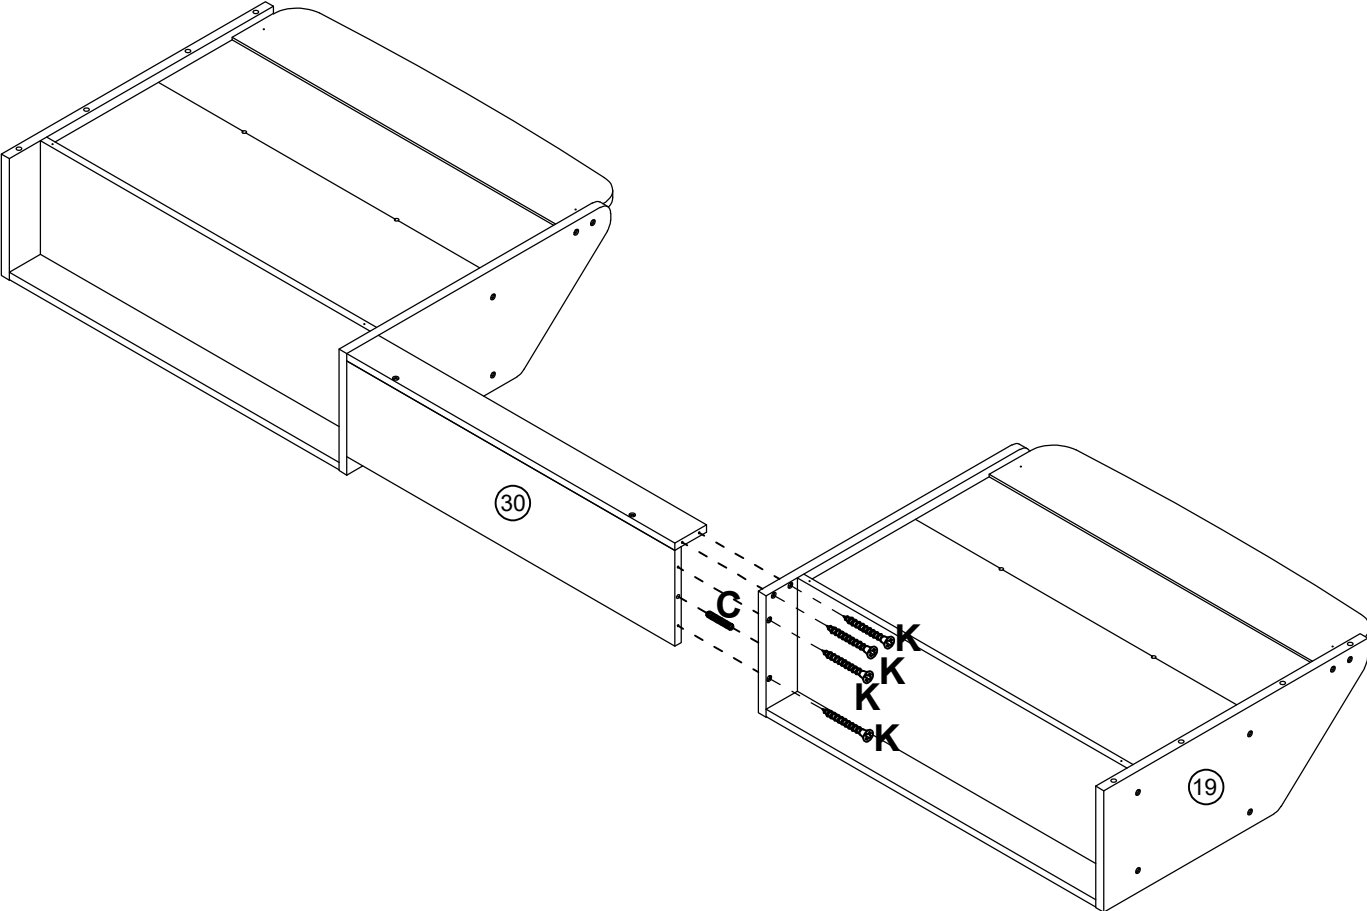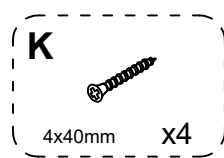
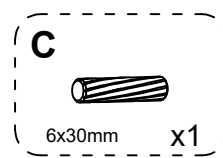




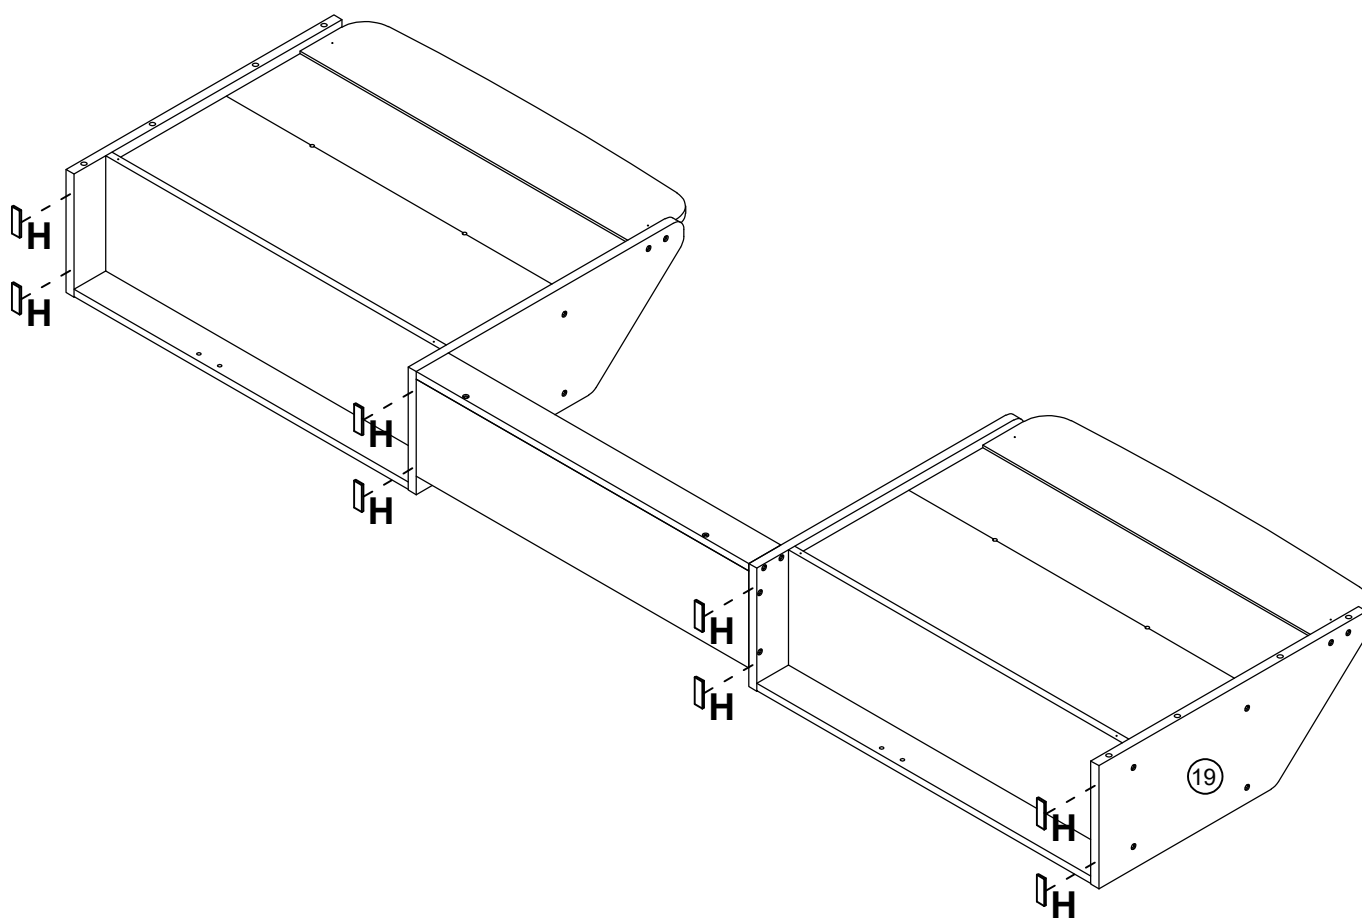
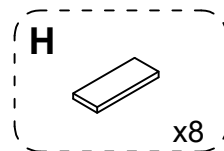




Peel off the film and stick it to the bottom of the cabinet feet.


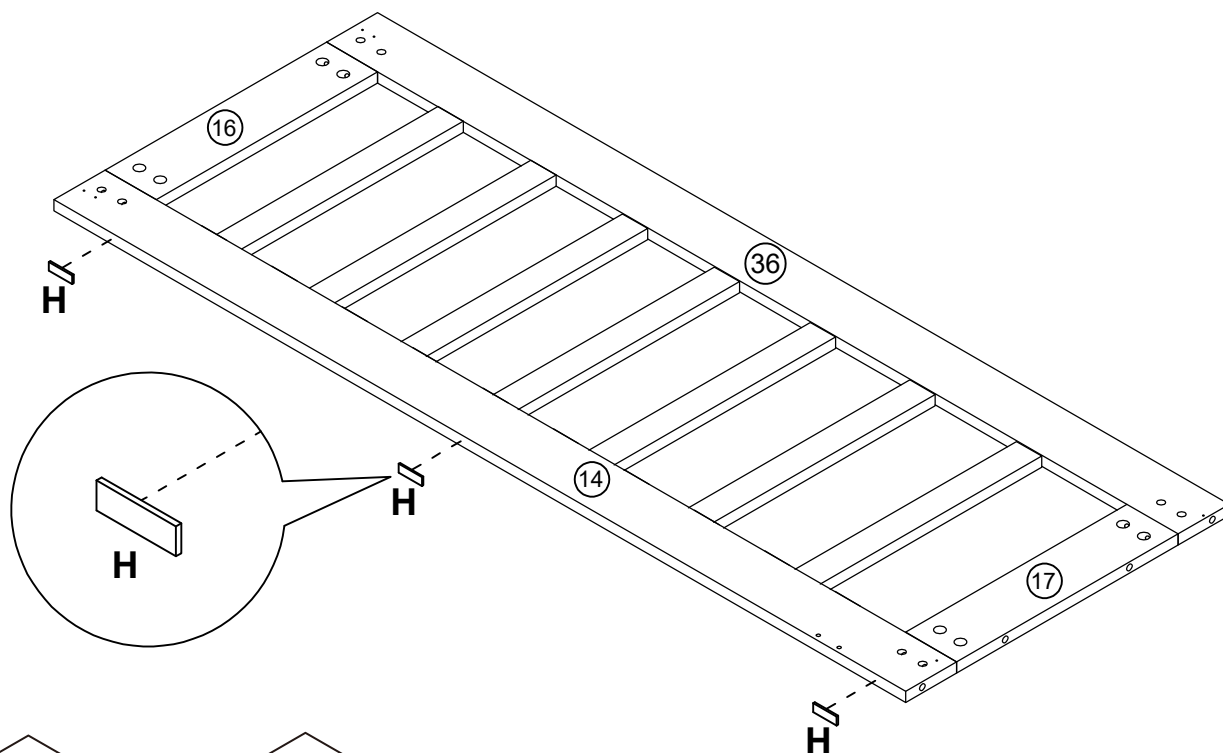
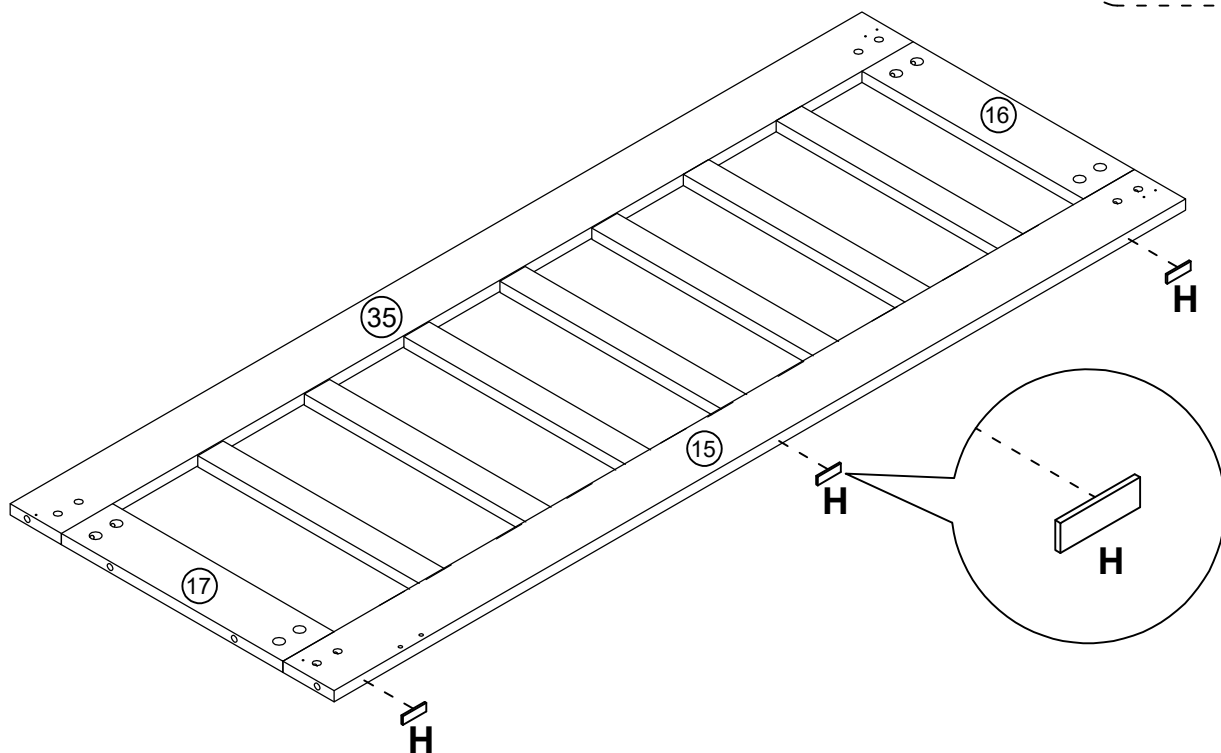
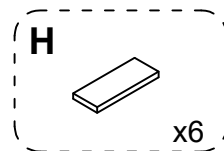








Peel off the film and stick it to the bottom of the cabinet feet.

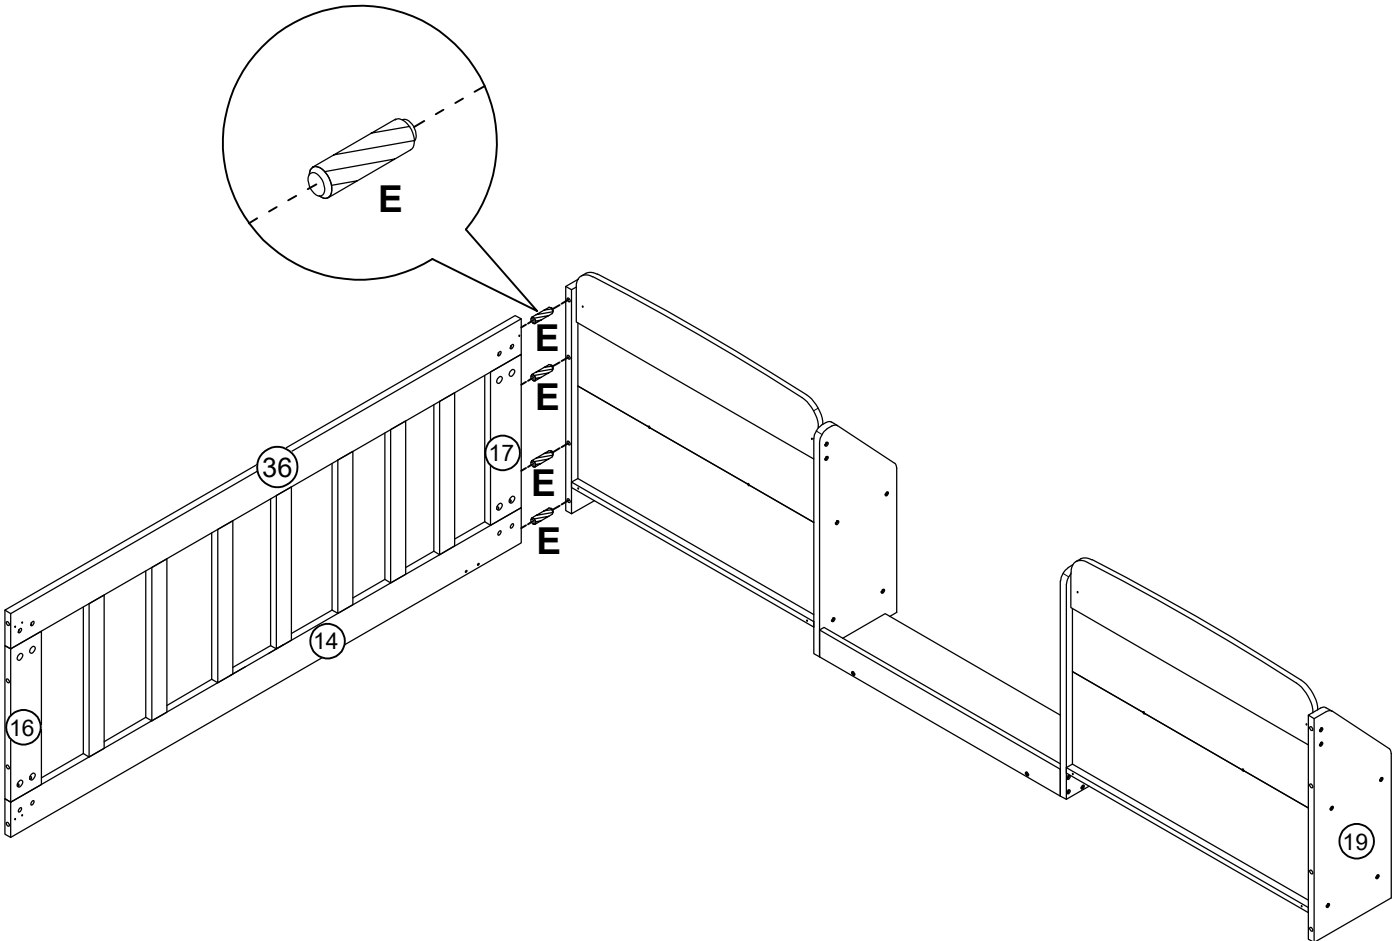
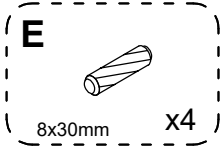


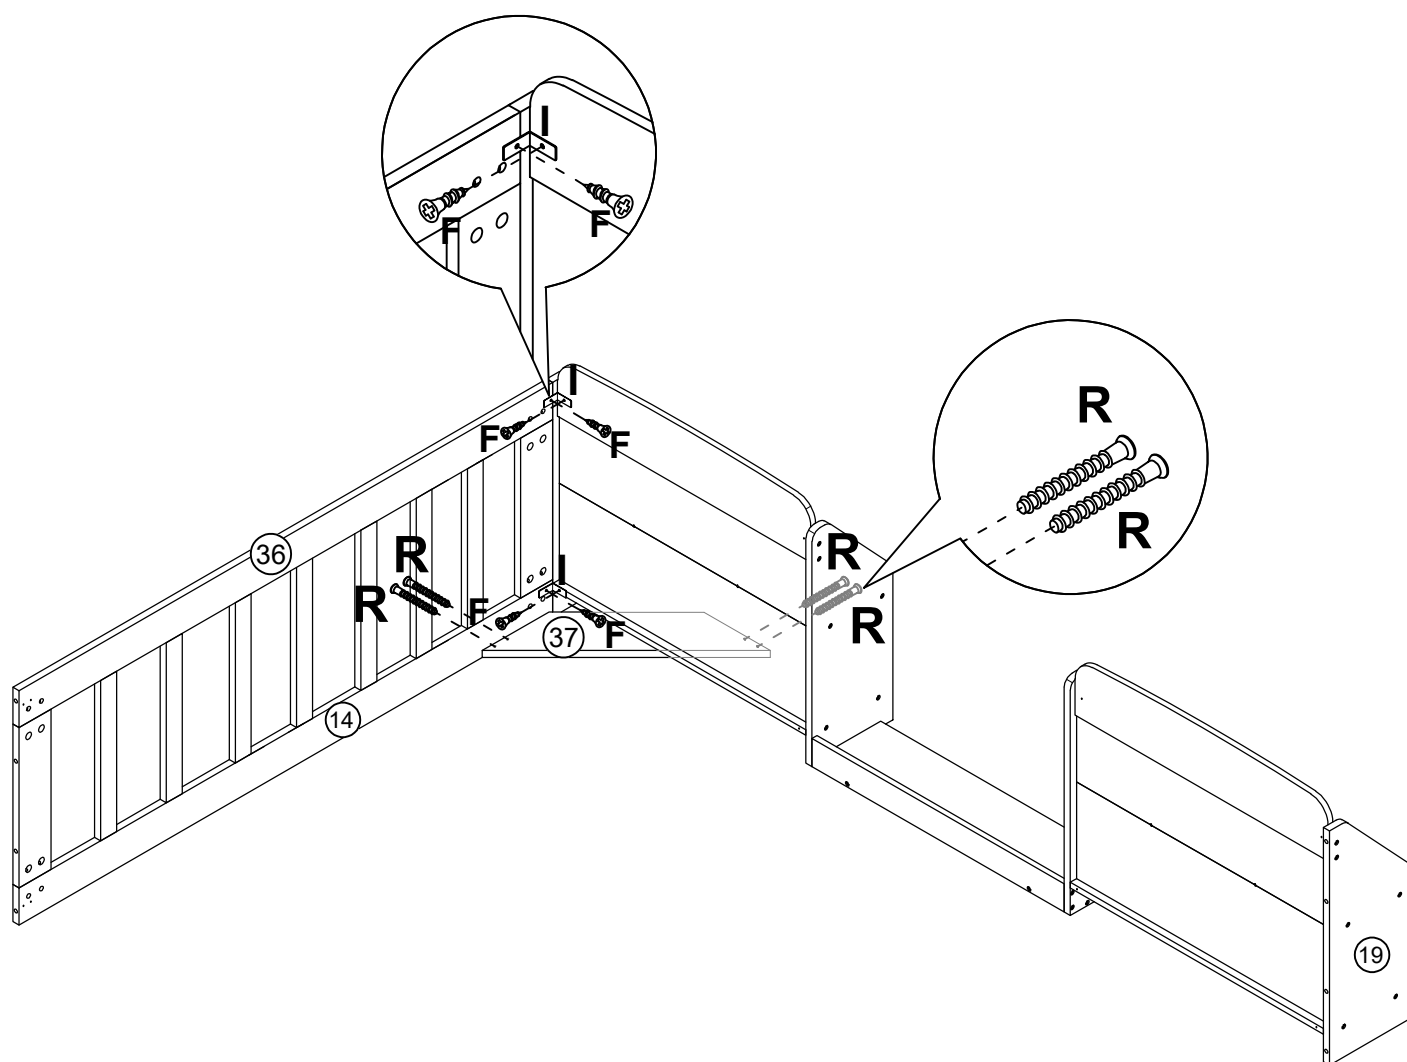
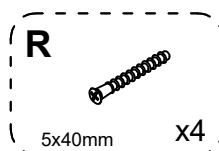
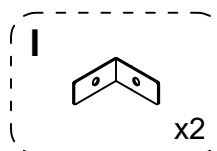
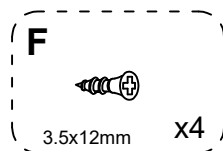



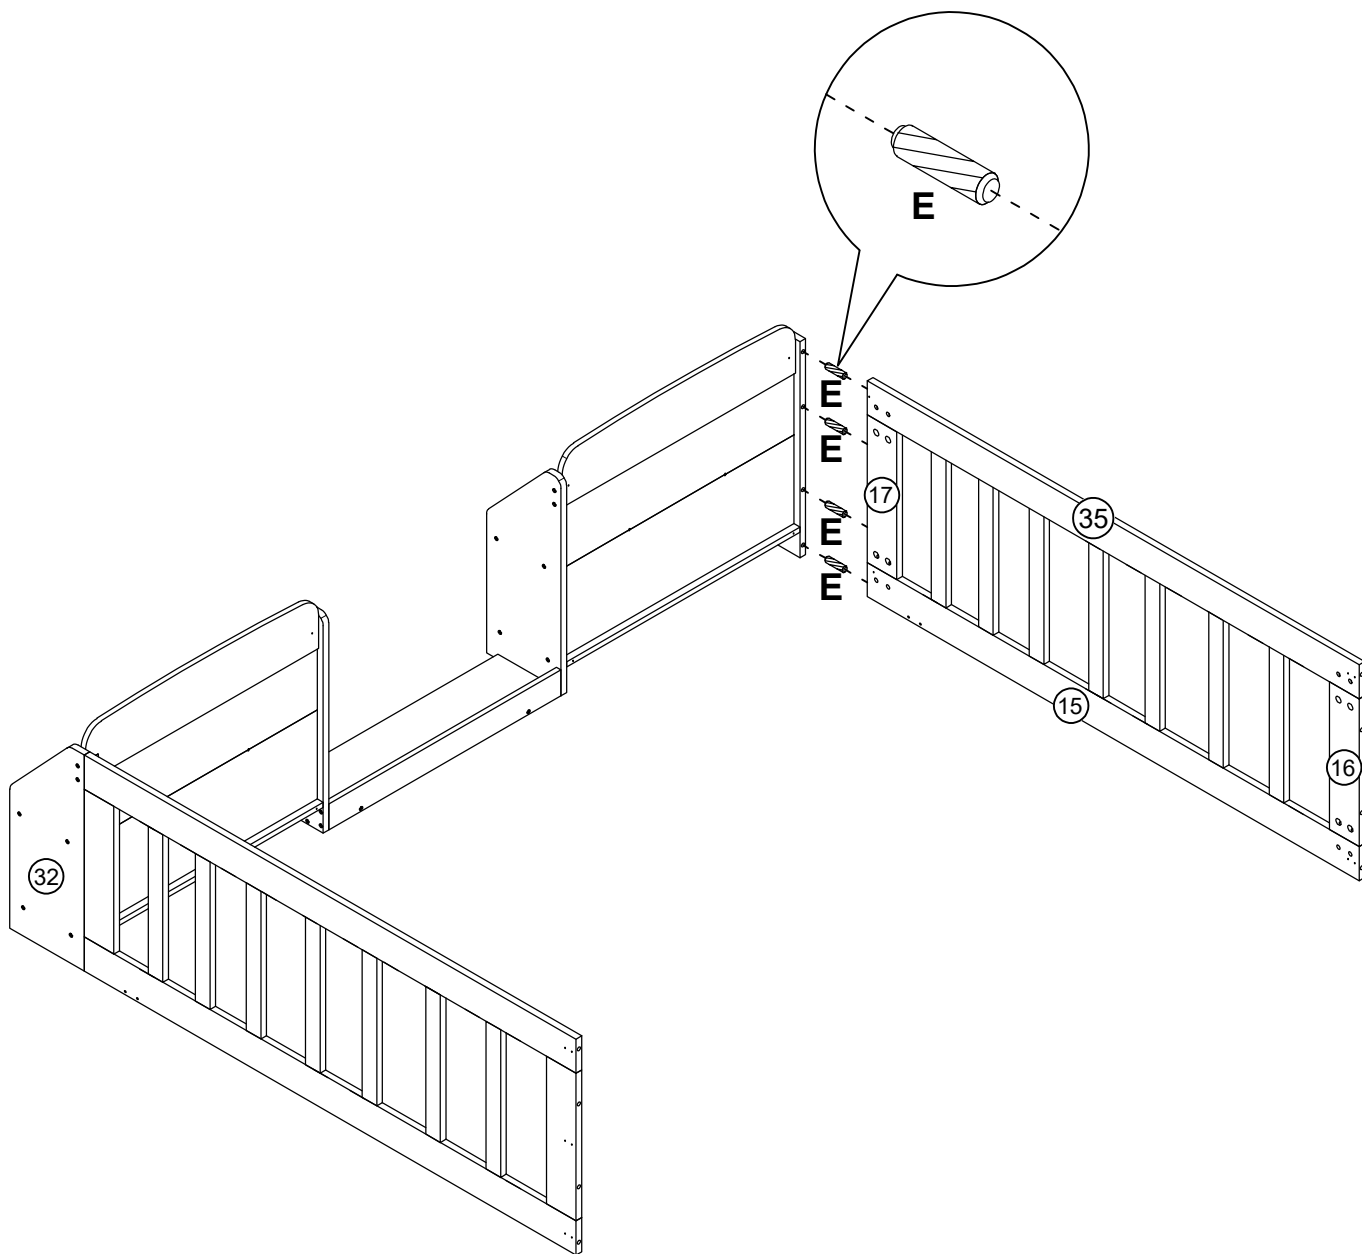
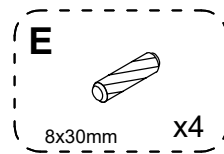


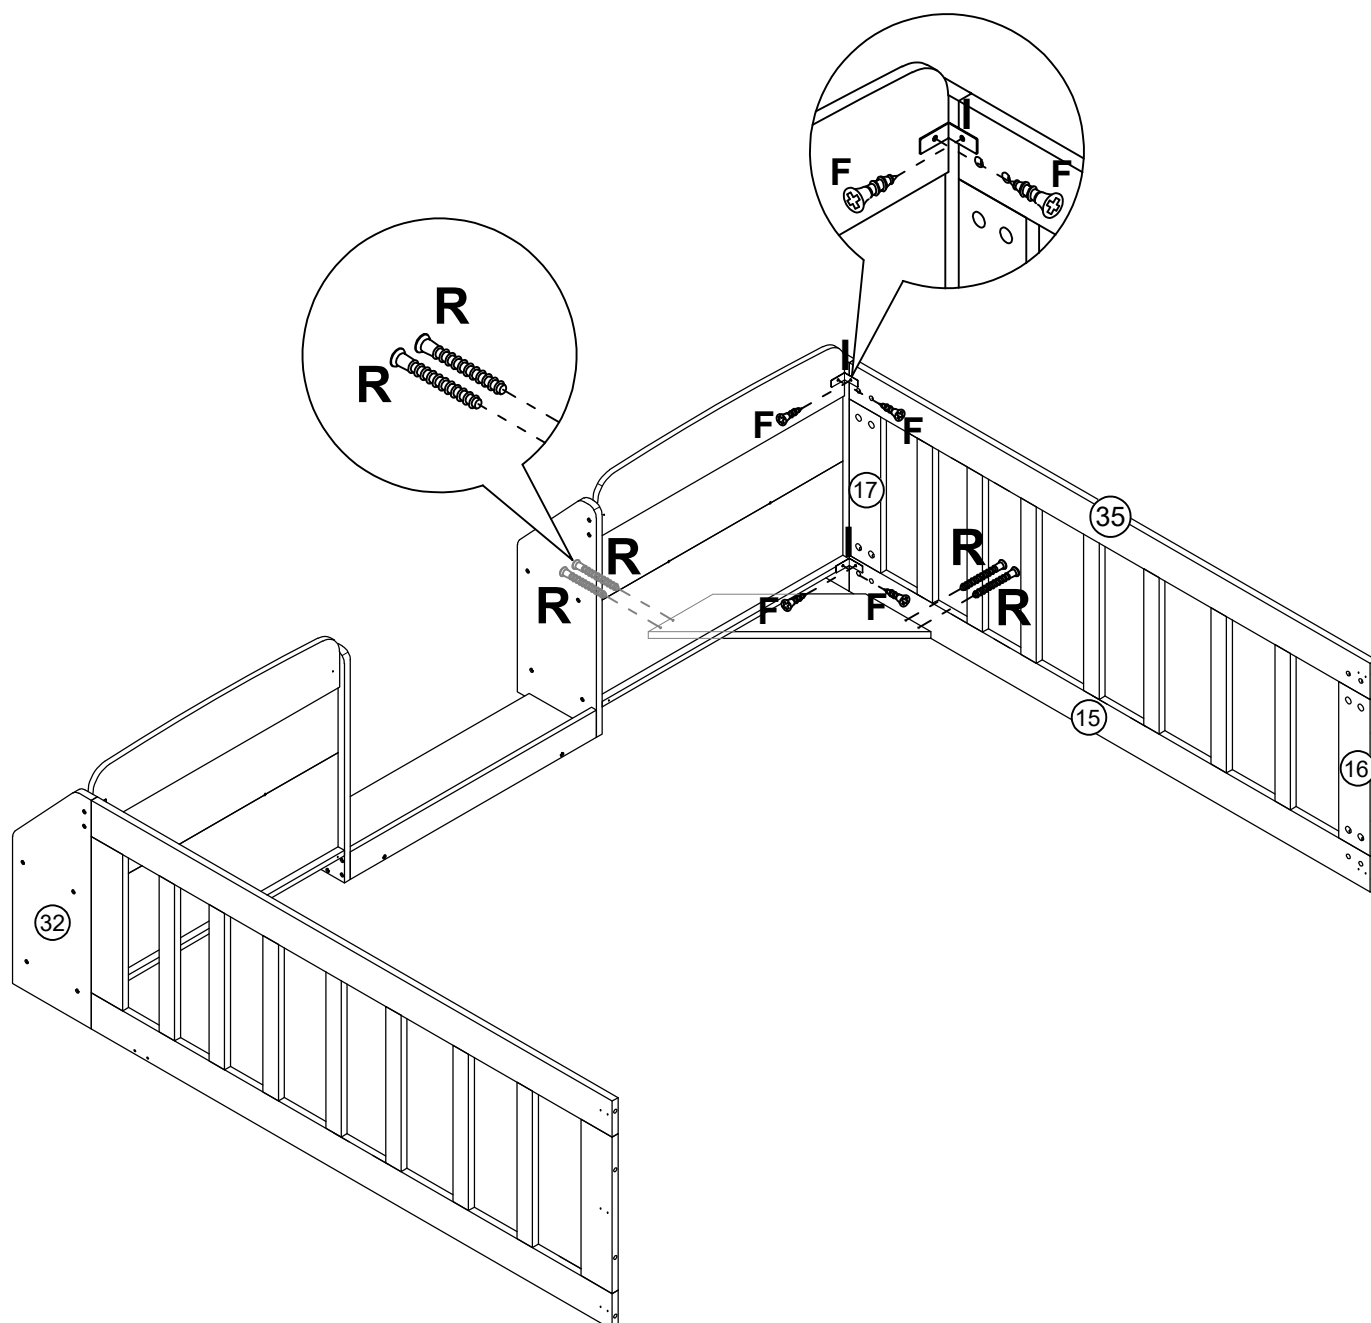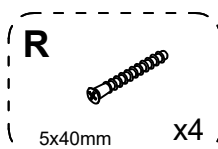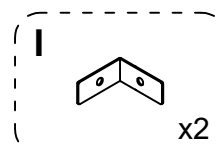
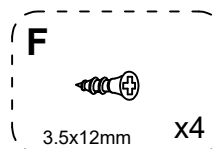


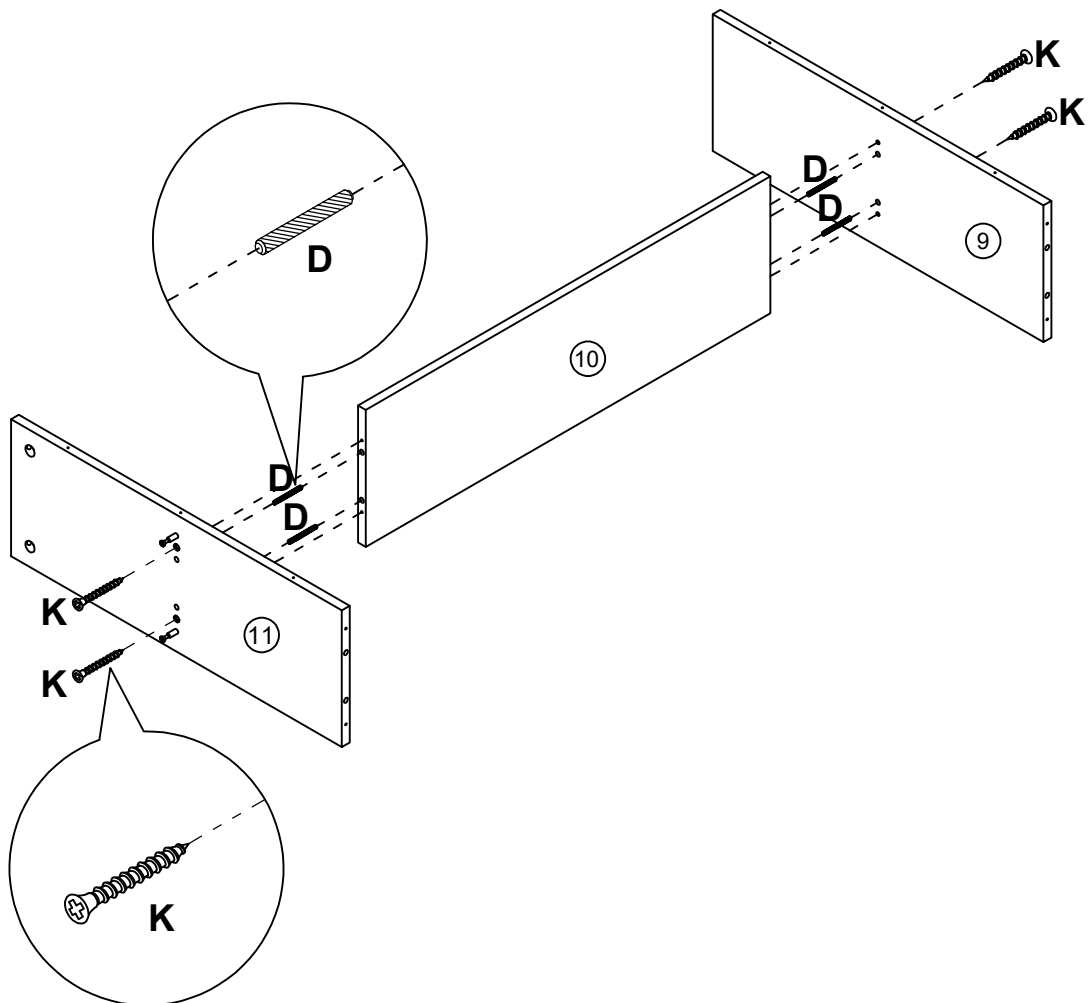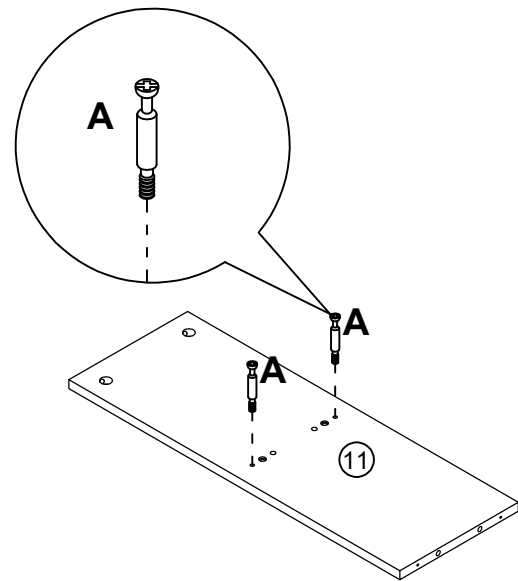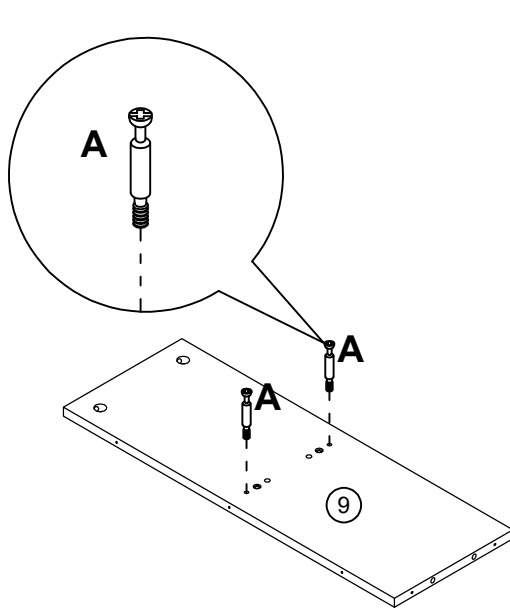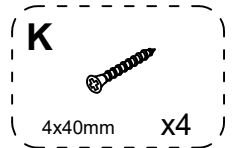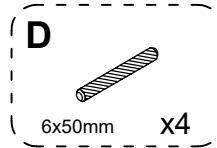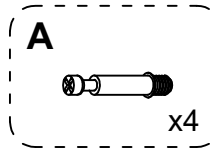



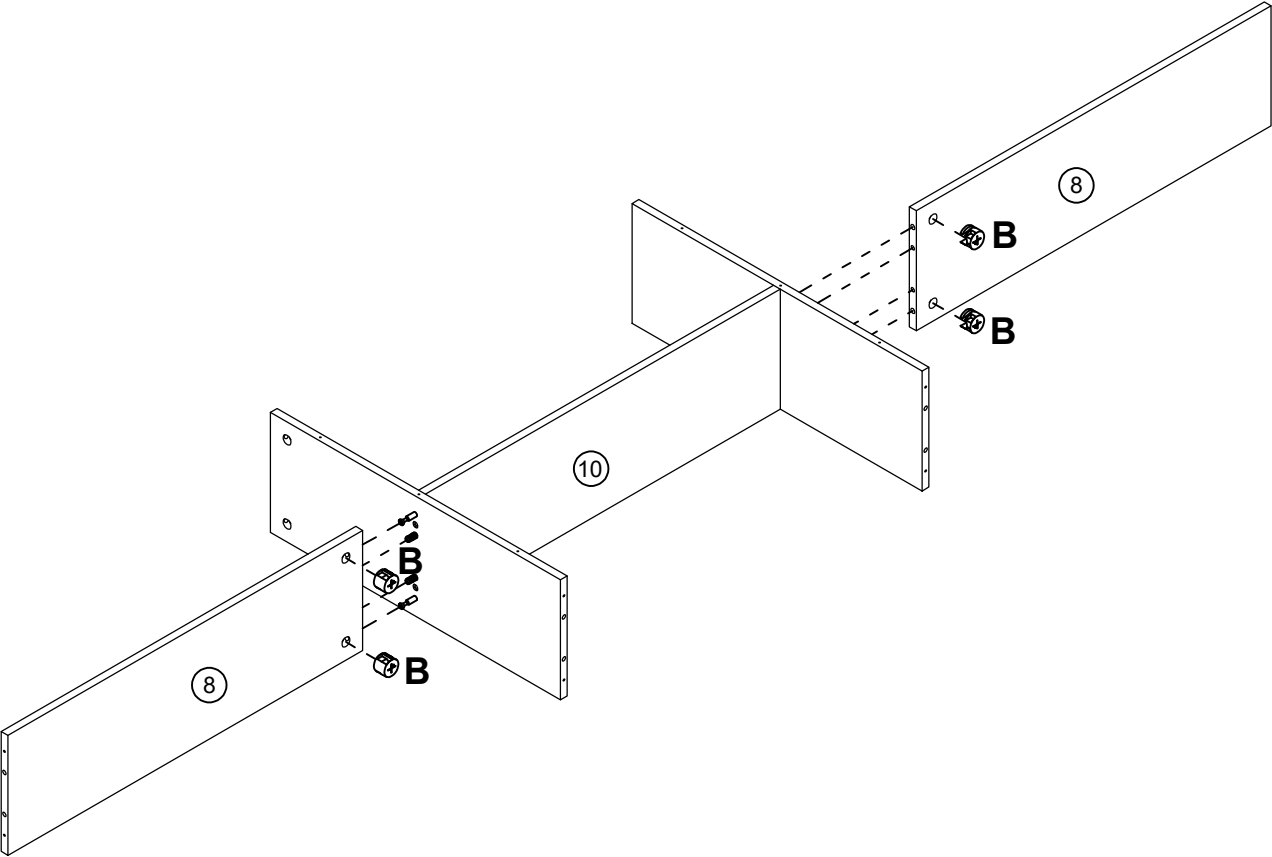
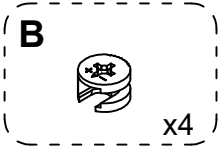


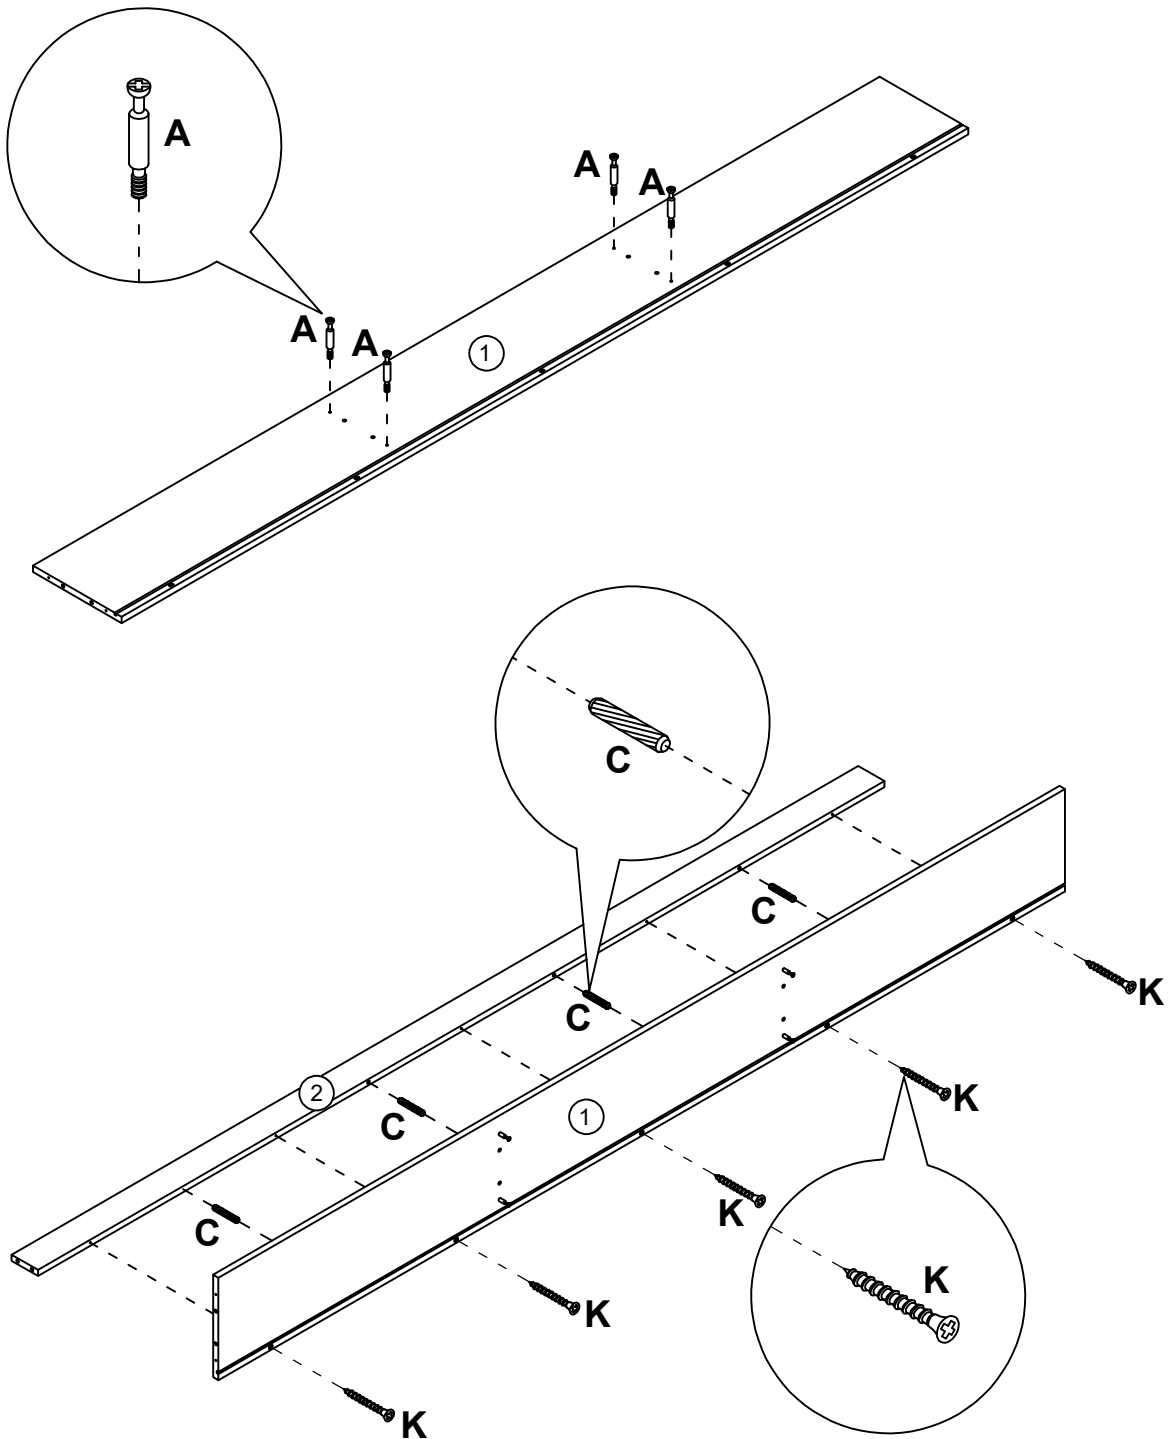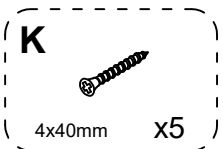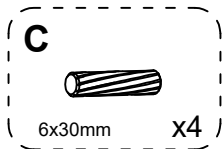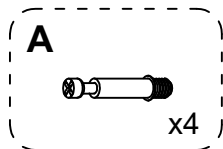


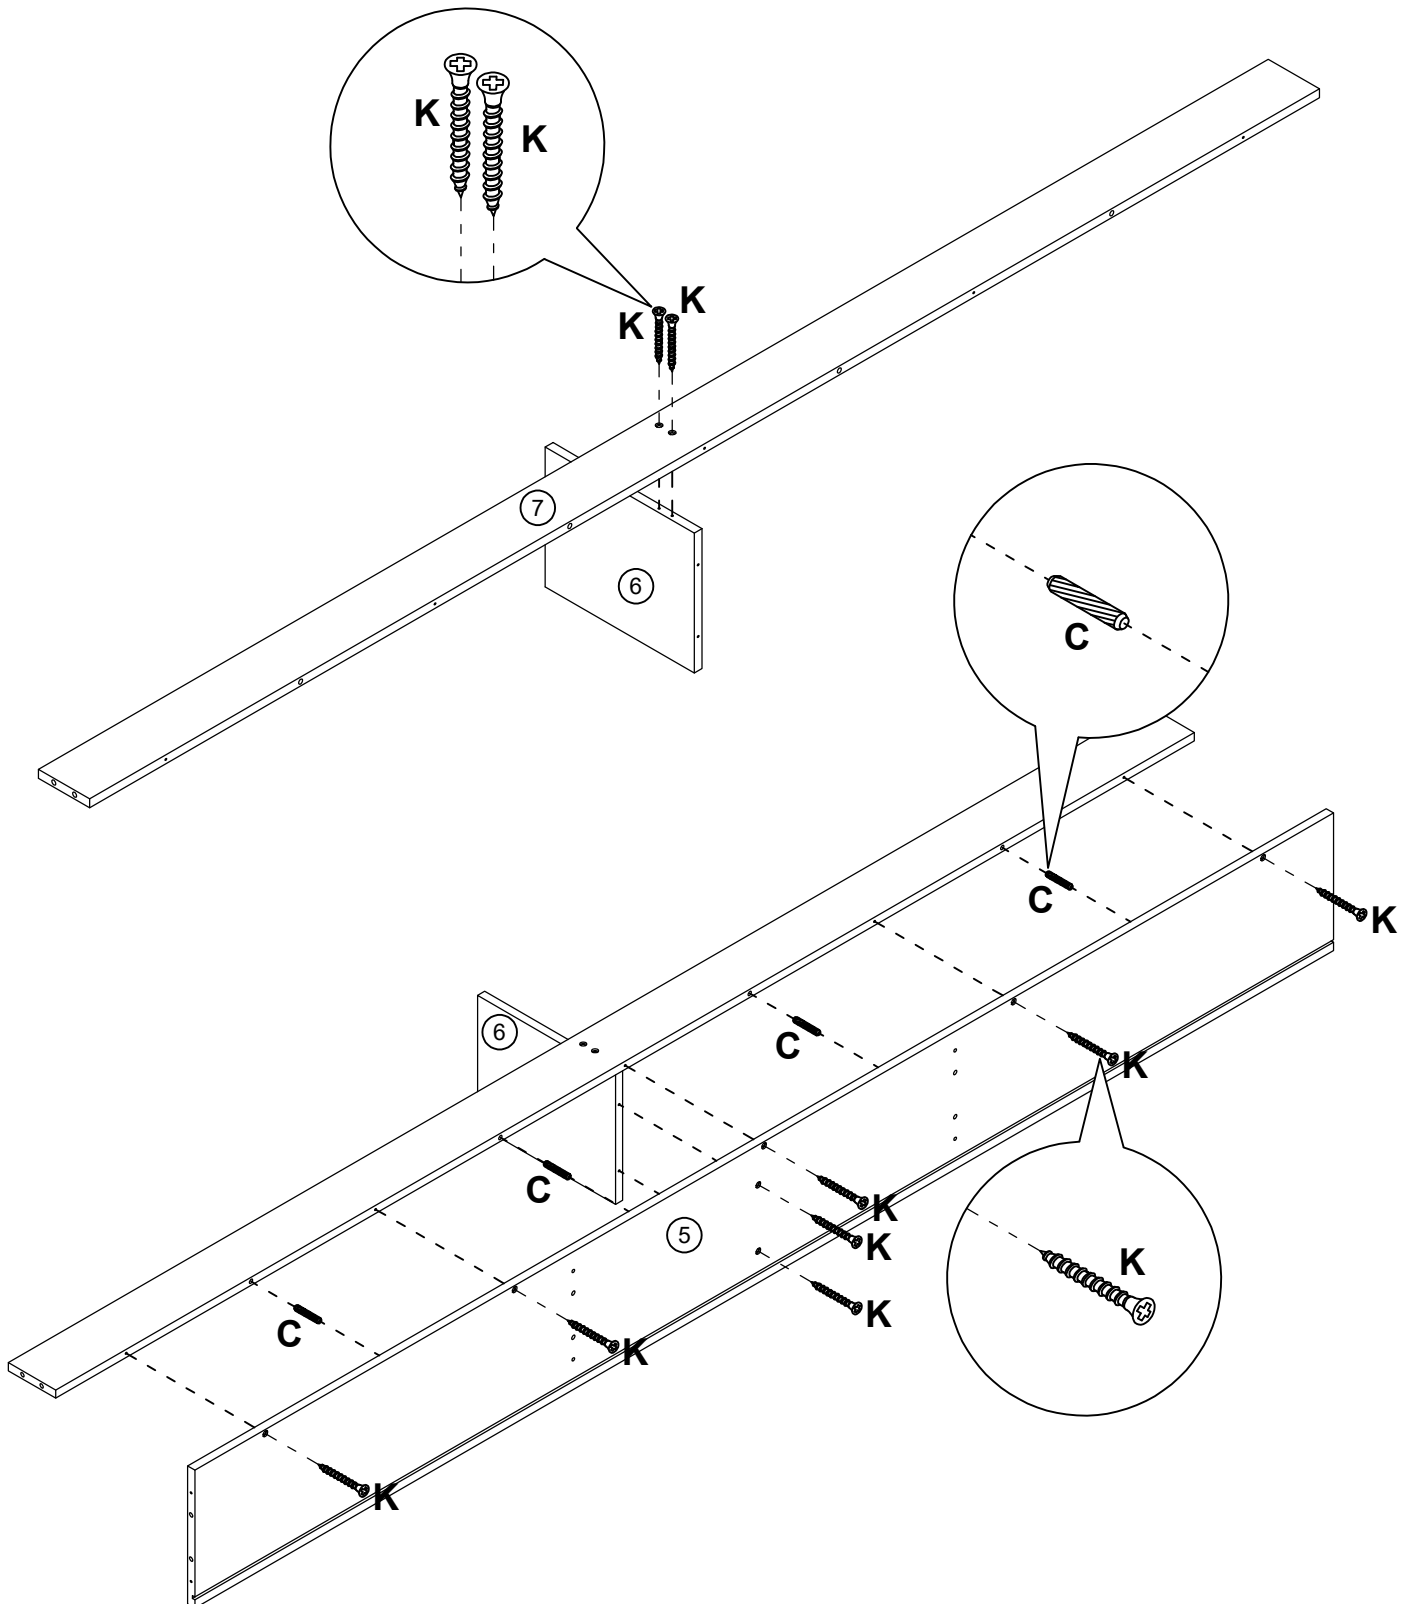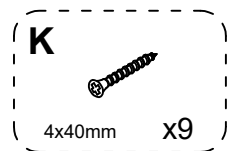
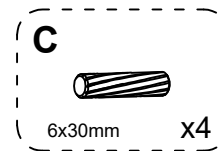



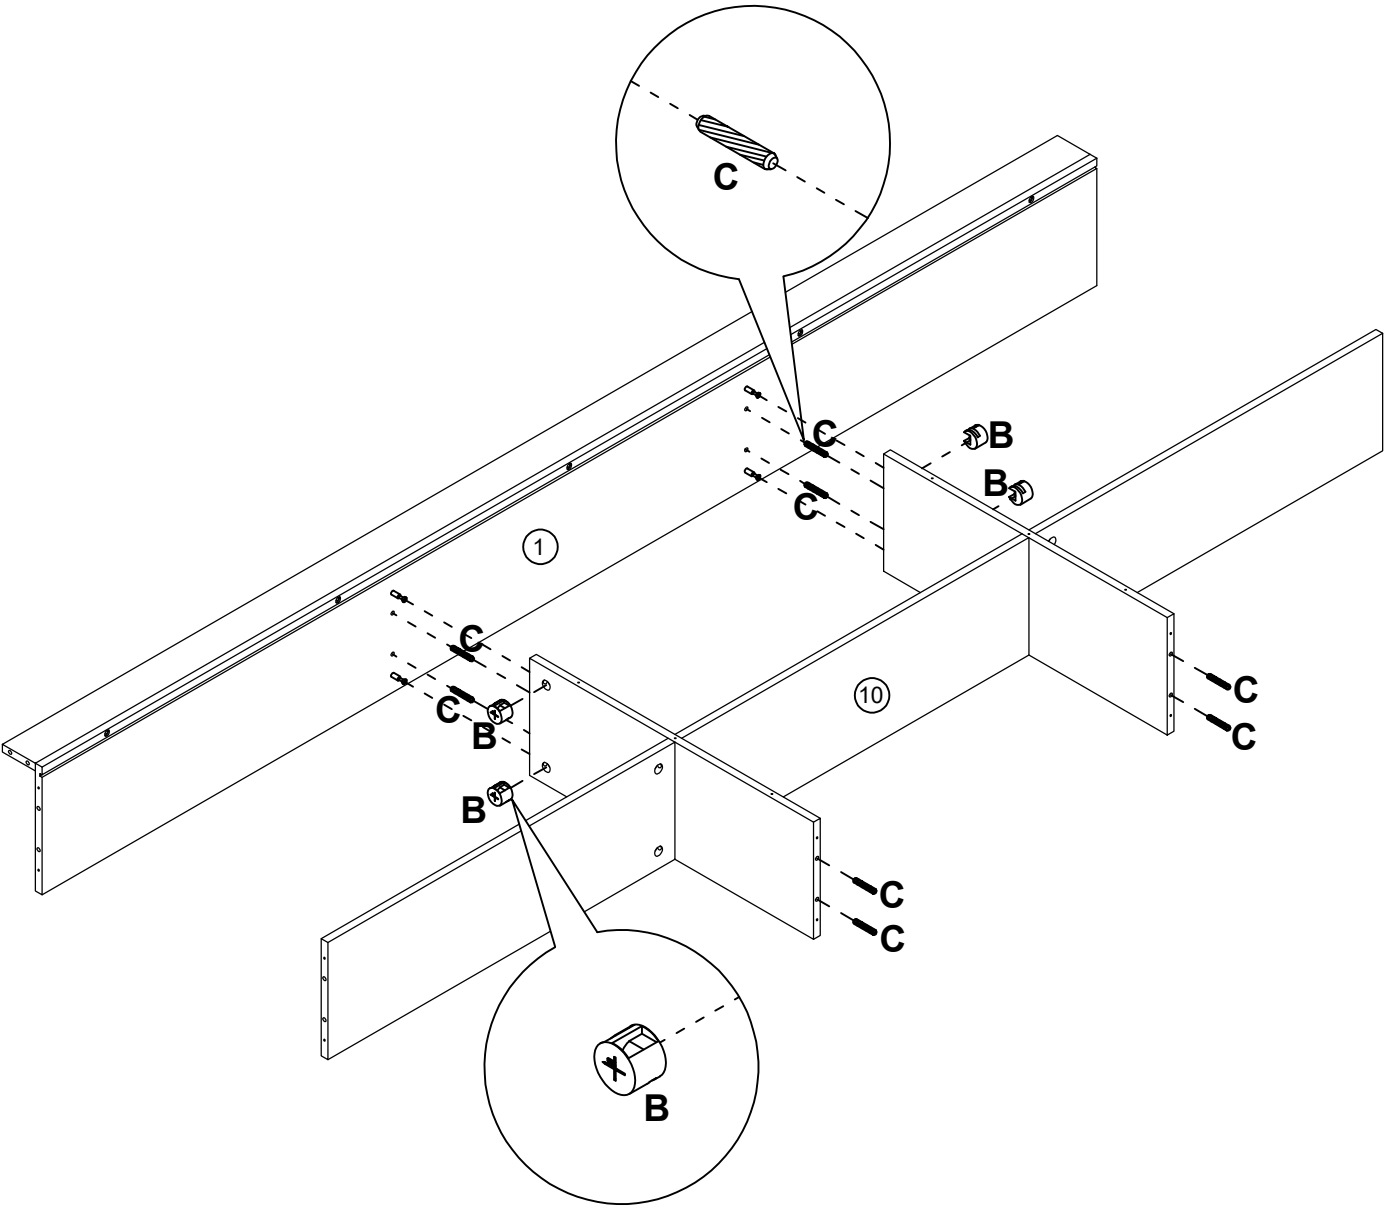
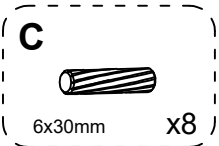




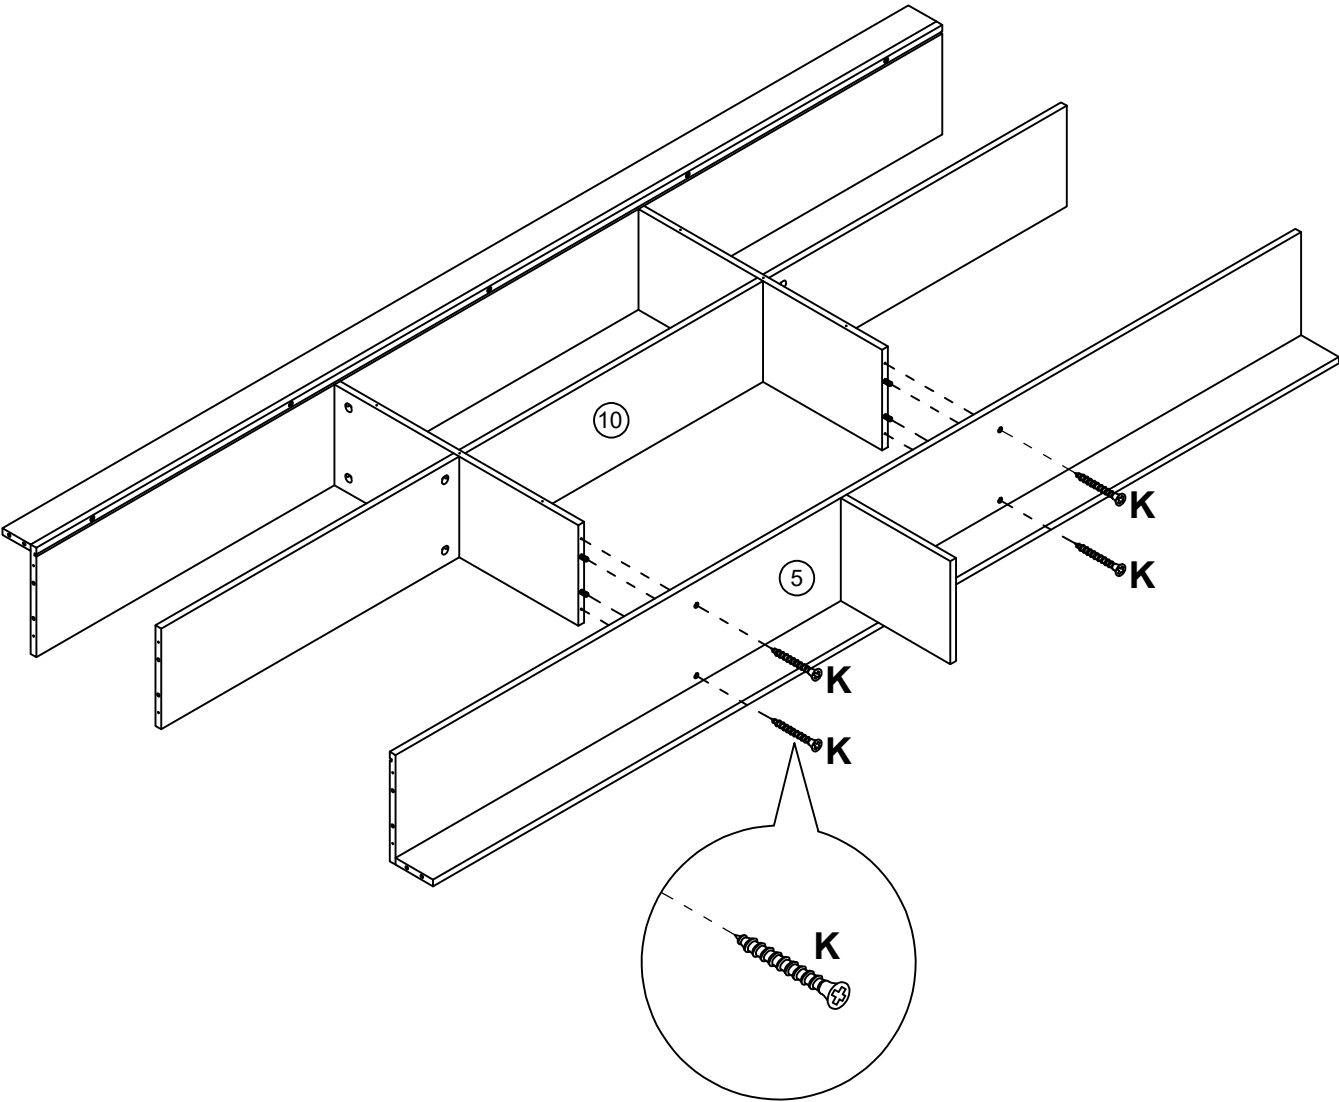


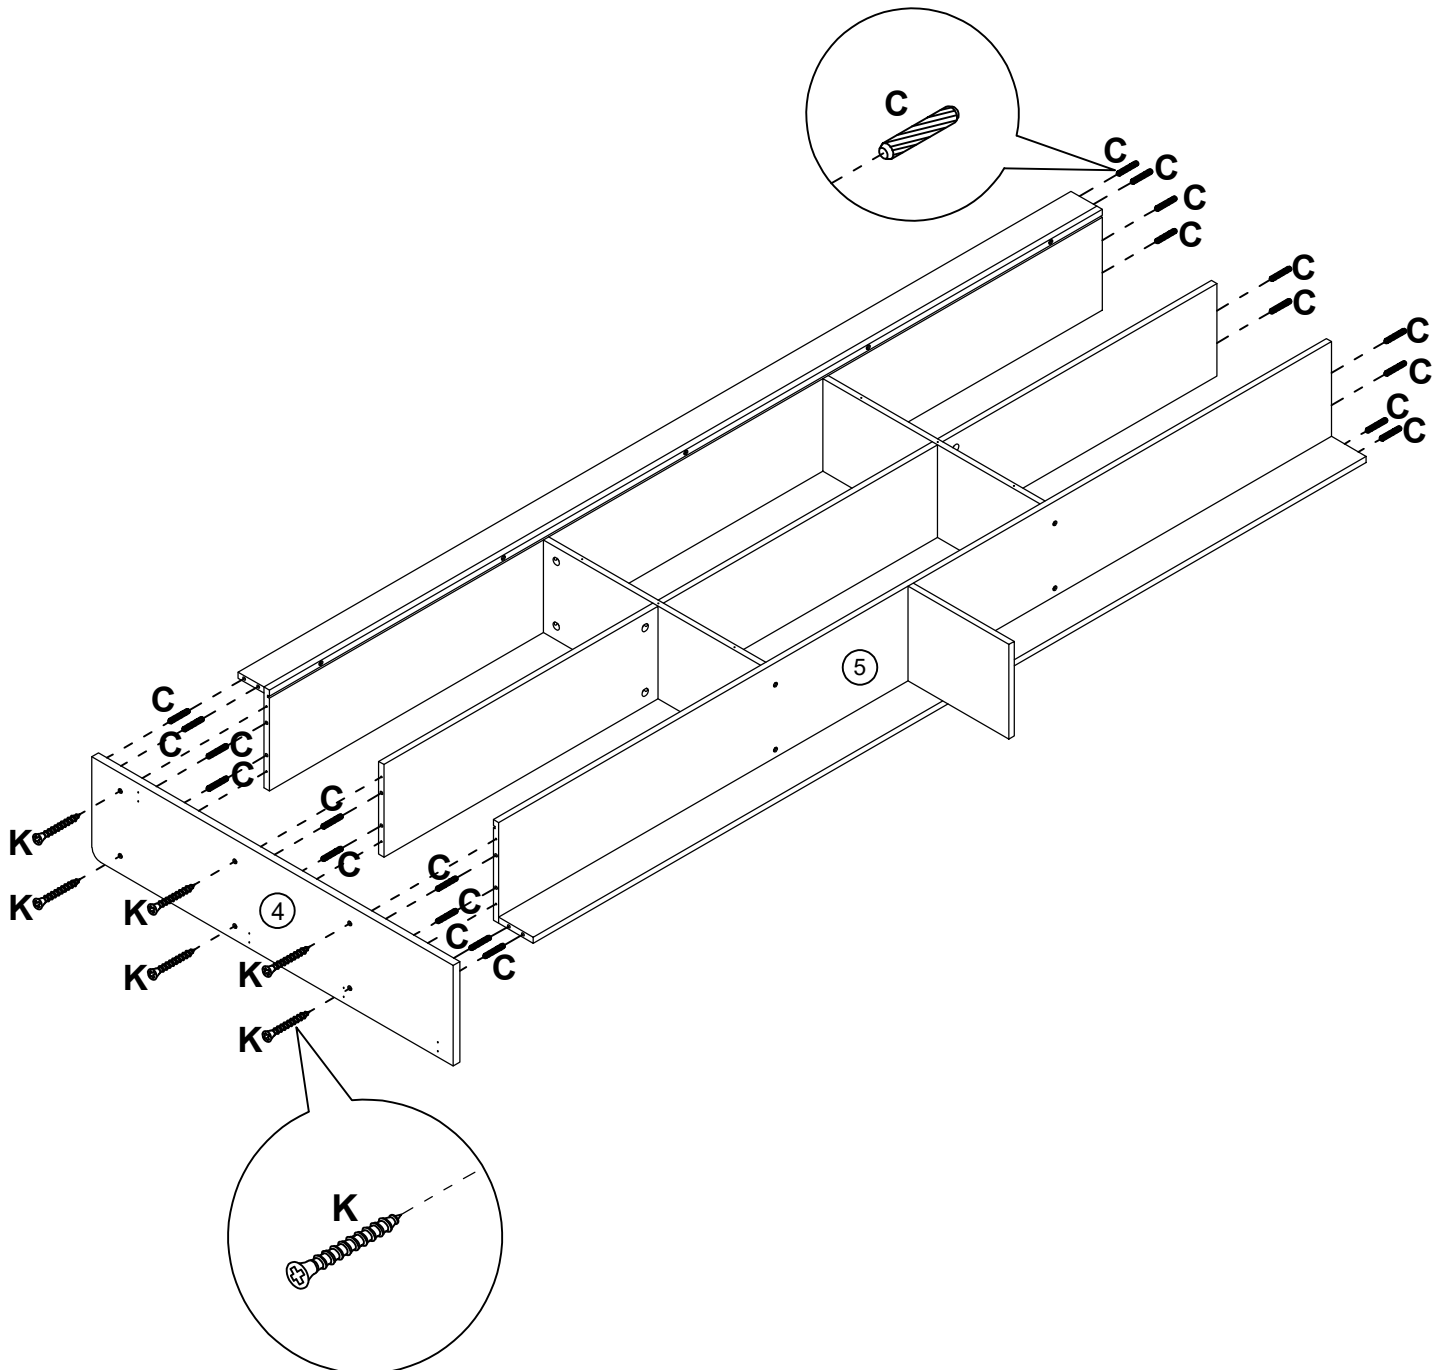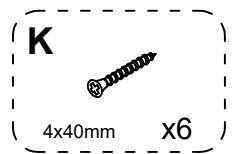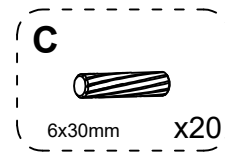

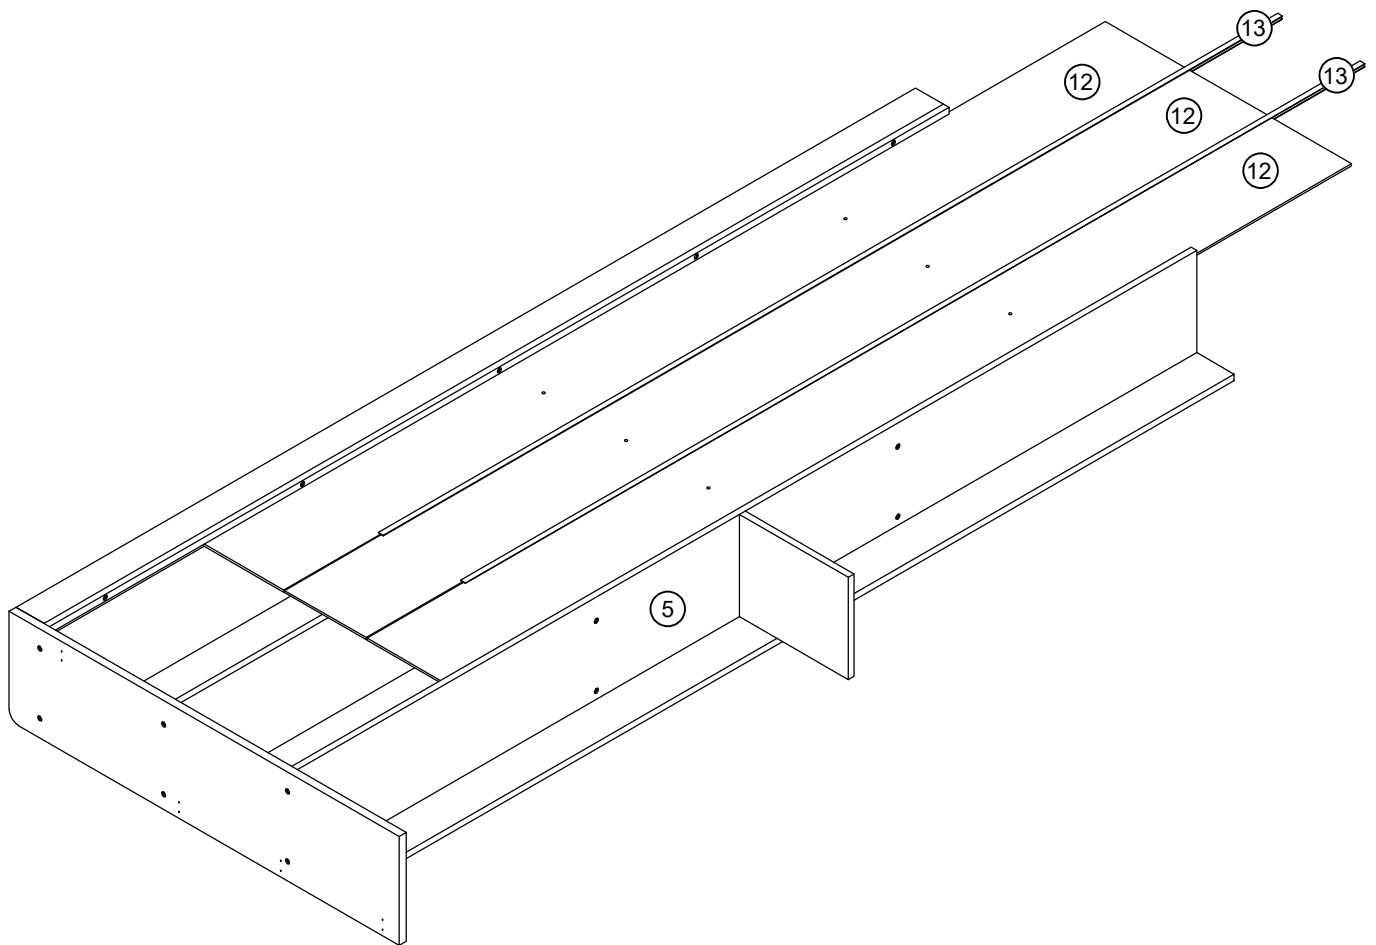

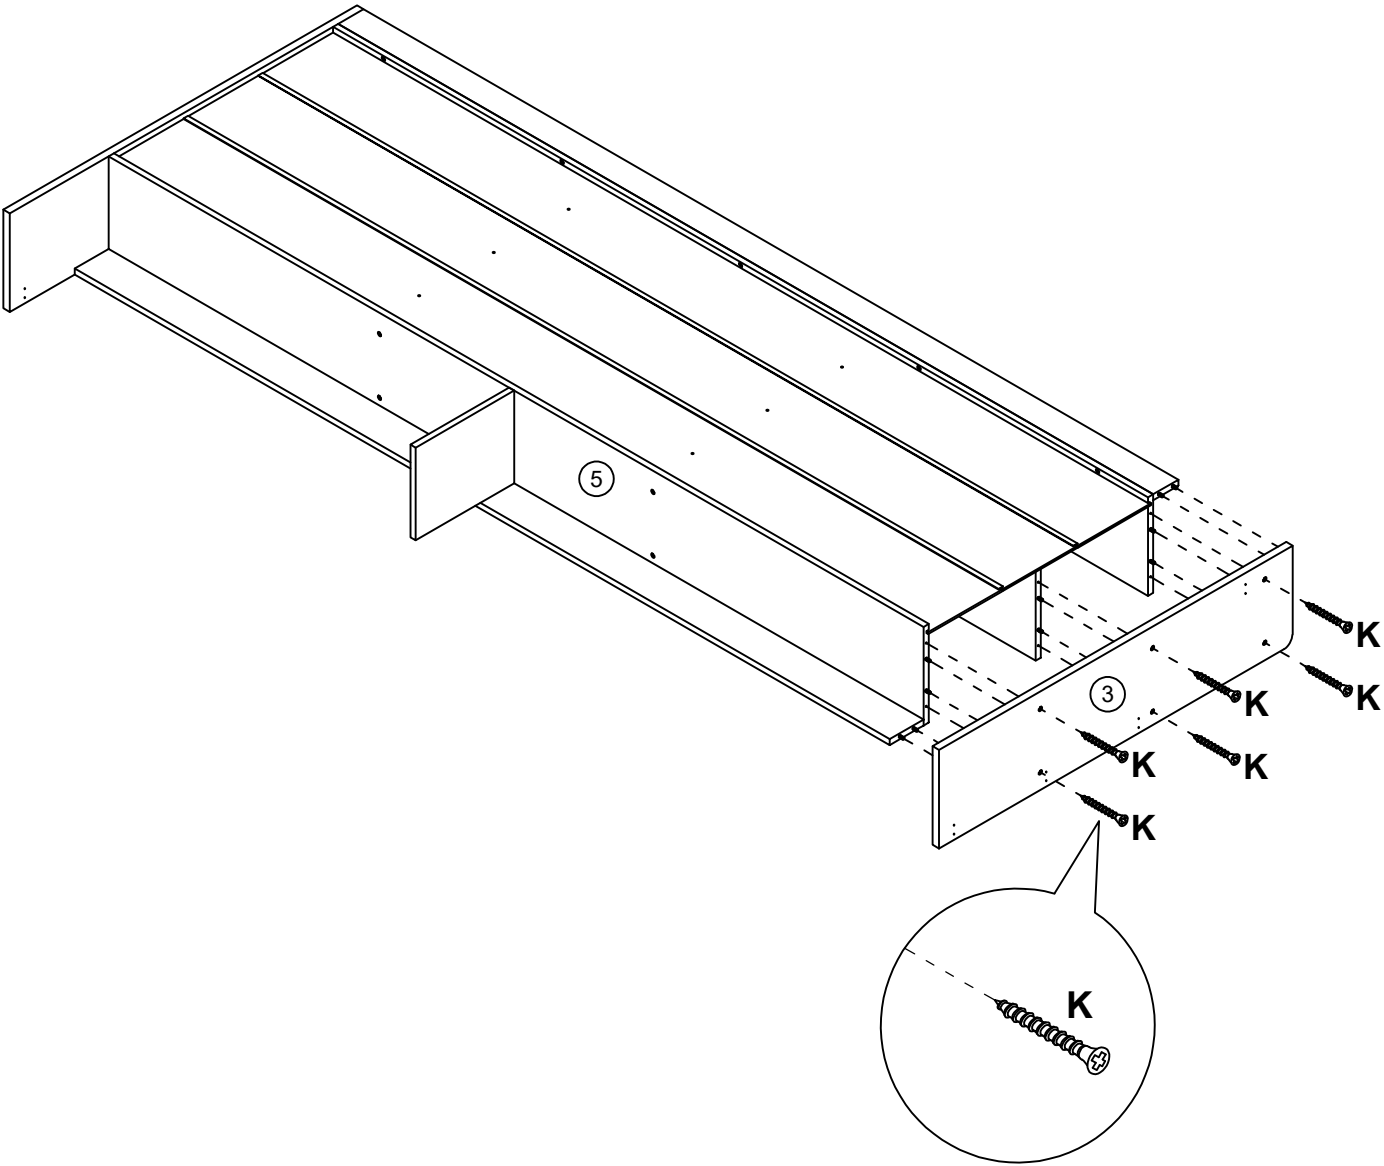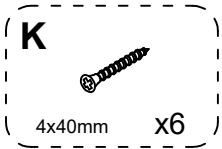

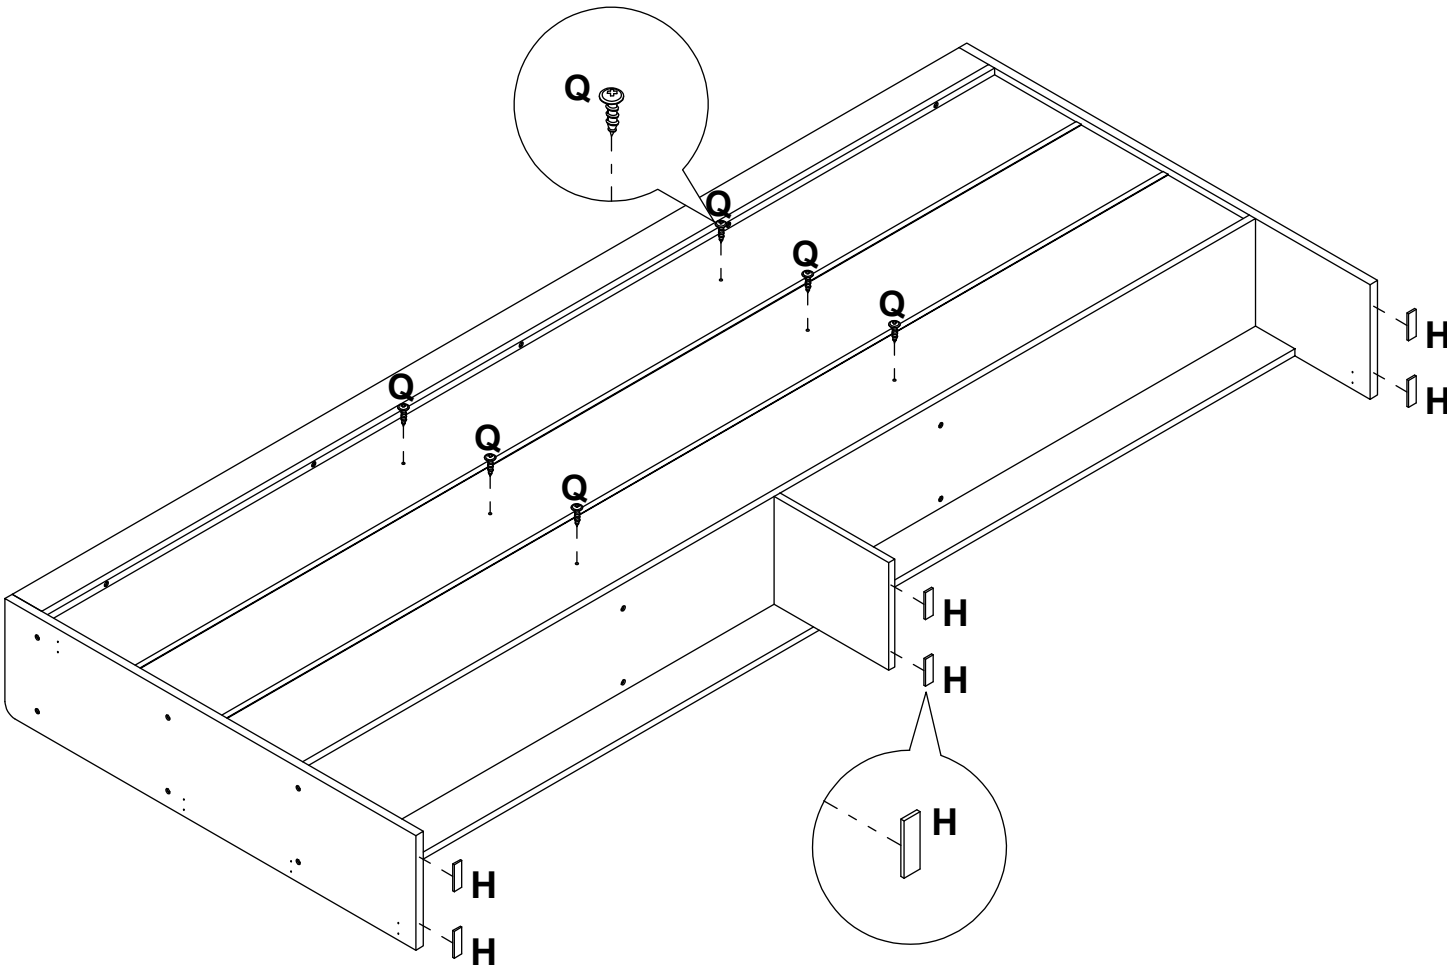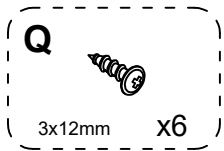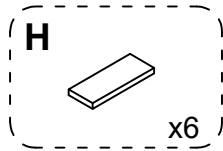

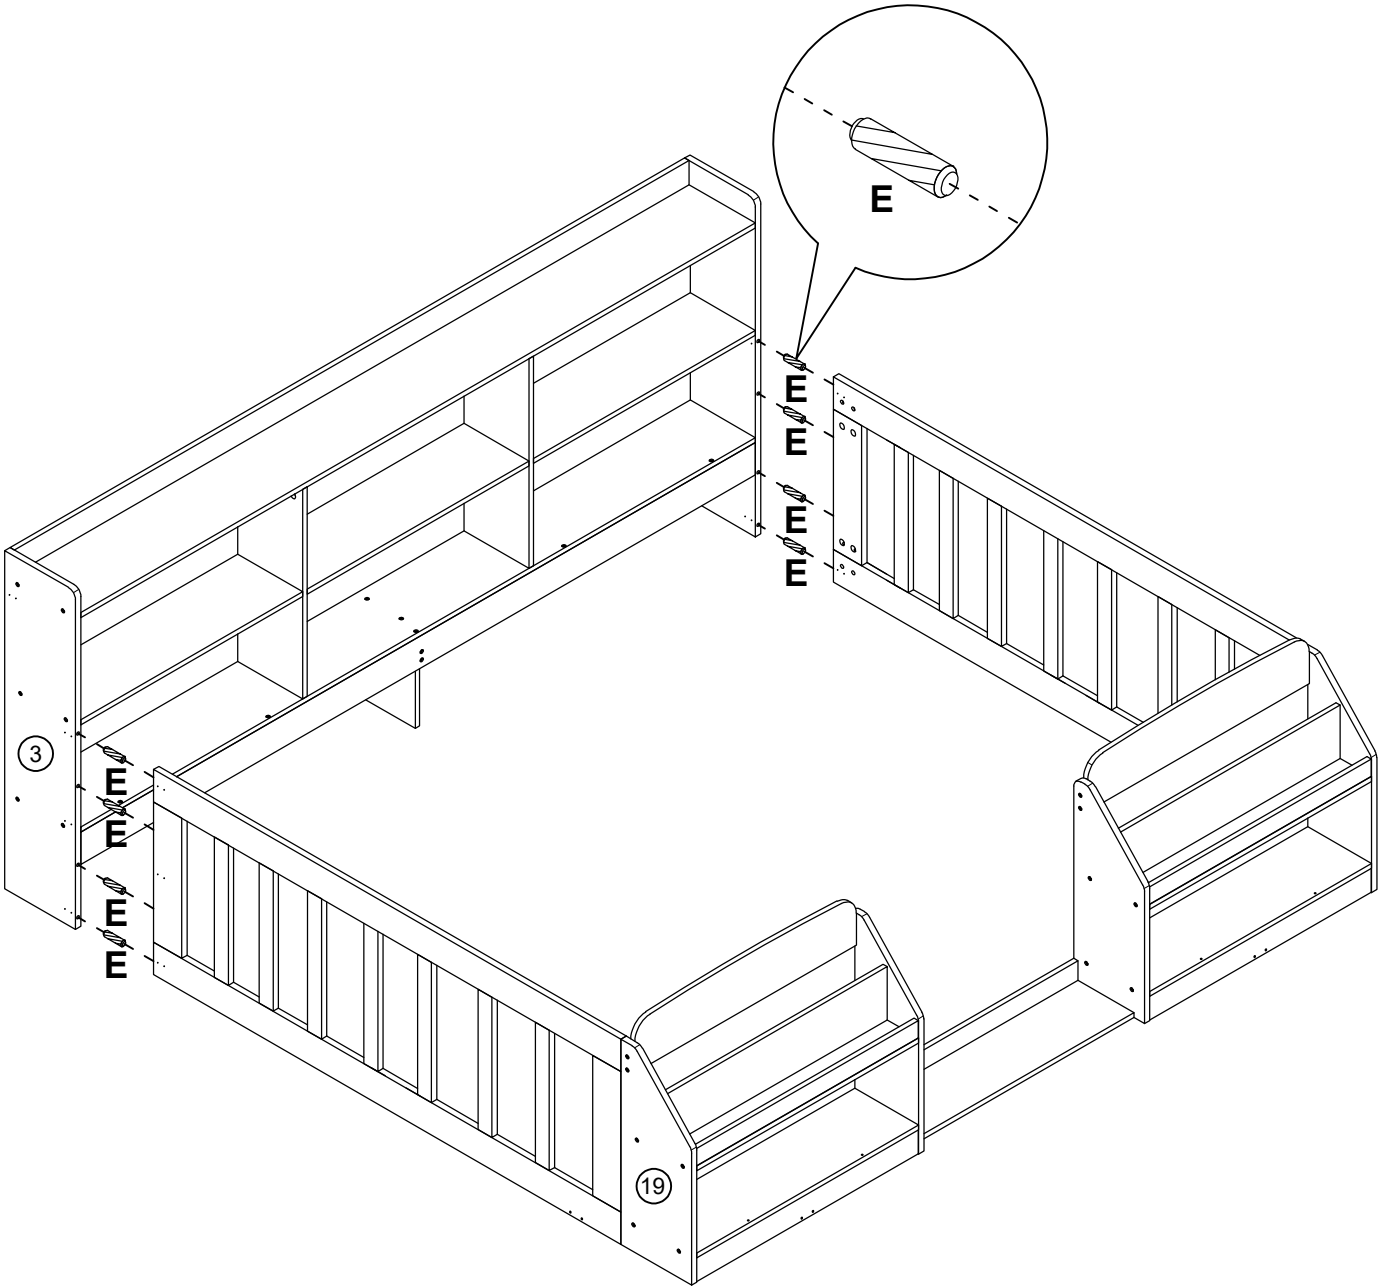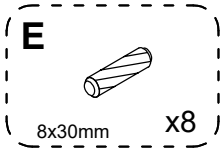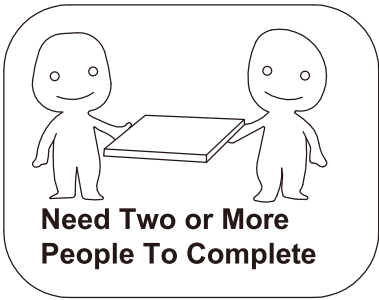





F





3.5x12mm x20



J

x5

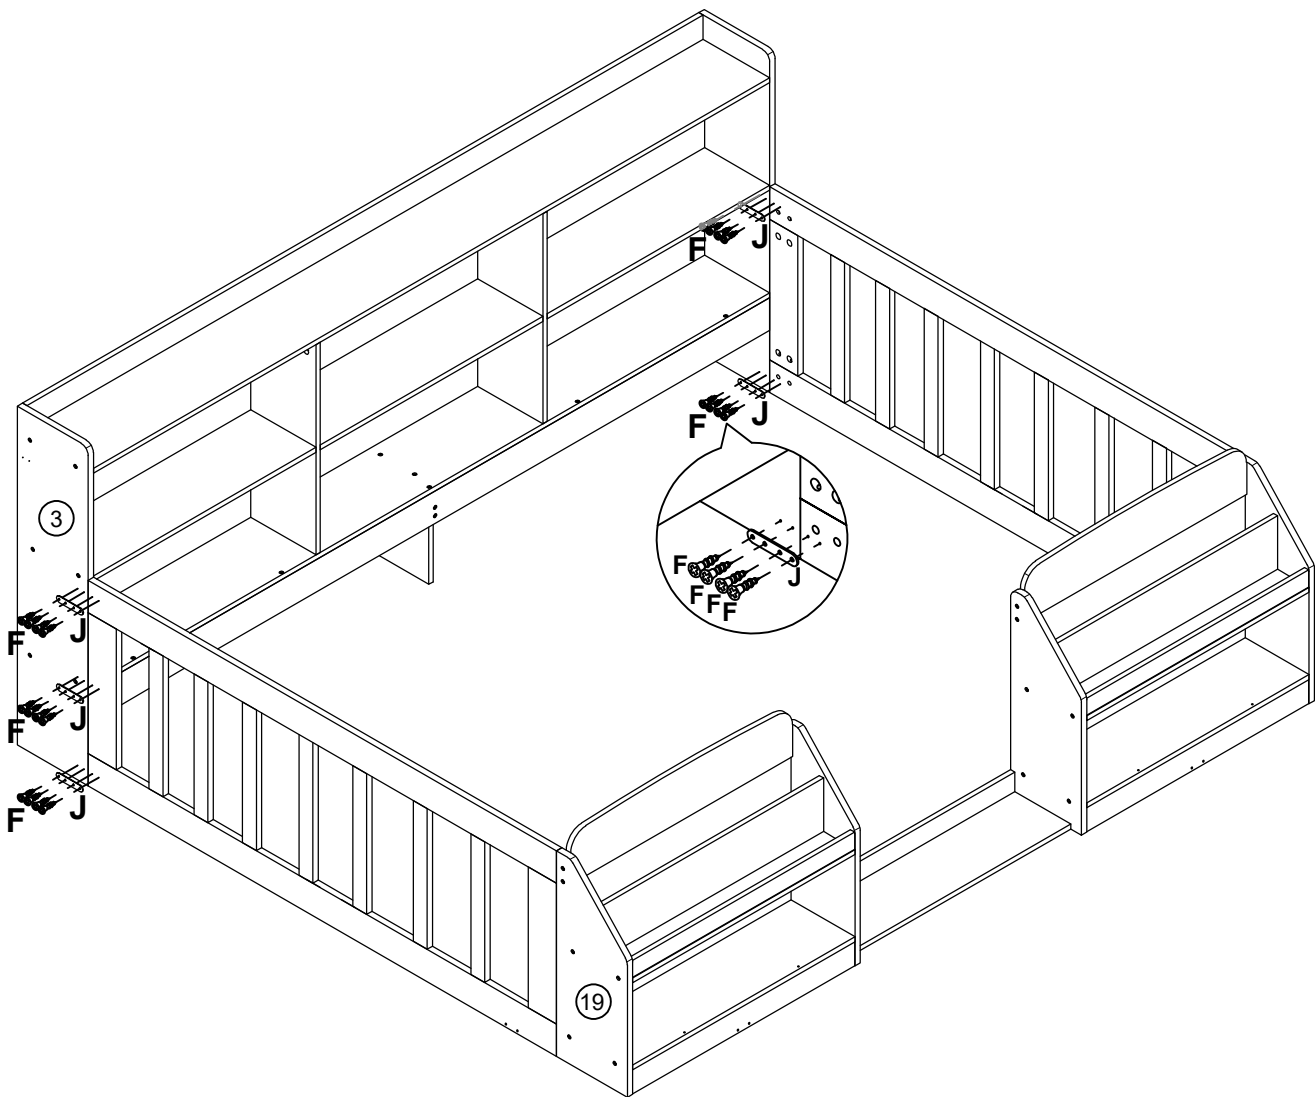


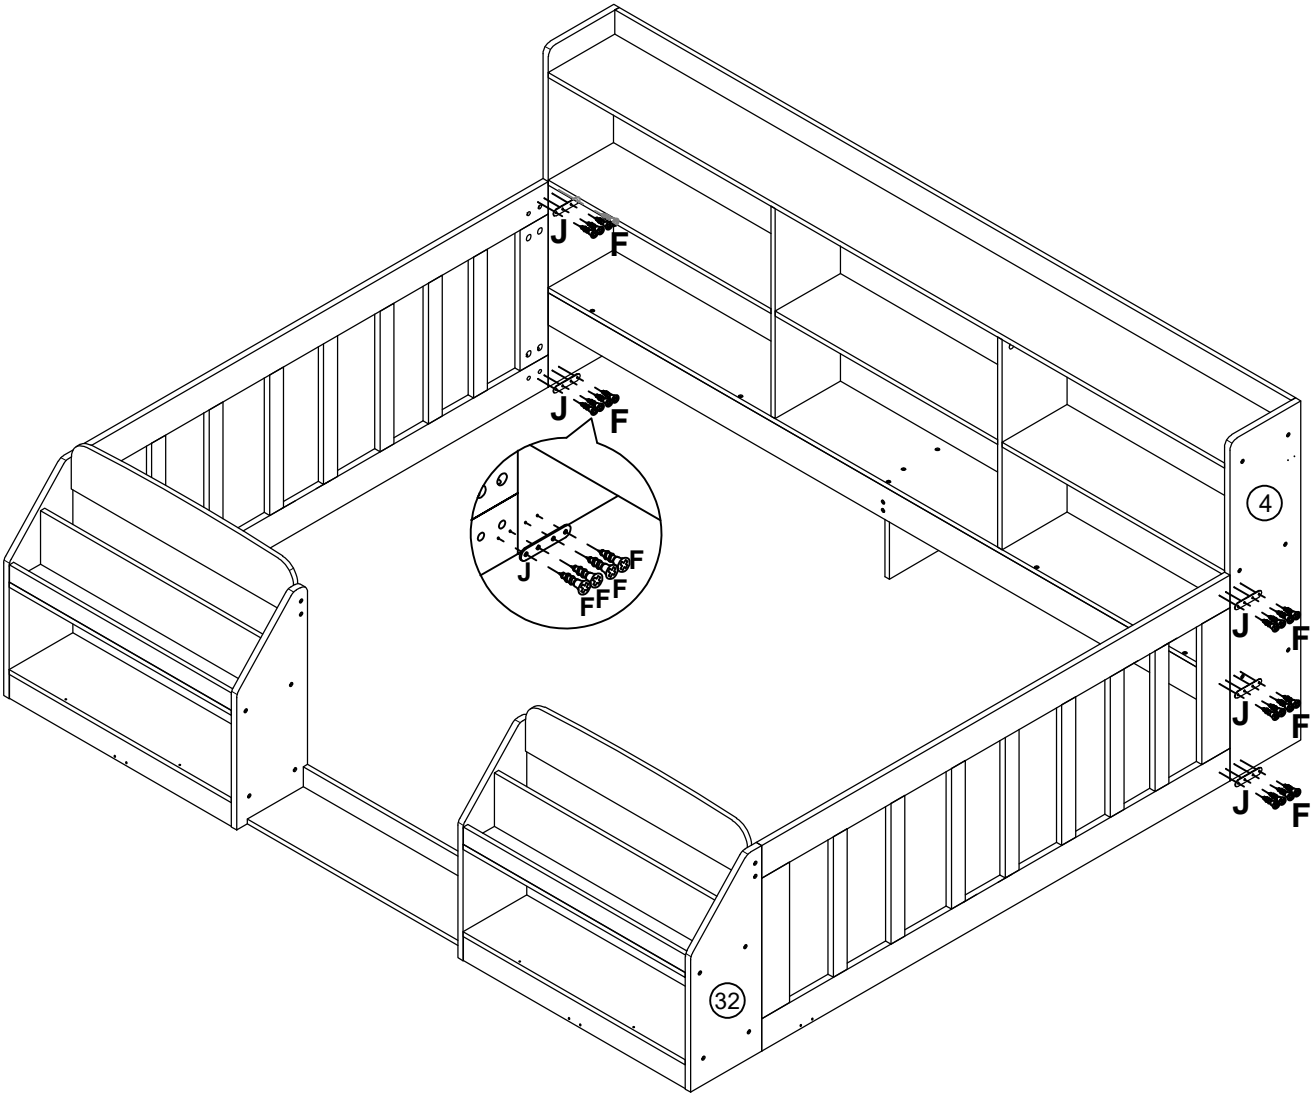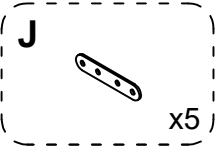
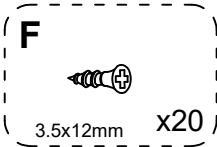


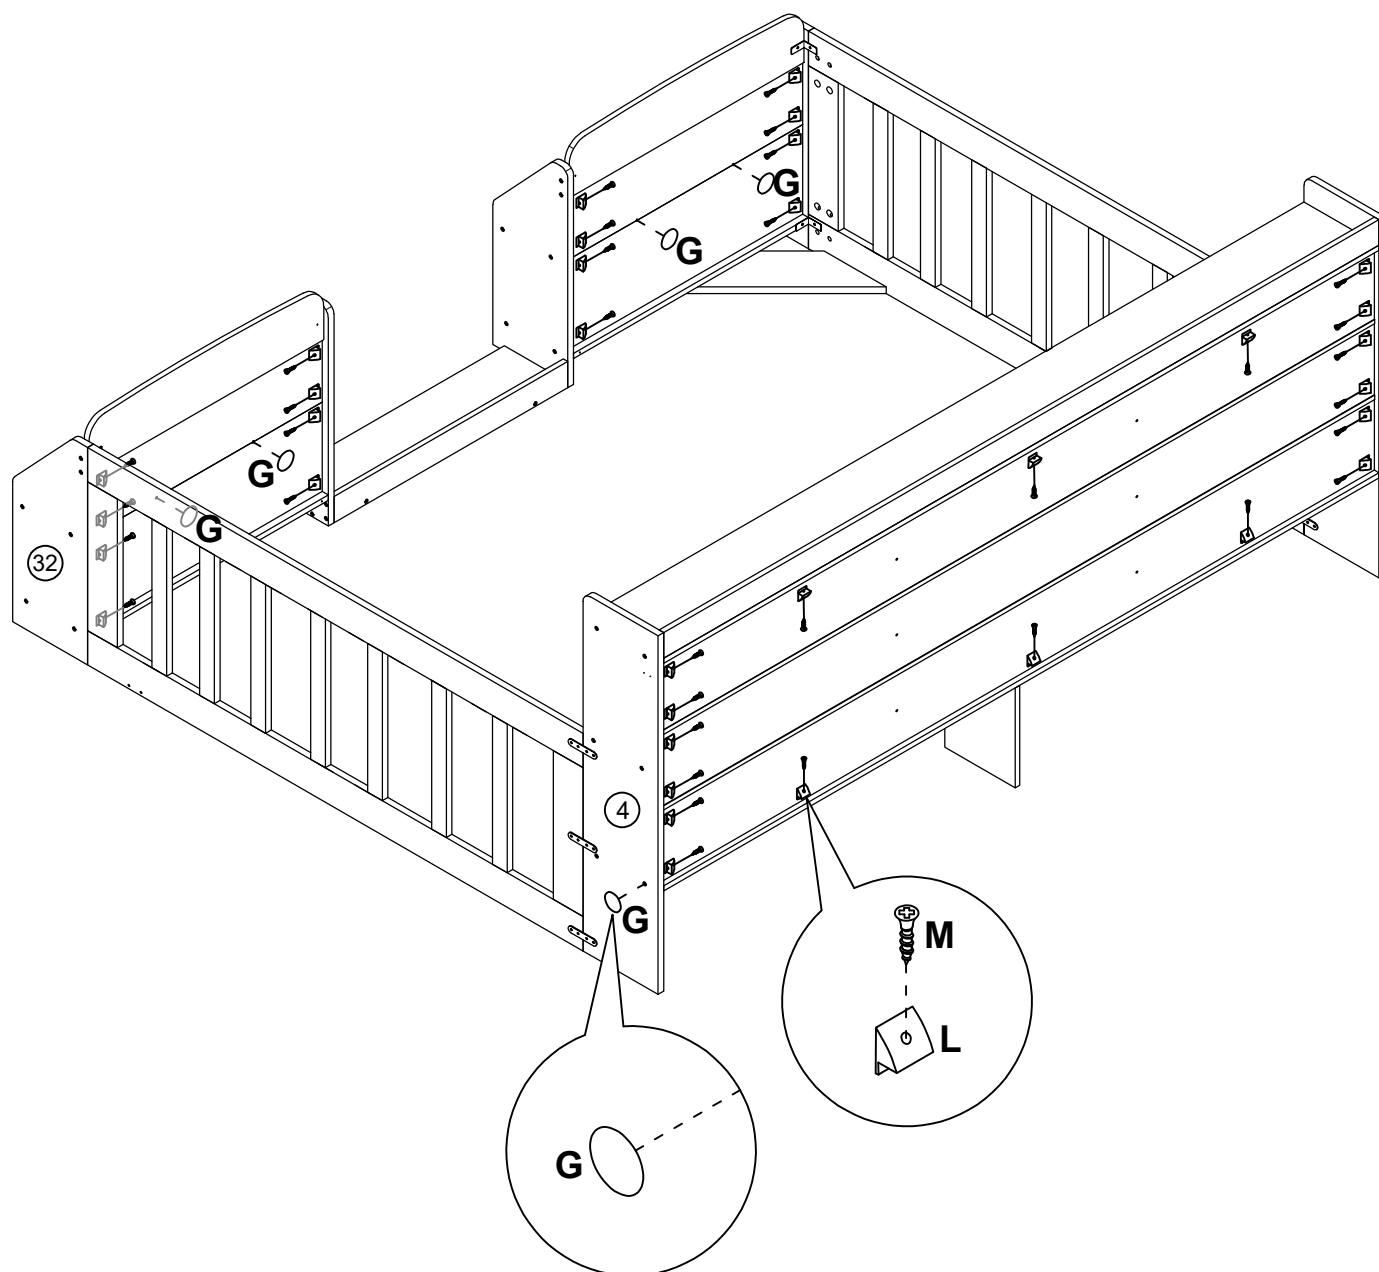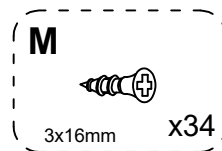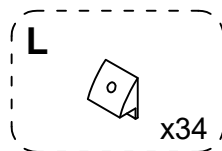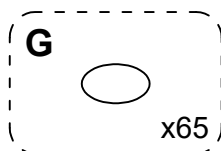

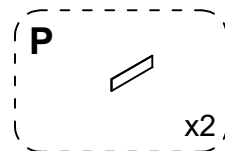






Privately stick the film at the designated position.

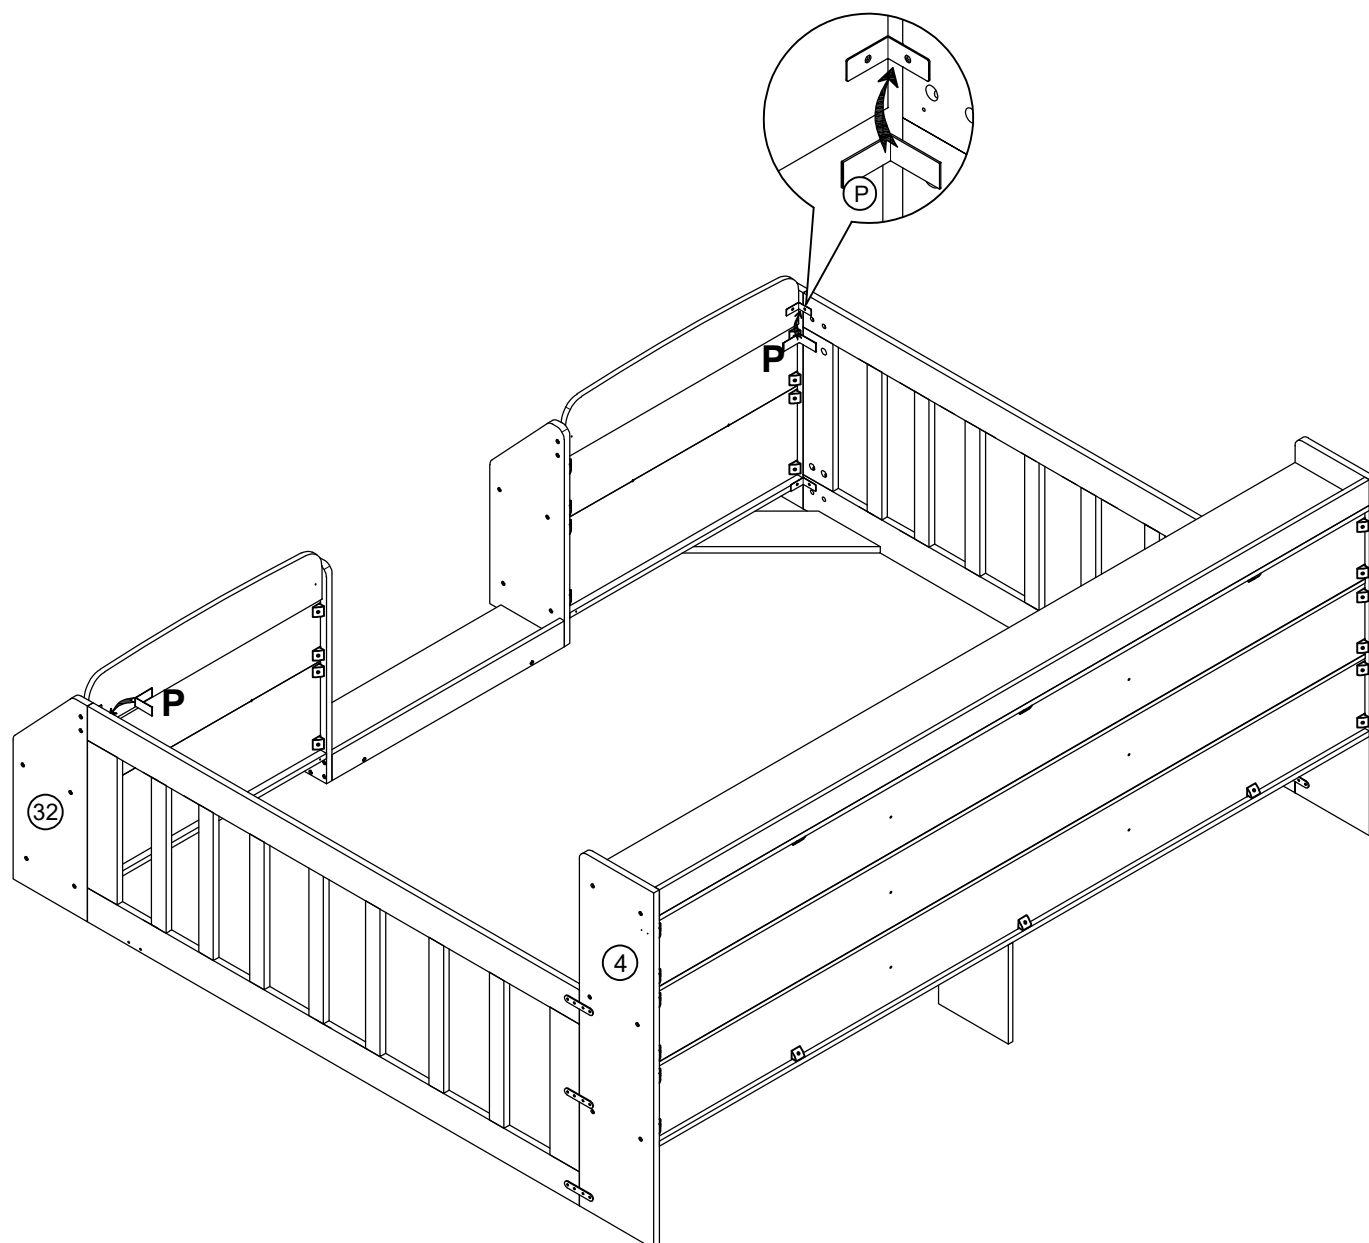


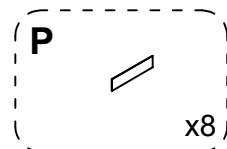

Privately stick the film at
the designated position.

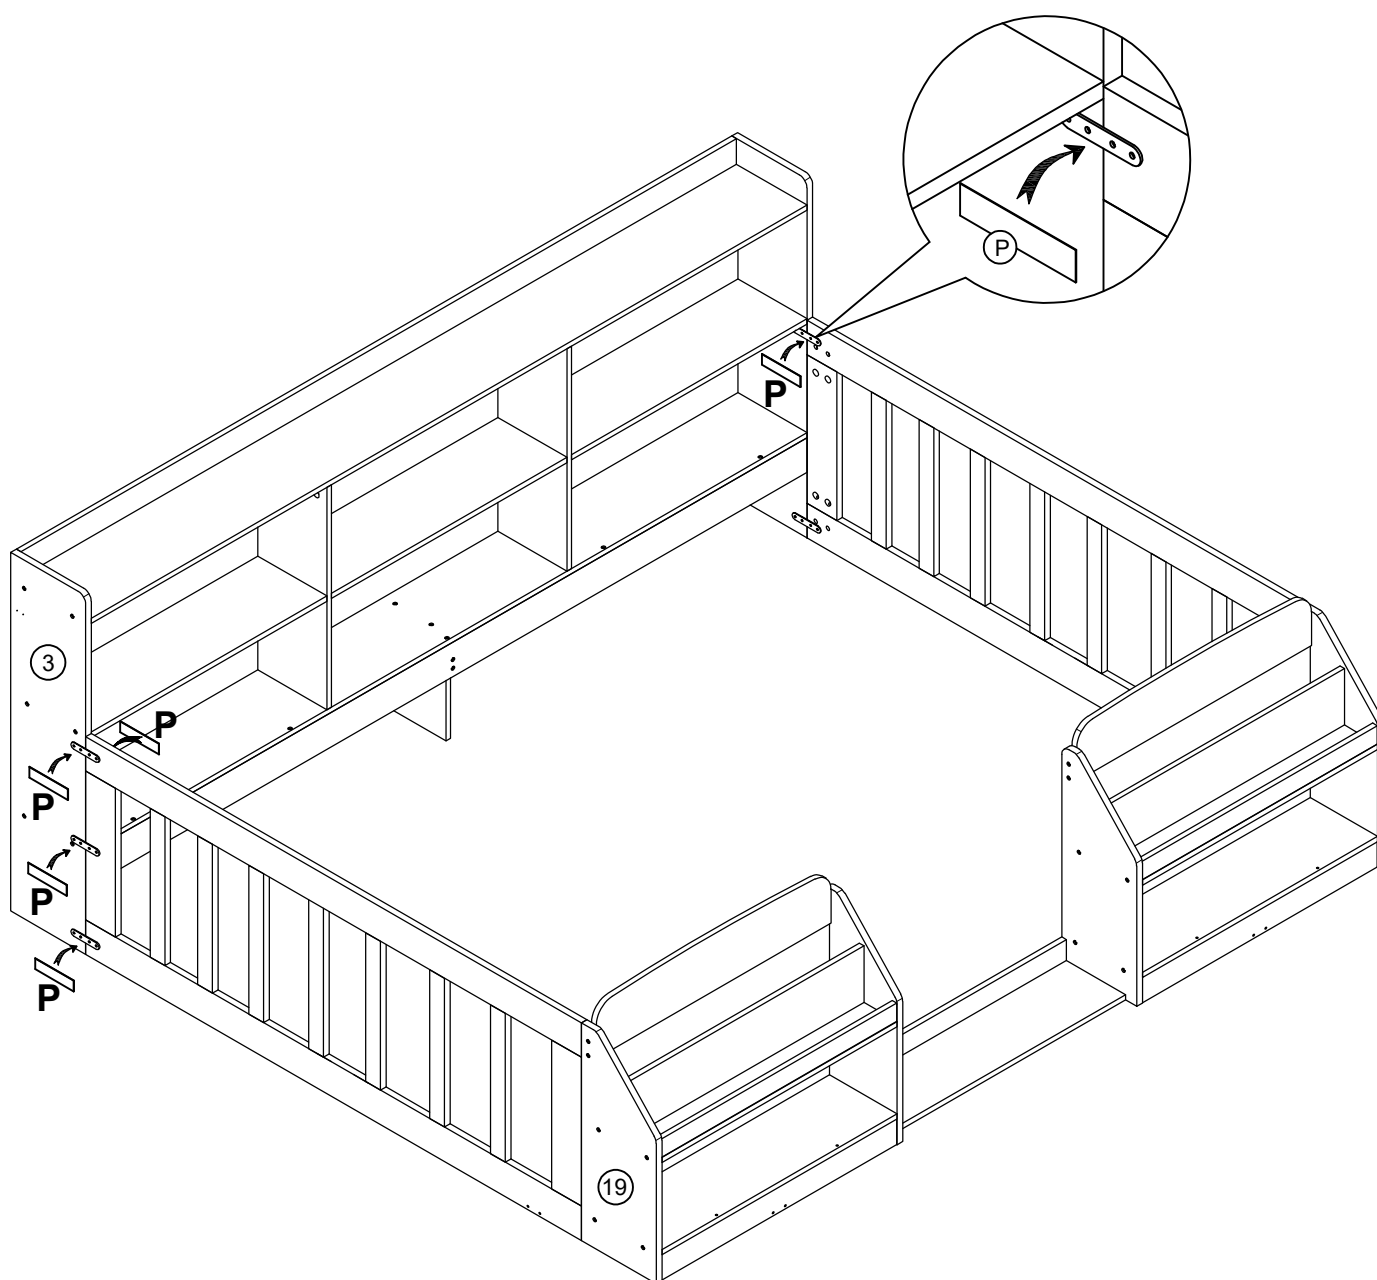


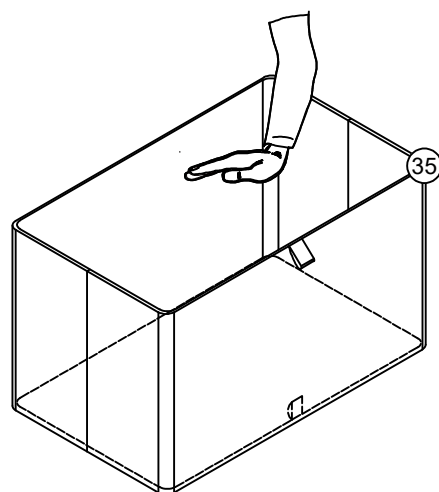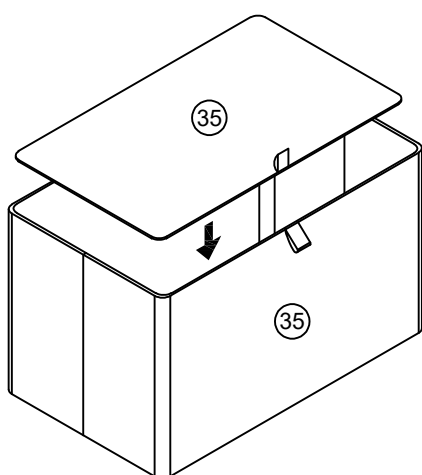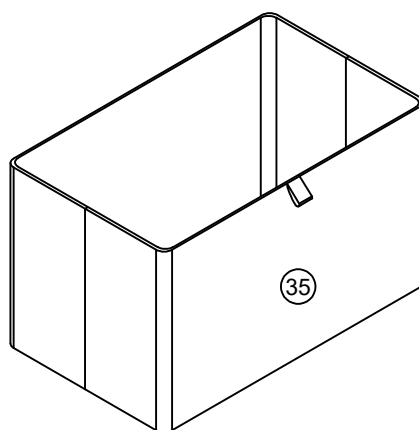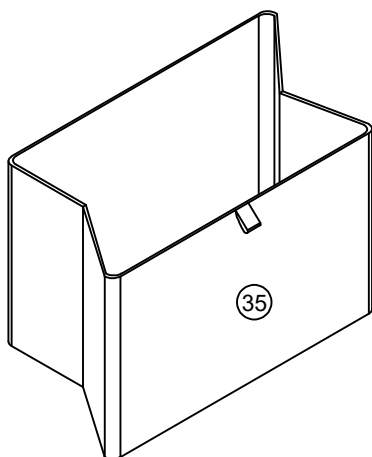

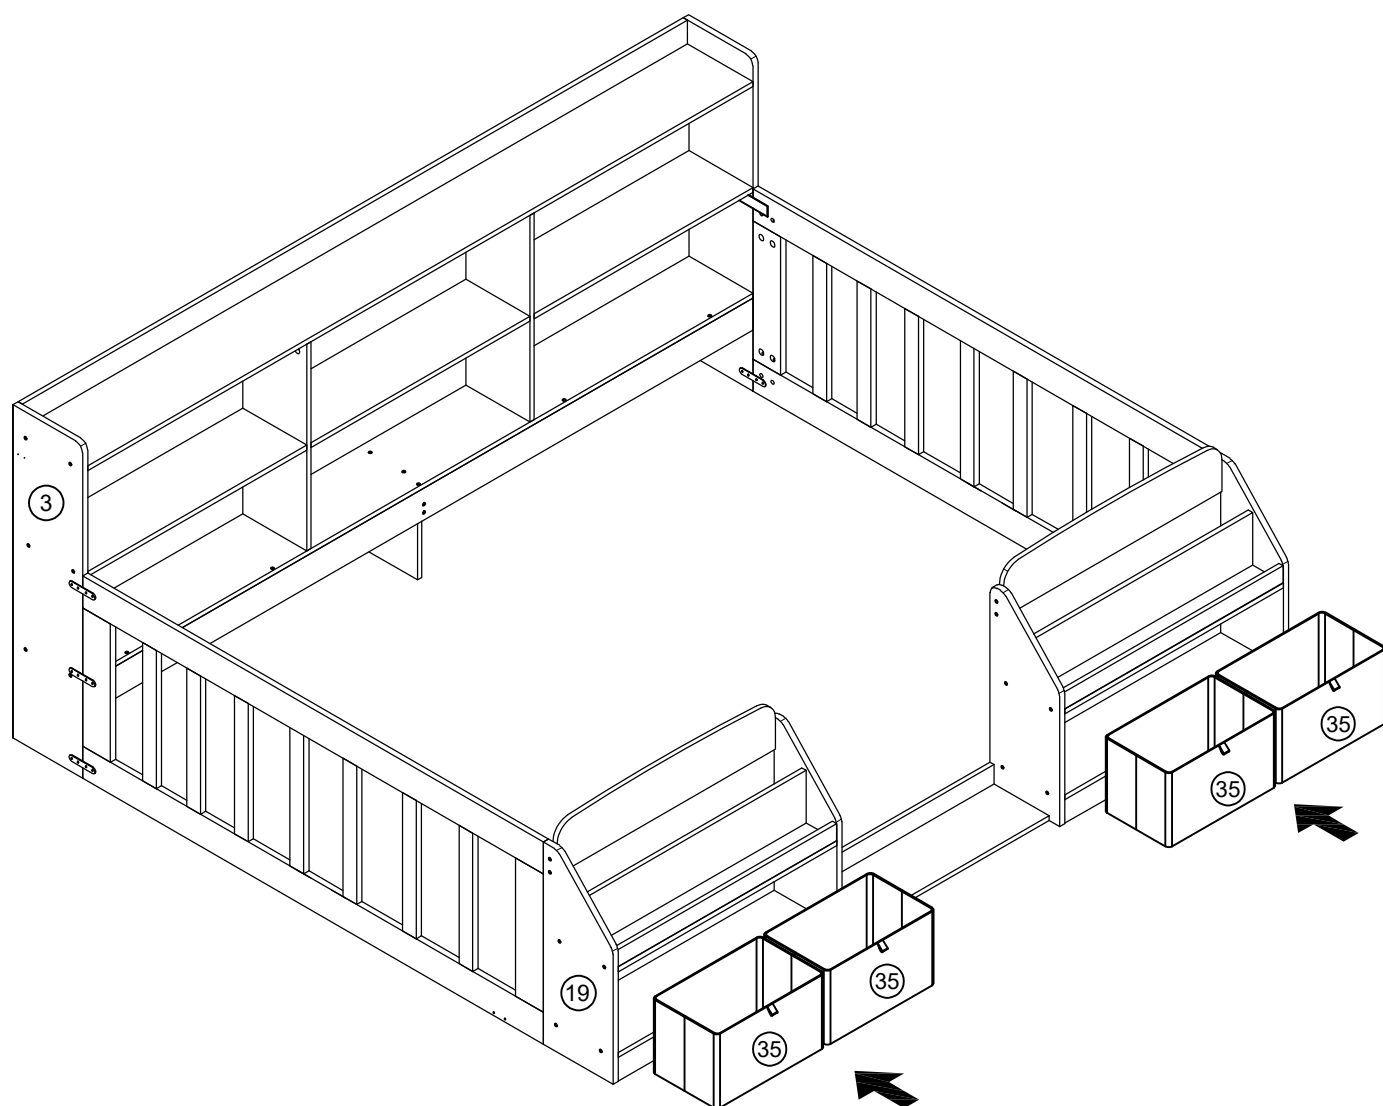

Privately stick the film at the designated position.

This fabric drawer No. 34 can be attached on either the left or right side according to your preference.

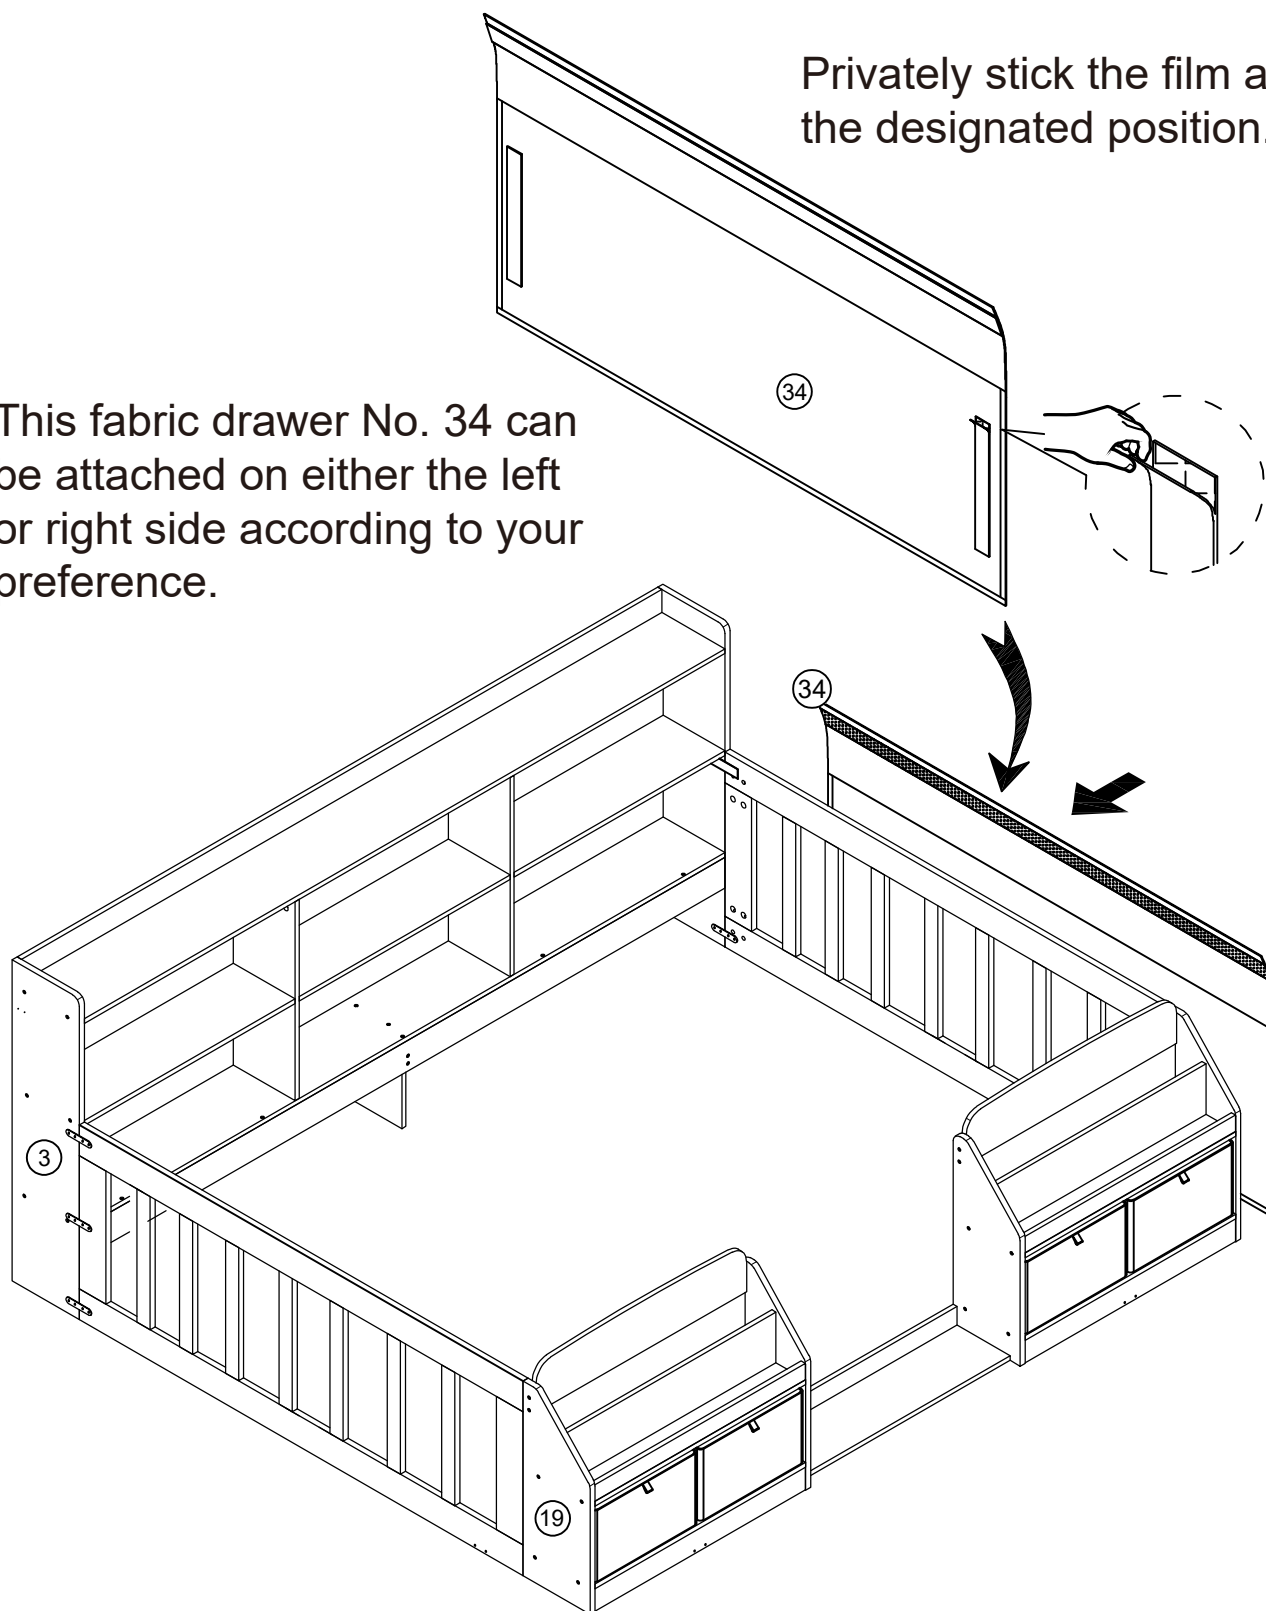

S




4x12mm



x4

T




x2

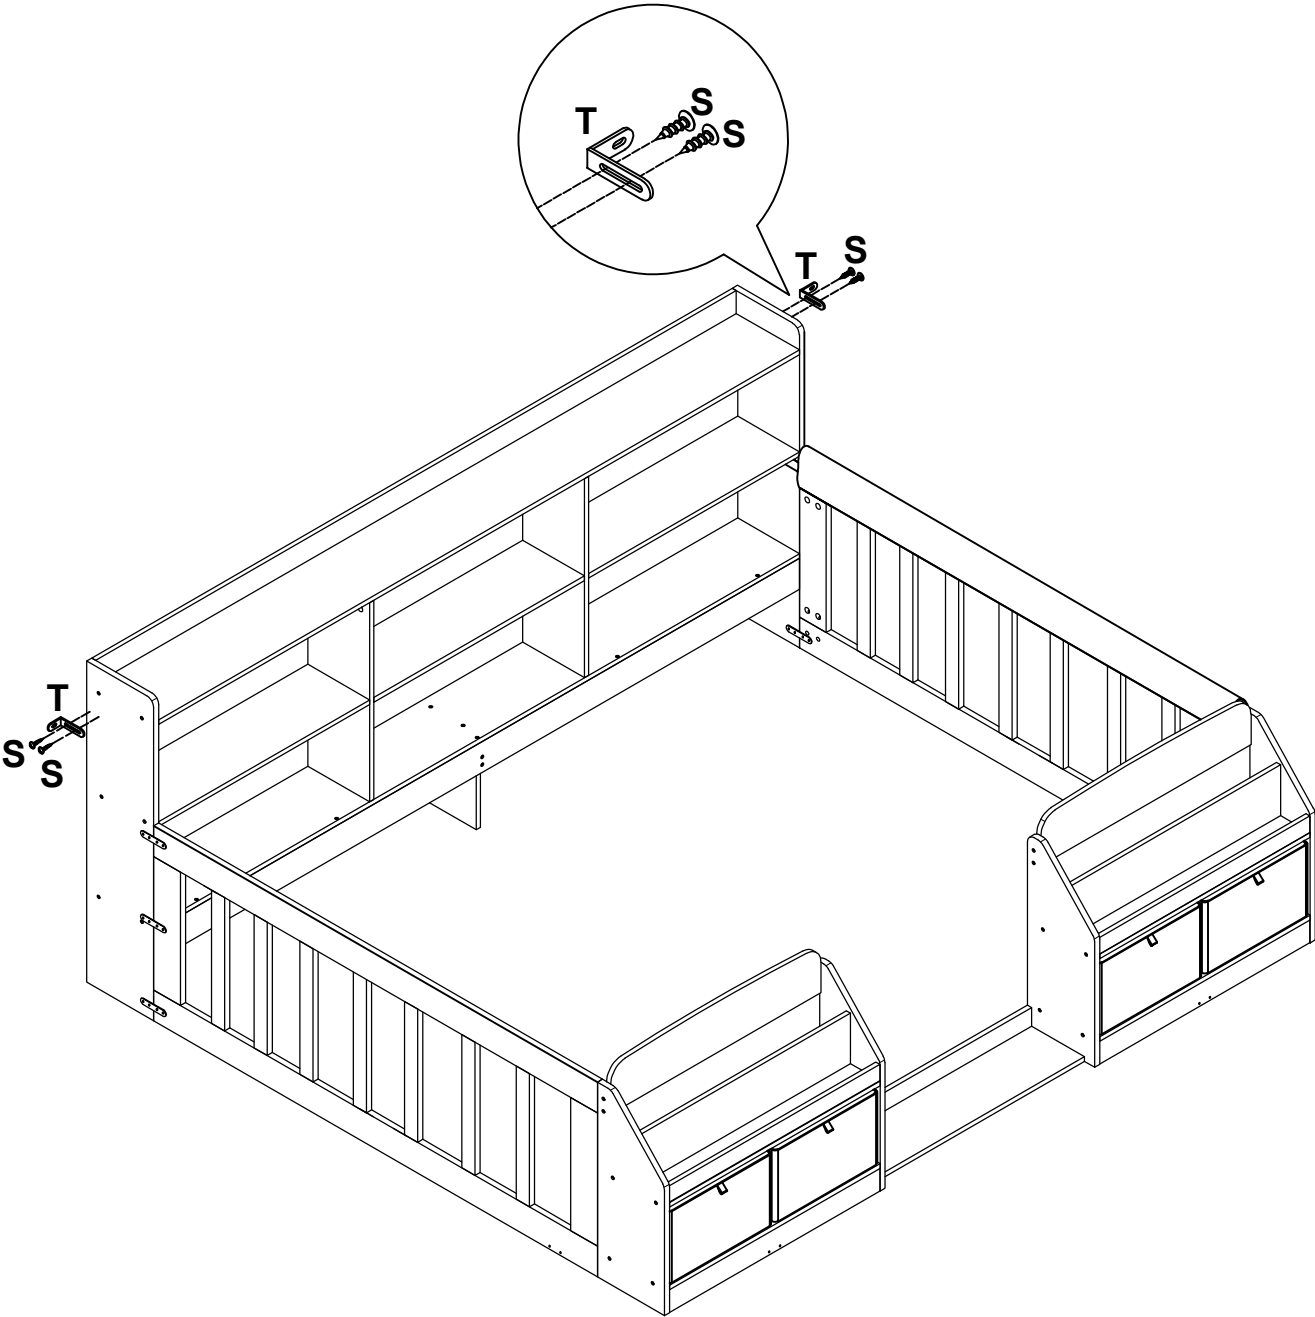


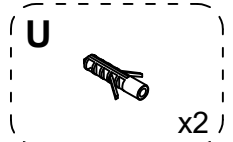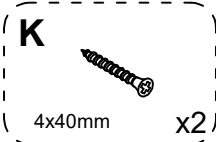

Step I: Mark the drilling positions on the wall with a pen.

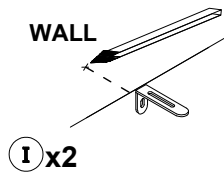

Step II: Drill holes using an electric drill for 6x30mm.

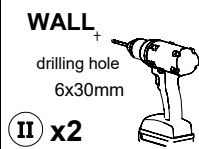

Step III: Use a hammer to drive screw into the wall.

