


INSTALLATION INSTRUCTIONS FOR FIFTH FLOOR FILE CABINET

⚠ WARNING! For smooth assembly you can use a power screwdriver, wear safety glasses and gloves when using tools.

Attention! Attention! The J door panels and K door panels are embedded inside the C side panels and D side panels; they need to be taken out during assembly.

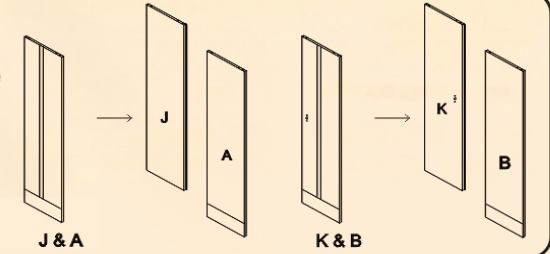

10042



SKU

DSN039BN002H
DSN039WN013H
DSN039GN014H
DSN039GG016H
DSN039BR028H
DSN039GB032H
DSN039DG015H
DSN039BG017H
DSN039BB034H

10042

THANK YOU FOR CHOOSING US!

Your new Five layer steel cabinet has arrived and it will make your life so much easier. That's why we put so much effort into designing it to perfectly fit your needs.

But first things first, we need to install it!

When we say "we", we mean we're going to guide you, step by step. We created this instructions manual so that you won't feel overwhelmed and get your new cabinet up and ready to use in no time! We also know that sometimes things just don't seem to fit, so don't hesitate to drop us a line at help@amrecianoffice.com if you have questions or need help!

Anyway, this steel cabinet can't wait to be put into use, so let's assemble it!

MISSING A PART? DON'T WORRY, WE GOT YOUR BACK!



Compare the sketch on the next page with your package. Are all the pieces there? However, sometimes errors happen, so if anything is missing just send us an email and we will make sure to fix it!

10042

Before you start, here are a few quick pointers:





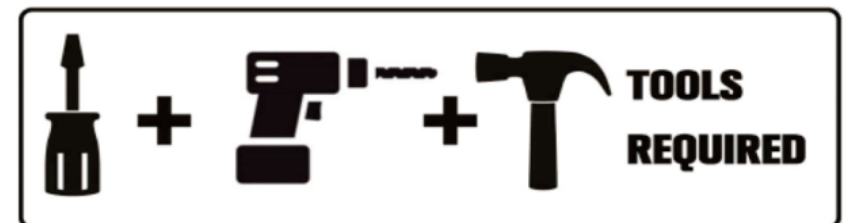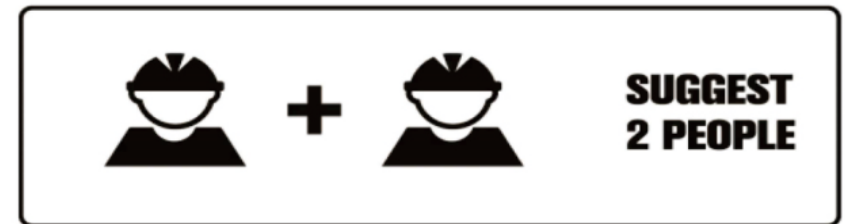











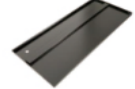




The installation requires two people. so call a friend to join the fun!

For more stability, it's best to anchor the cabinet to the wall. In this case, along with the items provided you will also need a Level, Percussion Drill and a Hammer

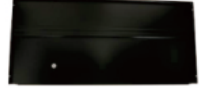

10042

PARTS LIST

Name	Part	Qty.	Name	Part	Qty.
A Left back panel		1	N Bottom fixing parts		4
B Right back panel		1	O Laminated buckle		16
C Left side panel		1	P Partition pin		2
D Right side panel		1	Q Anti-collision soft plug		4
E Top bar		1	R Anti tipping		2
F Bottom bar		1	V Top door fixing parts		2
G Top cover		1	W Glove		1
H Bottom cover		1	X Screwdriver		1
I Partition board		4			
J Left door		1			
K Right door		1			
L Screw		35			
M Nut screw		4			

10042



10042
STEP 1

Connect panel **A** and panel **B** to each other, align the hole position, and secure with screw **M**.




10042
STEP 2

Connect panel **C** to panel **A** and panel **D** to panel **B**, then align the hole position and secure with screw **L**.




10042
STEP 3

Set the frame **E** at the top of the **C D** position. Drive two screws on each side.

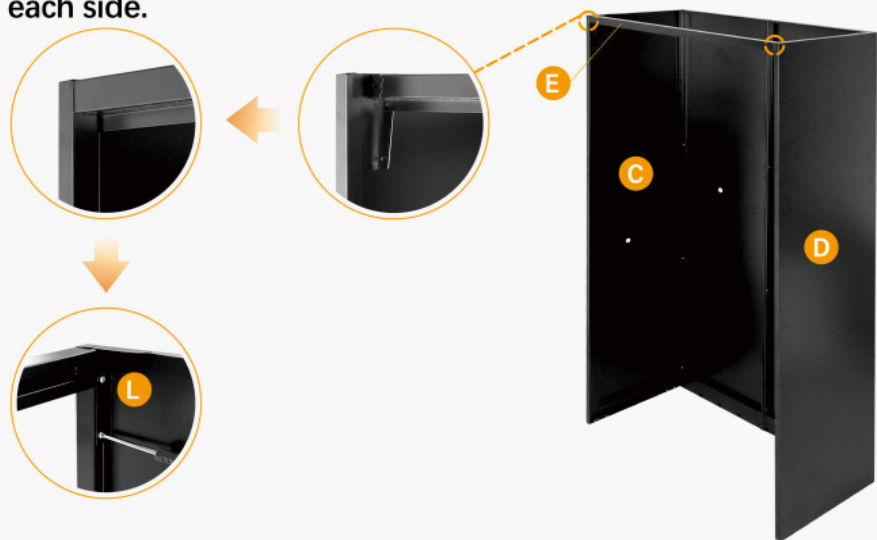


STEP 4

Install the frame **F** to the bottom of the **C** and **D**, and push the bottom opening position of the **C** and **D** up with the screw.

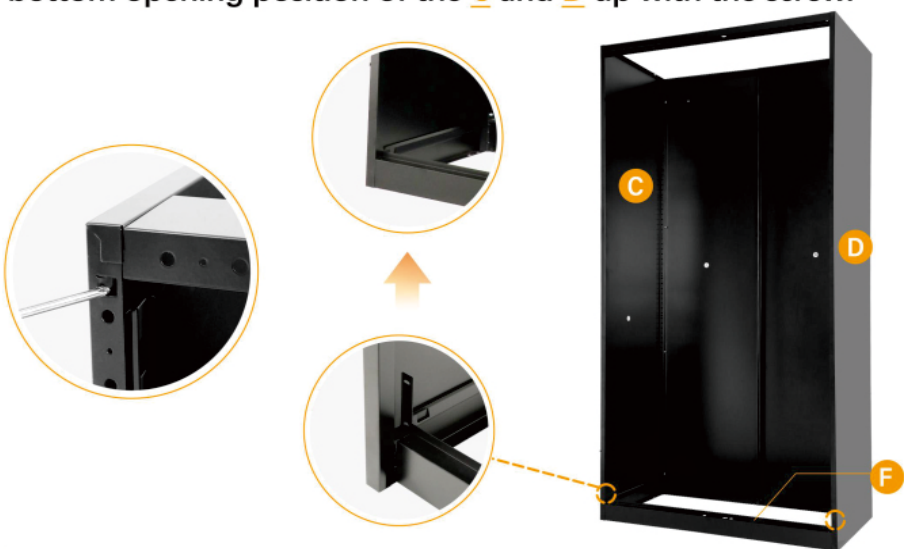


10042
STEP 5

Connect **C** to **F** and **D** to **F** with four screws **L**.

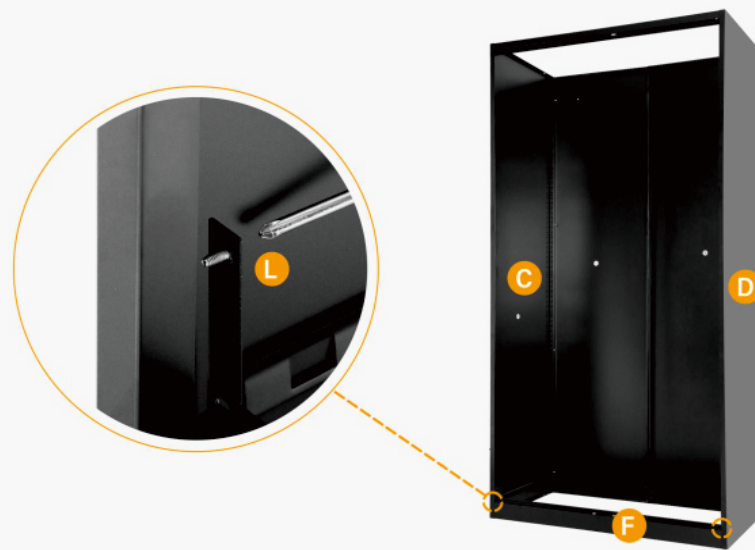


STEP 6

Push the top **G** from the bottom to the top position. Fixed with 7 screws **L**.

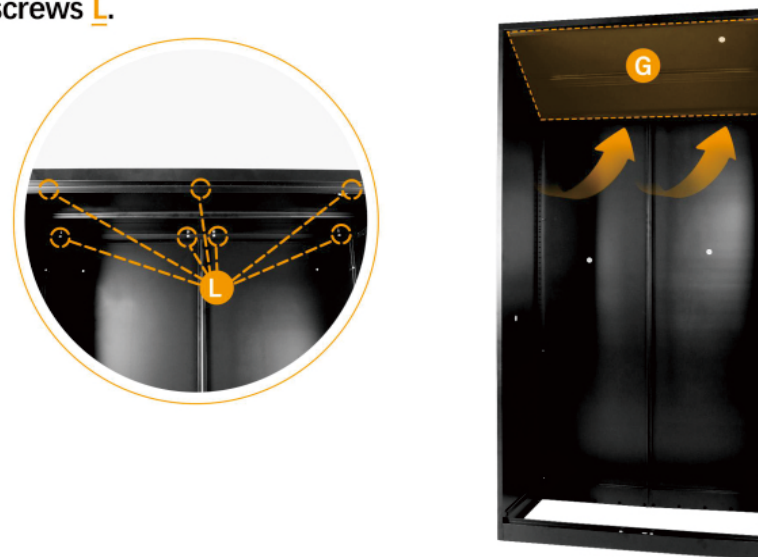


10042
STEP 7

Install Bottom Panel **H**

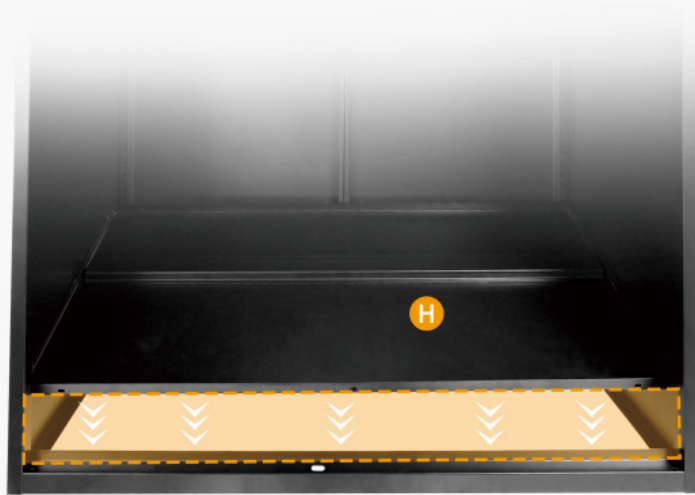


STEP 8

Secure 4 screws **L** in the bottom plate hole position.

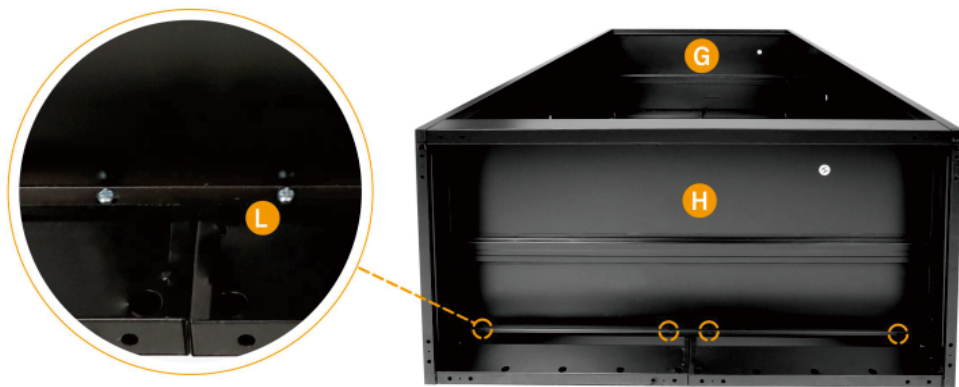


10042
STEP 9

Fix the four standing feet **N** to the four bottom feet with screws **L**.

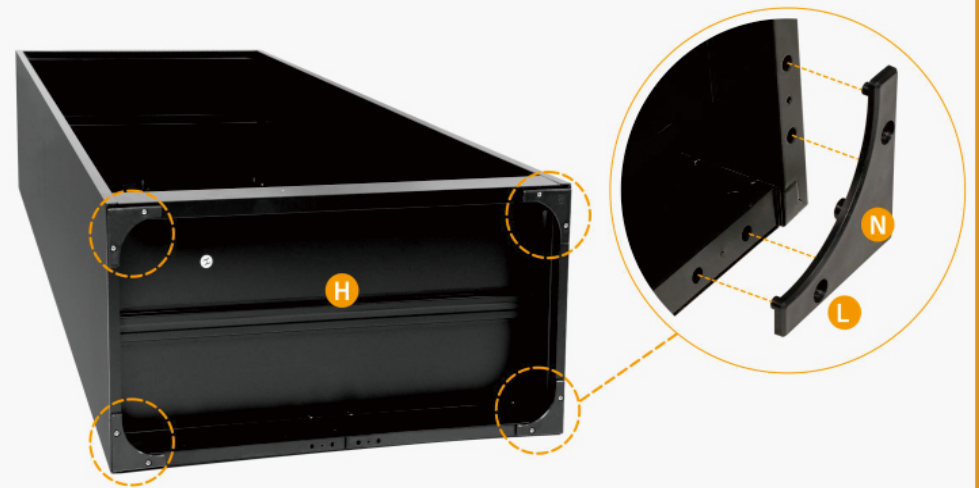

STEP 10

First install the laminate **O** buckle and then put the shelf **I** on

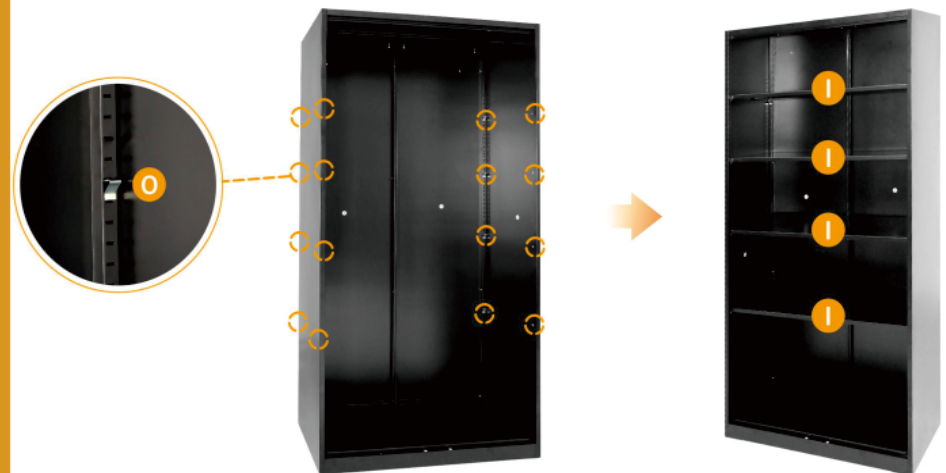

10042 STEP 11

Insert **P** into the bottom holes on both sides, press the spring door shaft to align it with the **E** hole for installation, and finally install **Q** above **J** and **K**



10042

**THANK YOU
FOR BEING PART OF OUR STORY**

Don't forget, we're always happy to hear from you. If you have any issue or just want to say hello, don't hesitate to write.