


1. Install the arm ③ to the canopy ② with lock nut and teeth lock washer ①.  
(ground line is between the teeth lock washer and lock nut)

B0114-1

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !  
Only a professional electrician should install this kind of product !

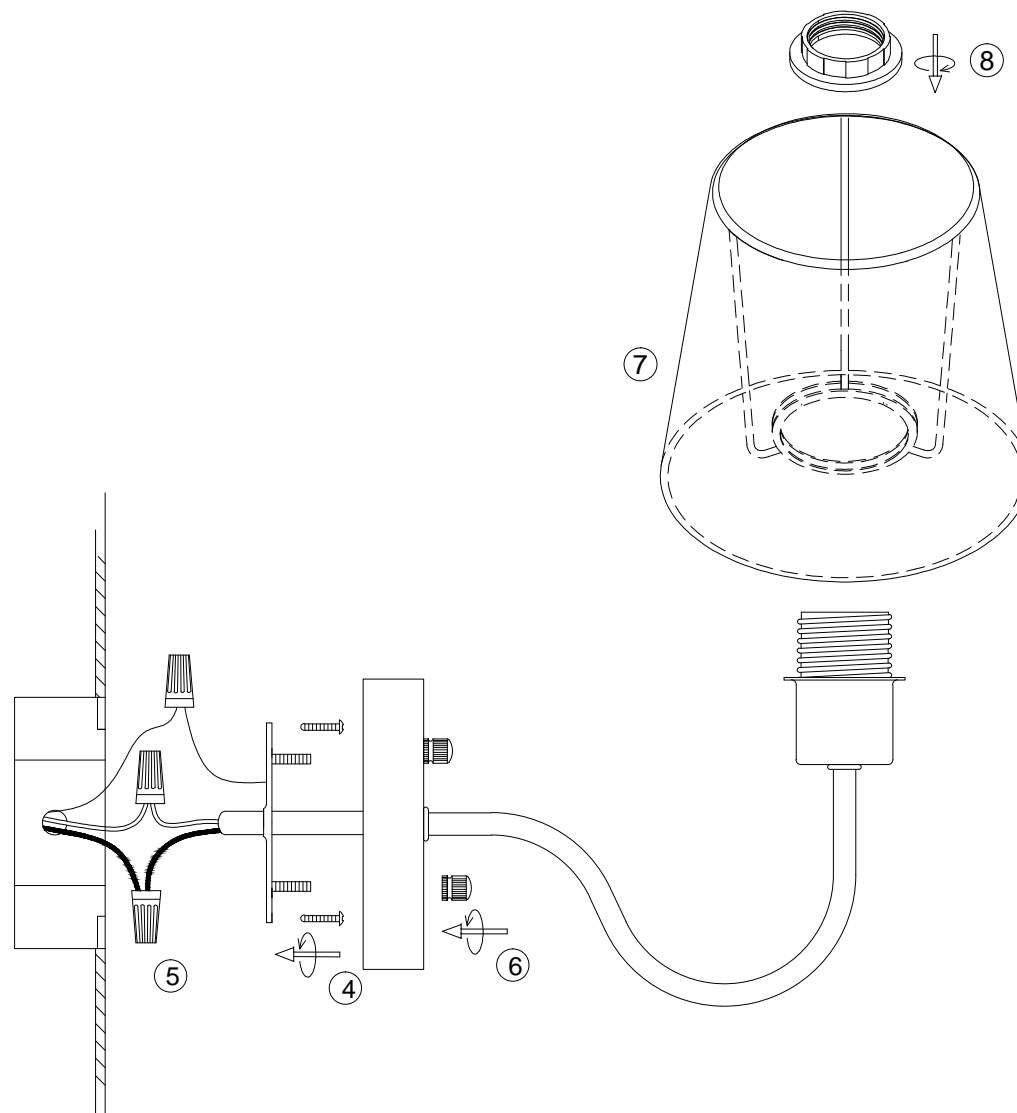

2. Install the bracket to the junction box with screw ④.

3. Connect the wire ⑤ to your home line.

4. Install the fixture on the bracket with cap nut ⑥.

5. Install the fabric lampshade ⑦ on the bulbholder with socket ring ⑧, and install the bulb, installation finish.