


YOUR HARDWARE KIT

WILL CONTAIN

2 X SET SCREWS



4 X LAG BOLTS

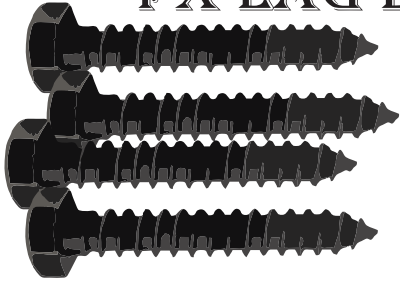

4 X MACHINE SCREWS



4 X HOLLOW WALL ANCHORS



TOOLS

- * LEVEL
- * STUD FINDER
- * PENCIL
- * TAPE MEASURE
- * 7/16" WRENCH
- * DRILL



INSERT THE ANCHOR AND TIGHTEN THE SET SCREW WITH A #2 PHILLIPS UNTIL YOU FEEL IT BECOME SNUG. BE CAREFUL NOT TO OVER TIGHTEN. BACK OUT 1/8".

YOU MAY USE A COMBINATION OF ANY 2 INCLUDED FASTENERS, HOWEVER LAG BOLT DIRECTLY INTO STUD IS THE PREFERRED METHOD.